1960-1969 CORVAIR

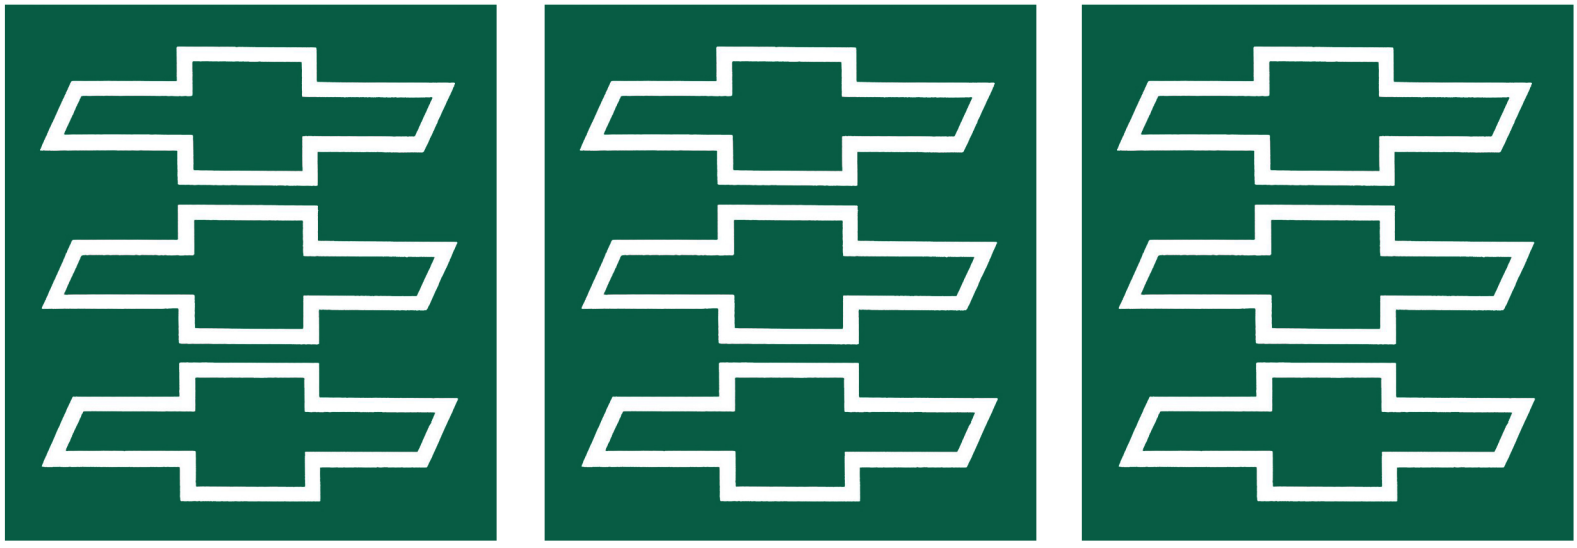

PARTS & ACCESSORIES MANUAL

NOTE: This Thumb Index is for your convenience. How Index operates: bend book backward to locate black block appearing on the first page of each group section. These blocks are in the same relative position as this Group Index.

20—

INDEX

0.000 ENGINE—CLUTCH

1.000 COOLANT—GRILLE—OIL SYSTEM

2.000 CHASSIS—ELECTRICAL SYSTEM

3.000 FUEL—EXHAUST—CARBURETION

4.000 TRANSMISSION—BRAKES

5.000 BRAKES—REAR AXLE AND DRIVE

6.000 FRONT AXLE—STEERING

7.000 FRAME—SPRINGS—BUMPER

8.000 SHEET METAL HEATER

9.000 BODY MTG.—AIR COND.—INSTR.

10.000 WINDSHIELD DOORS—CONTROLS

11.000 REAR GLASS SEAT AND ADJUSTER

12.000 METAL TRIM—CLIPS AND PANELS

13.000 BODY WIRING FLDG. TOP TRIM

14.000 FLDG. TOP PARTS INTERIOR TRIM

15.000 REAR TRIM—MATS YARDAGE

16.000 TRUCK INTERIOR AND PANELS

17.000 SGL. AND DBL. UNIT BODY PARTS

1960—1969

CORVAIR

PARTS CATALOG

Reprinted in its Entirety
(Effective with Parts Release and Change Notice 69-10 Dated October 1, 1969)

PARTS ORDERS TO BE PLACED BY CHEVROLET DEALERS WITH GENERAL MOTORS PARTS DIVISION

WAREHOUSES CONVENIENTLY LOCATED AT THE FOLLOWING POINTS:

*Atlanta, Georgia
*Baltimore, Md.
Birmingham, Ala.
*Boston, Mass.
Buffalo, N.Y.
Charlotte, N.C.
*Chicago, Ill.
*Cincinnati, Ohio
Cleveland, Ohio
*Dallas, Texas
*Denver, Colo.
*Detroit, Mich.
El Paso, Texas
Fargo, N.D.
#▲Flint, Mich.
Great Falls, Mont.
Houston, Texas
Indianapolis, Ind.
**Jacksonville, Fla.
Kansas City, Mo.
New York, N.Y.
Louisville, Ky.
▲Martinsburg, W. Va.
Memphis, Tenn.
Milwaukee, Wis.
*Minneapolis, Minn.
*Newark, N.J.
New Orleans, La.
*Oakland, Cal.
Oklahoma City, Okla.
Omaha, Nebr.
Philadelphia, Pa.
Pittsburgh, Pa.
*Portland, Oregon
Richmond, Virginia
▲*St. Louis, Mo.
Salt Lake City, Utah
San Antonia, Texas
Los Angeles, Calif.

*Master Warehouses ▲ Major Supply Depots. # Factory Warehouse.

All illustrations and specifications contained in this literature are based on the latest production information available at the time of publication approval. Chevrolet Motor Division reserves the right to make changes at any time without notice in colors, materials, equipment, specifications and models, and also to discontinue models.

CHEVROLET MOTOR DIVISION
GENERAL MOTORS CORPORATION
DETROIT, MICH. 48202

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GENERAL INFORMATION

The Chevrolet Parts Catalog System consists of the following publications:

P&A 30 — 1938 - 1964 Chevrolet Passenger Car Parts and Accessories Catalog.

P&A 30A — Chevrolet Parts and Accessories Catalog for:

1965-1969	Passenger Car
1962-1969	Chevy II and Nova
1964-1969	Chevelle
1967-1969	Camaro

P&A 30M — 1970 Chevrolet Passenger Car-Chevelle-Nova-Camaro Parts and Accessories Catalog.

P&A 24 — Chevrolet Standard Parts, Service and Maintenance Products Catalog (Groups 8.800; 8.899 thru 8.999)

P&A 30B — 1953-1970 Chevrolet Corvette Parts and Accessories Catalog.

P&A 30C — 1960-1969 Chevrolet Corvair Parts and Accessories Catalog.

P&A 5B — 1949-1970 Chevrolet Radio Parts Catalog.

P&A 31 — 1938-1969 Chevrolet Truck Parts and Accessories Catalog for:

1938-1965	½ Ton thru 2½ Ton Trucks
1966	2½ Ton Series 80 C, L, M, T, U Trucks
1966-1969	½ Ton thru 2 Ton Trucks

P&A 31M — 1970 Chevrolet Series 10 thru 60 Truck Parts and Accessories Catalogs.

P&A 33 — Chevrolet Heavy Duty Truck Parts Catalog for:

1966-1970	2½ Ton Series 70000 Trucks
1966-1970	3 Ton Series 80000 Trucks

P&A 33A — 1970 Chevrolet Series 90000 Truck Parts Catalog.

P&A 26 — Chevrolet Dealer Parts and Accessories Price Schedule and Catalog Numerical Index.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Complete familiarity with the information contained on these pages as well as the general layout of the Parts Catalogs will prove helpful in locating and ordering the desired parts. The Chevrolet Parts and Accessories Catalogs are arranged in sections as follows:

Model Series Identification
Alphabetical Index
Chassis Parts Listing groups 0.000 to 9.999 inclusive
Passenger Body Parts Listing--groups 10.000 to 15.999 inclusive
Commerical Body Parts Listing--groups 16.000 to 17.999 inclusive

The Group System of listing parts is used, and briefly is as follows:

Main units of the car are identified by the Numeral preceding the Decimal, i.e.,

Engine	0.
Cooling and Oiling	1.
Electrical	2.
Fuel System	3.

Individual Parts are assigned a Group Number, the first Numeral identifying the main unit it is affiliated with, and following the Decimal is the Sub-Group Number under which all Parts of the same name and function are listed. For instance: Group 0.033: "0" indicates that it is an Engine Part, ".033" is the Location where all Part Numbers of Cylinder Blocks now being serviced may be found.

When using the dimensions and other data shown in the Description Column the parts manager should be guided by the following:

1. "length overall" refers to the total length of a part measured over the longest dimension. An irregular shaped piece is measured over the longest dimension regardless of contours and bends.

2. "dev. length" refers to the total length of a part such as a tail pipe or gas pipe measured as though the part were straightened out. This measurement can be taken on formed pipes by using a string to follow the contours of the pipe and then measuring the length of string used.

3. "I.D." refers to inside diameter; "O.D." refers to outside diameter; "O.S." refers to oversize; "U.S." refers to undersize.

To locate the listing of a Part, determine the model vehicle and refer to the Book under the Group Number identifying it, which may be determined by using any of the following three methods:

1. Consult Alphabetical Index, at front of book, which lists Parts by noun and descriptive names and refers to the exact Group Number where all Parts of similar kind may be found. More than one Group Number will be given where the same kind of part is shown in both Passenger and Commercial Body sections. If Name of desired Part is not readily found in the Index, a correlated Part Name will suggest approximate location.

2. Consult Illustrations in this publication, on which Group Numbers, Part Numbers, and Noun Name are shown, which will refer to the Part or Assembly wanted. On Illustrations where both left and right part numbers are listed, the first number will always designate left hand side.

3. Consult Dealer Parts and Accessories Price Schedule if a Part Number is known, and use its Group Number to locate a similar Part, or be directed to the approximate location of correlated Parts.

The column headed "No. Used" indicates the number of pieces required. The term "A.R." means "As Required."

If Body is not of Chevrolet manufacture place orders direct with the manufacturer whose name appears on the Body Name Plate.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

CORVAIR MODEL SERIES IDENTIFICATION

MODEL USAGE

1960-61

All 5-7-900, R1200
2-Dr. 527-727-927
4-Dr. 535-569-735-769-969
Std. 527-535-569
Deluxe 727-735-769-927-969
Monza 927-969
Lakewood 535-735
Lakewood (Std.) 535
Lakewood (Deluxe) 735
F.C. R1205-06-44-54
Pick-Up R1244-54
Pick-Up
(exc. Side Ramp) R1244
Side Ramp R1254
Panel R1205
Greenbrier R1206

1962-63

Corvair 500-700-900
Corvair (2-Dr.) 527-727-927-967
Corvair (4-Dr.) 735-969-935-969*
Corvair Std. 527
Corvair Deluxe 727-735-769-927-935-967-969*
Corvair (Sta. Wag.) 735-935*
Corvair Deluxe
(2-Dr. Sed.) 727-927
Corvair Deluxe (4-Dr.) 735-769-935-969*
Corvair Deluxe
(2-Dr.) (exc. Monza) 727
Corvair Deluxe (4-Dr.)
(exc. Monza) 735-769*
Corvair Deluxe (4-Dr. Sed.)
(exc. Monza) 769
Monza 927-935-967-969*
Monza (2-Dr. Sed) 927
Monza (4-Dr.) 935-969*
Monza (4-Dr. Sed.) 969
Monza (Sta. Wag.) 935*
Monza (Conv.) 967
F.C. . . . . R1205-06-44-54†
Pick-Up . . . . . R1244-54†
Pick-Up (exc. Side Ramp) . . . . . R1244†
Side Ramp R1254
Panel R1205
Greenbrier R1206

*NOTE: Station Wagon models (735-935) are not available for 1963.
†NOTE: Pick-Up model (R1244) is not available for 1963.

1964

Corvair 500-600-700-900
Corvair (2-Dr.) 527-627-667-927-967
Corvair (4-Dr.) 769-969
Corvair Std. 527
Corvair Deluxe 627-667-769-927-967-969
Corvair Deluxe
(2-Dr. Sed.) 627-667-927-967
Corvair Deluxe (4-Dr.) 769-969
Corvair Deluxe (4-Dr.) (exc. Monza) 769
Monza 627-667-927-967-969
Monza (2-Dr.) 627-667-927-967
Monza (2-Dr. Sed.) 627-927
Monza (4-Dr.) 969
Monza (Conv.) 667-967
Spyder 627-667
F.C. R1205-06-54
F.C. (exc. Pick-Up) R1205-06
Pick-Up R1254
Side Ramp R1254
Panel R1205
Greenbrier R1206

1965-69

Corvair 10100-10500-10700
Corvair (2-Dr.) 10137-10537-10567-10737-10767
Corvair (4-Dr.) 10139-10539
Corvair Std. 10137-10139
Corvair Std. (2-Dr.) 10137
Corvair Std. (4-Dr.) 10139
Monza 10537-10539-10567-10737-10767
Monza (2-Dr.) 10537-10567-10737-10767
Monza (Conv.) 10567-10767
Monza (4-Dr.) 10539
Corsa 10737-10767
Corsa (exc. Conv.) 10737
Corsa (Conv.) 10767
F.C. R1206*
Greenbrier R1206*

*NOTE: 1965 Model Only

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ENGINE SERIES NUMBER AND SUFFIX CHART

1960-62

CORVAIR

"145"–6 CYLINDER

Description	Type Designation
Manual Trans.	YC
Manual Trans. and High Performance	YN
Manual Trans.	YH
Manual Trans. and C.A.C.	YL
Manual Trans., C.A.C. and High Performance	YM
Manual Trans. and High Performance	Y
Turbo-Charged with 4-SPD.	YR
Automatic Trans.	ZB
Automatic Trans. and C.A.C.	ZD
Automatic Trans. and High Performance	ZF
Automatic Trans., C.A.C. and High Performance	ZG
Automatic Trans.	ZH
Automatic Trans. and C.A.C.	ZJ
Automatic Trans. and High Performance	ZK
Automatic Trans.	ZL

NOTE: Engines are stamped with a source, production date and type on serial pad.
NOTE: Corvair engine number stamped on top of engine block, forward of generator–oil filter adapter.

1963

CORVAIR

"145"–6 CYLINDER

Manual Trans.	YC
Manual Trans. and High Performance	YN
Manual Trans. and C.A.C.	YL
Manual Trans., C.A.C. and High Performance	YM
Turbo-Charged with 4-SPD.	Y
Automatic Trans.	Z
Automatic Trans.	ZH
Automatic Trans. and C.A.C.	ZD
Automatic Trans. and High Performance	ZF
Automatic Trans., C.A.C. and High Performance	ZG
Manual Trans. F.C.	V
Automatic Trans. F.C.	W

NOTE: Engines are stamped with a source, production date and type on serial pad.
NOTE: Corvair engine number stamped on top of block, forward of generator–oil filter adapter.

1964

CORVAIR

"164"–6 CYLINDER

Manual Trans.	YC
Manual Trans. and High Performance	YN
Manual Trans. and C.A.C.	YL
Manual Trans., C.A.C. and High Performance	
Turbo-Charged with 4-SPD.	YM
Automatic Trans.	Z
Automatic Trans.	ZH
Automatic Trans. and C.A.C.	ZD
Automatic Trans. and High Performance	ZF
Automatic Trans. C.A.C. and High Performance	ZG
Manual Trans. F.C.	V
Automatic Trans. F.C.	W

1965

CORVAIR

"164"–6 CYLINDER

Manual Trans.	RA
Manual Trans.	RB
High Performance	RD
Manual Trans. and Air Cond.	RE
High Performance and Air Cond.	RF
Powerglide	RG
Powerglide and High Performance	RH
Powerglide and Air Cond.	RJ
Powerglide, High Performance and Air Cond.	RK
Manual Trans. and Spec. High Performance	RM
Powerglide and Spec. High Performance	RN
Turbocharger	RL
Manual Trans.	RS
Manual trans. and High Performance	RU
Powerglide	RV
Powerglide and High Performance	RX
Manual Trans. R-10, F.C.	RS
Manual Trans. and High Performance R-10, F.C.	RU
Powerglide R-10, F.C.	RV
Powerglide and High Performance R-10, F.C.	RX

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ENGINE SERIES NUMBER AND SUFFIX CHART (Cont.)

1966

CORVAIR

"164"–6 CYLINDER

Description	Type Designation
Manual Trans.	RA
Manual Trans.	RB
Turbocharger	RL
Spec. High Performance	RM
Air Cond.	RE
Spec. High Performance and Air Cond.	RZ
Air Cond.	RR
High Performance and Air Cond.	RF
A.I.R.	RS
A.I.R.	RT
High Performance and A.I.R.	RU
Spec. High Performance and A.I.R.	RQ
Powerglide	RG
High Performance and Powerglide	RH
Spec. High Performance and Powerglide	RN
Powerglide and Air Cond.	RJ
High Performance, Powerglide and Air Cond.	RK
Special High Performance, Powerglide and Air Cond.	RY
Special High Performance, Powerglide and A.I.R.	RX
Powerglide and A.I.R.	RV
High Performance and A.I.R.	RW

1967

CORVAIR

"164"–6 CYLINDER

Manual	RA
High Performance	RD
Air Cond.	RE
High Performance and Air Cond.	RF
A.I.R.	RS
A.I.R. and Air Cond.	QM
High Performance and A.I.R.	RU
High Performance, A.I.R. and Air Cond.	QS
Powerglide	RG
High Performance and Powerglide	RH
Powerglide and Air Cond.	RJ
High Performance, Powerglide and Air Cond.	RK
Powerglide and A.I.R.	RV
Powerglide, A.I.R. and Air Cond.	QO
High Performance, Powerglide and A.I.R.	RW
High Performance, Powerglide, A.I.R. and Air Cond.	QP

1968

CORVAIR

"164"–6 CYLINDER

Manual Trans.	RS
High Performance	RU
Powerglide	RV
High Performance and Powerglide	RW
Special High Performance	RY
High Performance and Powerglide	RZ

1969

CORVAIR

"164"–6 CYLINDER

Manual Trans.	AC
High Performance	AD
Powerglide	AE
High Performance Powerglide	AF
Special High Performance	AG
High Performance Powerglide	AH

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

CORVAIR BASIC ENGINE DATA & POWER TEAMS

1960-1961

Engine	Models	Cu. In. Displ.	Comp. Ratio	Bore	Stroke	Gross H.P.	Net H.P.	Carburetor	Transmission
CORVAIR Turbo-Air—6 Cyl.	CORVAIR	140	8.0	3-3/8"	2-19/32"	80 @ 4400 RPM	65 @ 3600 RPM	Dual Single Barrel	3-Speed, P.G.
CORVAIR—Special Turbo-Air 6 Cyl.	CORVAIR	140	8.0	3-3/8"	2-19/32"	95 @ 4800 RPM	—	Dual Single Barrel	3-Speed
Turbo Air 6 Cyl.	R-10	145	8.0	3-7/16"	2-19/32"	80 @ 4400 RPM	65 @ 3600 RPM	Dual Single Barrel	3 or 4-Speed, A.T.

1962

CORVAIR Turbo-Air—6 Cyl.	CORVAIR	145	8.0	3-7/16"	2-19/32"	80 @ 4400 RPM	65 @ 3600 RPM	Dual Single Barrel	3 or 4-Speed, PG
CORVAIR Turbo-Air—6 Cyl.	CORVAIR	145	9.0	3-7/16"	2-19/32"	102 @ 4400 RPM	68 @ 3600 RPM	Dual Single Barrel	3 or 4-Speed, PG
CORVAIR Turbo-Air—6 Cyl.	CORVAIR	145	8.0	3-7/16"	2-19/32"	150 @ 4400 RPM	—	Single Side Draft w/Turbocharger	3-SPD., 4-SPD.
High Torque 6 Cyl.	R-10	145	8.0	3-7/16"	2-19/32"	80 @ 4400 RPM	65 @ 3600 RPM	Dual Single Barrel	3 or 4-Speed, P.G.

1963

145—6 Cyl.	CORVAIR	145	8.0	3-7/16"	2-19/32"	80 @ 4400 RPM	65 @ 3600 RPM	Dual Single Barrel	3-SPD., 4-SPD., PG
145—6 Cyl.	CORVAIR	145	9.0	3-7/16"	2-19/32"	102 @ 4400 RPM	68 @ 3600 RPM	Dual Single Barrel	3-SPD., 4-SPD., PG
145—6 Cyl.	CORVAIR	145	8.0	3-7/16"	2-19/32"	150 @ 4400 RPM	—	Single Side Draft w/Turbocharger	3-SPD., 4-SPD.
145—6 Cyl.	R-10	145	8.0	3-7/16"	2-19/32"	80 @ 4400 RPM	65 @ 3600 RPM	Dual Single Barrel	3-SPD., 4-SPD., P.G.

1964

Turbo-Air 164	CORVAIR	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	78 @ 3600 RPM	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	90 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Charged 164	SPYDER	164	8.25	3-7/16"	2-15/16"	150 @ 4000 RPM	—	Single Side Draft	3-SPD., 4-SPD.
Greenbrier 164	R-10	164	—	3-7/16"	2-15/16"	95 @ 3600 RPM	78 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD., P.G.
Greenbrier 164	R-10	164	—	3-7/16"	2-15/16"	110 @ 4000 RPM	90 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

CORVAIR BASIC ENGINE DATA & POWER TEAMS (Cont.)

1965

Engine	Models	Cu. In. Displ.	Comp. Ratio	Bore	Stroke	Gross H.P.	Net H.P.	Carburetor	Transmission
Turbo-Air 164	CORVAIR	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	78 @ 3600 RPM	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	90 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Sp. Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	140 @ 5200 RPM	—	4 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Charged	CORSA	164	8.25	3-7/16"	2-15/16"	180 @ 4000 RPM	—	Single Side Draft	3-SPD., 4-SPD.
Greenbrier 164	R-10	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	78 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD., P.G.
Greenbrier 164 Hi-Per.	R-10	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	90 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD., P.G.

1966

Turbo-Air 164	CORVAIR	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	78 @ 3600 RPM	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	90 @ 4000 RPM	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Sp. Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	140 @ 5200 RPM	—	4 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Charged 164	CORSA	164	8.25	3-7/16"	2-15/16"	180 @ 4000 RPM	—	Single Side Draft	3-SPD., 4-SPD.

1967

Turbo-Air 164	CORVAIR	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	—	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	—	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Sp. Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	140 @ 5200 RPM	—	4 Single Barrel	3-SPD., 4-SPD., PG

1968

Turbo-Air 164	CORVAIR	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	—	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	—	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Sp. Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	140 @ 5200 RPM	—	4 Single Barrel	3-SPD., 4-SPD., PG

1969

Turbo-Air 164	CORVAIR	164	8.25	3-7/16"	2-15/16"	95 @ 3600 RPM	—	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Hi-Per.	CORVAIR	164	9.25	3-7/16"	2-15/16"	110 @ 4400 RPM	—	2 Single Barrel	3-SPD., 4-SPD., PG
Turbo-Air 164 Sp. HiPer.	CORVAIR	164	9.25	3-7/16"	2-15/16"	140 @ 5200 RPM	—	4 Single Barrel	3-SPD., 4-SPD., PG

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

CORVAIR REAR AXLE IDENTIFICATION

Axle Identification is stamped on differential carrier along with date of manufacture.

1960

Series	Type	Plant Identification G&A	Buffalo
CORVAIR	3-Speed (3.55 ratio)	—	BT
CORVAIR	3-Speed (3.89 ratio)	—	BR
CORVAIR	Automatic Transmission (3.55 ratio)	—	BU
CORVAIR	Automatic Transmission (3.89 ratio)	—	BS

1961

Series	Type	Plant Identification G&A	Buffalo
CORVAIR	3-Speed or 4-Speed (3.27 ratio)	—	BQ
CORVAIR	Automatic Transmission (3.27 ratio)	—	BC
CORVAIR	3-Speed or 4-Speed (3.55 ratio)	—	BF
CORVAIR	Automatic Transmission (3.55 ratio)	—	BJ
CORVAIR	3-Speed or 4-Speed (3.89 ratio)	—	BL
CORVAIR	Automatic Transmission (3.89 ratio)	—	BY
R10	3-Speed or 4-Speed (3.89 ratio)	—	BL
R10	Automatic Transmission (3.89 ratio)	—	BY

1962

Series	Type	Plant Identification G&A	Buffalo
CORVAIR	3 or 4 Speed (3.27 ratio)	—	HA
CORVAIR	3 or 4 Speed (3.55 ratio)	—	HB
CORVAIR	Automatic Transmission (3.27 ratio)	—	HC
CORVAIR	Automatic Transmission (3.55 ratio)	—	HD
CORVAIR	Positraction (3.27 ratio)	—	HG
CORVAIR	Positraction w/Automatic Transmission (3.27 ratio)	—	HH
CORVAIR	Positraction (3.55 ratio)	—	HJ
CORVAIR	Positraction w/Automatic Transmission (3.55 ratio)	—	HK
CORVAIR	Positraction (3.89 ratio)	—	HL
CORVAIR	Positraction w/Automatic Transmission (3.89 ratio)	—	HM
CORVAIR	3 or 4 Speed (3.89 ratio)	—	HE
CORVAIR	Automatic Transmission (3.89 ratio)	HF	—
R10	Positraction (3.89 ratio)	—	HL
R10	Positraction w/Auto Trans. (3.89 ratio)	—	HM
R10	3 or 4 Speed (3.89 ratio)	—	HE
R10	Auto Trans. (3.89 ratio)	HF	—

1963

Series	Type	Plant Identification G&A	Buffalo	Warren
CORVAIR	3 or 4 Speed (3.27 ratio)	—	HA	—
CORVAIR	3 or 4 Speed (3.55 ratio)	—	HB	—
CORVAIR	Automatic Transmission (3.27 ratio)	—	HC	—
CORVAIR	Automatic Transmission (3.55 ratio)	—	HD	—
CORVAIR	Positraction (3.27 ratio)	—	HG	—
CORVAIR	Positraction w/Automatic Transmission (3.27 ratio)	—	HH	—
CORVAIR	Positraction (3.55 ratio)	—	HJ	—
CORVAIR	Positraction w/Automatic *Transmission (3.55 ratio)*	—	*HK*	—
CORVAIR	Positraction (3.89 ratio)	—	HL	—
CORVAIR	Positraction w/Automatic Transmission (3.89 ratio)	—	HM	—
CORVAIR	3 or 4 Speed (3.89 ratio)	—	HE	—
CORVAIR	Automatic Transmission (3.89 ratio)	—	HF	—
R10	Positraction (3.89 ratio)	—	HL	—
R10	Positraction w/Automatic Transmission (3.89 ratio)	—	HM	—
R10	3 or 4 Speed (3.89 ratio)	—	HE	—

1964

Series	Type	Plant Identification G&A	Buffalo	Warren
CORVAIR	3 or 4 Speed (3.27 ratio)	—	HA	—
CORVAIR	3 or 4 Speed (3.55 ratio)	—	HB	—
CORVAIR	Automatic Transmission (3.27 ratio)	—	HC	—
CORVAIR	Automatic Transmission (3.55 ratio)	—	HD	—
CORVAIR	Positraction (3.27 ratio)	—	HG	—
CORVAIR	Positraction w/Automatic Transmission (3.27 ratio)	—	HH	—
CORVAIR	Positraction (3.55 ratio)	—	HJ	—
CORVAIR	Positraction w/Automatic Transmission (3.55 ratio)	—	HK	—
R10	3 or 4 Speed (3.55 ratio)	—	HQ	—
R10	Positraction (3.55 ratio)	—	HR	—
R10	*Automatic Transmission* (3.55 ratio)	—	HS	—
R10	Positraction w/Automatic Transmission (3.55 ratio)	—	HT	—

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

CORVAIR REAR AXLE IDENTIFICATION (Cont.)

1965

Series	Type	Plant Identification
CORVAIR	(3.27 ratio)	AA
CORVAIR	(3.55 ratio)	AB
CORVAIR	Positraction (3.27 ratio)	AC
CORVAIR	Positraction (3.55 ratio)	AD
CORVAIR	Powerglide (3.27 ratio)	AE
CORVAIR	Powerglide (3.55 ratio)	AF
CORVAIR	Positraction w/Powerglide (3.27 ratio)	AG
CORVAIR	Positraction w/Powerglide (3.55 ratio)	AH
R10 . . .	(3.55 ratio)	AV
R10 . . .	Positraction (3.55 ratio)	AW
R10 . . .	Powerglide (3.55 ratio)	AX
R10 . . .	Positraction w/Powerglide (3.55 ratio)	AY

1966

CORVAIR	(3.27 ratio)	AA
CORVAIR	(3.55 ratio)	AB
CORVAIR	Positraction (3.27 ratio)	AC
CORVAIR	Positraction (3.55 ratio)	AD
CORVAIR	Powerglide (3.27 ratio)	AE
CORVAIR	Powerglide (3.55 ratio)	AF
CORVAIR	Positraction w/Powerglide (3.27 ratio)	AG
CORVAIR	Positraction w/Powerglide (3.55 ratio)	AH

NOTE: The four digit number following the type designation will designate the calendar month and data produced.

NOTE: Plant designation is to be stamped immediately following the production date. "B" Buffalo Plant, "G" Gear and Axle Plant, and "W" Warren Plant.

1967

Series	Type	Plant Identification
CORVAIR	(3.27 ratio)	AA
CORVAIR	(3.55 ratio)	AB
CORVAIR	Positraction (3.27 ratio)	AC
CORVAIR	Positraction (3.55 ratio)	AD
CORVAIR	Powerglide (3.27 ratio)	AE
CORVAIR	Powerglide (3.55 ratio)	AF
CORVAIR	Positraction w/Powerglide (3.27 ratio)	AG
CORVAIR	Positraction w/Powerglide (3.55 ratio)	AH

1968

CORVAIR	(3.27 ratio)	AA
CORVAIR	(3.55 ratio)	AB
CORVAIR	Positraction (3.27 ratio)	AC
CORVAIR	Positraction (3.55 ratio)	AD
CORVAIR	Powerglide (3.27 ratio)	AE
CORVAIR	Powerglide (3.55 ratio)	AF
CORVAIR	Positraction w/Powerglide (3.27 ratio)	AG
CORVAIR	Positraction w/Powerglide (3.55 ratio)	AH

1969

CORVAIR	(3.27 ratio)	AA
CORVAIR	(3.55 ratio)	AB
CORVAIR	Positraction (3.27 ratio)	AC
CORVAIR	Positraction (3.55 ratio)	AD

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ABBREVIATIONS

Abs.	Absorber
A.C.	Automatic Choke Carburetor
A.C. Gen.	Alternating Current Generator
Acc.	Accessory
Accel.	Accelerator
A/Cl.	Air Cleaner
Adj.	Adjustable Adjusting
A.I.R.	Air Injection Reactor
Air Equip.	Air Over Hydraulic Brake and Air Brake
Air/S	Air Suspension
A.M.	Air Meter
Amp.	Ampere
A.O.H.B.	Air Over Hydraulic Brake
A.R.	As Required
Assy.	Assembly
A.T.	All Automatic Transmissions
Aux.	Auxiliary
B-A	Bel Air
Batt.	Battery
Bind.	Binding
Blk.	Black
Brg.	Bearing
Brk.	Brake
Brkt.	Bracket
Bpr.	Bumper
B.S.	Bucket Seats
Bshg.	Bushing
C.A.C.	Car Air Conditioning (All Weather, 4 Season, Deluxe)
Cad.	Cadminum
C/Shaft	Camshaft
Carb.	Carburetor
Carr.	Carrier
C.C.	Comfort and Convenience Equip.
Ch.	Chassis
Chnl.	Channel
Chr.	Chrome
Ck/C	Crankcase
Ck/Shaft	Crankshaft
cl.	Clutch
C.T.C.	Continental Tire Carrier
C'bore	Counterbore
C/Deluxe	Custom Deluxe Air Conditioner
C.O.E.	Cab Over Engine
Comb.	Combination
Comm.	Commercial
Comp.	Compressor
Compt.	Compartment
Compr.	Compression
Conn.	Connecting
Conv.	Convertible
CPE.	Coupe
Cplg.	Coupling
Ctr./S.	Countershaft
C'sunk	Countersunk
C.S.	Custom Sport Truck
Ctr.	Center
Cush.	Cushion
Custom	Custom Air Conditioner
Cyl.	Cylinder
2 cyc.	2 Cycle
4 cyc.	4 Cycle
Dbl.	Double
Defl.	Deflector
Def.	Defroster
Dev.	Developed
Diaph.	Diaphragm
Dia.	Diameter
Diff.	Differential
Distr.	Distributor
Div.	Division
Dr.	Door
Drld.	Drilled
D-D, Dubl-Duti	Forward Control Chassis
Econ.	Economy
Emerg.	Emergency
Eng.	Engine
Equip.	Equipment
Escn.	Escutcheon
Exc.	Except
Exch.	Exchange
Exh.	Exhaust
Expan.	Expansion
Ext.	External
Extn.	Extension
E.E.C.	Evaporative Emission Control
E.H.D.	Extra Heavy Duty
Fcg.	Facing
F.C.	Forward Control
FFC	Flat Face Cowl
F.I.	Fuel Injection
Fill.	Fillister
Flwhl.	Flywheel
Fltln.	Fleetline
Flex.	Flexible
Flg.	Flange
Fldg.	Folding
F.M.	Fuel Meter
Frgd.	Forged
Frt.	Front
4BC	4 Barrel Carburetor
4WD	Four Wheel Drive
Gal.	Gallon
Garn.	Garnish
Gen.	Generator
Gov.	Governor
Gskt.	Gasket
H.D.	Heavy Duty
H/Per.	High Performance
Hex.	Hexagon
Hdle.	Handle
Hd.	Head
Hdlng.	Headlining
Hdlp.	Headlamp
H.D. A/CL.	Heavy Duty Air Cleaner

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ABBREVIATIONS (Cont'd.)

H.D. Susp. . . . . Heavy Duty Suspension
H.L. . . . . High Lift
Hsg. . . . . Housing
H.T. . . . . Truck Hydramtic Transmission
Htr. . . . . Heater
Hvy. . . . . Heavy
Hy. . . . . Hyatt
Hyd. . . . . Hydraulic

ID . . . . . Inside Diameter
Ident. . . . . Identification
Ign. . . . . Ignition
Imit. . . . . Imitation
Incl. . . . . Includes
Ind. . . . . Indicator
Inl. . . . . Inlet
Instr. . . . . Instrument
Ins. . . . . Insulator
Int. . . . . Internal Intake
Inter. . . . . Intermediate

K/Pin . . . . . King Pin

Lea. . . . . Leather
L. . . . . Left
LCF . . . . . Low Cab Forward
L.C.I. . . . . Low Cut-in
L.D. . . . . Light Duty
L.H. . . . . Left Hand
Lg. . . . . Long
L.P. Gas . . . . . Liquid Petroleum Gas
Lwr. . . . . Lower

Max. . . . . Maximum
Mkd. . . . . Marked
Mas. . . . . Master
Matl. . . . . Material
Mech. . . . . Mechanical
Med. . . . . Medium
Mbr. . . . . Member
Min. . . . . Minimum
Mfld. . . . . Manifold
Mldg. . . . . Moulding
Mtg. . . . . Mounting
Mtr. Rod . . . . . Metering Rod

ND . . . . . New Departure
NL . . . . . Not Listed
No. . . . . Number
NP . . . . . New Process
N.R.E. . . . . Noise Reduction Exhaust
NSS . . . . . Not Serviced Separately

O.B.A.C. . . . . Oil Bath Air Cleaner
O.C. . . . . Oil Cooler
O.D. . . . . Outside Diameter
O/D . . . . . Overdrive
OL . . . . . Overall Length
Oper. . . . . Operating
Opg. . . . . Opening
Ornam. . . . . Ornament
OS . . . . . Oversize
O.S.R.V. . . . . Outside Rear View

Pack . . . . . Packing
P.R.W. . . . . Panoramic Rear Window
Pnl. . . . . Panel
Pass. . . . . Passenger
Park . . . . . Parkerized
P.B. . . . . Power Brake
PDL . . . . . Pick-Up Delivery (El Camino)
P.G. . . . . Powerglide
P/R . . . . . Pressure Regulator
P/S . . . . . Power Steering
Pit. . . . . Pitman
Pkg. . . . . Package
Pl. . . . . Plain
Pltfm. . . . . Platform
Press. . . . . Pressure
Prop. . . . . Propeller
Pt. . . . . Part
P.T. . . . . Powermatic Transmission or Allison Automatic
P/Trac. . . . . Positraction

Qt. . . . . Quart
Qtr. . . . . Quarter

R. . . . . Right
Rad. . . . . Radiator
Rd. . . . . Round
Recir. . . . . Recirculating
Rect. . . . . Rectangular
Reg. . . . . Regulator
Reg. Prod. . . . . Regular Production
Ret. . . . . Retainer
R.H. . . . . Right Hand
Rkr. . . . . Rocker
Rnfct. . . . . Reinforcement
Roch. . . . . Rochester
Rbr. . . . . Rubber
Run/Bd. . . . . Running Board
Rr. . . . . Rear
R.S. . . . . Rally Sport

SBC . . . . . School Bus Chassis
Sch. Bus Ch.
Sed. . . . . Sedan
SDL . . . . . Sedan Delivery
Serv. . . . . Service
Sgl. . . . . Single
Shk./Abs. . . . . Shock Absorber
Shldr. . . . . Shoulder
Sltd. . . . . Slotted
Spd. . . . . Speed
Spec. . . . . Special
Sp. H/Per. . . . . Special High Performance
Speedo . . . . . Speedometer
Spg. . . . . Spring
Sq. . . . . Square
St. Steel . . . . . Stainless Steel
Staty. . . . . Stationary
STA. WAG. . . . . Station Wagon
Std. . . . . Standard
Stmpd. . . . . Stamped
Strg. . . . . Steering
SUB . . . . . Suburban Carryall
Supt. . . . . Support
Syncro . . . . . Synchronizing

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ABBREVIATIONS (Cont'd.)

T.	Teeth
Tach.	Tachometer
TDM.	Tandem
Tel. W.	Telescopic Wheel
Temp.	Temperature
Ter.	Terminal
T.G.	Turboglide
T.H.	Turbo. Hydramatic
Thd.	Thread
Therm.	Thermostat
T. Ign.	Transistor Ignition
T.W.	Tilt Wheel
Trans.	Transmission
2/B.C.	Two Barrel Carburetor
3/2B.C.	Triple Two Barrel Carburetor
Trf.	Transfer
Turbo.	Turbocharger
U-joint	Universal Joint
US	Undersize
Univ.	Universal
U/Pan	Underpan
Upr.	Upper
Util.	Utility
Vac.	Vacuum
Vent.	Ventilator
W.G.T.	Warner Gear Transmission
W/	With
W/A.C.	Automatic Choke
W/O	Without Carburetor
W/Pump	Water Pump
WB.	Wheelbase
W/Cord.	Weathercord
Whlhse.	Wheelhouse
Wind.	Window
W/S	Windshield
W/Strip	Weatherstrip
W/W	Windshield Washer

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ALPHABETICAL INDEX

A

ABSORBER ASSY, Shock 7.345
ACTUATOR ASSY., Distributor Pressure 2.405
ACTUATOR ASSY., Folding Top 14.475
ADAPTER, Engine Air Cooling 1.020
ADAPTER, Front or Rear 5.803
ADAPTER, Heater Blower and Ventilator 8.855
ADAPTER, Oil 1.540
ADAPTER, Oil Filter and Generator 1.840
ADAPTER, Speedometer 4.329
ADAPTER ASSEMBLY, Oil Filter and Generator . . 1.840
ADAPTER ASSY., Heater Air Distributor 9.786
ADAPTER ASSY., Heater and Air Conditioning Electrical 9.276
ADAPTER UNIT, Rear or Auxiliary Speaker 9.665
ADAPTER UNIT, Steering 6.508
ADAPTER UNIT, w/defroster 8.845
ADDITIVE, G.M. Automatic Transmission 4.101
ADJUSTER, Steering Gear Lash 6.822
ADJUSTER ASSY., Steering Gear Worm Bearing . 6.830
ADJUSTER ASSY. AND PARTS, Front Seat 11.561
ADJUSTER ASSY. and PARTS, Seat 16.682
ANTENNA UNIT, Radio 9.645
ARM, Carburetor Metering Rod 3.807
ARM, Carburetor Pump Lifter 3.845
ARM, Door Check 16.437
ARM, Generator Brush 2.291
ARM, Pitman 6.859
ARM, Rear View Mirror 16.069
ARM, Steering Knuckle 6.103
ARM, Valve Rocker 0.333
ARM ASSEMBLY, Rear Axle Control 5.382
ARM ASSY., Carburetor Throttle 3.762
ARM ASSY., Steering Idler 6.895
ARM ASSY., Steering Knuckle Control Arm 6.168
ARM ASSY. and PARTS, Windshield Wiper Motor 10.157
ARMATURE, Folding Top Hydraulic 14.481
ARMATURE ASSEMBLY, Generator 2.279
ARMATURE ASSEMBLY, Starting Motor 2.043
ATTACHING PARTS, Auxiliary Seat 16.674
ATTACHING PARTS, Door and Quarter Mouldings 12.118
ATTACHING PARTS, Folding Seat, For Load Floor Parts (See Group 12.977) 11.620
ATTACHING PARTS, Front Seat Head Restraint . . 11.376
ATTACHING PARTS, Hood or Engine Compartment Moulding and Hinge 8.016

B

BAFFLE, Air Conditioning Air Inlet 9.218
BAFFLE, Engine Air Cooling 1.020
BAIL, Main Cylinder Filler 4.651
BALANCER ASSY., Crankshaft 0.659
BALL, Carburetor Pump Outlet Valve 3.825
BALL, Carburetor Pump 3.862
BALL, Carburetor Pump Inlet 3.826
BALL, Gearshift Control Hand Lever 4.008
BALL, Steering Gear 6.844
BALL, Trailer 7.068
BALL, Transmission Clutch 4.166
BALL, Valve Rocker Arm 0.429
BAND ASSEMBLY, Transmission Low Brake 4.251
BAR, Bumper Face 7.831
BAR, Floor 12.980
BAR ASSY., Cowl and Dash 12.803
BASE, Battery 2.345
BASE, Door Arm 16.155
BASE, Front Door Arm, Trimmed 14.686
BASE, Rear Door Arm, Trimmed 14.762
BASE ASSY., Air Cleaner 3.406
BEARING, Air Conditioning Compressor Pulley . . . 9.181
BEARING, Air Injection Reactor 3.665
BEARING, Clutch Pedal 0.831
BEARING, Crankshaft Clutch Pilot 0.649
BEARING, Planet Carrier 4.176
BEARING, Steering Gear Shaft 6.525
BEARING, Transmission Main Drive Gear 4.355
BEARING, Transmission Reverse Idler Gear Thrust 4.437
BEARING, Turbocharger 3.346
BEARING ASSEMBLY, Clutch Release 0.799
BEARING ASSEMBLY, Differential Side 5.536
BEARING ASSEMBLY, Front Wheel Outer 6.313
BEARING ASSEMBLY, Front Wheel Inner 6.311
BEARING ASSEMBLY, Generator Drive End 2.306
BEARING ASSEMBLY, Rear Wheel 5.855
BEARING ASSY., Blower Belt Idler Pulley 1.060
BEARING ASSY., Drive Pinion, Rear 5.484
BEARING ASSY., Drive Pinion Front 5.447
BEARING ASSY., Generator Commutator End Frame 2.298
BEARING ASSY., Low Sun Gear and Clutch 4.162
BEARING ASSY., Pitman Shaft 6.786
BEARING ASSY., Rear Axle Shaft "U" Joint 5.428
BEARING ASSY., Steering Gear Worm Thrust . . . 6.835
BEARING ASSY., Transmission Main Shaft Rear . 4.408
BEARING ASSY., Transmission 2nd Speed Gear Thrust 4.398
BEARING ASSY., Universal Joint Yoke Trunnion . 5.566
BEARING UNIT, Connecting Rod (1 Upper and 1 Lower—1 Left and 1 Right) 0.616
BEARING UNIT, Crankshaft Rear Bearing (1 upper and 1 lower) See chart following Group 0.096 for Model Application 0.106
BEARING UNIT, Crankshaft Rear Intermediate (1 upper and 1 lower) See chart following Group 0.096 for Model Application 0.103
BEARING UNIT, Crankshaft Center (1 upper and 1 lower) See chart following Group 0.096 for Model Application 0.101
BEARING UNIT, Crankshaft Front Intermediate (1 upper and 1 lower) See chart following Group 0.096 for Model Application 0.099
BEARING UNIT, Crankshaft Front (1 upper and 1 lower) See chart for Model Application 0.096
BEARING UNIT, Rear Wheel 5.855
BEARING UNIT and PARTS, Mast Jacket 6.521
BELT, Air Conditioning Compressor Drive 9.185
BELT, Air Injection Reactor Pump 3.650
BELT, Fan, Gen., and Accessory Drive 1.066
BELT ASSY, Seat 16.714
BELT ASSY., Seat and Shoulder 14.875
BEZEL, Air Conditioning Control 9.279
BEZEL, Back-up 2.698
BEZEL, Cigarette Lighter 9.709
BEZEL, Hood or Engine Compartment Lid 8.055
BEZEL, Instrument Cluster 9.743
BEZEL, Instrument Panel Compartment Door Lock 10.267
BEZEL, License Plate 7.800
BEZEL, Lighting Switch Rod 2.487
BEZEL, Tail and Stop Lamp 2.681
BEZEL, Transmission Gearshift Control 4.020
BEZEL, Windshield Wiper Control 10.166
BEZEL, Windshield Wiper 16.067
BEZEL ASSY., Instrument Cluster 9.743
BINDING ASSY., Folding Top Bow 15.534
BLADE ASSEMBLY, Windshield Wiper 10.146
BLADE ASSY., Windshield Wiper 16.062
BLOCK ASSY., Battery to Starting Switch 2.342
BLOWER ASSY., Air Conditioning Evaporator Blower 9.215
BLOWER ASSY., Engine or Fan and Generator . . 1.064
BLOWER ASSY., Heater Defroster 8.857
BOARD ASSY., Windshield Wiper 16.067
BODY ASSEMBLY and PARTS, Transmission Main Valve 4.216
BODY ASSY., Air Conditioning 9.170
BODY ASSY., Carburetor Float and Throttle Body 3.734
BOLT, Accel 3.464
BOLT, Air Cleaner to Carburetor 3.407
BOLT, Air Conditioning, Compressor Mounting Attaching Parts 9.173
BOLT, Air Injection Reactor Pump Mounting 3.655

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

BOLT, Battery Clamp . . . 2.334
BOLT, Brake Main Cylinder and Pedal Shaft . . . 4.648
BOLT, Brake Pedal . . . 4.637
BOLT, Bumper Bar . . . 7.874
BOLT, Clutch Control Cable . . . 0.855
BOLT, Clutch Pedal Intermediate . . . 0.852
BOLT, Clutch Pedal Adjusting . . . 0.841
BOLT, Clutch Pressure Plate . . . 0.864
BOLT, Clutch Pressure Plate and Cover . . . 0.862
BOLT, Connecting Rod Bearing Cap . . . 0.623
BOLT, Crankcase End . . . 0.206
BOLT, Crankshaft Bearing Cap . . . 0.056
BOLT, Crankshaft Pulley . . . 0.662
BOLT, Differential Bearing Adjusting Sleeve . . . 5.539
BOLT, Differential Carrier or Propeller Shaft Pinion 5.545
BOLT, Door Hinge . . . 16.325
BOLT, Door Hinge . . . 10.463
BOLT, Door Lock Striker to Pillar . . . 10.570
BOLT, Exhaust Manifold (Also see group 3.288 manifold to carb., 3.613 manifold to exhaust pipe and 8.981) . . . 3.275
BOLT, Flange plate . . . 5.002
BOLT, Flywheel and Torque Converter . . . 0.669
BOLT, Folding Top Side Roof Rail Control Link . . 14.155
BOLT, Folding Top Lift . . . 14.478
BOLT, Frame Cross, Front . . . 7.010
BOLT, Front Seat Hinge Arm . . . 11.375
BOLT, Fuel Tank Strap . . . 3.023
BOLT, Generator . . . 2.277
BOLT, Generator Through . . . 2.316
BOLT, Hub (Front and Rear Wheel) . . . 5.812
BOLT, Hypoid Drive Gear . . . 5.531
BOLT, Luggage Compartment Lid Lock . . . 12.237
BOLT, Luggage Compartment Lid . . . 12.184
BOLT, Muffler . . . 3.704
BOLT, Oil Filter . . . 1.837
BOLT, Oil Pan Attaching, with Lockwasher . . . 1.428
BOLT, Quarter Window Hinge Pivot . . . 11.057
BOLT, Rear Axle . . . 5.417
BOLT, Rear Axle Control Arm . . . 5.383
BOLT, Rear Axle Shaft "U" Joint . . . 5.428
BOLT, Rear Door Window Lower Sash . . . 10.747
BOLT, Rear Suspension . . . 5.387
BOLT, Rear View Mirror . . . 16.069
BOLT, Seat . . . 16.679
BOLT, Seat . . . 16.714
BOLT, Shock Absorber . . . 7.395
BOLT, Starting Motor . . . 2.077
BOLT, Steering Gear Shaft . . . 6.525
BOLT, Steering Gear Mounting . . . 6.509
BOLT, Steering Knuckle Upper Control Arm . . . 6.178
BOLT, Steering Knuckle . . . 6.104
BOLT, Steering Knuckle Lower Control Arm Attaching . . . 6.172
BOLT, Trailer . . . 7.068
BOLT, Transmission Mounting Support . . . 4.085
BOLT, Transmission . . . 4.105
BOLT, Transmission Case . . . 4.104
BOLT, Transmission . . . 4.115
BOLT, Universal Joint Trunnion and Yoke . . . 5.586
BOLT, Wheel Carrier . . . 7.632
BOLT ASSY., Engine Blower or Fan and Water Pump . . . 1.062
BOLT ASSY., Transmission Mounting Support . . . 4.085
BOLT ASSY., Wheel Carrier . . . 7.632
BOLT UNIT, Battery Cable Terminals . . . 2.343
BOLT UNIT, Rear Spring . . . 7.529
BOLT UNIT, Steering Knuckle Lower Control Arm 6.174
BOOT, Accelerator Rod Linkage . . . 3.469
BOOT, Axle Filler and Drain . . . 5.400
BOOT, Clutch Fork . . . 0.797
BOOT, Distributor Vacuum Advance Arm Opening 2.414
BOOT, Gearshift Floor Mounted Lever . . . 4.015
BOOT, Gearshift Linkage . . . 4.067
BOOT, Heater Blower Motor . . . 8.856
BOOT, Main Cylinder . . . 4.659
BOOT, Oil Level . . . 1.516
BOOT, Spark Plug . . . 2.258
BOOT, Transmission Oil Filler . . . 4.133
BOOT, Wheel Cylinder . . . 4.670
BOOT ASSEMBLY, Top Dust . . . 13.450
BOW, Roof . . . 12.952
BOW ASSY., Fldg. Top . . . 14.130
BOW ASSY., Folding Top—Center . . . 14.215
BOW ASSY., Folding Top, Rear . . . 14.340
BOWL ASSY., Carburetor Float and Throttle Body 3.734
BOX, Instrument Panel Compt. and Courtesy . . . 16.100
BOX, Instrument Panel Compartment . . . 10.260
BOX ASSY., Luggage Compartment Lid . . . 12.184
BRACE, Air Conditioning . . . 9.171
BRACE, Bumper Attaching . . . 7.836
BRACE, Center Body . . . 12.491
BRACE, Generator . . . 2.317
BRACE, Instrument Panel . . . 10.230
BRACE, Lock Pillar . . . 12.684
BRACE, Rear . . . 12.986
BRACE ASSY., Rear Seat Back . . . 12.768
BRACKET, Accel. . . . 3.454
BRACKET, Air Cleaner Stud Mounting . . . 3.405
BRACKET, Air Conditioning Hose . . . 9.242
BRACKET, Air Conditioning Refrigerant . . . 9.190
BRACKET, Air Injection Reactor . . . 3.670
BRACKET, Air Injection Reactor Pump Mounting . 3.655
BRACKET, Body . . . 17.505
BRACKET, Brake Flange . . . 5.001
BRACKET, Brake Hose or Pipe . . . 4.681
BRACKET, Brake Press Ind. . . . 4.874
BRACKET, Car Heater . . . 8.854
BRACKET, Cigarette Lighter . . . 9.709
BRACKET, Clutch and Brake Pedal (FOR COVERS see group 4.630) . . . 0.829
BRACKET, Clutch Pedal Pull Back Spring . . . 0.846
BRACKET, Clutch Pedal Intermediate . . . 0.852
BRACKET, Distributor . . . 2.393
BRACKET, Door Check . . . 16.440
BRACKET, Electrical Output . . . 2.500
BRACKET, End Gate and Side Ramp . . . 17.625
BRACKET, Engine Air Cooling Control . . . 1.040
BRACKET, Engine Mounting . . . 0.029
BRACKET, Folding Top . . . 14.483
BRACKET, Fuel Tank . . . 3.015
BRACKET, Generator . . . 2.277
BRACKET, Hand Control Wires and Tubes . . . 3.483
BRACKET, Headlamp Beam Adjusting . . . 2.737
BRACKET, Heater Air Distributor . . . 9.786
BRACKET, Horn . . . 2.845
BRACKET, Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration) . . . 4.686
BRACKET, Ignition Coil Mounting . . . 2.183
BRACKET, Instrument Panel . . . 9.772
BRACKET, License Plate . . . 7.800
BRACKET, Parking Brake Cable . . . 4.790
BRACKET, Parking Brake . . . 4.792
BRACKET, Parking Brake Alarm . . . 4.589
BRACKET, Parking Brake Cable . . . 4.785
BRACKET, Rear Suspension Crossmember . . . 5.380
BRACKET, Rear View Mirror, Outside . . . 10.186
BRACKET, Rear View Mirror . . . 16.069
BRACKET, Seat Bottom . . . 16.715
BRACKET, Shock Absorber . . . 7.380
BRACKET, Speed Indicator . . . 9.762
BRACKET, Steering Idler . . . 6.896
BRACKET, Tail Lamp . . . 2.662
BRACKET, Transmission Oil . . . 4.128
BRACKET, Transmission Gearshift Control Shaft or Tube . . . 4.027
BRACKET, Underbody Trim (floor mounted) . . . 4.017
BRACKET and PARTS, Air Conditioning Evaporator Core Housing . . . 9.211
BRACKET ASSEMBLY, Blower Belt Idler Pulley . . 1.060
BRACKET ASSY., Air Conditioning . . . 9.171
BRACKET ASSY., Brake Main Cylinder and Pedal Shaft . . . 4.648
BRACKET ASSY., Clutch Control Cable . . . 0.855

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

BRACKET ASSY., Door 16.430
BRACKET ASSY., Frame Cross, Front 7.010
BRACKET ASSY., Front and Rear Bumper 7.869
BRACKET ASSY., Heater Defroster 8.857
BRACKET ASSY., Instrument Panel 10.230
BRACKET ASSY., Muffler 3.704
BRACKET ASSY., Rear Engine and Radiator Grille 1.267
BRACKET ASSY., Safety Light 9.773
BRACKET ASSY., Spare Wheel Mounting 7.751
BRACKET ASSY., Steering Column 6.760
BRACKET ASSY., Transmission Mounting 4.083
BRACKET ASSY., Turbocharger 3.342
BRACKET ASSY., Windshield Washer Parts 10.154
BRACKET UNIT, Axle Control arm. 5.381
BRACKET UNIT, Generator 2.277
BREAKER ASSEMBLY, Folding Top Circuit 14.490
BREATHER, Air Cleaner 3.410
BRUSH, Folding Top Hydraulic 14.481
BRUSH, Starting Motor 2.051
BRUSH ASSEMBLY, Generator 2.285
BRUSH UNIT, Generator 2.285
BRUSH UNIT, Generator Brush 2.291
BULB, Dome 11.925
BUMPER, Brake (and Clutch) Pedal 4.634
BUMPER, Clutch and Brake Pedal (FOR COVERS see group 4.630) 0.829
BUMPER, Door 16.400
BUMPER, Door Lock Remote 10.506
BUMPER, Door Side 10.587
BUMPER, Door Window Strap 10.716
BUMPER, Engine Air Cooling Control 1.035
BUMPER, Gearshift Control Hand Lever 4.008
BUMPER, Hood or Engine Compartment Lid 8.024
BUMPER, Instrument Panel Compartment Door . . 10.263
BUMPER, Instrument Panel Compartment 16.110
BUMPER, License Plate 7.800
BUMPER, Load Floor (STA. WAG.) 12.975
BUMPER, Luggage or Engine Compartment Lid . . 12.212
BUMPER, Rear Axle 5.395
BUMPER, Rear Spring 7.535
BUMPER, Seat 16.716
BUMPER, Seat Back Stop 11.381
BUMPER, Shock Absorber 7.395
BUMPER, Side Ramp and End Gate 17.202
BUMPER, Steering Knuckle Control Arm 6.176
BUMPER, Windshield Reveal 10.093
BUMPER ASSY., Front Door Ventilator 10.670
BUMPER ASSY., Seat Back Stop 11.381
BUMPER ASSY., Steering Gear 6.518
BURNER ASSY., and ATTACHING PARTS, Car Heater Burner 8.835
BUSHING, Air Conditioning 9.171
BUSHING, Brake Pedal 4.626
BUSHING, Car Heater 8.854
BUSHING, Clutch Pedal 0.831
BUSHING, Clutch Pedal Intermediate Lever Shaft Ball 0.851
BUSHING, Door 16.330
BUSHING, Door Hinge 16.323
BUSHING, Door Hinge Pin 10.464
BUSHING, Drive Pinion Front 5.447
BUSHING, Folding Top Side Roof Rail—Front . . 14.160
BUSHING, Gearshift Control Hand Lever 4.008
BUSHING, Gearshift Control Idler Attaching 4.042
BUSHING, Generator 2.277
BUSHING, Generator Commutator End Frame . . . 2.298
BUSHING, Heater Air Distributor 9.786
BUSHING, Low Sun Gear and Clutch 4.162
BUSHING, Pitman Shaft 6.786
BUSHING, Platform 17.447
BUSHING, Quarter Window Lower Sash 11.007
BUSHING, Rear View 10.185
BUSHING, Rear View 16.068
BUSHING, Speedometer 9.761
BUSHING, Stabilizer Shaft 7.243
BUSHING, Starting Motor End 2.083
BUSHING, Steering Knuckle Lower Control Arm . 6.170
BUSHING, Throttle Control Rod 3.425
BUSHING, Transmission Clutch 4.169
BUSHING, Transmission 4.115
BUSHING ASSEMBLY, Steering Idler 6.897
BUSHING ASSEMBLY, Steering Knuckle Upper Control Arm 6.164
BUSHING ASSY., Axle Control arm. 5.381
BUTTON, Horn Button 2.820
BUTTON ASSY., Front Door Trim (less arm rest) . 14.685
BUTTON ASSY., Horn Button 2.820
BUTTON ASSY., Rear Quarter Trim Finishing . . . 15.101
BUTTON ASSY., Seat Back and Door Trim Pad . . 14.804
BUZZER, Ignition Switch Warning 2.195
BUZZER ASSY., Speed Indicator 9.762

C

CABLE, Folding Top Trim Hold Down 14.102
CABLE, Seat Back Stop 11.381
CABLE ASSEMBLY, Battery to Starting Switch . . 2.342
CABLE ASSEMBLY, Ground 2.341
CABLE ASSY., Air Flow Control 9.787
CABLE ASSY., Carburetor to Accelerator Lever . . 3.430
CABLE ASSY., Clutch Pedal Control 0.854
CABLE ASSY., Folding Top Trim Hold Down 14.102
CABLE ASSY., Folding Top Hydraulic Pump 14.472
CABLE ASSY., Gearshift Control 4.047
CABLE ASSY., Parking Brake 4.779
CABLE ASSY., Rear View Mirror, Outside 10.186
CABLE ASSY., Speed Indicator 9.762
CABLE PACKAGE, Rear View Mirror, Outside 10.186
CABLE UNIT, Air Flow Control 9.787
CAM, Carburetor Fast Idle 3.766
CAM, Direction Signal Lamp (Cancelling) 2.896
CAM, Distributor 2.381
CAM, Front Door Glass Lower Sash Channel 10.687
CAM, Fuel Tank 3.107
CAM, Rear Axle 5.417
CAM, Steering Knuckle Lower Control Arm Attaching 6.172
CAM ASSY., Carburetor Fast Idle 3.766
CAM ASSY., Door Window Vertical Guide 10.792
CAM ASSY., Quarter Window Lower Sash 11.007
CAM ASSY., Rear Door Window 10.748
CAM ASSY., Tail Gate 12.180
CAMSHAFT 0.519
CAP, Back Window Reveal 11.208
CAP, Distributor 2.367
CAP, Door Outside Handle Lock Cylinder 16.370
CAP, Engine Intake 3.265
CAP, Front Door Lock Cylinder 10.552
CAP, Headlamp 2.726
CAP, Heater 8.866
CAP, Horn Button 2.820
CAP, Instrument Panel 10.252
CAP, Lock Pillar Finishing 14.731
CAP, Main Cylinder Filler 4.651
CAP, Manifold Vacuum Take-off 3.278
CAP, Rear Axle 5.417
CAP, Steering Knuckle Lower Control Arm 6.170
CAP, Tubeless Tire Valve 5.875
CAP, Valve Spring 0.309
CAP, Windshield Reveal 16.041
CAP, Windshield Washer Parts 10.154
CAP ASSEMBLY, Horn Button 2.820
CAP ASSY., Fuel Tank Filler 3.028
CAP ASSY., Oil Filler Tube 1.758
CAP ASSY., Oil Level 1.516
CAP ASSY., Rear View Mirror, Inside 10.187
CAP UNIT, Body Sill 8.304
CAP UNIT, Fuel Tank Filler 3.028
CAP UNITS, Front Fender 8.132
CARBURETORS 3.725
CARPET, Front Floor 15.286
CARPET, Rear Floor 15.306
CARPET ASSY., Front Floor 15.286

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

CARPET ASSY., Rear Floor 15.306
CARPET UNIT, Front Floor 15.286
CARRIER ASSEMBLY, Transmission Planet 4.175
CARRIER ASSY., Differential, with Cap 5.505
CARRIER ASSY., Wheel 7.629
CARTRIDGE, Stereo Tape 9.670
CASE, Car Heater 8.854
CASE, Instrument Cluster 9.743
CASE, Instrument Panel Compartment 16.110
CASE, Transmission 4.103
CASE, Wheel Carrier Lock 7.679
CASE and PARTS, Air Conditioning 9.262
CASE ASSY., Air Conditioning Evaporator Blower 9.215
CASE ASSY., Heater Defroster 8.857
CASE ASSY., Instrument Panel Compartment Door, Seat Separator Compt. 10.266
CASE UNIT, Differential Carrier 5.510
CATCH ASSY., Door Lock 16.335
CATCH ASSY., Folding Top 14.310
CATCH ASSY., Hood or Engine Compartment . . . 8.080
CHANNEL, Front Door Glass Run 10.701
CHANNEL, Front Door Glass Division 10.686
CHANNEL, Front Door Vent 10.688
CHANNEL, Quarter Window Glass 11.015
CHANNEL, Rear Door Window Glass 10.759
CHANNEL ASSEMBLY, Quarter Window Lower Sash 11.007
CHANNEL ASSEMBLY, Quarter Window Glass Run 11.021
CHANNEL ASSEMBLY, Windshield Glass 10.092
CHANNEL ASSY., Back Window (rubber) 11.207
CHANNEL ASSY., Front Door Ventilator 10.655
CHANNEL ASSY., Front Door Window 10.685
CHANNEL ASSY., Rear Door Window Lower Sash 10.747
CHANNEL ASSY. and PARTS, Door Glass Sash . . 16.190
CHEVROLET SAMPLE 99.999
CIRCUIT BREAKER 13.095
CLAMP, Air Cleaner to Carburetor 3.407
CLAMP, Air Conditioning Hose 9.242
CLAMP, Air Conditioning Evaporator Expansion Valve 9.214
CLAMP, Air Conditioning 9.220
CLAMP, Air Conditioning Control 9.281
CLAMP, Air Flow Control 9.787
CLAMP, Air Injection Reactor 3.680
CLAMP, Battery 2.335
CLAMP, Bumper Guard Mounting 7.829
CLAMP, Carburetor Throttle 3.762
CLAMP, Clutch Pedal Control 0.854
CLAMP, Crankcase Ventilator 1.750
CLAMP, Distributor 2.363
CLAMP, Engine Oil 1.531
CLAMP, Exhaust Manifold 3.602
CLAMP, Exhaust Manifold 3.273
CLAMP, Fuel Feed Pipe 3.162
CLAMP, Gearshift Control 4.047
CLAMP, Harness Assy. Attaching 2.482
CLAMP, Heater Air Distributor 9.786
CLAMP, Heater Defroster 8.857
CLAMP, Hose with Nut and Bolt 1.166
CLAMP, Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration) 4.686
CLAMP, Inlet Manifold 3.267
CLAMP, Instrument Cluster 9.743
CLAMP, Parking Brake Cable 4.790
CLAMP, Rear Axle 5.638
CLAMP, Stabilizer Shaft 7.243
CLAMP, Steering Column 6.760
CLAMP, Steering Gear Worm Ball Return Guide . 6.843
CLAMP, Steering Relay 6.870
CLAMP, Tie Rod End 6.234
CLAMP, Transmission Oil 4.128
CLAMP ASSY., Turbocharger 3.346
CLAMP UNIT, Distributor 2.363
CLAMP UNIT, Muffler and Exhaust Pipe 3.708
CLEANER, Carburetor Air 3.402
CLEANER, Engine Concentrate 1.850
CLEVIS, Main Cylinder Adjusting 4.662
CLEVIS ASSY., Clutch Pedal Control 0.854
CLIP, Air Conditioning Hose 9.242
CLIP, Air Flow Control 9.787
CLIP, Back Window Reveal Moulding 11.209
CLIP, Body Lock Pillar, Pinchweld Finish 14.735
CLIP, Body Side Outer Panel 17.507
CLIP, Body Sill Moulding 8.309
CLIP, Brake 4.866
CLIP, Carburetor 3.838
CLIP, Carburetor Throttle 3.762
CLIP, Carburetor Choke 3.752
CLIP, Chassis Wiring Harness 2.559
CLIP, Clutch Control Cable 0.855
CLIP, Clutch Fork Release 0.787
CLIP, Direction Signal Lamp 2.892
CLIP, Dome Lamp 16.495
CLIP, Door Edge 10.352
CLIP, Door Inside Locking Rod 10.565
CLIP, Door Opening and Windshield Pillar 10.694
CLIP, Door Trim Bind Strip Replacement 14.683
CLIP, Door Weatherstrip 10.695
CLIP, Electrical 2.530
CLIP, Engine Air Cooling Control 1.040
CLIP, Engine Air Cooling Control 1.035
CLIP, Engine Compartment Lid 12.246
CLIP, Engine Compartment Lower Gutter Sealing 8.010
CLIP, Folding Top Bow Binding End 13.342
CLIP, Folding Top 14.483
CLIP, Front and Rear Door Lock 10.474
CLIP, Front Fender 8.147
CLIP, Front Seat Hinge Arm 11.375
CLIP, Fuel Feed Pipe 3.162
CLIP, Gearshift Control 4.047
CLIP, Hand Control Wires and Tubes 3.483
CLIP, Headlining Wire 12.954
CLIP, Heater Air Distributor 9.786
CLIP, Heater and Air Conditioning 9.275
CLIP, Heater Blower and Ventilator 8.855
CLIP, Hood and Body Front Emblem 8.056
CLIP, Hood Panel 8.021
CLIP, Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration) 4.686
CLIP, Instrument Cluster 9.744
CLIP, Luggage Compartment Lid Panel Moulding 12.183
CLIP, Parking Brake Cable 4.790
CLIP, Parking Brake Cable 4.785
CLIP, Parking Brake 4.765
CLIP, Quarter Window 11.032
CLIP, Rear Seat Back Compartment Shelf 15.024
CLIP, Roof Inner Trim 14.651
CLIP, Seat 16.716
CLIP, Shock Absorber 7.346
CLIP, Side Roof Rail 10.721
CLIP, Speedometer without Casing 4.342
CLIP, Tail Gate 12.180
CLIP, Throttle Control Rod 3.425
CLIP, Transmission Oil 4.128
CLIP, Transmission Gearshift Control Shaft or Tube 4.027
CLIP, Transmission Throttle Valve Control Rod . . 4.052
CLIP, Windshield Reveal Moulding 10.096
CLIP, Windshield Wiper Parts 10.156
CLIP ASSY., Body Rear Panel 12.121
CLIP ASSY., Fender Moulding 8.133
CLIP ASSY., Horn Button 2.820
CLOCK ASSY., Instrument Panel 9.772
CLOCK UNIT, Instrument Panel 9.772
CLUTCH ASSEMBLY, Transmission 4.380
CLUTCH ASSY., Transmission 4.164
COATED FABRIC 15.506
COIL, Air Conditioning Compressor Clutch Actuating 9.186
COIL, Ignition 2.170
COIL ASSEMBLY, Starting Motor Field 2.049
COIL ASSY., Automatic Choke Control 3.750

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

COIL ASSY., Distributor 2.372
COIL UNIT, Generator Field 2.310
COLLAR, Starting Motor 2.063
COLUMN ASSY., Steering Gear 6.518
COMPARTMENT ASSY., Instrument Panel Compartment 10.260
COMPASS UNIT, Auto 8.873
COMPENSATOR KIT, Carburetor Idle Air Compensator 3.820
COMPRESSOR, Air Conditioning 9.170
CONDENSER, Generator 2.319
CONDENSER ASSY., Air Conditioning Refrigerant 9.190
CONDENSER ASSY., Distributor 2.393
CONE, Differential Side 5.536
CONE, Rear Wheel 5.855
CONNECTOR, Air Conditioning Dehydrator 9.225
CONNECTOR, Air Conditioning 9.220
CONNECTOR, Distributor Terminal 2.400
CONNECTOR, Electrical 2.530
CONNECTOR, Heater Air Distributor 9.786
CONNECTOR, Heater Air Inlet 9.782
CONNECTOR, Heater and Air Conditioning Electrical 9.276
CONNECTOR, Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration) 4.686
CONNECTOR, Inlet Manifold 3.267
CONNECTOR, Spark Control 2.420
CONNECTOR, Transmission Oil 4.195
CONNECTOR, Turbocharger 3.358
CONTACT ASSEMBLY and PARTS, Horn Blowing 2.819
CONTAINER, Tissue Litter 8.891
CONTROL, Door Lock 16.341
CONTROL ASSEMBLY, Transmission Gearshift . . 4.004
CONTROL ASSY., Carburetor Fast Idle 3.766
CONTROL ASSY., Carburetor Choke Vacuum 3.755
CONTROL ASSY., Distributor Vacuum 2.410
CONTROL ASSY., Door Lock Remote 10.500
CONTROL ASSY., Heater 8.849
CONTROL ASSY., Rear View Mirror, Outside 10.186
CONTROL PACKAGE, Rear View Mirror, Outside . 10.186
CONTROL UNIT, Accel. Pedal 3.431
CONVERTER ASSY., Transmission 4.115
COOLER ASSY., Transmission Oil 4.128
COOLER UNIT, Oil 1.540
CORE ASSY., Air Conditioning Evaporator 9.210
COUPLING, Steering Gear Shaft 6.525
COUPLING ASSY., Transmission Gearshift Lever . 4.035
COVER, Air Cleaner 3.410
COVER, Air Injection Reactor Pump 3.660
COVER, Automatic Choke Control 3.750
COVER, Battery 2.345
COVER, Blower Belt Idler Pulley 1.060
COVER, Body Center Pillar, Pinchweld Finish 14.730
COVER, Brake (and Clutch) Pedal Pad 4.630
COVER, Brake Flange Plate Hole 5.117
COVER, Clutch 0.861
COVER, Crankcase and Push Rod 0.439
COVER, Differential Carrier 5.510
COVER, Direction Signal Control Switch 2.906
COVER, Door 16.167
COVER, Engine Air Cooling 1.020
COVER, Engine Compartment Floor 12.981
COVER, Flywheel Housing Access Hole 0.686
COVER, Folding Top Compartment (See Group 15.100 for TRIM ASSY.) 12.989
COVER, Front Seat Back 11.358
COVER, Front Seat Hinge Arm 11.375
COVER, Gearshift Control Idler Attaching 4.042
COVER, Gearshift Hand Lever Control 4.010
COVER, Hand Control Wires and Tubes 3.483
COVER, Instrument Cluster 16.081
COVER, Load Floor (STA. WAG.) 12.975
COVER, Main Cylinder Filler 4.051
COVER, Oil 1.540
COVER, Oil Pump 1.723
COVER, Radio Instrument Panel 10.256
COVER, Rear Door Arm, Trimmed 14.762
COVER, Rear Quarter Side Inner 12.941
COVER, Starting Motor 2.104
COVER, Steering Gear 6.518
COVER, Steering Gear Jacket 6.758
COVER, Transmission 4.105
COVER, Transmission Clutch Gear Bearing 4.356
COVER, Underbody Trim (floor mounted) 4.017
COVER, Valve Rocker Arm 0.386
COVER, w/defroster 8.845
COVER, Wheel 5.858
COVER, Windshield Washer Parts 10.154
COVER and PARTS, Inspection 16.547
COVER ASSY., Front Door Arm, Trimmed 14.686
COVER ASSY., Front Seat Back 14.924
COVER ASSY., Heater Blower Motor 8.856
COVER ASSY., Steering Gear Housing 6.807
COVER UNIT, Wheel 5.858
CRANKCASE, Engine (Refer to Helicoil group 8.914 in the P&A 30 for thread repair) 0.030
CRANKSHAFT ASSEMBLY 0.646
CUP, Differential Side 5.536
CUP, Front Wheel Inner Bearing 6.316
CUP, Front Wheel Outer Bearing 6.317
CUP, Gearshift Hand Lever Housing 4.012
CUP, Generator Oil 2.301
CUP, Main Cylinder Piston 4.654
CUP, Piston (See group 4.665 for cylinder repair units) 4.667
CUP, Rear Wheel 5.855
CUP, Speedometer Adapter 4.330
CUP, Steering Gear Worm Thrust 6.835
CUP, Vacuum Power Brake Cylinder 4.910
CURTAIN ASSY., Back (with window) 13.389
CUSHION, Body Mounting 9.023
CUSHION, Rear Spring 7.545
CUSHION ASSY., Front Seat Bottom with Frame, Springs and Padding (less trim cover) 11.419
CUSHION ASSY., Rear Seat Bottom, with Spring, Frame and Padding (less trim cover) 11.610
CUSHION ASSY., Seat Back 16.720
CUSHION ASSY., Seat Bottom 16.715
CYLINDER, Instrument Panel Compartment 16.110
CYLINDER, Instrument Panel Compartment Door, Seat Separator Compt. 10.266
CYLINDER ASSEMBLY, Hydraulic Brake Main . . . 4.650
CYLINDER ASSEMBLY, Ignition 2.188
CYLINDER ASSEMBLY, Wheel Brake (See group 4.667 for piston repair unit) 4.665
CYLINDER ASSY., Air Conditioning 9.170
CYLINDER ASSY., Door Outside 16.365
CYLINDER ASSY., Luggage Compartment Lid Lock 12.248
CYLINDER ASSY., Wheel Carrier Lock 7.680
CYLINDER PARTS, Luggage Compartment Lid Lock 12.249
CYLINDER UNIT, Door Outside 16.365
CYLINDER UNIT, Engine (Refer to Helicoil group 8.914 in the P&A 30 for thread repair) 0.030
CYLINDER UNIT, Front Door Lock 10.550
CYLINDER UNIT, Luggage Compartment Lid Lock 12.248

D

DAMPENER, Body Mounting Vibration 9.007
DAMPER ASSY., Engine Air Cooling Control 1.035
DECLENE, Hydraulic Brake 4.683
DEFELCTOR, Rear Quarter Side Inner 12.941
DEFLECTOR, Air Conditioning 9.262
DEFLECTOR, Body Rear Engine and Front Radiator 1.266
DEFLECTOR, Cowl Side 12.804
DEFLECTOR, Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) . . 9.789
DEFLECTOR, Door Inner Panel 10.355
DEFLECTOR, Engine and Luggage Compartment . 12.971
DEFLECTOR, Rear Axle Universal Joint 5.425

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

DEFLECTOR, Rear Wheel Hub and Drum 5.815
DEFLECTOR ASSY., Air Conditioning 9.262
DEFROSTER PARTS 9.779
DEFROSTER UNIT, and Parts 9.778
DIAL, Transmission Gearshift Control 4.020
DIAPHRAGM, Fuel Pump Mounting 3.904
DIAPHRAGM, Fuel Pump Pulsator 3.910
DIAPHRAGM ASSY., Carburetor Fast Idle 3.766
DIODE, Generator 2.319
DISC, with Facing, Clutch 0.886
DISPENSER, Tissue Litter 8.891
DISTRIBUTOR, Heater Air Distributor 9.786
DISTRIBUTOR ASSY., Ignition 2.361
DOOR, Body Side 16.157
DOOR, Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) 9.789
DOOR, Grille 1.303
DOOR, Side Front (in prime) 16.150
DOOR ASSEMBLY, Rear (less paint, trim and hardware) 10.373
DOOR ASSY., Front (less paint, trim and hardware) 10.351
DOOR ASSY., Instrument Panel Compartment . . . 10.261
DOOR ASSY., Instrument Panel Compartment . . . 16.110
DOOR ASSY., Rear 16.160
DOOR ASSY. and PARTS, Gas Tank Filler Neck Compartment 12.945
DRIVE ASSEMBLY, Starting Motor 2.086
DRUM ASSEMBLY, Front and Rear Wheel, Brake 5.809
DRUM ASSY., Transmission Clutch 4.169
DUCT ASSY., Engine Air Cooling 1.020
DUCT ASSY., Heater Air Distributor 9.786
DUST SHIELD, Distributor 2.362

E

ECCENTRIC, Fuel Pump 3.935
ELBOW, Air Cleaner to Carburetor 3.407
ELEMENT, Air Cleaner 3.410
ELEMENT, Cigarette Lighter 9.709
ELEMENT ASSY., Oil Filter 1.836
EMBLEM, Door Trim 14.691
EMBLEM, Front Fender 8.147
EMBLEM, Grille 1.303
EMBLEM, Horn Button 2.820
EMBLEM, Instrument Panel 10.254
EMBLEM, Wheel Appearance 5.871
EMBLEM ASSY., Hood or Engine Compartment Lid 8.055
EMBLEM UNIT, Name 12.116A
END, Transmission Gearshift Lever 4.035
END ASSY., Tie Rod 6.233
ENGINE ASSEMBLY 0.000
EQUALIZER, Parking Brake 4.765
ESCUTCHEON, Air Conditioning Control 9.279
ESCUTCHEON, Back Window Reveal Moulding . . 11.209
ESCUTCHEON, Door 16.345
ESCUTCHEON, Door Lock Outside 16.350
ESCUTCHEON, Door Window 16.270
ESCUTCHEON, Folding Top 14.483
ESCUTCHEON, Front Seat Adjusting Lock 11.589
ESCUTCHEON, Garnish Moulding 11.133
ESCUTCHEON, Rear Seat Back 15.011
ESCUTCHEON, Rear View Mirror, Outside 10.186
ESCUTCHEON, Roof Drip 12.075
ESCUTCHEON, Roof Inner Trim 14.651
EXTENSION, Body Side 16.790
EXTENSION, Clutch Pedal Pull Back Spring 0.846
EXTENSION, Engine Air Cooling 1.020
EXTENSION, Frame cross 7.006
EXTENSION, Front Door Sill 11.175
EXTENSION, Heater Air Distributor 9.786
EXTENSION, Rear Quarter Side Inner 12.941
EXTENSION, Rear Seat Back 15.011
EXTENSION, Tubeless Tire Valve 5.875
EXTENSION ASSEMBLY, Dash and Toe 16.550
EXTENSION ASSY., Air Cleaner Intake 3.417
EXTENSION ASSY., Body Side Trim 17.112
EXTENSION ASSY., Rear 12.986
EYELET, Body Side Trim 17.112
EYELET, Door Inside Trim 16.165

F

FABRIC, Top and Wall 15.530
FAN, Generator 2.274
FAN ASSY., Air Conditioning Evaporator Blower Motor 9.216
FAN ASSY., Heater Defroster 8.857
FASTENER, Child Safety 14.870
FASTENER, Dash Panel 15.280
FASTENER, Direction Signal Lamp 2.892
FASTENER, Door Weatherstrip 10.695
FASTENER, Folding Top and Dust Boot 13.384
FASTENER, Folding Top Front Roof Rail 14.060
FASTENER, Folding Top Side Roof Rail—Rear . . . 14.260
FASTENER, Front Seat Hinge Arm 11.375
FASTENER, Rear Quarter Upper—Above Belt . . . 14.645
FASTENER, Steering Gear Jacket 6.758
FELT, Body Lining Deadener 15.492
FELT, Cushion and Back 16.760
FERRULE, Manifold Pressure Gauge 3.374
FERRULE, Rear Door Locking Rod Knob 10.560
FERRULE ASSEMBLY, Lighting Switch Rod 2.487
FIELD ASSY., Folding Top Hydraulic 14.481
FILLER, Back Window 12.964
FILLER, Center Body 12.491
FILLER, Door Hinge 16.507
FILLER, Engine and Luggage Compartment 12.971
FILLER, Front Door Ventilator 10.655
FILLER, Front Door Window 10.685
FILLER, Luggage Compartment Lid 12.184
FILLER, Quarter Window Lower Sash 11.007
FILLER, Rear Door Window Lower Sash 10.747
FILLER, Roof 16.585
FILLER, Windshield Glass 10.010
FILLER ASSY., Door and End Gate Hinge 17.160
FILTER, Carburetor Fuel Inlet 3.740
FILTER, Windshield Washer Parts 10.154
FILTER KIT, Carburetor Fuel 3.890
FIRE EXTINGUISHER 9.990
FITTING, Air Conditioning Compressor 9.226
FITTING, Manifold Pressure Gauge 3.374
FITTING, Manifold Vacuum Take-off 3.278
FITTING, Speedometer Driven Gear 4.338
FITTING ASSY., Speedometer Driven Gear 4.338
FLAG, Wheel and Tire 8.821
FLANGE, Engine Air Cooling 1.020
FLANGE, Inlet and Exhaust Pipe 3.610
FLANGE, Oil Pan Drain 1.453
FLANGE, Rear Axle Universal Joint 5.425
FLANGE, Steering Gear Shaft 6.525
FLANGE ASSY., Low Sun Gear and Clutch 4.162
FLANGE UNIT, Rear Wheel 5.806
FLARE ASSY., Wheel and Tire 8.821
FLASHER ASSEMBLY, Direction Signal Lamp . . . 2.892
FLOAT ASSY., Carburetor 3.745
FLUID, G.M. Automatic Transmission 4.101
FLUID, Hydraulic Brake 4.683
FLYWHEEL ASSY. 0.666
FORK, Gearshift 4.303
FORK ASSEMBLY, Clutch Release 0.795
FOUNDATION, Rear Compartment 12.584
FOUNDATION, Rear Quarter 15.100
FOUNDATION, Rear Seat Back Compartment Shelf 15.024
FRAME, Cowl and Dash 12.803
FRAME, Generator Drive End 2.305
FRAME ASSEMBLY, Front Door Ventilator 10.656
FRAME ASSEMBLY, Generator Commutator End . 2.297

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

FRAME ASSEMBLY, Starting Motor Commutator End 2.067
FRAME ASSY., License Plate 7.800
FRAME ASSY., Rear Seat Back with Springs 11.628
FRAME ASSY., Seat 16.679
FRAME ASSY., Windshield Upper 12.807
FRAME UNIT, Generator Drive End 2.305

G

GASKET, Air Cleaner 3.403
GASKET, Air Cleaner 3.406
GASKET, Air Conditioning Compressor Clutch Actuating 9.186
GASKET, Air Conditioning Compressor Oil Test . 9.177
GASKET, Air Conditioning Compressor Pressure Relief 9.178
GASKET, Air Conditioning Evaporator Blower Motor 9.216
GASKET, Air Injection Reactor 3.680
GASKET, Automatic Choke Control 3.750
GASKET, Axle Filler and Drain 5.400
GASKET, Back-up 2.698
GASKET, Brake Main Cylinder and Pedal Shaft . . 4.648
GASKET, Carburetor Throttle Body 3.735
GASKET, Carburetor to Manifold 3.726
GASKET, Carburetor Fuel Inlet 3.740
GASKET, Carburetor Bowl Cover 3.738
GASKET, Car Heater 8.854
GASKET, Crankcase and Push Rod 0.443
GASKET, Crankshaft 0.728
GASKET, Cylinder Head 0.289
GASKET, Differential Carrier 5.508
GASKET, Direction 2.880
GASKET, Distributor 2.363
GASKET, Door Lock Inside Handle 10.517
GASKET, Door Lock Outside 16.350
GASKET, Engine Rear Housing and Crankcase Front End Cover 0.207
GASKET, Engine (Refer to Helicoil group 8.914 in the P&A 30 for thread repair) 0.030
GASKET, Engine Shield 1.030
GASKET, Exhaust Pipe 3.611
GASKET, Flange plate 5.002
GASKET, Float Bowl 3.731
GASKET, Flywheel and Clutch Housing 0.677
GASKET, Fuel Tank Gauge 3.112
GASKET, Gearshift Detent 4.311
GASKET, Headlamp to Fender 2.722
GASKET, Heater Air Inlet 9.782
GASKET, Inlet and Exhaust Manifold 3.270
GASKET, Instrument Panel 9.749
GASKET, Luggage Compartment Lid Lock Cylinder 12.247
GASKET, Main Cylinder Filler 4.651
GASKET, Oil Cooler 1.550
GASKET, Oil Filter 1.844
GASKET, Oil Pan 1.429
GASKET, Oil Pan Drain Screw 1.456
GASKET, Oil Pressure Regulator 1.609
GASKET, Oil Pump Cover 1.724
GASKET, Parking and Directional Signal Lamp Lens 2.590
GASKET, Rear License Lamp Lens 2.707
GASKET, Rear View Mirror, Outside 10.186
GASKET, Spark Plug Seat 2.271
GASKET, Starting Motor 2.104
GASKET, Steering Gear Side Cover 6.809
GASKET, Steering Gear Jacket 6.758
GASKET, Tail Lamp Mounting 2.660
GASKET, Tail, Stop and Direction Signal Lamp Lens 2.684
GASKET, Temperature (Engine Unit) 1.150
GASKET, Transmission Case Cover 4.109
GASKET, Transmission Oil Pan 4.196
GASKET, Transmission Clutch Gear Bearing 4.358
GASKET, Turbocharger 3.342
GASKET, Valve Rocker Cover 0.423
GASKET, w/defroster 8.845
GASKET, Windshield Wiper Motor Mounting 10.152
GASKET, Windshield Wiper Parts 10.156
GASKET and ACCUMULATOR DETAILS, Transmission Main Valve Body 4.217
GASKET KIT, Carburetor 3.724
GASKET PACKAGE, Parking and Directional Signal Lamp Lens 2.590
GASKET UNIT, Door Outside Handle 10.537
GASKET UNIT, Engine (Major Overhaul) 0.010
GASKET UNIT, Transmission 4.005
GAUGE, Fuel Tank 3.107
GAUGE, Transmission Oil Filler 4.133
GAUGE ASSY., Axle Filler and Drain 5.400
GAUGE ASSY., Engine Temperature (Dash Unit) . 1.148
GAUGE ASSY., Fuel, Instrument Panel 3.108
GAUGE ASSY., Instrument Cluster 9.755
GAUGE ASSY., Oil Level 1.516
GEAR, Camshaft Timing 0.736
GEAR, Crankshaft 0.728
GEAR, Differential Side 5.528
GEAR, Differential Pinion 5.526
GEAR, Distributor 2.374
GEAR, Oil Pump Shaft 1.639
GEAR, Safety Light 9.773
GEAR, Speedometer Drive 4.343
GEAR, Speedometer Driven 4.337
GEAR, Transmission Rear Unit 4.187
GEAR, Transmission 2nd Speed 4.395
GEAR, Transmission 4.256
GEAR, Transmission Countershaft 4.421
GEAR, Transmission Planet 4.175
GEAR, Transmission 1st and Reverse 4.417
GEAR, Transmission High Speed 4.415
GEAR, Transmission Main Drive (Clutch) 4.351
GEAR ASSY., Steering 6.508
GEAR ASSY., Transmission Main Drive (Clutch) . 4.351
GEAR ASSY., Transmission 2nd Speed 4.395
GEAR ASSY., Transmission Reverse Idler 4.430
GEAR UNIT, Distributor 2.374
GEAR UNIT, Ring and Pinion 5.529
GEAR UNIT, Steering 6.508
GEAR UNIT, Transmission High Speed 4.415
GENERATOR ASSEMBLY (less pulley) 2.275
GLASS, Back Window 16.464
GLASS, Back Window 11.204
GLASS, Door Window 16.180
GLASS, Front Door Ventilator 16.174
GLASS, Front Door Ventilator 10.658
GLASS, Front Door Window 10.681
GLASS, Gearshift Control Indicator 4.022
GLASS, Instrument Cluster 9.748
GLASS, Quarter Window 11.011
GLASS, Rear Door Window 10.741
GLASS, Windshield 10.027
GLASS, WINDSHIELD 16.005
GLASS and PARTS, Window 17.136
GOVERNOR ASSY., Transmission 4.256
GREASE, Air Injection Reactor 3.665
GREASE CAP, Wheel Bearing 6.330
GRILLE, Air Conditioning Evaporator Air Distributor Outlet 9.264
GRILLE, Body Rear Engine and Front Radiator . . 1.266
GRILLE, Cowl Side 16.551
GRILLE, Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) 9.789
GRILLE, Cowl Top Ventilator 12.800
GRILLE, Engine and Luggage Compartment 12.971
GROMMET 9.775
GROMMET, Air Conditioning Dehydrator 9.225
GROMMET, Air Injection Reactor 3.680
GROMMET, Clutch Pedal Intermediate 0.852
GROMMET, Clutch Pedal Control 0.854
GROMMET, Differential Carrier 5.510
GROMMET, Distributor 2.372

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts IRON

GROMMET, Distributor Terminal 2.401
GROMMET, Door Hinge 16.325
GROMMET, Front Floor 15.300
GROMMET, Fuel Feed Pipe 3.162
GROMMET, Gearshift Control 4.047
GROMMET, Hydraulic Brake 4.685
GROMMET, Instrument Panel Compartment 16.110
GROMMET, Instrument Panel Compartment Door 10.262
GROMMET, Oil Level 1.516
GROMMET, Shock Absorber 7.388
GROMMET, Spark Plug Wire 2.251
GROMMET, Steering Gear Jacket 6.758
GROMMET, Sunshade Adjusting 10.224
GROMMET, Transmission Oil Filler 4.133
GROMMET ASSY., Windshield Wiper Motor Mounting 10.152
GUARD, Door Edge 10.352
GUARD, Engine Intake 3.265
GUARD ASSY., Bumper 7.828
GUARD UNIT, Bumper 7.828
GUIDE, Accel. Pedal 3.431
GUIDE, Blower Belt Idler Pulley 1.060
GUIDE, Carburetor Pump Outlet Valve 3.825
GUIDE, Clutch Control Cable 0.855
GUIDE, Crankcase and Push Rod 0.439
GUIDE, Folding Top Front Roof Rail 14.090
GUIDE, Hand Control Wires and Tubes 3.483
GUIDE, Parking Brake Cable 4.785
GUIDE, Steering Gear Worm Ball Return 6.842
GUIDE, Valve 0.283
GUIDE ASSEMBLY, Quarter Window 11.040
GUIDE ASSY., Side Ramp and End Gate 17.202
GUIDE UNIT, Steering Gear Worm Ball Return . . 6.842
GUTTER, Rear Compartment Lid 12.996
GUTTER, Rear Seat Front Pan Drain 10.997

H

HAMMER ASSY., Wheel and Tire 8.821
HANDLE, Ash Tray 12.016
HANDLE, Door 16.345
HANDLE, Door and Side Ramp Lock 16.333
HANDLE, Door Lock Inside 10.512
HANDLE, Door Lock Outside 16.350
HANDLE, Door Outside 16.360
HANDLE, Door Outside 10.527
HANDLE, Front Door Ventilator 10.664
HANDLE, Front Door Ventilator 16.176
HANDLE, Gear Shift Control (Hand) 4.006
HANDLE, Hood or Engine Compartment 8.080
HANDLE ASSY., Door Window 16.270
HANDLE ASSY., Door Window Regulator 10.797
HANDLE ASSY., End Gate Lock 17.204
HANDLE ASSY., Rear Quarter Window 11.044
HANDLE ASSY., Safety Light 9.773
HAND RAIL ASSY., Child Safety 14.870
HARNESS ASSY., Body Wiring (Also see group 2.480 for additional body harnesses) 13.090
HARNESS ASSY., Folding Top Switch 14.494
HARNESS ASSY., Heater and Air Conditioning Electrical 9.276
HARNESS ASSY., Starting Ignition 2.525
HARNESS ASSY., Wiring (Also see group 13.090 for additional body harnesses) 2.480
HARNESS UNIT, Trailer 7.068
HAZARD UNIT, Wheel and Tire 8.821
HEAD, Air Conditioning Compressor 9.174
HEAD, Gearshift 4.303
HEAD ASSY., Cylinder (Refer to "TAPLOC" group 8.914 in P&A 30 for thread repair.) 0.269
HEAD ASSY., Speedometer 9.761
HEADLAMP ASSEMBLY, Complete 2.725
HEADLINING ASSEMBLY 14.640
HEAD RESTRAINT ASSY., Front Seat Back 14.924
HEATER INSTALLATION UNIT, w/defroster 8.845
HEAT SINK ASSY., Generator 2.319
HINGE, Door 16.320
HINGE, Instrument Panel 16.115
HINGE, Luggage Compartment Lid 12.184
HINGE, Quarter Window 11.052
HINGE and PARTS, Battery Access Door 16.548
HINGE ASSY., Folding Top 14.310
HINGE ASSY., Front Door Lower 10.454
HINGE ASSY., Front Door Upper 10.450
HINGE ASSY., Hood or Engine Compartment . . . 8.015
HINGE ASSY., Instrument Panel Compartment Door 10.262
HINGE ASSY., Rear Door Lower 10.460
HINGE ASSY., Rear Door Upper 10.456
HINGE ASSY., Rear End 12.966
HITCH UNIT, Trailer 7.068
HOLDER, Electrical 2.530
HOLDER, Folding Top Hydraulic 14.481
HOLDER, Starting Motor Brush 2.052
HOLDER UNIT, Generator 2.285
HOLDER UNIT, Generator Brush 2.291
HOLDER UNIT, Stereo Tape 9.670
HOOK, Coat and Seat Belt 15.388
HOOK, Folding Top Front Roof Rail 14.080
HOOK, Seat 16.714
HOOK ASSY., Coat and Seat Belt 15.388
HORN, Carburetor Air 3.730
HORN UNIT, Horn 2.810
HOSE, Air Cleaner Intake 3.417
HOSE, Air Cleaner to Carburetor 3.407
HOSE, Air Conditioning Control 9.281
HOSE, Air Conditioning Dehydrator 9.225
HOSE, Air Conditioning 9.220
HOSE, Air Injection Reactor 3.675
HOSE, Automatic Choke Control 3.750
HOSE, Carburetor Choke Vacuum 3.755
HOSE, Crankcase Ventilator 1.762
HOSE, Fuel or Oil Feed Pipe 3.163
HOSE, Fuel Tank Filler 3.003
HOSE, Heater 8.866
HOSE, Heater Air Distributor 9.260
HOSE, Heater Air Distributor 9.786
HOSE, Inlet Manifold 3.267
HOSE, Manifold Pressure Gauge 3.374
HOSE, Rear 12.986
HOSE, Rear Seat Front Pan Drain 10.997
HOSE, Spark Control 2.420
HOSE, Windshield Washer Parts 10.154
HOSE, Windshield Washer 16.066
HOSE ASSEMBLY, Hydraulic Brake 4.680
HOSE ASSY., Folding Top Hydraulic Pump 14.472
HOSE, Cylinder Head Induction 3.264
HOUSING, Air Conditioning Compressor Shaft . . . 9.175
HOUSING, Air Flow Control 9.787
HOUSING, Direction Signal Control Switch 2.906
HOUSING, Folding Top 14.483
HOUSING, Front Door Lock Cylinder 10.552
HOUSING, Instrument 9.746
HOUSING, Transmission Gearshift Control 4.020
HOUSING, Turbocharger 3.346
HOUSING ASSEMBLY, Distributor 2.362
HOUSING ASSEMBLY, Starting Motor Drive 2.085
HOUSING ASSY., Ash Tray 12.016
HOUSING ASSY., Automatic Choke Control 3.750
HOUSING ASSY., Carburetor 3.838
HOUSING ASSY., Cigarette Lighter 9.709
HOUSING ASSY., Crankcase End 0.206
HOUSING ASSY., Flywheel and Clutch 0.683
HOUSING ASSY., Gearshift Hand Lever Control . . 4.010
HOUSING ASSY., Rear License Plate Lamp (Also see Group 2.714) 2.705
HOUSING ASSY., Steering Gear 6.803
HOUSING ASSY., Stereo Tape 9.670
HOUSING ASSY., Tail, Stop and Direction Signal Lamp 2.680
HOUSING ASSY., Turbocharger 3.344
HUB, Engine Blower or Fan and Water Pump . . . 1.062
HUB, Engine Blower and Coolant Pump 1.105

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

HUB, Front Wheel 6.307
HUB, Transmission 4.164
HUB ASSY., Steering Wheel 6.512
HUB CAP, Wheel 5.858

I

IMPELLER, Turbocharger 3.348
INFLATOR ASSY. 5.880
INHIBITOR ASSY., Transmission Shifter 4.307
INLET ASSY., Heater Air Inlet 9.782
INSERT, Brake Hose Yoke 4.671
INSERT, Carburetor Float and Throttle Body 3.734
INSERT, Door Hinge Pin 10.464
INSERT, Rear Engine and Radiator Grille 1.267
INSERT ASSY., Windshield Wiper 10.146
INSERT ASSY., Windshield Wiper 16.062
INSTRUMENT PANEL (in prime) 16.080
INSULATOR, Carburetor to Manifold 3.726
INSULATOR, Clutch Pedal Intermediate 0.852
INSULATOR, Floor 16.810
INSULATOR, Floor and Toe 16.800
INSULATOR, Fuel Tank Gauge 3.112
INSULATOR, Gearshift Linkage 4.067
INSULATOR, Generator 2.313
INSULATOR, Hood Panel 8.021
INSULATOR, Instrument Panel 9.749
INSULATOR, Junction Block 2.483
INSULATOR, Luggage 17.070
INSULATOR, Muffler 3.704
INSULATOR, Roof Luggage 12.815
INSULATOR, Spring 7.420
INSULATOR, Temperature (Engine Unit) 1.150
INSULATOR ASSY., Rear Compartment 12.584
INTERLOCK, Transmission Shifter 4.307

J

JACK, Auto 8.820
JACKET ASSY., Steering Gear 6.518
JAR, Windshield Washer Parts 10.154
JET, Carburetor Metering 3.792

K

KEY, Air Conditioning Compressor Clutch Actuating 9.188
KEY, Ignition and Other Locations 2.187
KEY, Instrument Panel Compartment Door, Seat Separator Compt. 10.266
KEY, Instrument Panel Compartment 16.110
KEY, Transmission Synchronizing 4.384
KEY, Valve Stem 0.310
KIT, Back Window 11.204
KIT, Brake Conversion 5.000
KIT, Fuel Pump Repair 3.925
KIT, Quarter Window 11.011
KIT, Transmission Gearshift 4.004
KIT, Windshield 10.027
KNOB, Air Conditioning Control 9.278
KNOB, Air Flow Control 9.787
KNOB, Ash Receiver (less handle) 16.120
KNOB, Cigarette Lighter 9.709
KNOB, Direction Signal Lamp 2.897
KNOB, Door Inside Locking Rod 10.559
KNOB, Folding Top 14.483
KNOB, Front Seat Adjuster 11.588
KNOB, Gear Shift Control (Hand) 4.006
KNOB, Hand Choke with Button, Wire and Tube . 3.480
KNOB, Instrument Panel 9.772
KNOB, Speedometer 9.761
KNOB, Windshield Wiper 16.067
KNOB ASSEMBLY, Windshield Wiper Control . . . 10.164
KNOB ASSY., Front Seat Adjuster 11.588
KNOB ASSY., Stereo Tape 9.670
KNUCKLE, Steering 6.020

L

LACE, Headlining and Back Window Finishing . . . 14.650
LACE, Pinchweld Finishing 15.520
LACE, Rear Seat Back Compartment Shelf 15.024
LACE, Top Dust 13.450
LACE ASSY., Body Lock Pillar, Pinchweld Finish . 14.735
LACE ASSY., Headlining and Back Window Finishing 14.650
LAMP, Underhood 8.890
LAMP ASSEMBLY, Rear License (Also see Group 2.705 and 2.714) 2.700
LAMP ASSEMBLY, Tail, Stop and Direction Signal 2.679
LAMP ASSY., Direction 2.880
LAMP ASSY., Dome 11.925
LAMP ASSY., Dome and Courtesy 16.494
LAMP ASSY., Parking and Direction Signal 2.585
LAMP ASSY., Parking Brake Alarm 4.589
LAMP ASSY. and PARTS, Back-up 2.697
LAMP UNIT, Ash Receiver 12.009
LAMP UNIT, Instr. Panel Compt., Seat Separator Compt. and Courtesy 10.275
LAMP UNIT, Luggage Compartment 9.988
LAMP UNIT, Safety Light 9.773
LATCH ASSY., Hood or Engine Compartment . . . 8.080
LEAD, Distributor Terminal 2.400
LEAD, Starting Motor Brush 2.055
LEG ASSY., Seat Bottom 16.715
LENS 9.750
LENS, Dome Lamp 16.495
LENS, Dome Lamp 11.928
LENS, Instrument Cluster 9.748
LENS, Parking and Directional Signal Lamp 2.589
LENS, Parking Brake Alarm 4.589
LENS, Rear License Lamp 2.709
LENS, Tail, Stop and Direction Signal Lamp 2.682
LENS ASSY., Retarding Brake Control 4.260
LETTER UNIT, Hood or Engine Compartment Lid . 8.055
LEVER, Accel. 3.454
LEVER, Automatic Choke Control 3.750
LEVER, Brake Shoe Automatic Adjusting 5.103
LEVER, Carburetor Throttle 3.762
LEVER, Carburetor Pump 3.842
LEVER, Carburetor Fast Idle 3.766
LEVER, Carburetor Choke 3.752
LEVER, Car Heater 8.854
LEVER, Direction Signal Lamp 2.897
LEVER, Engine Air Cooling Control 1.035
LEVER, Gear Shift Control (Hand) 4.006
LEVER, Heater and Air Conditioning 9.275
LEVER, Rear Door Lock 16.332
LEVER, Transmission Throttle Valve Control (T.V.) 4.050
LEVER, Transmission Shifter 4.302
LEVER ASSEMBLY, Parking Brake Shoe 5.149
LEVER ASSEMBLY, Starting Motor Shaft 2.108
LEVER ASSEMBLY, Steering Idler 6.895
LEVER ASSY., and PARTS, Tilt or Telescopic Steering Column 6.514
LEVER ASSY., Carburetor Throttle 3.759
LEVER ASSY., Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) . . 9.789
LEVER ASSY., Direction Signal Lamp 2.897
LEVER ASSY., Door Lock 16.341
LEVER ASSY., Manual Valve 4.218
LEVER ASSY., Parking Brake Apply 4.591
LEVER ASSY., Parking Brake 4.792
LID ASSEMBLY, Hood or Engine Compartment . . 8.000
LID ASSEMBLY, Luggage Compartment 12.181
LIFT ASSEMBLY, Folding Top 14.475
LINER, Gearshift Control Shifter 4.025
LINER, Horn Blowing Pivot 2.816
LINING, Rear Compartment 15.222

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

LINING, Top and Wall 15.530
LINING, Wheelhouse 15.099
LINING ASSY., Top Side Pad 13.349
LINK, Brake Shoe Automatic Adjusting Lever 5.105
LINK, Carburetor Choke 3.752
LINK, Carburetor Fast Idle 3.768
LINK, Carburetor Pump Connector 3.843
LINK, Car Heater 8.854
LINK, Door Lock Remote 10.506
LINK, Folding Top Trim Hold Down 14.102
LINK, Folding Top Side Roof Rail Control 14.140
LINK, Parking Brake 4.792
LINK, Transmission Gearshift Control Shaft or Tube 4.027
LINK, Windshield Wiper 10.159
LINK ASSEMBLY, Folding Top Side Roof Rail Control 14.140
LINK ASSY., Windshield Wiper 16.063
LOCK, Brake Shoe Anchor Pin 5.056
LOCK, Differential Bearing Adjusting Sleeve 5.539
LOCK, Differential Carrier or Propeller Shaft Pinion 5.545
LOCK, Exhaust Manifold Bolt Locking 3.604
LOCK, Transmission Shifter 4.307
LOCK, Transmission Rear Main Bearing 4.317
LOCK ASSY., Door 16.330
LOCK ASSY., Folding Top Front Roof Rail 14.080
LOCK ASSY., Front Door 10.470
LOCK ASSY., Hood or Engine Compartment 8.080
LOCK ASSY., Instrument Panel Compartment Door, Seat Separator Compt. 10.266
LOCK ASSY., Instrument Panel Compartment . . . 16.110
LOCK ASSY., Luggage Compartment Lid 12.242
LOCK ASSY., Rear Door 10.473
LOCK ASSY., Spare Wheel 7.675
LOCK RING, Rear Axle Shaft "U" Joint 5.428
LOCK RING, Universal Joint Trunnion and Yoke . . 5.586
LOOM, Fuel or Oil Feed Pipe 3.163
LUBRICANT, Hypoid Gear 5.535
LUG, Headlamp Bezel Retaining 2.736

M

MAGNET UNIT, Transmission 4.105
MAINTENANCE ITEMS, Air Conditioning 9.282
MANIFOLD, Engine Exhaust 3.601
MAT, Body Side 16.804
MAT, Floor and Toe 16.800
MAT, Front Floor 15.286
MAT, Rear Compartment 15.222
MAT, Rear Floor 15.306
MATERIAL, Top Covering 15.490
MAT UNIT, Front Floor 15.286
MAT UNIT, Rear Floor 15.306
MEDALLION, Instrument 9.746
MEMBER ASSEMBLY, Frame Cross, Front 7.010
MEMBER ASSY., Frame Cross, Intermediate 7.012
MEMBER ASSY., Frame cross 7.006
MEMBER ASSY., Rear Cross 7.014
MEMBER ASSY., Rear Suspension 5.387
METER ASSY., Fuel Tank 3.107
MIRROR ASSY., Rear View 10.185
MIRROR ASSY., Rear View 16.068
MIRROR ASSY., Safety Light 9.773
MIRROR UNIT, Rear View 10.185
MIRROR UNIT, Vanity Visor 10.195
MODULATOR and PARTS, Vacuum 4.205
MOTOR, Heater Blower and Ventilator 8.855
MOTOR ASSEMBLY, Starting 2.041
MOTOR ASSY., Air Conditioning Evaporator Blower 9.215
MOTOR ASSY., Folding Top Hydraulic 14.481
MOTOR ASSY. and PARTS, Windshield Wiper . . . 10.150
MOTOR UNIT, Windshield Wiper 16.064
MOULDING, Ash Tray 12.016
MOULDING, Back Window Reveal 11.208
MOULDING, Back Window Garnish 11.120
MOULDING, Center Pillar Scalp 12.113
MOULDING, Door Arm 16.155
MOULDING, Door Arm Rest 14.688
MOULDING, Door Trim 14.691
MOULDING, End Gate and Rear Door 17.615
MOULDING, Front Door 16.553
MOULDING, Front Door Window 10.707
MOULDING, Front Fender 8.132
MOULDING, Front Seat Hinge Arm 11.375
MOULDING, Front Seat Side Trim (See Group 12.976 for ESCUTCHEON—CAP, 2nd and 3rd seats) 14.818
MOULDING, Headlamp 2.728
MOULDING, Hood or Engine Compartment 8.015
MOULDING, Instrument Panel 10.252
MOULDING, Luggage Compartment Lid 12.182
MOULDING, Quarter Window 11.031
MOULDING, Rear Door Trim Finish 14.764
MOULDING, Rear Door Window Scalp 10.772
MOULDING, Rear Quarter Trim Finishing 15.101
MOULDING, Rear Reflector 2.689
MOULDING, Rear Seat Back 15.011
MOULDING, Roof Drip 12.075
MOULDING, Windshield Reveal 16.041
MOULDING, Windshield Reveal 10.093
MOULDING, Windshield Garnish 10.051
MOULDING ASSEMBLY, Quarter Window Garnish and Quarter Belt Finishing 11.119
MOULDING ASSY., Door Trim Panel 16.166
MOULDING UNIT, Body Rear Panel 12.121
MOULDING UNIT, Body Sill 8.304
MOULDING UNIT, Front Door Outer Panel 12.112
MOULDING UNIT, Front Fender 8.132
MOULDING UNIT, Grille 1.303
MOULDING UNIT, Rear Door Outer Panel 12.114
MOULDING UNIT, Rear Fender 12.116
MOUNTING, engine 0.027
MOUNTING ASSY., Transmission 4.081
MUFFLER ASSEMBLY, Engine Exhaust 3.701
MUFFLER UNIT, Air Conditioning Compressor . . . 9.226

N

NECK ASSY., Fuel Tank Filler 3.003
NEEDLE, Carburetor Pump Discharge Ball Check . 3.832
NEEDLE UNIT, Carburetor Float 3.814
NIPPLE, Carburetor Choke Vacuum 3.755
NIPPLE, Heater 8.866
NIPPLE, Manifold Vacuum Take-off 3.278
NIPPLE, Spark Control 2.420
NOZZLE ASSY., Windshield Wiper Parts 10.156
NUT, Air Cleaner 3.403
NUT, Air Conditioning Compressor Pulley 9.181
NUT, Air Conditioning Refrigerant 9.190
NUT, Air Flow Control 9.787
NUT, Air Injection Reactor Pump Mounting 3.655
NUT, Assist Strap 15.390
NUT, Back Window Reveal Moulding 11.209
NUT, Battery Cable Terminals 2.343
NUT, Brake Main Cylinder and Pedal Shaft 4.648
NUT, Brake Shoe Adjusting Screws 5.111
NUT, Brake Shoe Anchor Pin 5.056
NUT, Brake Shoe Hold Down, with Spring 5.043
NUT, Carburetor Fuel Inlet 3.740
NUT, Connecting Rod Cap 0.626
NUT, Cowl Belt 12.110
NUT, Cylinder Head 0.293
NUT, Differential Carrier or Propeller Shaft Pinion 5.545
NUT, Door Arm 16.155
NUT, Door Trim 14.691
NUT, Electrical Output 2.500
NUT, Exhaust Pipe 3.613
NUT, Fender Moulding 8.133
NUT, Frame Cross, Front 7.010
NUT, Front Door Arm, Trimmed 14.686

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

NUT, Front Door Window 10.685
NUT, Front Fender 8.147
NUT, Fuel or Oil Feed Pipe 3.163
NUT, Gearshift Control Indicator 4.022
NUT, Generator Armature (Drive End) 2.280
NUT, Generator Through 2.316
NUT, Grille 1.303
NUT, Headlamp Bezel Retaining 2.736
NUT, Heater Air Distributor 9.786
NUT, Heater Air Inlet 9.782
NUT, Heater and Air Conditioning 9.275
NUT, Heater Defroster 8.857
NUT, Hood and Body Front Emblem 8.056
NUT, Horn 2.845
NUT, Hub (Front and Rear) 5.813
NUT, Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration) 4.686
NUT, Ignition Switch 2.198
NUT, Instrument Panel 9.772
NUT, Instrument Panel 10.252
NUT, Instrument Cluster 9.744
NUT, License Plate 7.800
NUT, Parking Brake Alarm 4.589
NUT, Quarter Window Lower Sash 11.007
NUT, Quarter Window 11.040
NUT, Rear 16.160
NUT, Rear Axle Control Arm 5.383
NUT, Rear Door Arm, Trimmed 14.762
NUT, Rear Door Window Lower Sash 10.747
NUT, Rear Spring 7.529
NUT, Rear View Mirror, Outside 10.186
NUT, Rear View Mirror 16.069
NUT, Rear Wheel 5.829
NUT, Roof Luggage 12.815
NUT, Roof Rail 14.157
NUT, Seat 16.679
NUT, Seat 16.716
NUT, Seat 16.714
NUT, Seat Back and Door Trim Pad 14.804
NUT, Shock Absorber 7.347
NUT, Speedometer 9.761
NUT, Steering Column 6.760
NUT, Steering Gear Lash 6.822
NUT, Steering Gear Worm Bearing Lock 6.832
NUT, Steering Gear Pitman Arm 6.861
NUT, Steering Gear Worm Ball 6.841
NUT, Steering Idler 6.897
NUT, Steering Knuckle Upper Control Arm 6.178
NUT, Steering Knuckle Spindle 6.022
NUT, Steering Knuckle Lower Control Arm Attaching 6.172
NUT, Steering Knuckle 6.104
NUT, Stop Lamp 2.447
NUT, Tail Gate 12.180
NUT, Tail, Stop and Direction Signal 2.688
NUT, Transmission Mounting Support 4.085
NUT, Turbocharger 3.348
NUT, Valve Rocker Arm 0.429
NUT, Vanity Visor 10.195
NUT, Wheel Carrier 7.633
NUT, Windshield Wiper 16.067
NUT ASSY., Lighting Switch Rod 2.487
NUT ASSY., Luggage 17.070
NUT ASSY., Wheel Appearance 5.871
NUT ASSY., Windshield Wiper Control 10.166
NUT KIT, Air Conditioning Compressor Pulley . . . 9.181
NUT KIT, Air Conditioning 9.170

O

OIL, Engine Concentrate 1.850
OIL SUPPLY PUMP PARTS 4.203
ORNAMENT, Grille 1.303
ORNAMENT, Tail, Stop and Direction Signal Lamp 2.680
ORNAMENT, Wheel Appearance 5.871
OUTLET ASSEMBLY, Cowl Side 16.551
OUTLET ASSY., Carburetor Air 3.402
OUTLET ASSY., Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) . . 9.789

P

PACKING, Exhaust Pipe 3.611
PAD, Back-up 2.698
PAD, Cowl Trim 14.630
PAD, Engine Shield 1.030
PAD, Floor and Toe 16.800
PAD, Front Seat Back 14.924
PAD, Front Seat Back 14.802
PAD, Front Seat Cushion and Back 14.890
PAD, Rear Cushion, Foam Rubber 15.036
PAD, Rear View Mirror 16.069
PAD, Rear View Mirror, Outside 10.186
PAD, Seat Back Upper Panel 14.810
PAD, Tail Lamp Mounting 2.660
PAD, Top Lining 16.742
PAD ASSY., Ash Receiver 12.009
PAD ASSY., Child Safety 14.870
PAD ASSY., Door Arm 16.155
PAD ASSY., Front Seat Back 14.802
PAD ASSY., Instrument Panel 14.655
PAD UNIT, Instrument Panel 14.655
PAN, Transmission Oil 4.195
PAN ASSEMBLY, Oil 1.426
PAN ASSY., Cowl and Dash 12.803
PANEL, Body Side 16.790
PANEL, Body Side Trim 17.112
PANEL, Bumper Face 7.831
PANEL, Cowl Side 16.551
PANEL, Cowl Side 12.804
PANEL, Cowl Trim 14.630
PANEL, Dash and Toe 16.550
PANEL, Door Body Lock 16.520
PANEL, Door Hinge 16.507
PANEL, Door Inside Trim 16.165
PANEL, End Gate and Rear Door 17.615
PANEL, Engine and Luggage Compartment 12.971
PANEL, Floor Board 16.545
PANEL, Front 8.130
PANEL, Front Body Hinge 12.840
PANEL, Front Intermediate 16.603
PANEL, Front Seat Back 11.358
PANEL, Instrument 9.746
PANEL, Rear Body Lock Pillar 12.942
PANEL, Rear Quarter Side Outer 12.940
PANEL, Roof 12.810
PANEL, Roof 16.585
PANEL, Side Front (in prime) 16.150
PANEL, Top Lining 16.742
PANEL and PARTS, Body Side 16.157
PANEL AND PARTS, Door Rocker 12.934
PANEL AND PARTS, Wheelhouse 12.944
PANEL ASSY., Back Window 12.964
PANEL ASSY., Body 17.505
PANEL ASSY., Folding Top Compartment (See Group 15.100 for TRIM ASSY.) 12.989
PANEL ASSY., Front Door Outer 12.895
PANEL ASSY., Instrument Panel 10.230
PANEL ASSY., Rear Door Outer 12.913
PANEL ASSY., Rear End 12.966
PANEL ASSY., Rear Seat Back with Springs 11.628
PANEL ASSY., Wheelhouse 12.944
PANEL ASSY. and PARTS, Floor Board 16.545
PANEL ASSY. PANEL, Rear Quarter Side Inner . . 12.941
PANEL UNIT, Rear or Auxiliary Speaker 9.665
PARTS, Air Conditioning, Evaporator By-Pass 9.198
PARTS, Air Conditioning Compressor (Internal) . . 9.172
PARTS, Door Handle Push Button 10.529
PARTS, Door Outside Handle 16.353
PARTS, End Gate Hinge 17.208
PARTS, Engine Mounting (Small Attaching) 0.002

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts Co.

PARTS, Folding Top Motor and Pump 14.482
PARTS, Front Seat Back Lock 11.390
PARTS, Generator Drive End 2.307
PARTS, Tail Gate 12.195
PAWL, Door Outside Lock Handle 10.551
PAWL, Parking Brake 4.595
PEDAL, Accelerator 3.451
PEDAL, Clutch (For Clutch Pedal Pads see group 4.630) 0.830
PEDAL ASSEMBLY, Brake 4.625
PEDAL ASSY., Accelerator 3.451
PILLAR ASSY., Body 17.505
PILLAR ASSY., Center Body 12.491
PILLAR ASSY., Door and End Gate Hinge 17.160
PILLAR ASSY., Door Body Lock 16.520
PILLAR ASSY., Door Hinge 16.507
PIN, Accelerator Intermediate 3.463
PIN, Accel. Pedal 3.452
PIN, Air Conditioning Compressor Pressure Relief . 9.178
PIN, Air Conditioning Compressor Shaft 9.175
PIN, Brake Shoe Anchor 5.055
PIN, Carburetor Float Hinge 3.747
PIN, Carburetor Choke 3.752
PIN, Child Safety 14.870
PIN, Clutch Fork Release 0.787
PIN, Distributor Gear 2.379
PIN, Door Check 16.437
PIN, Door Hinge 16.323
PIN, Door Hinge 10.466
PIN, Door Window 16.260
PIN, Engine Air Cooling Control 1.035
PIN, Engine (Refer to Helicoil group 8.914 in the P&A 30 for thread repair) 0.030
PIN, Front Door Ventilator 16.176
PIN, Front Door Ventilator 10.664
PIN, Grille 1.303
PIN, Hood or Engine Compartment 8.015
PIN, Luggage Compartment Lid Hinge 12.186
PIN, Main Cylinder Adjusting 4.662
PIN, Oil Level 1.516
PIN, Oil Pump Shaft 1.639
PIN, Ramp Door Guide 17.300
PIN, Starting Motor Brush 2.052
PIN, Transmission 4.256
PIN, Transmission Shifter 4.307
PIN, Transmission Reverse Idler Shaft 4.435
PIN, Transmission Shifter 4.302
PIN, Turbocharger 3.346
PINION, Transmission Planet 4.175
PIN UNIT, Brake Shoe Hold Down, with Spring . . 5.043
PIPE, Crankcase Ventilator 1.762
PIPE, Muffler Tail 3.705
PIPE, Turbocharger 3.358
PIPE ASSY. 3.264
PIPE ASSY., Air Conditioning 9.220
PIPE ASSY., Air Injection Reactor 3.675
PIPE ASSY., Engine Exhaust 3.609
PIPE ASSY., Hydraulic Brake 4.685
PIPE ASSY., Turbocharger 3.358
PISTON, Carburetor Choke 3.752
PISTON, Low Servo 4.228
PISTON, Main Cylinder Floating 4.653
PISTON, Transmission Clutch 4.166
PIVOT, Brake Shoe Automatic Adjusting 5.103
PLASTIGAGE 0.093
PLATE 0.666
PLATE, Air Conditioning Compressor Clutch Actuating 9.188
PLATE, Air Conditioning Evaporator Blower Motor 9.216
PLATE, Ash Receiver (less handle) 16.120
PLATE, Auto 8.873
PLATE, Automatic Choke Control 3.750
PLATE, Body Mounting Inner Cushion 9.011
PLATE, Body Side 16.790
PLATE, Brake Shoe Guide 5.045
PLATE, Carburetor Fuel Inlet 3.740
PLATE, Clutch Pressure 0.863
PLATE, Distributor Weight Hold Down 2.390
PLATE, Distributor Vacuum Advance Arm Opening 2.414
PLATE, Door Lock 16.335
PLATE, Door Lock Striker 10.571
PLATE, Door Wedge 10.584
PLATE, Door Window Regulator Handle Bearing . 10.515
PLATE, Door Window Regulator 10.805
PLATE, Door Window Channel Guide 10.728
PLATE, Electrical Output 2.500
PLATE, End Gate and Rear Door 17.615
PLATE, engine 0.027
PLATE, Engine Compartment 8.153
PLATE, Folding Top Front Roof Rail 14.090
PLATE, Front Door Ventilator 16.176
PLATE, Front Fender 8.147
PLATE, Front Intermediate 16.603
PLATE, Front Seat Back 11.358
PLATE, Front Seat Hinge Arm 11.375
PLATE, Gearshift Control 4.047
PLATE, Grille 1.303
PLATE, Heater Blower Motor 8.856
PLATE, Hood or Engine Compartment 8.083
PLATE, Hood or Engine Compartment 8.015
PLATE, Hood or Engine Compartment Lid 8.055
PLATE, Horn Button 2.820
PLATE, Inlet and Exhaust Pipe 3.610
PLATE, Instrument Cluster 9.743
PLATE, Instrument Panel 10.252
PLATE, Instrument Cluster 9.744
PLATE, Instrument Panel 10.254
PLATE, Instrument Cluster 16.081
PLATE, Luggage Compartment Lid Lock 12.237
PLATE, Name 12.116A
PLATE, Ramp Door Guide 17.300
PLATE, Rear Axle Rebound 5.390
PLATE, Rear Door Sill 11.179
PLATE, Rear Quarter Window Hinge Adjusting . . 11.054
PLATE, Rear Quarter Window Regulator Handle . . 11.047
PLATE, Rear Spring and Shock Absorber 7.518
PLATE, Rear View 10.185
PLATE, Rear View Mirror, Outside 10.186
PLATE, Roof Inner Trim 14.651
PLATE, Seat Bottom 16.715
PLATE, Tail Gate 12.180
PLATE, Transmission Clutch Drive and Driven . . . 4.163
PLATE, Transmission Transfer 4.215
PLATE, Wheel Carrier Lock Bolt Cover 7.783
PLATE ASSEMBLY, Brake Flange 5.001
PLATE ASSEMBLY, Front Door Sill 11.175
PLATE ASSY., Clutch Pressure, with Cover 0.859
PLATE ASSY., Distributor Breaker 2.385
PLATE ASSY., Door Lock 16.341
PLATE ASSY., Seat 16.714
PLATE ASSY., Steering Gear Shaft 6.525
PLATE ASSY., with Facing, Clutch 0.886
PLATE UNIT, Differential Clutch (Positraction) . . . 5.511
PLATE UNIT, Luggage Compartment Lid 12.182
PLUG, Accelerator Rod Linkage 3.469
PLUG, Air Duct Access Hole 9.269
PLUG, Air Injection Reactor 3.670
PLUG, Automatic Choke Control 3.750
PLUG, Axle Filler and Drain 5.400
PLUG, Battery 2.345
PLUG, Carburetor Nozzle Passage 3.775
PLUG, Center Body 12.491
PLUG, Clutch Fork 0.797
PLUG, Cowl Side 12.804
PLUG, Door 16.167
PLUG, Door Opening and Windshield Pillar 10.694
PLUG, Door Side 10.587
PLUG, Door Trim Bind Strip Replacement 14.683
PLUG, Engine Air Cooling Shrouding 1.025
PLUG, Engine Compartment Lower Gutter Sealing 8.010
PLUG, Engine Oil 1.531
PLUG, Exhaust Manifold Choke Heat 3.603

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

PLUG, Floor 12.980
PLUG, Gearshift Detent 4.311
PLUG, Generator Oil 2.301
PLUG, Heater 8.866
PLUG, Heater Air Distributor 9.786
PLUG, Hood or Engine Compartment Lid 8.024
PLUG, Oil Level 1.516
PLUG, Oil Pan Drain 1.453
PLUG, Oil Pressure Regulator 1.609
PLUG, Rear Quarter Side Inner 12.941
PLUG, Spark 2.270
PLUG, Steering Connecting Rod 6.881
PLUG, Transmission Reverse Idler Shaft 4.435
PLUG, Transmission 4.105
PLUG, Vacuum Modulator Hose Connector Hole . 1.097
PLUNGER, Carburetor 3.838
PLUNGER, Wheel Carrier Lock 7.680
PLUNGER ASSEMBLY, Starting Motor 2.113
POCKET, Headlamp 2.726
POCKET ASSY., Battery 2.333
POCKET ASSY., Engine Compartment Floor . . . 12.981
POCKET ASSY., Rear Quarter Side Inner 12.941
POINT UNIT, Distributor 2.384
POLE PIECE, Distributor 2.372
PRIMER, Back Window 11.204
PRIMER, Quarter Window 11.011
PRIMER, Windshield 10.027
PROTECTOR, Main Cylinder 4.659
PULLEY, Air Conditioning Compressor Drive 9.180
PULLEY, Air Injection Reactor Pump 3.650
PULLEY, Engine Blower or Fan and Water Pump . 1.062
PULLEY ASSEMBLY, Generator 2.274
PULLEY ASSY., Clutch Control Cable 0.855
PULLEY ASSY., Crankshaft 0.659
PULLEY ASSY., Parking Brake Cable 4.790
PUMP ASSY., Air Injection Reactor Pump 3.660
PUMP ASSY., Fuel 3.900
PUMP ASSY., Transmission Oil Supply 4.200
PUMP UNIT, Transmission Oil Supply 4.200
PUMP UNIT and PARTS, Windshield Washer . . 10.153

R

RACE, Differential Side 5.536
RADIO 9.650
RAIL, Frame cross 7.006
RAIL, Side Roof-Inner 12.957
RAIL, Window Regulator Guide 16.261
RAIL ASSY., Folding Top Side Roof 14.170
RAIL ASSY., Folding Top Side Roof—Front 14.100
RAIL ASSY., Folding Top Front Roof 14.050
RAIL ASSY., Frame cross 7.006
RAIL ASSY., Rear 12.986
RAIL ASSY., Rear Cross 7.014
RAIL ASSY., Roof 16.585
RAIL ASSY., Side Roof Outer 12.956
RECEIVER ASSY., Air Conditioning with Dehydrator 9.195
RECHARGE KIT 9.990
REFLECTOR, Dome Lamp 11.927
REGULATOR, Door Window 16.260
REGULATOR, Electrical Output 2.500
REGULATOR ASSY. and PARTS, Front Door Window 10.783
REGULATOR ASSY. AND PARTS, Quarter Window 11.041
REGULATOR ASSY. and PARTS, Rear Door Window 10.791
REINFORCEMENT 0.666
REINFORCEMENT, Air Conditioning 9.171
REINFORCEMENT, Back Window 12.964
REINFORCEMENT, Clutch Pedal Intermediate . . . 0.852
REINFORCEMENT, Cowl Side 16.551
REINFORCEMENT, Dash and Toe 16.550
REINFORCEMENT, Door Body Lock 16.520
REINFORCEMENT, Engine and Luggage Compartment 12.971
REINFORCEMENT, Frame cross 7.006
REINFORCEMENT, License Plate 7.800
REINFORCEMENT, Rear 12.986
REINFORCEMENT, Rear Body Lock Pillar 12.942
REINFORCEMENT, Rear Compartment Lid 12.996
REINFORCEMENT, Rear End 12.966
REINFORCEMENT, Rear Seat Back 12.768
REINFORCEMENT, Seat Bottom 16.715
REINFORCEMENT, Top Lining 16.742
REINFORCEMENT ASSY., Hinge Pillar 12.659
REINFORCEMENT ASSY., Rear View Mirror 16.069
RELAY ASSEMBLY, Horn 2.815
RELAY ASSY., Air Conditioning Electrical 9.277
REPAIR KIT 3.725
REPAIR KIT, Brake Shoe 5.026
REPAIR KIT, Parking Brake Lever 4.597
REPAIR KIT, Rear Axle Shaft "U" Joint 5.428
REPAIR KIT, Turbocharger 3.342
REPAIR KIT, Universal Joint (For Corvair diff. carrier and axle shaft "U" joints see grp. 5.428) 5.548
REPAIR UNIT, Hydraulic Brake Main Cylinder . . . 4.649
REPAIR UNIT, Luggage Compartment Lid Lock . . 12.248
REPAIR UNIT, Wheel Brake (See group 4.667 for piston repair unit) 4.665
RESERVOIR AND PARTS, Folding Top Hydraulic Pump 14.486
RESISTOR, Heater and Air Conditioning 9.275
RESISTOR, Ignition Coil 2.173
RESISTOR ASSY., Heater and Air Conditioning . . 9.275
RESISTOR ASSY., Heater Blower and Ventilator . 8.855
REST ASSEMBLY, Rear Door Arm, Trimmed 14.762
REST ASSEMBLY, Rear Quarter Arm 15.108
REST ASSY., Door Arm 16.155
REST ASSY., Front Door Arm, Trimmed 14.686
RETAINER 5.880
RETAINER, Accelerator Rod Linkage 3.469
RETAINER, Air Conditioning Evaporator Air Distributor Outlet 9.264
RETAINER, Air Flow Control 9.787
RETAINER, Ash Tray 12.016
RETAINER, Ash Tray 12.050
RETAINER, Auto 8.820
RETAINER, Automatic Choke Control 3.750
RETAINER, Axle Control arm. 5.381
RETAINER, Back-up 2.698
RETAINER, Back Window (rubber) 11.207
RETAINER, Back Window Glass Weatherstrip . . . 16.471
RETAINER, Body Sill Moulding 8.309
RETAINER, Body Wiring (Also see group 2.480 for additional body harnesses) 13.090
RETAINER, Brake (and Clutch) Pedal 4.634
RETAINER, Carburetor Choke 3.752
RETAINER, Chassis Wiring Harness 2.559
RETAINER, Cigarette Lighter 9.709
RETAINER, Clutch Bearing Shaft 0.837
RETAINER, Clutch Control Cable 0.855
RETAINER, Direction Signal Lamp 2.892
RETAINER, Distributor 2.363
RETAINER, Door 16.430
RETAINER, Door Inside Trim 16.165
RETAINER, Door Lock Inside Handle 10.513
RETAINER, Door Lock Outside 16.350
RETAINER, Door Outside Lock Handle 10.551
RETAINER, Door Trim 14.691
RETAINER, Door Trim Bind Strip Replacement . . 14.683
RETAINER, Engine Air Cooling Shrouding 1.025
RETAINER, Fldg. Top 14.130
RETAINER, Folding Top and Dust Boot 13.384
RETAINER, Front Door Trim (less arm rest) 14.685
RETAINER, Front Seat Adjusting Lock 11.589
RETAINER, Front Seat Hinge Arm 11.375
RETAINER, Gearshift Floor Mounted Lever 4.015
RETAINER, Generator Commutator End Frame . . . 2.298
RETAINER, Hood Panel 8.021

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Group

RETAINER, Horn Button 2.820
RETAINER, Inlet and Exhaust Pipe 3.610
RETAINER, Instrument Face Glass 9.747
RETAINER, Instrument Panel Compartment Door Lock 10.267
RETAINER, Instrument Panel 10.252
RETAINER, Instrument Panel Compartment 16.110
RETAINER, Low Servo 4.228
RETAINER, Main Cylinder Adjusting 4.662
RETAINER, Main Cylinder Piston Return 4.655
RETAINER, Oil Pump Shaft 1.639
RETAINER, Parking Brake Cable 4.785
RETAINER, Quarter Window Glass 11.015
RETAINER, Quarter Window 11.032
RETAINER, Radiator and Grille Filler 1.287
RETAINER, Radio Instrument Panel 10.256
RETAINER, Rear Corner Window 16.469
RETAINER, Rear Door Glass Run Channel 10.703
RETAINER, Rear Quarter 15.100
RETAINER, Rear Spring 7.545
RETAINER, Rear View 10.185
RETAINER, Rear View Mirror, Outside 10.186
RETAINER, Roof Inner Trim 14.651
RETAINER, Seat Back and Door Trim Pad 14.804
RETAINER, Shock Absorber Bushing 7.389
RETAINER, Side Roof Rail 10.721
RETAINER, Spark Plug Wire 2.251
RETAINER, Speedometer Driven Gear 4.338
RETAINER, Speedometer without Casing 4.342
RETAINER, Speedometer 4.329
RETAINER, Stabilizer Link 7.245
RETAINER, Steering Gear Worm Thrust 6.835
RETAINER, Steering Gear Jacket 6.758
RETAINER, Steering Knuckle Upper Control Arm . 6.163
RETAINER, Steering Knuckle Lower Control Arm . 6.170
RETAINER, Tail Lamp Mounting 2.660
RETAINER, Transmission Clutch Gear Bearing . . . 4.356
RETAINER, Transmission Synchronizing 4.383
RETAINER, Transmission 4.115
RETAINER, Transmission Rear Main Bearing 4.317
RETAINER, Turbocharger 3.346
RETAINER, Windshield Reveal 10.093
RETAINER, Windshield Wiper Transmission 10.160
RETAINER ASSY., Ash Receiver (less handle) . . . 16.120
RETAINER ASSY., Battery 2.335
RETAINER ASSY., Body Mounting Inner Cushion . 9.011
RETAINER ASSY., Grille 16.125
RETRACTOR UNIT, Seat 16.714
RING, Air Conditioning Compressor Shaft 9.175
RING, Air Conditioning Compressor Pulley 9.181
RING, Front Seat Back with Springs 11.373
RING, Gearshift Control Hand Lever 4.008
RING, Headlamp 2.726
RING, Horn Blowing 2.830
RING, Horn Blowing Pivot 2.816
RING, Low Servo 4.228
RING, Low Sun Gear and Clutch 4.162
RING, Main Cylinder Lock 4.656
RING, Manual Valve 4.218
RING, Parking Brake Lever Anchor 5.158
RING, Rear Axle Shaft Bearing 5.816
RING, Rear View 10.185
RING, Seat 16.716
RING, Starting Motor 2.063
RING, Steering Knuckle Spindle 6.022
RING, Steering Wheel 6.515
RING, Transmission Clutch Gear Bearing 4.376
RING, Transmission Synchronizing 4.383
RING, Transmission Reverse Idler Shaft 4.435
RING, Transmission Rear Bearing and Mainshaft . 4.412
RING, Transmission Synchronizing 4.384
RING, Transmission Clutch 4.169
RING, Transmission Input 4.123
RING, Transmission 4.164
RING, Transmission Control Safety 4.054
RING, Turbocharger 3.346
RING, Turbocharger 3.344
RING, Wheel Appearance 5.871
RING ASSEMBLY, Sealed Beam Retaining 2.731
RING ASSY., Generator 2.279
RING UNIT, Horn Blowing 2.830
RING UNIT, Piston (Service Sets) 0.643
RING UNIT, Transmission 4.005
RIVET, Front Door 16.175
RIVET, Front Door Ventilator 10.670
RIVET, Front Door Ventilator 10.669
ROD, Accel. Pedal 3.431
ROD, Brake Main Cylinder 4.658
ROD, Carburetor 3.838
ROD, Carburetor Choke Vacuum 3.755
ROD, Carburetor to Accelerator Lever 3.430
ROD, Carburetor Metering 3.806
ROD, Carburetor Choke 3.752
ROD, Clutch Fork Release 0.787
ROD, Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) 9.789
ROD, Door Inside Locking to Lock 10.563
ROD, Door Lock Remote 10.506
ROD, Engine Air Cooling Control 1.035
ROD, Floor 16.810
ROD, Hand Choke with Button, Wire and Tube . . 3.480
ROD, Low Servo 4.228
ROD, Luggage Compartment Lid or Tail Gate Hinge 12.187
ROD, Rear Door Lock 16.332
ROD, Steering Relay 6.870
ROD, Transmission Shifter 4.307
ROD, Valve Push 0.426
ROD, Wheel Cylinder to Brake Shoe Thrust 4.675
ROD ASSEMBLY, Connecting 0.603
ROD ASSEMBLY, Fuel Pump 3.935
ROD ASSEMBLY, Lighting Switch 2.486
ROD ASSEMBLY, Steering Relay 6.870
ROD ASSEMBLY, Windshield Wiper 10.147
ROD ASSY., Transmission Gearshift Lever 4.035
ROD ASSY., Windshield Wiper 16.063
ROD UNIT, Steering Idler 6.896
ROD UNIT, Steering Idler 6.895
ROD UNIT, Steering Relay 6.870
ROLLER, Direction Signal Lamp 2.910
ROLLER, Door Window 16.260
ROLLER, Rear Axle Shaft "U" Joint 5.428
ROLLER, Transmission Countershaft Gear 4.422
ROLLER, Transmission Main Shaft 4.352
ROLLER, Universal Joint Yoke Trunnion 5.566
ROLLER ASSY., Quarter Window Lower Sash . . . 11.007
ROTATOR ASSY., Valve Spring 0.309
ROTOR ASSY., Distributor 2.382
ROTOR ASSY., Generator 2.279
ROTOR ASSY., Oil Pump Shaft 1.639
RUN ASSY., Door Glass 16.200

S

SASH ASSY., Front Door 16.175
SCALP, Front Door Glass Division 10.686
SCALP, Roof Drip 12.075
SCREEN, Air Cleaner 3.410
SCREEN, Carburetor Fuel Inlet 3.740
SCREEN ASSEMBLY, Oil Suction 1.656
SCREEN ASSY., Air Conditioning Evaporator Expansion Valve 9.214
SCREEN ASSY., Transmission Oil Pan Pump Suction 4.197
SCREW, Air Cleaner 3.403
SCREW, Air Conditioning Compressor Oil Test . . . 9.177
SCREW, Air Injection Reactor 3.665
SCREW, Automatic Choke Control 3.750
SCREW, Axle Filler and Drain 5.400
SCREW, Back Window Reveal Moulding 11.209
SCREW, Body Center Pillar, Pinchweld Finish . . . 14.730
SCREW, Body Side Trim 17.112
SCREW, Body Sill Moulding 8.309

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

SCREW, Brake Band Adjusting 4.253
SCREW, Brake Shoe Adjusting 5.110
SCREW, Carburetor Fast Idle 3.766
SCREW, Carburetor Idle Adjusting 3.822
SCREW, Carburetor 3.786
SCREW, Carburetor Idle Air Compensator 3.820
SCREW, Carburetor Fast Idle Cam 3.767
SCREW, Carburetor Fuel Inlet 3.740
SCREW, Carburetor Idle Vent 3.852
SCREW, Carburetor 3.838
SCREW, Carburetor Choke 3.751
SCREW, Carburetor Air 3.730
SCREW, Carburetor Choke 3.752
SCREW, Carburetor Throttle 3.762
SCREW, Carburetor Throttle Lever Adjusting 3.761
SCREW, Child Safety 14.870
SCREW, Coat and Seat Belt 15.388
SCREW, Crankcase Ventilator 1.750
SCREW, Distributor Contact Point 2.387
SCREW, Door 16.345
SCREW, Door Arm 16.155
SCREW, Door Hinge 10.463
SCREW, Door Inner Locking 10.556
SCREW, Door Inside Trim 16.165
SCREW, Door Lock 16.335
SCREW, Door Lock Outside 16.350
SCREW, Door Lock Remote 10.506
SCREW, Door Lock Striker to Pillar 10.570
SCREW, Door Outside 10.527
SCREW, Door Window Division Channel Adjusting 10.704
SCREW, Door Window 16.270
SCREW, Door Window Vertical Guide 10.792
SCREW, Electrical Output 2.500
SCREW, End Gate and Rear Door 17.615
SCREW, Engine Air Cooling Shrouding 1.025
SCREW, Engine Blower or Fan and Water Pump . 1.062
SCREW, Folding Top Side Roof Rail Control Link . 14.155
SCREW, Folding Top Front Roof Rail 14.080
SCREW, Front and Rear Door Lock 10.474
SCREW, Front Door Arm, Trimmed 14.686
SCREW, Front Door Glass Run 10.701
SCREW, Front Door Upper 10.450
SCREW, Front Door Ventilator 10.670
SCREW, Front Door Ventilator 10.664
SCREW, Garnish Moulding 11.128
SCREW, Gearshift Floor Mounted Lever 4.015
SCREW, Headlamp Bezel Retaining 2.736
SCREW, Headlamp Beam Adjusting 2.737
SCREW, Headlamp Moulding 2.729
SCREW, Horn 2.845
SCREW, Horn 2.812
SCREW, Hypoid Drive Gear 5.531
SCREW, Ignition Coil Mounting 2.183
SCREW, Instrument Panel Compartment Door Lock 10.267
SCREW, Instrument Panel 10.230
SCREW, Instrument Panel Compartment Door . . . 10.262
SCREW, Luggage 17.070
SCREW, Luggage Compartment Lid Lock 12.237
SCREW, Luggage Compartment Lid 12.242
SCREW, Main Cylinder Lock 4.656
SCREW, Main Cylinder Filler 4.651
SCREW, Manual Valve 4.218
SCREW, Muffler and Exhaust Pipe 3.708
SCREW, Oil Pan Attaching, with Lockwasher 1.428
SCREW, Oil Pan Drain 1.453
SCREW, Outside Door Handle Retaining Front Door Lock Cylinder 10.540
SCREW, Parking Lamp Door or Lens 2.594
SCREW, Quarter Window Glass 11.012
SCREW, Quarter Window 11.040
SCREW, Rear 16.160
SCREW, Rear Door Arm, Trimmed 14.762
SCREW, Rear Door Lock 16.332
SCREW, Rear Door Lower 10.460
SCREW, Rear Door Window Guide 10.726
SCREW, Rear Door Window Glass 10.759
SCREW, Rear View Mirror, Outside 10.186
SCREW, Rear View Mirror 16.069
SCREW, Roof Drip 12.075
SCREW, Roof Luggage 12.815
SCREW, Seat Back Stop 11.381
SCREW, Starting Motor Brush 2.052
SCREW, Starting Motor 2.077
SCREW, Sunshade Support 10.225
SCREW, Tail, Stop and Direction Signal 2.688
SCREW, Transmission Oil 4.195
SCREW, Wheel Appearance 5.871
SCREW, Windshield Wiper Motor 10.151
SCREW, Windshield Garnish Moulding 10.056
SCREW ASSY., Axle Control arm 5.381
SCREW ASSY., Bumper Bar 7.874
SCREW ASSY., Front Door Sill 11.175
SCREW ASSY., Fuel Pump Mounting 3.901
SCREW ASSY., Fuel Tank Gauge 3.112
SCREW ASSY., Luggage Compartment Lid 12.184
SCREW ASSY., Rear View Mirror, Inside 10.187
SCREW ASSY., Seat 16.679
SCREW ASSY., Speed Indicator 9.762
SCREW ASSY., Steering Gear Worm Ball Return Guide 6.843
SCREW ASSY., Tail, Stop and Direction Signal . . 2.688
SEAL, Accelerator Rod Linkage 3.469
SEAL, Accelerator Intermediate 3.463
SEAL, Air Cleaner 3.403
SEAL, Air Conditioning Compressor Shaft 9.175
SEAL, Air Conditioning Evaporator Blower Motor . 9.216
SEAL, Air Conditioning Compressor Suction Pipe . 9.240
SEAL, Air Conditioning Compressor 9.226
SEAL, Air Conditioning Air Inlet 9.218
SEAL, Air Injection Reactor 3.665
SEAL, Air Injection Reactor 3.675
SEAL, Body Side 16.790
SEAL, Brake Pedal 4.626
SEAL, Car Heater 8.854
SEAL, Clutch and Brake Pedal (FOR COVERS see group 4.630) 0.829
SEAL, Clutch Pedal Intermediate Lever Shaft Ball 0.851
SEAL, Clutch Throwout Bearing 0.805
SEAL, Cowl Side 12.804
SEAL, Crankcase and Push Rod 0.443
SEAL, Differential Bearing Adjusting Sleeve 5.539
SEAL, Door 16.430
SEAL, Door Inside Trim 16.165
SEAL, Drive Pinion 5.469
SEAL, Engine Access Door 17.225
SEAL, Engine Blower and Coolant Pump 1.105
SEAL, Engine Shield 1.030
SEAL, Exhaust Manifold 3.602
SEAL, Exhaust Pipe 3.611
SEAL, Front Fender and Skirt 8.154
SEAL, Fuel Pump Mounting 3.904
SEAL, Fuel Tank Filler Neck 3.008
SEAL, Gearshift Control 4.047
SEAL, Gearshift Floor Mounted Lever 4.015
SEAL, Heater Air Distributor 9.786
SEAL, Heater Air Distributor 9.260
SEAL, Heater Air Inlet 9.782
SEAL, Heater Blower Motor 8.856
SEAL, Hood Ledge (cowl) 12.801
SEAL, Hood or Engine Compartment 8.080
SEAL, Instrument Panel 9.749
SEAL, Oil Cooler 1.550
SEAL, Oil Level 1.516
SEAL, Parking Brake Cable 4.784
SEAL, Parking Lamp 2.599
SEAL, Rear Axle Shaft "U" Joint 5.430
SEAL, Rear Body 7.833
SEAL, Retarding Brake Control 4.260
SEAL, Speedometer Driven Gear 4.338
SEAL, Speedometer without Casing 4.342
SEAL, Steering Column 6.760
SEAL, Steering Gear Jacket 6.758

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

SEAL, Steering Gear 6.806
SEAL, Steering Gear Pitman Shaft 6.855
SEAL, Steering Gear Shaft 6.525
SEAL, Steering Idler 6.898
SEAL, Steering Knuckle Control Arm 6.166
SEAL, Steering Shaft 6.519
SEAL, Tie Rod Dust 6.111
SEAL, Transmission Oil Pan Pump Suction 4.197
SEAL, Transmission Internal Selector Shaft 4.313
SEAL, Transmission Oil Filler 4.133
SEAL, Transmission Front Servo 4.226
SEAL, Transmission 4.256
SEAL, Transmission Throttle Valve 4.278
SEAL, Transmission Parking Lock 4.220
SEAL, Turbocharger 3.342
SEAL, Universal Joint Yoke Trunnion 5.560
SEAL, Valve Rocker Arm 0.429
SEAL ASSEMBLY, Front Wheel Bearing 6.326
SEAL ASSY., Engine Rear Housing and Crankcase Front End Cover 0.213
SEAL ASSY., Flywheel and Clutch Housing 0.677
SEAL ASSY., Gearshift Control Idler Attaching . . . 4.042
SEAL ASSY., Rear Wheel Bearing 5.822
SEALED BEAM, Headlamp 2.727
SEALED BEAM, Safety Light 9.773
SEALER, Seat 16.714
SEAL KIT, Air Conditioning 9.170
SEAL KIT, Air Conditioning Compressor Shaft . . . 9.175
SEAL UNIT, Air Conditioning Compressor Shaft . . 9.175
SEAL UNIT, Differential Carrier 5.508
SEAL UNIT, Transmission Clutch 4.166
SEAL UNIT, Valve Spring Cap 0.308
SEAT, Body Mounting 9.023
SEAT, Clutch Pedal Intermediate Lever Shaft Ball 0.851
SEAT, Gearshift Hand Lever Housing 4.012
SEAT, Transmission Shifter 4.307
SEAT, Transmission 4.164
SEAT ASSY., Front 14.896
SEAT UNIT, Auxiliary 16.670
SEAT UNIT, Child Safety 14.870
SELECTOR, Transmission Shifter 4.302
SEPARATOR ASSY., Front Wheel Inner Bearing with Rollers and Cone 6.318
SEPARATOR ASSY., Front Wheel Outer Bearing with Rollers and Cone 6.319
SERVICE ACCESSORIES, Auto Maintenance 8.800
SHAFT, Brake (and Clutch) Pedal 4.634
SHAFT, Carburetor Choke 3.752
SHAFT, Clutch Pedal 0.833
SHAFT, Clutch Throwout Bearing 0.805
SHAFT, Differential Pinion 5.517
SHAFT, Distributor 2.372
SHAFT, Gearshift Control Shifter 4.025
SHAFT, Gear Shifter 4.309
SHAFT, Luggage Compartment Lid Locking Cylinder 12.252
SHAFT, Oil Pump 1.639
SHAFT, Oil Pump Shaft 1.639
SHAFT, Rear Axle 5.420
SHAFT, Stabilizer 7.241
SHAFT, Starting Motor Shaft 2.108
SHAFT, Steering Gear 6.524
SHAFT, Steering Gear Pitman 6.850
SHAFT, Transmission Main 4.403
SHAFT, Transmission Input 4.123
SHAFT, Transmission Reverse Idler 4.433
SHAFT, Transmission Planet 4.175
SHAFT, Transmission Counter 4.428
SHAFT, Turbocharger 3.348
SHAFT ASSY., Accelerator Intermediate 3.463
SHAFT ASSY., Air Conditioning 9.170
SHAFT ASSY., Carburetor Pump 3.842
SHAFT ASSY., Clutch Pedal Intermediate 0.852
SHAFT ASSY., Speedometer without Casing 4.342
SHAFT ASSY., Speedometer 9.761
SHAFT ASSY., Windshield Wiper 10.159
SHAFT KIT, Speedometer without Casing 4.342
SHAFT UNIT 6.169
SHAFT UNIT 9.750
SHAFT UNIT, Axle Control arm. 5.381
SHAFT UNIT, Oil Pump 1.639
SHAFT UNIT, Steering Knuckle Upper Control Arm 6.164
SHELL ASSY., Air Conditioning 9.170
SHIELD, Accelerator Intermediate 3.463
SHIELD, Air Conditioning Hose 9.242
SHIELD, Axle Control arm. 5.381
SHIELD, Clutch and Brake Pedal (FOR COVERS see group 4.630) 0.829
SHIELD, Dash and Toe 16.550
SHIELD, Engine Air Cooling 1.020
SHIELD, Exhaust Manifold 3.602
SHIELD, Flange plate 5.002
SHIELD, Gearshift Linkage 4.067
SHIELD, Horn 2.845
SHIELD, Horn 2.812
SHIELD, Hydraulic Brake 4.685
SHIELD, Instrument Panel 9.749
SHIELD, Rear Wheel Bearing 5.822
SHIELD, Rear Wheel Hub and Drum 5.815
SHIELD, Tail Lamp Mounting 2.660
SHIELD, Turbocharger 3.342
SHIELD, Windshield Wiper 16.067
SHIELD ASSY., Engine Air Cooling 1.020
SHIELD ASSY., Valve Rocker Cover 0.413
SHIM, Gearshift Hand Lever Housing 4.012
SHIM, Horn 2.810
SHIM, Pinion Shaft Bearing 5.460
SHIM, Rear Suspension Crossmember 5.380
SHIM, Rear Wheel 5.855
SHIM, Steering Gear Mounting 6.509
SHIM, Steering Knuckle Upper Control Arm 6.163
SHIM, Transmission Mounting Support 4.085
SHIM, Valve 0.303
SHIM UNIT, Air Conditioning Compressor Shaft . 9.175
SHIM UNIT, Steering Gear Lash Adjuster 6.828
SHOE, Air Injection Reactor 3.665
SHOE UNIT, Brake with Facing 5.017
SHROUD, Engine Air Cooling 1.020
SHROUD, Oil 1.540
SHROUD, Steering Wheel 6.512
SHROUD ASSY., Air Cleaner 3.410
SHROUD ASSY., Air Conditioning Refrigerant . . . 9.190
SHROUD ASSY., Engine Air Cooling 1.020
SIDE ASSY. and PARTS, Body 17.110
SIGHT GLASS, Air Conditioning Freon Inspection 9.202
SILL ASSEMBLY, Front Intermediate 16.603
SKIRT, Steering Wheel 6.512
SLEEVE, Air Conditioning Dehydrator 9.225
SLEEVE, Air Conditioning 9.220
SLEEVE, Differential Bearing Adjusting 5.537
SLEEVE, Door Outside Handle Lock Cylinder 16.370
SLEEVE, Exhaust Manifold Choke Heat 3.603
SLEEVE, Front Axle Tie Rod 6.232
SLEEVE, Generator 2.277
SLEEVE, Heater Air Inlet 9.782
SLEEVE, Instrument Cluster 9.748
SLEEVE, Instrument Cluster 9.744
SLEEVE, Luggage Compartment Lid 12.184
SLEEVE, Oil Pump Shaft 1.639
SLEEVE, Pinion Shaft Bearing 5.453
SLEEVE, Servo 4.212
SLEEVE, Steering Knuckle Lower Control Arm . . . 6.170
SLEEVE, Sunshade 10.219
SLEEVE, Throttle Control Rod 3.425
SLEEVE, Transmission 1st and Reverse 4.419
SLEEVE ASSY., Exhaust Manifold 3.602
SLINGER, Crankshaft Oil 0.648
SOCKET, Brake Shoe Adjusting Screws 5.111
SOCKET, Tail and Stop Lamp 2.694
SOCKET ASSY., Dome Lamp 11.927
SOCKET ASSY., Headlamp 2.750
SOCKET ASSY., Steering Relay 6.870
SOCKET UNIT, Windshield Wiper Transmission . . 10.160

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

SOLENOID KIT, Carburetor Fast Idle 3.766
SPACER, Accel. Pedal 3.431
SPACER, Air Conditioning Compressor Shaft 9.175
SPACER, Air Conditioning Compressor Pulley 9.181
SPACER, Back Window Reveal Moulding 11.209
SPACER, Back Window 11.204
SPACER, Body Mounting 9.023
SPACER, Bumper 7.865
SPACER, Carburetor Air Valve 3.757
SPACER, Carburetor 3.838
SPACER, Clutch Bearing Shaft 0.837
SPACER, Clutch Control Cable 0.855
SPACER, Cowl Side 16.551
SPACER, Differential Clutch (Positraction) 5.511
SPACER, Direction 2.880
SPACER, Door 16.400
SPACER, Door 16.330
SPACER, Door Lock 16.335
SPACER, Door Lock Striker 10.571
SPACER, Door Wedge 10.584
SPACER, engine 0.027
SPACER, Flange plate 5.002
SPACER, Fldg. Top 14.130
SPACER, Folding Top 14.475
SPACER, Front Door Ventilator 10.664
SPACER, Front Seat Back, Side Panels 11.368
SPACER, Fuel Pump 3.935
SPACER, Generator 2.274
SPACER, Generator 2.317
SPACER, Hood or Engine Compartment 8.080
SPACER, License Plate 7.800
SPACER, Luggage Compartment Lid Lock 12.237
SPACER, Muffler 3.704
SPACER, Parking Brake Cable 4.790
SPACER, Planet Carrier 4.176
SPACER, Quarter Window 11.011
SPACER, Rear Axle Shaft Bearing 5.816
SPACER, Rear Door Window Lower Sash 10.747
SPACER, Rear Spring 7.535
SPACER, Seat Back Stop 11.381
SPACER, Speedometer 9.761
SPACER, Stabilizer Shaft 7.240
SPACER, Steering Gear Shaft 6.525
SPACER, Steering Gear Mounting 6.509
SPACER, Steering Idler 6.897
SPACER, Steering Knuckle Upper Control Arm . . . 6.164
SPACER, Steering Knuckle Control Arm 6.176
SPACER, Tail Lamp Mounting 2.660
SPACER, Transmission Countergear Bearing 4.423
SPACER, Transmission Main Shaft 4.353
SPACER, Transmission Oil 4.128
SPACER, Turbocharger 3.346
SPACER, Universal Joint Yoke Trunnion 5.566
SPACER, Windshield 10.027
SPACER, Windshield Wiper 16.063
SPEAKER, Rear or Auxiliary Speaker 9.665
SPINDLE, Rear Wheel 5.806
SPOKE ASSY., Wheel Appearance 5.871
SPRING, Accelerator Pull Back 3.459
SPRING, Air Injection Reactor 3.665
SPRING, Ash Receiver (less handle) 16.120
SPRING, Ash Tray 12.050
SPRING, Brake Drum 5.810
SPRING, Brake Hose or Pipe 4.681
SPRING, Brake Pedal Return 4.639
SPRING, Brake Pull Back 4.760
SPRING, Brake Shoe 5.026
SPRING, Brake Shoe Automatic Adjusting Lever . 5.107
SPRING, Carburetor Pump 3.841
SPRING, Carburetor Throttle Shaft Lever 3.763
SPRING, Carburetor Idle Adjusting Screw 3.823
SPRING, Carburetor Float Hinge 3.747
SPRING, Carburetor Pump Outlet Valve 3.825
SPRING, Carburetor Fuel Inlet 3.740
SPRING, Carburetor Power Vacuum Piston 3.859
SPRING, Carburetor Fast Idle 3.766
SPRING, Carburetor Choke 3.752
SPRING, Carburetor Choke 3.753
SPRING, Carburetor Throttle Lever Adjusting 3.761
SPRING, Carburetor Metering Rod 3.810
SPRING, Clutch Pedal Intermediate Lever Shaft Ball 0.851
SPRING, Clutch Pedal Pull Back 0.844
SPRING, Clutch Pressure Plate 0.864
SPRING, Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet) 9.789
SPRING, Direction Signal Lamp 2.910
SPRING, Distributor Cap 2.368
SPRING, Distributor Weight 2.389
SPRING, Distributor Breaker 2.385
SPRING, Distributor Contact Point 2.387
SPRING, Door 16.330
SPRING, Door Jam—Dome Lamp 11.950
SPRING, Door Window 16.260
SPRING, Door Window Regulator Handle 10.806
SPRING, Engine Air Cooling Shrouding 1.025
SPRING, Folding Top Front Roof Rail 14.080
SPRING, Front and Rear Door Lock 10.474
SPRING, Front (Coil) 7.412
SPRING, Front Door Lower Hinge 10.455
SPRING, Front Door Ventilator Handle 10.666
SPRING, Front Door Ventilation Channel 10.660
SPRING, Front Door Ventilator 16.176
SPRING, Front Seat Adjuster 11.581
SPRING, Fuel Pump 3.927
SPRING, Gearshift Control Hand Lever 4.008
SPRING, Gearshift Detent 4.311
SPRING, Gearshift Hand Lever Housing 4.012
SPRING, Generator 2.319
SPRING, Generator Brush 2.286
SPRING, Grille 1.303
SPRING, Hood or Engine Compartment 8.080
SPRING, Hood or Engine Compartment 8.013
SPRING, Horn Blowing Pivot 2.816
SPRING, Low Servo 4.228
SPRING, Luggage Compartment Lid 12.242
SPRING, Oil Pressure Regulator 1.609
SPRING, Parking Brake Shoe Lever 5.151
SPRING, Rear 7.503
SPRING, Rear Door Lock 16.332
SPRING, Rear Quarter Window Regulator Handle 11.047
SPRING, Rear Seat Back with Springs 11.628
SPRING, Seat Back Stop 11.381
SPRING, Starting Motor Brush 2.053
SPRING, Starting Motor Shaft 2.108
SPRING, Steering Gear Shaft 6.525
SPRING, Throttle Control Rod 3.425
SPRING, Transmission Synchronizer 4.413
SPRING, Transmission Front Servo 4.226
SPRING, Transmission Synchronizing 4.384
SPRING, Transmission Shifter 4.307
SPRING, Turbocharger 3.342
SPRING, Valve 0.303
SPRING, Valve Rocker Cover 0.413
SPRING, Wheel Carrier Lock 7.680
SPRING ASSEMBLY, Engine Compartment 8.081
SPRING ASSEMBLY, Wheel Cylinder Piston 4.669
SPRING ASSY., Auto 8.820
SPRING ASSY., Main Cylinder Piston Return 4.655
SPRING UNIT, Transmission 4.164
STATOR ASSY., Generator Field 2.310
Steering Knuckle Lower Control Arm 6.169
STEM ASSEMBLY, Tubeless Tire Valve 5.875
STICK, Trim 12.946
STOP, Door Window Strap 10.716
STOP, Front Door Ventilation Channel 10.660
STOP, Front Door Ventilator 16.176
STOP, Quarter Window Glass 11.012
STOP, Steering Knuckle 6.009
STRAINER, Cross 17.014
STRAINER ASSEMBLY, Fuel Tank Riser Pipe 3.110
STRAP, Carburetor Fuel 3.890
STRAP, Cluster Ground 9.735
STRAP, Engine Air Cooling 1.020

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

STRAP, Ground 2.341
STRAP, Heater 8.866
STRAP, Heater Air Inlet 9.782
STRAP, Hood or Engine Compartment 8.015
STRAP, Muffler 3.704
STRAP, Rear Axle Rebound 5.390
STRAP, Roof Luggage 12.815
STRAP, Steering Gear 6.518
STRAP, Universal Joint Trunnion and Yoke 5.586
STRAP, Wheel 7.629
STRAP AND LINK ASSY., Luggage Compartment Lid or Tail Gate Hinge 12.187
STRAP ASSY., Child Safety 14.870
STRAP ASSY., Fuel Tank 3.022
STRAP ASSY., Luggage Compartment Lid or Tail Gate Hinge 12.187
STRAP UNIT and PARTS, Seat and Shoulder . . . 14.875
STRIKER, Back-up 2.698
STRIKER, Door Lock 16.335
STRIKER, Hood or Engine Compartment 8.080
STRIKER, Instrument Panel Compartment 16.110
STRIKER, Instrument Panel Compartment Lock . . 10.268
STRIKER, Luggage Compartment Lid Lock 12.237
STRIKER ASSY., Door Lock 10.569
STRIP, Cowl Side 12.804
STRIP, Door Opening and Windshield Pillar 10.694
STRIP, Engine Compartment Lower Gutter Sealing 8.010
STRIP, Folding Top Side Roof Rail—Center 14.190
STRIP, Front Door Glass Division 10.686
STRIP, Front Door Glass Run Channel 10.710
STRIP, Quarter Window Glass 11.015
STRIP, Side Roof Rail 10.721
STRIP ASSY, Front Door Glass Run Channel 10.710
STRIP ASSY., Quarter Window Glass 11.015
STRIP ASSY., Rear Door Window 10.774
STRIPE, Front Fender 8.132
STRUT, Axle Control arm 5.381
STRUT, Low Brake Band 4.233
STRUT, Parking Brake Shoe Lever 5.150
STRUT, Rear Axle 5.415
STRUT, Steering Knuckle Control Arm 6.168
STUD, Accelerator Intermediate 3.463
STUD, Accel. Pedal 3.452
STUD, Air Cleaner Intake 3.417
STUD, Air Cleaner 3.403
STUD, Blower Belt Idler Pulley 1.060
STUD, Carburetor Mounting 3.288
STUD, Clutch Fork 0.796
STUD, Clutch Pedal Intermediate Lever Shaft Ball 0.851
STUD, Cylinder Head 0.293
STUD, Door Window Channel Guide 10.728
STUD, Door Window Vertical Guide 10.792
STUD, Exhaust Manifold (Also see group 3.288 manifold to carb., 3.613 manifold to exhaust pipe and 8.981) 3.275
STUD, Exhaust Pipe 3.613
STUD, Front Door Glass Run 10.701
STUD, Front Door Ventilator 10.664
STUD, Front Door Ventilator 10.670
STUD, Gearshift Control Hand Lever 4.008
STUD, Generator 2.313
STUD, Hood or Engine Compartment Lid 8.024
STUD, Instrument Cluster 9.743
STUD, Muffler 3.704
STUD, Quarter Window 11.040
STUD, Quarter Window Hinge Pivot 11.057
STUD, Valve Rocker Arm 0.429
STUD UNIT, Steering Knuckle Lower Control Arm 6.174
STUD UNIT, Steering Knuckle Upper Control Arm 6.164
SUB BODY, Headlamp 2.726
SUNSHADE ASSEMBLY 10.203
SUNSHADE ASSY 16.070
SUPPORT, Air Cleaner Stud Mounting 3.405
SUPPORT, Air Conditioning 9.171
SUPPORT, Air Injection Reactor Pump Mounting . 3.655
SUPPORT, Bumper Attaching 7.836
SUPPORT, Crankcase Ventilator 1.750
SUPPORT, Dome Lamp 12.953
SUPPORT, Door Window Strap 10.716
SUPPORT, Fldg. Top 14.130
SUPPORT, Front Door Glass Lower Sash Channel 10.687
SUPPORT, Front Door Ventilator 10.664
SUPPORT, Front Seat Back, Side Panels 11.368
SUPPORT, Fuel Tank 3.015
SUPPORT, Headlining Wire 12.954
SUPPORT, Heater Air Distributor 9.786
SUPPORT, Hood or Engine Compartment 8.015
SUPPORT, Instr. Panel Compt., Seat Separator Compt. and Courtesy 10.275
SUPPORT, Instrument Panel 10.230
SUPPORT, Luggage 17.070
SUPPORT, Luggage Compartment Lid 12.184
SUPPORT, Parking Lamp Mounting 2.587
SUPPORT, Platform 17.405
SUPPORT, Quarter Window 11.040
SUPPORT, Rear Compartment Lid 12.996
SUPPORT, Rear Quarter Moulding 11.113
SUPPORT, Rear Seat Back 12.768
SUPPORT, Rear Suspension Crossmember 5.380
SUPPORT, Rear View Mirror 16.069
SUPPORT, Rear View Mirror, Inside 10.187
SUPPORT, Rear Wheel 5.806
SUPPORT, Rear Wheel Suspension 5.418
SUPPORT, Roof Luggage 12.815
SUPPORT, Spark Plug Wire 2.251
SUPPORT, Steering Column 6.760
SUPPORT, Steering Idler 6.896
SUPPORT, Toe Panel 16.544
SUPPORT, Transmission 4.081
SUPPORT, Transmission Control Rod Idler 4.040
SUPPORT, Wheel Carrier 7.782
SUPPORT, Windshield Washer Parts 10.154
SUPPORT ASSY., Accel. 3.454
SUPPORT ASSY., Accel. Pedal 3.452
SUPPORT ASSY., Air Cleaner to Carburetor 3.407
SUPPORT ASSY., Body Mounting Vibration 9.007
SUPPORT ASSY., Brake Main Cylinder and Pedal Shaft 4.648
SUPPORT ASSY., Carburetor Throttle 3.762
SUPPORT ASSY., Clutch Pedal Intermediate 0.852
SUPPORT ASSY., Door 16.330
SUPPORT ASSY., Engine Compartment 16.546
SUPPORT ASSY., Engine Oil 1.531
SUPPORT ASSY., Gearshift Hand Lever Control . . 4.010
SUPPORT ASSY., Horn 2.845
SUPPORT ASSY., Luggage Compartment Lid Lock 12.203
SUPPORT ASSY., Rear Door Window Lower Sash 10.747
SUPPORT ASSY., Side Ramp and End Gate 17.202
SUPPORT ASSY., Stabilizer Shaft 7.242
SUPPORT ASSY., Steering Gear 6.518
SUPPORT ASSY., Sunshade 10.219
SUPPORT UNIT, Starting Motor Brush 2.052
SWITCH, Heater and Air Conditioning 9.275
SWITCH, Oil Pressure 1.800
SWITCH, Parking Brake Alarm 4.589
SWITCH, Safety Light 9.773
SWITCH ASSEMBLY, Headlamp Dimmer 2.459
SWITCH ASSEMBLY, Ignition 2.188
SWITCH ASSEMBLY, Lighting 2.485
SWITCH ASSEMBLY, Starting Motor (on motor) . 2.100
SWITCH ASSEMBLY, Stop Lamp 2.447
SWITCH ASSEMBLY, Transmission Control Safety 4.054
SWITCH ASSEMBLY and PARTS, Direction Signal Lamp 2.895
SWITCH ASSY., and PARTS, Car Heater Ignition . 8.840
SWITCH ASSY., Back-up 2.698
SWITCH ASSY., Brake Press Ind. 4.874
SWITCH ASSY., Dome and Courtesy 16.494
SWITCH ASSY., Door Jam—Dome Lamp 11.950
SWITCH ASSY., Folding Top 14.483
SWITCH ASSY., Heater and Air Conditioning 9.275

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

SWITCH ASSY., Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration) . 4.686
SWITCH ASSY., Instr. Panel Compt., Seat Separator Compt. and Courtesy 10.275
SWITCH ASSY., Instrument Panel Compt. and Courtesy 16.100
SWITCH ASSY., Temperature (Engine Unit) 1.150
SWITCH ASSY., Windshield Wiper 16.067
SWITCH ASSY. and Parts, Hazard Flasher 2.575
SWITCH ASSY and PARTS, Heater 8.852
SWITCH ASSY. and PARTS, Windshield Wiper . . 10.163
SWITCH PARTS, Starting Motor Solenoid 2.102
SWITCH UNIT, Instr. Panel Compt., Seat Separator Compt. and Courtesy 10.275
SWIVEL, Carburetor Choke 3.752
SWIVEL, Clutch Fork Release 0.787
SWIVEL, Engine Air Cooling Control 1.035
SWIVEL, Main Cylinder Adjusting 4.662
SWIVEL, Throttle Control Rod 3.425
SWIVEL, Transmission Throttle Valve Control Rod 4.052
SYNCHRONIZER, Transmission 4.380

T

TACHOMETER ASSY. 9.750
TANK ASSY., Fuel 3.001
TAPPET, Valve 0.459
TEE, Carburetor Fast Idle 3.766
TEE, Fuel or Oil Feed Pipe 3.163
TEE, Fuel Tank Filler 3.003
TEE, Oil Pressure 1.800
TEE, w/defroster 8.845
TEE, Windshield Wiper Parts 10.155
TERMINAL, Electrical 2.530
TERMINAL UNIT, Generator 2.319
TERMINAL UNIT, Generator 2.313
THERMOSTAT ASSY., Automatic Choke Control . 3.750
THERMOSTAT ASSY., Engine Air Cooling Control 1.035
THERMOSTAT ASSY., Heater Air Distributor 9.795
TOP ASSEMBLY, Folding 13.346
TOP ASSY., Roof 17.060
TRANSFER, Front Fender 8.132
TRANSMISSION ASSEMBLY 4.003
TRANSMISSION GEARSHIFT ROD TO LEVER ATTACHING PARTS 4.037
TRAY, Arm Rest Ash 12.045
TRAY ASSY., Arm Rest Ash 12.045
TRAY ASSY., Ash Receiver (less handle) 16.120
TRAY ASSY., Ash Receiver 12.009
TRAY ASSY., Battery 2.333
TRIM ASSEMBLY, Folding Top Roof (less back curtain) 13.347
TRIM ASSEMBLY, Front Seat Cushion Cover 14.880
TRIM ASSEMBLY, Rear Door 14.760
TRIM ASSY., Front Door Arm, Trimmed 14.686
TRIM ASSY., Front Door Trim (less arm rest) 14.685
TRIM ASSY., Front Seat Back Cover 14.800
TRIM ASSY., Front Seat Back 14.924
TRIM ASSY., Rear and Center Seat Cushion Cover 15.035
TRIM ASSY., Rear Quarter Arm 15.108
TRIM ASSY., Rear Quarter Upper—Above Belt . . 14.645
TRIM ASSY., Rear Quarter 15.100
TRIM ASSY., Rear Seat Back Cover 15.000
TRIM ASSY., Seat Back 16.724
TRIM ASSY., Seat Cushion 16.717
TRIM ASSY., Wheelhouse 15.099
TRIM ASSY., Windshield Garnish 10.051
TUBE, Air Conditioning 9.220
TUBE, Air Conditioning Air Inlet 9.218
TUBE, Air Conditioning Refrigerant 9.196
TUBE, Air Injection Reactor 3.675
TUBE, Crankcase and Push Rod 0.439
TUBE, Crankcase Ventilator 1.762
TUBE, Exhaust Manifold Choke Heat 3.603
TUBE, Oil Level 1.516
TUBE ASSY., Air Cleaner Intake 3.417
TUBE ASSY., Axle Filler and Drain 5.400
TUBE ASSY., Gearshift Control Shifter 4.025
TUBE ASSY., Inlet Manifold 3.267
TUBE ASSY., Transmission Oil Filler 4.133
TUMBLER UNIT, Door Lock Cylinder 10.553
TUMBLER UNIT and PARTS, Door Safety Lock . . 16.328
TUNNEL, Floor 12.980
TURBOCHARGER ASSY., Turbocharger 3.342

U

UNIT, Shock 7.345

V

VALVE, Carburetor Choke 3.751
VALVE, Carburetor Throttle 3.758
VALVE, Carburetor Idle Vent 3.852
VALVE, Carburetor Power 3.858
VALVE, Carburetor Pump Outlet Valve 3.825
VALVE, Car Heater 8.854
VALVE, Exhaust 0.297
VALVE, Hydraulic Modulator 4.208
VALVE, Inlet 0.296
VALVE, Oil Pressure Regulator 1.609
VALVE, Transmission Oil Supply 4.200
VALVE, Transmission Front Servo 4.226
VALVE, Wheel Cylinder 4.666
VALVE ASSY., Air Conditioning Compressor Pressure Relief 9.178
VALVE ASSY., Air Conditioning Evaporator Expansion 9.213
VALVE ASSY., Air Injection Reactor 3.670
VALVE ASSY., Carburetor Idle Air Compensator . . 3.820
VALVE ASSY., Carburetor Throttle Return Check . 3.440
VALVE ASSY., Fuel Feed Pipe 3.164
VALVE ASSY., Heater Air Distributor 9.795
VALVE ASSY., Heater Air Distributor 9.786
VALVE ASSY., Main Cylinder 4.657
VALVE ASSY., Oil Filter 1.837
VANE, Air Injection Reactor 3.665
VENT, Transmission Case 4.104
VENT ASSY., Rear Suspension 5.387
VENTILATOR ASSY., Front Door 16.173
VENTILATOR ASSY., Front Door (less glass) 10.650
VENTILATOR ASSY. and Parts, Crankcase 1.745
VENTURI, Carburetor 3.786

W

WASHER, Accelerator Rod Linkage 3.469
WASHER, Accelerator Intermediate 3.463
WASHER, Air Conditioning Compressor 9.226
WASHER, Air Conditioning Compressor Pulley . . . 9.181
WASHER, Air Conditioning Evaporator Blower Motor 9.216
WASHER, Battery 2.345
WASHER, Blower Belt Idler Pulley 1.060
WASHER, Body Mounting Inner Cushion 9.011
WASHER, Brake Hose Yoke 4.671
WASHER, Brake Shoe Adjusting 5.110
WASHER, Brake Shoe Anchor Pin 5.056
WASHER, Bumper Bar 7.874
WASHER, Camshaft Thrust 0.533
WASHER, Carburetor Choke 3.752
WASHER, Child Safety 14.870
WASHER, Clutch Pedal Intermediate Lever Shaft Ball 0.851
WASHER, Crankshaft Pulley 0.662
WASHER, Cylinder Head 0.293
WASHER, Differential Side Gear Thrust 5.543
WASHER, Differential Carrier or Propeller Shaft Pinion 5.545

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts.com

WASHER, Differential Pinion Thrust 5.542
WASHER, Distributor Gear 2.379
WASHER, Distributor Cam Lubricator 2.364
WASHER, Door 16.345
WASHER, Door Inner Locking 10.556
WASHER, Door Lock Inside Handle 10.517
WASHER, Door Lock Striker 10.571
WASHER, Door Window Regulator 10.797
WASHER, Door Window 16.270
WASHER, End Gate and Rear Door 17.615
WASHER, Engine (Refer to Helicoil group 8.914 in the P&A 30 for thread repair) 0.030
WASHER, Exhaust Pipe 3.613
WASHER, Folding Top Side Roof Rail Control Link 14.162
WASHER, Frame Cross, Front 7.010
WASHER, Front Door Glass Run 10.701
WASHER, Front Door Ventilator 10.824
WASHER, Front Door Ventilator 10.664
WASHER, Front Door Ventilation Channel 10.660
WASHER, Front Door Ventilator 16.176
WASHER, Front Seat Hinge Arm 11.375
WASHER, Fuel Feed Pipe 3.162
WASHER, Fuel Tank 3.107
WASHER, Fuel Tank Strap 3.023
WASHER, Gearshift Control Idler Attaching 4.042
WASHER, Gearshift Hand Lever Housing 4.012
WASHER, Generator 2.277
WASHER, Generator 2.313
WASHER, Generator Armature (Drive End) 2.280
WASHER, Grille 1.303
WASHER, Hood and Body Front Emblem 8.056
WASHER, Horn 2.812
WASHER, Horn 2.845
WASHER, Instrument Panel Compartment Door . . 10.262
WASHER, Low Servo 4.228
WASHER, Low Sun Gear and Clutch 4.162
WASHER, Main Cylinder 4.657
WASHER, Main Cylinder 4.659
WASHER, Muffler and Exhaust Pipe 3.708
WASHER, Oil Pump Thrust 1.649
WASHER, Parking Brake Lever Anchor 5.158
WASHER, Planet Carrier 4.176
WASHER, Quarter Window Lower Sash 11.007
WASHER, Rear Axle Control Arm 5.383
WASHER, Rear Axle Shaft "U" Joint 5.428
WASHER, Rear Door Window Glass 10.759
WASHER, Rear Fender 12.116
WASHER, Rear Quarter Window Regulator Handle 11.047
WASHER, Rear Spring 7.529
WASHER, Rear Wheel 5.830
WASHER, Rear Wheel Suspension 5.418
WASHER, Seat 16.714
WASHER, Seat Back Stop 11.381
WASHER, Shock Absorber 7.371
WASHER, Shock Absorber Bushing 7.389
WASHER, Starting Motor 2.063
WASHER, Steering Gear Shaft 6.525
WASHER, Steering Gear Mounting 6.509
WASHER, Steering Gear Pitman Arm 6.861
WASHER, Steering Idler 6.896
WASHER, Steering Idler 6.897
WASHER, Steering Knuckle Lower Control Arm Attaching 6.172
WASHER, Steering Knuckle Spindle 6.321
WASHER, Steering Wheel 6.515
WASHER, Temperature (Engine Unit) 1.150
WASHER, Throttle Control Rod 3.425
WASHER, Trailer 7.068
WASHER, Transmission Reverse Idler Gear Thrust 4.437
WASHER, Transmission High Speed 4.415
WASHER, Transmission Countergear Bearing 4.423
WASHER, Transmission 4.105
WASHER, Transmission 1st and Reverse 4.419
WASHER, Transmission Clutch 4.169
WASHER, Transmission Gearshift Control Shaft or Tube 4.027
WASHER, Transmission 4.164
WASHER, Transmission 2nd Speed Gear Thrust . . 4.398
WASHER, Turbocharger 3.348
WASHER, Wheel Carrier 7.633
WASHER, Windshield Wiper Motor 10.151
WASHER ASSY., Steering Knuckle Lower Control Arm 6.170
WEATHERSTRIP, Back Window Glass 16.470
WEATHERSTRIP, Door Opening 16.225
WEATHERSTRIP, End Gate 17.190
WEATHERSTRIP, Engine Compartment Lower Gutter Sealing 8.010
WEATHERSTRIP, Folding Top Side Roof Rail—Rear 14.260
WEATHERSTRIP, Folding Top Compartment 13.352
WEATHERSTRIP, Folding Top Side Roof Rail—Center 14.190
WEATHERSTRIP, Folding Top Front Roof Rail . . . 14.060
WEATHERSTRIP, Front Door 16.175
WEATHERSTRIP, Front Door Glass Division 10.686
WEATHERSTRIP, Front Door Ventilator 10.652
WEATHERSTRIP, Luggage and Engine Compartment Lid Gutter 12.269
WEATHERSTRIP, Quarter Window Glass 11.015
WEATHERSTRIP, Rear Corner Window 16.469
WEATHERSTRIP, Rear Door Window Frame 10.764
WEATHERSTRIP, Side Roof Rail 10.721
WEATHERSTRIP, Windshield 16.040
WEATHERSTRIP ASSY., Door Opening and Windshield Pillar 10.694
WEATHERSTRIP ASSY., Folding Top Side Roof Rail—Front 14.120
WEATHERSTRIP ASSY., Front Door Ventilator . . . 10.652
WEIGHT, Distributor 2.388
WEIGHT, Wheel Balance 5.805
WHEEL ASSEMBLY, Front or Rear 5.803
WHEEL ASSEMBLY, Steering 6.513
WICK, Distributor Cam Lubricator 2.364
WICK, Generator Oil 2.301
WINDLACE, Body Center Pillar, Pinchweld Finish . 14.730
WINDLACE, Body Lock Pillar, Pinchweld Finish . . 14.735
WINDLACE, Door Opening Pinchweld Finish 14.665
WINDLACE, Pinchweld Finishing 15.520
WINDLACE, Rear Seat Back Compartment Shelf . 15.024
WINDOW, Instrument Cluster 9.748
WINDSHIELD WIPER MOTOR PARTS 16.065
WIRE, Air Flow Control 9.787
WIRE, Electrical 2.530
WIRE, Headlining Listing Support 12.955
WIRE, Wiring (Also see group 13.090 for additional body harnesses) 2.480
WIRE ASSEMBLY, Ignition Coil 2.171
WIRE ASSY., Body Wiring (Also see group 2.480 for additional body harnesses) 13.090
WIRE ASSY., Front Seat Adjusting Lock 11.589
WIRE ASSY., Fuel Tank 3.107
WIRE ASSY., Heater and Air Conditioning Electrical 9.276
WIRE ASSY., Rear License Lamp (Also see Group 2.705) 2.714
WIRE ASSY., Spark Plug, with Terminals 2.240
WIRE ASSY., Voltage Regulator Output 2.505
WIRE ASSY., Wiring (Also see group 13.090 for additional body harnesses) 2.480
WIRE UNIT, Harness Assy. Attaching 2.482
WIRE UNIT, Spark Plug 2.239
WRENCH, Spark Plug 2.273
WRENCH, Wheel and Tire 8.821

Y

YOKE ASSY., Rear Axle Universal Joint 5.425

Z

ZIPPER, Back Curtain 13.392

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ILLUSTRATION INDEX

Description	Page No.
ENGINE—CLUTCH—OIL—COOLANT	
Corvair Engine Head and Manifold-P-6	CC 0-1P
Corvair Engine Crankshaft, Camshaft and Oil Pan-P-6	CC 0-2P
Corvair Engine Block-P-6	CC 0-3P
1960-64 Corvair-Front and Rear Engine Mounting	CC 0-4P
1965-69 Corvair Engine Mounting Details	CC 0-5P
1960-64 Corvair Clutch Pedal and Linkage Details	CC 0-6P
1965-69 Corvair-Clutch Pedal and Cable	CC 0-7P
1965-69 Corvair-Clutch Shaft and Linkage	CC 0-8P
1961-65 Corvair F.C. Clutch Pedal and Linkage	CC 0-9P
1961-63 Corvair A/C Crankcase Ventilation	CC 1-1P
1960 Corvair Air Throttle Valve	CC 1-2P
1965-67 Corvair-Closed Positive Ventilation (exc. 4 carb., Turbo.)	CC 1-3P
1965-66 Coravir-Closed Positive Ventilation (turbo.)	CC 1-3P
1960 Corvair Engine Shield and Shroud	CC 1-4P
1961-64 Corvair Engine Shield and Shroud	CC 1-5P
1965-69 Corvair Engine Shroud	CC 1-6P
1965-69 Corvair Exhaust Ducts & Rocker Cover *Heat Shield*	CC 1-7P
ELECTRICAL	
1960-64 Corvair Generator and Bracket	CC 2-1P
1965-69 Corvair Generator Mounting	CC 2-1P
1960-61 Corvair Ignition Distributor	CC 2-2P
1962-69 Corvair Ignition Distributor	CC 2-3P
1960-69 Corvair Wiring Harness and Battery Details	CC 2-4P
1960-64 Corvair Tail and Back-Up Lamp	CC 2-5P
1960-64 Corvair Instrument Wiring and Headlamp Assembly	CC 2-6P
1965-69 Corvair-Headlamp, Parking Lamp & Horn	CC 2-7P
1965-66 Corvair Direction Signal Details	CC 2-8P
1965-66 Corvair-Telescoping Direction Signal Details	CC 2-8P
1961-65 Corvair F.C. Battery Details	CC 2-9P
FUEL—EXHAUST—CARBURETION	
1960-61 Corvair Carburetor Bowl and Air Horn-Exploded	CC 3-1P
1960-61 Corvair Automatic Choke *Thermostat*	CC 3-2P
1962-69 Corvair Carburetor Air Horn Assembly	CC 3-3P
1962-69 Corvair Carburetor Bowl Assembly	CC 3-4P
1965-69 Corvair Secondary Carb. Exploded	CC 3-5P
1962-66 Corvair Turbocharger Carburetor -Exploded	CC 3-6P
1962-66 Corvair Turbocharger Induction System	CC 3-7P
1962-66 Corvair Turbocharger Carburetor Linkage	CC 3-7P
1962-66 Corvair Turbocharger Blower Mounting Details	CC 3-8P
1962-66 Corvair Turbocharger Blower-Exploded	CC 3-8P
1962-66 Corvair Turbocharger Fuel Lines	CC 3-9P
1960-65 Corvair Accelerator Pedal	CC 3-10P
1960-62 Corvair Carburetor Linkage	CC 3-10P
1960-65 Corvair Accelerator Control Linkage	CC 3-11P
1965-69 Corvair Accelerator Pedal	CC 3-11P
1966-69 Corvair Accelerator Control Linkage	CC 3-12P
Corvair 4/1BC Carburetor Linkage	CC 3-13P
1961-63 Corvair F.C. Accelerator Pedal and Linkage	CC 3-14P
1963-65 Corvair F.C. Accelerator Linkage-Rear	CC 3-15P
1963-65 Corvair F.C. Accelerator Control Linkage	CC 3-15P
1960 Corvair Air Cleaner and Air Horn	CC 3-16P
1961-63 Corvair Air Cleaner	CC 3-16P
1965-69 Corvair Air Cleaner Details 4/1BC Carb.	CC 3-17P
1968 Corvair Air Injection Reactor Details	CC 3-18P
1960-64 Corvair Gasoline Tank Details	CC 3-19P
1965-69 Corvair Gasoline Tank Details	CC 3-20P
1960-64 Corvair Fuel Pump and Pipes	CC 3-21P
1960-64 Corvair Gasline Feed Pipes	CC 3-22P
1960-64 Corvair Exhaust Details	CC 3-23P
1965-69 Corvair Exhaust Systems	CC 3-23P
TRANSMISSION	
1960-65 Corvair Three Speed Transmission-Exploded	CC 4-1P
1966-69 Corvair Three Speed Transmission-Exploded	CC 4-2P
1961-65 Corvair Four Speed Transmission- Exploded	CC 4-3P
1966-69 Corvair Four Speed-Exploded	CC 4-4P
1960-69 Corvair Powerglide Transmission-Exploded	CC 4-5P
1960-69 Corvair Powerglide Transmission Reverse *Piston and Clutch Drum*	CC 4-6P
1960-64 Corvair Gearshift Control Details	CC 4-7P
1965-69 Corvair-Transmission Gearshift Control	CC 4-8P
1965-69 Corvair-Transmission Tube, Bracket & Rod Assy.	CC 4-8P
1961-63 Corvair F.C. Gearshift Control Details (1st. Design)	CC 4-9P
1963-65 Corvair F.C. Gearshift Control Details (2nd. Design)	CC 4-10P
1961-64 Corvair Automatic Transmission Control Cable	CC 4-11P
1960-64 Corvair Automatic Transmission Control and Linkage	CC 4-11P
1965-69 Corvair Powerglide Control Lever & Neutral Safety Switch	CC 4-12P
1965-69 Corvair-Auto. Transmission Control *Cable*	CC 4-12P
BRAKES	
Front Brake Parts	CC 4-13P
Rear Brake Parts	CC 4-13P
1960-61 Corvair Brake Cylinder	CC 4-14P
1962-66 Corvair Master Cylinder-Exploded	CC 4-14P
1960-64 Corvair Brake Pipes & Linkage	CC 4-15P
1960-61 Corvair Brake Pedal Linkage	CC 4-16P
1962-64 Corvair Brake Pedal Linkage	CC 4-17P
1965-69 Corvair Brake Pedal & Cylinder Details	CC 4-18P

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts IRON

Description	Page No.
1961-65 Corvair F.C. Brake Pedal	CC 4-19P
1960-64 Corvair Parking Brake Control Linkage	CC 4-20P
1965-69 Corvair Parking Brake	CC 4-21P
1961-65 Corvair F.C. Parking Brake Details	CC 4-22P

REAR AXLE AND DRIVE

Description	Page No.
1960-69 Corvair Axle Assembly-Exploded	CC 5-1P
1960-69 Corvair Rear Axle Shaft and Brake Drum	CC 5-2P

FRONT AXLE AND STEERING

Description	Page No.
1960-64 Corvair Steering Gear (Exploded)	CC 6-1P
1960-69 Corvair Steering Gear and Linkage	CC 6-2P
1960-64 Corvair Steering Gear Jacket and Directional Signal	CC 6-3P
1961-65 Corvair F.C. Steering Gear & Linkage	CC 6-4P

FRAMES SPRINGS & BUMPER

Description	Page No.
1964 Corvair Front Stabilizer Bar	CC 7-1P
1965-69 Corvair Front Suspension Details	CC 7-2P
1960-69 Corvair Suspension Details	CC 7-3P
1960-64 Corvair Rear Suspension Details	CC 7-4P
1964 Corvair Transverse Leaf Spring	*CC 7-5P*
1965-69 Corvair Rear Suspension Details	CC 7-6P
1960-64 Corvair Front and Rear Bumper (exc. Station Wagon)	CC 7-7P
1961-62 Corvair Station Wagon Front & Rear Bumper	CC 7-8P
1965-69 Corvair Front Bumper-Exploded	CC 7-9P
1965-69 Corvair Rear Bumper-Exploded	CC 7-9P
1961-65 Corvair F.C. Front and Rear Bumper	CC 7-10P

FRONT END SHEET METAL AND HEATER

Description	Page No.
1960-65 Corvair Gas Heater Assembly-Exploded	CC 8-1P
1960-65 Corvair Gas Heater Combustion Blower	CC 8-2P
1960-62 Corvair Gas Heater, Distributor and Defroster Assembly	CC 8-3P
1961-64 Corvair Air Heater	CC 8-4P
1961-64 Corvair Air Heater Cables and Defroster *Distributor Parts*	CC 8-5P
1961-65 Corvair Air Heater Control and Cables	CC 8-6P
1961-65 Corvair F.C. Gas Heater Distributor and Blower	CC 8-7P
1961-65 Corvair F.C. Gas Heater Control and Harness	CC 8-8P
1961-65 Corvair F.C. Air Heater Blower and Hoses	CC 8-9P
1961-65 Corvair F.C. Air Heater Defroster Hoses and Air Duct	CC 8-10P
1961-65 Corvair F.C. Air Heater Duct Details	CC 8-11P

AIR CONDITIONING

Description	Page No.
1961 64 Corvair A/C Compressor, Condenser and Dehydrator Assembly Details	CC 9-1P
1961-64 Corvair A/C Evaporator and Blower-Exploded	CC 9-2P
1961-64 Corvair A/C Distributor-Exploded	CC 9-3P
1965-69 Corvair A/C Blower and Air Inlet	CC 9-4P
1965-69 Corvair A/C Side Outlets & Air Hoses	CC 9-4P
1967-69 Corvair A/C Compressor and Air Injection Reactor Pump Mounting	CC 9-5P
1965-69 Corvair A/C Compressor Mounting	CC 9-6P
1965-69 Corvair A/C Condenser, Receiver & Dehydrator	CC 9-6P

EXTERIOR VIEWS—W/SHIELD—DOORS—CONTROLS

Description	Page No.
1960-64 Corvair Front End	CC 10-1P
1960-64 Corvair Rear End	CC 10-1P
1960-61 Corvair Deluxe Four Door Sedan	CC 10-2P
1960-61 Corvair Monza Club Coupe	CC 10-2P
1961-62 Corvair Station Wagon	CC 10-3P
1961-62 Corvair Station Wagon Rear End	CC 10-3P
1962-64 Corvair Deluxe Four Door Sedan	CC 10-4P
1962-64 Corvair Convertible	CC 10-4P
1965-69 Corvair Front End	CC 10-5P
1965-69 Corvair Corsa Sport Coupe	CC 10-5P
1965-69 Corvair Monza Sport Sedan	CC 10-6P
1965-69 Corvair Rear End	CC 10-6P
1960-64 Corvair W/S Wiper and Washer	CC 10-7P
1965-69 Corvair W/S Wiper Linkage	CC 10-8P
1961-65 Corvair F.C. W/S Wiper Linkage	CC 10-9P
1961-65 Corvair F.C. W/S Washer Details	CC 10-9P
1960-64 Corvair Front and Rear Door Parts	CC 10-10P
1960-64 Corvair Instrument Panel	CC 10-11P
1965-69 Corvair Instrument Panel	CC 10-11P
1961-65 Corvair F.C. Instrument Panel	CC 10-12P

REAR QUARTER HARDWARD

Description	Page No.
1965-69 Corvair Quarter Hardware	CC 11-1P

BODY MOULDINGS

Description	Page No.
1960-61 Corvair 2Dr. Sedan (model 527-727)	CC 12-1P
1960-61 Corvair 4Dr. Sedan (model 569-769)	CC12-1P
1960-61 Corvair-Front	CC 12-2P
1960-61 Corvair-Rear	CC 12-2P
1960-61 Corvair 2Dr. Monza (Model 927)	CC 12-3P
1961 Corvair-4Dr. Monza (Model 969)	CC 12-3P
1961 Corvair Station Wagon (Model 735)	CC 12-4P
1961 Corvair Station Wagon Rear	CC 12-4P
1962-63 Corvair 2Dr. Sedan (Model 727)	CC 12-5P
1962-63 Corvair 4Dr. Sedan (Model 769)	CC 12-5P
1962-63 Corvair 2Dr. Monza (Model 927)	*CC 12-6P*
1962-63 Corvair 4Dr. Monza (Model 969)	CC 12-6P
1962 Corvair Station Wagon (Model 735-935)	CC 12-7P
1962 Corvair Front	CC 12-7P

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Description	Page No.
1962 Corvair Rear	CC 12-8P
1962 Corvair Station Wagon-Rear	CC 12-8P
1963 Corvair-Front	CC 12-9P
1963 Corvair-Rear	CC 12-9P
1964 Corvair-Front	CC 12-10P
1964 Corvair-Rear	CC 12-10P
1964 Corvair STD. 4Dr. (Model 769)	CC 12-11P
1964 Corvair Monza 4Dr. (Model 969)	CC 12-11P
1964 Monza 2Dr. (Model 627-927)	CC 12-12P
1965 Corvair-Front	CC 12-13P
1965 Corvair-Rear	CC 12-13P
1965 Corvair Std. Sport Sedan (Model 10139)	CC 12-14P
1965 Corvair Std. Sport Coupe (Model 10137)	CC 12-14P
1965 Corvair Monza Sport Sedan (Model 10539)	CC 12-15P
1965 Corvair Monza Sport Coupe (Model 10537)	CC 12-15P
1965 Corvair Monza Convertible (Model 10567)	CC 12-16P
1965 Corvair Corsa Sport Coupe (Model 10737)	CC 12-16P
1965 Corvair Corsa Convertible (Model 10767)	CC 12-17P
1966-69 Corvair-Front	CC 12-18P
1966-69 Corvair-Rear	CC 12-18P
1966-69 Corvair Four Dr. (10139-10539)	CC 12-19P
1966-69 Corvair Two Dr. (10137-10537 - 10737)	CC 12-19P

BODY SHEET METAL

1960-64 Corvair Sheet Metal Two Door	CC 12-20P
1960-64 Corvair Sheet Metal-Four Door	CC 12-21P
1962-64 Corvair Sheet Metal-Convertible	CC 12-22P
1960-64 Corvair Front Compartment Pan Rail Assembly	CC 12-23P
1960-64 Corvair Rear End Sheet Metal Components	CC 12-23P
1965-69 Corvair Sheet Metal-Spt. Sedan	CC 12-24P
1965-69 Corvair Sheet Metal-Spt. Coupe	CC 12-26P
1965-69 Corvair Sheet Metal-Convertible	CC 12-28P

CONVERTIBLE TOP AND INTERIOR

1965-69 Corvair Conv. Top Motor	CC 14-1P
1965-69 Corvair Conv. Top Frame Details	CC 14-2P
1961-64 Corvair Monza Interior	CC 14-4P
1961-62 Corvair Station Wagon Interior (Rear View)	CC 14-5P
1965-69 Corvair Monza Sport Sedan Interior	CC 14-6P
1965-66 Corvair Corsa Coupe Interior	CC 14-7P
1966-67 Corvair 500 Interior Trim (10100)	CC 14-8P
1966 Corvair Monza-Corsa Interior Trim (10500-10700)	CC 14-9P
1967-68 Corvair Monza Interior Trim (10500)	CC 14-10P
1969 Corvair 500 Interior Trim (10137)	CC 14-11P
1969 Corvair Monza Interior Trim (10537-67)	CC 14-12P

FOLDING SEAT AND REAR COMPARTMENT

1960-64 Corvair Folding Seat Details	CC 15-1P
1960-64 Corvair Rear Seat Compartment	CC 15-2P

CORVAIR F.C. BODY ILLUSTRATIONS

1961-64 Corvair Pick-up	CC 16-1P
1961-64 Corvair Panel	CC 16-1P
1961-65 Corvair Greenbrier	CC 16-2P
1961-65 Corvair Greenbrier and Panel Rear End	CC 16-2P
1961 Corvair F.C. Engine Access Door	CC 16-3P
1964 Corvair F.C. Engine Access Door Details	CC 16-4P
1961-65 Corvair F.C. Rear Floor Trim Panel	CC 16-5P
1961-65 Corvair F.C. Filler Panel Details	CC 16-5P
1961-65 Corvair F.C. Engine Compartment Cover	CC 16-6P
1961-65 Greenbrier Front Interior View	CC 16-7P
1961-65 Greenbrier Side Interior View	CC 16-8P
1961-65 Greenbrier Rear Interior View	CC 16-9P
1961-65 Corvair F.C. Front and Rear Seat Details	CC 16-10P
1961-65 Corvair F.C. Front Sheet Metal-Exploded	CC 16-11P
1961-65 Corvair F.C. Front Under body Sheet Metal -(Exploded)	CC 16-12P
1961-65 Corvair F.C. Front Door Details	CC 16-13P
1961-65 Greenbrier and Panel Rear Loading Door Details	CC 16-14P
1961-65 Corvair F.C. Side Cargo Door Lock and Stricker Details	CC 16-15P
1961-65 Corvair F.C. Side Cargo Doors Details	CC 16-16P
1961-65 Corvair F.C. Side Cargo Door Lock-Exploded	CC 16-17P
1961-65 Side Window Channel and Regulator Assy.	CC 16-18P
1961-64 Corvair F.C. Pick-Up Level Sill and Bracket Details	CC 16-19P
1961-64 Corvair F.C. Pick-Up Level Floor Platform Details	CC 16-19P
1961-64 Corvair F.C. Bodyside Sheet Metal-Exploded	CC 17-1P
1961-65 Corvair F.C. Bodyside Sheet Metal-Exploded	CC 17-2P
1961-65 Corvair F.C. Rear Under body Assembly-Exploded	CC 17-3P
1961-65 Corvair F.C. Rear Underbody Assembly-Exploded	CC 17-4P
1961-64 Corvair Pick-Up End Gate Details	CC 17-5P
1961-64 Corvair Side Ramp Details	CC 17-5P

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ENGINE INSTALLATION INSTRUCTIONS

PART NO. 3830951 UNIVERSAL "145" CU. IN. 6 CYLINDER ENGINE ASSEMBLY
FOR USE ON 1960 THRU 1963 CORVAIR H/PERFORMANCE MODELS
(EXCEPT TURBOCHARGER)
USED WITH MANUAL TRANSMISSION, 8" CLUTCH AND SPECIAL CAMSHAFT
SUPPLEMENTAL PARTS REQUIRED FOR INSTALLATION BY MODEL YEARS

1962-63 MODELS

Item	Qty.	Part No.	Description	Remarks
A.	1	1993574	Cyl. Head Temp. Switch	Purchase new or transfer from replaced engine.
B.	1	3784313	Cyl. Head Temp. Switch Gasket . .	
C.	1	3856695	Oil Level Gauge Tube	Remove 3-8" Oil Level Gauge Tube Plug and install new parts furnished with engine. Do not transfer. (All models except Station Wagon.)
D.	1	3785359	Oil Filler Tube Assy.	
E.	1	3819661	Oil Filler Tube and Gauge Assy. .	Purchase new or transfer from replaced engine. Remove and transfer 1 1/16" Oil Filler Tube Hole Plug from Crankcase and install in Gen. & Oil Filter Adapter. (1961-62 Station Wagon only).
F.	1	3777504	Oil Filler Tube and Gauge Seal . .	
G.	1	6256365	Fuel Pump Push Rod Spring. . . .	Purchase new or transfer from replaced engine.
H.	1	3797593	Fuel Pump Push Rod Assy.	

1961 MODELS

REQUIRE ITEMS A THRU H, PLUS THE FOLLOWING:

I.	1	142851	Fuel Pump to Carb. Nipple	New part required to clear Oil Filler on new Engine. Bend Carb. Feed Pipe to accommodate new Nipple.
J.	1	6256495	Fuel Pump Push Rod Assy. (3 5/8 O.L.)	Use with 1st design Fuel Pump Assy. 5621704. Purchase new or transfer from replaced engine. See General Information No. 4.
K.	1	3797593	Fuel Pump Push Rod Assy. (3 7/8 O.L.)	Use with 2nd design Fuel Pump Assy. 5621776. Purchase new or transfer from replaced engine.
L.	1	454906	Bolt, 3/8—16 x 1 1/2	New part required to attach Generator.

1960 MODELS

REQUIRE ITEMS D, E, J, AND K, PLUS THE FOLLOWING:

M.	1	1998713	Oil Temp. Switch.	Remove 1/2—14 Temp. Sending Switch Plug. Purchase new or transfer from replaced engine.
N.	1	3783872	Exhaust Manifold R.H.	Purchase new or transfer from replaced engine.
O.	2	3786303	Inlet Manifold Vacuum Balance Tube Hose	Install new part furnished with Engine.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GENERAL INFORMATION

1. Models with optional equipment require transfer or replacement of parts special to such installations. Example: On Models equipped with C.A.C. it is necessary to transfer Oil Filter Adapter and install with two (2) new Filter Gaskets.

2. This engine also replaces 145 cu. in. Engines with 9" Clutch. No additional parts are required.

3. When using this Engine Assembly on 1960-61 Models, discard the Clutch Pedal Assist Spring.

4. If Fuel Pump noise has been encountered, use new Fuel Pump Assy. 6415433, and new Fuel Pump Push Rod 3797593.

5. If sheet metal Shroud or Shield interference of any nature is encountered when transferring such parts from replaced Engine to this Engine Assembly, on 1960 or 1961 Models, rework sheet metal as required or purchase new parts. Example: R.H. Engine Rear Shroud on 1960 Models.

6. If part number shown is not cataloged, check History Section for replacing number.
   For detailed step by step service procedure refer to stuffer sheets included with Engine Assembly.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ENGINE INSTALLATION INSTRUCTIONS

PART NO. 3921001 UNIVERSAL "164" CU. IN. 6 CYLINDER ENGINE ASSEMBLY FOR USE ON 1965 THRU 1967 CORVAIR SPECIAL HIGH PERFORMANCE (4 x 1 BARREL CARBURETOR) MODELS (EXCEPT AIR INJECTION REACTOR) USED WITH SYNCHROMESH AND POWERGLIDE TRANSMISSION AND AIR CONDITIONING (LESS DISTRIBUTOR, FLYWHEEL, CLUTCH HOUSING AND ALL CLUTCH COMPONENTS)

SUPPLEMENTAL PARTS REQUIRED FOR INSTALLATION BY MODEL YEARS

1967 MODELS

Item	Qty.	Part No.	Description	Remarks
A.	1	3850975	Clutch Housing Assy. (Synchromesh Transmission).	All models. (Purchase new or transfer from replaced engine. See General Information Note No. 1.)
B.	1	3850976	Flywheel Housing Assy. (Powerglide Transmission). . . .	
C.	1	3829806	Clutch Cover & Press. Plate . . .	
D.	1	3888000	Clutch Driven Plate Assy.	
E.	1	3829808	Clutch Fork Assy.	
F.	1	3850567	Clutch Fork Ball Stud Unit	
G.	1	3851807	Flywheel Assy. (Synchromesh Transmission).	
H.	1	3829738	Trans. Converter Flex. Plate (Powerglide Transmission). . . .	
I.	1	3791246	Distributor Clamp Unit	
J.	1	3770598	Distributor Clamp Retainer	
K.	1	9419815	Distributor Clamp Nut	
L.	1	3867249	Engine Rear Mtg. Brkt. Assy. . .	
M.	1	1110339	Distributor Assy.	All models w/Powerglide trans. (Purchase new or transfer from replaced engine.)
N.	1	1110330	Distributor Assy.	All models Exc. P/Glide trans. (Purchase new or transfer from replaced engine.)
O.	1	3001406	Oil Cooler Unit	All CAC models. (Purchase new or transfer from replaced engine.)
P.	1	3789338	Oil Filter Adapter	
Q.	1	3851989	A/C Comp. Brkt. Supt. Brace . . .	
R.	1	3891556	Crankshaft Pulley	

1966 MODELS

Require items A thru Q plus the following:

S.	1	3891556	Crankshaft Pulley (2nd Design) . .	All CAC models. (Purchase new or transfer from replaced engine.)
T.	1	3838403	Crankshaft Pulley (1st Design) . .	
U.	1	1513431	Temperature Switch	Corsa models only. (Purchase new or transfer from replaced engine. See General Information Note No. 2)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ENGINE INSTALLATION INSTRUCTIONS

PART NO. 3830953 UNIVERSAL "145" CU. IN. 6 CYLINDER ENGINE ASSEMBLY
FOR USE ON 1960 THRU 1963 CORVAIR PASSENGER AND LDFC MODELS
(EXCEPT H/PERF. AND TURBOCHARGER)
USED WITH SYNCHROMESH AND POWERGLIDE TRANSMISSION AND
STANDARD CAMSHAFT (LESS DISTRIBUTOR, FLYWHEEL AND CLUTCH COMPONENTS)
SUPPLEMENTAL PARTS REQUIRED FOR INSTALLATION BY MODEL YEARS

1962-63 MODELS

Item	Qty.	Part No.	Description	Remarks
A.	1	1110294	Distributor Assy.	Not used with A.T. — Purchase new or transfer from replaced engine.
B.	1	1110295	Distributor Assy.	Used with A.T. (exc. MONZA) — Purchase new or transfer from replaced engine.
C.	1	1110311	Distributor Assy.	MONZA w/A.T. — Purchase new or transfer from replaced engine.
D.	1	6256636	Distributor Assy. Gasket	Purchase new or transfer from replaced engine.
E.	1	3851797	Clutch Housing Assy.	Not used with A.T. — Purchase new or transfer from replaced engine.
F.	1	3851798	Flywheel Housing Assy.	Used with A.T. — Purchase new or transfer from replaced engine.
G.	1	6255808	Clutch or Flywheel Hsg. Gasket . .	Purchase new or transfer from replaced engine.
H.	1	3838499	Hsg. Clevis Pin Access Hole Plug .	Purchase new or transfer from replaced engine.
I.	1	3839670	Flywheel Assy.	Not used with A.T. — Purchase new or transfer from replaced engine.
J.	1	6255814	Torque Converter Flex Plate . . .	Used with A.T. — Purchase new or transfer from replaced engine.
K.	6	6256585	Flywheel Assy. Bolt	Purchase new or transfer from replaced engine.
L.	1	3832718	Flywheel Reinforcement	Purchase new or transfer from replaced engine.
M.	6	3829810	Cl. Cover Assy. Bolt	Purchase new or transfer from replaced engine.
N.	1	3888000	Clutch Driven Plate Assy.	Pass. Models (exc. A.T.) — Purchase new or transfer from replaced engine.
O.	1	3888000	Cl. Cover Press. Plate & Ring Gear .	Pass. Models (exc. A.T.) — Purchase new or transfer from replaced engine.
P.	1	3888000	Clutch Driven Plate Assy.	LDFC Models (exc. A.T.) — Purchase new or transfer from replaced engine.
Q.	1	3777875	Cl. Cover Press Plate & Ring Gear .	LDFC Models (exc. A.T.) — Purchase new or transfer from replaced engine.
R.	1	1993574	Cyl. Head Temp. Switch	Purchase new or transfer from replaced engine.
S.	1	3784313	Cyl. Head Temp. Switch Gasket . .	Purchase new or transfer from replaced engine.
T.	1	3856695	Oil Level Gauge Tube	Remove 3/8" Oil Level Gauge Tube Plug and install new parts furnished with engine. Do not transfer. (All models except Sta. Wag. and LDFC).
U.	1	3785359	Oil Filler Tube Assy.	Remove 3/8" Oil Level Gauge Tube Plug and install new parts furnished with engine. Do not transfer. (All models except Sta. Wag. and LDFC).
V.	1	3819661	Oil Filler Tube and Gauge Assy. . .	Purchase new or transfer from replaced engine. Remove and transfer 1 1/16" Oil Filler Tube Hole Plug from Crankcase and install in Gen. and Oil Filter Adapter. (Station Wagon and LDFC only).
W.	1	3777504	Oil Filler Tube and Gauge Seal . . .	Purchase new or transfer from replaced engine. Remove and transfer 1 1/16" Oil Filler Tube Hole Plug from Crankcase and install in Gen. and Oil Filter Adapter. (Station Wagon and LDFC only).
X.	1	6256365	Fuel Pump Push Rod Spring	Purchase new or transfer from replaced engine.
Y.	1	3797593	Fuel Pump Push Rod Assy.	Purchase new or transfer from replaced engine.
Z.	1	6255875	Oil Pan Gasket	New part required.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ENGINE INSTALLATION INSTRUCTIONS
(3830953 CONT.)

AA

1961 MODELS

REQUIRE ITEMS A THRU Z, PLUS THE FOLLOWING:

Item	Qty.	Part No.	Description	Remarks
AA.	1	142851	Fuel Pump to Carb. Nipple	New Part required to clear Oil Filler on new Engine. Bend carb. feed pipe to accommodate new Nipple.
AB.	1	6256495	Fuel Pump Push Rod Assy. (3 5/8 O.L.)	Use with 1st design Fuel Pump Assy. 5621704. Purchase new or transfer from replaced engine. See General Information No. 2.
AC.	1	3797593	Fuel Pump Push Rod Assy. (3 7/8 O.L.)	Use with 2nd design Fuel Pump Assy. 5621776. Purchase new or transfer from replaced engine.
AD.	1	454906	Bolt, 3/8--16 x 1 1/2	New part required to attach generator.

1960 MODELS

REQUIRE ITEMS A THRU O, U, V AND AA, THRU AC

PLUS THE FOLLOWING:

AE.	1	1998713	Oil Temp. Switch	Remove 1/2--24 Temp. Sending Switch Plug. Purchase new or transfer from replaced engine.
AF.	1	6256890	Rear Shroud Assy. R.H.	Purchase new or transfer from replaced engine.
AG.	1	3783872	Exhaust Manifold R.H.	Purchase new or transfer from replaced engine.
AH.	2	3786303	Inlet Manifold Vacuum Balance Tube Hose	Install new part furnished with engine.

GENERAL INFORMATION

1. Models with optional equipment require transfer or replacement of parts special to such installations. Example: On C.A.C. models transfer Oil Filter Adapter from Engine being replaced, and install two new Filter Gaskets.

2. If Fuel Pump noise has been encountered, use Fuel Pump Assy., 6415433, and new Fuel Pump Push Rod, 3797593.

3. If sheet metal Shroud or Shield interference of any nature is encountered when transferring such parts from replaced engine to this Engine Assembly on 1960 or 1961 Models, rework sheet metal as required or purchase new parts.

4. When using this Engine Assembly on 1960-61 Models equipped with Manual Trans., discard the Clutch Pedal Assist Spring.

5. If part number shown is not cataloged, check History Section for replacing number.
For detailed step by step service procedure refer to stuffer sheets included with Engine Assembly.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ENGINE INSTALLATION INSTRUCTIONS

(PART NO. 3918793 CONT.)

1965 MODELS

Require items A thru O, Q & R plus the following:

Item	Qty.	Part No.	Description	Remarks
V.	1	7002650	Carb. Main Metering Jet	All models exc. LDFC & H/Perf. (Purchase new.)
W.	1	3001406	Oil Cooler Unit	All CAC & LDFC models only. (Purchase new or transfer from replaced engine.)
X.	1	3838403	Crankshaft Pulley (CAC models only)	
Y.	1	3798048	Engine Rear Shroud Assy.-RH . . .	LDFC models only. (Purchase new or transfer from replaced engine.)
Z.	1	3845492	Engine Rear Mounting Brkt. . . .	

1964 MODELS

Require items A, B, D thru O, Q, R, U, W & Z plus the following:

Item	Qty.	Part No.	Description	Remarks
AA.	1	3847774	Clutch Cover & Press. Plate (1st Design)	LDFC (Exc. H/Perf.) models only. (Purchase new or transfer from replaced engine.)
AB.	1	3844132	Clutch Cover & Press. Plate (2nd Design)	
AC.	1	3844132	Clutch Cover & Press. Plate . . .	All Corvair & H/Perf. LDFC models. (Purchase new or transfer from replaced engine.)
AD.	1	3798048	Engine Rear Shroud Assy.-RH . . .	All models. (Purchase new or transfer from replaced engine.)
AE.	1	3814582	Oil Filter & Gen. Adapter Assy. .	
AF.	1	3795444	Eng. Rear Mounting Brkt. (Exc. LDFC)	
AG.	1	7002653	Carb. Main Metering Jet	All models exc. LDFC & H/Perf. (Purchase new.)
AH.	1	3856615	Engine Blower	All models. (Purchase new.)
AI.	1	3856616	Engine Blower Pulley	

GENERAL INFORMATION

1. When installing clutch housing, transmission pilot bore alignment and face runout should be checked as specified in the shop manual.

2. Various mounting bolt holes, located on the cylinder heads of the above assembly, have been enlarged and relocated. When using on certain models it may be necessary, in some locations, to use a 3/8 x 16 bolt and enlarge engine sheet metal holes to match mounting hole in cylinder head.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GENERAL INFORMATION CONT.

3. The above assembly is a 110 horsepower H/Performance engine. When using as a replacement for the 95 horsepower engine, the use of premium fuel is recommended.

4. When using on Powerglide models, remove clutch pilot bushing.

5. Models with optional equipment require transfer or replacement of engine parts special to such options.

6. If any part number listed above is not shown in the current master parts catalog, check history section for replacing part number.

7. On sedan or coupe models, remove and discard 3/8" recessed plug located in the oil level gauge tube hole and insert a new tube 3856695. The dip-stick tube from the replaced engine should not be reused.

8. On LDFC models remove and discard 1-1/16" recessed plug located in the oil filler tube hole and transfer tube from replaced engine. Damaged rubber seal can be replaced with part 3777504.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ENGINE INSTALLATION INSTRUCTIONS

PART NO. 3933939 UNIVERSAL "164" CU. IN. 6 CYLINDER ENGINE ASSEMBLY.

FOR USE ON 1966 THRU 1968 CORVAIR AIR INJECTION REACTOR MODELS (Exc. SPEC. H/PERF. & TURBOCHARGER MODELS).

USED WITH SYNCHROMESH & POWERGLIDE TRANSMISSION & AIR CONDITIONING. (LESS FLYWHEEL, CLUTCH HOUSING ALL CLUTCH COMPONENTS).

SUPPLEMENTAL PARTS REQUIRED FOR INSTALLATION BY MODEL YEARS.

1968 MODELS

Item	Qty.	Part No.	Description	Remarks
A.	1	3851807	Flywheel Assy. (Synchro. Transmission)	All models. Purchase new or transfer from replaced engine. See General Information Note No. 1.
B.	1	3829738	Trans. Converter Flex Plate (Powerglide Trans.)	
C.	1	3832718	Flywheel Reinforcement (Synchro. Trans.)	
D.	1	3850975	Clutch Housing Assy. (Synchro. Trans.)	
E.	1	3850976	Flywheel Housing Assy. (Powerglide Trans.)	
F.	1	3888000	Clutch Driven Plate Assy.	
G.	1	3844132	Clutch Cover & Pressure Plate Assy.	

1967 MODELS

Require Items A thru G plus the following:

H.	1	3851989	Compressor Brkt. Supt. Brace (w/C.A.C.)	All models. Purchase new or transfer from replaced engine.
I.	1	3891556	Crankshaft Pulley (w/C.A.C.)	

1966 MODELS

Require Items A thru G plus the following:

J.	1	3786462	Hose Connector	All models. Purchase new or transfer from replaced engine.

GENERAL INFORMATION

1. When installing clutch housing, transmission pilot bore alignment and face runout should be checked as specified in the shop manual. Also transfer all flywheel and clutch attaching parts.

2. Various mounting bolt holes, located on the cylinder heads of this assembly, have been enlarged and relocated. When using on certain models it may be necessary, in some locations, to use a 3/8 x 16 bolt and enlarge engine sheet metal holes to match mounting hole in the cylinder head.

3. This assembly is a 110 horsepower h/performance engine. When using as a replacement for the 95 horsepower engine, the use of premium fuel is recommended.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1965 MODELS

Require items A thru Q & U plus the following:

Item	Qty.	Part No.	Description	Remarks
V.	1	3838403	Crankshaft Pulley	CAC models only. (Purchase new or transfer from replaced engine.)

GENERAL INFORMATION

1. When installing clutch housing, transmission pilot bore alignment and face runout should be checked as specified in the shop manual.

2. On Corsa models it is also necessary to cut a 3/4 inch diameter hole in engine front shroud extension to accommodate temperature switch or transfer old shroud from replaced engine.

3. Various mounting bolt holes, located on the cylinder heads of the above engine assembly, have been enlarged and relocated. When using on certain models it may be necessary, in some locations, to use a 3/8 x 16 bolt and enlarge engine sheet metal holes to match mounting hole in cylinder head.

4. When using on Powerglide models, remove clutch pilot bushing.

5. Models with optional equipment require transfer or replacement of engine parts special to such options.

6. If any part number listed above is not shown in the current master parts catalog, check history section for replacing part number.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

ENGINE INSTALLATION INSTRUCTIONS

PART NO. 3918793 UNIVERSAL "164" CU. IN. 6 CYLINDER ENGINE ASSEMBLY
FOR USE ON 1964 THRU 1967 CORVAIR AND 1964-65 LDFC MODELS
(EXCEPT AIR INJECTION REACTOR, SPEC. H/PERF. AND TURBOCHARGER MODELS)
USED WITH SYNCHROMESH AND POWERGLIDE TRANSMISSION AND
AIR CONDITIONING (LESS DISTRIBUTOR, FLYWHEEL, CLUTCH HOUSING AND
ALL CLUTCH COMPONENTS)

SUPPLEMENTAL PARTS REQUIRED FOR INSTALLATION BY MODEL YEARS

1967 MODELS

Item	Qty.	Part No.	Description	Remarks
A.	1	3850975	Clutch Housing Assy. (Synchromesh Transmission).	All models. (Purchase new or transfer from replaced engine.) See General Information Note No. 1.
B.	1	3850976	Flywheel Housing Assy. (Powerglide Transmission). . . .	
C.	1	3844132	Clutch Cover & Press. Plate . . .	
D.	1	3888000	Clutch Driven Plate Assy.	
E.	1	3829808	Clutch Fork Assy.	
F.	1	3850567	Clutch Fork Ball Stud Unit	
G.	1	3851807	Flywheel Assy. (Synchromesh Transmission).	
H.	1	3829738	Trans. Converter Flex. Plate (Powerglide Transmission). . . .	
I.	1	3791246	Distributor Clamp Unit	
J.	1	3770598	Distributor Clamp Retainer	
K.	1	9419815	Distributor Clamp Nut	
L.	1	3867249	Engine Rear Mtg. Brkt. Assy. . .	
M.	1	1110310	Distributor Assy.	All models exc. P/Glide & H/Perf. (Purchase new or transfer from replaced engine.)
N.	1	1110311	Distributor Assy.	All models w/Powerglide trans. exc. H/Perf. (Purchase new or transfer from replaced engine).
O.	1	1110319	Distributor Assy.	All H/Perf. models. (Purchase new or transfer from replaced engine.)
P.	1	3001406	Oil Cooler Unit	All CAC models. (Purchase new or transfer from replaced engine.)
Q.	1	3789338	Oil Filter Adapter	
R.	1	3851989	A/C Comp. Brkt. Supt. Brace . . .	
S.	1	3891556	Crankshaft Pulley	

1966 MODELS

Require items A thru R plus the following:

T.	1	3891556	Crankshaft Pulley (2nd Design) . .	All CAC models. (Purchase new or transfer from replaced engine.)
U.	1	3838403	Crankshaft Pulley (1st Design) . .	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GENERAL INFORMATION (Cont'd.)

4. When using on powerglide models, remove clutch pilot bushing.

5. Models with optional equipment require transfer or replacement of engine parts special to such options.

6. If any part number listed above is not shown in the current master parts catalog, check history section for replacing part number.

7. On 1966 models it may be necessary to rework the sheet metal, in the oil cooler area, to provide clearance.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 0.000

ENGINE—CLUTCH

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

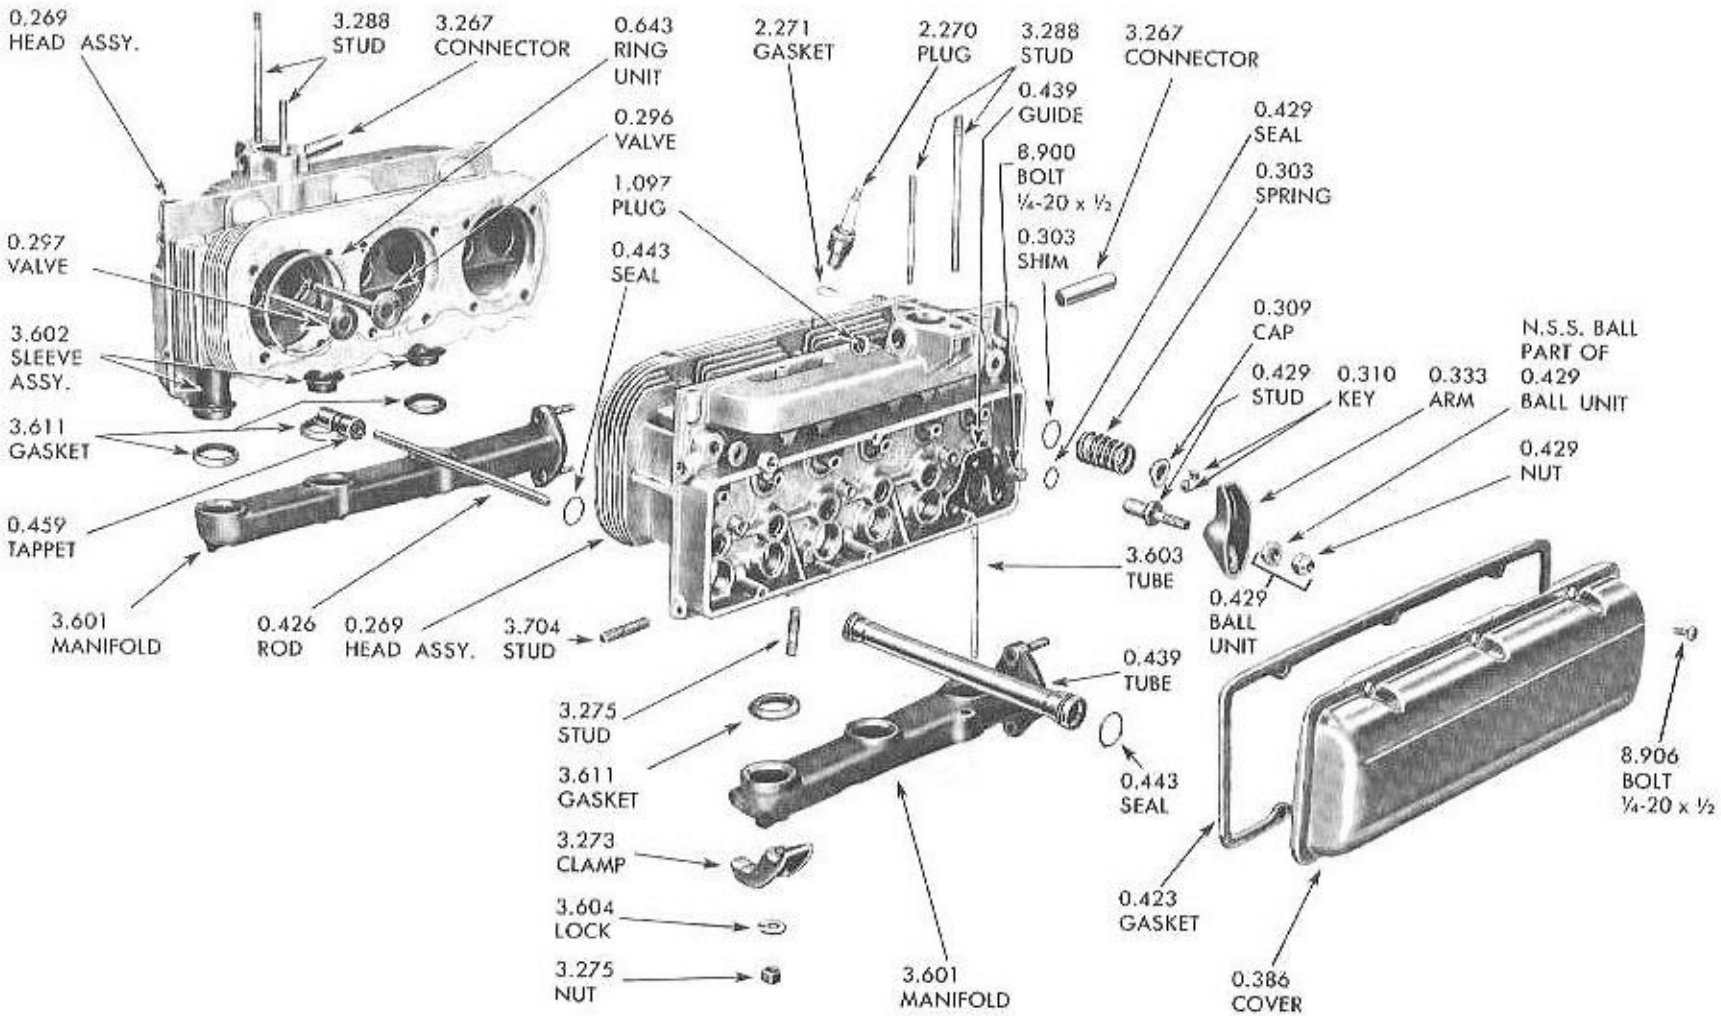

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

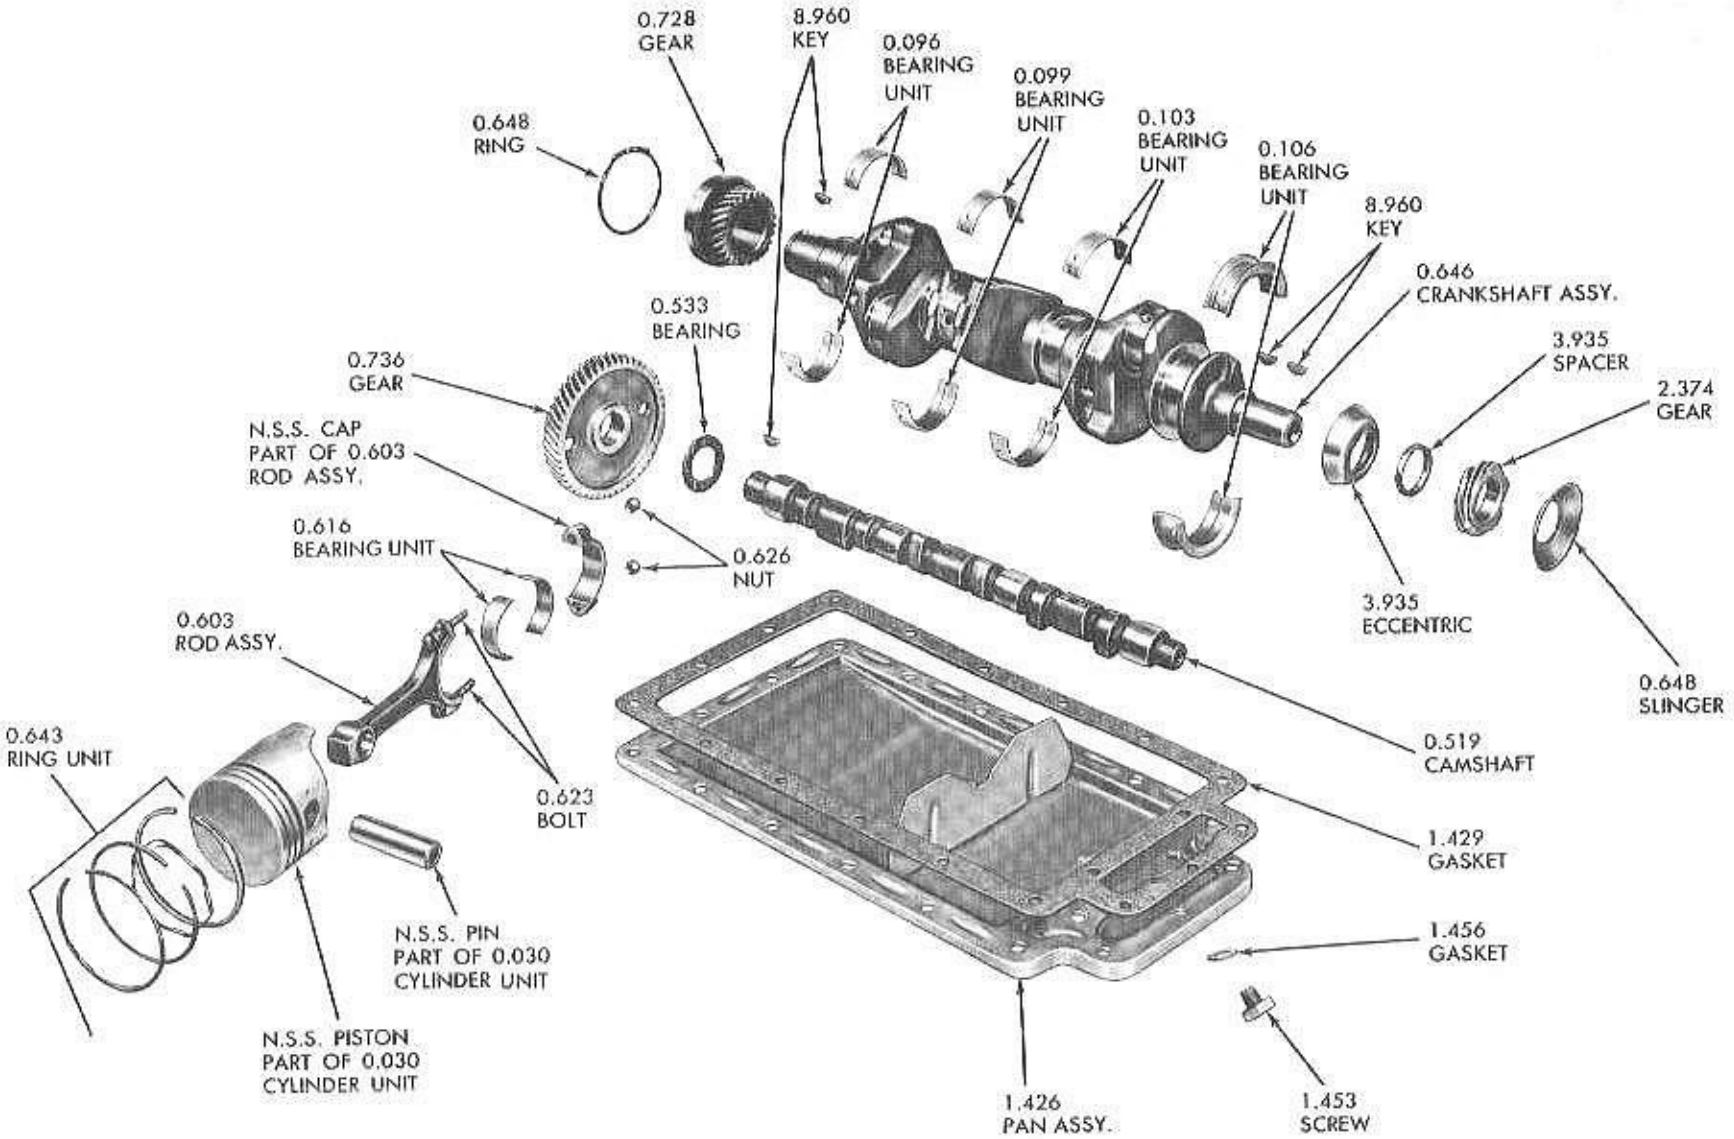

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

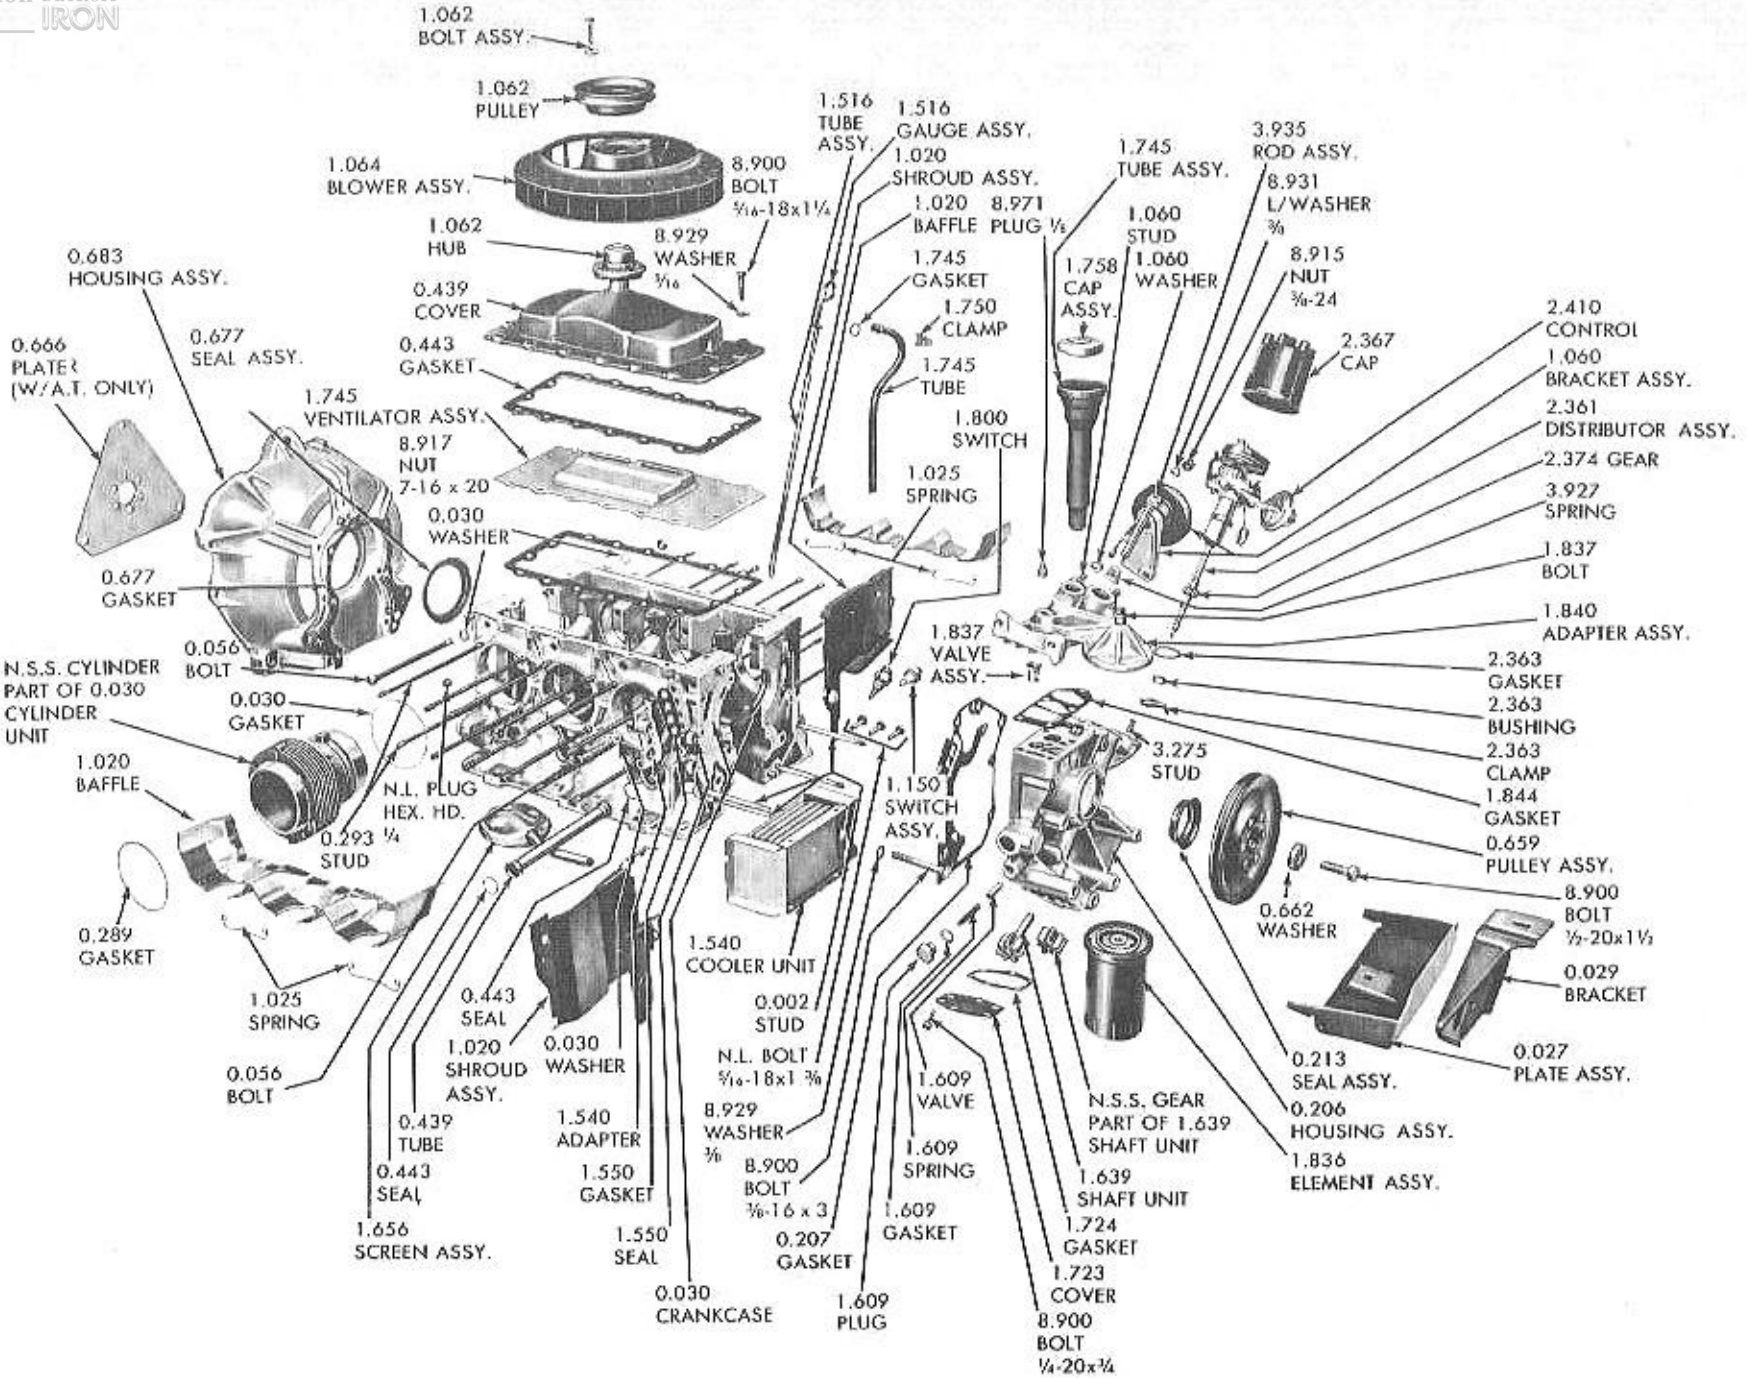

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

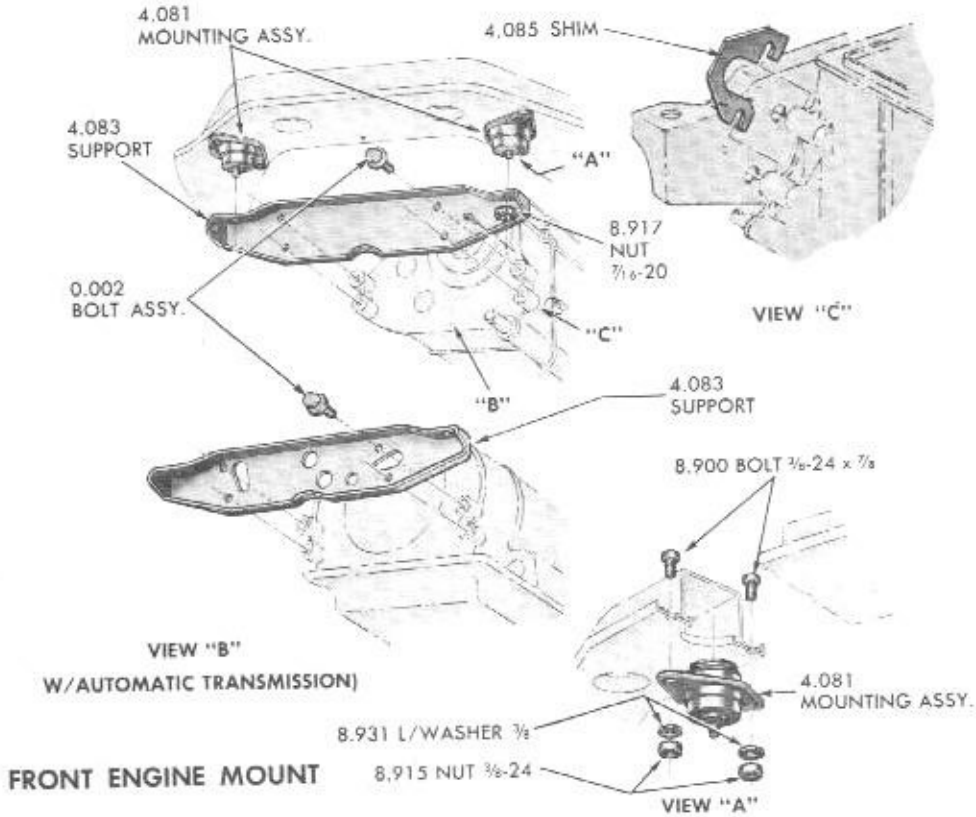

FRONT ENGINE MOUNT

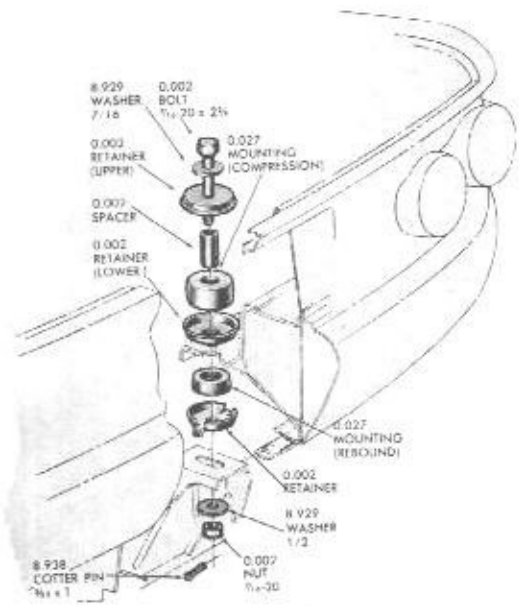

1960 REAR ENGINE MOUNT

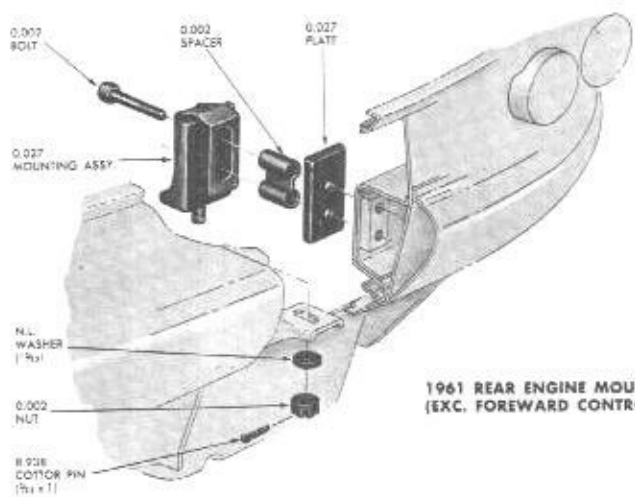

1961 REAR ENGINE MOUNT (EXC. FOREWARD CONTROL)

1960-64 CORVAIR—FRONT AND REAR ENGINE MOUNTING

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

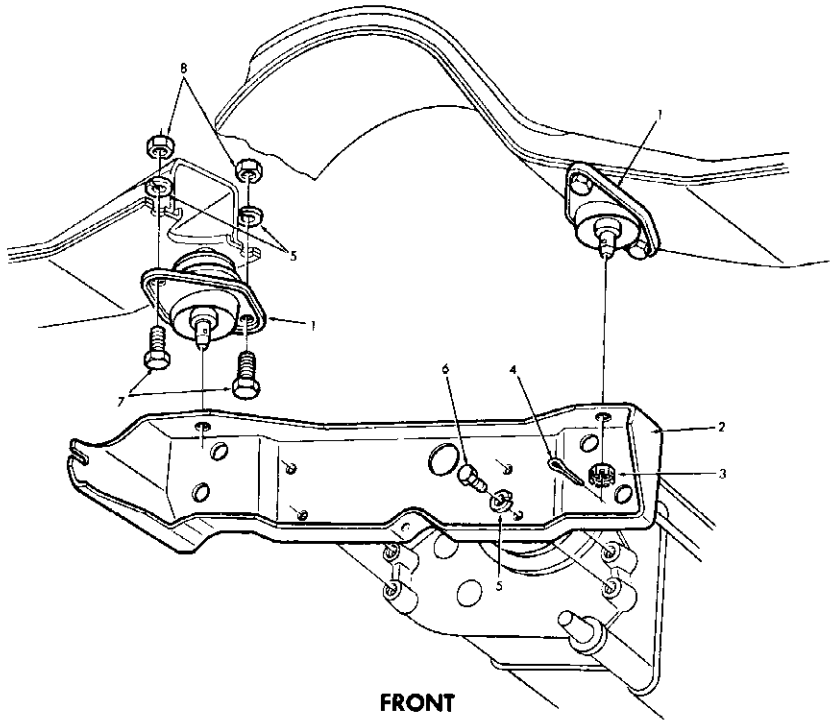

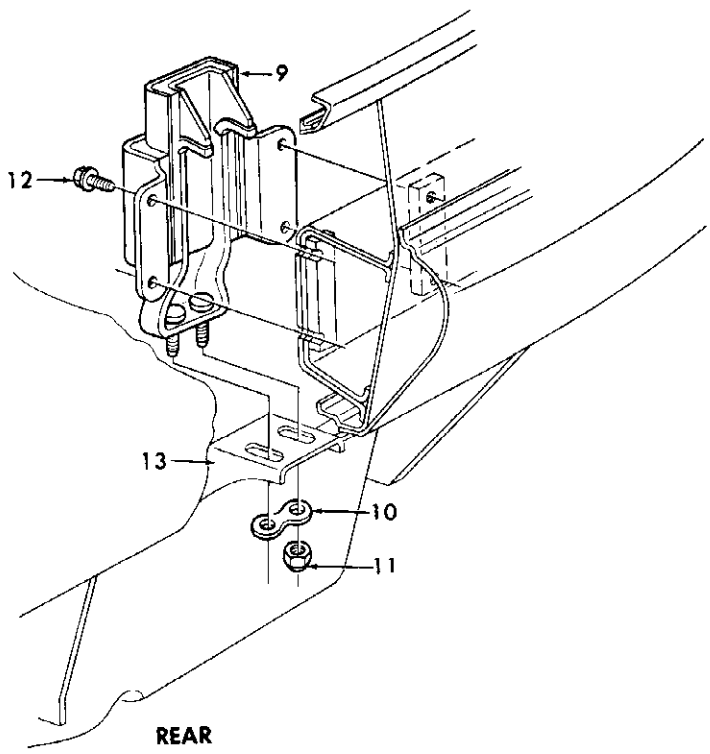

1965-69 CORVAIR ENGINE MOUNTING DETAILS

1.	4.081	MOUNTING ASSY.	8.	8.915	NUT (3/8–16)
2.	4.081	SUPPORT ASSY.	9.	0.027	MOUNTING ASSY.
3.	8.917	NUT (7/16–20)	10.	0.002	WASHER
4.	8.938	C. PIN (3/32 x 1)	11.	8.917	NUT (3/8–24)
5.	8.931	L. WASHER (3/8)	12.	8.900	SCREW (5/16–18 x 7/8)
6.	8.900	BOLT (3/8–16 x 1-1/4)	13.	N.S.	BRACKET
7.	8.900	BOLT (3/8–16 x 7/8)			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

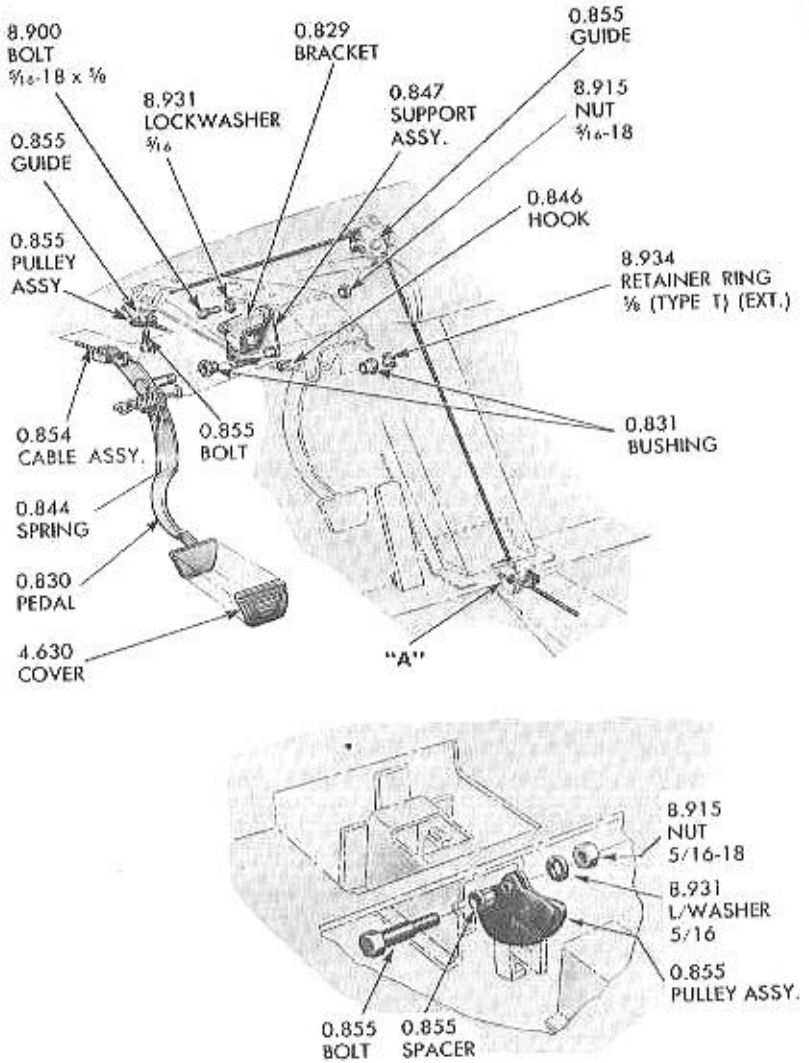

CLUTCH PEDAL AND CABLE

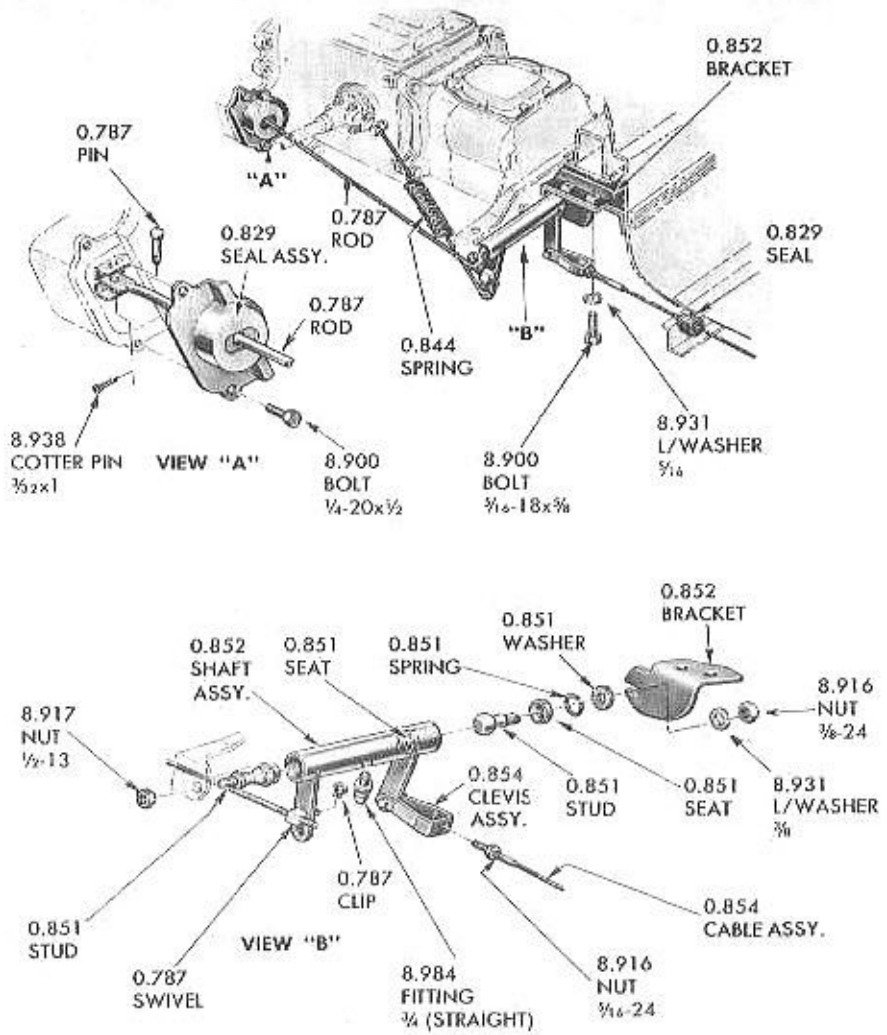

CLUTCH LINKAGE

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

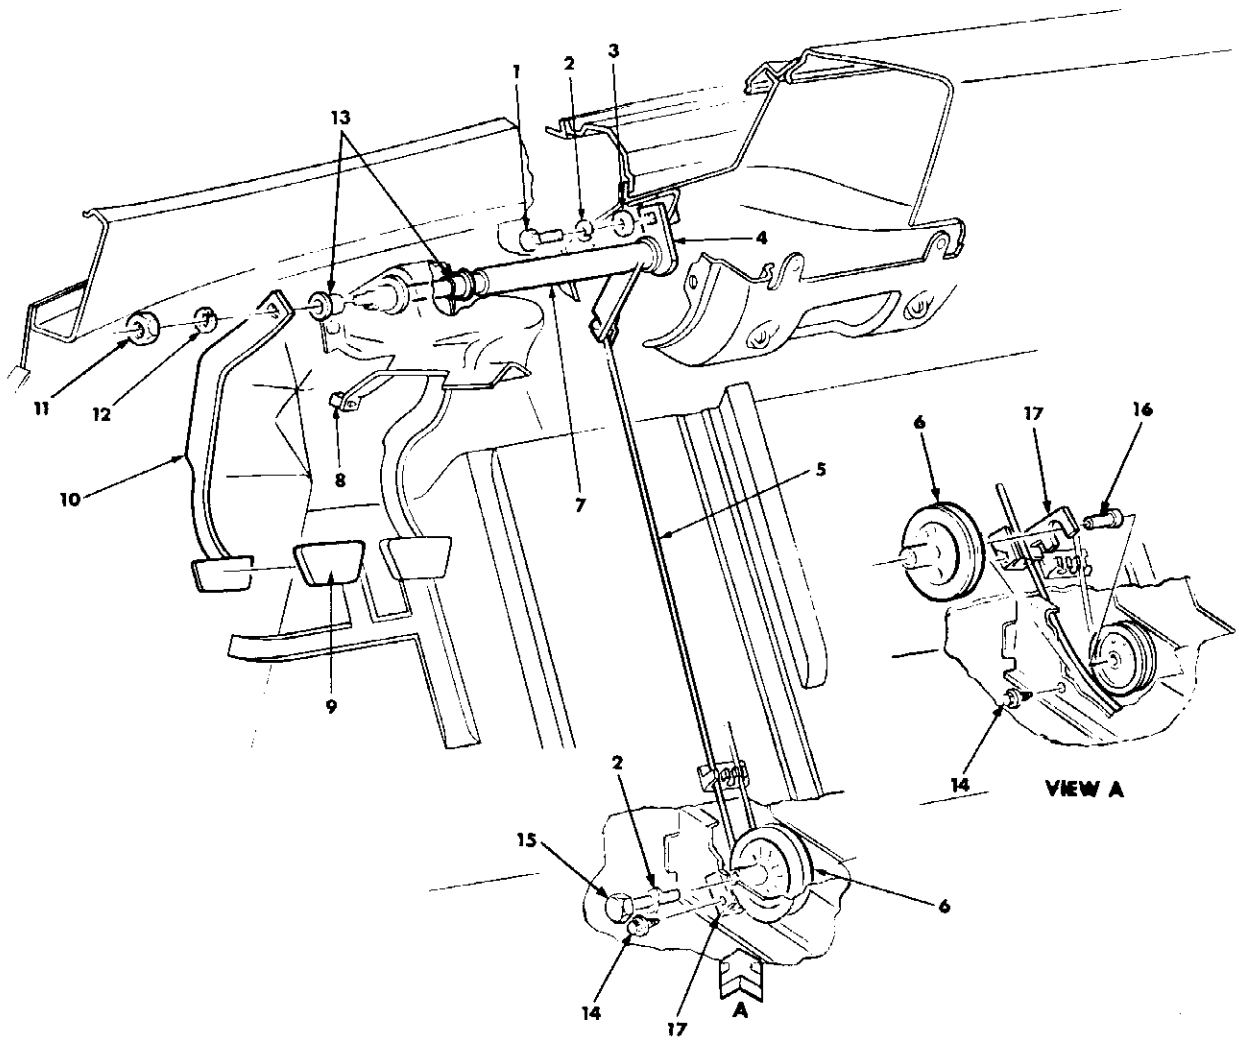

1965-69 CORVAIR—CLUTCH PEDAL & CABLE

1.	8.900	BOLT (5/16—18 x 3/4)	
2.	8.931	L/WASHER (5/16 Med.)	
3.	8.929	WASHER (11/32 x 1 x 1/8)	
4.	0.831	BEARING ASSY.	3859478
5.	0.854	CABLE ASSY. (1965-68)	3908320
	0.854	CABLE ASSY. (1969)	3650297
6.	0.855	PULLEY	3859480
7.	0.833	SHAFT ASSY. (1965-66)	3859474
	0.833	SHAFT ASSY. (1967-68)	3901344
	0.833	SHAFT ASSY. (1969)	3955154
8.	0.829	BUMPER	3723230
9.	4.630	COVER—Pedal	6256368
10.	0.830	PEDAL ASSY. (1965-66)	3859471
	0.830	PEDAL ASSY. (1967-69)	3901345
11.	8.916	NUT (1/2—20)	
12.	8.931	L/WASHER (1/2)	
13.	4.626	BUSHING	3798256
14.	8.977	SCREW (8—18 x 3/8)	
15.	8.900	BOLT (5/16—18 x 2)	
16.	4.790	SPACER	3875054
17.	0.855	RETAINER	3899038

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

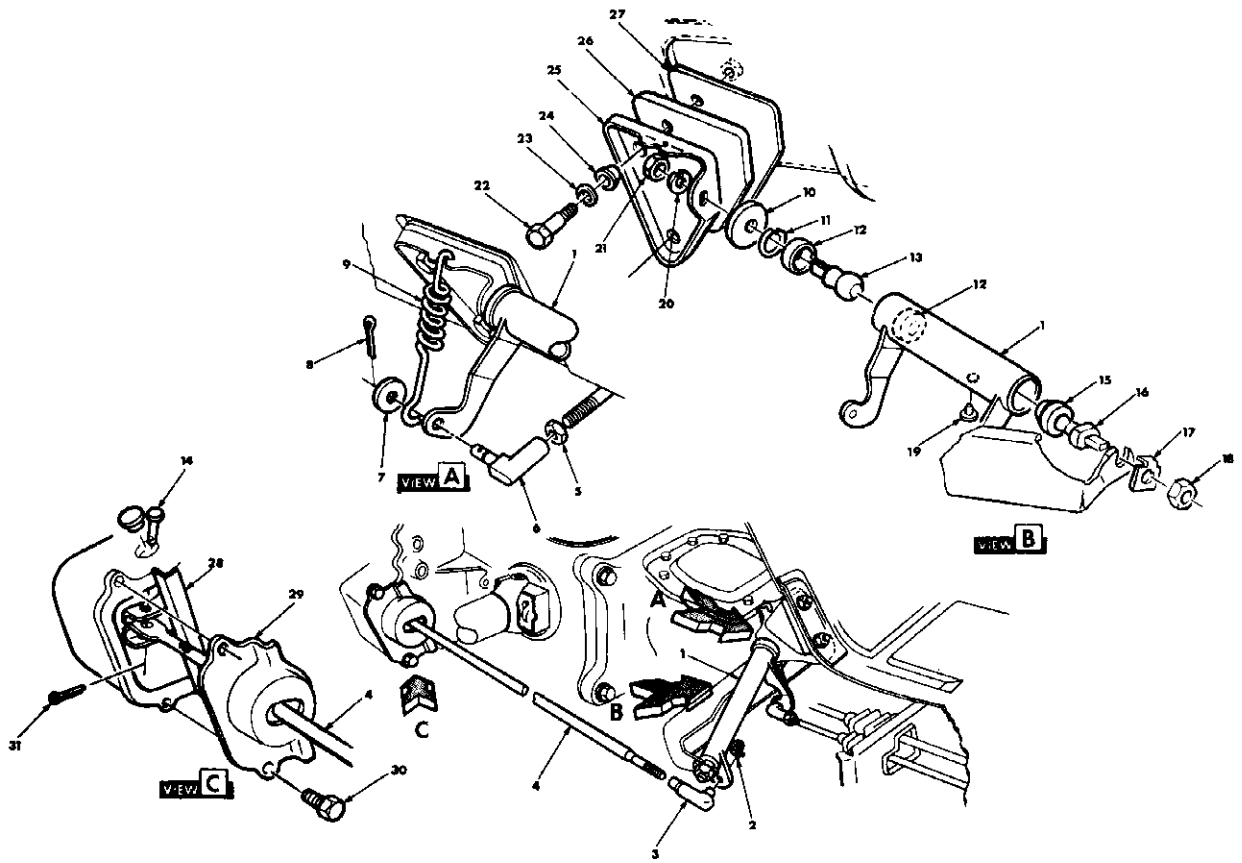

1965-69 CORVAIR—CLUTCH SHAFT & LINKAGE

1.	0.852	SHAFT ASSY.	3878061	17.	0.855	RETAINER	3866575
2.	4.037	CLIP	3749084	18.	8.915	NUT (1/2—13) (300-m)	
3.	0.787	SWIVEL	3764588	19.	N.S.	SPL. PLUG	
4.	0.787	ROD—PULL	3870139	20.	8.931	L/WASHER (3/8 Med.)	
5.	8.915	NUT (1/4—20)		21.	8.915	NUT (3/8—24) (7/32 Thick)	
6.	0.787	SWIVEL	3870176	22.	0.852	BOLT	3785824
7.	8.929	WASHER (11/32 x 11/16 x 5/64)		23.	8.929	WASHER (7/16—1 x 1/8)	
8.	8.938	C. PIN (3/32 x 1)		24.	0.852	GROMMET	3785826
9.	0.844	SPRING	3870179	25.	0.852	BRACKET	3878063
10.	0.851	WASHER	3743360	26.	0.852	INSULATOR	3859490
11.	0.851	SPRING	3750696	27.	0.852	REINFORCEMENT	3859491
12.	0.851	SEAT	3743349	28.	0.829	SEAL (1965)	3859868
13.	0.851	STUD	3898610	29.	0.829	SHIELD	3859494
14.	0.787	CLEVIS PIN	3738054	30.	8.915	(1/4—20 x 1/2)	
15.	0.829	SEAL	1354671	31.	8.938	C. PIN (3/32 x 1)	
16.	0.851	STUD	3859488				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

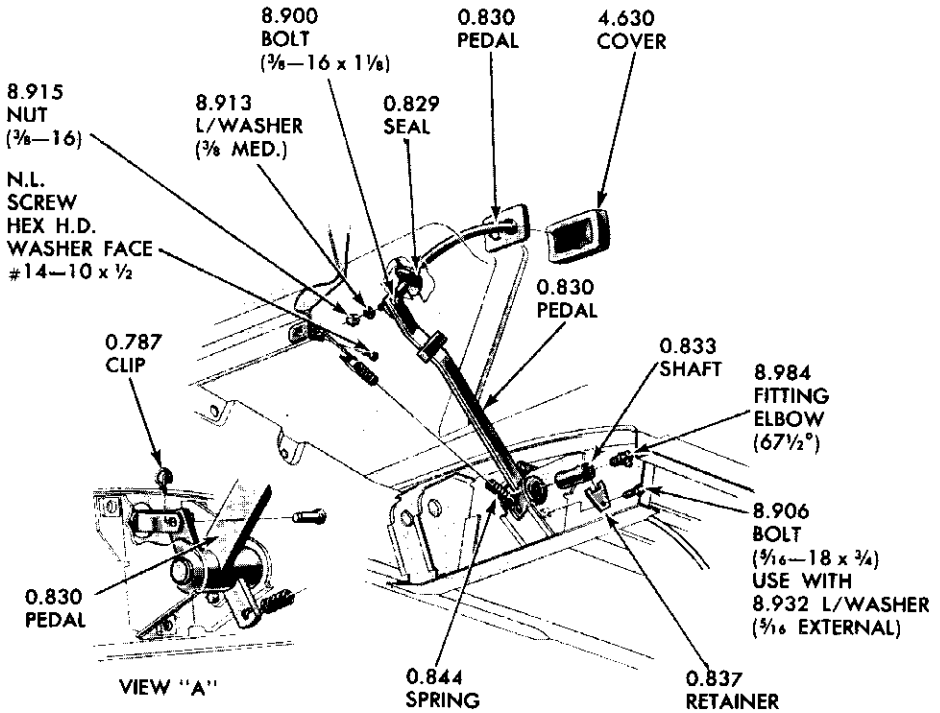

FRONT

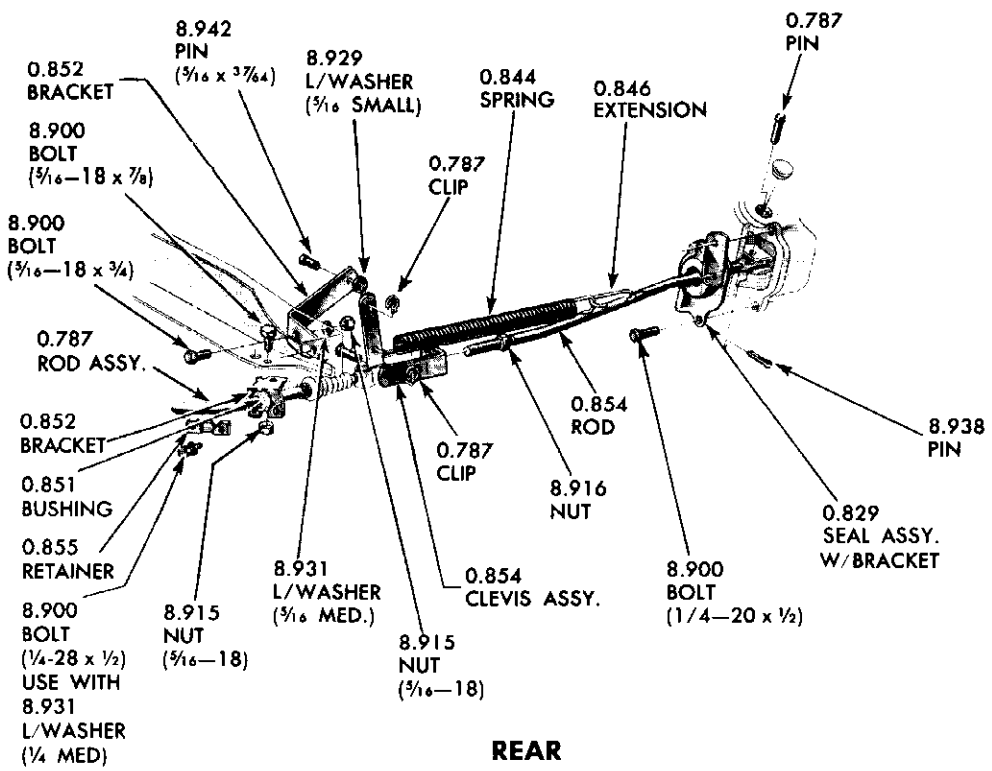

REAR

1961-65 CORVAIR F.C. CLUTCH PEDAL AND LINKAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

0.000 ENGINE ASSEMBLY

NOTE When installing the following engines on applicable past models, non-interchangeable parts must be discarded and replaced with parts that fit the replacing engine.
See Engine Installation Instruction Charts in the general information section.

60-63	CORVAIR w/H/Per. (exc. P.G., Turbocharger)	3830951		1
60-63	CORVAIR, F.C. (exc. H/Per Turbocharger)	3830953	(less distributor, flywheel, clutch, and related parts)	1
64-65	F.C.,			
64-67	CORVAIR (exc. Turbo., A.I.R., Sp. H/Per.)	3918793	(less dist., flywheel, clutch housing, and all related parts)	1
65-67	CORVAIR w/4/1BC (exc. A.I.R., Air Cond.)	3921001	(less dist., flywheel, clutch housing, and all related parts)	1
66-69	CORVAIR w/A.I.R. (exc. Sp. H/Per.)	3933939		1

The above CORVAIR engine assemblies do not include the following sub assemblies.
Carburetor——Generator——Ignition Wires——Sheet Metal Shields
Fuel Pump——Ignition Coil——Starting Motor——Sheet Metal Shrouds
The above CORVAIR engines do include the following sub assemblies.
Oil Filter——Blower Hub and Shaft——Distributor
Oil Cooler——Rear Mounting Bracket——Spark Plugs
Idler Pulley and Bracket

0.002 PARTS, Engine Mounting (Small Attaching)

60-61 62-65	CORVAIR, F.C., F.C.	3774468	**BOLT,** rear mtg. (hex. $^{7}/_{16}$—20 x 3) frt. bracket fldg. plate	1
61-64	CORVAIR	3785362	**BOLT,** special hex. ($^{3}/_{8}$—16 x $2^{5}/_{8}$) flat point (300M steel)	1
60-61 62-65	CORVAIR, F.C., F.C.	3774712	**NUT,** rear mtg. ($^{7}/_{16}$—20), trans. support assy. to trans. support mounting assy.	1
60 61-65	CORVAIR, F.C., F.C.	6256024	**RETAINER,** rear lower, rebound (notched)	1
60 61-65	CORVAIR, F.C., F.C.	6255925	**RETAINER,** rear lower ($2^{19}/_{32}$ O.D. x $1^{7}/_{64}$ I.D.)	1
60 61-65	CORVAIR, F.C., F.C.	6257790	**RETAINER,** rear upper ($2^{11}/_{16}$ O.D. x $^{15}/_{32}$ I.D.)	1
60-69	CORVAIR, F.C.	3772482	**STUD,** rr. mtg. bracket to engine ($^{3}/_{8}$—16—16 x $5^{5}/_{8}$) (.003 O.S.) (painted dark blue)	A.R.
60-69	CORVAIR, F.C.	3772483	**STUD,** rr. mtg. bracket to engine ($^{3}/_{8}$—16—16 x $5^{5}/_{8}$) (.006 O.S.) (painted light green)	A.R.
60-69	CORVAIR, F.C.	3772484	**STUD,** rr. mtg. bracket to engine ($^{3}/_{8}$—16—16 x $5^{5}/_{8}$) (.009 O.S.) (painted orange)	A.R.
60 61-65	CORVAIR, F.C.	3769338	**SPACER,** eng. rear mtg. sleeve ($2^{1}/_{8}$ long)	1
61-64	CORVAIR	3785373	**SPACER,** rear mtg. ($1^{3}/_{8}$ ctr. to ctr. of two $^{13}/_{32}$ holes) ($1^{7}/_{16}$ O.L.)	1
60-69	CORVAIR, F.C.	3693853	**WASHER,** brkt. to engine (left side) ($^{7}/_{16}$")—(2.277)	2
64	CORVAIR	3818180	**WASHER,** mtg. ($^{15}/_{32}$ x $1^{1}/_{4}$ x $^{3}/_{16}$ thk.)	A.R.
65-69	CORVAIR	3866517	**WASHER,** rr. mtg.	1

0.010 GASKET UNIT, Engine (Major Overhaul)

60-64	CORVAIR, F.C. (1st design)	3849846	w/seals (Note 1, 3, 4)	1

NOTE 1 This gasket unit is used on 1964 engines dated up to T0529.

64-69	CORVAIR, F.C. (2nd design)	3888090	w/seals (Note 2, 3, 4)	1

NOTE 2 This gasket unit is used on 1964 engines dated T0529.
NOTE 3 For complete overhaul also see group 0.289.
NOTE 4 When using on F.C. models 3777504 Seal must also be used.

0.027 MOUNTING—PLATE—SPACER, engine

60 61-65	CORVAIR, F.C.	3777778	rear upper, compression ($2^{7}/_{16}$ O.D. x $^{3}/_{4}$ I.D. x $1^{1}/_{4}$ thk.)	1
60 61-65	CORVAIR, F.C.	763818	rear lower, rebound ($1^{7}/_{8}$ O.D. x $^{5}/_{8}$ thk.)	1
61-63	CORVAIR (exc. C.A.C.)	3788221	**MOUNTING ASSY.,** rear (includes $^{7}/_{16}$—20 x $1^{1}/_{8}$ hex. hd. bolt)	1
61-63	CORVAIR w/C.A.C.	3795849	**MOUNTING ASSY.,** rear (includes $^{7}/_{16}$—20 x $1^{1}/_{8}$ rd. hd. bolt)	1
64	CORVAIR	3849933	**MOUNTING ASSY.,** rear	1
65-69	CORVAIR	3880558	**MOUNTING ASSY.,** eng. rr.	1
61-63	CORVAIR	3788223	**PLATE,** rear mtg. ($3^{3}/_{8}$ x $1^{13}/_{16}$—two $^{27}/_{64}$ holes)	1
60-69	CORVAIR, F.C.	3839263	**PLATE ASSY.,** skid ($10^{1}/_{8}$ O.L.) (Note 1)	1

NOTE 1 When using on models prior to 1964 it may be necessary to (1) use two $^{1}/_{4}$20 x $^{1}/_{2}$ screws and enlarge bottom hole of engine shroud assy., (2) remove two weld nuts 451744 to provide clearance.

64	CORVAIR	3849935	**SPACER,** rear mtg. ($1^{3}/_{8}$ ctr. to ctr. of two $^{27}/_{64}$ holes)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

0.029 BRACKET, Engine Mounting

60-63	CORVAIR, F.C. (exc. C.A.C.)	6257347	rear (4 holes 27/64 dia.)	1
61-63	CORVAIR w/C.A.C.,			
64	CORVAIR	3795444	rear (5 holes 27/64 dia.)	1
64-65	F.C.	3845492	rear	1
65-69	CORVAIR	3867249	eng. rear mtg.	1

0.030 CYLINDER UNIT—CRANKCASE—GASKET—PIN—WASHER, Engine (Refer to Helicoil group 8.914 in the P&A 30 for thread repair)

60	CORVAIR	3789290	w/piston, pin and rings	6
61-63	CORVAIR, F.C.	3838077	w/piston, pin and rings	6
64	CORVAIR, F.C.	3847843	w/piston, pin and rings	6
65	CORVAIR, F.C.,			
66-69	CORVAIR (exc. H/Per. w/A.I.R.)	3869276	w/piston, pin and rings	6
66-69	CORVAIR (H/Per. w/A.I.R.)	3889799	w/piston, pin and rings	6
61-63	CORVAIR, F.C. w/Turbo	3788802	**CRANKCASE,** less crankshaft (cast 6255616) (Note 6)	1
64-66	CORVAIR, F.C. w/Turbo	3849112	**CRANKCASE,** less crankshaft	1
60-63	CORVAIR, F.C. (exc. Turbocharger)	3788806	**CRANKCASE UNIT,** w/crankshaft (case 6255616) (Note 1, 5, 6)	1

NOTE 1 When using on Hi-Per engines it will be necessary to replace camshaft with 3832586.

64-69	CORVAIR, F.C. (exc. Turbocharger)	3849115	**CRANKCASE UNIT,** w/crankshaft (Note 2, 5)	1

NOTE 2 When using on Hi-Per engines it will be necessary to replace camshaft with 3872304.

60-65	CORVAIR, F.C.,			
66-69	CORVAIR (exc. 4/1BC w/P.G. w/Air Cond.)	3832820	**GASKET,** cylinder (steel) (3 15/64 O.D.)	6
66	CORVAIR w/4/1BC (P.G. w/Air Cond.)	3891552	**GASKET,** cylinder	6
61-69	CORVAIR, F.C.	3786755	**PIN,** crankcase dowel (1/2 x 1/2—hollow) (Note 3)	1

NOTE 3 May not be necessary on late design models.

60-62	CORVAIR, F.C.	6256884	**WASHER,** crankcase attaching (3/4" O.D. x 7/16" I.D. x 1/4" thk.) (Note 4)	A.R.

NOTE 4 Not required on late design 1962 models.
NOTE 5 When using on auto. trans. jobs it will be necessary to remove clutch pilot bearing from crankshaft.
NOTE 6 When using on listed models it may be necessary to also use the 1964 R.H. front shroud with extension in group 1.020.

0.056 BOLT, Crankshaft Bearing Cap

60-69	CORVAIR, F.C.	3821384	crankcase (7/16—20 x 7 1/16)	8

0.093 PLASTIGAGE

60-69	CORVAIR, F.C.	1390274	(green package—Type PG—1) (12 pieces)	A.R.

0.096 BEARING UNIT, Crankshaft Front (1 upper and 1 lower) See chart for Model Application

CRANKSHAFT MAIN BEARING CHART

		POSITION	STD.	.001 U.S.	.002 U.S.	.003 U.S.	.010 U.S.	.020 U.S.
60-69	CORVAIR, F.C.	Front	3834860(1)	3834862(1)	3834864(1)	3834866(1)	3834868(1)	3834920(1)
60-63	CORVAIR (exc. H/Per., Turbocharger)	Int. (frt., rr.)	3834870(1)	3834872(1)	6257973	—	3834876(1)	3834878(1)
60-63	CORVAIR w/H/Per.,							
61-65	F.C.,							
62-63	CORVAIR w/Turbocharger,							
64-69	CORVAIR	Int. (frt., rr.)	3834870(1)	3834872(1)	3834874	—	3834876(1)	3834878
60-62	CORVAIR (exc. H/Per., Turbocharger)	Rear	3867770(1)	3867769(1)	6257972	—	3867767(1)	6257978
60-63	CORVAIR w/H/Per.,							
62	CORVAIR w/Turbocharger,							
61-63	F.C.,							
63-69	CORVAIR, F.C.	Rear	3867770(1)	3867769(1)	3867768	—	3867767(1)	3867766

0.099 BEARING UNIT, Crankshaft Front Intermediate (1 upper and 1 lower) See chart following Group 0.096 for Model Application

NOTE See Dealers Price Schedule (P & A26) for applicable prices.

0.101 BEARING UNIT, Crankshaft Center (1 upper and 1 lower) See chart following Group 0.096 for Model Application

NOTE See Dealers Price Schedule (P—A26) for applicable prices.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

0.103 BEARING UNIT, Crankshaft Rear Intermediate (1 upper and 1 lower) See chart following Group 0.096 for Model Application

NOTE: See Dealers Price Schedule (P–A26) for applicable prices.

0.106 BEARING UNIT, Crankshaft Rear Bearing (1 upper and 1 lower) See chart following Group 0.096 for Model Application

NOTE: See Dealers Price Schedule P–A26) for applicable prices.

0.206 HOUSING ASSY.—BOLT, Crankcase End

60	CORVAIR (1st design)	6255848	engine rear (stamped 6255848)	1
60-66	CORVAIR, F.C.,			
67	CORVAIR w/H/Per., A.T.,			
68-69	CORVAIR,	3878505	engine rear	1
	Not required in this group. See Group 4.105	3770309	BOLT	

0.207 GASKET, Engine Rear Housing and Crankcase Front End Cover

60-69	CORVAIR, F.C.	3849155	housing	1

0.213 SEAL ASSY., Engine Rear Housing and Crankcase Front End Cover

60-69	CORVAIR, F.C.	6257476	housing (stamped 6257476) (Note 1)	1

NOTE 1 When using 6257476 on early design 1960 models it may be necessary to use 1-6257477 Crankshaft Rear Oil Slinger. Also the outboard face of pilot hole of engine rear Housing Assy. 6255848 must be chamfered $^{1}/_{32}$ x 45 degrees to provide a lead in for 6257476 seal.

0.269 HEAD ASSY., Cylinder (Refer to "TAPLOC" group 8.914 in P&A 30 for thread repair.)

60	CORVAIR (exc. H/Per.),			
61	CORVAIR (exc. MONZA, H/Per., Air Cond.),			
61	MONZA (exc. P.G., H/Per., Air Cond.),			
61	MONZA (2-DR.) w/P.G. (1st design) (exc. H/Per.),			
61	MONZA (P.G. w/Air Cond.), (exc. H/Per., 2-DR.),			
62-63	CORVAIR (exc. MONZA, H/Per.),			
62-63	MONZA (exc. P.G., H/Per. Turbocharger),			
63	MONZA (P.G. w/Air Cond.) (exc. H/Per.)	3886241	(Note 1)	2
61	CORVAIR, F.C. w/H/Per. (2nd design) (exc. P.G.),			
61	MONZA (2-DR.) w/P.G. (2nd design) (exc. H/Per.),			
61	MONZA (4-DR.) w/P.G. (exc. H/Per.),			
62-63	CORVAIR w/H/Per.,			
62-63	MONZA w/P.G.	3886247		2
61-63	F.C.	3886251	(Note 1)	2
62-63	CORVAIR w/Turbocharger	3886249		2
64	CORVAIR, F.C. (exc. H/Per., Turbocharger)	3886255	(Ident. No. 3856626)	1
64	CORVAIR, F.C. w/H/Per., (2nd design)	3886257	(Ident. No. 3856632)	1
64	CORVAIR w/Turbocharger	3886259	(Ident. No. 3819904)	1
65	CORVAIR w/4/1BC,			
66	CORVAIR w/4/1BC (exc. A.I.R.)	3878565	(Ident. No. 3856728)	2
65-66	CORVAIR w/Turbocharger	3878564	(Ident. No. 3856728) (Note 2)	2
65	F.C. (exc. H/Per.),			
65-67	CORVAIR (exc. 4/1BC, H/Per., A.I.R., Turbo.),			
65-67	CORVAIR w/H/Per. (C.A.C. w/P.G.) (exc. A.I.R.)	3878561	(Ident. No. 3856728)	2
65	F.C. w/H/Per.,			
65	CORVAIR w/H/Per. (exc. C.A.C. w/P.G.)	3883858	w/studs	2
66-67	CORVAIR w/H/Per. (exc. A.I.R., C.A.C. w/P.G.)	3878562	(Ident No. 3856743)	2
66-67	CORVAIR w/A.I.R. (exc. 4/1BC),			
68-69	CORVAIR (exc. 4/1BC)	3880707	(Ident. No. 3883862)	2
66	CORVAIR (4/1BC w/A.I.R.),			
68-69	CORVAIR w/4/1BC	3885165	(Ident. No. 3856728)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

60-61	CORVAIR, F.C. w/H/Per. (exc. P.G.)	**3886245**	**HEAD UNIT** (8 to 1 comp. ratio) (Note 1)	2

NOTE 1. When using this Head, it will be necessary to rework three holes in the top Shroud by enlarging them to accept ($^3/_8$"—16) Bolts now required, instead of ($^1/_4$"—20) Bolts previously used.
NOTE 2 When using on L.H. side it may be necessary to plug oil drain hole with plug 3751579.

0.283 GUIDE, Valve

60-66	CORVAIR, F.C. (exc. Turbocharger),			
67-69	CORVAIR	**3840811**	(.002)	12
60-66	CORVAIR, F.C. (exc. Turbocharger),			
67-69	CORVAIR	**3840812**	(.010 O.S.)	12
60-66	CORVAIR, F.C. (exc. Turbocharger),			
67-69	CORVAIR	**3840813**	(.020 O.S.)	12

0.289 GASKET, Cylinder Head

60-64	CORVAIR, F.C.	**3885125**	(stainless steel) ($3^3/_4$O.D. x $3^{31}/_{64}$ I.D.)	6
65-69	CORVAIR, F.C.	**3856720**		6
60-64	CORVAIR, F.C.	**3885124**	**GASKET UNIT** (Note 1, 2)	2

NOTE 1 Two units plus one Gasket Kit group 0.010 provides complete engine overhaul gasket kit.
NOTE 2 Unit consists of cyl. head, rocker cover, eng. cyl., and exhaust manifold gaskets, rocker stud, oil cooler and push rod to crankcase tube seals and exhaust pipe packing.

65-69	CORVAIR, F.C.	**3869278**	**GASKET UNIT** (Note 3)	1

NOTE 3 When using this kit on special high performance models, replace the exhaust manifold gasket part 3788174 by 3856736 (3 reqd.) and exhaust pipe packing part 6255845 by 3866590 (1 reqd.). Also on special high performance models with air conditioning and PG trans. replace cyl. gasket 3832820 packaged in kit with gasket 3891552 (6 reqd.).

0.293 STUD—NUT—WASHER, Cylinder Head

60-69	CORVAIR, F.C.	**3767221**	lower, to crankcase and valve rocker arm (.003 O.S.) ($^3/_8$—24—16 x $8^{35}/_{64}$) (daub of blue paint)	A.R.
60-69	CORVAIR, F.C.	**3767222**	lower, to crankcase and valve rocker arm (.006 O.S.) ($^3/_8$—24—16 x $8^{35}/_{64}$) (daub of green paint)	A.R.
60-69	CORVAIR, F.C.	**3767224**	upper to crankcase (.003 O.S.) ($^3/_8$—24—16 x $9^{17}/_{64}$) (daub of blue paint)	A.R.
60-69	CORVAIR, F.C.	**3767225**	upper, to crankcase (.006 O.S.) ($^3/_8$—24—16 x $9^{17}/_{64}$) (daub of green paint)	A.R.
60-66	CORVAIR, F.C.	**3866766**	**NUT,** attaching (hex. $^3/_8$"—24)—(0.626)	12
60-63	CORVAIR, F.C.	**3779986**	**WASHER,** idler pulley and bearing brkt. attaching (front hole—$^{13}/_{32}$)	1
60-64	CORVAIR, F.C.	**3754153**	**WASHER,** to crankcase, upper ($^3/_4$" O.D. x $^{13}/_{32}$" I.D. x $^1/_8$" thk.)—(5.383)	12

0.296 VALVE, Inlet

NOTE See Dealer Price Schedule (P—A26) for applicable prices.

		STD.	.003 O.S.	.010 O.S.	.015 O.S.	.030 O.S.
60-69	CORVAIR, F.C. (exc. 4/1BC)	3846491	3846857	3846858	—	—
65-69	CORVAIR w/4/1BC	3856734	3856786	3856787	—	—

0.297 VALVE, Exhaust

NOTE See Dealer Price Schedule (P—A26) for applicable Prices.

		STD.	.003 O.S.	.010 O.S.	.015 O.S.	.020 O.S.	.030 O.S.
60-69	CORVAIR (exc. Turbo., 4/1BC)	3845695	3845696	3845697	—	3845698	—
61-65	F.C.	3829105(1)	3829106(1)	3829107(1)	—	3829108(1)	—
62-66	CORVAIR w/Turbocharger	3821003	3821001	3821002	—	—	—
65-69	CORVAIR w/4/1BC	3856735	3856788	3856789	—	3856790	—

(1) Must be used with rotator 3817362.

0.303 SPRING—SHIM, Valve

60	CORVAIR (exc. H/Per.),			
61	MONZA (2-DR.) w/P.G. (1st design) (exc. H/Per.),			
61-63	CORVAIR, F.C. (exc. MONZA, H/Per., Turbocharger),			
61-63	MONZA (exc. P.G., H/Per.)	**6256838**	($1^3/_4$ free length) (R.H. coil) (aluminum, yellow, lavender, or orange stripe)	12
60-63	CORVAIR w/H/Per. Turbocharger,			
61-62	MONZA (2-DR.) w/P.G. (2nd design),			
61-62	MONZA (4—DR.) w/P.G.,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64-69	CORVAIR, F.C.	**3735381**	w/damper (2 yellow stripes with a maroon, tan, aluminum, dk. green, black or blue and white stripe)	A.R.
60	CORVAIR (exc. H/Per.),			
61	MONZA (2-DR.) w/P.G. (1st design) (exc. H/Per.),			
61-63	CORVAIR, F.C. (exc. MONZA, H/Per., Turbocharger),			
61-63	MONZA (exc. P.G., H/Per.)	**6255818**	**SHIM,** spring (1 1/16 O.D. x 11/16 I.D. x 1/32 thk.)	12
60-63	CORVAIR w/H/Per., Turbocharger,			
61-62	MONZA (2-DR.) w/P.G. (2nd design),			
61-62	MONZA (4—DR.) w/P.G.,			
63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64-69	CORVAIR, F.C.	**3781876**	**SHIM,** spring (1 7/32 O.D. x 19/32 I.D. x 1/32 thk.)	12

0.308 SEAL UNIT, Valve Spring Cap

60-69	CORVAIR, F.C.	**3856874**	inlet valve stem	1

0.309 CAP—ROTATOR ASSY., Valve Spring

60	CORVAIR (exc. H/Per.),			
61-62	CORVAIR (exc. MONZA, H/Per.),			
61-62	MONZA (exc. P.G., H/Per.),			
61	MONZA (2-DR.) w/P.G. (1st design),			
63	CORVAIR, F.C. (exc. MONZA, H/Per., Turbocharger),			
63	MONZA (exc. P.G.)	**6256839**	(1 1/32 O.D.)	A.R.
60-63	CORVAIR w/H/Per.,			
61-62	MONZA w/P.G. (2nd design),			
63	CORVAIR w/Turbocharger,			
63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64-66	CORVAIR (exc. F.C.),			
67-69	CORVAIR		inlet and exhaust,	
64-65	F.C.	**3729363**	inlet valve only (1 3/16 O.D.) (stamped H)	A.R.
61-65	F.C.	**3851837**	**ROTATOR ASSY.** (1 5/16 O.D. x 35/64 thk.) (stamped "RCH")	6

0.310 KEY, Valve Stem

60-68	CORVAIR, F.C. w/single groove valves	**838029**	intake and exhaust (1/2 O.D. x 3/8" long)	A.R.
62-69	CORVAIR w/4 bead groove valves (exc. 4/1BC)	**3821812**	exhaust (21/64 O.D. x 25/64 long)	A.R.

0.333 ARM, Valve Rocker

60-69	CORVAIR, F.C.	**6255648**	(diamond shape ident. mark)	12

0.386 COVER, Valve Rocker Arm

60-69	CORVAIR, F.C.	**3813005**	(4 holes, notched ctr. on both sides and ends)	2

0.413 SHIELD ASSY.—SPRING, Valve Rocker Cover

60-64	CORVAIR	**6257506**	heat (15 1/4 x 6 1/2)	1
65-69	CORVAIR	**3870294**	heat	R.H.
65-69	CORVAIR w/4/1BC	**3867247**	heat	L.H.
60-69	CORVAIR, F.C.	**3850874**	**SPRING** (4 51/64 O.L.)	8

0.423 GASKET, Valve Rocker Cover

60-69	CORVAIR, F.C.	**3850944**	half moon notch at outer edge of tab location	2

0.426 ROD, Valve Push

60-69	CORVAIR, F.C.	**3839661**	(10 7/32 O.L.) (blue stripe)	12

0.429 STUD—BALL—NUT—SEAL, Valve Rocker Arm

60-69	CORVAIR, F.C.	**6255639**	ball (300-M steel)	12
60-69	CORVAIR, F.C.	**3767221**	lower to crankcase and valve rocker arm (.003 O.S.) (3/8"—24—16 x 8 35/64") (daub of blue paint)—(0.293)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts

60-69	CORVAIR, F.C.	3767222	lower to crankcase and valve rocker arm (.006 O.S.) ($3/8$"—24—16 x $8\ 35/64$") (daub of green paint)—(0.293)	A.R.
60-69	CORVAIR, F.C.	3744340	**BALL** ($13/16$" dia.)	A.R.
60-69	CORVAIR, F.C.	3744341	**NUT** ($3/8$"-24) (coned)	A.R.
60-69	CORVAIR, F.C.	6255641	**SEAL**, ball stud—(4.133)	12

0.439 COVER—GUIDE—TUBE, Crankcase and Push Rod

60-64	CORVAIR, F.C.	3849323	crankcase top	1
65-69	CORVAIR, F.C.	3856611	crankcase top	1
60-62	CORVAIR, F.C.	6257983	**GUIDE**, valve push rod ($3\ 1/2$ O.L.—2 holes)	6
63-69	CORVAIR, F.C.	3832821	**GUIDE**, valve push rod ($3\ 1/2$ O.L.—2 holes)	6
60-69	CORVAIR, F.C.	6255650	**TUBE**, push rod oil drain ($8\ 1/4$ O.L.)	12

0.443 GASKET—SEAL, Crankcase and Push Rod

60-69	CORVAIR, F.C.	6257964	crankcase cover ($14\ 3/4$ long—16 holes)	2
60-69	CORVAIR, F.C.	6255619	**SEAL**, oil drain tube "O" ring ($51/64$" I.D. x $7/64$")	24

0.459 TAPPET, Valve

60-69	CORVAIR	3799644	hydraulic	16

0.519 CAMSHAFT

NOTE Engine Camshaft Break-In Oil 1050004, Group 1.850, should be used when installing new camshafts.

60-63	CORVAIR w/H/Per., Turbocharger	3832586	(Ident. No. 3832586 on gear end)	1
60-63	CORVAIR, F.C. (exc. H/Per., Turbocharger)	3779332	(Ident. No. 3779332)	1
64-67	CORVAIR, F.C. (exc. H/Per., 4/1BC, Turbocharger),			
65-66	CORVAIR (Sp. H/Per. w/P.G.) (2nd design),			
68-69	CORVAIR (exc. H/Per.)	3839889	(Ident. No. 3839889)	1
64-66	CORVAIR, F.C., w/H/Per., Sp. H/Per., Turbocharger (exc. P.G.),			
65	CORVAIR (Sp. H/Per. w/P.G.) (1st design),			
67-69	CORVAIR w/H/Per	3872304	(Ident. No. 3872304)	1

0.533 WASHER, Camshaft Thrust

60-69	CORVAIR, F.C.	6255611	($1\ 1/8$" I.D. x 2 O.D.)	1

0.603 ROD ASSEMBLY, Connecting

60-63	CORVAIR, F.C. (exc. Turbocharger)	6255633	($4\ 23/32$ ctr. to ctr. of holes)	6
62-63	CORVAIR w/Turbocharger,			
64-69	CORVAIR, F.C.	3819695	($4\ 23/32$ ctr. to ctr. of holes)	6

0.616 BEARING UNIT, Connecting Rod (1 Upper and 1 Lower—1 Left and 1 Right)

CONNECTING ROD BEARING CHART

		STD.	.001 U.S.	.002 U.S.	.010 U.S.	.020 U.S.
60-65	CORVAIR, F.C.	3867880	—	—	—	—
60-62	CORVAIR (exc. H/Per., Turbocharger)	—	3867879	6257971	—	—
60-63	CORVAIR (exc. H/Per., Turbocharger)	—	—	—	3867877	6257977
60-63	CORVAIR w/H/Per., Turbocharger,					
63-69	CORVAIR,					
61-65	F.C.	3867880	3867879	3867878	3867877	3867876

0.623 BOLT, Connecting Rod Bearing Cap

60-69	CORVAIR, F.C.	6255636	($5/16$—24 x $1\ 7/8$)	12

0.626 NUT, Connecting Rod Cap

60-69	CORVAIR, F.C.	9422298	($3/8$"—24 x $5/16$" thick) (one end chamfered)—(8.917)	A.R.
60-69	CORVAIR, F.C.	6255523	($5/16$—24)	12
60-66	CORVAIR, F.C.	3866766	($3/8$"-24 x $3/8$" thick) (hex nut) (both ends flat)	A.R.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

0.643 RING UNIT, Piston (Service Sets)

NOTE. Individual cylinder piston ring units (std. size only) for warranty replacement in a single engine cylinder may be ordered thru the local G.M.P.D. warehouse.
(refer to ACN C6775) Identify by engine model and year. Each of these std. size piston ring units include the necessary components (ring, spacers, segments, expanders) required for replacement in a SINGLE engine cylinder.
NOTE See Dealer Price Schedule (P—A26) for applicable prices.

Original Equipment Type

60	CORVAIR	**3789295**	(3.375 dia.)	1
61	CORVAIR (exc. Turbocharger),			
61-63	F.C.,			
62-63	CORVAIR w/Turbocharger	**3829103**	(3.438 dia.)	1
64-69	CORVAIR, F.C. w/H/Per., Turbocharger	**3845601**		1
64-69	CORVAIR, F.C. (exc. H/Per., Turbocharger)	**3970514**		1

Special Replacement Type (Cromflex)

60	CORVAIR	**3785274**	(3.375 dia.)	1
61-63	CORVAIR, F.C. (exc. Turbocharger)	**3798525**	(3.438 dia.)	1

0.646 CRANKSHAFT ASSEMBLY

60-63	CORVAIR, F.C. (exc. Turbocharger)	**3856705**	(Ident. No. 6255607) (Note 1)	1
62-63	CORVAIR w/Turbocharger	**3817291**	(Ident. No. 3817293)	1
64	CORVAIR, F.C. (exc. Turbocharger),			
64-67	CORVAIR, F.C. (exc. A.I.R., 4/1 BC),			
65-66	CORVAIR w/4/1BC (exc. P.G., A.I.R.)	**3856704**		1
65-66	CORVAIR (4/1BC w/P.G.) (exc. A.I.R.)	**3875827**		1
66-69	CORVAIR w/A.I.R. (exc. P.G.)	**3891545**		1
66-69	CORVAIR (A.I.R. w/P.G.)	**3891546**		1

NOTE 1 When using on Models with Automatic Transmission, remove clutch pilot bearing.

0.648 SLINGER, Crankshaft Oil

60-61	CORVAIR, F.C.,			
64-69	CORVAIR, F.C.	**6257477**	rear ($2^{5}/_{8}$ O.D. x $1^{1}/_{8}$ I.D.) (Note 1)	1

NOTE 1 When using 6257477 in place of 6255836, it will also be necessary to use 1—6257476 Seal Assy. Also the outboard face of pilot hole of engine rear Housing Assy. 6255848 must be chamfered $^{1}/_{32}$ by the 45 degree to provide a lead in for 6257476 Seal.

0.649 BEARING, Crankshaft Clutch Pilot

60-69	CORVAIR, F.C.	**6256648**		1

0.659 PULLEY ASSY.—BALANCER ASSY., Crankshaft

60-67	CORVAIR (exc. P.G., H/Per., 4/1BC, Turbocharger, Air Cond., A.I.R.)	**3848368**	(stamped 3848368)	1
64-66	CORVAIR w/Air Cond. (1st design)	**3838403**	($6^{1}/_{8}$ O.D.)	1
66	CORVAIR w/Air Cond. (2nd design) (exc. A.I.R.),			
67	CORVAIR w/Air Cond., A.I.R.	**3891556**	($5^{35}/_{64}$ O.D.)	1
66-69	CORVAIR w/A.I.R.	**3888118**		1
64-67	CORVAIR w/H/Per., P.G., Air Cond.,			
68-69	CORVAIR (exc. 4/1BC)	**3850971**	**BALANCER ASSY.**, harmonic	1
64-66	CORVAIR w/Sp. H/Per., Turbo.,			
64-68	F.C.,			
68-69	CORVAIR w/4/1BC	**3851262**	**BALANCER ASSY.**, harmonic (letter "C" stamped on face)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit

0.662 BOLT—WASHER, Crankshaft Pulley

64-67	CORVAIR w/A.I.R., Air Cond.	2400941	crankshaft pulley to crankshaft bolt ($1\frac{1}{2}$"—20 x $1\frac{3}{4}$")—(5.812)	1
60-67	CORVAIR, F.C.	3769664	**WASHER,** attaching ($\frac{35}{64}$ I.D. x $1\frac{7}{16}$ O.D. x $\frac{5}{16}$ thk.)	1

0.666 FLYWHEEL ASSY.—PLATE—REINFORCEMENT

60-63	CORVAIR, F.C. (exc. P.G.)	3839670	(6—$\frac{5}{16}$ dia. holes around edge)	1
64-69	CORVAIR, F.C. (exc. P.G.)	3851807	(6—$\frac{5}{16}$ dia. holes around edge)	1
60-63	CORVAIR, F.C. w/P.G.	6256814	**PLATE,** torque converter flex	1
64-69	CORVAIR, F.C. w/P.G.	3829738	**PLATE,** torque converter flex	1
60-69	CORVAIR, F.C. (exc. P.G.)	3832718	**REINFORCEMENT,** flywheel	1

0.669 BOLT, Flywheel and Torque Converter

60-69	CORVAIR, F.C. (exc. P.G.)	6256585	flywheel attaching (hex. $\frac{11}{32}$—24 x 1)	6
60-69	CORVAIR, F.C. w/P.G.	6256043	torque converter flex. plate (hex. $\frac{11}{32}$—24 x $\frac{3}{4}$) (300-M Steel)	6

0.677 GASKET—SEAL ASSY., Flywheel and Clutch Housing

60-69	CORVAIR, F.C.		clutch,	
61-69	CORVAIR, F.C. w/P.G.	6255808	flywheel (11 holes)	1
60-69	CORVAIR, F.C.	3851853	**SEAL ASSY.,** clutch housing and flywheel housing	1

0.683 *HOUSING ASSY., Flywheel and Clutch*

60-63	CORVAIR, F.C. w/P.G.	3851798	flywheel (Note 1, 2)	1

NOTE 1 May be identified by casting No. 3832517 painted over with blue paint.
NOTE 2 When using 3851798 in place of 6255807 on 1960 models it is necessary to discard front oil slinger and snap ring.

60-63	CORVAIR, F.C.	3851797	clutch (Note 3, 4)	1

NOTE 3 May be identified by casting No. 3832176 painted over with blue paint.
NOTE 4 When using 3851797 in place of 6256582 on 1960 models it is necessary to discard front oil slinger and snap ring.

64	CORVAIR, F.C. w/P.G. (1st design) (exc. *Turbocharger*)	3832516	flywheel	1
64-69	CORVAIR, F.C. (exc. P.G.)	3850975	clutch (Ident. No. 3832176)	1
64-66	CORVAIR, F.C. w/P.G. (2nd design),			
67-69	CORVAIR w/P.G.	3850976	flywheel (Ident. No. 3832517)	1

0.686 COVER, Flywheel Housing Access Hole

60-69	CORVAIR, F.C. w/P.G.	6255601	($3\frac{1}{8}$ O.L.)	1

0.728 GEAR—GASKET, Crankshaft

60-63	CORVAIR, F.C.	3780594	(6 holes—26 teeth)	1
64-66	*CORVAIR, F.C. (exc. 4/1BC),*			
65-66	CORVAIR (exc. 4/1BC w/P.G.),			
67	CORVAIR,			
68-69	CORVAIR (exc. 4/1BC w/P.S.)	3847972	(6 holes-26 teeth) (Note 1)	1

NOTE 1 Identified by $\frac{1}{4}$ drill mark on bolt circle between two flywheel attaching bolt holes.

65-66	CORVAIR (4/1BC w/P.G.),			
68-69	CORVAIR w/P.G.	3885399		1
60-69	CORVAIR, F.C.	3859585	**GASKET,** crankshaft gear	2

0.736 GEAR, Camshaft Timing

60-69	*CORVAIR, F.C.*	6256610	*driven (26 teeth-cast 6255610)*	1

0.787 ROD—CLIP—PIN—SWIVEL, Clutch Fork Release

60-64	CORVAIR	6256460	fork pull ($21\frac{3}{8}$ O.L.—$\frac{3}{8}$—32 thd.)	1
61-62	F.C. (2nd design)	3786914	fork pull	1
63-65	F.C.	3827690	fork pull	1
65-69	CORVAIR	3870139	fork pull	1
60-69	CORVAIR, F.C.	3749084	**CLIP,** fork pull rod swivel—(4.037)	1
60-69	CORVAIR, F.C.	3738054	**PIN,** fork pull rod (engine end) ($\frac{3}{8}$ dia.-$1\frac{1}{2}$ long)	1
60-69	CORVAIR	3764588	**SWIVEL,** fork push rod ($1\frac{1}{4}$ O.L.) ($\frac{3}{8}$—32 thd.)	1
65-69	CORVAIR	3870176	**SWIVEL,** cable pull rod	1

0.795 FORK ASSEMBLY, Clutch Release

60-69	CORVAIR, F.C.	3829808		1

0.796 STUD, Clutch Fork

60-69	CORVAIR, F.C.	3850567	ball ($\frac{7}{16}$"—20 w/$\frac{11}{16}$" diameter ball)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

0.797 BOOT—PLUG, Clutch Fork

65-68	CORVAIR	3869807	control rod	1
69	CORVAIR	3953568	control rod	1
60-69	CORVAIR, F.C.	3838499	**PLUG,** clevis pin access hole (aluminum—$^{15}/_{16}$ O.D.)	1

0.799 BEARING ASSEMBLY, Clutch Release

60-63	CORVAIR, F.C.,			
64	F.C. (1st design)	907052	($1^{21}/_{64}$ long) (ND CT 24H)	1
64-69	CORVAIR,			
64-65	F.C. (2nd design)	907963	($1^{7}/_{32}$" O.L.) (ND HCT 24K)	1

0.805 SEAL—SHAFT, Clutch Throwout Bearing

60	CORVAIR (exc. MONZA)	3853984	release, outer—(4.203)	1
60-63	CORVAIR, F.C.	6256804	**SEAL ASSY.,** release, inner	1
64-69	CORVAIR, F.C.	3885295	**SEAL ASSY.,** release, inner	1
60-69	CORVAIR, F.C.	3841371	**SHAFT,** release	1

0.829 SEAL—SHIELD—BRACKET—BUMPER, Clutch and Brake Pedal (FOR COVERS see group 4.630)

61-65	F.C.	3748022	lower ($1^{1}/_{2}$" I.D. x $2^{17}/_{64}$" O.D. x $^{1}/_{16}$" thick)—(4.260)	A.R.
61-65	F.C.	3748023	upper ($^{5}/_{16}$" I.D. x $2^{17}/_{64}$" O.D. x $^{1}/_{4}$" thick)—(4.260)	A.R.
65	CORVAIR	3859868	connecting rod dust shield	1
60-62	CORVAIR, F.C.,			
63	CORVAIR	3781220	**SEAL ASSY.,** clutch control rod duct, w/bracket (Note 1)	1
	NOTE 1 Bend bracket if interference is encountered with exhaust pipe on any model except F.C.			
63-65	F.C.	3827688	**SEAL ASSY.,** clutch control rod duct w/bracket	1
65-69	CORVAIR	3859494	**SHIELD,** cont. rod dust	1
60-64	CORVAIR	6256449	**BRACKET,** clutch pedal bumper	1
61-65	F.C.	3779432	**BUMPER,** brake pedal	1
61-65	F.C.	3715250	**BUMPER,** clutch pedal	1
67	CORVAIR	3914812	**BUMPER,** brake pedal	1

0.830 PEDAL, Clutch (For Clutch Pedal Pads see group 4.630)

60-64	CORVAIR	3777491	w/bracket	1
61-65	F.C.	3771985	lower half	1
61-65	F.C.	3771984	upper half	1
65-66	CORVAIR	3859471		1
67-69	CORVAIR	3901345		1

0.831 BUSHING—BEARING, Clutch Pedal

60-68	CORVAIR (exc. F.C.)	3798256	($^{3}/_{8}$")—(4.626)	2
61-65	F.C.	3720800	($^{7}/_{8}$" I.D. x $^{37}/_{64}$" O.L.)—(4.626)	2
65-69	CORVAIR	3859478	**BEARING,** shaft	1

0.833 SHAFT, Clutch Pedal

61-65	F.C.	3719611	($^{7}/_{8}$" x $2^{7}/_{8}$")—(4.634)	1
65-66	CORVAIR	3859474		1
67-68	CORVAIR	3901344		1
69	CORVAIR	3955154		1

0.837 SPACER—RETAINER, Clutch Bearing Shaft

60-69	CORVAIR, F.C.	3841373	release ($^{7}/_{8}$ I.D.)	1
61-65	F.C.	3712797	**RETAINER,** pedal shaft—(4.634)	1

0.841 BOLT, Clutch Pedal Adjusting

Not required in this group.
See group 4.637 3763877
Not required in this group
See group 4.637 3814688

0.844 SPRING, Clutch Pedal Pull Back

60-64	CORVAIR	6257817	lever control cable return	1
60-61	CORVAIR (exc. F.C.)	6257816	pedal assist. (Note 1)	1
	NOTE 1 May not be necessary on late design 1961 models.			
61-65	F.C.	3653114	pedal return	1
61-65	F.C.	3655655	control return	1
65-69	CORVAIR	3870179	lever control cable return	1

0.846 EXTENSION—BRACKET, Clutch Pedal Pull Back Spring

62-65	F.C.	3783182	clutch pedal return spring.	1
62-65	F.C.	3783184	**BRACKET**	1
63-65	F.C.	3827695	**BRACKET,** pull back spring clevis	1
65-69	CORVAIR	3870149	**BRACKET,** control cable return spring	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

0.851 STUD—SEAL—SEAT—SPRING—WASHER—BUSHING, Clutch Pedal Intermediate Lever Shaft Ball

60-69	CORVAIR	3898610	left, lever control cable cross shaft	1
60-64	CORVAIR	3866568	right, lever control cable cross shaft	1
65-69	CORVAIR	3859488	cont. cbl., shaft ball	R.H.
65-69	CORVAIR	1354671	**SEAL,** ball stud dust	1
60-69	CORVAIR	3743349	**SEAT,** lever control cable cross shaft ($^{7}/_{8}$" dia.)	2
60-69	CORVAIR	3750696	**SPRING,** left, lever control cable cross shaft ball stud seat retainer (1" O.D.)	1
60-64	CORVAIR	3743355	**WASHER,** right, lever control cable cross shaft ball stud dust shield	1
60-69	CORVAIR	3743360	**WASHER,** left, lever control cable cross shaft ball stud dust seal ($^{9}/_{16}$" I.D. x $1\,^{5}/_{8}$" O.D.)	1
61-64	F.C.	3827693	**BUSHING,** clutch control cable (Note 1)	1

NOTE 1 May not be necessary on early design models.

0.852 SHAFT ASSY.—BRACKET—REINFORCEMENT—INSULATOR—BOLT—GROMMET—SUPPORT ASSY., Clutch Pedal Intermediate

60	CORVAIR	6256457	lever control cable, cross	1
61-64	CORVAIR	3779086	lever control cable, cross	1
65-69	CORVAIR	3878061	lever control cable cross	1
61-63	CORVAIR	3816513	**BRACKET,** cross shaft mtg.	1
63-65	F.C.	3827691	**BRACKET,** control cable rear	1
65-69	CORVAIR	3878063	**BRACKET,** control cable cross shaft mtg.	1
65-68	CORVAIR	3859491	**REINFORCEMENT,** cross shaft mtg. brkt. underbody	1
65-69	CORVAIR	3859490	**INSULATOR,** cross shaft mtg. brkt.	1
65-69	CORVAIR	3851264	**INSULATOR,** lever control cable—(4.067)	1
61-69	CORVAIR	3785824	**BOLT,** cross shaft mtg. brkt. ($^{5}/_{16}$—18 x $1\,^{7}/_{32}$)	3
61-69	CORVAIR	3785826	**GROMMET,** cross shaft mtg. brkt. ($^{7}/_{16}$)	3
60-64	CORVAIR	3812987	**SUPPORT ASSY.,** clutch pedal shaft ($1\,^{51}/_{64}$ x $^{43}/_{64}$)	1

0.854 CLEVIS ASSY.—CABLE ASSY.—GROMMET—CLAMP, Clutch Pedal Control

60-64	CORVAIR	6257640	cable, adjustable rod end ($^{5}/_{16}$)	1
61-65	F.C.	3780838	clutch fork intermediate pull rod	1
60-64	CORVAIR	6256455	**CABLE ASSY.** (108$^{1}/_{2}$ O.L.)	1
61-65	F.C.	3827692	**CABLE ASSY.,** (123$^{1}/_{2}$ ctr. to ctr. of end holes)	1
65-68	CORVAIR	3908320	**CABLE ASSY.,** lever control	1
69	CORVAIR	3950297	**CABLE ASSY.,** lever control	1
61-65	F.C.	3838273	**GROMMET,** cable outrigger—(9.775)	1
61	F.C.	3758174	**CLAMP,** cable—(4.790)	4

0.855 PULLEY ASSY.—BRACKET ASSY.—SPACER—GUIDE—BOLT—CLIP—RETAINER, Clutch Control Cable

60-64	CORVAIR	3780323	used at floor panel, dash panel, brake main cylinder supports	A.R.
65-69	CORVAIR	3859480	clutch cable (used at floor panel)	1
60-63	CORVAIR	3777090	**BRACKET ASSY.,** clutch pedal pulley—(4.790)	1
61-65	F.C.	3781991	**BRACKET ASSY.,** front control cable	1
60-64	CORVAIR	6257651	**SPACER,** pulley at floor panel	1
60-64	CORVAIR	6257714	**GUIDE,** pulley binding, pulley travel	1
63-65	F.C.	3827694	**GUIDE**	1
60-64	CORVAIR	6257650	**BOLT,** pulley at flr. pnl. ($^{5}/_{16}$—18 x $1\,^{29}/_{32}$)	1
60-62	CORVAIR	3812884	**BOLT,** attaching pulley at brake main cyl. support (shoulder—$^{5}/_{16}$—18 x $1\,^{5}/_{8}$)	1
61-65	F.C.	3780832	**CLIP**	1
65-69	CORVAIR	3899038	**RETAINER,** clutch and brake cbl.	1
65-69	CORVAIR	3866575	**RETAINER,** clutch lever cable cross shaft	R.H.

0.859 PLATE ASSY., Clutch Pressure, with Cover

60-61	CORVAIR,			
62-63	CORVAIR (exc. H/Per., Turbocharger)	3787882	diaphragm type, w/starter ring gear ($9\,^{9}/_{32}$) (Note 1)	1

NOTE 1 When using on 1960-61 models it is mandatory to remove clutch pedal assist spring 6257816 (0.844).

61-63	F.C.	3777875	w/starter ring gear	1
62-63	CORVAIR w/H/Per., Turbocharger	3824044	w/starter ring gear	1
64-69	CORVAIR w/Turbocharger, 4/1BC	3829806	w/starter ring gear	1
64-69	CORVAIR (exc. Turbocharger, 4/1BC),			
64-65	F.C. (2nd design) (exc. H/Per.),			
64-65	F.C. w/H/Per.	3844132	w/starter ring gear (Bent diaphragm springs)	1
64	F.C. (1st design) (exc. H/Per., P.G.)	3847774	w/starter ring gear (flat diaphragm springs)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

0.861 COVER, Clutch

60-61	CORVAIR (1st design)	**6257954**	w/spring and ring gear	1
61-63	CORVAIR (2nd design) (exc. H/Per., Turbocharger)	**3788055**	w/spring and ring gear	1
61-63	F.C.	**3777876**	w/spring and ring gear	1
64-69	CORVAIR,			
64-65	F.C.	**3829807**	w/spring and ring gear	1

0.862 BOLT, Clutch Pressure Plate and Cover

60-69	CORVAIR, F.C.	**838653**	($^{3}/_{8}$"—15 x 1)	A.R.
60-69	CORVAIR, F.C.	**3829810**	cover, pressure plate and starter ring gear attaching ($^{5}/_{16}$"—18 x $^{3}/_{4}$")	6
60-69	CORVAIR, F.C.	**3702403**	($^{5}/_{16}$"—18 x $^{7}/_{8}$")—(0.864)	3
69	CORVAIR	**3962058**	retracting spring ($^{5}/_{16}$"—18 x $^{29}/_{32}$" hex.)—(0.864)	A.R.

0.863 PLATE, Clutch Pressure

61-63	CORVAIR (2nd design) (exc. H/Per., Turbocharger)	**3788058**	(cast 3788058)	1
62-63	CORVAIR w/H/Per. Turbocharger,			
64-66	CORVAIR w/Turbocharger, 4/1BC,			
68-69	CORVAIR w/4/1BC	**3824047**	(cast 3824047) (6 cast lugs on O.D.) (Note 1)	1

NOTE 1 It may be necessary to use six washers ($^{1}/_{8}$" thick) as spacers between flange of cover and flywheel.

64-69	CORVAIR, F.C. (exc. Turbocharger, 4/1BC)	**3876167**	($9^{9}/_{32}$" O.D.) (cast 3788659)	1

0.864 SPRING—BOLT, Clutch Pressure Plate

60-61	CORVAIR (1st design),			
61-63	F.C.	**6257080**	retracting ($^{9}/_{32}$ thk.) (marked blue on ends)	3
61-69	CORVAIR (2nd design),			
64-65	F.C.	**3788059**	retracting ($^{9}/_{32}$ thk.)	2
60-68	CORVAIR, F.C.	**3702403**	**BOLT,** retracting spring ($^{5}/_{16}$"—18 x $^{7}/_{8}$") to attach. clutch cover	3
69	CORVAIR	**3962058**	**BOLT,** retracting spring ($^{5}/_{16}$"—18 x $^{29}/_{32}$" hex.)	A.R.

0.886 DISC—PLATE ASSY., with Facing, Clutch

60-69	CORVAIR,			
61-65	F.C.	**3888000**		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 1.000

COOLANT—GRILLE

OIL SYSTEMS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

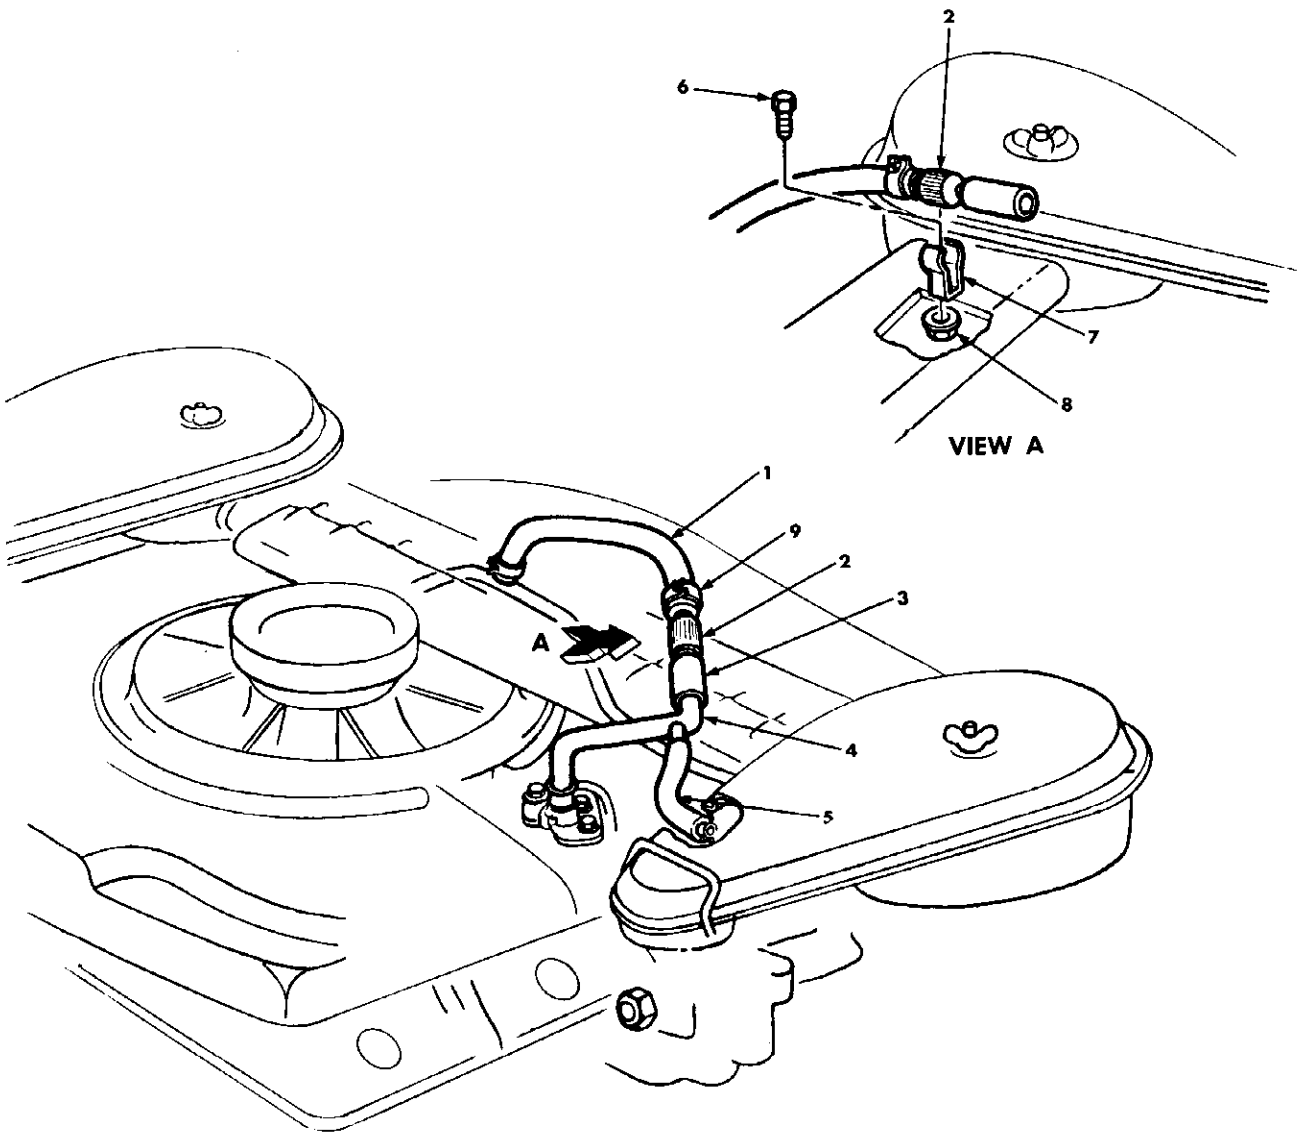

1961-63 CORVAIR--A/C CRANKCASE VENTILATION

1.	1.762	HOSE	6.	8.913	SCREW (10–24 x 1/2)
2.	1.745	VALVE ASSY.	7.	1.750	CLAMP
3.	1.762	HOSE	8.	N.L.	NUT
4.	1.762	TUBE ASSY.	9.	1.750	CLAMP
5.	1.762	HOSE			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

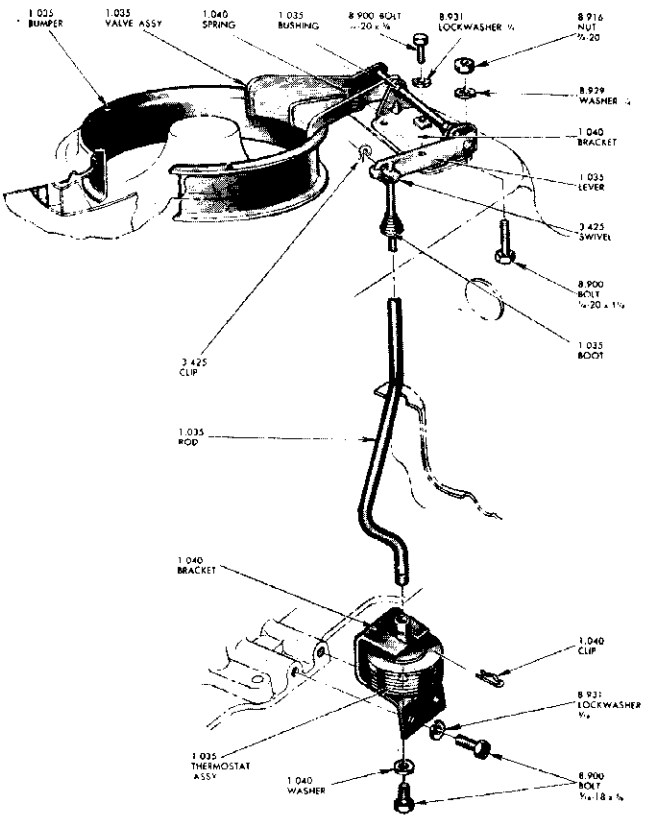

1960 CORVAIR AIR THROTTLE VALVE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

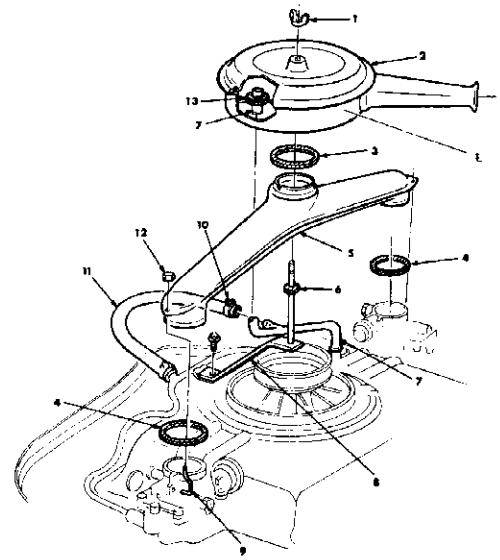

1965-67 CORVAIR—CLOSED POSITIVE VENTILATION (EXC. 4 CARB., TURBO.)

1.	8.920	WING NUT (1/4–20)	
2.	3.402	AIR CLEANER	6419705
3.	3.403	GASKET	3708408
4.	3.403	GASKET	3845685
5.	3.417	TUBE ASSEMBLY	3856700
6.	3.403	GASKET	5646135
7.	1.762	TUBE ASSEMBLY	3845686
8.	3.407	SUPPORT ASSEMBLY	3845683
9.	3.407	J BOLT	3845682
10.	1.750	CLAMP	3829058
11.	8.962	HOSE	
12.	8.917	LOCK NUT (#10–24)	
13.	1.745	GROMMET	3851855

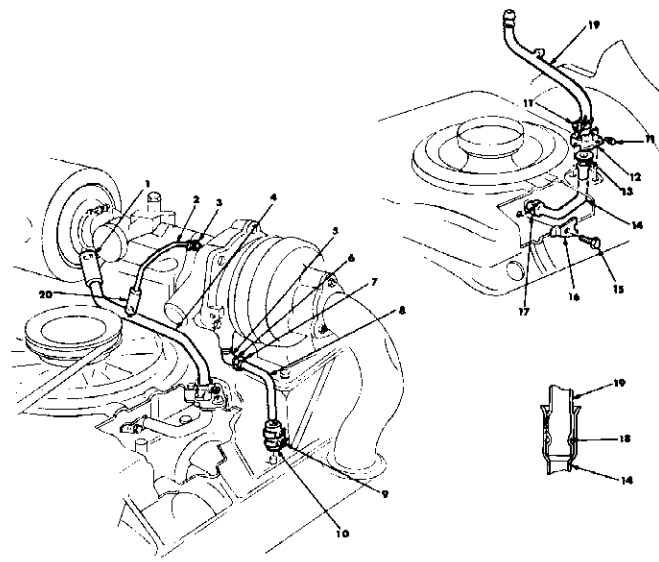

1965-66 CORVAIR—CLOSED POSITIVE VENTILATION (TURBO.)

1.	1.762	HOSE	3828380
2.	1.762	PIPE ASSEMBLY	3832343
3.	N.L.	CONNECTOR	
4.	1.762	PIPE ASSEMBLY	3832344
5.	8.963	ELBOW (90°)	
6.	N.S.S.	SLEEVE	
7.	8.963	NUT (5/8 x 13/16–18)	
8.	3.358	PIPE	3817266
9.	1.166	CLAMP (1965)	9421062
10.	N.S.	HOSE	
11.	8.977	SCREW HEX (#10–12 x 1/2)	
12.	1.750	CLAMP	3830641
13.	1.745	GASKET	3831574
14.	1.762	TUBE	3830640
15.	8.900	BOLT (5/16–18 x 3/4)	
16.	1.750	CLAMP	6257098
17.	1.745	"O" RING	3849320
18.	1.745	"O" RING	3819252
19.	1.762	TUBE ASSEMBLY	3845686
20.	1.762	HOSE ASSEMBLY	3815458

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

©1989 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

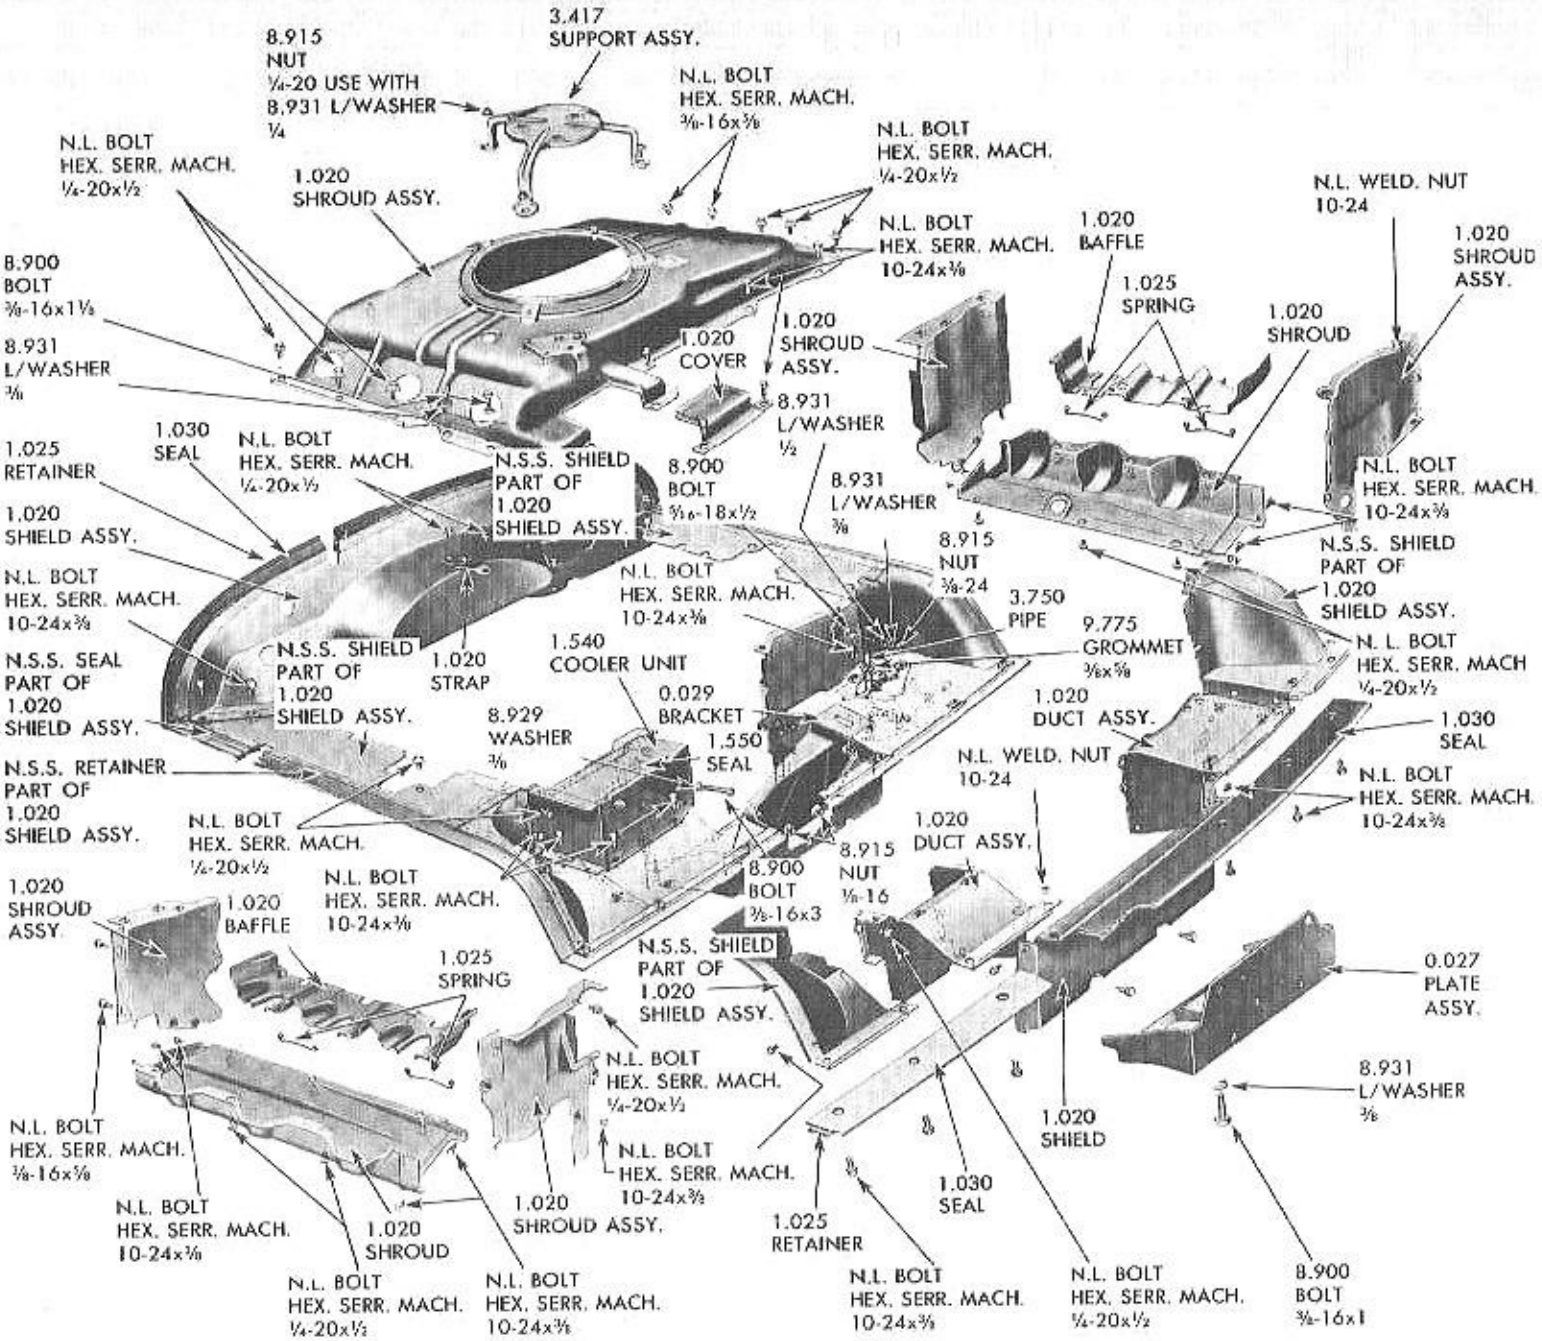

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

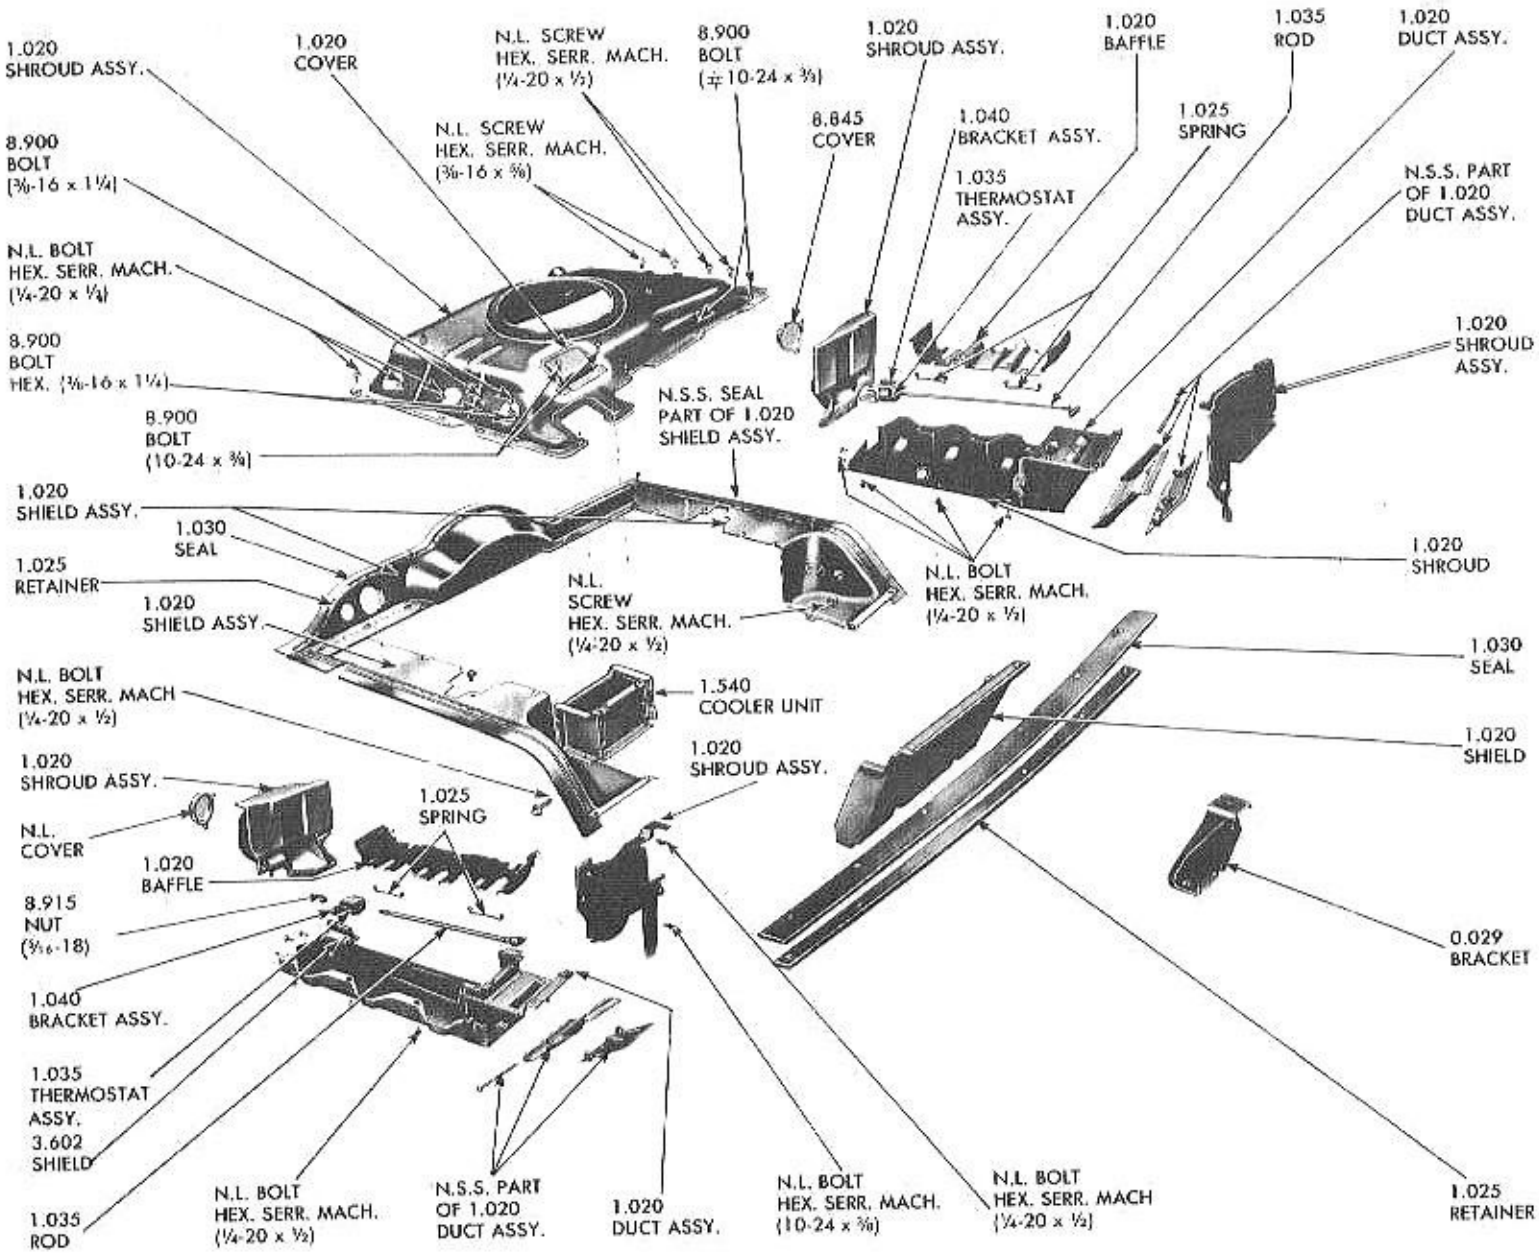

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

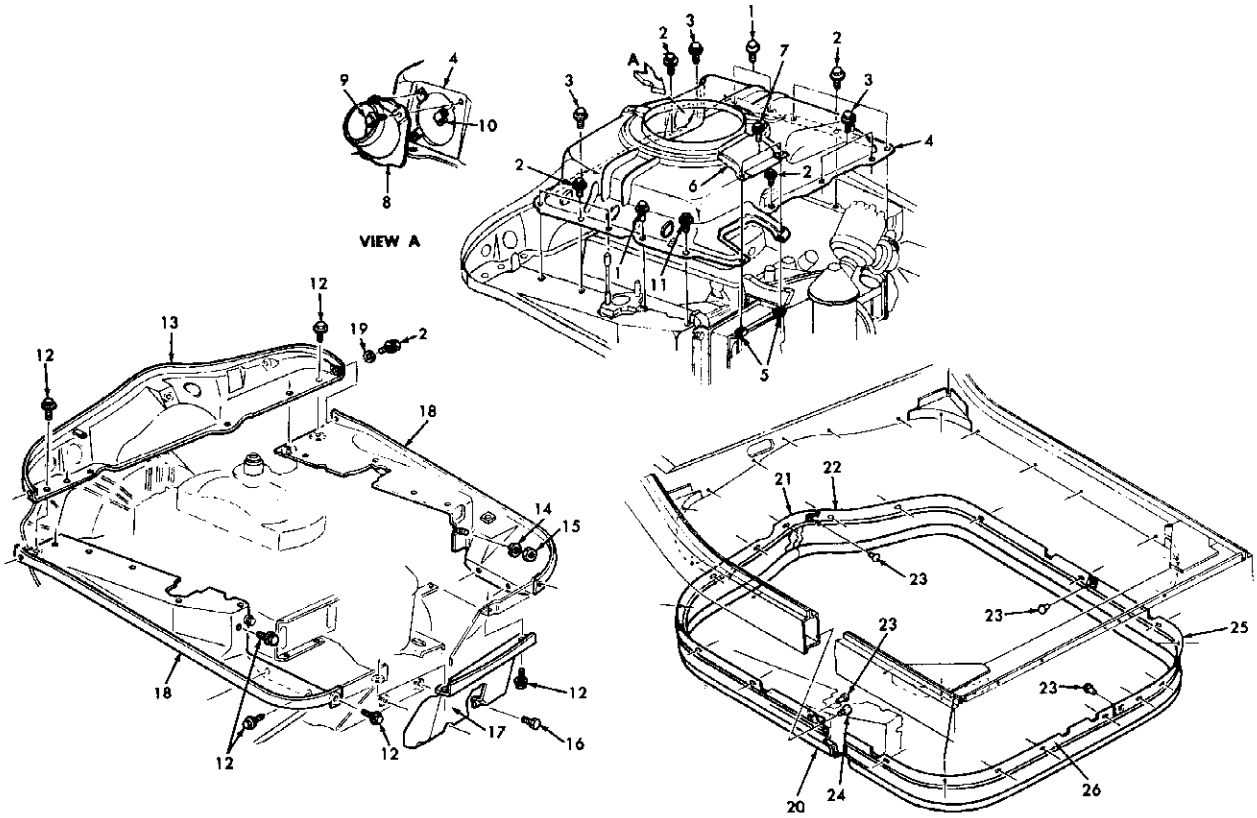

1965-69 CORVAIR—ENGINE SHROUDS

1.	8.900	BOLT (3/8–16 x 5/8)
2.	8.900	BOLT (1/2–20 x 1/2)
3.	8.900	BOLT (10–24 x 3/8)
4.	1.020	SHROUD ASSY.
5.	N.L.	"U" NUT
6.	1.020	COVER
7.	8.977	SCREW HEX (#10–12 x 1/2)
8.	9.782	CONNECTOR
9.	8.977	SCREW (#10–16 x 5/8)
10.	8.921	"J" NUT
11.	8.900	BOLT (3/8–16 x 1-1/8)
12.	8.900	BOLT (1/4–20 x 1/2)
13.	1.020	SHIELD ASSY.
14.	8.931	L/WASHER (3/8 Med.)
15.	0.626	NUT
16.	8.900	BOLT (10–24 x 3/8)
17.	1.020	SHIELD
18.	1.020	SHIELD ASSY.
19.	8.929	L/WASHER (1/2)
20.	1.030	SEAL ASSY.
21.	1.287	RETAINER–LH★
22.	1.287	RETAINER–RH★
23.	N.L.	RIVET (3/16 x 1/4)
24.	8.977	SCREW HEX (#8–18 x 1/2)
25.	1.287	RETAINER–RH★
26.	1.287	RETAINER–LH★

★NOTE: Removed from service.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

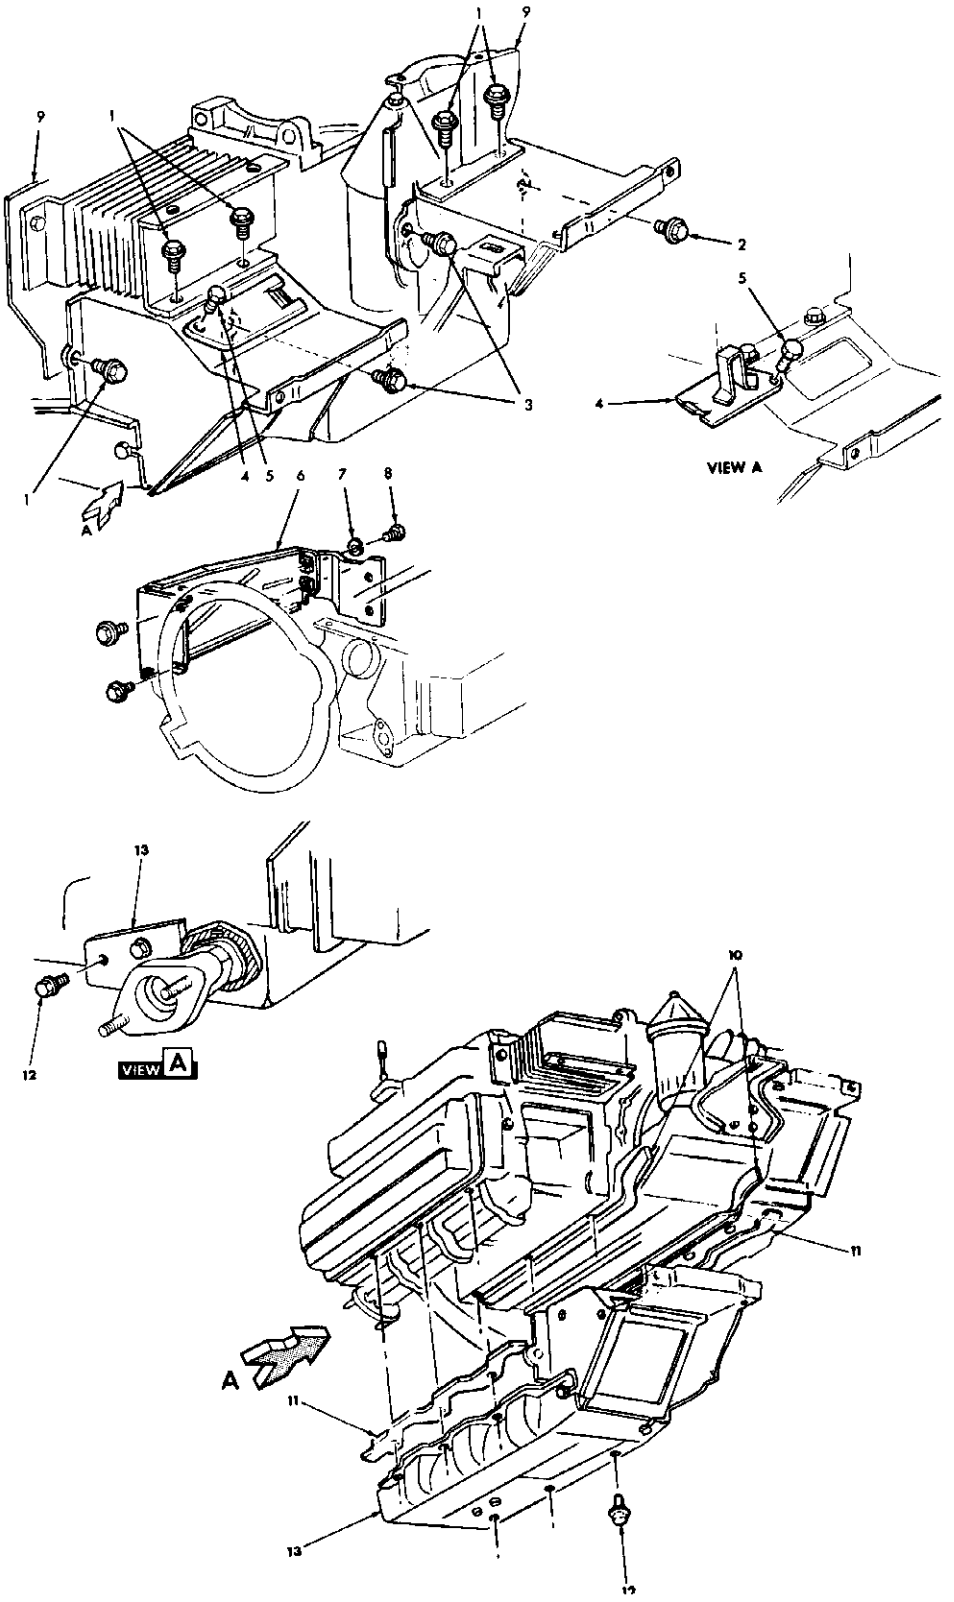

1965-69 CORVAIR—EXHAUST DUCTS & ROCKER COVER HEAT SHIELDS

1.	8.900	SCREW (1/4—20 x 1/2)		8.	8.900	BOLT (1/4—20 x 1/2)	
2.	8.900	BOLT (3/8—16 x 5/8)		9.	1.020	SHROUD ASSY. . . . . (1965)	3851889
3.	8.900	SCREW (#10—24 x 3/8)			1.020	SHROUD ASSY. . . . . (1966-67)	3878571
4.	1.020	COVER—Turbocharger	3851972	10.	1.030	SEAL	3822936
5.	8.977	SCREW (#10—12 x 5/8)		11.	1.030	SEAL	3788090
6.	0.413	SHIELD ASSY.—Heat	3870294	12.	8.900	SCREW (1/4—20 x 1/2)	
7.	8.931	L. WASHER (1/4)		13.	1.020	SHROUD—Lower	3867813-14

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1.020 SHROUD—SHROUD ASSY.—SHIELD—SHIELD ASSY.—DUCT ASSY.—BAFFLE—COVER—STRAP—EXTENSION—ADAPTER—FLANGE, Engine Air Cooling

64-67	CORVAIR w/Air Cond. (exc. Sp. H/Per.),			
67	CORVAIR w/A.I.R. (2nd design) (exc. A/C),			
68	CORVAIR	3856687	eng. oil clr. end L.H. ($3^{5}/_{8}$ x $3^{9}/_{16}$)	1
64-67	CORVAIR w/Air Cond. (exc. Sp. H/Per..),			
67	CORVAIR w/A.I.R. (2nd design) (exc. A/C),			
68-69	CORVAIR	3856688	eng. oil clr. end ($3^{1}/_{32}$" x $3^{21}/_{32}$")	R.H.
67	CORVAIR w/A.I.R. (1st design) (exc. A/C)	3909433	eng. oil clr. end ($2^{21}/_{32}$" x $3^{21}/_{32}$")	L.H.
67	CORVAIR w/A.I.R. (1st design) (exc. A/C)	3909434	eng. oil clr. end ($2^{3}/_{32}$" x $3^{21}/_{32}$")	R.H.
61-63	CORVAIR, F.C.,			
64	CORVAIR (1st design) (exc. Turbocharger)	3794216	**SHROUD ASSY.**, upper (Notes 1, 2)	1

NOTE 1 It may be necessary to cut out a $1^{1}/_{8}$ dia. hole for oil level gauge.

NOTE 2 When using on Turbocharged engines it may be necessary to add $^{3}/_{4}$" slot to provide for attachment of Turbocharger.

61-69	CORVAIR, F.C. (exc. Turbocharger)	3867254	**SHROUD ASSY.**, frt. w/extension	R.H.
61-69	CORVAIR, F.C.	3785695	**SHROUD ASSY.**, rear	L.H.
61-64	CORVAIR, F.C.,			
65	F.C.	3798048	**SHROUD ASSY.**, rear	R.H.
61-69	CORVAIR, F.C.	3867253	**SHROUD ASSY.**, front, w/extension (Note 3)	L.H.

NOTE 3 It may be necessary to cut a $^{3}/_{4}$" dia. hole in front shroud extension assy. to accommodate temp. switch.

61-69	CORVAIR, F.C.	3867813	**SHROUD ASSY.**, therm. and lower (Note 4)	L.H.
61-69	CORVAIR, F.C.	3867814	**SHROUD ASSY.**, therm. and lower (Note 4)	R.H.

NOTE 4 When using on 1961-64 models, it is necessary to also use Actuating Rod 3856794 and Damper Door Swivel 3856795.

62-63	CORVAIR w/Turbocharger	3817288	**SHROUD ASSY.**, front, w/extension	R.H.
64-66	CORVAIR w/Turbocharger	3867260	**SHROUD ASSY.**, frt. w/extension	R.H.
64-69	CORVAIR, F.C. (exc. Turbocharger)	3846194	**SHROUD ASSY.**, frt.	R.H.
64-66	CORVAIR w/Turbocharger)	3846196	**SHROUD ASSY.**, frt.	R.H.
64	CORVAIR	3851840	**SHROUD ASSY.**, upper	1
64	CORVAIR (exc. SPYDER) (2nd design),			
64-65	F.C.	3851838	**SHROUD ASSY.**, upper (Note 5)	1

NOTE 5. When using in place of 3851842, cut off approx. $1^{1}/_{16}$ at the oil cooler area and plug oil gauge hole with 4804861.

65-68	CORVAIR	3851952	**SHROUD ASSY.**, rear	R.H.
65-66	CORVAIR w/Turbocharger,			
65-68	CORVAIR w/Air Cond.	3928982	**SHROUD ASSY.**, upper	1
65-67	CORVAIR (exc. 4/1BC, Turbo., Air Cond., H.D. Air Cleaner, A.I.R.)	3878530	**SHROUD ASSY.**, upper	1
65-66	CORVAIR w/H.D. Air Cleaner (exc. 4/1BC, Turbocharger)	3878542	**SHROUD ASSY.**, upper	1
65	CORVAIR w/4/1BC (exc. Turbo.),			
66	CORVAIR w/Sp. H/Per.	3878534	**SHROUD ASSY.**, upper	1
67-69	CORVAIR (exc. 4/1BC)	3928981	**SHROUD ASSY.**, upper	1
68-69	CORVAIR w/4/1BC	3927756	**SHROUD ASSY.**, upper	1
61-65	F.C.	3774394	**SHIELD**, side rear	1
61-63	CORVAIR, F.C. (exc. C.A.C.)	3786173	**SHIELD**, rear center	1
65-69	CORVAIR	3867221	**SHIELD**, rear ctr.	1
61-63	CORVAIR w/C.A.C.,			
64	CORVAIR, F.C.,			
65	F.C.	3781974	**SHIELD**, rear center	1
61-65	F.C.	3774390	**SHIELD ASSY.**, side front	1
61-65	F.C.	3777524	**SHIELD ASSY.**, body to engine side	R.H.
61-64	CORVAIR, F.C. (exc. Turbo.),			
65	F.C.	3785682	**SHIELD ASSY.**, front	1
62-64	CORVAIR w/Turbocharger	3817258	**SHIELD ASSY.**, front	1
61-63	F.C.	3815410	**SHIELD ASSY.**, front upper	1
61-64	CORVAIR, F.C.	3852343	**SHIELD ASSY.**, side and rear	L.H.
61-64	CORVAIR, F.C.	3818802	**SHIELD ASSY.**, side and rear (Note 6)	R.H.

NOTE 6 When using on Turbocharged engine models it will be necessary to cut a $1^{1}/_{2}$" section from engine side Shield Assy. to provide for assy. of the Turbocharger, using old part as a guide.

64-65	F.C.	3848830	**SHIELD ASSY.**, front upper	1
65	CORVAIR w/4/1BC,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66	CORVAIR w/Air Cond.,			
66-67	CORVAIR w/4/1BC	**3878576**	**SHIELD ASSY.,** side	R.H.
65-69	CORVAIR (exc. 4/1BC)	**3878571**	**SHIELD ASSY.,** side	L.H.
65	CORVAIR (1st design) (exc. 4/1BC, Turbocharger)	**3851890**	**SHIELD ASSY.,** side	R.H.
65	CORVAIR (2nd design) (exc. 4/1BC, Turbocharger),			
66	CORVAIR (exc. 4/1BC, Turbo.),			
67	CORVAIR (1st design),			
67	CORVAIR (2nd design) (exc. A.I.R.)	**3878572**	**SHIELD ASSY.,** side	R.H.
65-69	CORVAIR (exc. 4/1BC, Turbocharger)	**3878522**	**SHIELD ASSY.,** front (Note 7)	1

NOTE 7 It may be necessary to tape the 1 1/2" holes not being used and also drill .88 dia. hole for diff. carrier dip stick using old part as guide.

65-66	CORVAIR w/Turbo.	**3878520**	**SHIELD ASSY.,** front	1
65-69	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	**3878575**	**SHIELD ASSY.,** side	L.H.
65-66	CORVAIR w/Turbo.	**3878580**	**SHIELD ASSY.,** side	R.H.
66-67	CORVAIR w/A.I.R. (exc. 4/1BC)	**3880763**	**SHIELD ASSY.,** engine side	1
66-67	CORVAIR (A.I.R., w/4/1BC)	**3880773**	**SHIELD ASSY.,** engine side	1
67	CORVAIR w/A.I.R. (2nd design),			
68-69	CORVAIR (exc. 4/1BC)	**3909458**	**SHIELD ASSY.,** side	R.H.
61-63	CORVAIR, F.C.,			
64	CORVAIR (exc. Turbo., C.A.C.)	**3797527**	**DUCT ASSY.,** exh., w/damper (less shroud and shield), (Note 8)	L.H.
61-64	CORVAIR, F.C.	**3797528**	**DUCT ASSY.,** exh., w/damper (less shroud and shield) (Notes 8 & 9)	R.H.

NOTE 8 When using on air conditioning models, cut off the baffle over the recirculation slot and transfer the sheet metal cover from the replaced part to cover the slot.

NOTE 9 When using on STA. WAG. or F.C. models, it will be necessary to cut out opening on top of duct and damper to provide for installation of the oil filler tube and also use No. 10—24 Nut for attachment of the tube.

64	CORVAIR w/C.A.C.,			
64	CORVAIR w/Turbocharger		**DUCT ASSY.,** exh., w/damper (less shroud and shield),	
64-65	F.C.	**3848345**	**L.H.**	1
65	CORVAIR (2nd design) (exc. 4/1BC, Turbo., Air Cond.)	**3867225**	**DUCT ASSY.,** exh. w/damper	L.H.
65-69	CORVAIR	**3867226**	**DUCT ASSY.,** exh. w/damper	R.H.
65-67	CORVAIR w/4/1BC,			
65-67	CORVAIR w/Prod. Air Cond.,			
67-69	CORVAIR w/A.I.R. (exc. C.A.C.)	**3875887**	**DUCT ASSY.,** w/damper	L.H.
65-66	CORVAIR w/H.D. Air Cleaner (exc. 4/1BC Turbo.)	**3867234**	**DUCT ASSY.,** cooling air inlet	1
65	F.C.	**3856714**	**DUCT ASSY.,** exh. w/damper	R.H.
66	CORVAIR (exc. Air Cond., 4/1 BC),			
67	CORVAIR (exc. Air Cond., A.I.R., 4/1BC),			
68	CORVAIR (exc. Air Cond.)	**3875881**	**DUCT ASSY.,** exh. w/damper	L.H.
60-69	CORVAIR, F.C.	**6255957**	**BAFFLE,** cylinder air (Note 10)	1

NOTE 10 Cut a 3/4" dia. hole on right hand baffle for ventilator tube.

60-63	CORVAIR, F.C.,			
64-67	CORVAIR (exc. Turbocharger, 4/1BC, C.A.C., A.I.R.)	**6257105**	**COVER,** upr. shroud oil cooler access hole	1
61	CORVAIR w/Air Cond. (exc. STA. WAG.),			
62	CORVAIR (exc. STA. WAG.),			
63-64	CORVAIR w/Custom Air Cond. (exc. Turbocharger),			
63-64	CORVAIR w/Turbocharger	**3816442**	**COVER,** cooling exhaust duct (Note 11)	A.R.

NOTE 11. Not used on 1962 Station Wagons. Two (2) used on all specified models (exc. Turbocharged eng.) as eng. cooling exhaust duct cover.

One (1) used on turbo-charged models as right hand engine cooling air exhaust dust cover.

62-64	CORVAIR	**7645222**	**COVER,** rear compartment panel reinforcement access hold (black plastic)—(12.941)	2
64-67	CORVAIR w/Custom Deluxe Air Cond.,			
64-67	CORVAIR w/4/1BC, Turbocharger,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

67	CORVAIR w/A.I.R. (exc. C.A.C.),			
64-65	F.C.,			
68-69	CORVAIR	**3848396**	**COVER,** upr. shroud oil cooler access hole	1
64	CORVAIR w/C.A.C.,			
64	CORVAIR w/Turbocharger	**3849055**	**COVER,** cooling air exhaust duct	L.H.
65-66	CORVAIR w/Air Cond.,			
67	CORVAIR w/Air Cond. (exc. A.I.R.)	**3851972**	**COVER,** cooling exh. duct	1
67	CORVAIR (Air Cond. w/A.I.R.),			
68-69	CORVAIR	**3909428**	**COVER,** cooling exh. duct	1
67-68	CORVAIR w/A.I.R. (exc. Air Cond.)	**3909432**	**COVER,** exh. duct	1
62-66	CORVAIR w/Turbocharger	**3786313**	**STRAP,** upper shroud to frt. shield	1
61-65	F.C.	**3777528**	**EXTENSION,** body to engine side shield	1
65-66	CORVAIR w/H.D. Air Cleaner	**3891557**	**ADAPTER,** cool air inlet duct to plenum (2 holes 1" dia.) (Note 12)	1

NOTE 12. When using 3891557 in place of 3856660 rework Voltage Regulator mtg. holes using old part as a guide.

65-69	CORVAIR	**3867222**	**FLANGE,** rear ctr. shield	1

1.025 RETAINER—SPRING—PLUG—SCREW, Engine Air Cooling Shrouding

60-63	CORVAIR, F.C. (exc. C.A.C.)	**6257440**	rear shield seal	1
60-64	CORVAIR (exc. STA. WAG.)	**6256425**	body to engine side seal to skirt	L.H.
60-64	CORVAIR (exc. STA. WAG.)	**6256426**	body to engine side seal to skirt	R.H.
61-64	CORVAIR, F.C.,			
65	F.C.	**3856606**	front shield seal, rear	1
61-64	CORVAIR, F.C.,			
65	F.C.	**3785134**	front shield seal, upper (Note 1)	1

NOTE 1 It may be necessary to cut approx. $^{7}/_{16}$ of an inch from left hand side when held in engine position.

61-63	CORVAIR w/C.A.C.,			
64	CORVAIR, F.C.,			
65	F.C.	**3785301**	rear shield seal	1
61-63	CORVAIR w/C.A.C.,			
64	CORVAIR, F.C.,			
65	F.C.	**3785302**	rear shield seal, center	1
61-65	F.C.	**3774393**	side shield seal, lower	1
61-65	F.C.	**3777527**	rear shield seal to underbody	1
61-65	F.C.	**3777530**	body to engine side shield seal	R.H.
65-66	CORVAIR w/H.D. Air Cleaner	**3856667**	air inlet duct adap. seal	1
60-69	CORVAIR, F.C.	**6256386**	**SPRING,** cylinder air baffle retaining	4
60	CORVAIR	**1178365**	**PLUG,** trans. filter tube, vac. modulator pipe hole—(12.981)	1
61-65	F.C. (exc. P.G.)	**3796379**	**PLUG,** front upper shield (carb. cross shaft rod hole) (2" dia. hole) (Note 2)	1

NOTE 2 No comparable part used for early design 1961 models.

61-64	CORVAIR, F.C. (exc. P.G.),			
65	F.C.	**432589**	**PLUG,** trans. oil filler—$2^{1}/_{2}$" dia. hole (frt. shield)—(8.970)	1
60-63	CORVAIR, F.C.	**3780162**	**SCREW** (10—24 x $^{3}/_{8}$)	A.R.

1.030 SEAL—GASKET—PAD, Engine Shield

60-63	CORVAIR, F.C. (exc. C.A.C.)	**3798628**	rear shield	1
61-63	CORVAIR w/C.A.C.,			
64	CORVAIR, F.C.,			
65	F.C.	**3851835**	rear shield	1
61-64	CORVAIR, F.C.,			
65	F.C.	**3851833**	front shield	1
61-68	CORVAIR, F.C.	**3822936**	lower shroud and skid plate seal	2
61-64	CORVAIR, F.C.,			
65	F.C.	**3787857**	front shield to crankcase	1
61-69	CORVAIR, F.C.	**3788090**	lower shroud to cyl. head, L.H. (Note 1)	A.R.

NOTE 1. When used on left hand side, cut as required.

61-65	CORVAIR, F.C.	**3795648**	rear center shield and skid plate	1
61	CORVAIR, F.C.	**3840021**	frt. lwr. shroud, left, to crankcase—(9.260)	1
65-69	CORVAIR	**3888806**	body	1
65-66	CORVAIR w/H.D. Air Cleaner (exc. 4/1BC, Turbo.)	**3867232**	air inlet duct to duct adapter	1
61-62	CORVAIR, F.C.	**3786798**	**GASKET,** exhaust mfld. to lwr. shroud—(3.611)	1
65-66	CORVAIR w/H.D. Air Cleaner	**3856669**	**PAD,** air inlet duct anti-rattle	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

1.035 SWIVEL—DAMPER ASSY.—LEVER—BUMPER—THERMOSTAT ASSY.—ROD—CLIP—PIN, Engine Air Cooling Control

60-64	CORVAIR, F.C.	**3711199**	air thermostat—(3.425)	1
65	F.C.		air thermostat actuator rod.	
65-69	CORVAIR	**3856795**	air thermostat actuator rod at bracket	2
61-69	CORVAIR, F.C.	**3816382**	**DAMPER ASSY.**, air exhaust duct	R.H.
61-64	CORVAIR, F.C.,			
65-69	CORVAIR	**3816381**	**DAMPER ASSY.**, air exhaust duct	L.H.
60	CORVAIR	**6257945**	**BUMPER**, air throttle valve	2
60	CORVAIR	**3146491**	**THERMOSTAT ASSY.**, air	1
61-62	CORVAIR w/C.A.C.,			
61-64	CORVAIR, F.C.,			
62	CORVAIR w/Turbocharger,			
64-66	CORVAIR w/Custom Air Cond.,			
65-69	CORVAIR	**3156432**	**THERMOSTAT ASSY.**, air (yellow stripe)	1
61-64	CORVAIR, F.C.	**3781941**	**ROD**, air thermostat actuating	2
65-69	CORVAIR, F.C.	**3856794**	**ROD**, air therm. actuating	2
60-69	CORVAIR, F.C.	**3711177**	**CLIP**, actuating rod—(3.425)	1
60	CORVAIR	**1455017**	**CLIP**, thermo. actuating rod to air throttle valve arm—(3.425)	1
61-69	CORVAIR, F.C.	**3782000**	**PIN**, air exhaust duct damper hinge	1

1.040 BRACKET—CLIP, Engine Air Cooling Control

61-64	CORVAIR, F.C.	**3830428**	air thermostat mounting	2
65-69	CORVAIR, F.C.	**3856793**	air thermostat mtg.	2
60	CORVAIR	**3768258**	**CLIP**, air thermostat actuating rod to thermostat	1

1.060 BRACKET ASSEMBLY—GUIDE—STUD—WASHER—BEARING ASSY.—COVER, Blower Belt Idler Pulley

60-69	CORVAIR, F.C.	**3779957**	w/pulley and bearing	1
64-69	CORVAIR, F.C. (exc. Air Cond.)	**3870289**	**GUIDE**, front	1
64-69	CORVAIR, F.C.	**3851845**	**GUIDE**, rear	1
60-69	CORVAIR, F.C.	**3772490**	**STUD**, pulley and bearing bracket assy. attaching ($^3/_8$—16—24 x $1^{15}/_{16}$) (.003 O.S.) (painted dark blue)	A.R.
60-69	CORVAIR, F.C.	**3772491**	**STUD**, pulley and bearing bracket assy. attaching ($^3/_8$—16—24 x $1^{15}/_{16}$) (.006 O.S.) (painted light green)	A.R.
60-69	CORVAIR, F.C.	**3772492**	**STUD**, pulley and bearing bracket assy. attaching ($^3/_8$—16—24 x $1^{15}/_{16}$) (.009 O.S.) (painted orange)	A.R.
60-61	CORVAIR, F.C.	**3754153**	**WASHER**, belt idler pulley and bracket attach.—(5.383)	2
63-68	CORVAIR, F.C.	**907176**	**BEARING ASSY.**, blower belt idler pulley—(4.850)	1
65-66	CORVAIR w/H.D. Air Cleaner (exc. 4/1BC, Turbo.)	**3867242**	**COVER**, blower pulley belt access hole	1

1.062 PULLEY—HUB—BOLT ASSY.—SCREW, Engine Blower or Fan and Water Pump

60-64	CORVAIR, F.C.	**3779583**	($4^1/_2$ O.D.)	1
65-69	CORVAIR, F.C.	**3856616**	blower	1
60-64	CORVAIR, F.C.	**3826473**	**HUB**, w/bearing pulley (2" high)	1
65-69	CORVAIR, F.C.	**3856614**	**HUB**, w/bearing, blower	1
60-64	CORVAIR, F.C.	**3769942**	**BOLT ASSY.**, pulley and blower assy. attach. ($^5/_{16}$—18 x $^3/_4$)	4
65-69	CORVAIR, F.C.,			
66-69	CORVAIR w/A.I.R.	**3856672**	**SCREW**, pulley and blower assy. ($^1/_4$"—20 x $^3/_4$") exh. gas combustion—(4.256)	A.R.

1.064 BLOWER ASSY., Engine or Fan and Generator

60	CORVAIR	**6256128**		1
61-64	CORVAIR, F.C.	**3828742**	(magnesium)	1
65-69	CORVAIR, F.C.	**3856615**		1

1.066 BELT, Fan, Gen., and Accessory Drive

NOTE See Dealer Price Schedule (P&A 26) for applicable prices.

NOTE Code letters shown under the heading "Driven Pulleys" indicate the Pulleys which the belt drives. Codes are as follows.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

B—Blower, W—Water Pump and Fan, G—Generator, P—Power Steering Pump, C—Air Conditioning Compressor, X—Air Injection Reactor, F—Fan.

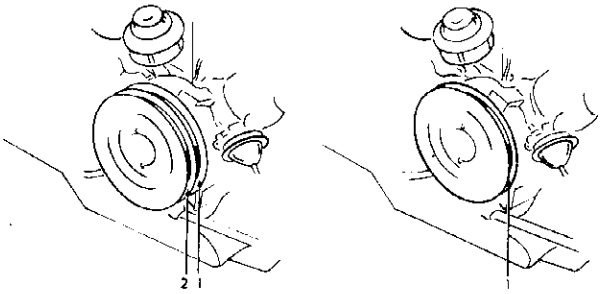

CORVAIR, F.C. Drive Pulley (Crankshaft) Groove No. 1 (1 or 2 Pulley system)

		Dimensions	Driven Pulley		
60-67	CORVAIR, F.C.	(3/8—55 3/4)	B,G	3780981	1

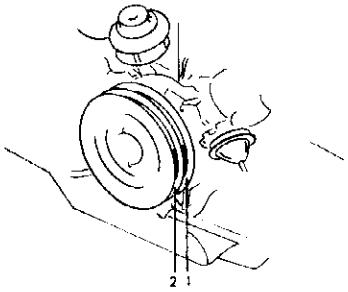

CORVAIR Drive Pulley, (Crankshaft) Groove No. 2 (1 or 2 Pulley system)

		Dimensions	Driven Pulley		
61-66	CORVAIR w/Custom Air Cond. (1st design) (exc. Turbocharger)	(15/32—47)	C	3845653	1
66	CORVAIR w/Custom Air Cond. (2nd design) (exc. 4/1BC)	(15/32—45 3/4)	C	3889376	1
66-67	CORVAIR w/A.I.R. (exc. C.A.C.)	(3/8—42 1/2)	X	3888453	1
66	CORVAIR (Custom Air Cond. w/Sp. H/Per.),				
67	CORVAIR w/Air Cond.	(15/32—57 1/2)	C	3848254	1
67	CORVAIR (A.I.R. w/C.A.C.)	(3/8—36)	X	3927158	1

1967 FAN BELT CHART

NOTE See Charts at Beginning of Group for Dimensions and Prices

GENERATOR	POWER STEERING PUMP	AIR CONDITIONING COMPRESSOR	AIR INJECTION REACTOR PUMP
	CORVAIR		
3780981		3848254	(exc. C.A.C.) 3888453 (w/C.A.C.) 3927158

1968 FAN BELT CHART

GENERATOR	POWER STEERING PUMP	AIR CONDITIONING COMPRESSOR	AIR INJECTION REACTOR PUMP
	CORVAIR		
3780981		3848254	(exc. C.A.C.) 3888453 (w/C.A.C.) 3927158

1969 FAN BELT CHART

GENERATOR	POWER STEERING PUMP	AIR CONDITIONING COMPRESSOR	AIR INJECTION REACTOR PUMP
	CORVAIR		
3780981			3888453

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

1.097 PLUG, Vacuum Modulator Hose Connector Hole

60	CORVAIR,			
62	CORVAIR w/Turbocharger	3751579	to plug hole in cyl. head ($^{19}/_{32}$)	2
61-69	CORVAIR, F.C. (exc. Turbocharger)	838323	to plug hole in cyl. head ($^{3}/_{8}$)	2

1.105 HUB—SEAL, Engine Blower and Coolant Pump

62-64	CORVAIR, F.C.	3826473	w/bearing pulley, (2" high)—(1.062)	1
65-69	CORVAIR, F.C.	3856614	w/bearing, blower—(1.062)	1
60-63	CORVAIR, F.C.	6257938	**SEAL,** hub bearing cap	1

1.148 GAUGE ASSY., Engine Temperature (Dash Unit)

63-64	CORVAIR w/Turbocharger	6400795		1
65-66	CORVAIR w/Turbo., 4/1BC	6401645		1

1.150 SWITCH ASSY.—GASKET—WASHER—INSULATOR, Temperature (Engine Unit)

60	CORVAIR	1998713	cyl. head	1
61-64	CORVAIR, F.C.,			
65	F.C. (exc. H/Per.),			
65	CORVAIR (exc. Turbo., 4/1BC),			
66-69	CORVAIR (exc. 4 x 1)	1993574	cyl. head (w/grooves on "hex")	1
62-69	CORVAIR w/Turbo., 4/1BC	1993599	cyl. head ($^{3}/_{8}$"—24)	R.H.
62-66	CORVAIR w/Turbocharger	1513431	sending unit (cyl. head) ($2^{7}/_{32}$" O.L.)	L.H.
61-69	CORVAIR, F.C.	3784313	**GASKET,** cyl. head switch ($^{27}/_{64}$ x $^{5}/_{8}$ x $^{1}/_{64}$ thick) (Copper)	1
62-66	CORVAIR w/Turbocharger, 4/1BC (1st design)	6400240	**GASKET,** switch ($1^{1}/_{2}$ O.D. x $^{25}/_{64}$ I.D. x $^{1}/_{16}$ thk.) (Copper)	1
66	CORVAIR w/Turbo., 4/1BC (2nd design)	1555492	**GASKET,** temp. sending unit—(2.271)	1
65-66	CORVAIR	1585975	**WASHER,** insulator—(3.107)	A.R.
60-64	CORVAIR	5644602	**INSULATOR** (2.515)	1
65-66	CORSA	6401501	**INSULATOR** (9.749)	1

1.166 CLAMP, Hose with Nut and Bolt

60-69	CORVAIR, F.C.	1351812	worm adj. type ($^{11}/_{16}$ x $1^{1}/_{4}$" I.D. range)	1
60-69	CORVAIR, F.C.	3749810	heater cooling air ($3^{3}/_{16}$" dia.), heater hose (adjustable 1" to 6"), fuel return pipe	A.R.
60-69	CORVAIR, F.C.	9421062	worm adjusting ($^{7}/_{8}$" dia.)	A.R.
60-69	CORVAIR, F.C.	9419365	($^{13}/_{16}$") (stainless steel)	A.R.
60-69	CORVAIR, F.C.	1351813	worm adj. type ($1^{3}/_{8}$" to $2^{1}/_{4}$" dia.)	A.R.
60-69	CORVAIR, F.C.	9414942	rad. outlet hose ($3^{1}/_{4}$" open and $2^{7}/_{8}$" closed)	A.R.
60-69	CORVAIR, F.C.	2494772	miniature worm drive type (range $^{1}/_{4}$" x $^{5}/_{16}$")	A.R.
60-69	CORVAIR, F.C.	3829058	(spring type-$^{5}/_{8}$" free I.D.) (black paint)	A.R.
62-66	CORVAIR w/Turbocharger	3824836	cyl. head induction pipe to Turbocharger hose	2
63-64	SPYDER	3692864	universal expansion ($1^{1}/_{2}$ to $^{3}/_{4}$ O.D.)	A.R.

1.266 GRILLE—DEFLECTOR, Body Rear Engine and Front Radiator

60	CORVAIR,			
61-62	CORVAIR (STA. WAG.)	3795890	air outlet	1
61-65	F.C.	3777298	body front vent	1
61-62	CORVAIR (exc. STA. WAG., F.C.),			
63-64	CORVAIR	3834772	air outlet	1
65	CORSA	3863578	air outlet (Note 1)	1
	NOTE 1 For insert see Group 1.267.			
65	CORVAIR (exc. CORSA)	3857317	air outlet	1
66-69	CORVAIR	3876619		1
61-65	F.C.	3772798	**GRILLE ASSY.,** engine air outlet	1
64	CORVAIR	3840735	**DEFLECTOR,** rear grille gravel	L.H.
64	CORVAIR	3840736	**DEFLECTOR,** rear grille gravel	R.H.

1.267 BRACKET ASSY.—INSERT, Rear Engine and Radiator Grille

61-65	F.C.	3779593	air outlet grille lower mtg.	L.H.
61-65	F.C.	3779594	air outlet grille lower mtg.	R.H.
65	CORSA	3863579	**INSERT,** engine grille	2
66	CORSA	3876689	**INSERT,** engine grille	1

1.287 RETAINER, Radiator and Grille Filler

65-69	CORVAIR	3871183	front corner, engine shield to body seal	L.H.
65-69	CORVAIR	3871184	front corner, engine shield to body seal	R.H.
65-69	CORVAIR	3871185	side, engine shield to body seal	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65-69	CORVAIR	3871186	side, engine shield to body seal	R.H.
65-69	CORVAIR	3871187	rear corner, engine shield to body seal	L.H.
65-69	CORVAIR	3871188	rear corner, engine shield to body seal	R.H.
65-69	CORVAIR	3871189	front, engine shield to body seal	1
65-69	CORVAIR	3871190	rear, engine shield to body seal	1

1.303 ORNAMENT—DOOR—EMBLEM—MOULDING UNIT—NUT—PIN—PLATE—SPRING—WASHER, Grille

61-65	F.C.	3777360		1
62	CORVAIR	3789911		L.H.
62	CORVAIR	3789912		R.H.
63	CORVAIR	3826063	body front	1
65	CORVAIR	9703065	**DOOR,** lock cylinder (frt. end)	1
66-69	CORVAIR	9706899	**DOOR,** frt. end outer panel mldg.	1
60	CORVAIR	6256957	**EMBLEM,** body front	1
61	CORVAIR (exc. F.C.)	3784583	**EMBLEM,** body front	1
64	CORVAIR	3844129	**EMBLEM,** body front	1
65	CORVAIR	3870728	**MOULDING UNIT,** frt. end outer panel	1
66-69	CORVAIR	4227224	**MOULDING UNIT,** frt. end outer panel	1
63	CORVAIR	4837002	**NUT,** body frt. mldg.—(12.118)	A.R.
64	CORVAIR, F.C.	3844131	**NUT,** emblem assy. attaching (stamped) ($^3/_{16}$")—(8.147)	A.R.
65-67	CORVAIR	4877816	**NUT,** frt. end outer panel mldg.—(12.180)	5
66-68	CORVAIR	7583360	**NUT,** frt. end name plate	3
65	CORVAIR	9704625	**PIN,** lock cylinder (frt. end)	1
66-69	CORVAIR	9706901	**PIN,** frt. end outer panel mldg. door	1
62	CORVAIR	3789914	**PLATE,** name, body front	1
63	CORVAIR	3821789	**PLATE,** name body front	1
66-69	CORVAIR	4227223	**PLATE ASSY.,** frt. end panel, name	1
65	CORVAIR	9703069	**SPRING,** lock cylinder (frt. end)	1
66-69	CORVAIR	9706900	**SPRING,** frt. end outer panel mldg. door	1
65-67	CORVAIR	4817285	**WASHER,** frt. end outer panel mldg.—(12.118)	5

1.426 PAN ASSEMBLY, Oil

60-69	CORVAIR, F.C.	3856686		1

1.428 BOLT—SCREW, Oil Pan Attaching, with Lockwasher

60-69	CORVAIR, F.C.	3817006	($^1/_4$"—20" x $^7/_{16}$")—(0.679)	A.R.
64-69	CORVAIR, F.C.	3856691	**SCREW,** w/lock washer ($^1/_4$"—20 x $^5/_8$") (Note 1)	19

NOTE 1 This screw is used on 1964 engines dated to 529 and after.

1.429 GASKET, Oil Pan

60-64	CORVAIR, F.C. (1st design)	6255875	(Note 1)	1

NOTE 1 This gasket is used on 1964 engines dated up to T0529.

64-69	CORVAIR, F.C. (2nd design)	3856690	(Note 2)	1

NOTE 2 This gasket is used on 1964 engines dated T0529 and after.

1.453 FLANGE—PLUG—SCREW, Oil Pan Drain

60-65	CORVAIR, F.C.	3723008	(1WD x $^7/_8$) ($^1/_2$—20 hole in ctr.)	1
60-69	CORVAIR, F.C. w/magnetic drain plug	3866776	**PLUG** ($^1/_2$"—20)	1
60-66	CORVAIR, F.C.	3866916	**SCREW** (magnetic) ($^1/_2$—20 x $^{15}/_{64}$)	1
60-69	CORVAIR, F.C.	3923420	**SCREW** ($^1/_2$"—20 x $^{13}/_{16}$") (non-magnetic)	A.R.
67	CORVAIR	3779764	**SCREW** ($^1/_2$—20 x $^{13}/_{16}$)	1

1.456 GASKET, Oil Pan Drain Screw

60-69	CORVAIR, F.C.	3921989	(nylon $^1/_2$" I.D. x $^{29}/_{32}$" O.D.)	A.R.

1.516 GAUGE ASSY.—BOOT—CAP ASSY.—GROMMET—PIN—PLUG—SEAL—TUBE, Oil Level

60-61	CORVAIR (exc. LAKEWOOD, F.C.),			
62-64	CORVAIR (exc. Turbocharger),			
65-69	CORVAIR (exc. Turbo., 4/1 BC)	3860444		1
62-64	CORVAIR w/Turbocharger	3819214	chrome	1
65-66	CORVAIR w/Turbo., 4/1 BC	3860445		1
67-69	CORVAIR w/4/1BC	3920970		1
60-61	CORVAIR (exc. LAKEWOOD, F.C.),			
62-65	CORVAIR	6257713	**BOOT,** gauge to upper shroud	1
61-65	LAKEWOOD, F.C.	3784772	**CAP ASSY.,** oil filler w/gauge—(1.758)	1
65-69	CORVAIR	3867245	**GROMMET,** gauge to upper shroud	1
60-69	CORVAIR, F.C.	3837057	**PIN,** gauge tube hole ($^7/_{16}$" O.D. x $^7/_{16}$" long) (solid)	1
61-64	LAKEWOOD, F.C.	3774436	**PLUG,** gauge tube hole	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-62	CORVAIR (STA. WAG.),			
61-65	F.C.	3777504	**SEAL,** "O" ring, oil filler and level gauge (Note 1)—(1.745)	1

NOTE 1 Also used as oil filler tube hole plug seal on 1964 CORVAIR models with crankcase 3849112 (0.030).

60-61	CORVAIR (exc. STA. WAG.),			
62-69	CORVAIR (exc. 4/1BC)	3856695	**TUBE,** gauge	1
65-69	CORVAIR w/Sp. H/Per.	3867215	**TUBE**	1
61-62	CORVAIR (STA. WAG.), F.C.	3819661	**TUBE ASSY.,** oil level gauge tube w/bracket—(1.745)	1

1.531 CLAMP—PLUG—SUPPORT ASSY., Engine Oil

60-69	CORVAIR, F.C.	6257902	suction pipe	1
60-69	CORVAIR, F.C.	3701638	**PLUG,** engine rear housing oil gallery	1
60-69	CORVAIR, F.C.	6257900	**SUPPORT ASSY.,** suction pipe, w/welded nut	1

1.540 COOLER UNIT—ADAPTER—SHROUD—COVER, Oil

60-63	CORVAIR, F.C.,			
64-67	CORVAIR (exc. C.A.C., Turbocharger, 4/1BC)	3155403	w/gaskets	1
64-65	SPYDER, CORSA, F.C.,			
64-67	CORVAIR w/C.A.C., 4/1BC,			
68-69	CORVAIR	3001406	w/gaskets	1
60-69	CORVAIR, F.C.	6255876	**ADAPTER,** cooler	1
64-68	CORVAIR w/Air Cond. (exc. Sp. H/Per.)	3856688	**SHROUD,** eng. oil clr. end—(1.020)	R.H.
64-68	CORVAIR w/Air Cond. (exc. Sp. H/Per.)	3856687	**SHROUD,** eng. oil clr. end—(1.020)	L.H.
67	CORVAIR w/A.I.R.	3909433	**SHROUD,** eng. oil clr. end—(1.020)	L.H.
67	CORVAIR w/A.I.R.	3909434	**SHROUD,** eng. oil clr. end—(1.020)	R.H.
64-67	CORVAIR w/Custom Deluxe Air Cond.,			
64-67	CORVAIR w/4/1BC, Turbo.,			
64-65	F.C.,			
67	CORVAIR w/A.I.R. (exc. C.A.C.)	3848396	**COVER,** upper shroud oil cooler access hole—(1.020)	1

1.550 SEAL—GASKET, Oil Cooler

60-69	CORVAIR, F.C.	6256042	($^{17}/_{32}$ I.D.)	2
60-69	CORVAIR, F.C.	6255877	**GASKET,** adapter	1

1.609 SPRING—VALVE—PLUG—GASKET, Oil Pressure Regulator

60-62	CORVAIR, F.C.	3835896	($^{5}/_{16}$ O.D. x $2\,^{11}/_{64}$ O.L.)	1
63-69	CORVAIR, F.C.	3814903	($^{5}/_{16}$ O.D. x $2\,^{7}/_{32}$ O.L.)	1
60-69	CORVAIR, F.C.	3702366	**VALVE** ($^{11}/_{32}$" I.D. x $^{7}/_{16}$" x $^{13}/_{16}$" O.L.)	1
60-69	CORVAIR, F.C.	6256614	**PLUG,** valve	1
60-67	CORVAIR, F.C.	3823296	**GASKET,** valve plug (nylon) ($^{37}/_{64}$" I.D. x $^{51}/_{64}$" O.D.)—(1.844)	1
66-69	CORVAIR	3870275	**GASKET,** valve plug ($^{9}/_{16}$ I.D. x $^{25}/_{32}$ O.D.)	1

1.639 SHAFT—SHAFT UNIT, Oil Pump

60-69	CORVAIR, F.C.	6255689	driven gear	1
60-69	CORVAIR, F.C.	3840230	**SHAFT UNIT,** drive, w/gear and gasket (gear .801 thk.—square depression on one tooth) (Note 1)	1
60-69	CORVAIR, F.C.	3840229	**SHAFT UNIT,** drive, w/gear and gasket (gear .800 thk.) (Note 1)	1

NOTE 1. Use selectively to insure oil pump prime and proper end play.

1.656 SCREEN ASSEMBLY, Oil Suction

60-69	CORVAIR, F.C.	6257399	w/pipe	1

1.723 COVER, Oil Pump

60-69	CORVAIR, F.C.	6255852		1

1.724 GASKET, Oil Pump Cover

60-63	CORVAIR, F.C. (1st design)	6255853	(six $^{19}/_{64}$ dia. holes) (paper)	1
63-69	CORVAIR, F.C. (2nd design)	3849156	(asbestos)	1

1.745 VENTILATOR ASSY. and Parts, Crankcase

60-69	CORVAIR, F.C.	3843544		1
60-62	CORVAIR, F.C. (exc. closed vent)	6255934	**TUBE,** ventilator	1
60-69	CORVAIR (exc. STA. WAG.)	3785359	**TUBE ASSY.,** oil filler	1
61-65	CORVAIR (STA. WAG.) F.C.	3819661	**TUBE ASSY.,** oil filler and level guage tube, w/bracket (Note 1)	1

NOTE 1 It may be necessary to bend attaching tab as required to allow proper installation.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

65-66	CORVAIR w/H.D. A/CL	**3856657**	**TUBE ASSY.**, vent. upper	1
65	CORVAIR w/oil bath (exc. Air Cond.)	**3856698**	**TUBE ASSY.**, vent. upper	1
61	LAKEWOOD, F.C.,			
64	CORVAIR	**3786020**	**PLUG**, oil filler tube hole (1" O.L. x $1^{3}/_{32}$ O.D.) (Note 2)	1
	NOTE 2 On 1964 CORVAIR models, this plug is used with crankcase 3849112 (0.030).			
61-62	CORVAIR (STA. WAG.),			
61-65	F.C.	**3777504**	**SEAL**, "O" ring, oil filler and level gauge (Note 3)	1
	NOTE 3 Also used as oil filler tube hole plug seal on 1964 CORVAIR models with crankcase 3849112 (0.030).			
62	CORVAIR, F.C. w/closed vent.,			
63-65	CORVAIR, F.C. (exc. SPIDER, CORSA),			
66-69	CORVAIR	**3819252**	**SEAL**, "O" ring, vent. lwr. tube to upr. tube	1
64-69	CORVAIR, F.C.	**3849320**	**SEAL**, "O" ring, vent. lwr. tube ($^{39}/_{64}$ I.D. x $^{5}/_{64}$)	1
60-62	CORVAIR, F.C.	**3795323**	**GROMMET**, ventilator tube ($^{3}/_{16}$ O.D.)	1
62	CORVAIR, F.C. w/closed vent.	**3817839**	**GROMMET**, vent. lwr. tube to upr. shroud	1
64-66	CORVAIR (exc. Turbo., Air Cond., A.I.R.),			
67	CORVAIR (exc. A.I.R.)	**3851855**	**GROMMET**, vent. upr. tube ($^{9}/_{16}$ I.D. x $^{17}/_{32}$)	1
60-69	CORVAIR, F.C.	**3845783**	**GROMMET**, vent. hose conn., at rocker cover (for 1"dia. hole—$^{23}/_{64}$" I.D. x $1^{7}/_{32}$" O.D.)	1
60-69	CORVAIR, F.C.	**3933188**	**GROMMET** ($^{31}/_{32}$" I.D. x $1^{7}/_{32}$" O.D.)—(0.386)	A.R.
60-62	CORVAIR, F.C.	**6257099**	**GASKET**, ventilator tube	1
63-69	CORVAIR, F.C.	**3831574**	**GASKET**, vent. upr. tube to lwr. tube (rubber)	1
61-69	CORVAIR, F.C.	**5646135**	**GASKET**, vent. tube bolt, vent hose adapter washer ($^{15}/_{64}$ I.D. x $^{5}/_{8}$ O.D. x $^{1}/_{16}$ thk.)	1
61	CORVAIR, F.C. w/closed vent	**3695349**	**CONNECTOR ASSY.**, hose	1
60-69	CORVAIR, F.C.	**3888198**	**CONNECTOR**, vacuum inlet manifold—(4.931)	A.R.
68-69	CORVAIR w/H.D. closed pos. vent.	**3924544**	**ARRESTOR ASSY.**, flame	1
62	CORVAIR, F.C. w/closed vent,			
63	CORVAIR, F.C. (exc. Turbocharger),			
64-65	CORVAIR w/Custom Air Cond., oil bath air cleaner,			
64-65	F.C.,			
66	CORVAIR w/Air Cond. (exc. CORSA)	**6421973**	**VALVE ASSY.**, vent (CV-584-C)	1

1.750 CLAMP—SUPPORT—SCREW, Crankcase Ventilator

60-69	CORVAIR, F.C.	**3829058**	vent. hose (spring type—$^{5}/_{8}$" dia.)	2
60-69	CORVAIR, F.C.	**6257098**	vent. lwr. tube	1
63-69	CORVAIR, F.C.	**3830641**	vent. upr. tube to lwr. tube	1
63	CORVAIR, F.C. (exc. Air Cond.),			
64-65	CORVAIR w/Custom Air Cond., oil bath air cleaner,			
64-65	F.C.	**3830647**	vent. valve	1
63	CORVAIR w/Prod. Air Cond.,			
64	CORVAIR w/Air Cond.,			
65	CORVAIR w/Air Cond. (exc. CORSA)	**3851804**	**SUPPORT**, vent. valve	1
60-69	CORVAIR, F.C.	**3785130**	**SCREW**, oil filler tube assy. ($^{1}/_{4}$"—20 x $^{1}/_{2}$")	1
63-64	CORVAIR, F.C.	**9420751**	**SCREW**, oil cooler assy. ($^{1}/_{4}$"—20 x $^{9}/_{16}$")—(8.900)	1

1.758 CAP ASSY., Oil Filler Tube

60	CORVAIR	**6257236**		1
67-69	CORVAIR (exc. STA. WAG.)	**3849800**		1
61-65	CORVAIR (STA. WAG.), F.C.	**3784772**	w/gauge	1

1.762 TUBE—HOSE—PIPE, Crankcase Ventilator

62	CORVAIR, F.C. w/closed vent.,			
63	CORVAIR, F.C. (exc. Turbocharger, Prod. Air Cond.),			
64	CORVAIR w/Access. Air Cond., oil bath air cleaner (1st design),			
64-65	F.C.,			
65	CORVAIR (exc. CORSA),			
66	CORVAIR	**3794220**	upper ($7^{1}/_{8}$ dev. length)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

63-64	CORVAIR w/Air Cond.,			
65	CORVAIR (exc. CORSA)	3851805	upper (w/6420085 air cleaner)	1
63-66	CORVAIR w/Turbocharger	3832344	upper	1
62	CORVAIR, F.C. w/closed vent.,			
63-69	CORVAIR, F.C.	3830640	lower	1
64	CORVAIR w/oil bath air cleaner (2nd design)	3851810	upper (11 3/16 dev. length)	1
64-67	CORVAIR (exc. Turbo., Custom Air Cond., oil bath air cleaner, A.I.R., 4/1BC)	3845686	upper	1
65	CORVAIR w/oil bath air cleaner (exc. Custom Air Cond., Turbo.),			
66	CORVAIR w/oil bath air cleaner (exc. Custom Air Cond., A.I.R., CORSA),			
67	CORVAIR w/oil bath A/CL (exc. A.I.R.)	3856698	upper	1
65-66	CORVAIR w/4/1BC (exc. oil bath A/CL, A.I.R.)	3867216	upper	1
66-68	CORVAIR w/A.I.R.,			
69	CORVAIR	3883823	upper	1
60-69	CORVAIR, F.C. w/pos. vent.	3830660	**HOSE** (3/8" I.D.)—(8.962)	A.R.
63-65	CORVAIR w/Turbocharger	3815458	**HOSE,** vent upper tube to Turbocharger vent. pipe (7/32" I.D. x 17 1/4" O.L.)—(3.750)	1
62	CORVAIR, F.C. w/closed vent.,			
63	CORVAIR, F.C. (exc. Turbocharger, 4/1BC),			
65	CORVAIR, F.C. (exc. CORSA)	3823254	**HOSE,** air cleaner to vent. upper tube (9/16 I.D.)	1
60-69	CORVAIR, F.C.	3828380	**HOSE,** vent. (1/2" x 18 O.L.) (cut to size)	A.R.
60-69	CORVAIR, F.C.	3943198	**HOSE,** vent (carb. to oil filler tube) (J shape——11/32" I.D.)	1
60-69	CORVAIR, F.C.	3857208	**HOSE,** vent (5/8" I.D. x 15/16" x 25 ft.)—(8.962)	A.R.
60-69	CORVAIR, F.C.	3865329	**HOSE,** vent (15/16" I.D.)—(8.962)	A.R.
60-69	CORVAIR, F.C.	3854408	**HOSE** (11/32" I.D. x 29)	1
63-66	CORVAIR w/Turbocharger	3832343	**PIPE,** Turbocharger vent.	1

1.800 SWITCH—TEE, Oil Pressure

60-69	CORVAIR, F.C.	3818783	(2" long)	1
62-66	CORVAIR w/Turbocharger, 4/1BC	3828680	**TEE,** switch to inlet pipe (1/8"—27) internal and external pipe thread plus 90 degrees—(7/16"—24) inv. flare threading (chrome plated)	1

BUZZER ASSY., Oil Temperature Warning

62-66	CORVAIR w/Turbocharger	1116952		1

1.836 ELEMENT ASSY., Oil Filter

60-69	CORVAIR, F.C.	5575538	(AC-PF-4) (w/shell) (Note 1 and 2)	1

NOTE 1 When using on 60-67 vehicles equipped with Air Conditioning, additional adapter gaskets 5575514 and 3838401 are also required.

NOTE 2 1968 models require the use of additional adapter gaskets.

1.837 VALVE ASSY.—BOLT, Oil Filter

60-69	CORVAIR, F.C.	5575416	oil filter and oil cooler by-pass	1
60-66	CORVAIR, F.C., (exc. C.A.C.)		**BOLT,** oil filter attaching,	
61-69	CORVAIR	6256714	oil filter adap. att. (7/16—20 x 2 1/4)	1
61-64	CORVAIR w/C.A.C.,			
65	CORVAIR (exc. CORSA),			
66-69	CORVAIR	3789709	**BOLT,** oil filter attaching (7/16-20 x 1 7/8)	1

1.840 ADAPTER ASSEMBLY—ADAPTER, Oil Filter and Generator

60-64	CORVAIR, F.C.	3814582	(cast 3814584) (Note 1 and 2)	1

NOTE 1 It may be necessary to replace rear most attaching bolt and nut with Bolt 186622 (8.900).

NOTE 2 On models where oil filter tube hole is not required it will be necessary to use plug 3786020 (1.745).

65-68	CORVAIR, F.C.	3861860		1
60-67	CORVAIR w/Air Cond. (exc. A.I.R.),			
68-69	CORVAIR (164)	3789338	**ADAPTER,** oil filter (cast 3789338) (Note 2)	1

1.844 GASKET, Oil Filter

60-68	CORVAIR, F.C.		filter,	

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit

61-67	CORVAIR w/C.A.C.,			
68-69	CORVAIR	**3838401**	adapter outer	A.R.
61-67	CORVAIR w/Air Cond.,			
68-69	CORVAIR	**5575514**	adapter inner (rubber—2 O.D. x $1\frac{3}{4}$ I.D.)	1
60-69	CORVAIR, F.C.	**3823296**	filter bolt	1
60-64	CORVAIR, F.C.,			
65-69	CORVAIR	**3849157**	oil filter and generator adapter	1

1.850 OIL—CLEANER, Engine Concentrate

60-69	CORVAIR, F.C.	**1050800**	camshaft break-in (1 pint can) ("E.O.S.)—(8.800)	A.R.
60-69	CORVAIR, F.C.	**1050801**	camshaft break-in (32 oz. can) (E.O.S.)—(8.800)	A.R.
60-69	CORVAIR, F.C.	**1050002**	**CLEANER,** carb. combustion chamber and crankcase (16 oz. can) ("CLEENS)—(8.800)	A.R.
60-69	CORVAIR, F.C.	**1050003**	**CLEANER,** carb., combustion chamber and crankcase (38 oz. can) ("CLEENS")—(8.800)	A.R.
60-69	CORVAIR, F.C.	**1050495**	**CLEANER,** top eng. (5 gal.)—(8.800)	A.R.
60-69	CORVAIR, F.C.	**1050690**	**CLEANER,** top eng. (19 oz. aerosol container)—(8.800)	1
60-69	CORVAIR, F.C.	**1050728**	**CLEANER,** top eng. (24 oz., can)—(8.800)	1
60-69	CORVAIR, F.C.	**1050680**	**CLEANER,** top eng. (1 gallon, can)—(8.800)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 2.000

CHASSIS

ELECTRICAL SYSTEMS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

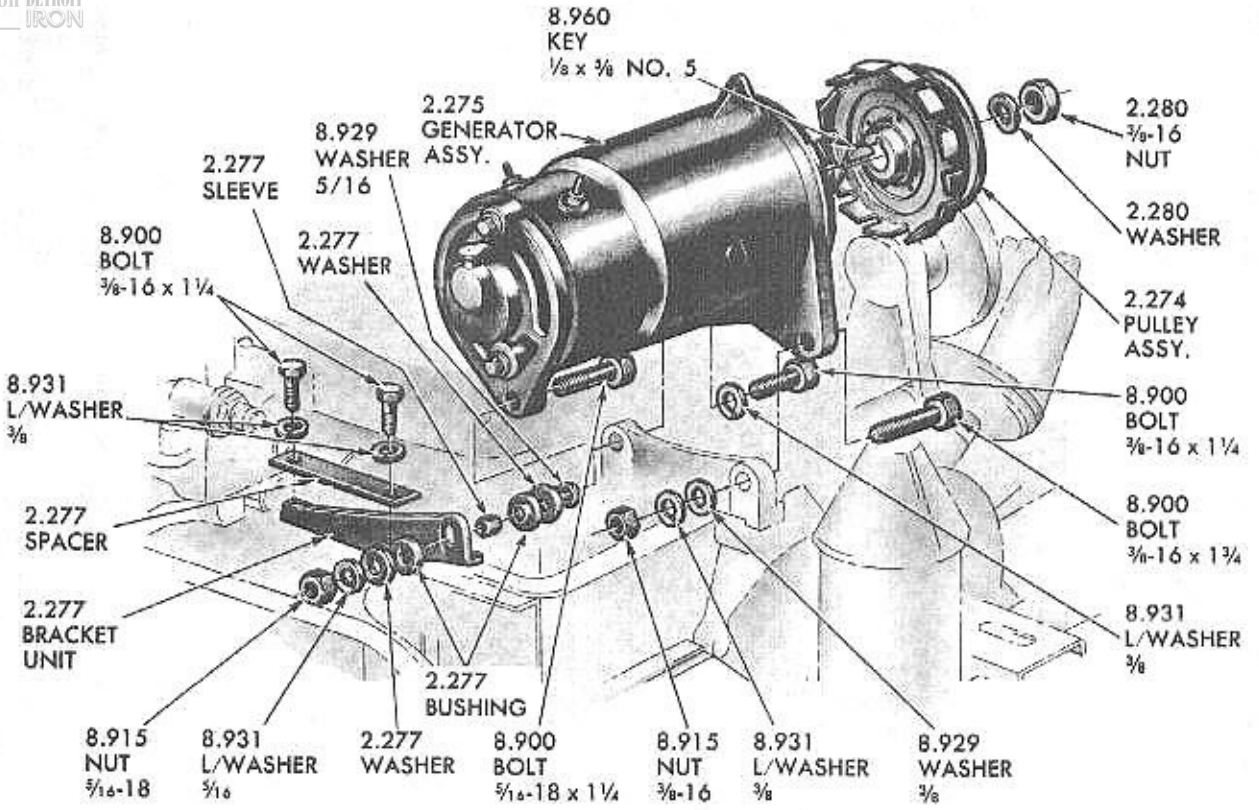

1960-64 CORVAIR GENERATOR AND BRACKET

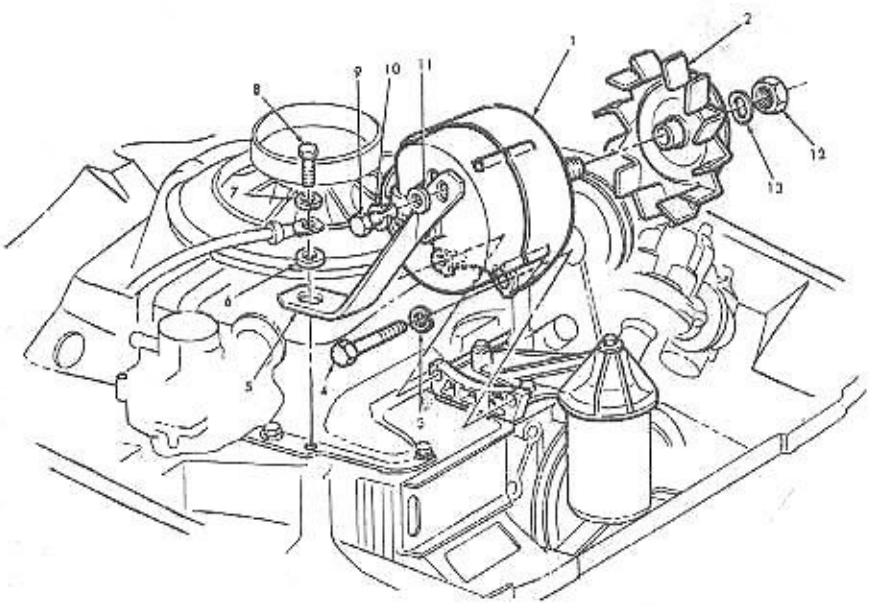

1965-69 CORVAIR GENERATOR MOUNTING

1.	2.275	GENERATOR ASSY.	1100639	6.	2.277	WASHER	3693853
2.	2.274	PULLEY ASSY.	3856602	7.	8.931	L. WASHER (3/8)	
3.	8.929	L. WASHER (7/16)		8.	8.900	BOLT (3/8–16 x 1-1/8)	
4.	8.90	BOLT (3/8–16 x 2)		9.	8.900	BOLT (5/16–18 x 7/8)	
5.	2.317	BRACE (1965)	3867220	10.	8.931	L. WASHER (5/16)	
	2.317	BRACE (1966-67)	3883989	11.	8.929	WASHER	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

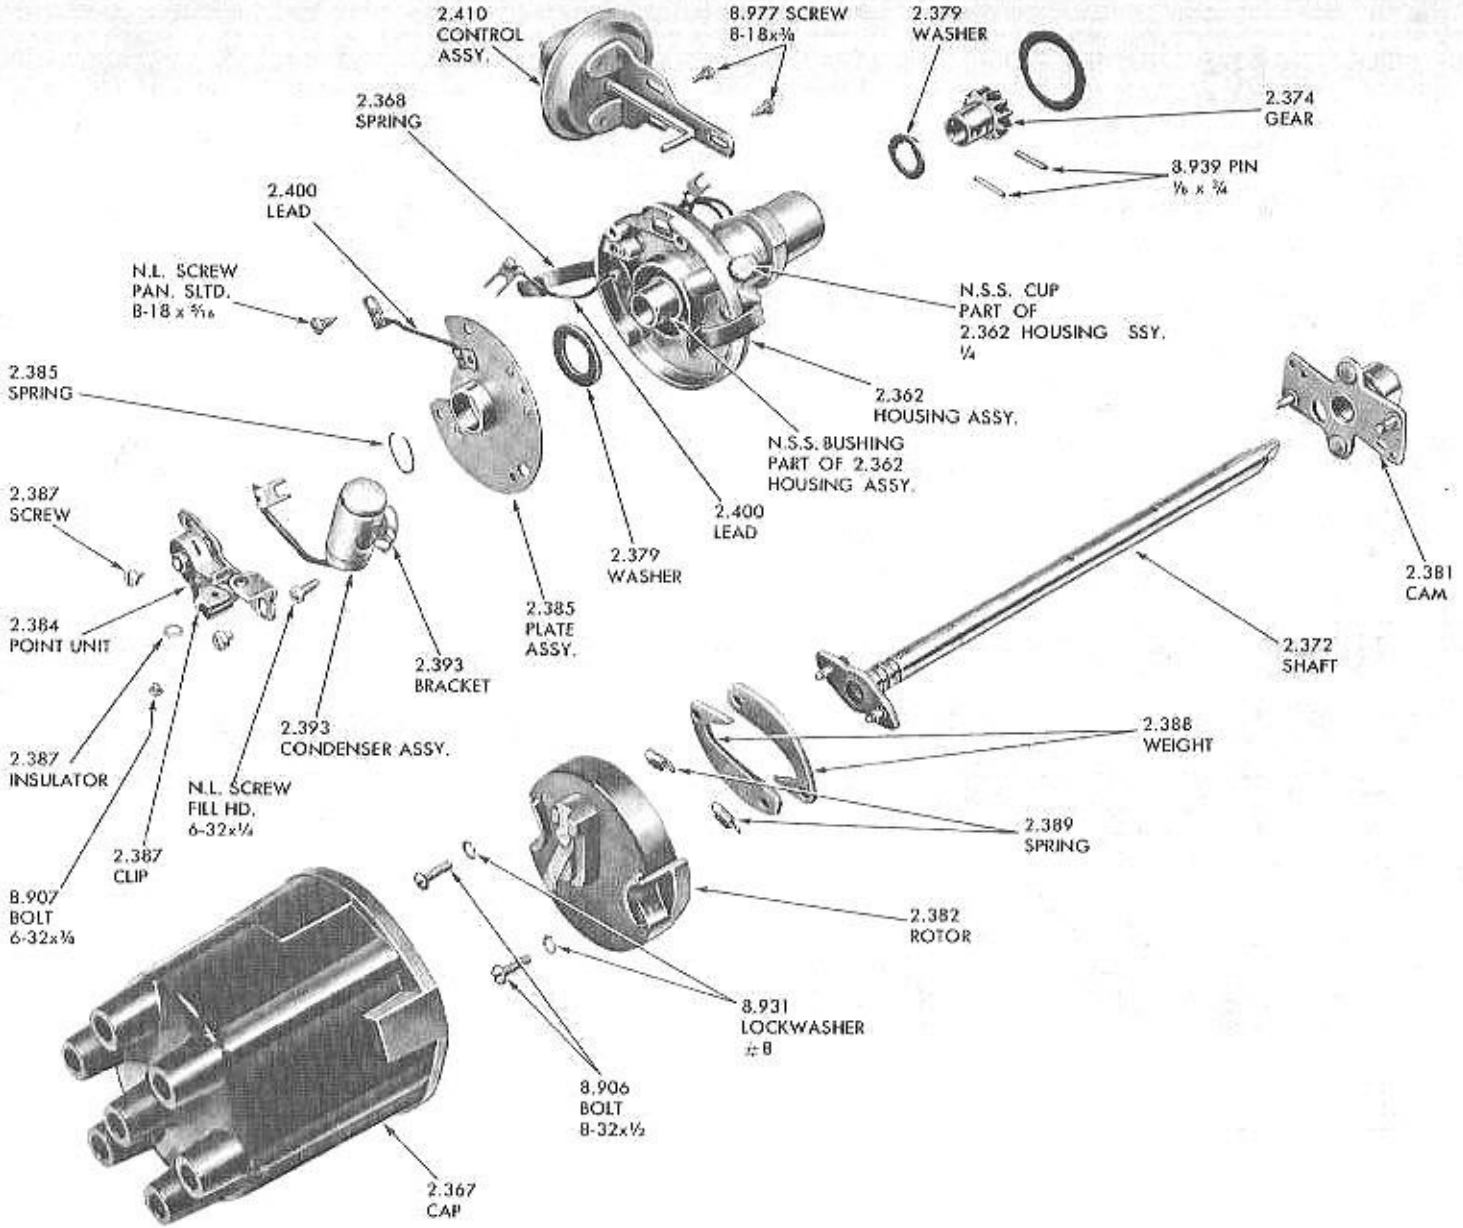

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

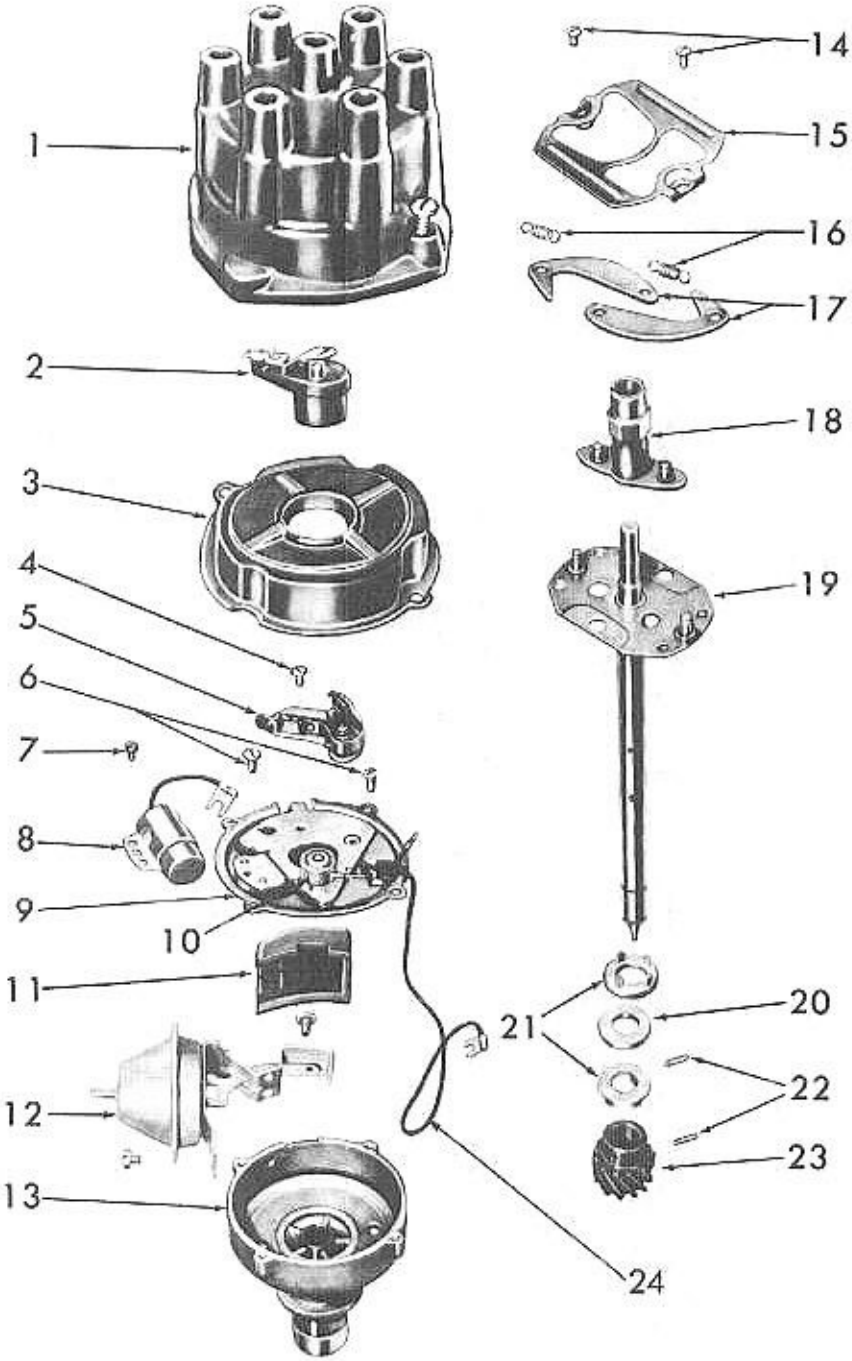

1962-69 CORVAIR IGNITION DISTRIBUTOR (TYPICAL)

1.	2.367	CAP	13.	2.362	HOUSING ASSY.
2.	2.382	ROTOR ASSY.	14.	8.907	BOLT
3.	2.362	DUST SHIELD	15.	2.390	PLATE
4.	2.387	SCREW	16.	2.389	SPRING
5.	2.384	POINT UNIT	17.	2.388	WEIGHT
6.	2.387	SCREW	18.	2.381	CAM
7.	N.L.	SCREW	19.	2.372	SHAFT
8.	2.393	CONDENSER ASSY.	20.	N.L.	WASHER
9.	2.385	PLATE ASSY.	21.	2.379	WASHER
10.	2.364	WICK	22.	2.379	PIN
11.	2.414	BOOT	23.	2.374	GEAR
12.	2.410	CONTROL ASSY.	24.	2.400	LEAD

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

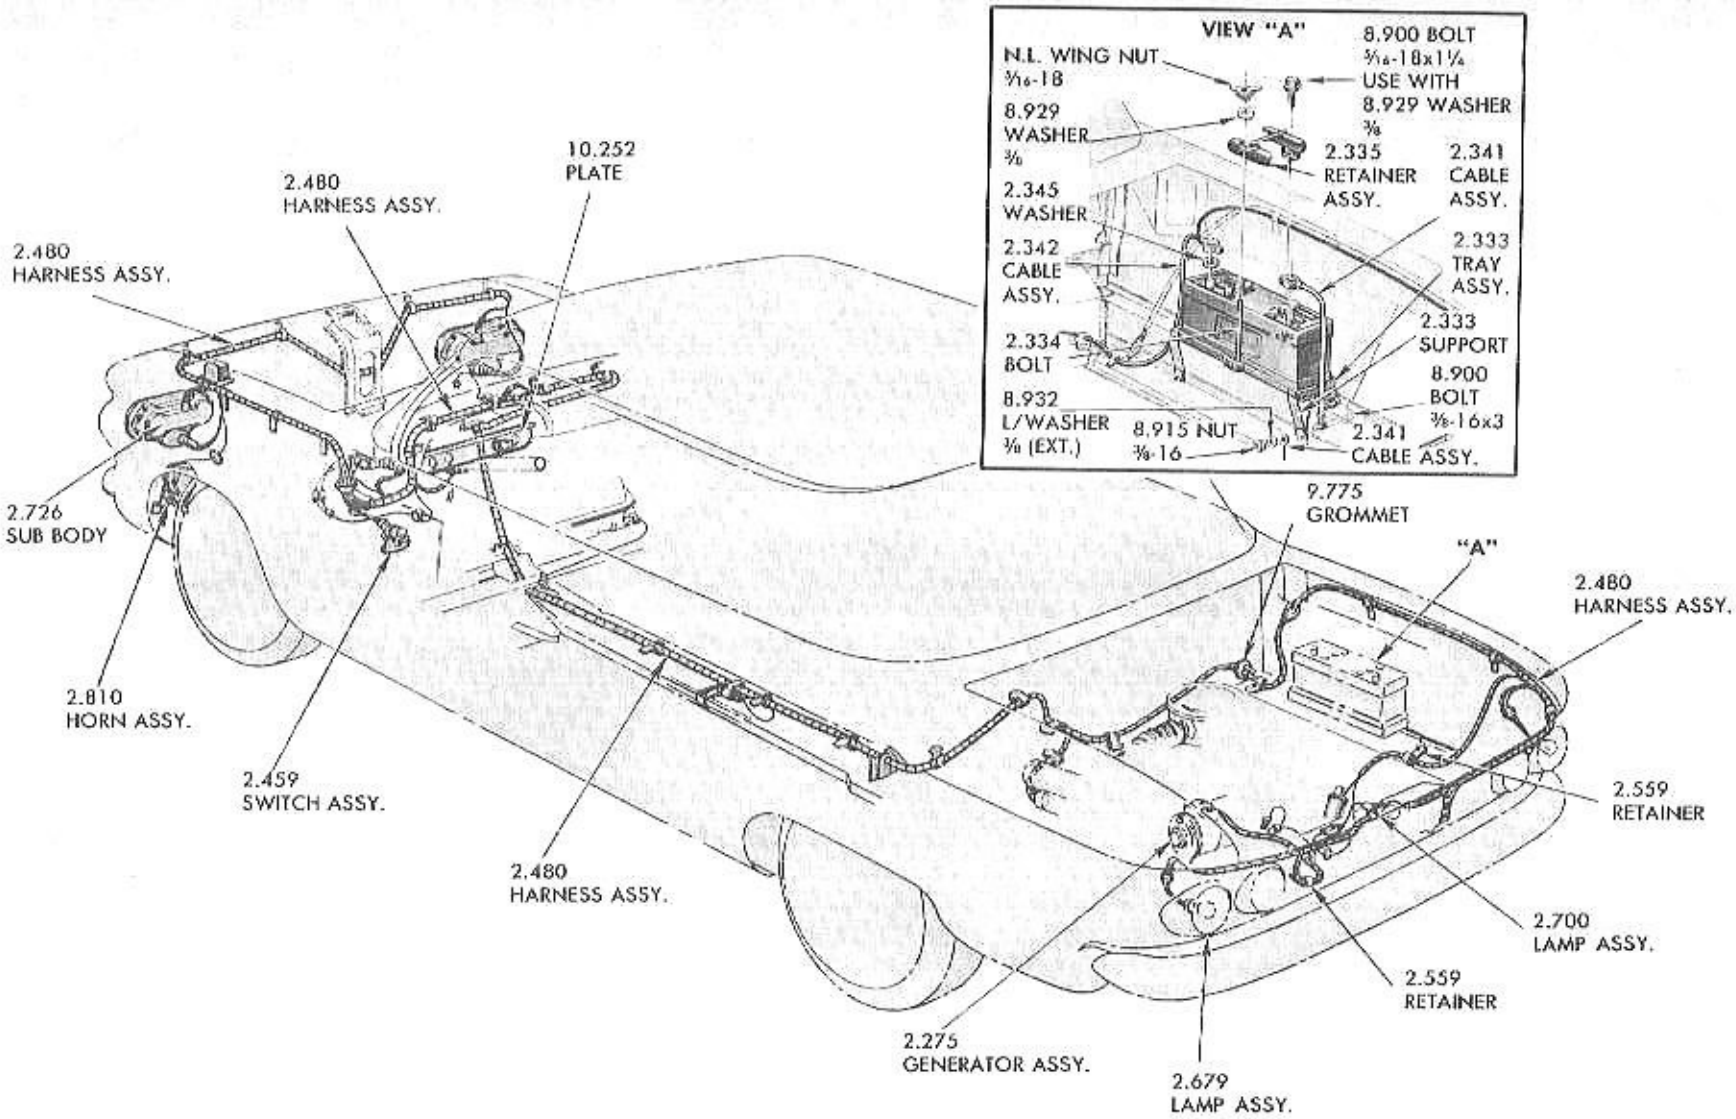

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

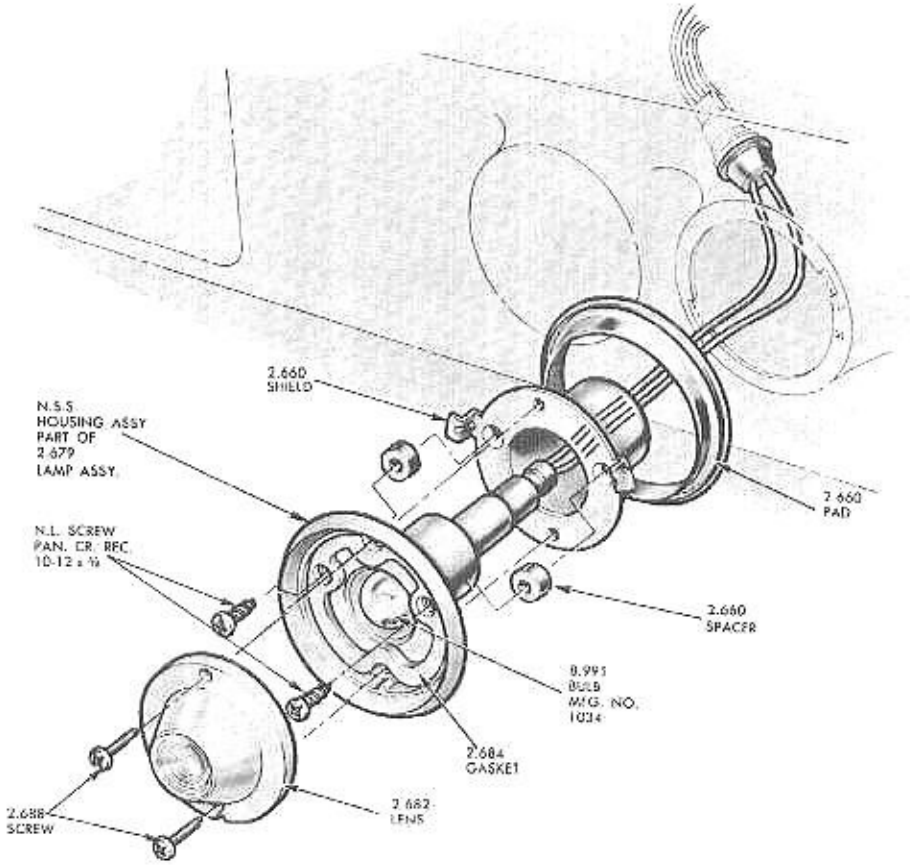

TAIL, STOP AND DIRECTIONAL SIGNAL LAMP

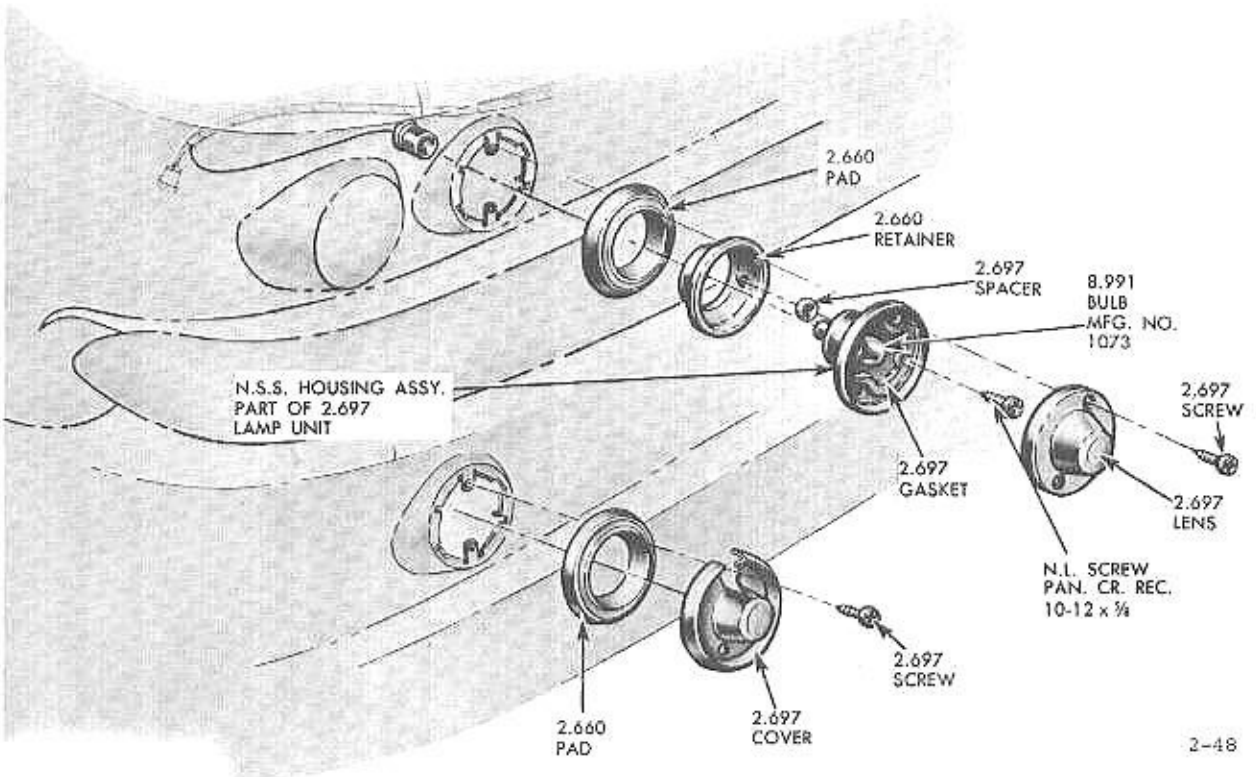

BACK–UP LAMP AND COVER
1960-64 CORVAIR TAIL AND BACK–UP LAMP (TYPICAL)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

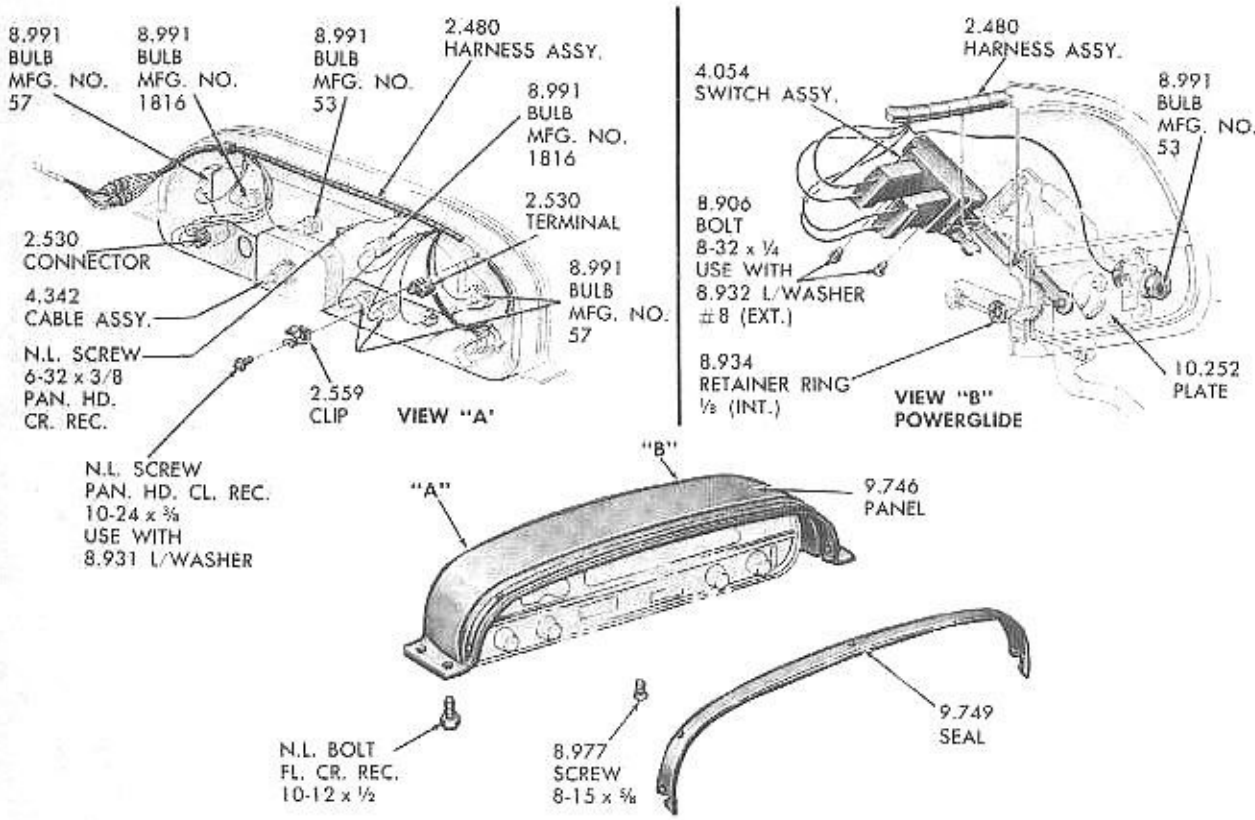

INSTRUMENT CLUSTER

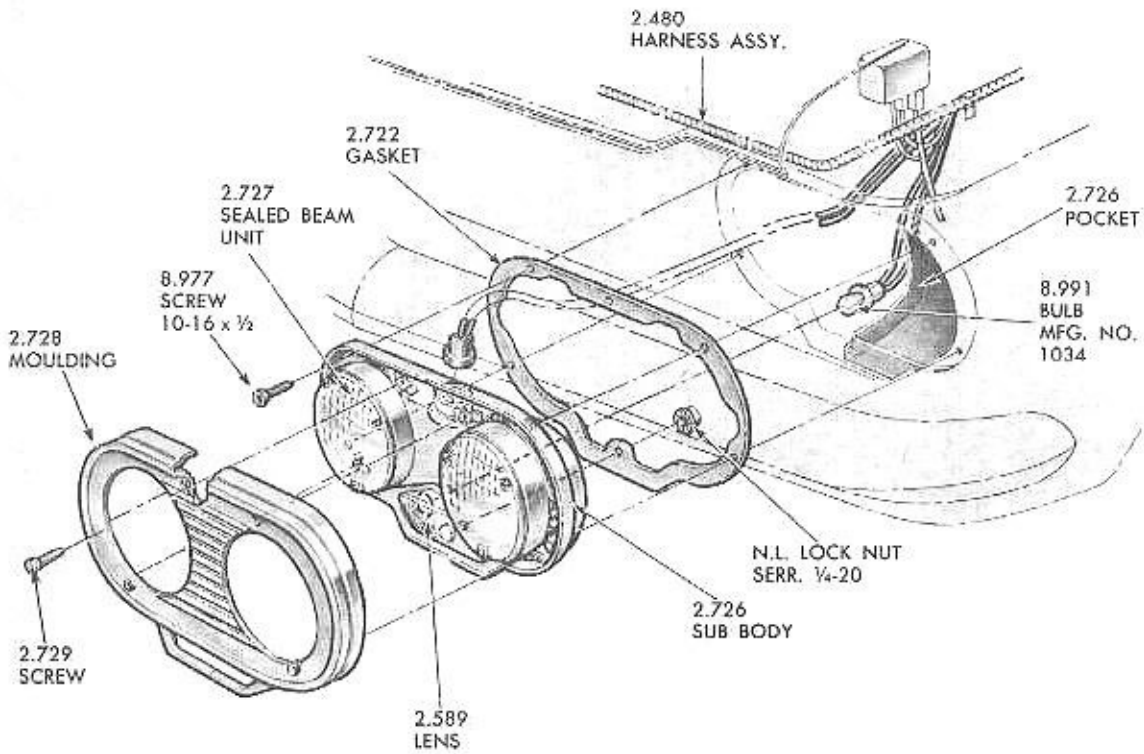

HEADLAMP, PARKING LAMP AND DIRECTIONAL SIGNAL ASSEMBLY

1960-64 CORVAIR INSTRUMENT WIRING AND HEADLAMP ASSEMBLY

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

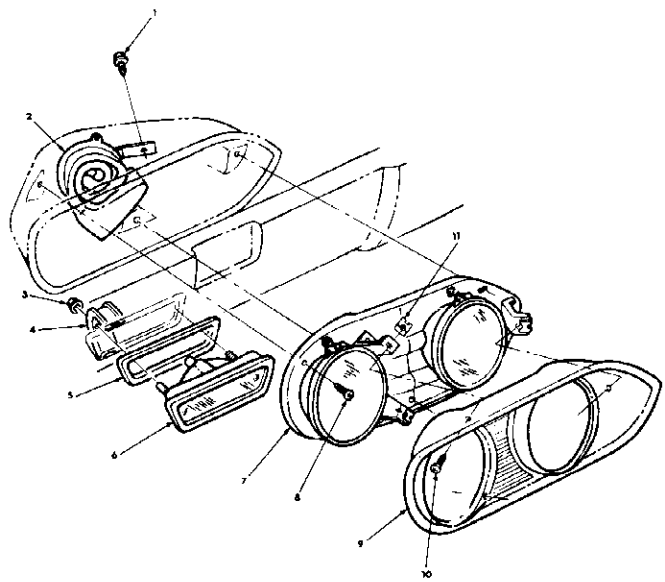

1965-69 CORVAIR—HEADLAMP, PARKING LAMP & HORN

1.	8.900	SCREW ASSY. (5/16–18 x 5/8)		7.	2.725	LAMP ASSEMBLY–L.H. . . (1965) 5957465
2.	2.810	HORN ASSEMBLY–L.H.	9000513		2.725	LAMP ASSEMBLY–R.H. . . (1965) 5957466
	2.810	HORN ASSEMBLY–R.H. (MONZA, CORSA)	9000514		2.725	LAMP ASSEMBLY . . . . . (1966-67) 5958221-22
3.	8.921	NUT (STAMPED 1/4 w/SEALER)		8.	8.977	SCREW (#10–16 x 1/2)
4.	2.585	SUPPORT	3872087	9.	2.728	BEZEL . . . . . (1965) 3850869-70
5.	2.660	SEAL	3874669		2.728	BEZEL . . . . . (1966-67) 3882931-32
6.	2.585	LAMP ASSEMBLY	910665-66	10.	8.977	SCREW (#8–18 x 3/4)
				11.	N.L.	"J" NUT

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

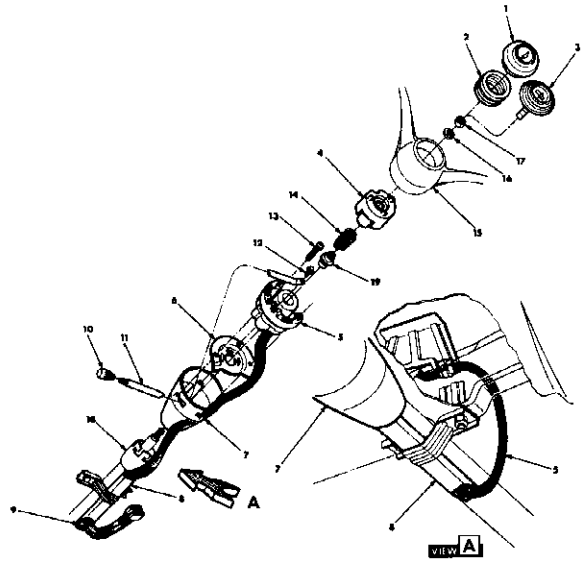

1965-66 CORVAIR—DIRECTION SIGNAL DETAILS

1.	2.820	CAP (STD.)	3859834	11.	2.897	LEVER	3854303
2.	2.820	RING	764427	12.	2.895	SCREW	3841575
3.	2.820	CAP ASSY. (MONZA, CORSA)	3859835	13.	8.913	SCREW (#10–24 x 1-3/16)	
4.	2.896	CAM	3871106	14.	6.526	SPRING	3862907
5.	2.895	SWITCH ASSEMBLY	910821	15.	6.513	STEERING WHEEL	
6.	2.892	RETAINER	3866599	16.	8.929	L/WASHER (15/32 x 59/64 x 5/64)	
7.	4.010	HOUSING	3875014	17.	6.172	NUT	3722853
8.	2.895	COVER	3841555	18.	6.518	JACKET	3862452
9.	2.892	FASTENER	3793788	19.	6.526	SLEEVE	3863599
10.	2.897	KNOB	3782965				

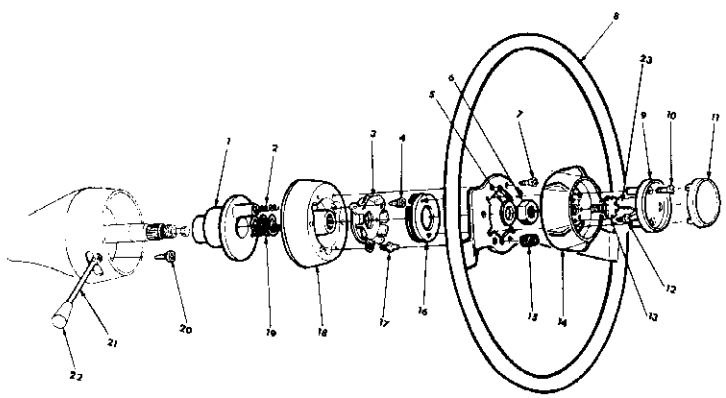

1965-66 CORVAIR—TELESCOPING DIRECTION SIGNAL DETAILS

1.	2.896	CAM ASSEMBLY	3863911	13.	6.516	SCREW	3863914
2.	2.816	SPRING	3883684	14.	6.516	KNOB	3863913
3.	2.819	CONTACT ASSEMBLY	3863904	15.	6.516	BUMPER	3863917
4.	8.977	SCREW (#8–32 x 3/8)		16.	2.820	PLATE	3869009
5.	6.515	WASHER	3863921	17.	2.819	SCREW	3869010
6.	8.916	NUT (9/16–18)		18.	6.512	HUB	3863902
7.	8.908	SCREW (#10–24 x 1/2)		19.	6.526	SPRING	3863915
8.	6.513	WHEEL ASSEMBLY	9741032	20.	8.977	SCREW (#8–32 x 1/2)	
9.	2.820	HORN BUTTON		21.	2.897	LEVER	3840903
10.	8.908	SCREW (#10–24 x 1)		22.	2.897	KNOB	3782965
11.	2.820	CAP ASSEMBLY	3883627	23.	2.816	SPRING	3868785
12.	N.L.	SCREW (#10–32 x 1/4)					

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

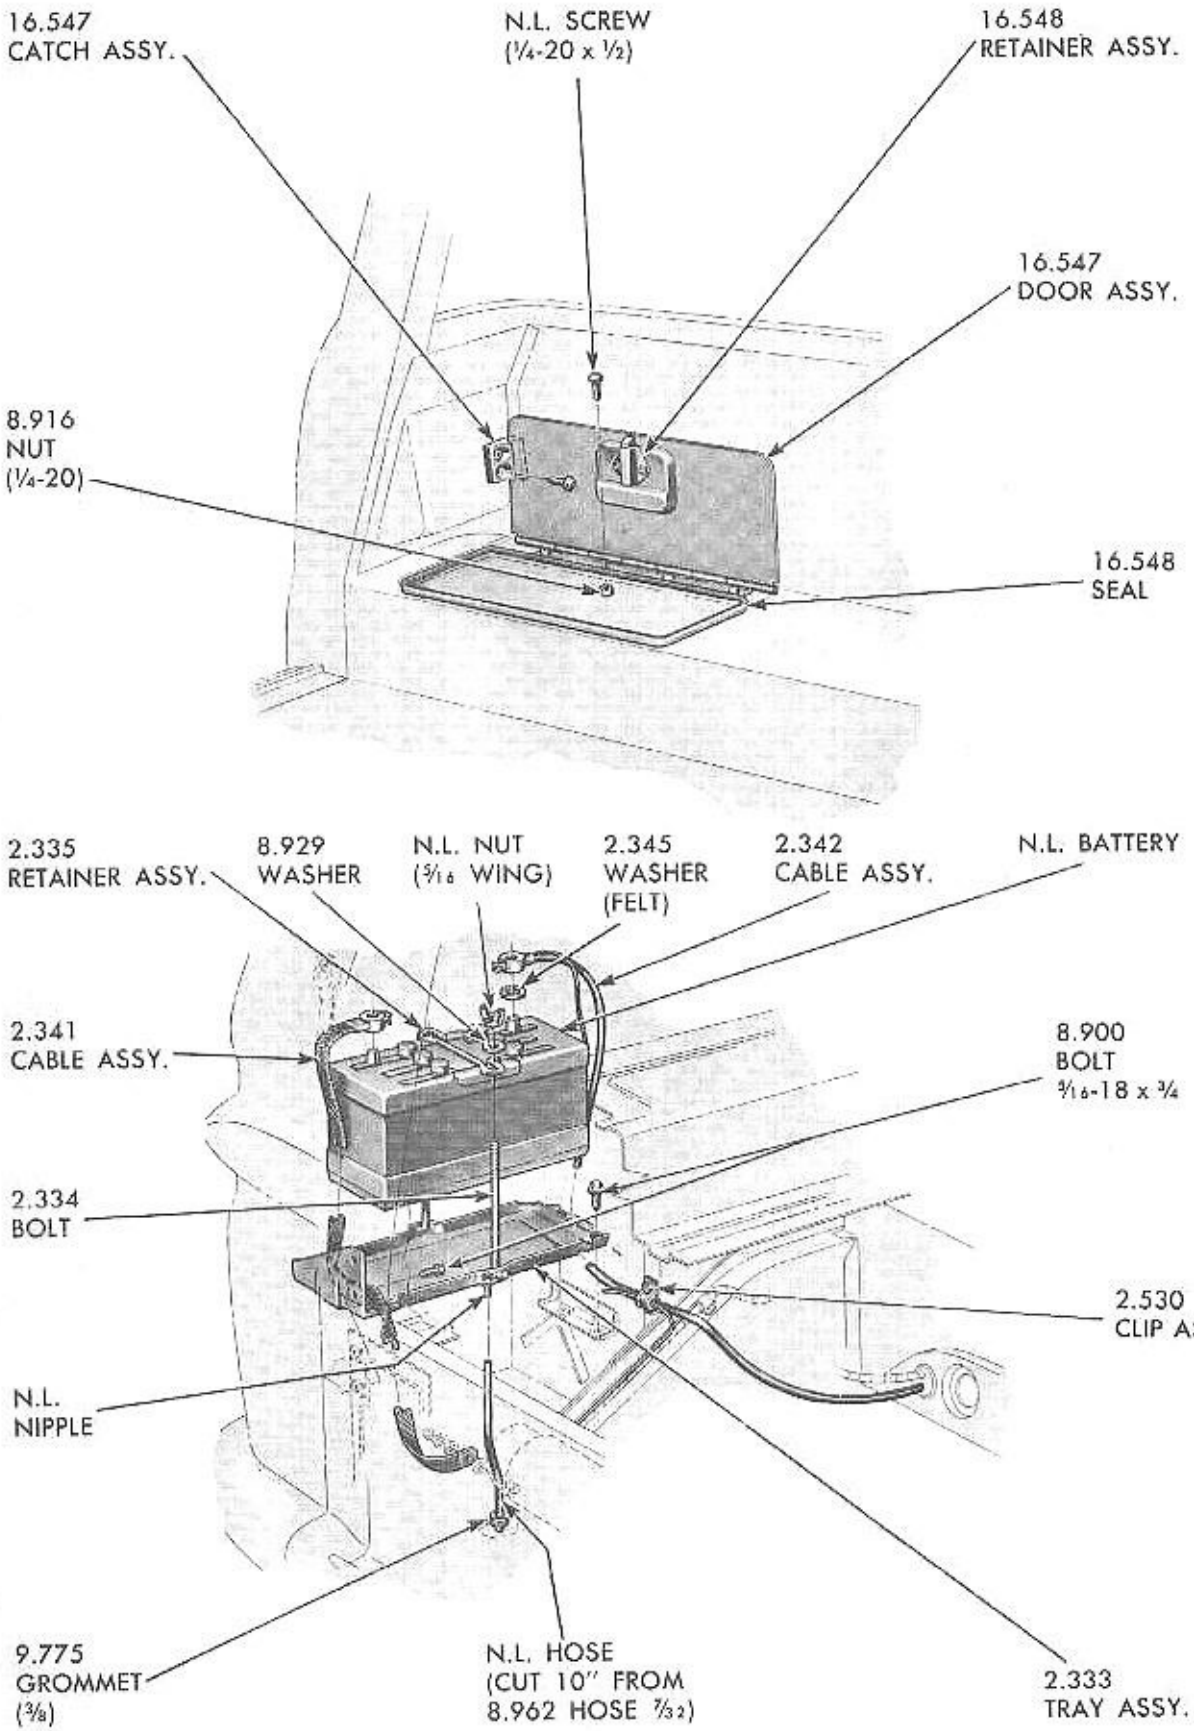

1961-65 CORVAIR F.C. BATTERY DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

2.041 MOTOR ASSEMBLY, Starting

60	CORVAIR	1108304	w/switch (stamped 1108304)	1
61-69	CORVAIR, F.C.	1108318	w/switch (stamped 1108318)	1

2.043 ARMATURE ASSEMBLY, Starting Motor

60-69	CORVAIR, F.C.	1946226	(Exchange Item-Note 1)	1

NOTE 1 List prices shown does not include exchange charge. Refer to Dealer Parts Price Schedule for exchange price.

2.049 COIL ASSEMBLY, Starting Motor Field

60-69	CORVAIR, F.C.	1945790		1

2.051 BRUSH, Starting Motor

60-69	CORVAIR, F.C.	1906945	(stamped 945)	4

2.052 HOLDER—SCREW—SUPPORT UNIT—PIN, Starting Motor Brush

60-69	CORVAIR, F.C.	1940477	ground	2
60-69	CORVAIR, F.C.	1926618	insulated	2
60-69	CORVAIR, F.C.	448015	**SCREW** (tapping—$^{11}/_{64}$—32 x $^{5}/_{8}$)	4
60-69	CORVAIR, F.C.	1928015	**SUPPORT UNIT**, holder (Note 1)	2

NOTE 1 Consists of 1 ea. support, lead, pin and 2 ea. screws, nuts, washers.

68-69	CORVAIR	1966923	**PIN**, support	2

2.053 SPRING, Starting Motor Brush

60-69	CORVAIR, F.C.	1926622	hairpin type—^{1} wide	2

2.055 LEAD, Starting Motor Brush

60-69	CORVAIR, F.C.	1926605	ground (2 terminals—$2^{3}/_{8}$ long)	2

2.063 COLLAR—RING—WASHER, Starting Motor

60-69	CORVAIR, F.C.	1927849	pinion stop (15 I.D. x $^{11}/_{16}$ O.D. x $^{3}/_{16}$ wide)	1
60-69	CORVAIR, F.C.	1927848	**RING**, pinion stop retainer (lock type $^{7}/_{16}$ I.D.)	1
60-69	CORVAIR, F.C.	1927850	**WASHER**, drive end ($^{15}/_{32}$ I.D. x $^{11}/_{16}$ O.D.)	1
60-69	CORVAIR, F.C.	818265	**WASHER**, brake (leather $^{9}/_{16}$ I.D. x $1^{5}/_{16}$ O.D.)	1

2.067 FRAME ASSEMBLY, Starting Motor Commutator End

60-69	CORVAIR, F.C.	1946745		1

2.077 SCREW—BOLT, Starting Motor

60-69	CORVAIR, F.C.	1949653	field lead (10—32 x $^{3}/_{8}$)	1
60-69	CORVAIR, F.C.	1970469	pole shoe ($^{3}/_{8}$—24 x $^{11}/_{16}$ O.L.) (Cad)	A.R.
60-69	CORVAIR, F.C.	1941111	**BOLT**, through ($^{1}/_{4}$—20 x $5^{7}/_{8}$ w/$^{5}/_{8}$ extension)	2
67-69	CORVAIR	1939970	**BOLT**, through (w/1107365-7388)	1

2.083 BUSHING, Starting Motor End

60-69	CORVAIR, F.C.	1923907	drive end ($^{15}/_{32}$ I.D. x $^{33}/_{64}$ O.D. x $^{23}/_{32}$ long)	1

2.085 HOUSING ASSEMBLY, Starting Motor Drive

60	CORVAIR	1949061	w/bushing	1
61-69	CORVAIR, F.C.	1952355	w/bushing	1

2.086 DRIVE ASSEMBLY, Starting Motor

60-69	CORVAIR, F.C.	1946221	w/1108306-07-8317-18 (Exchange Item-Note 1)	1

NOTE 1 List price shown does not include exchange charge. Refer to Dealer Parts Price Schedule for exchange price.

2.100 SWITCH ASSEMBLY, Starting Motor (on motor)

60-69	CORVAIR, F.C.	1114356	solenoid	1

2.102 SWITCH PARTS, Starting Motor Solenoid

60-64	CORVAIR, F.C.	1923935	**WASHER**, switch cover and terminal stud (nylon—$^{3}/_{16}$ I.D. x $^{7}/_{16}$ O.D.)	2
61-64	CORVAIR, F.C.	1927345	**WASHER**, insulating term. (nylon—$^{3}/_{8}$ I.D. x $^{5}/_{8}$ O.D.)	2
60-67	CORVAIR, F.C.	1935645	**CONTACT**, switch terminal	1
60-69	CORVAIR, F.C.	1956226	**CONTACT ASSY.**, switch, w/push rod	1
60-67	CORVAIR, F.C.	1853342	**SPRING**, contact return ($^{3}/_{8}$ O.D.—$^{17}/_{32}$ free length—5 coils)	1
60-64	CORVAIR, F.C.	1927344	**STUD**, switch terminal (copper—$^{3}/_{8}$—16 x $1^{1}/_{16}$)	1
60-69	CORVAIR, F.C.	1945827	**GROMMET**, field frame	1
60-69	CORVAIR, F.C.	1962198	**GROMMET**, field frame ($^{39}/_{64}$ I.D. x $^{3}/_{4}$ O.D.)	1
60	CORVAIR	1945161	**NUT**, terminal plate to solenoid switch	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

2.104 COVER—GASKET, Starting Motor

61-64	CORVAIR, F.C.	1935167	solenoid switch	1
60-64	CORVAIR, F.C.	1966034	**GASKET,** solenoid switch cover ($13/16$ I.D. x $2\frac{1}{2}$ O.D.—rubber)	1

2.108 LEVER ASSEMBLY—SHAFT—SPRING, Starting Motor Shaft

60-69	CORVAIR, F.C.	1945801		1
60-69	CORVAIR, F.C.	1945804	**SHAFT,** lever	1
60-67	CORVAIR, F.C.	1951002	**SPRING,** lever	1
60-69	CORVAIR, F.C.	1958679	**SPRING,** plunger	1

2.113 PLUNGER ASSEMBLY, Starting Motor

60-69	CORVAIR, F.C.	1941113	w/link	1

2.170 COIL, Ignition

60-69	CORVAIR, F.C.	1115202	w/1.8 OHM wire (stamped 202-12V)	1

2.171 WIRE ASSEMBLY, Ignition Coil

61	CORVAIR, F.C.	2978741	to distributor (high tension)	1
60	CORVAIR,			
62-69	CORVAIR, F.C.	2979565	to distributor (high tension—$16\frac{39}{64}$ O.L.)	1

2.173 RESISTOR, Ignition Coil

62-63	CORVAIR w/Turbo	1931385	primary	1

2.183 BRACKET—SCREW, Ignition Coil Mounting

60-64	CORVAIR, F.C.,			
65	F.C.	1950477		1
60-64	CORVAIR, F.C.,		heater ignition coil,	
65	F.C.	1909326	ignition coil	1
65-69	CORVAIR (exc. F.C.)	1956040		1
65	CORVAIR w/Air Cond.	3867246		1
60-69	CORVAIR, F.C.	1945901	**SCREW,** bracket (No. 10—32 x $1\frac{1}{2}$)	1

2.187 KEY, Ignition and Other Locations

60-66	CORVAIR, F.C.	3694624	blank (octagon head w/knockout plug)	A.R.
65-66	CORVAIR, F.C.	7002238	blank (round head-w/knockout plug-compt. locks)	A.R.
67	CORVAIR	7033454	blank (octagon head) ign. and door lock	A.R.
67	CORVAIR	7033455	blank (round head) compt.	A.R.
68	CORVAIR	7034680	blank (hexagon head) ign. and door lock	A.R.
68	CORVAIR	7034702	blank (round head)	A.R.
69	CORVAIR	7025019	blank (oval head)	A.R.
69	CORVAIR	7025014	blank (square head)	A.R.

2.188 CYLINDER ASSEMBLY—SWITCH ASSEMBLY, Ignition

NOTE See group 10.553 for Tumbler Unit, Spring Unit and Retainer used with lock cylinders.

60-64	CORVAIR, F.C.	3772085	less tumblers, spring and retainers, uncoded	1
65	CORVAIR	3869215	uncoded	1
65	F.C.	1458180	less tumblers, springs and retainers uncoded	1
66	CORVAIR	7031272	uncoded	1
67	CORVAIR	7033216	less tumblers, spring and retainers uncoded	1
68	CORVAIR	7023261	less tumblers, spring and retainers uncoded	1
69	CORVAIR	7025218	uncoded	1
60-64	CORVAIR, F.C.	1116569	**SWITCH ASSY.,** ignition and starting	1
65	F.C.	1116626	**SWITCH ASSY.,** ignition and starting	1
65	CORVAIR	1116661	**SWITCH ASSY.,** ignition and starting	1
66	CORVAIR	1116674	**SWITCH ASSY.,** ignition and starting	1
67	CORVAIR	1116687	**SWITCH ASSY.,** ignition and starting	1
68-69	CORVAIR	1116694	**SWITCH ASSY.,** ignition and starting	1

2.195 BUZZER, Ignition Switch Warning

68-69	CORVAIR	1386278	(9.762)	1

2.198 NUT, Ignition Switch

60-64	CORVAIR, F.C.,			
65	F.C.	3902185	mounting (1—24 thd.—$1\frac{1}{4}$ O.D.)	1
65-67	CORVAIR	3879549	ignition and starting switch	1
67-69	CORVAIR	3886982	ignition and starting switch	1

2.239 WIRE UNIT, Spark Plug

60-69	CORVAIR, F.C.	6292705	glass interbraid	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

2.240 WIRE ASSY., Spark Plug, with Terminals

62	F.C.	2979302	glass interbraid (36 1/4 O.L.) (short)	A.R.

2.251 SUPPORT—RETAINER—GROMMET, Spark Plug Wire

61-69	CORVAIR, F.C.	3815414		2
61-69	CORVAIR, F.C.	2966950	**RETAINER**	1
60-69	CORVAIR, F.C.	3702799	**RETAINER** (3-wire ret.) (black nylon)	A.R.
	Not required in this group. See Group 8.798	3707952	**GROMMET** (9/32")	

2.258 BOOT, Spark Plug

60-69	CORVAIR, F.C.	2973170	wire assy.—straight (1 25/32" O.D. x 2 long—neoprene) (cyls. 1-2-3-5)	A.R.
61-69	CORVAIR, F.C.	2977091	right angle (cyl. 4 and 6)	2

2.270 PLUG, Spark

60-65	CORVAIR, F.C. w/H/Per., 4/BC, Turbo.,			
66-68	CORVAIR w/A.I.R. (exc. 4/1BC),			
66-68	CORVAIR w/4/1BC, Turbo.	5612302	std. (AC44FF) (14MM) (Note 1)	A.R.
60-67	CORVAIR, F.C. (exc. H/Per., 4/1BC, Turbocharger, A.I.R.)	5612423	hot (AC46FF) (14MM) (Note 1)	A.R.

NOTE 1. On models with 9 to 1 compression ratio, 5612302 must be used. Refer to TSB 707—DR No. 472 (dated 4-4-61) for additional clarification.

69	CORVAIR (164)	5613315	(std. (R-44FF)	A.R.

2.271 GASKET, Spark Plug Seat

60-69	CORVAIR, F.C.	5612328	(9/16 I.D. x 25/32 O.D.) (14MM-chrome) (w/retention dimple)	A.R.
60-69	CORVAIR, F.C.	1555475	(14MM-chrome) (less retention dimple)	A.R.

2.273 WRENCH, Spark Plug

60-66	CORVAIR, F.C.	3708444	(13/16 hex.—4 1/4 length)	1

2.274 PULLEY ASSEMBLY—FAN—SPACER, Generator

NOTE See Dealer Price Schedule (P&A 26) for applicable prices.

		FAN	OUTSIDE DIA.	SHAFT DIA.	GROOVE NO.	WIDTH		
60-63	CORVAIR w/H/Per. (exc. 35 amp. L.C.I.),							
60-64	CORVAIR, F.C. (exc. 35 amp. L.C.I.),							
63	CORVAIR w/Turbocharger	Yes	2 7/8	45/64	1	3/8	3848042	1
60-63	CORVAIR w/H/Per. (exc. 35 amp. L.C.I.),							
63	CORVAIR w/Turbocharger	No	2 7/8	47/64	2	3/8	3792047	1
63-64	CORVAIR, F.C. w/35 amp. L.C.I.	No	2 1/2	21/32	1	1/2	1949355	1
65-69	CORVAIR, F.C.	Yes	3 1/16	43/64	1	3/8	3856602	1

60-64	CORVAIR, F.C. w/35 amp. L.C.I.	1922950	**FAN** (12 blades)	1
61-64	CORVAIR, F.C. w/35 amp. L.C.I.	1877887	**SPACER**, pulley	1

2.275 GENERATOR ASSEMBLY (less pulley)

Type No.

60-64	CORVAIR, F.C.	1102336	35 amp. (7 1/8 mounting dim.)	1
60-64	CORVAIR, F.C.	1105139	35 amp. L.C.I. (7 1/8" mounting dim.)	1
65-67	CORVAIR, F.C. (exc. Air Cond.),			
68-69	CORVAIR	1100639	37 amp A.C. (Delcotron) (less pulley and fan)	1
65-67	CORVAIR, F.C.	1100698	47 amp A.C. (Delcotron) (less pulley and fan)	1

GENERATOR (Rebuilt)

60-64	CORVAIR, F.C.	1102247	30 amp. (Exchange Item-Note 1) (16-U)	1
65-66	CORVAIR	1967644	(37 amp.) (Exchange Item-Note 1)	1

NOTE 1 List price shown does not include exchange charge. Refer to Dealer Parts Price Schedule for exchange price.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

2.277 BRACKET UNIT—BRACKET—BUSHING—SLEEVE—WASHER—BOLT, Generator

60-61	CORVAIR, F.C.	**3779946**	(Note 1)	1

NOTE 1 Consists of 1 Bracket, 2 Bushings, 1 Sleeve, 1 Bolt and 2 Washers.

60-63	CORVAIR, F.C. (exc. 35 amp. L.C.I.),			
64	CORVAIR, F.C. (exc. 35 amp. L.C.I., P.G.)	**3813531**	**BRACKET** (at rear—4 O.L.)	1
60-61	CORVAIR, F.C. w/35 amp., L.C.I.,			
63-64	CORVAIR, F.C. w/35 amp., L.C.I.	**3813532**	**BRACKET** (at rear—7 O.L.)	1
62	CORVAIR, F.C. w/35 amp., L.C.I.	**3822687**	**BRACKET**	1
60-63	CORVAIR, F.C. (exc. 35 amp. L.C.I.),			
64	CORVAIR, F.C. (exc. 35 amp. L.C.I., P.G.)	**3779299**	**BUSHING,** bracket	2
60-63	CORVAIR, F.C. (exc. 35 amp. L.C.I.),			
64	CORVAIR, F.C. (exc. 35 amp. L.C.I., P.G.)	**3779300**	**SLEEVE,** bracket bushing	1
60-63	CORVAIR, F.C.	**3693853**	**WASHER,** bracket ($^{7}/_{16}$)	1
60-63	CORVAIR, F.C.	**3790662**	**WASHER,** generator to bracket ($^{11}/_{32}$)	A.R.
60-69	CORVAIR, F.C.	**3825452**	**WASHER,** bracket spacer ($^{3}/_{4}$" O.D. x $^{25}/_{64}$" I.D. x $^{1}/_{16}$" thk.)	2
60-69	CORVAIR, F.C.	**3792381**	**WASHER,** bracket spacer ($^{3}/_{4}$" O.D. x $^{3}/_{8}$" I.D. x $^{1}/_{4}$" thk.)—(6.606)	1
62-64	CORVAIR, F.C. w/35 amp. L.C.I.,			
64	CORVAIR w/P.G.	**180081**	**BOLT,** to bracket ($^{5}/_{16}$"—18 x $1^{1}/_{4}$")—(8.900)	A.R.

2.279 ARMATURE ASSEMBLY—ROTOR ASSY.—RING ASSY., Generator

60-63	CORVAIR, F.C. w/1102226-2227	**1952301**	(Exchange Item-Note 1)	1
60-64	CORVAIR, F.C. w/1105135	**1950521**	(Exchange Item-Note 1)	1
64	CORVAIR, F.C. w/1102336	**1958598**	(Exchange Item-Note 1)	1
62-69	CORVAIR, F.C. w/100600-0601-0613-0615-0618-0620-0628-0629-0630-0633-0639-0665-0668-0669-0670-0693-0694-0696-0698-0750-94-95-96-0813-34 thru 0849	**1958565**	**ROTOR ASSY.,** w/shaft	1

NOTE 1 List price shown does not include exchange charge. Refer to Dealer Parts Price Schedule for exchange price.

2.280 NUT—WASHER, Generator Armature (Drive End)

60-64	CORVAIR, F.C. w/1100357-2226-2227-2336-5135	**1947830**	($^{21}/_{32}$—20 L.H. thread)	1
60-69	CORVAIR, F.C.	**1915172**	($^{5}/_{8}$—20—$^{1}/_{4}$)	1
60-69	CORVAIR, F.C.	**1941978**	**WASHER,** spring (wave)	1

2.285 BRUSH ASSEMBLY—BRUSH UNIT—HOLDER UNIT, Generator

60-63	CORVAIR, F.C., w/1100357-2096-2226-2227-2274	**1932506**	w/lead (stamped 956)	2
60-61	CORVAIR, F.C. w/1105135	**1906931**	w/lead (stamped 974)	2
64	CORVAIR, F.C. w/1102336	**1946429**		2
65-69	CORVAIR, F.C. w/1100639-0693-0694-0695-0696-0698-0750-0834 thru 0849	**1964682**	**BRUSH UNIT**	1
60-64	CORVAIR, F.C. w/1100357-2096-2174-2236-2227-2274-2236	**1925378**	**HOLDER UNIT,** w/brush (ground)—(2.291)	1
60-64	CORVAIR, F.C. w/1100357-2096-2174-2236-2227-2274-2236	**1925379**	**HOLDER UNIT,** w/brush (insulator)—(2.291)	1

2.286 SPRING, Generator Brush

60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5116-5135	**1916324**	($^{5}/_{16}$ O.D.—$12^{3}/_{4}$ coils)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

2.291 ARM—HOLDER UNIT—BRUSH UNIT, Generator Brush

60-62	CORVAIR, F.C., w/1100357-2096-2097-2174-2226-2227-2274-5135,			
63-64	CORVAIR, F.C. w/1102226-2227-2336-5135	**1944373**		2
60-64	CORVAIR, F.C. w/1100357-2096-2174-2226-2227-2274-2336	**1925378**	**HOLDER UNIT,** w/brush (ground)	1
60-64	CORVAIR, F.C. w/1100357-2096-2174-2226-2227-2274-2336	**1925379**	**HOLDER UNIT,** w/brush (insulator)	1
62-69	CORVAIR, F.C. w/1100600-0601-0613-0615-0618-0620-0628-0629-0630-0633-0639-0665-0668-0669-0670-0693-0694-0695-0696-0698-750-0834 thru 0849	**1964682**	**BRUSH UNIT** (2.285)	1

2.297 FRAME ASSEMBLY, Generator Commutator End

60-63	CORVAIR, F.C. w/1100326-0357-2096-2226	**1933933**		1
60-64	CORVAIR, F.C. w/1105135	**1950510**		1
61-64	CORVAIR, F.C. w/1102227-2336	**1951434**		1
65-69	CORVAIR, F.C. w/1100639-0698	**1965279**	slip ring end	1

2.298 BUSHING—RETAINER—BEARING ASSY., Generator Commutator End Frame

60	CORVAIR w/1100357-2226	**812823**	($^{9}/_{16}$ I.D. x $^{25}/_{32}$ O.D. x $^{13}/_{16}$ long)	1
60-64	CORVAIR, F.C. w/1105135	**1929959**	**RETAINER,** rubber ($^{3}/_{32}$ O.D. x $5\,^{1}/_{4}$ long)	1
62-69	CORVAIR, F.C. w/1100615-0618-0620-0628-0629-0630-0633-0639-0665-0668-0669-0670-0693-0694-0695-0696-0698-742-750-0834 thru 0849	**1959790**	**RETAINER,** slip ring end (w/felt washer)	1
60-64	CORVAIR, F.C. w/1105135,			
62-69	CORVAIR, F.C. w/1100639-93-94-95-96-98-750-94-95-96-0810 thru 0818-1117765	**905429**	**BEARING ASSY.,** rotor shaft end	1
60-64	CORVAIR, F.C. w/1105135,			
62-69	CORVAIR, F.C. w/1100600-0601-0613-0615-0618-0620-0628-0629-0630-0633-0639-0665-0668-0669-0670-0693-0694-0695-0696-0698-0742-0842-49	**7451763**	**BEARING ASSY.,** rotor slip ring end	1

2.301 WICK—PLUG—CUP, Generator Oil

60	CORVAIR w/1100357	**1947350**	(felt $^{7}/_{32}$" dia. x $3\,^{1}/_{2}$" long)—(2.364)	1
60-64	CORVAIR, F.C., w/1102174-5135	**1948326**	**PLUG,** hole (steel $1\,^{1}/_{8}$ dia. x $^{7}/_{16}$ long)	1
60-64	CORVAIR, F.C. w/1105135	**125609**	**CUP,** w/gasket 3/160 O.D.—(8.984)	2

2.305 FRAME—FRAME UNIT, Generator Drive End

60-64	CORVAIR, F.C. w/1105135	**1950519**		1
60-63	CORVAIR, F.C. w/1100357-2226	**1945332**		1
61-64	CORVAIR, F.C. w/1102227-2336	**1951438**		1
65-69	CORVAIR, F.C. w/1100639-0698	**1964819**		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts IRON

2.306 BEARING ASSEMBLY, Generator Drive End

60-69	CORVAIR, F.C. w/1100326-0357-0600-0601-0613-0615-0618-0620-0628-0629-0630-0633-0639-0665-0668-0669-0670-0693-0694-0695-0696-0698-2096-2174-2226-2227-2336-5116-5135-1117765	**905429**	(2.298)	1

2.307 PARTS, Generator Drive End

60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**1911263**	**PLATE,** brg. ret. ($13/32$ I.D. x 2 O.D.)	1
62-69	CORVAIR, F.C. w/1100600-601-613-615-618-620-628-629-630-633-639-665-668-669-670-693-694-695-696-698-472-750-0834 thru 0849	**1955494**	**PLATE,** brg. ret.	1
60-69	CORVAIR, F.C. w/1100357-0615-0618-0620-0628-0629-0630-0633-0639-0665-0668-0669-0670-0693-0694-0695-0696-0698-742-750-0834 thru 0849-2226-2227-2274-2336-5135	**1912008**	**GASKET,** brg. ret. plate inner (13/32 I.D. x 2 O.D.)	1
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5136	**809945**	**WASHER,** brg. spacer (metal) ($11/16$" I.D. x $16/16$" O.D. x $3/32$" thk.)	1
60-66	CORVAIR, F.C. w/1100357-2096-2226-2227-2274-2336-5135-1117765	**809961**	**WASHER,** brg. felt, outside ($29/32$" I.D. x $1\ 5/16$" O.D.)	1
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**1858603**	**COLLAR,** brg. spacer, outer ($11/16$ I.D. x $29/32$ x $3/4$)	1
62-69	CORVAIR, F.C. w/1100600-601-613-615-618-620-628-629-633-639-665-670-693-694-695-696-698-742-750-0843-46-47-49	**1959991**	**COLLAR,** ball brg. spacer (outside)	1
64-69	CORVAIR, F.C. w/1100639-665-668-670-693-694-695-696-698-742-750-0834 thru 0849	**1963139**	**COLLAR,** brg. spacer (inside)	1
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**819104**	**RETAINER,** felt washer (1 I.D. x $19/16$ O.D.)	1
60-66	CORVAIR, F.C. w/1100357-2096-2226-2227-2274-2336-5135-7754-1117765	**1914580**	**SCREW,** brg. retainer plate (No. 10—32 x $7/16$")	3
62-69	CORVAIR, F.C. w/110639-693-694-695-696-698-0742-750-94-95-96-0813 thru 18-0834 thru 0849	**1965104**	**SCREW,** brg. retainer plate	3
62-69	CORVAIR, F.C. w/1100600-601-613-615-618-620-629-630-633-639-665-668-669-670-693-694-695-696-698-742-750-0834 thru 0849	**1947344**	**SLINGER,** ball bearing grease	1

2.310 COIL UNIT—STATOR ASSY., Generator Field

60-64	CORVAIR, F.C. w/1102226-2227-2336	**1945260**		1
60-64	CORVAIR, F.C. w/1105135	**1950516**		R.H.
60-64	CORVAIR, F.C. w/1105135	**1950517**		L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-69	CORVAIR, F.C. w/1100615-620-628-629-630-639-668-669-670-693-695-696-0834-36-37-39-41-42-43	**1959381**	**STATOR ASSY.**	1
65-68	CORVAIR, F.C. w/1100698	**1964702**	**STATOR ASSY.**	1

2.313 STUD—WASHER—INSULATOR—TERMINAL UNIT, Generator

60-64	CORVAIR, F.C., CHEVY w/1100357-2096-2226-2227-2274-2336-5135	**1923284**	armature terminal ($^{7}/_{32}$—24 x $1^{35}/_{64}$ O.L.)	1
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**1905125**	**WASHER,** steel term. stud outside ($^{1}/_{4}$ I.D. x $^{9}/_{16}$" O.D. x $^{1}/_{32}$ thk.)	2
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**1858753**	**WASHER,** term. stud insul., outside ($^{1}/_{4}$" I.D. x $^{5}/_{8}$" O.D. x $^{3}/_{32}$" thk.)	1
64-69	CORVAIR, F.C. w/110639-668-670-693-694-695-696-698-742-750-0834 thru 0849	**1959523**	**WASHER,** condenser terminal insulator screw	1
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**1858749**	**INSULATOR,** terminal stud ($^{11}/_{16}$ O.D. x $^{15}/_{64}$ I.D.)	1
60-64	CORVAIR, F.C., w/1100357-2096-2226-2227-2274-2336-5135	**1921362**	**INSULATOR,** terminal stud (plastic—$^{21}/_{32}$" O.D. x $^{1}/_{4}$" thk.)	1
64-69	CORVAIR, F.C. w/1100639-668-670-693-694-695-696-698-742-750-0834 thru 0849	**1959389**	**INSULATOR,** condenser terminal screw	1
62-69	CORVAIR F.C. w/1100615-618-620-628-629-630-633-639-665-668-670-693-694-695-696-698-742-750-0834 thru 0849	**1959832**	**TERMINAL UNIT,** battery (Note 1)	1
62-69	CORVAIR F.C. w/1100615-628-620-628-629-630-633-639-665-668-669-670-639-694-695-696-698-742-750-0834 thru 0849	**1959833**	**TERMINAL UNIT,** ground (Note 1)	1

NOTE 1 Consists of 1 stud, 1 insulator, 2 washers, 2 lockwashers and 2 nuts.

2.316 BOLT—NUT, Generator Through

60	CORVAIR w/1100357	**1908680**	($^{5}/_{16}$—18 x 7)	2
60-64	CORVAIR, F.C., w/1102096-2174-2226-2227-2336	**809763**	($^{5}/_{16}$—18 x $7^{5}/_{8}$)	2
60-64	CORVAIR, F.C. w/1105135	**1886685**	($^{5}/_{16}$—18 x 8)	2
61-69	CORVAIR, F.C. w/1100600-601-613-6-5-618-620-628-629-630-633-639-665-668-669-670-693-694-695-696-698-742-750-0834 thru 0849	**1956975**	($^{3}/_{16}$"—24 x $2^{5}/_{16}$")	4

2.317 BRACE—SPACER, Generator

NOTE See Dealer Price Schedule (P&A 26) for applicable prices.

		LENGTH	SLOT	OFFSET	SHAPE		
65-69	CORVAIR, F.C.	$5^{1}/_{2}$	$^{3}/_{4}$	$1^{1}/_{8}$	Curved	3883889	1
65-67	CORVAIR	**3883890**		**SPACER,** gen. brace to gen.			1

2.319 DIODE—HEAT SINK ASSY.—CONDENSER—SPRING—TERMINAL UNIT, Generator

62-69	CORVAIR, F.C. w/1100615-618-620-628-629-630-633-639-665-668-669-670-693-694-695-696-698-742-750-0834 thru 0849	**1959829**	positive (45-52-61 ampl) (red)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts, LLC

62-69	CORVAIR, F.C. w/1100615-618-620-628-629-630-633-639-665-669-670-693-694-695-696-698-742-750-0834 thru 0849	1959830	negative (42-52-61 amp.) (black)	A.R.
62-69	CORVAIR, F.C. w/1100615-618-620-628-629-630-633-639-665-668-669-670-693-694-695-696-698-742-750-0834 thru 0849	1959828	**HEAT SINK ASSY**	1
62-69	CORVAIR, F.C. w/1100615-618-620-628-629-630-633-639-665-669-670-693-694-698-742-750-0838 thru 0849	1959455	**CONDENSER**	1
62-69	CORVAIR, F.C. w/1100615-618-620-628-629-630-633-639-665-668-669-670-693-694-695-696-698698-742-750-0834 thru 0849	1960750	**SPRING,** condenser retaining	1
65-69	CORVAIR, F.C.	1959834	**TERMINAL UNIT,** gen. junction	3

2.333 TRAY ASSY.—POCKET ASSY., Battery

60	CORVAIR	6257958		1
61-65	F.C.	3795188		1
61-62	CORVAIR	3821036		1
63-64	CORVAIR	3829940		1
65-69	CORVAIR	3876963		1
61-62	CORVAIR (exc. LAKEWOOD, F.C.),			
63	CORVAIR	4402627	**POCKET ASSY.,** (12.941)	2

2.334 BOLT, Battery Clamp

60	CORVAIR,			
61-65	F.C.,			
65	CORVAIR (exc. H.D. Batt.)	6255817	($^5/_{16}$—18 x $8^1/_8$ O.L.—hook end)	A.R.
61-64	CORVAIR (exc. STA. WAG.)	3758788	long hook ends $^5/_{16}$—18 x $6^{15}/_{16}$)	2
61-62	CORVAIR (STA. WAG.)	3736742	($^5/_{16}$—18 x $8^1/_2$)	2
65	CORVAIR, w/H.D. Batt.	3714197	(hook hd.)	1
65	CORVAIR (exc. H.D. Batt.)	3848488	rear ($^5/_{16}$—18 x $7^5/_8$)	1
65	CORVAIR w/H.D. Batt.	3848495	rear ($^5/_{16}$—18 x $9^1/_4$)	1

2.335 RETAINER ASSY.—CLAMP, Battery

60	CORVAIR	6255815		1
61-64	CORVAIR, F.C.,			
65	F.C.	3839898		1
65	CORVAIR	3862900		1
66-69	CORVAIR	3887588	**CLAMP**	1

2.341 CABLE ASSEMBLY—STRAP, Ground

60	CORVAIR	2972660	engine ($11^1/_4$—ctr. to ctr. holes)	1
60	CORVAIR	2981855	battery ($19^1/_2$-ctr to ctr holes)	1
61-64	CORVAIR (exc. STA. WAG.)	2978665	eng. and battery ($18^1/_2$—ctr. to ctr. holes)	2
65	F.C.	2985652	batt. (29—ctr. to ctr. holes)	1
65	CORVAIR w/H.D. Batt. (1st design)	6286125	batt. (16—ctr. to ctr. holes)	1
65-69	CORVAIR (exc. H.D. Batt.)	6289194	batt. (10—ctr. to ctr. holes)	1
65-69	CORVAIR w/H.D. Batt. (2nd design)	6286146	batt. (18—ctr. to ctr. holes)	1
61-62	CORVAIR (STA. WAG.)	2978666	**STRAP,** battery (24—ctr. to ctr. holes)	1
61-64	F.C.	2976097	**STRAP,** battery ($28^1/_2$"—ctr. to ctr. holes)	1

2.342 CABLE ASSEMBLY—BLOCK ASSY., Battery to Starting Switch

60	CORVAIR (exc. F.C.)	2980854	w/heater lead (52—ctr. to ctr. holes)	1
61-63	F.C.	2978181	w/heater lead (60—ctr. to ctr. holes)	1
61-64	CORVAIR	2980904	($32^1/_2$—ctr. to ctr. holes)	1
64-66	F.C.	2980776	($40^1/_2$—ctr. to ctr. holes)	1
65-66	CORVAIR	2987281	(32—ctr. to ctr. holes)	1
67-69	CORVAIR	6289134	(34—ctr. to ctr. holes)	1

2.343 BOLT UNIT—NUT, Battery Cable Terminals

60-69	CORVAIR, F.C.	1846534	w/nut-For bolt type clamp	1
65-69	CORVAIR	3884922	**NUT,** positive cable and wiring harness	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

2.345 PLUG—WASHER—COVER—BASE, Battery

60-64	CORVAIR (1st. design),			
60-64	F.C.	1944003	filler	A.R.
64-65	CORVAIR (2nd design)	1967508	filler	A.R.
60-69	CORVAIR, F.C.	1966128	filler (Delco Eye) push on type	1
60-66	CORVAIR, F.C.	378082	**WASHER,** positive terminal	1
65-69	CORVAIR w/H.D. Batt.	3863987	**COVER,** cap	2
65-66	CORVAIR w/H.D. Batt.	3863986	**BASE,** batt. cap cover	2
67-69	CORVAIR	3909114	**BASE,** batt. cap cover	2

2.361 DISTRIBUTOR ASSY., Ignition

60-63	CORVAIR w/H/Per.	1110296		1
60-63	CORVAIR, F.C. (exc. P.G., H/Per., Turbocharger)	1110294		1
60-61	MONZA w/P.G. (1st design),			
60-62	CORVAIR, F.C. w/P.G. (exc. MONZA, H/Per.),			
63	CORVAIR, F.C. w/P.G. (exc. H/Per., MONZA),			
63	MONZA (P.G. w/C.A.C.) (exc. H/Per.)	1110295		1
61-62	MONZA w/P.G. (2nd design) (exc. H/Per.),			
63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64-67	CORVAIR, F.C. w/P.G. (exc. H/Per., Sp. H/Per., A.I.R.),			
68-69	CORVAIR w/P.G. (exc. H/Per., Sp. H/Per.)	1110453		1
62-67	CORVAIR w/Turbocharger	1110298		1
64-67	CORVAIR, F.C. (exc. H/Per., P.G., Turbo. Sp. H/Per., A.I.R.)	1110310		1
64-67	CORVAIR, F.C. w/H/Per. (exc. A.I.R.),			
68-69	CORVAIR (P.G. w/H/Per.)	1110455		1
65-66	CORVAIR w/Turbo.	1110329		1
65-66	CORVAIR (P.G. w/4/1BC) (exc. A.I.R.)	1110339		1
65-66	CORVAIR w/4/1BC (exc. P.G., A.I.R.)	1110330		1
66-67	CORVAIR w/A.I.R. (exc. H/Per., Sp. H/Per.)	1110369		1
66	CORVAIR w/H/Per. (A.I.R. w/P.G.),			
66	CORVAIR (A.I.R. w/4/1BC),			
67	CORVAIR w/A.I.R.,			
68-69	CORVAIR w/H/Per. (exc. P.G.),			
68-69	CORVAIR w/4/1BC	1110454		1
66	CORVAIR (A.I.R. w/H/Per.) (exc. P.G.)	1110372		1
68	CORVAIR (exc. P.G., H/Per., Sp. H/Per.)	1110434		1
69	CORVAIR (exc. P.G., H/Per., Sp. H/Per.)	1110452		1

2.362 HOUSING ASSEMBLY—DUST SHIELD, Distributor

60-61	CORVAIR, F.C.	1951739		1
62-69	CORVAIR, F.C.	1954579		1
60-66	CORVAIR, F.C.	1960325	**DUST SHIELD**	1

2.363 GASKET—RETAINER—CLAMP UNIT—CLAMP, Distributor

60-69	CORVAIR, F.C.	6256636		1
62-69	CORVAIR, F.C.	3770598	**RETAINER,** clamp	1
60-69	CORVAIR, F.C.	3791246	**CLAMP UNIT** (Note 1)	1

NOTE 1 This part must be used when installing 1110297 in place of 1110275 on 1961 models. Consists of 1-clamp and 1-clamp retainer.

60-69	CORVAIR, F.C.	2494772	**CLAMP** (1 1/4" to 5 1/8")—(1.166)	A.R.

2.364 WICK—WASHER, Distributor Cam Lubricator

62-69	CORVAIR, F.C.	1961088		1
	Not required in this group. See group 2.301	1947350		
60-61	CORVAIR, F.C.,			
64-69	CORVAIR, F.C.	1951099	**WASHER,** oil seal	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

2.367 CAP, Distributor

60-61	CORVAIR, F.C.	1945360		1
62-69	CORVAIR, F.C.	1971324		1

2.368 SPRING, Distributor Cap

60-63	CORVAIR, F.C.	1945756		1

2.372 SHAFT—POLE PIECE—GROMMET—COIL ASSY., Distributor

60-61	CORVAIR, F.C. w/P.G. (exc. MONZA),			
61	MONZA (1st design)	1951222	w/automatic cam (w/1110259)	1
62-63	CORVAIR, F.C. (exc. H/Per., P.G.),			
62-63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
63	MONZA (A.T. w/C.A.C.) (exc. H/Per.),			
64	CORVAIR, F.C. w/P.G. (exc. H/Per. MONZA),			
64	CORVAIR w/Turbocharger	1960198	w/weight plate (w/1110290-0294-0295-0296-0298-0314)	1
62-63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64	CORVAIR, F.C. (exc. H/Per.),			
65-67	CORVAIR, F.C. (exc. H/Per., Turbo, 4/1BC, A.I.R.),			
68	CORVAIR (exc. P.G., H/Per.),			
69	CORVAIR (exc. H/Per., Sp./H/Per.)	1963611	w/weight plate (w/1110297-0278-1110310-0311-0434)	1
64-68	CORVAIR, F.C. w/H/Per. (exc. A.I.R.),			
69	CORVAIR (A.T., w/H/Per.)	1963790	w/weight plate (w/1110319)	1
65-66	CORVAIR w/Turbo.	1965362	w/weight plate (w/1110329)	1
65-67	CORVAIR w/1BC (exc. A.I.R.)	1965541	w/weight plate (w/1110330-0339)	1
66-68	CORVAIR (A.I.R. w/4/1BC)	1966926	main, w/weight plate (w/1110371)	1
66	CORVAIR w/H/Per. (A.I.R. w/P.G.)	1966938	main, w/weight plate (w/1110370)	1
66	CORVAIR w/A.I.R. (exc. 4/1BC)	1967266	main, w/weight plate (w/1110369-72)	1
66-67	CORVAIR w/A.I.R. (exc. H/Per., 4/1BC, P.G.)	1967269	main, w/weight plate (w/1110368)	1
67	CORVAIR w/A.I.R.,			
68	CORVAIR w/H/Per. (exc. P.G.),			
69	CORVAIR w/H/Per., Sp./H/Per. (exc. A.T.)	1968522	main, w/weight plate (w/1110389)	1

2.374 GEAR—GEAR UNIT, Distributor

60-67	CORVAIR, F.C. (exc. A.I.R.)	6255534	drive (6 teeth)	1
66-67	CORVAIR w/A.I.R.,			
68-69	CORVAIR	3891547	drive	1
60-69	CORVAIR, F.C.	1962053	GEAR UNIT	1

2.379 WASHER—PIN, Distributor Gear

60-63	CORVAIR, F.C.	1837617	(1 1/2" I.D. x 1" O.D. x 1 1/2" thk.)	1
60-69	CORVAIR, F.C.	1946238	main shaft thrust (1 1/2 I.D. x 7/8 O.D. x 1/16 thk.)	1
62	CORVAIR w/Turbocharger,			
63-69	CORVAIR, F.C.	1960478	thrust (w/3 tangs)	1
61	MONZA w/P.G.,			
62-63	CORVAIR, F.C.	274795	PIN, (1 1/8" x 3/4")—(8.939)	1

2.381 CAM, Distributor

60-61	CORVAIR, F.C. (exc. H/Per., P.G.)		w/weight plate (w/1110252-58),	
60-61	CORVAIR, F.C. w/H/Per.,			
61	CORVAIR, F.C. w/P.G.	1945365	w/weight plate (w/1110252-57-58-59-60)	1
62-67	CORVAIR, F.C. (exc. H/Per., P.G., Turbocharger, A.I.R.)		w/automatic breaker (w/1110267-69-	
68-69	CORVAIR (exc. P.G., H/Per., Sp./H/Per.)	1954584	0293-0294-0310-0330-0434-52)	1
62-63	CORVAIR, F.C. w/P.G. (exc. MONZA, H/Per.)	1954890	automatic and breaker (w/1110295)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-63	MONZA w/P.G. (exc. H/Per.),			
64-66	CORVAIR, F.C. w/P.G. (exc. H/Per., 4/BC, A.I.R.),			
67-69	CORVAIR w/P.G. (exc. H/Per., Sp./H/Per.)	1957282	automatic and breaker (w/1110297-0311)	1
62-67	CORVAIR w/Turbo	1960200	automatic and breaker (w/1110290-0298-0314-0329)	1
64-68	CORVAIR, F.C. w/H/Per. (exc. A.I.R.),			
69	CORVAIR (P.G., w/H/Per.)	1963791	automatic and breaker (w/1110319)	1
65-67	CORVAIR (P.G. w/Sp. H/Per.) (exc. A.I.R.)	1962514	advance w/breaker (w/1110339)	1
66-67	CORVAIR w/A.I.R. (exc. P.G., H/Per.)	1967267	advance w/breaker (w/1110369)	1
66	CORVAIR w/A.I.R. w/H/Per. (exc. P.G.)	1967258	advance w/breaker (w/1110372)	1
66	CORVAIR w/H/Per. (A.I.R. w/P.G.)	1967262	advance w/breaker (w/1110370)	1
66-67	CORVAIR (A.I.R. w/4/1BC),			
68	CORVAIR w/4/1BC	1967265	advance w/breaker (w/1110371)	1
66-67	CORVAIR w/A.I.R. (exc. H/Per., 4/1BC, P.G.)	1967271	advance w/breaker (w/1110368)	1
68-69	CORVAIR w/H/Per. Sp./H/Per. (exc. P.G.)	1966935	advance w/breaker (w/1110389-0454)	1

2.382 ROTOR ASSY., Distributor

60-61	CORVAIR, F.C.	1945369		1
62-69	CORVAIR, F.C.	800056		1

2.384 POINT UNIT, Distributor

60-61	CORVAIR, F.C.	1945376		1
62-69	CORVAIR, F.C.	1954557		1

2.385 PLATE ASSY.—SPRING, Distributor Breaker

60-61	CORVAIR, F.C.	1945373		1
62-66	CORVAIR, F.C.,			
66-68	CORVAIR w/A.I.R.	1961428		1
60-61	CORVAIR, F.C.	1932024	**SPRING,** plate retaining	1
62-69	CORVAIR, F.C.	1956213	**SPRING,** plate retaining	1

2.387 SCREW—SPRING, Distributor Contact Point

60-63	CORVAIR, F.C.	131954	support clamp (No. 8—32 x $^{5}/_{16}$" dia. sltd. hd.)—(8.907)	1
62-65	CORVAIR, F.C. w/1110947-87-1015-16-51	1931995	**SPRING,** contact adj. screw	1

2.388 WEIGHT, Distributor

60-63	CORVAIR, F.C. (exc. H/Per., P.G., Turbocharger),			
62-63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64-69	CORVAIR, F.C. (exc. H/Per., Sp. H/Per. Turbo., A.I.R.)	1880902		2
60-61	CORVAIR w/P.G.,			
62-63	CORVAIR, F.C. w/P.G. (exc. MONZA, H/Per.),			
63	MONZA (P.G. w/C.A.C.) (exc. H/Per.),			
65-66	CORVAIR, F.C. w/H/Per., (exc. A.I.R.)	1881371		2
60-63	CORVAIR w/H/Per.	1924737		1
62-66	CORVAIR w/Turbocharger	1960203		2
66	CORVAIR w/A.I.R. (exc. Sp. H/Per.),			
68-69	CORVAIR w/H/Per., Sp. H/Per. (exc. P.G.)	1965843		2

2.389 SPRING, Distributor Weight

60	CORVAIR w/P.G.	1951743	(w/1111193-95)	2
60-61	CORVAIR, F.C. (exc. H/Per., P.G.),			
63	CORVAIR, F.C. (exc. P.G., H/Per., Turbocharger)	1922381		2
60-63	CORVAIR w/H/Per.	1882995		2
61	CORVAIR, F.C. w/P.G. (exc. MONZA),			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Division Parts

61	MONZA (1st design),			
62	CORVAIR, F.C. w/P.G. (exc. MONZA, H/Per.)	1943041	w/1110259-71 ($^{3}/_{4}$ free length)	2
61	MONZA w/P.G. (2nd design),			
62-63	MONZA w/P.G. (exc. H/Per., C.A.C.),			
64-66	CORVAIR, F.C. w/P.G. (exc. H/Per., 4/1BC, A.I.R.)	1955764	w/1110275-78-0311 ($^{11}/_{16}$ free length)	2
62	CORVAIR, F.C. (exc. H/Per., P.G., Turbocharger)	1928363	w/1110269	2
62-64	CORVAIR w/Turbocharger	1960205	w/1110290-0298-0314	2
63	CORVAIR, F.C. w/P.G. (exc. MONZA, H/Per.),			
63	MONZA (P.G. w/C.A.C.) (exc. H/Per.)	1883335	w/1110295	2
64-67	CORVAIR, F.C. (exc. H/Per., 4/1BC, P.G., Turbocharger, A.I.R.)	1887553	w/1110310	2
64-69	CORVAIR, F.C. w/H/Per. (exc. A.I.R.)	1886538	w/1110319	2
65-66	CORVAIR w/turbo	1965353	w/1110329	1
65-67	CORVAIR w/4/1BC (exc. P.G., A.I.R.)	1965545	w/1110330	2
65-67	CORVAIR (4/1BC w/P.G.) (exc. A.I.R.)	1965886	w/1110339	2
66-67	CORVAIR (A.I.R. w/4/1BC),			
68	CORVAIR w/H/Per. (exc. P.G.)	1922426	w/1110336-71	2
66	CORVAIR (A.I.R. w/H/Per.) (exc. P.G.)	1925574	w/1110372	2
66-67	CORVAIR (A.I.R. w/P.G.) (exc. H/Per., 4/1BC)	1961933	w/1110369-1256	2
66-67	CORVAIR w/A.I.R. (exc. H/Per., 4/1BC, P.G.)	1967516	w/1110368	2
66	CORVAIR w/H/Per. (A.I.R. w/P.G.)	1967517	w/1110370-1249	2
67	CORVAIR w/A.I.R.,			
68-69	CORVAIR w/H/Per., Sp. H/Per. (exc. P.G.)	1968533	w/1110389	2
68-69	CORVAIR (exc. P.G., H/Per., Sp. H/Per.)	1970572	w/1110434	2
69	CORVAIR w/P.G. (exc. H/Per., Sp. H/Per.)	1964434	w/1110453	2

2.390 PLATE, Distributor Weight Hold Down

62-69	CORVAIR	1954548	w/1110267-68-69-71-72-78-80-92-93-0426-33-34-47-0452 thru 0470	1

2.393 CONDENSER ASSY.—BRACKET, Distributor

60-69	CORVAIR, F.C.	1928111		1
60-61	CORVAIR, F.C.,			
62	MONZA w/P.G. (exc. H/Per.),			
62	CORVAIR w/Turbocharger,			
63-69	CORVAIR, F.C.	1944118	**BRACKET,** condenser	1

2.400 LEAD—CONNECTOR, Distributor Terminal

60-61	CORVAIR, F.C.	1932002	breaker plate ground	1
60-61	CORVAIR, F.C.	1946254		1
62-69	CORVAIR, F.C.	1954563		1

2.401 GROMMET, Distributor Terminal

60-61	CORVAIR, F.C.	1932023	housing	1
62-69	CORVAIR, F.C.	1954564		1

2.405 ACTUATOR ASSY., Distributor Pressure

62-63	CORVAIR w/Turbocharger		w/1110290-1110298,	
64	SPYDER	1116224	w/1110314	1
65-68	CORVAIR w/4/1BC	1116248	w/1110330-0371	1
65-66	CORVAIR w/Turbo.	1116250	w/1110329	1

2.410 CONTROL ASSY., Distributor Vacuum

60-61	CORVAIR, F.C.	1116177		1
60	CORVAIR w/H/Per.,			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-67	CORVAIR, F.C. (exc. Monza, A.I.R.),			
65-67	CORVAIR w/P.G. (exc. A.I.R.),			
68-69	CORVAIR	1116217		1
62	CORVAIR, F.C. (exc. H/Per., P.G., Turbocharger)	1116195		1

NOTE Turbocharged Engines use Actuator Assy. 1116224 (2.405).

2.414 BOOT—PLATE, Distributor Vacuum Advance Arm Opening

63-69	CORVAIR, F.C.	1963610		1
66-67	CORVAIR w/A.I.R.,			
66-67	CORSA w/Turbo	3878506	**PLATE,** dist. indicator	1

2.420 HOSE—NIPPLE—CONNECTOR, Spark Control

60-69	CORVAIR, F.C.	3951436	($^5/_{32}$" I.D. x 20" O.L.)	1
62-63	CORVAIR w/Air Cond.,			
65	CORVAIR w/Air Cond.	3749168	**NIPPLE,** vacuum control ($^1/_8$"—27) (for $^1/_4$" I.D. hose)	1
62-66	CORVAIR w/Turbocharger	3818743	**CONNECTOR,** hose	1

2.447 SWITCH ASSEMBLY—NUT, Stop Lamp

60-69	CORVAIR	3886906		1
61-65	F.C.	1993317		1
66	CORVAIR	9420171	**NUT,** ($^1/_2$"—20, type R-ZC)—(8.921)	2

2.459 SWITCH ASSEMBLY, Headlamp Dimmer

60-69	CORVAIR, F.C.	1997028		1

2.480 HARNESS ASSY.—WIRE ASSY.—WIRE, Wiring (Also see group 13.090 for additional body harnesses)

60	CORVAIR (exc. C.C. equip.).			
60	CORVAIR (P.G. w/C.C. equip.)	2975066	main (cover 160 O.L.)	1
60	CORVAIR	2976756	for use with headlamp (inland type connector) (cover 113$^1/_4$ O.L.)	1
60	CORVAIR	2976723	instrument panel (cover 38$^3/_4$ O.L.) (w/junction block)	1
60	CORVAIR	2975068	rear (cover 84 O.L.)	1
61	CORVAIR (exc. F.C.)	2978925	main (cover 095 O.L.)	1
61-64	CORVAIR	2985706	forward lamp	1
61	CORVAIR (exc. STA. WAG.)	2979634	rear (cover 54 O.L.)	1
61	LAKEWOOD	2978923	rear (cover 70$^1/_2$ O.L.)	1
61	CORVAIR	2978940	instrument panel (cover 40 O.L.) (w/junction block)	1
61	F.C.	2978934	instrument panel (cover 40 O.L.) (w/junction block)	1
61-64	F.C.	2985781	rear compartment	1
61-65	F.C.	2985788	body wiring (main)	1
62	CORVAIR (STA. WAG.)	2980905	rear (cover 75 O.L.)	1
62-63	CORVAIR w/Turbocharger	2981041	rear	1
62-63	F.C.	2982821	instrument panel (w/junction block) (cover 41 O.L.) (Note 1)	1

NOTE 1 When using on models without radios, tape the radio and heater leads.
When using on three speed transmission models, splice neutral safety switch wires and tape gear selector quadrant lamp socket.

62-64	CORVAIR (exc. SPYDER)	2985708	instrument panel (Note 2)	1

NOTE 2 When using on 1962 and 1963 models rework as necessary.

62-64	CORVAIR w/Turbocharger	2985709	instrument panel	1
62-64	CORVAIR	2985712	body wiring (main)	1
64	F.C.	2985787	instrument panel	1
65-67	CORVAIR	2989360	forward lamp	1
65-67	CORVAIR (exc. CORSA)	2988026	instrument cluster	1
65-66	CORSA	2988027	instrument cluster	1
65-66	CORSA (exc. Air Cond.)	2989241	instrument panel	1
65-66	CORVAIR (exc. CORSA, Air Cond.)	2989242	instrument panel (Note 3)	1
65-67	CORVAIR w/Air Cond. (exc. CORSA)	2989476	instrument panel (Note 3)	1
65	F.C.	2987987	instrument panel	1
65	F.C.	2987983	rear compartment	1
65	CORVAIR,			
66	CORVAIR w/P.G.	2989281	body wiring (main)	1
66	CORSA w/Air Cond.	6287904	instrument panel	1
67	CORVAIR	6291266	forward lamp wiring	1
67	CORVAIR (exc. Prod. Air Cond., P.G.)	6291268	instrument panel	1
67-68	CORVAIR w/Prod. Air Cond. (exc. P.G.)	6291269	instrument panel	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

67	CORVAIR (P.G. W/prod. AIIR Cond.)	6291270	instrument panel	1
67	CORVAIR w/P.G. (exc. Prod. Air Cond.)	6291272	instrument panel	1
67-69	CORVAIR	6291273	instrument cluster	1
68-69	CORVAIR	6295081	fwd. lamp	1
68-69	CORVAIR (exc. Air Cond.)	6295085	inst. panel wiring	1
60-64	CORVAIR	2978301	**WIRE ASSY.**, gas gauge (30 O.L.)	1
60-69	CORVAIR, F.C.	6292997	**WIRE,** fusible (20 gauge) (50 ft. coil)—(2.530)	A.R.
60-69	CORVAIR, F.C.	6292996	**WIRE,** fusible (16 gauge) (50 ft. coil)—(2.530)	A.R.

NOTE 3 When using on models without P.G., cut off neutral safety switch connector and splice and tape wires or use jumper terminal 2984503.

2.482 CLAMP—WIRE UNIT, Harness Assy. Attaching

60-64	CORVAIR (exc. F.C.)	6257371	at dash panel	1
60-69	CORVAIR, F.C.	2988412	**WIRE UNIT,** inst. panel lamp	A.R.

2.483 INSULATOR, Junction Block

NOTE. Fuse Panel Assy. is part of wiring harness.

60-66	CORVAIR, F.C.	3814756	fiber paper (to insulate instr. panel wiring harness assy. junction block fron dash panel)	1

2.485 SWITCH ASSEMBLY, Lighting

60-63	CORVAIR, F.C., CHEVY	1995096		1
64-69	CORVAIR	1995164	(4-amp. fuse)	1

2.486 ROD ASSEMBLY, Lighting Switch

60	CORVAIR w/C.C. Equip.	1990920	(stainless steel-polished chrome cap)	1
61-63	CORVAIR, F.C.	3782624		1
64	CORVAIR, F.C.,			
65	F.C.	3843256		1
65-66	CORVAIR	3860104		1
67-69	CORVAIR	3886987		1

2.487 FERRULE ASSEMBLY—BEZEL—NUT ASSY., Lighting Switch Rod

60-64	CORVAIR, F.C.,			
65	F.C.	1959820		1
60-63	CORVAIR, F.C. (exc. Turbo.),			
64	CORVAIR, F.C.,			
65	F.C.	6256713	**BEZEL,** light switch	A.R.
65-69	CORVAIR	3862380	**BEZEL,** switch	1
65-69	CORVAIR	3862680	**NUT ASSY.**	1

2.500 REGULATOR—BRACKET—PLATE—SCREW—NUT, Electrical Output

60-61	CORVAIR, F.C. (exc. 35 amp. L.C.I.),			
62	CORVAIR, F.C., w/30 amp.,			
63	CORVAIR, F.C.	1119261	(Exchange Item-Note 1)	1
60-64	CORVAIR, F.C. w/35 amp. L.C.I.	1119635	(Exchange Item-Note 1)	1
64	CORVAIR, F.C. (exc. 35 amp. L.C.I.)	1119305	(Exchange Item-Note 1)	1
65-67	CORVAIR, F.C. (exc. 62 amp.),			
65-67	CORVAIR (exc. 47 amp., C.A.C.),			
68-69	CORVAIR	1119515		1
65-67	CORVAIR w/47 amp., C.A.C.	1119519		1
62-64	CORVAIR w/Air Cond.	3814945	**BRACKET,** regulator mtg.	1
63-64	CORVAIR w/Turbocharger	3830599	**PLATE,** regulator mounting	1
65-69	CORVAIR, F.C. (exc. T. Ign., 62 amp.)	3876129	**SCREW,** regulator attaching (w/1119515) voltage and current regulator (No. 10—24 x $^{15}/_{16}$)	3
65-69	CORVAIR, F.C.	3876130	**NUT,** w/grommet regulator (No. 10—24)	A.R.

2.505 WIRE ASSY., Voltage Regulator Output

65	CORVAIR w/Air Cond.,			
65	CORVAIR, F.C. w/47 amp.	2988198	regulator adapter (contains diode)	2

2.525 HARNESS ASSY., Starting Ignition

61-63	F.C.	2978833	(cover 17 O.L.)	1
62-63	CORVAIR (exc. MONZA, STA. WAG., C.C. equip.),			
62-63	MONZA (exc. STA. WAG., Turbo.)		rear wiring.	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62	CORVAIR w/C.C. equip. (exc. MONZA, STA. WAG.),			
64	CORVAIR	**2985715**	engine	1
65-66	CORVAIR	**2989369**	engine (Note 1)	1
	NOTE 1 On Corvair (Std.) models, it may be necessary to tape back tachometer to coil lead and cut off back-up lamp socket and tape wires.			
66	CORVAIR w/Sp. H/Per.	**6287910**	(23 1/2 O.L.)	1
67	CORVAIR	**6291278**	(71 3/32 O.L.)	1
68-69	CORVAIR	**6295234**		1

2.530 TERMINAL—CLIP—CONNECTOR—WIRE—HOLDER, Electrical

60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	**5640018**	gasoline gauge and temp. indicator	2
60-63	CORVAIR, F.C.	**2962141**	courtesy lamp wire	2
61-62	F.C.	**2962987**	hazard flasher (male—used w/14 and 16 gauge wire) (1 1/32" O.L.)	A.R.
60-69	CORVAIR, F.C.	**2965272**	prkg. brake alarm switch to lamp wire (male—17/32" O.L.)	1
65	CORSA, MALIBU (S.S.),			
66	CORSA,			
69	CORVAIR, F.C. w/gauges	**6401499**	thermo. gauge (R.H. bend)	1
65-66	CORSA,			
69	CORVAIR w/gauges	**6401500**	thermo. gauge (L.H. bend)	1
65-66	CORVAIR (exc. CORSA)	**6401502**	gas gauge	2
65-66	CORSA	**6430312**	gas gauge	R.H.
65-66	CORSA	**6430313**	gas gauge	L.H.
67	CORVAIR	**6430189**	gas gauge (R.H. bend)	1
67	CORVAIR	**6430190**	gas gauge (L.H. bend)	1
68-69	CORVAIR	**6431100**	gas gauge (L.H. bend)	1
68-69	CORVAIR	**6431099**	gas gauge (R.H. bend)	1
61-62	CORVAIR (STA. WAG.) w/C.C. Equip.		**CLIP,** backing lamp rear wire assy. (held in place by lift gate handle attach. part),	
66	CORVAIR	**3784832**	oil pressure switch and gauge pipe	1
60-63	CORVAIR, F.C., CHEVY	**2965457**	**CLIP ASSY.,** accessory fuse	A.R.
61-65	F.C.	**3781398**	**CLIP ASSY.,** battery to starting switch cable	1
61-65	F.C.	**3782113**	**CLIP ASSY.,** main wiring harness	8
60-63	CORVAIR, F.C.	**2973871**	**CONNECTOR,** light switch (56 Series) (7 female terms)	1
60-63	CORVAIR, F.C.,			
66-69	CORVAIR	**2965981**	**CONNECTOR,** headlamp assy., backing lamp switch wire to wiring harness, door opening warning lamp wire (inst. panel harness) (63/64 O.L.)	1
61-62	F.C.	**2965017**	**CONNECTOR,** hazard flasher (male 6 way—1 19/32" O.L.)	1
61-64	CORVAIR, F.C.,			
65	F.C.	**2962964**	**CONNECTOR,** inst. panel clock assy. dome lamp, air heater (male—2—way—1/2" O.L.)	1
60-69	CORVAIR, F.C. w/32-37-42-52 amp. A.C. gen.	**2977373**	**CONNECTOR,** front ext. wiring harness (female—2 way)	1
63-64	CORVAIR, F.C.	**2977005**	**CONNECTOR,** ignition switch (lock type—female)	1
65	F.C.	**2977268**	**CONNECTOR,** ignition switch, 56 Series (lock type—5 female terms)	1
65	CORVAIR	**2984170**	**CONNECTOR,** ignition switch, 56 Series (lock type—6 female terms)	1
64-65	CORVAIR	**2984169**	**CONNECTOR,** light switch 56 Series (8 female terminals)	1
68	CORVAIR	**2977360**	**CONNECTOR** (one female terminal) (188 Series)	1
60-69	CORVAIR, F.C.	**6292996**	**WIRE,** fusible (16 gauge) (50 ft. coil)	A.R.
60-69	CORVAIR, F.C.	**6292997**	**WIRE,** fusible (20 gauge) (50 ft. coil)	A.R.
60-69	CORVAIR, F.C.	**5298533**	**HOLDER,** fuse (universal) (in line type)—(8.965)	1

2.559 CLIP—RETAINER, Chassis Wiring Harness

60-69	CORVAIR, F.C.	**3833476**	(1/16" sheet metal edge-wire clip)	A.R.
64-65	F.C.	**6257803**	instr. panel harness	A.R.
60-69	CORVAIR, F.C.	**3844390**	(push-in-type—for cables 19/64" to 33/64" dia.)	A.R.
60-69	CORVAIR, F.C.	**3750695**	(sheet metal end type clip-can be used on panels up to 1/8" thk. to retain wire up to 3/8" in dia.)—(3.162)	A.R.
60-69	CORVAIR, F.C.	**367701**	ammeter to starter switch wiring harness (3/16")	A.R.
60-61	CORVAIR, F.C.	**3816659**	**RETAINER,** adj. rr. wiring and inst. pnl.	A.R.
61-65	F.C.	**3780691**	**RETAINER,** main wiring harness assy.	1
61-63	CORVAIR	**3783927**	**RETAINER,** main and rear wiring harness assy., battery to starting switch cable assy.	A.R.

2.575 SWITCH ASSY. and Parts, Hazard Flasher

61-62	F.C.	**3815614**	hazard flasher w/harness (Note 1)	1
	NOTE 1 It may be necessary to rework connectors on 1961 and 1962 (1st design) models.			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

63	F.C.	**3838120**	w/harness	1
64-65	F.C.	**3843700**	w/harness	1
66	CORVAIR	**3886910**	w/harness	1
67-68	CORVAIR	**7800482**	(Delco-Remy), no bulb socket w/hazard flasher—(2.895)	1
67	CORVAIR	**5698520**	(Boyne), no bulb socket w/hazard flasher—(2.895)	1
61-63	F.C.	**2415204**	**FLASHER ASSY.**, hazard lamp (3 prong)	1
64	F.C.,			
65-69	CORVAIR, F.C.	**3883794**	**FLASHER ASSY.**, hazard lamp (2 thru 8 bulb)	1
60-69	CORVAIR, F.C.	**3891442**	**FLARE ASSY.**, distress—(8.821)	2
60-69	CORVAIR, F.C.	**3891443**	**FLAG**, distress—(8.821)	1
64-65	F.C.	**3843743**	**BRACKET**, hazard lamp switch	1
65-66	CORVAIR, F.C.	**3864260**	**BRACKET**, hazard flasher switch	1
66	CORVAIR w/warning switch	**3886913**	**BRACKET**, hazard lamp switch	1
68-69	CORVAIR	**1384230**	**BRACKET**, frt. fdr. and rr. qtr. side marker lamp	4
65-66	CORVAIR, F.C.	**3929510**	**KNOB**, traffic hazard lamp switch cont.	1
67-69	CORVAIR	**398165**	**KNOB**, traffic hazard warning	1
65-66	CORVAIR, F.C.	**3843744**	**NUT**, hazard lamp switch and harness	1
66	CORVAIR	**2973342**	**CLIP**, lamp switch harness	2
68-69	CORVAIR	**916632**	**LAMP ASSY.**, rr. qtr. marker	2
68	CORVAIR	**916581**	**LAMP ASSY.**, frt. fdr. side marker	2
69	CORVAIR	**911045**	**LAMP ASSY.**, frt. fdr. side marker (Note 2)	2
	NOTE 2 When using in place of 911052, remove the bezel and two studs and discard.			
68-69	CORVAIR	**7765668**	**GASKET**, frt. fdr. marker	2
68-69	CORVAIR	**6298935**	**SOCKET ASSY.**, side marker lamp w/moulded on socket (Note 3)	A.R.
	NOTE 3 Cut away old side marker lamp socket and splice in new socket leads. Old socket is part of fwd. and rr. wrg. harness.			

2.585 LAMP ASSY., Parking and Direction Signal

65-69	CORVAIR	**916167**		L.H.
65-69	CORVAIR	**916168**		R.H.

2.587 SUPPORT, Parking Lamp Mounting

65-69	CORVAIR	**3872087**	lamp	4

2.589 LENS, Parking and Directional Signal Lamp

60-62	CORVAIR, F.C.	**5950683**		L.H.
60-62	CORVAIR, F.C.	**5950684**		R.H.
63-64	CORVAIR, F.C.,			
65	F.C.	**5954443**	(amber)	L.H.
63-64	CORVAIR, F.C.,			
65	F.C.	**5954444**	(amber)	R.H.
65-69	CORVAIR	**5956199**		L.H.
65-69	CORVAIR	**5956200**		R.H.

2.590 GASKET PACKAGE—GASKET, Parking and Directional Signal Lamp Lens

60-64	CORVAIR, F.C.,			
65	F.C.	**5952459**	left (Note 1)	1
60-64	CORVAIR, F.C.,			
65	F.C.	**5952460**	right (Note 1)	1
	NOTE 1 Includes Gasket and Packing.			
65-69	CORVAIR	**5956201**	**GASKET**	2

2.594 SCREW, Parking Lamp Door or Lens

61-62	F.C.	**3792034**	(No. 8—15 x 1 1/4" cr. recess tapping)—(2.688)	6
65-69	CORVAIR	**5953438**	(No. 8—32 x 5/8" cr. recess)—(2.594)	4

2.599 SEAL, Parking Lamp

65-69	CORVAIR	**3874669**	park and direction signal	1

2.660 PAD—SPACER—GASKET—SHIELD—RETAINER, Tail Lamp Mounting

60-61	CORVAIR	**6256816**		2
62-64	CORVAIR	**3828394**		2
60-64	CORVAIR	**3852426**	**SPACER**, tail, stop and direction signal	A.R.
61-65	F.C.	**5951975**	**GASKET**, stop and direction signal	2
65-69	CORVAIR	**5956141**	**GASKET**, tail, stop, and dir. sig. lamp	2
60-61	CORVAIR	**6256818**	**SHIELD**, tail, stop and direction signal	2
60-61	CORVAIR	**5952644**	**RETAINER**, lamp assy.	2
62	CORVAIR	**5952987**	**RETAINER**, lamp assy.	2
63-64	CORVAIR	**5953737**	**RETAINER**, lamp assy.—(2.698)	2

2.662 BRACKET, Tail Lamp

61-65	F.C.	**3780408**	mounting	A.R.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

2.679 LAMP ASSEMBLY, Tail, Stop and Direction Signal

60	CORVAIR		L.H. and R.H.,	
61	CORVAIR (exc. LAKEWOOD, F.C.)		L.H.,	
61	LAKEWOOD	899467	L.H. and R.H.	A.R.
61	CORVAIR (exc. LAKEWOOD, F.C.)	926726		R.H.
61-65	F.C.	910487		L.H.
61-65	F.C.	910488		R.H.
62	CORVAIR	928200	L.H. and R.H.	A.R.
62-65	F.C.	3848551	L.H. and R.H. (Note 1)	2
	NOTE 1 Use bulb ★454645.			
63	CORVAIR	899255		R.H.
63	CORVAIR	899198		L.H.
64	CORVAIR	910543		L.H.
64	CORVAIR	910544		R.H.
65	CORVAIR	910626	L.H. or R.H.	A.R.
66	CORVAIR	911011	L.H. and R.H.	2
67-69	CORVAIR	911391	L.H. and R.H. (Note 2)	2
	NOTE 2 It may be necessary to obtain (1) 5958761 lens to match remaining lamp assy.			

2.680 HOUSING ASSY.—ORNAMENT, Tail, Stop and Direction Signal Lamp

61-65	F.C.	910488	(2.679)	R.H.
61	LAKEWOOD	5952179	L.H. and R.H.	2
64	CORVAIR	5956039	ORNAMENT	2

2.681 BEZEL, Tail and Stop Lamp

65-69	CORVAIR	5956140	w/dir. sig.	2

2.682 LENS, Tail, Stop and Direction Signal Lamp

60-61	CORVAIR (exc. F.C.)	5950691		2
61-65	F.C.	5952763		2
62	CORVAIR	5953272	w/ornament (Guide DB-62)	2
63	CORVAIR	5953631	w/ornament	2
64	CORVAIR	5954970	less ornament	2
66-69	CORVAIR	5958761		2

2.684 GASKET, Tail, Stop and Direction Signal Lamp Lens

60-61	CORVAIR (exc. F.C.)	5950690		2
61-65	F.C.	5951977		2
63-64	CORVAIR	5953638		2
65-69	CORVAIR	5956146		2

2.688 SCREW—SCREW ASSY.—NUT, Tail, Stop and Direction Signal

60-63	CORVAIR (exc. F.C.)	3792033	lens (pan head cross recess tapping, No. 8—15 x 3/4" steel)	A.R.
61-65	F.C.	5951799	lens (pan head cross recess tapping, No. 8—18 x 1 1/8 st. steel)	'6
62	CORVAIR	3798131	backing lamp (No. 8—15 x 1)	4
64-65	F.C.	3792034	lens (No. 8—15 x 1 1/4)	A.R.
63	F.C.	5953467	lens (No. 8—32 x 1 3/8)	4
64	CORVAIR	9414754	lens (No. 8—32 x 3/4") (stainless steel)—(8.977)	4
60-69	CORVAIR, F.C.	9420079	tail, stop, directional signal and reflex ornament (No. 8—22 x 1/2" st. steel)—(8.903)	A.R.
65-69	CORVAIR	5956411	lens and bezel attaching	4
	Not required in this group. See Group 2.594	5953438	(8—32 x 5/8" cr. recess)	
63	CORVAIR	5952297	SCREW ASSY.	2
60-69	CORVAIR, F.C.	3765118	SCREW ASSY., lamp (1 1/4"—20 x 3/4")	A.R.
61-65	F.C.	3696396	NUT, attach. head, parking and dir. sig. lamp (J-type—No. 10—12)—(2.736)	4

2.689 MOULDING, Rear Reflector

61-65	F.C. w/deluxe equip.	3782008	end gate and rear door trim (plastic w/red reflectorized painted center) (11 39/64" x 2 27/64")—(17.615)	2

2.694 SOCKET, Tail and Stop Lamp

60-66	CORVAIR	2974309	(6" O.L.—w/terminal) (double contact)	A.R.

2.697 LAMP ASSY. and PARTS, Back-up

60	CORVAIR (exc. MONZA)	899468		2
61	CORVAIR, F.C. (exc. LAKEWOOD, MONZA)	899971		2
61	LAKEWOOD	899949		2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

61	MONZA	899951		1
62	CORVAIR (exc. STA. WAG.)	928224		2
62	CORVAIR (STA. WAG.)	928230		2
63	CORVAIR	899256		2
64	CORVAIR	910545		2
65	CORVAIR	910627		2
66-69	CORVAIR	911402		2
60-61	CORVAIR, F.C. (exc. MONZA)	5950694	**LENS**	2
60-61	MONZA	5952463	**LENS,** red reflex ring	1
62	CORVAIR	5953232	**LENS**	2
63	CORVAIR	5953639	**LENS**	2
64	CORVAIR	5955251	**LENS**	2
65	CORVAIR	5956169	**LENS**	2
66-69	CORVAIR	5958807	**LENS ASSY.**	2
60-61	CORVAIR, F.C. (exc. MONZA)	6257654	**COVER,** lamp hole (4 29/64 O.D.)	2
62	CORVAIR (exc. MONZA)	3796145	**COVER,** lamp hole (4 29/64 O.D.)	2
63	CORVAIR (exc. MONZA)	3833366	**COVER,** lamp hole	2
64	CORVAIR (exc. MONZA)	3839828	**COVER,** lamp hole	1
65	CORVAIR (exc. CORSA)	3857087	**COVER,** back-up lamp hole	2
64	CORVAIR	5956039	**ORNAMENT**—(2.680)	2
61-62	CORVAIR (STA. WAG.)	3786175	**CONTACT ASSY.,** door pillar mounting	1
61-62	CORVAIR (STA. WAG.)	3786174	**CONTACT ASSY.,** door mounting	1
60-61	CORVAIR, F.C.	5950690	**GASKET,** lens—(2.684)	2
63-64	CORVAIR	5953638	**GASKET,** lens—(2.684)	2
65-69	CORVAIR	5956141	**GASKET,** backing lamp mtg.—(2.660)	2
66-69	CORVAIR	5956146	**GASKET,** backing lamp lens—(2.684)	2
60-61	CORVAIR, F.C.	6256818	**SHIELD,** retainer—(2.660)	2
60-61	CORVAIR, F.C.,			
63	CORVAIR	3792033	**SCREW,** lens attaching (No. 8—32 x 5/8")—(2.688)	A.R.
60-69	CORVAIR, F.C.	9414752	**SCREW,** attaching hole cover (No. 8—6—18 x 1 1/2")—(8.977)	4
62	CORVAIR (exc. MONZA)	3798131	**SCREW,** lens attaching (No. 8—15 x 1)—(2.688)	4
64	CORVAIR	9414754	**SCREW,** lens attaching (No. 8—32 x 3/4") (stainless steel)—(8.977)	4
65-69	CORVAIR	5956411	**SCREW,** lens and bezel attaching—(2.688)	4
65	CORVAIR (exc. MONZA, deluxe equip.)	3793108	**SEAL,** backing lamp hole cover—(2.660)	2
60-64	CORVAIR	3852426	**SPACER**—(2.660)	4
65	CORVAIR (exc. MONZA)	2988135	**WIRE ASSY.**	1
60-64	CORVAIR, F.C.	2978302	**SOCKET ASSY.,** w/wire (black—6 O.L.)	1

2.698 SWITCH ASSY.—GASKET—STRIKER—PAD—RETAINER—BEZEL, Back-up

60-64	CORVAIR, F.C., w/3-SPD.	6256801	w/bracket	1
60-63	CORVAIR, F.C. w/P.G. (exc. H/Per.),			
65	F.C. w/P.G.	1998717	trans. control and back-up lamp—(4.054)	1
61-65	CORVAIR w/4-SPD.	1993326		1
65-67	CORVAIR w/P.G.	1993691	lamp—(4.054)	1
65	CORVAIR w/3-SPD.	3869593	w/bracket	1
66-69	CORVAIR (exc. P.G.).	1993339	lamp	1
61-65	CORVAIR	3833294	**GASKET,** switch (orange nylon)	1
66-69	CORVAIR (exc. P.G.)	3886943	**GASKET,** lamp switch	1
60-61	CORVAIR, F.C.,			
64	CORVAIR	6256802	**STRIKER,** trans. control rod switch (for 1" shifter tube)	1
61-64	CORVAIR	3787681	**STRIKER,** trans. control rod switch (for 1 1/4" shifter tubes) (Note 1)	1

NOTE 1. On late design 1964 models which require a 1" shifter tube, use 6256802.

65	CORVAIR w/3-SPD.	3869592	**STRIKER,** trans. control rod switch	1
60-61	CORVAIR	6256816	**PAD,** hole cover mtg.—(2.660)	2
62-64	CORVAIR	3828394	**PAD,** hole cover mtg.—(2.660)	2
60-67	CORVAIR, F.C.	5952644	**RETAINER,** lamp assy.—(2.660)	2
62	CORVAIR	5952987	**RETAINER,** lamp assy.—(2.660)	2
63-64	CORVAIR	5953737	**RETAINER,** lamp assy.	2
65-69	CORVAIR	5956140	**BEZEL** (2.681)	2

2.700 LAMP ASSEMBLY, Rear License (Also see Group 2.705 and 2.714)

60	CORVAIR	899203		1
61-62	CORVAIR (exc. STA. WAG.),			
63-64	CORVAIR	899823		1
64-65	F.C.	910519		2
65-69	CORVAIR	910656		1

2.705 HOUSING ASSY., Rear License Plate Lamp (Also see Group 2.714)

61-62	CORVAIR (STA. WAG.),			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-63	F.C.	5954861	less bulb and wire assy.	2

2.707 GASKET, Rear License Lamp Lens

60-61	CORVAIR (exc. LAKEWOOD, F.C.)	5948767		1
63-69	CORVAIR	5952340		1

2.709 LENS, Rear License Lamp

60	CORVAIR	5949532		1
61-64	CORVAIR	5952339		1
64-65	F.C.	3848807		1
65-69	CORVAIR	5956395		1

2.714 WIRE ASSY., Rear License Lamp (Also see Group 2.705)

61-62	CORVAIR (STA. WAG.),			
61-63	F.C.	5952682	w/strap	2

2.722 GASKET, Headlamp to Fender

60-64	CORVAIR, F.C.,			
65	F.C.	3779847	(includes 1 3/4" dia. hole)	2

2.725 HEADLAMP ASSEMBLY, Complete

60	ALL	3782207	w/parking and direction signal pigtail connector	L.H.
60	CORVAIR,			
61-64	CORVAIR	5954776	w/parking and direction signal pigtail connector	R.H.
61-64	CORVAIR	5954775	w/parking and direction signal	L.H.
61-65	F.C.	5955769	w/parking and direction signal	L.H.
61-65	F.C.	5955770	w/parking and direction signal	R.H.
65	CORVAIR	5957465		L.H.
65	CORVAIR	5957466		R.H.
66-68	CORVAIR	5958221		L.H.
66-68	CORVAIR	5958222		R.H.
69	CORVAIR	5961715		L.H.
69	CORVAIR	5961716		R.H.

2.726 SUB BODY—CAP—POCKET—RING, Headlamp

60-64	CORVAIR	5952411	parking and direction signal	L.H.
60-64	CORVAIR	5952412	parking and direction signal	R.H.
61-65	F.C.	5951775	parking and direction signal	L.H.
61-65	F.C.	5951776	parking and direction signal	R.H.
65	CORVAIR	5957473		L.H.
65	CORVAIR	5957474		R.H.
65-67	CORVAIR	4725264	**CAP**, luggage compartment headlamp pocket lower screw—12.977)	4
65	CORVAIR	7592439	**POCKET**	L.H.
65	CORVAIR	7592438	**POCKET**	R.H.
66-69	CORVAIR	7602293	**POCKET**	L.H.
66-69	CORVAIR	7602292	**POCKET**	R.H.
60-65	CORVAIR, F.C.		**RING**, left inner (stamped L1),	
66-69	CORVAIR	5948825	right inner	1
60-65	CORVAIR, F.C.		**RING**, right inner (stamped R1),	
66-69	CORVAIR	5948824	left inner	1
60-65	CORVAIR, F.C.		**RING**, left outer (stamped L2),	
66-69	CORVAIR	5948827	right outer	1
60-65	CORVAIR, F.C.		**RING**, right outer (stamped R2),	
66-69	CORVAIR	5948826	left outer	1

2.727 SEALED BEAM, Headlamp

60-69	CORVAIR, F.C.	5956002	outer	2
60-69	CORVAIR, F.C.	5956001	inner	2

2.728 MOULDING, Headlamp

60-69	CORVAIR	9414752	(ov. hd. cr. rec. tap trim No. 8—18 x 1/2")—(8.977)	8
61-65	F.C.	6255644	left and right	2
61-64	CORVAIR	3821904		R.H.
61-64	CORVAIR	3821903		L.H.
65-69	CORVAIR	3882931		L.H.
65-69	CORVAIR	3882932		R.H.

2.729 SCREW, Headlamp Moulding

60-69	CORVAIR, F.C.	9414752	(ov. hd. cr. rec. tap trim No. 8—18 x 1/2")—(8.977)	8

2.731 RING ASSEMBLY, Sealed Beam Retaining

60-69	CORVAIR, F.C.	5954892		4

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

2.736 LUG—SCREW—NUT, Headlamp Bezel Retaining

60-63	CORVAIR, F.C.	5950643	upper	4
60	CORVAIR,			
61-63	F.C.	5950642	lower	4
61-63	CORVAIR	5952410	park and direction signal lamp lower inboard	1
61-63	CORVAIR	5952380	park and direction signal lamp lower outboard	1
65	CORVAIR	5957199	headlamp inboard	1
65	CORVAIR	5957197	headlamp lower outboard	1
65	CORVAIR	5957195	headlamp upper outboard	L.H.
65	CORVAIR	5957196	headlamp upper outboard	R.H.
60-69	CORVAIR, F.C.	924552	**SCREW** (pan hd. 8—32 x 3/8)	A.R.
	Not required in this group. See Group 2.688	3696396	**NUT**	

2.737 SCREW—BRACKET, Headlamp Beam Adjusting

60-64	CORVAIR, F.C.,			
65	F.C.	924561		4
65-67	CORVAIR (exc. F.C.)	5953005	w/nut (1 1/4" O.L.)	A.R.
65-68	CORVAIR	5956686	w/nut	2
60-62	CORVAIR, F.C.	5949838	**BRACKET,** screw	1

2.750 SOCKET ASSY., Headlamp

60-64	CORVAIR	5952033	w/wiring (pigtail connector type)	1
61-65	F.C.	5951864	w/wiring	1

2.810 HORN UNIT—SHIM, Horn

60-69	CORVAIR, F.C.	9000239	low note (stamped 9000239)	L.H.
60-63	CORVAIR DELUXE		**R.H.,** high note,	
64-65	CORVAIR (exc. F.C.),			
66-69	CORVAIR (exc. STD.)	9000514	**R.H. high note** (stamped 9000514)	1
67-69	CORVAIR w/wood grained wheel (exc. Tel. W)	3910765	**SHIM**	1

2.812 SHIELD—SCREW—WASHER, Horn

60-63	CORVAIR	3779851	(Note 1)	L.H.
60-61	CORVAIR (exc. F.C.),			
62-63	CORVAIR (DELUXE)	3779852	(Note 1)	R.H.
	NOTE 1 Cannot be interchanged. Note contour of horn shield upper end to distinguish.			
60-61	CORVAIR, F.C.	9420430	**SCREW,** shield attaching (1 1/4"—14 x 5/8")—(8.977)	A.R.
60-61	CORVAIR, F.C.	3688003	**WASHER,** attach. vibrator horn (5/16")—(8.143)	1

2.815 RELAY ASSEMBLY, Horn

60-69	CORVAIR, F.C.	1116920		1

2.816 RING—SPRING—LINER, Horn Blowing Pivot

NOTE See Group 2.819.

2.819 CONTACT ASSEMBLY and PARTS, Horn Blowing

60-64	CORVAIR, F.C.,			
65	F.C.	763819	upper w/spring	1
65-66	CORVAIR (exc. Tel. W.)	5955202		1
64	CORVAIR w/wood grained wheel	769609		1
65-66	CORVAIR w/wood grained wheel	9742542		1
65-66	CORVAIR (Tel. W. w/wood grained wheel)	3863904		1
67	CORVAIR w/wood grained wheel,			
67-68	CORVAIR w/wood wheel (exc. Tel. W)	3901330		1
67	CORVAIR	9746525	w/insulator assy.	1
67-69	CORVAIR (Tel. W. w/wood wheel)	3903568		1
67-69	ALL	3916047	**CONTACT UNIT,** w/eyelet and spring	1
60-64	CORVAIR, F.C. (exc. MONZA),			
65	F.C.	764402	**BUSHING,** cap adapter	1
60-64	MONZA, F.C.,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

64-65	F.C.	764761	**BUSHING,** ring	1
65-66	MONZA (exc. Tel. W., wood grained wheel),			
68	CORVAIR w/Tel. W.	764762	**BUSHING,** ring	1
65-69	CORVAIR, F.C.	9740172	**BUSHING,** button cap adapter	1
67	CORVAIR	9746461	**SWITCH ASSY.**	1
68	CORVAIR	9748128	**SWITCH ASSY.**	1
65-66	CORVAIR	768233	**INSULATOR,** contact	1
67-69	CORVAIR w/Tel. W.	9747057	**INSULATOR,** button cap clip	1
69	CORVAIR	9741653	**INSULATOR**	1
68	CORVAIR	382117	**INSULATOR,** contact	1
67	CORVAIR	9747249	**GASKET,** horn button	1
64	CORVAIR w/wood grained wheel	770387	**BRUSH,** contact	1
65-66	CORVAIR (Tel. W. w/wood grained wheel)	3863910	**SCREW,** contact to hub	1
67	CORVAIR w/wood wheel,			
68	CORVAIR (wood wheel w/tel. wheel)	3910764	**SCREW** (8—32 x 1 1/4") contacting	3
60-63	CORVAIR,			
64	MONZA, F.C. w/deluxe equip.,			
65	F.C.,			
66	MONZA (exc. wood grained wheel, Tel. W.)	763323	**RING** (1 13/16 O.D.)	1
60-65	CORVAIR (exc. MONZA),			
63-65	F.C. (exc. deluxe equip.),			
66-69	CORVAIR	9741644	**SPRING** (Bellville—conec height)	1
60-65	MONZA, F.C.,			
65-66	CORVAIR w/Tel. W.	3883684	**SPRING,** contact	1
65-66	CORVAIR w/Tel. W.	3874633	**LINER,** button cap	1
60-65	CORVAIR, F.C.	770904	**CUP**	1
66	CORVAIR	3873623	**CUP**	1
67-69	CORVAIR (exc. deluxe, wood, tel. wheel),			
67	CORVAIR, w/deluxe wheel	9746151	**CUP,** cap	1

2.820 CAP ASSEMBLY—CAP—RETAINER—BUTTON—BUTTON ASSY.—CLIP ASSY.—EMBLEM—PLATE, Horn Button

60-63	MONZA (exc. Turbocharger),			
60-69	CORVAIR	1915172	(5/8—20—1/4)	1
60-63	F.C.,			
64-65	F.C. (exc. custom equip.)	3929758		1
60-63	CORVAIR (exc. MONZA)	3782644		1
62-63	CORVAIR w/Turbocharger	3818722		1
64	MONZA (exc. wood wheel)	3841871		1
64	CORVAIR (exc. MONZA, wood wheel)	3841874		1
64	CORVAIR, w/wood wheel	3845287		1
65	CORVAIR, w/wood wheel	3859873		1
65-66	CORVAIR w/Tel. Wheel	3883627		1
65-66	CORVAIR (exc. wood wheel, Tel. W.)	3869474		1
65-66	CORVAIR (exc. MONZA, wood wheel, Tel. W.)	3859834		1
65	F.C. w/deluxe equip.	9742528		1
66	CORVAIR, w/wood wheel (exc. Tel. W.),			
67-68	CORVAIR w/wood wheel	3923667		1
67	CORVAIR (exc. wood wheel)	3905578		1
67	MONZA (exc. Tel. W., wood wheel)	3905514		1
67	CORVAIR (STD.) (exc. Tel. W., wood wheel, deluxe wheel),			
68	CORVAIR (STD.) (exc. deluxe wheel)	3899097	**CAP**	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT IRON IS

67-69	CORVAIR w/Tel. W. (exc. wood wheel)	3923666	**CAP**	1
69	CORVAIR (Std.) (exc. Tel. W.)	3923665	**CAP**	1
60-63	CORVAIR, F.C. (exc. MONZA),			
64-69	CORVAIR (exc. Tel. W., wood wheel),			
64-65	F.C. (exc. custom equip.)	3931568	**RETAINER,** cap	1
67-68	CORVAIR, w/deluxe wheel	3931574	**RETAINER,** cap	1
67	CORVAIR w/Tel. W. (exc. wood wheel),			
68	CORVAIR w/Tel. W.,			
69	CORVAIR w/Tel. W. (exc. wood wheel)	3905512	**RETAINER,** cap	1
65-66	CORVAIR w/T.W.	3868784	**BUTTON**	1
67	CORVAIR	9746464	**BUTTON ASSY.,** blowing switch	2
68	CORVAIR w/deluxe wheel	9747691	**BUTTON ASSY.,** blowing switch (dk. gold)	R.H.
68	CORVAIR w/deluxe wheel	9747592	**BUTTON ASSY.,** blowing switch (dk. gold)	L.H.
68	CORVAIR w/deluxe wheel	9747689	**BUTTON ASSY.,** blowing switch (black)	R.H.
68	CORVAIR w/deluxe wheel	9747590	**BUTTON ASSY.,** blowing switch (black)	L.H.
68	CORVAIR w/deluxe wheel	9747690	**BUTTON ASSY.,** blowing switch (dk. blue)	R.H.
68	CORVAIR w/deluxe wheel	9747591	**BUTTON ASSY.,** blowing switch (dk. blue)	L.H.
69	CORVAIR	3939753	**BUTTON ASSY.** (Note 1)	L.H.
69	CORVAIR	3939754	**BUTTON ASSY.** (Note 1)	R.H.
	NOTE 1. Paint as required.			
67-69	CORVAIR w/Tel. W. (exc. wood wheel),			
68	CORVAIR w/Tel. W.	3905619	**CLIP ASSY.,** cap	1
68	CORVAIR w/deluxe wheel	3925148	**EMBLEM,** strg. whl. shrd.	1
65-66	CORVAIR w/Tel. W., wood wheel	3863909	**PLATE**	1
66	CORVAIR w/Tel. W. (exc. wood wheel)	3886590	**PLATE**	1

2.830 RING—RING UNIT, Horn Blowing

60-63	MONZA,			
64	F.C. w/custom equip.	765911		1
64-65	F.C.	9742299		1
65-66	MONZA (exc. wood grained wheel, Tel. W.)	9741752		1
60-63	CORVAIR (exc. MONZA)	3822667	**RING UNIT,** conversion (Note 1)	1
64	CORVAIR	3845619	**RING UNIT,** conversion (Note 1)	1

NOTE 1 Consists of MONZA horn blowing parts for installation on 500 and 700 Series.

2.845 SHIELD—SCREW—WASHER—SUPPORT ASSY.—BRACKET—NUT, Horn

NOTE. See Group 2.812.

2.880 LAMP ASSY.—GASKET—SPACER, Direction

62-65	F.C.	3852179		1
62-65	F.C.	3820088	**GASKET,** lamp mtg.	1

2.892 FLASHER ASSEMBLY—CLIP—RETAINER—FASTENER, Direction Signal Lamp

60-63	CORVAIR, F.C., CHEVY	3713382		1
64-69	CORVAIR, F.C.	383639	(Stat. Co. No. 145, Tung. Sol. No. 224)	1
65-69	CORVAIR (exc. F.C.)	3866440	**CLIP,** dir. sig. lamp flasher	1
64	F.C.	3852139	**RETAINER,** control switch	1
65-66	CORVAIR, F.C. (exc. Tel. W.)	3866599	**RETAINER,** control switch	1
65	CORVAIR (exc. Tel. W.)	3793788	**FASTENER,** switch wiring	1

2.895 SWITCH ASSEMBLY and PARTS, Direction Signal Lamp

60-64	CORVAIR	6257036		1
61-63	F.C.	3775631		1
65-66	CORVAIR w/Tel. W.	5696681		1
65-66	CORVAIR (exc. Tel. W.),			
64-65	F.C.	910821		1
67-68	CORVAIR	7800482	(Delco-Remy), no bulb socket w/hazard flasher	1
67-69	CORVAIR	5698520	(Boyne), no bulb socket w/hazard flasher	1
60-64	CORVAIR	910502	**CONTROL ASSY.** (Note 1)	1
61-63	F.C.	898626	**CONTROL ASSY.**	1
65-66	CORVAIR (exc. Tel. W.)	6954457	**BUMPER,** control switch	1
60-62	CORVAIR	5950745	**RING,** control	1
61-63	F.C.	5951818	**RING,** control	1
63-64	CORVAIR	5954532	**RING,** control	1
65-66	CORVAIR, F.C. (exc. Tel. W.)	5956608	**RING,** control switch ("O")	1
60-63	CORVAIR, F.C.,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

64	CORVAIR	**5950701**	**SCREW,** ring pivot	1
64-66	F.C.,			
65-66	CORVAIR (exc. Tel. W.)	**3841575**	**SCREW,** control lever (10—32 x $^{1}/_{2}$")	1
67-69	CORVAIR w/Tel. W.	**5699163**	**SCREW,** signal switch mtg.	3
64	F.C.,			
65-66	CORVAIR, F.C. (exc. Tel. W.)	**5957066**	**CONTACT UNIT,** control switch (w/910317-370-372-809-821)	1
60-63	CORVAIR, F.C.,			
64	CORVAIR	**5951729**	**PAWL,** control	2
60-64	CORVAIR	**3777469**	**CABLE ASSY.,** control switch	1
64-66	F.C.,			
65-66	CORVAIR (exc. Tel. W.)	**5955201**	**BEARING ASSY.,** control switch	1
61-62	F.C.	**2965017**	**CONNECTOR,** traffic hazard lamp switch and flasher wire connector, dir. sig. lamp to chassis wiring harness—(2.530)	1
64	F.C.	**5955189**	**PLATE,** control switch	1
65-66	CORVAIR (exc. Tel. W.)	**5957015**	**PLATE,** control switch	1
65	CORVAIR w/Tel. W.	**5957063**	**PLATE,** actuating	1

NOTE 1 Paint as required.

2.896 CAM, Direction Signal Lamp (Cancelling)

60-64	CORVAIR	**3826333**	(plastic)	1
61-63	F.C.	**3775553**		1
64-65	F.C.	**3860961**		1
65-66	CORVAIR (exc. Tel. W.)	**3871106**		1
65-66	CORVAIR w/Tel W.	**3863911**		1
67	CORVAIR (exc. Tel. W.)	**3900511**		1
67-69	CORVAIR w/Tel. W.	**3901618**		1
68-69	CORVAIR (exc. Tel. W.)	**399292**		1

2.897 LEVER—LEVER ASSY.—KNOB, Direction Signal Lamp

64	F.C.,			
65-66	CORVAIR (exc. Tel. W.)	**3854303**	control	1
64-67	CORVAIR w/Tel. W.	**3840903**	control	1
65	F.C.	**3912512**	control	1
67-68	CORVAIR	**3909580**	control	1
69	CORVAIR	**3961517**	control	1
60-63	CORVAIR, F.C.,			
64	CORVAIR	**3783459**	**LEVER ASSY.,** control (w/knob)	1
60	CORVAIR	**3711070**	**KNOB,** switch lever	1
61-66	CORVAIR, F.C.	**3782965**	**KNOB,** control lever, release lever	1
69	CORVAIR (STD.)	**3945530**	**KNOB,** strg. whl. release lever (dk blue)	1
69	CORVAIR	**3945533**	**KNOB,** strg. whl. release lever (dk. green)	1

2.906 HOUSING—COVER, Direction Signal Control Switch

60-62	CORVAIR, F.C.,			
63	F.C.,			
63-64	CORVAIR	**5955780**	(Note 1)	1

NOTE 1 Paint as required.

64-65	F.C.	**3852120**		1
65-66	CORVAIR w/Tel. W.	**5694928**		1
65-66	CORVAIR (exc. Tel. W.)	**3875014**		1
67-69	CORVAIR w/Tel. W.	**7801052**		1
67-69	CORVAIR (exc. Tel. W.)	**7800465**		1
65-67	CORVAIR (exc. Tel. W.)	**3841555**	**COVER,** direction signal control switch wire	1
67-69	CORVAIR	**3909549**	**COVER,** direction signal switch	1
67-69	CORVAIR	**3909550**	**COVER,** directions signal control switch	1
67-69	CORVAIR (exc. Tel. W.)	**7801952**	**COVER,** signal switch and horn wire	1
67-69	CORVAIR w/Tel. W.	**7801050**	**COVER,** signal switch and horn wire	1

2.910 ROLLER—SPRING, Direction Signal Lamp

60-62	CORVAIR, F.C.,			
63	F.C.	**5946117**	switch detent	1
63-64	CORVAIR	**5952485**	switch detent	1
60-64	CORVAIR	**5950747**	**SPRING,** control tension	1
60-62	CORVAIR,			
63	CORVAIR, F.C.,			
64	CORVAIR	**5952433**	**SPRING,** switch detent ($^{1}/_{4}$ wide x $2\,^{9}/_{16}$ long)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 3.000

FUEL EXHAUST

CARBURETION

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

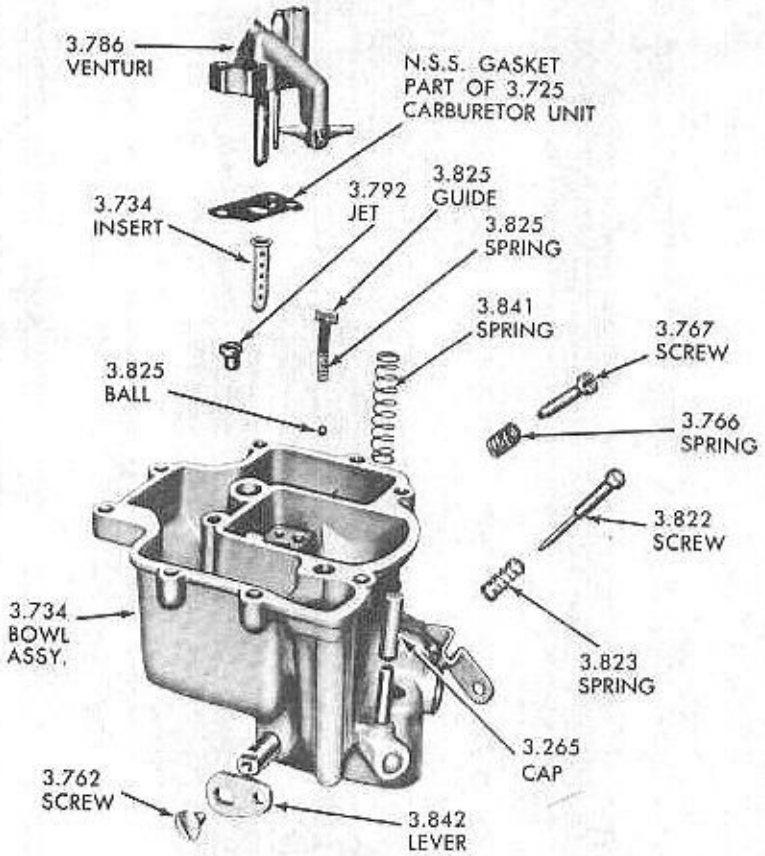

BOWL ASSEMBLY

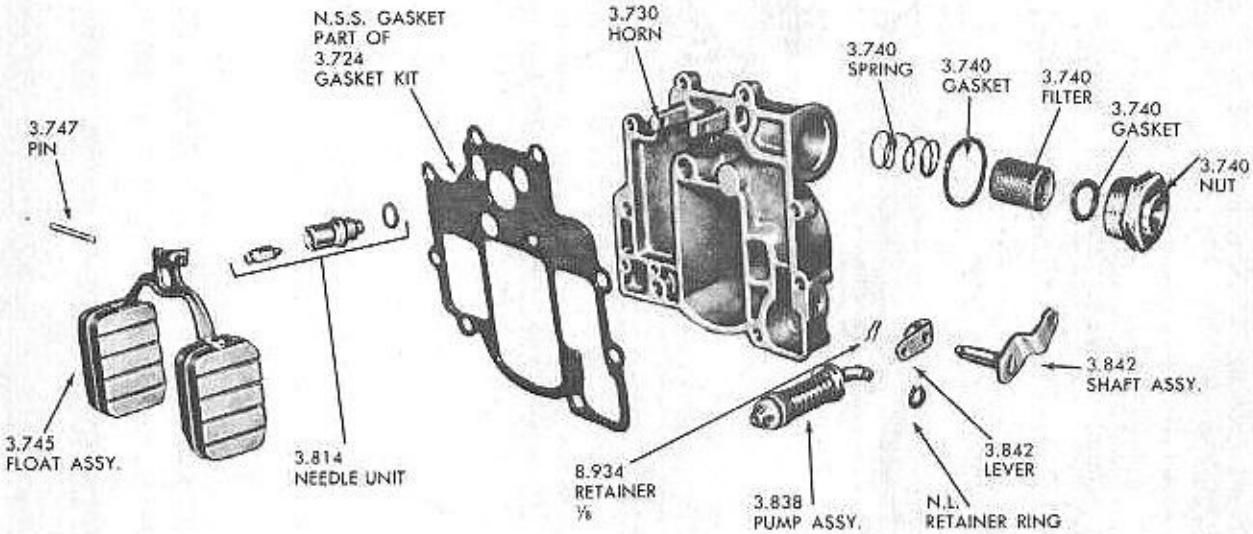

3-12

AIR HORN ASSEMBLY

1960-61 CORVAIR CARBURETOR BOWL AND AIR HORN—EXPLODED (TYPICAL)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

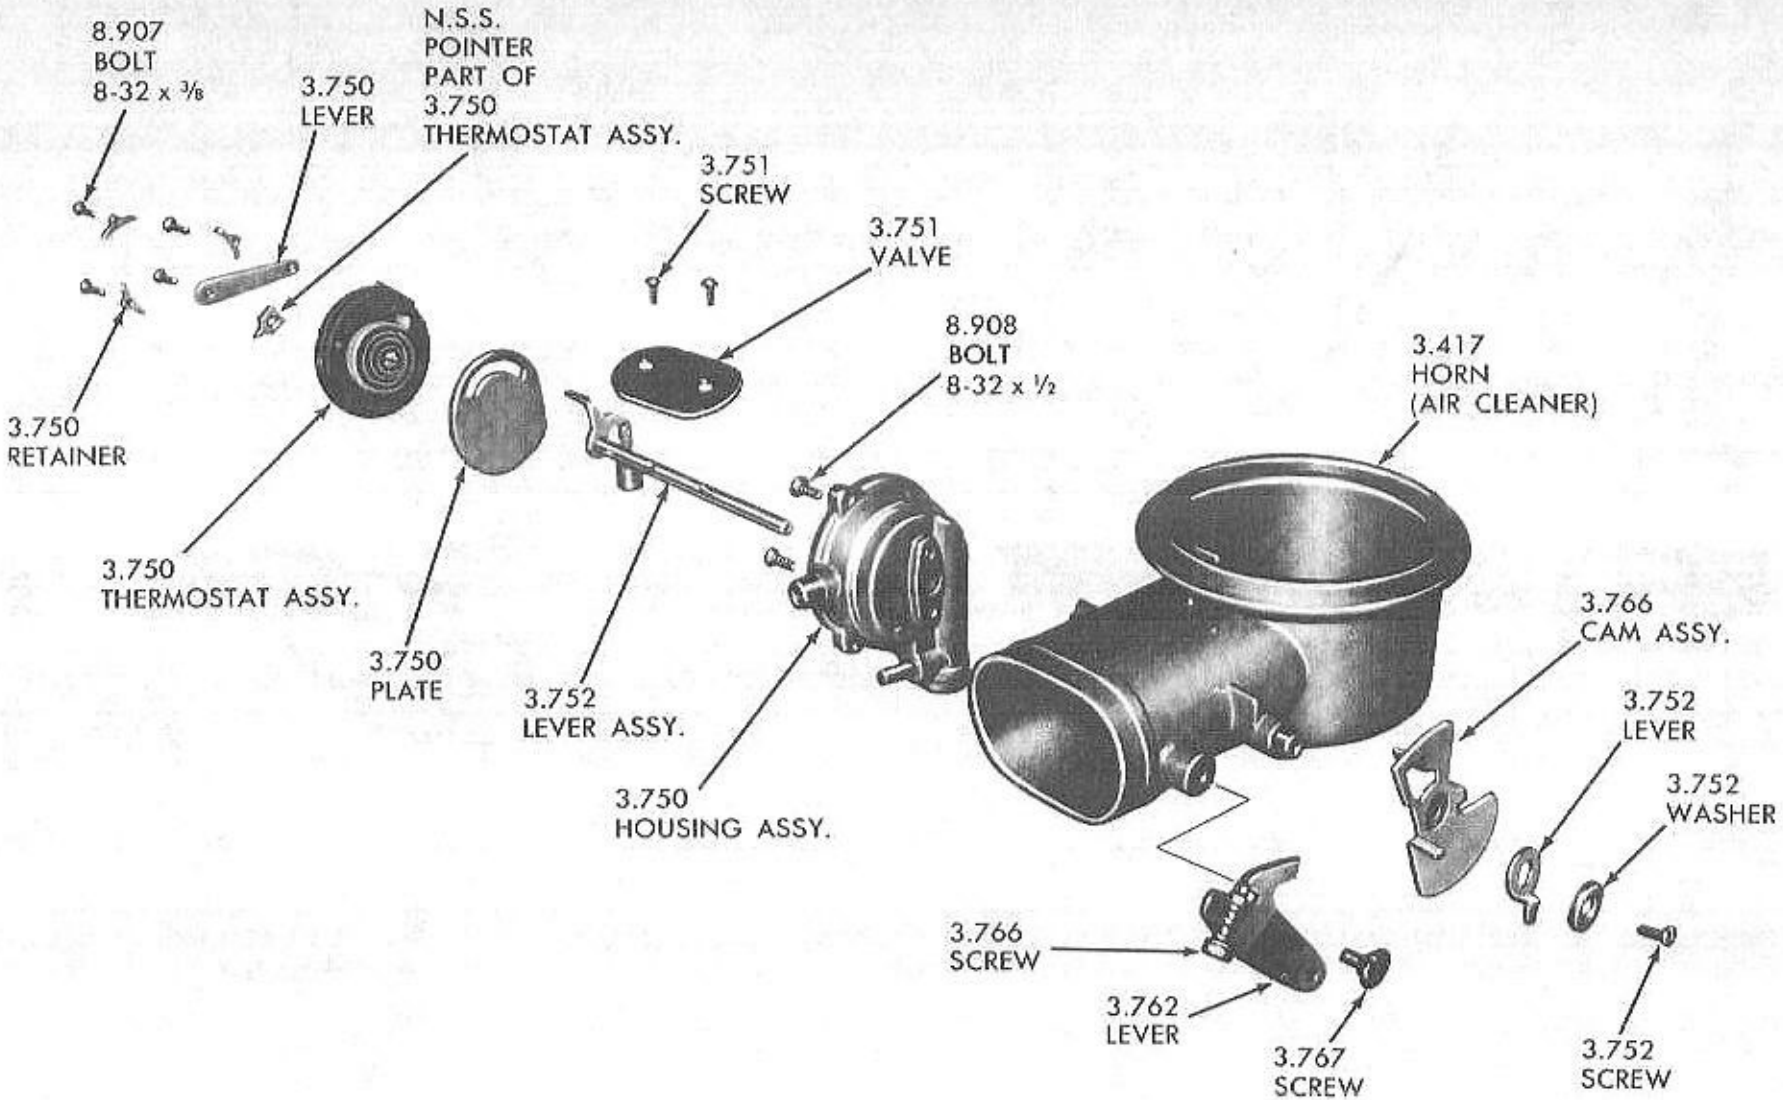

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

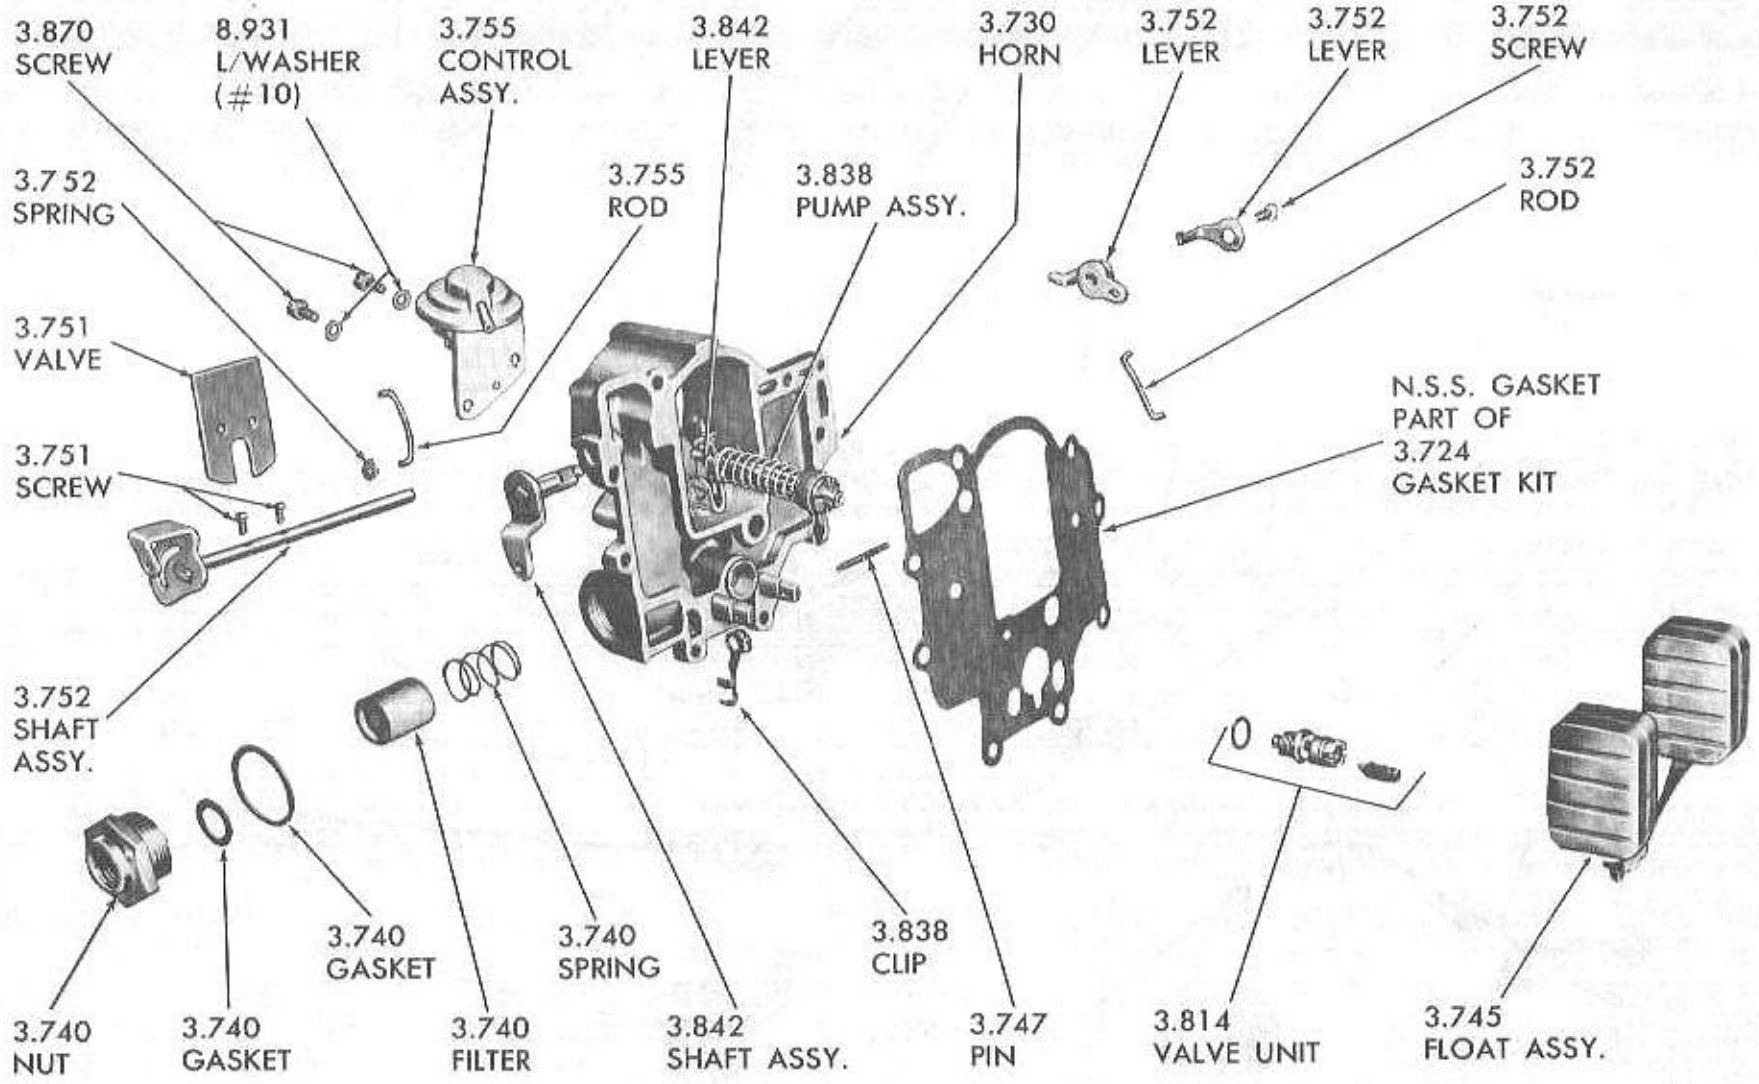

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

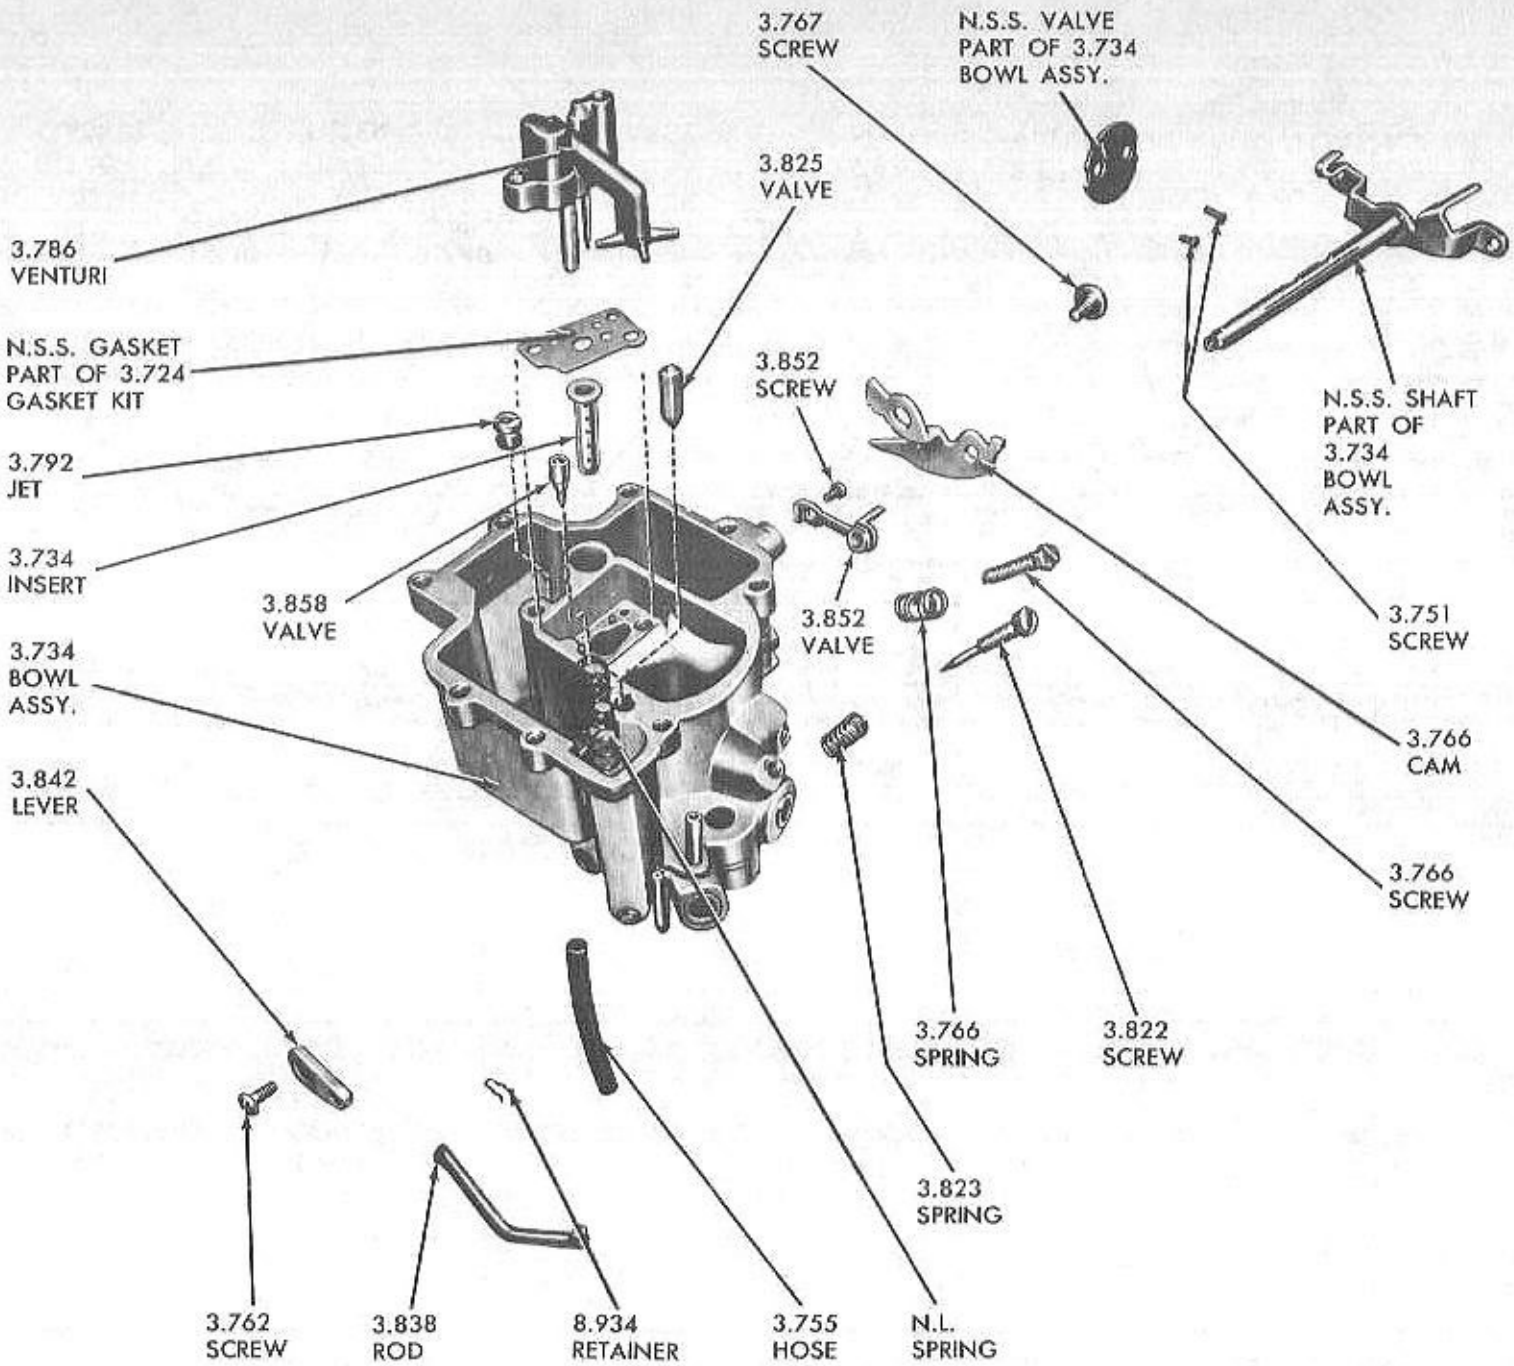

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

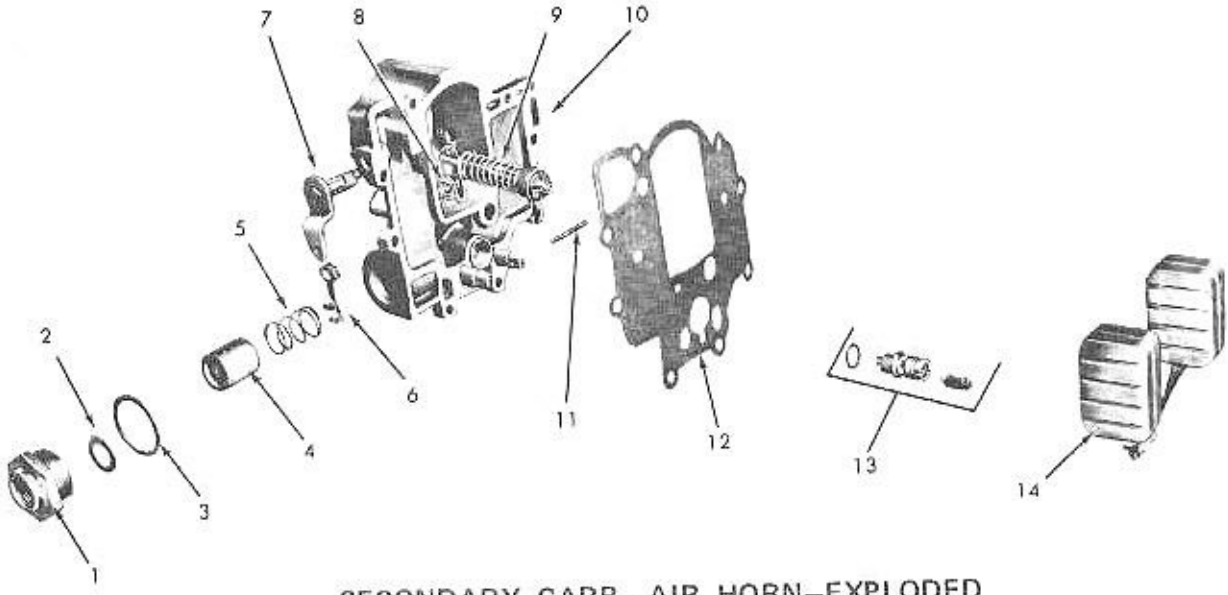

SECONDARY CARB.–AIR HORN–EXPLODED

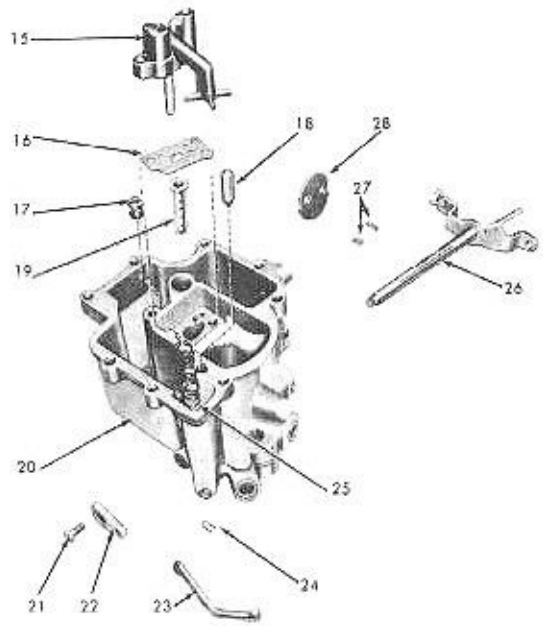

SECONDARY CARB. BOWL ASSY.–EXPLODED

1965-69 CORVAIR SECONDARY CARB.–EXPLODED

1.	3.740	NUT
2.	3.740	GASKET
3.	3.740	GASKET
4.	3.740	FILTER
5.	3.740	SPRING
6.	3.838	CLIP
7.	3.842	SHAFT ASSEMBLY
8.	3.842	LEVER
9.	3.838	PUMP ASSEMBLY
10.	3.730	HORN
11.	3.747	PIN
12.	N.S.S.	GASKET–Part of 3.724 Kit
13.	3.814	NEEDLE UNIT
14.	3.745	FLOAT ASSEMBLY
15.	3.786	VENTURI
16.	N.S.S.	GASKET–Part of 3.724 Kit
17.	3.792	JET
18.	3.825	VALVE
19.	3.734	INSERT
20.	3.734	BOWL ASSEMBLY
21.	3.762	SCREW
22.	3.842	LEVER
23.	3.838	ROD
24.	8.934	RETAINER
25.	N.L.	SPRING
26.	N.S.S.	SHAFT–Part of 3.734 BOWL ASSY.
27.	3.751	SCREW
28.	N.S.S.	VALVE–Part of 3.734 BOWL ASSY.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

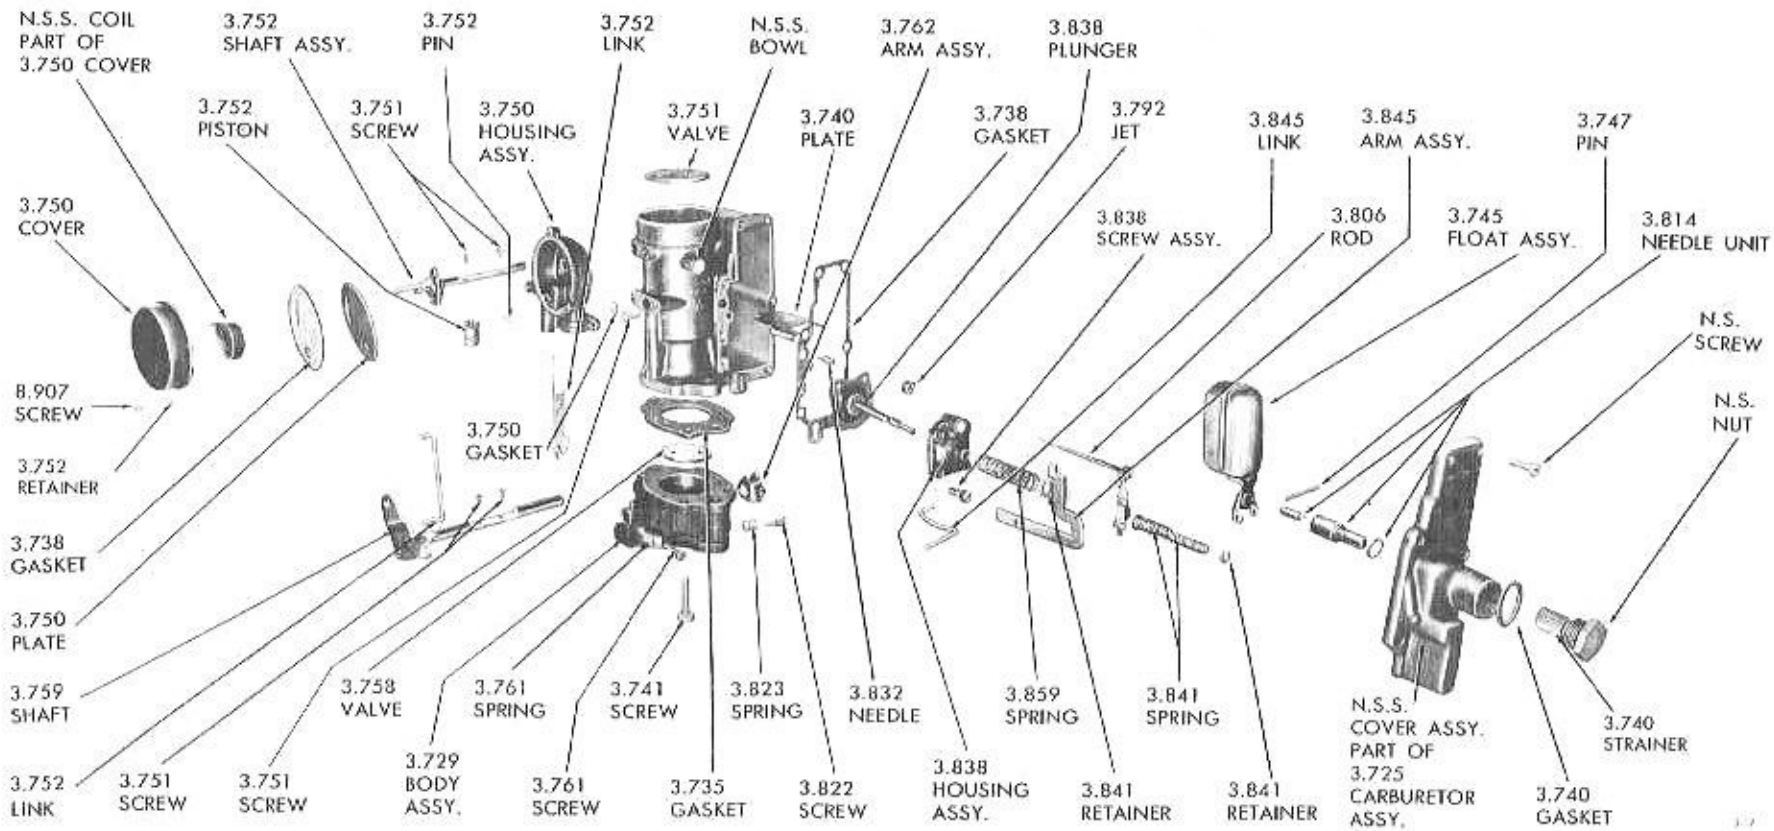

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

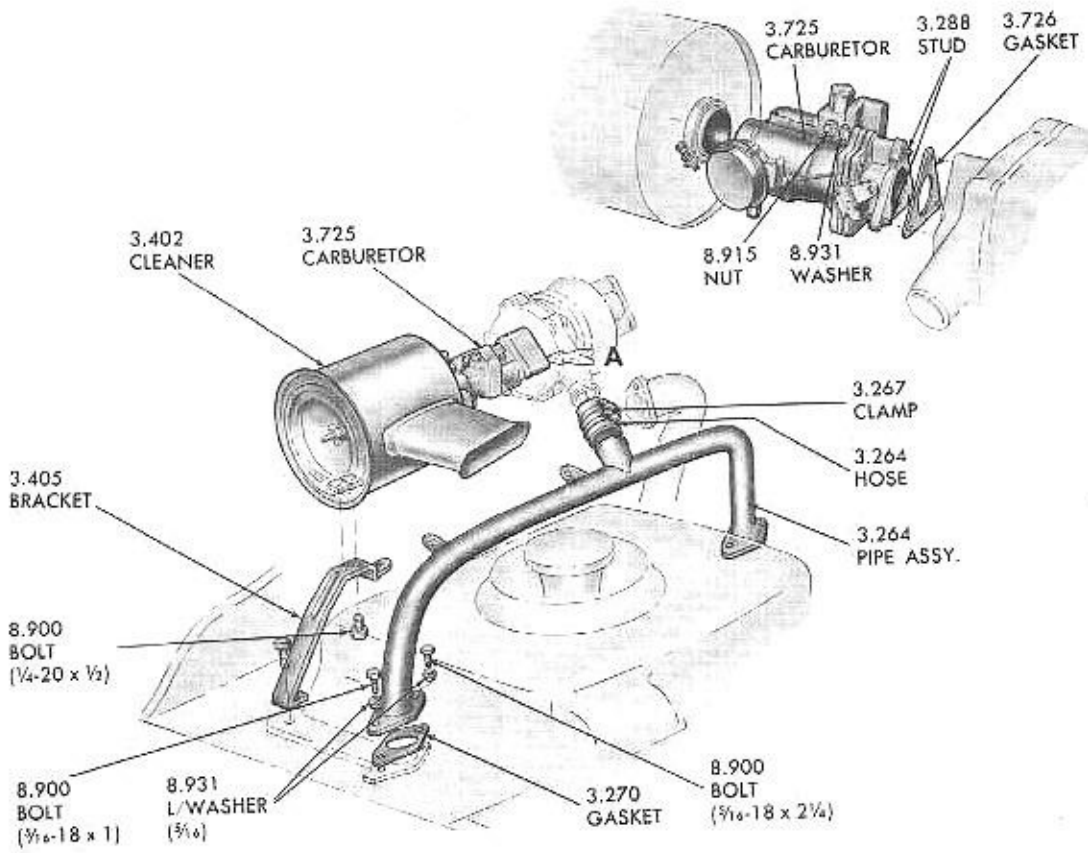

1962-66 CORVAIR TURBOCHARGER INDUCTION SYSTEM

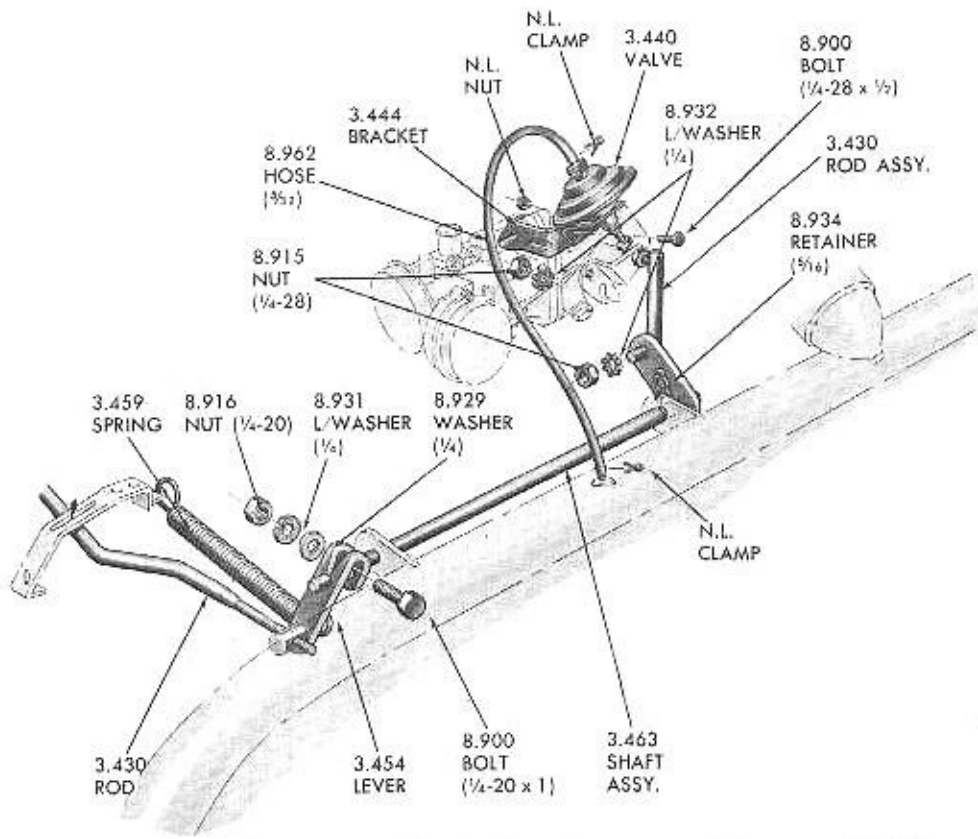

1962-66 CORVAIR TURBOCHARGER CARBURETOR LINKAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

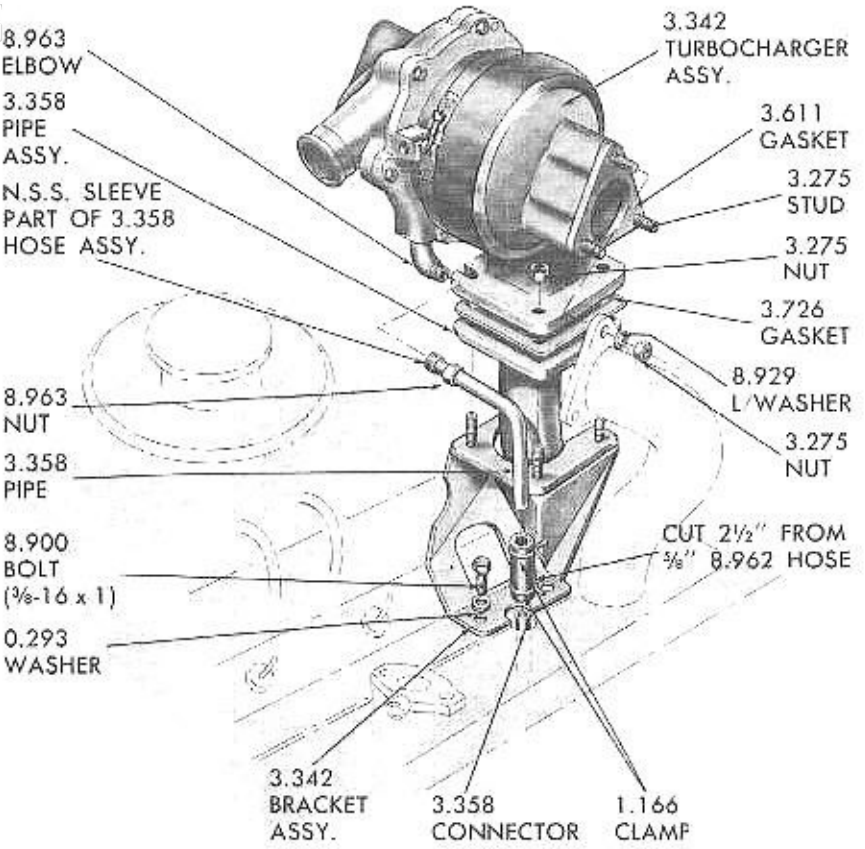

1962-66 CORVAIR TURBOCHARGER BLOWER MOUNTING DETAILS

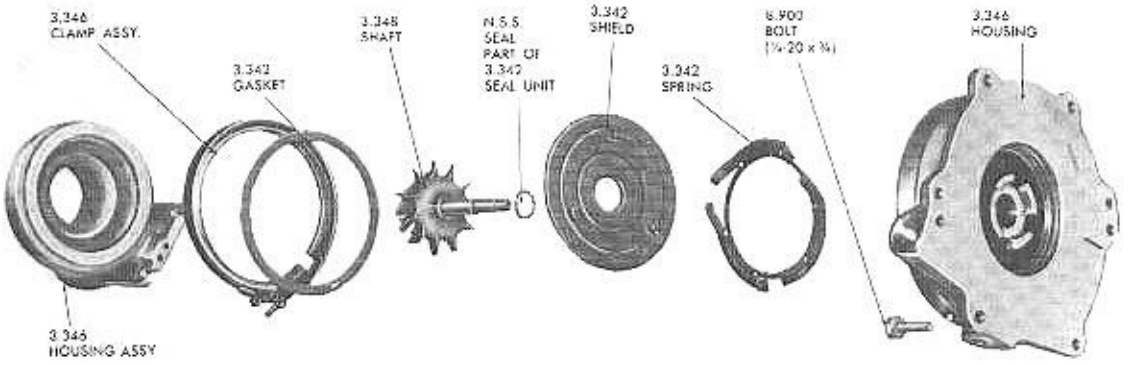

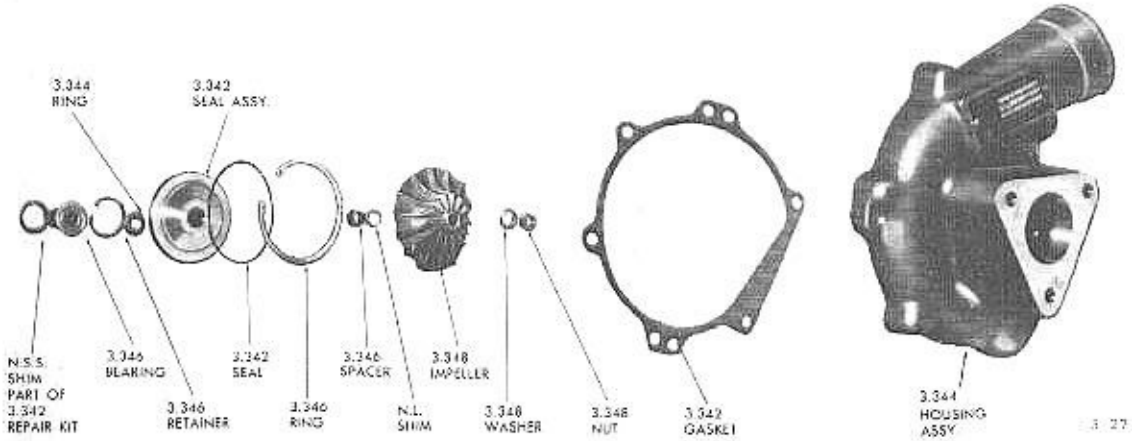

1962-66 CORVAIR TURBOCHARGER BLOWER—(EXPLODED)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

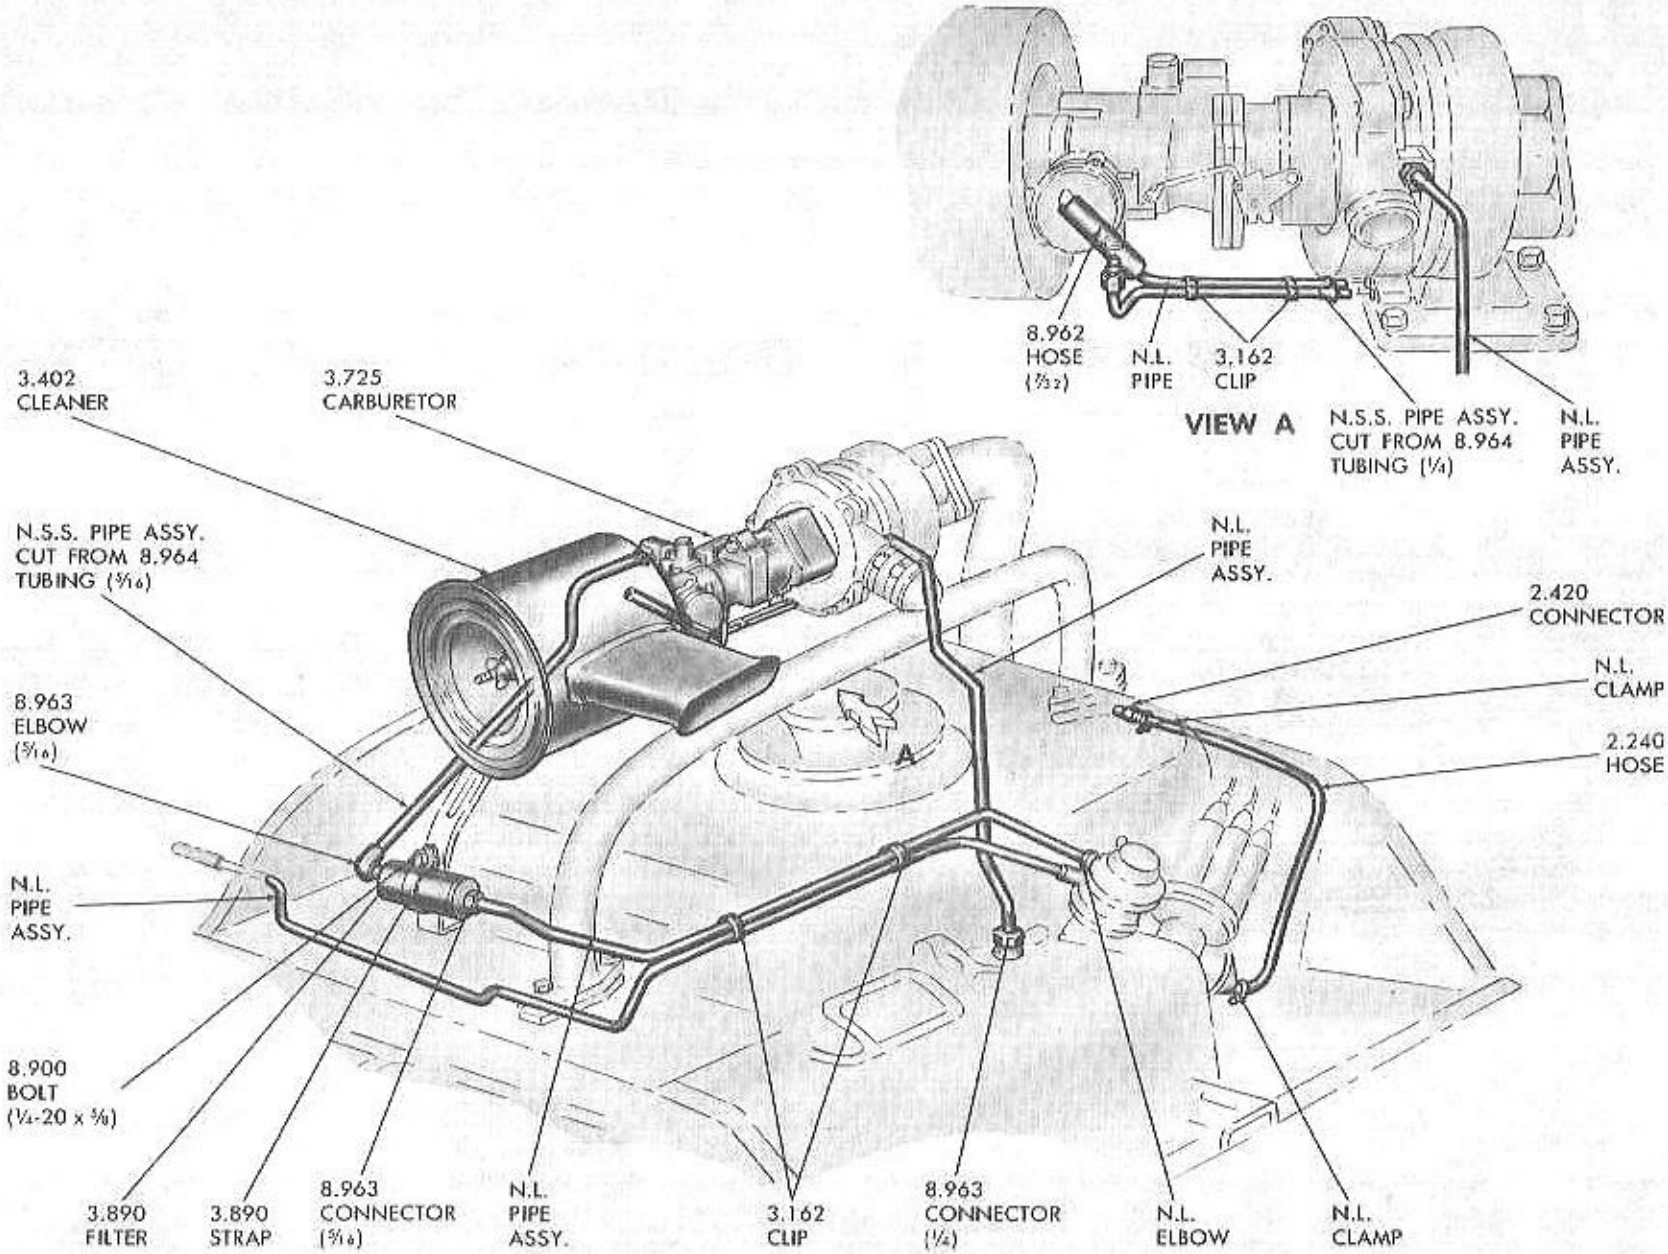

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

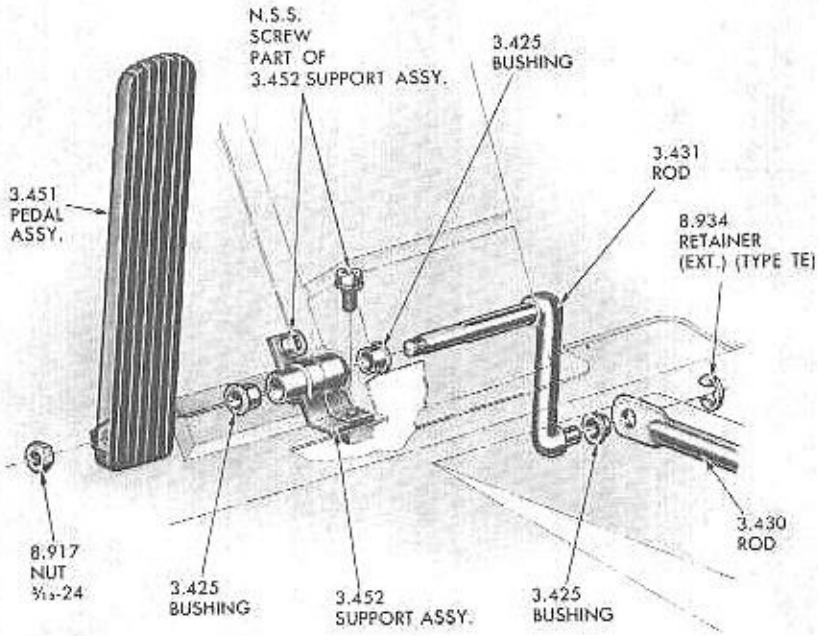

1960-65 CORVAIR ACCELERATOR PEDAL

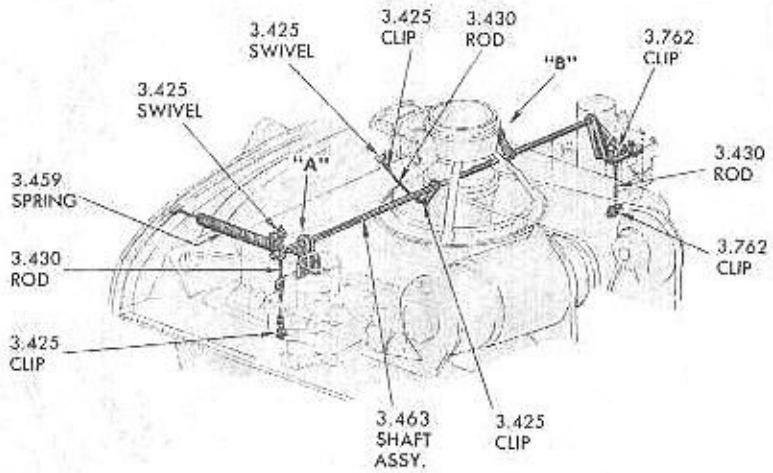

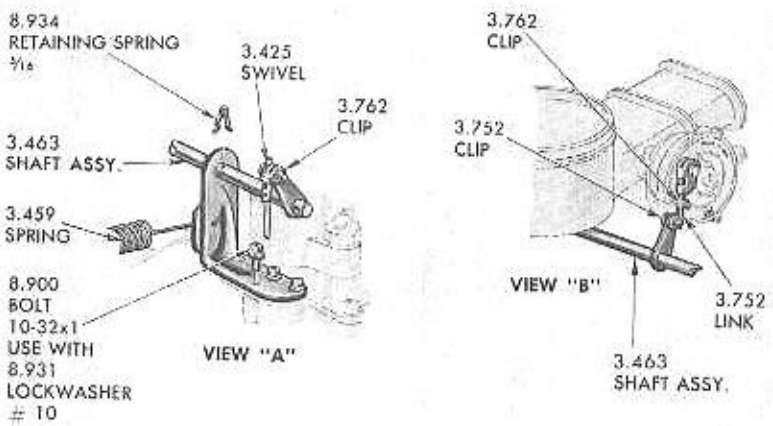

1960-62 CORVAIR CARBURETOR LINKAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

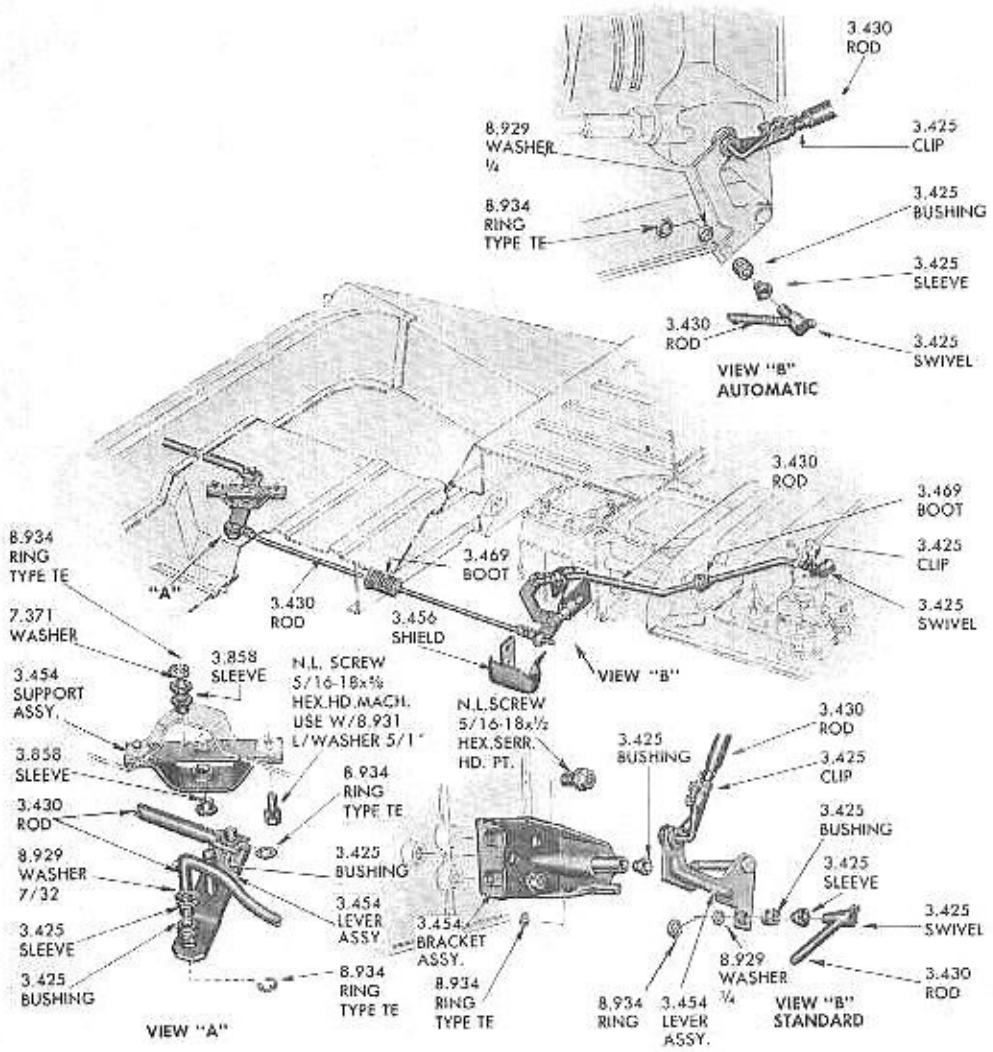

1960-65 CORVAIR ACCELERATOR CONTROL LINKAGE

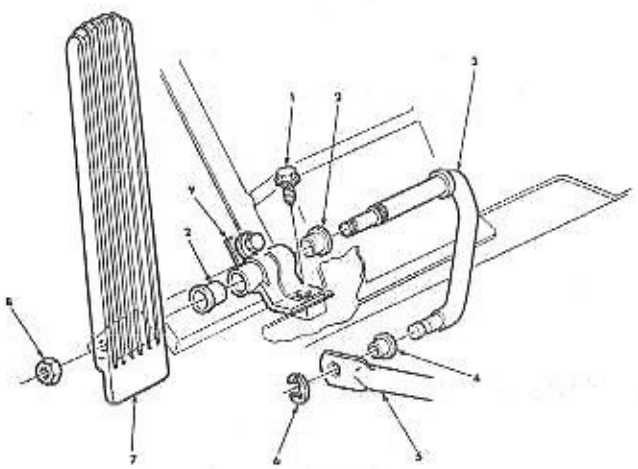

1965-69 CORVAIR—ACCELERATOR PEDAL

1.	8.900	BOLT (5/16–18 x 5/8)		6.	8.934	RING—RETAINER	
2.	3.425	BUSHING	3710620	7.	3.451	PEDAL ASSEMBLY	3878071
3.	3.431	ROD—ACCELERATOR PEDAL ..	3886549	8.	8.917	L/NUT (5/16–24)	
4.	3.425	BUSHING	6255951	9.	3.452	SUPPORT ASSEMBLY	6255952
5.	3.430	ROD—ACCEL. CONTROL	3868644				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

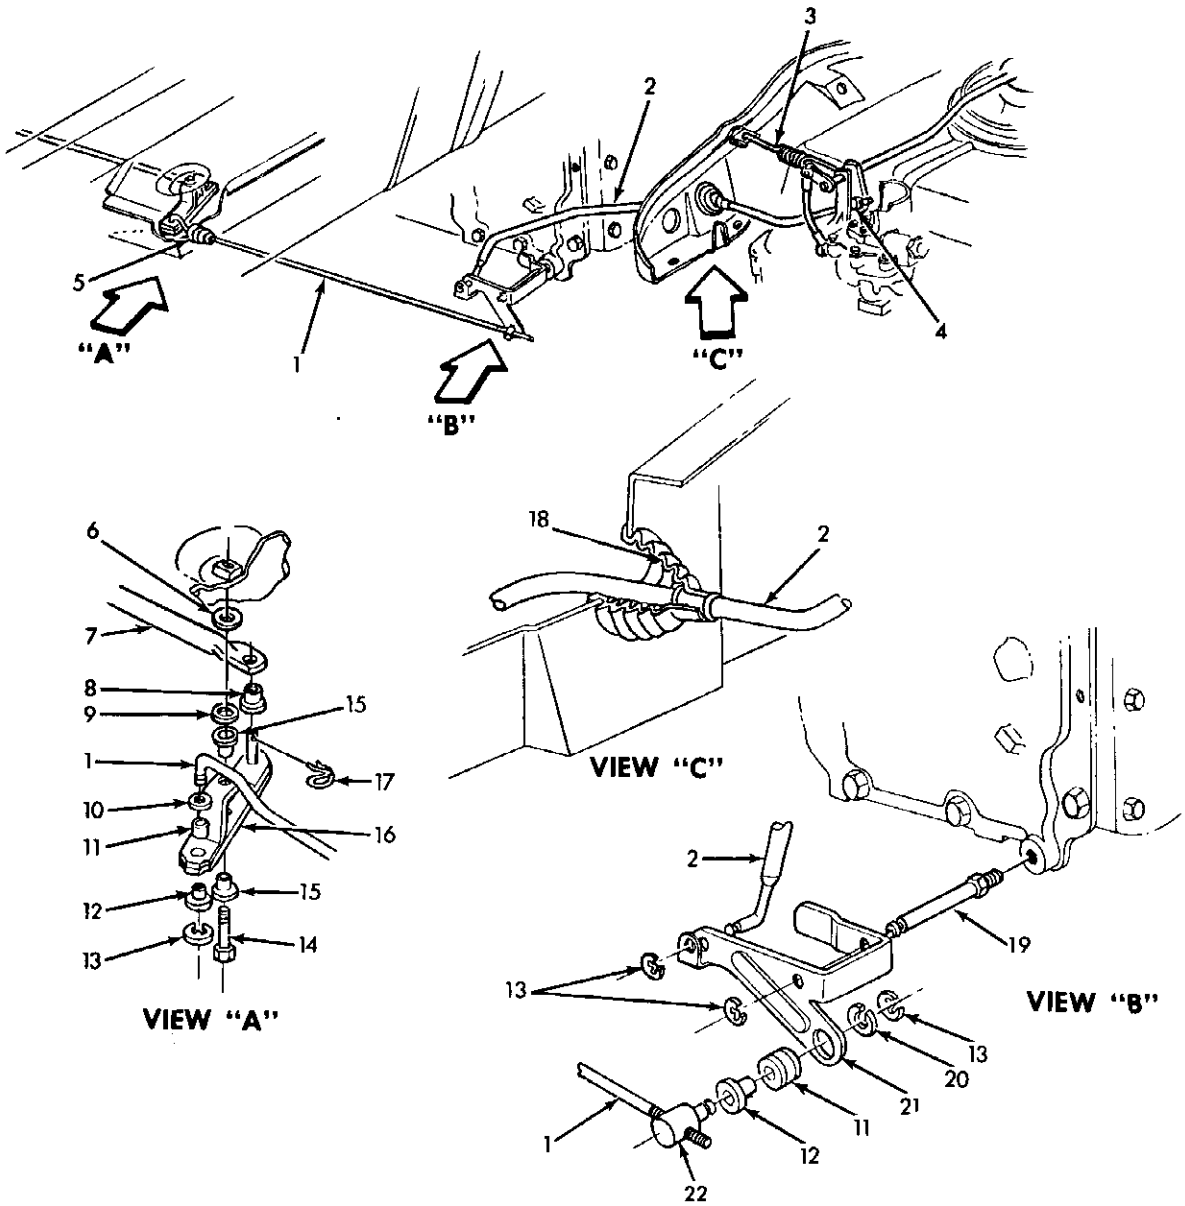

1966-69 CORVAIR ACCELERATOR CONTROL LINKAGE

1.	3.430	ROD	3861879	12.	3.425	SLEEVE	3866271
2.	3.430	ROD	3875095	13.	8.934	RETAINER (#3) (1/4 Dia.)	
3.	3.459	SPRING (exc. 4/1BC)	3851924	14.	3.454	BOLT	3876942
	3.459	SPRING w/4/1BC	3873990	15.	3.425	SLEEVE	3861877
4.	3.425	SWIVEL	3785360	16.	3.454	LEVER	3886576
5.	3.469	BOOT	6256998	17.	3.425	RETAINER	3749084
6.	4.854	WASHER	3728666	18.	3.469	BOOT	3784992
7.	3.430	ROD	3868644	19.	3.456	STUD	3879739
8.	3.425	BUSHING	6255952	20.	3.425	WASHER	3718496
9.	3.456	WASHER	3866515	21.	3.454	LEVER	3879739
10.	3.425	WASHER	3718496	22.	3.425	SWIVEL	6257704
11.	3.425	BUSHING	3861880				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

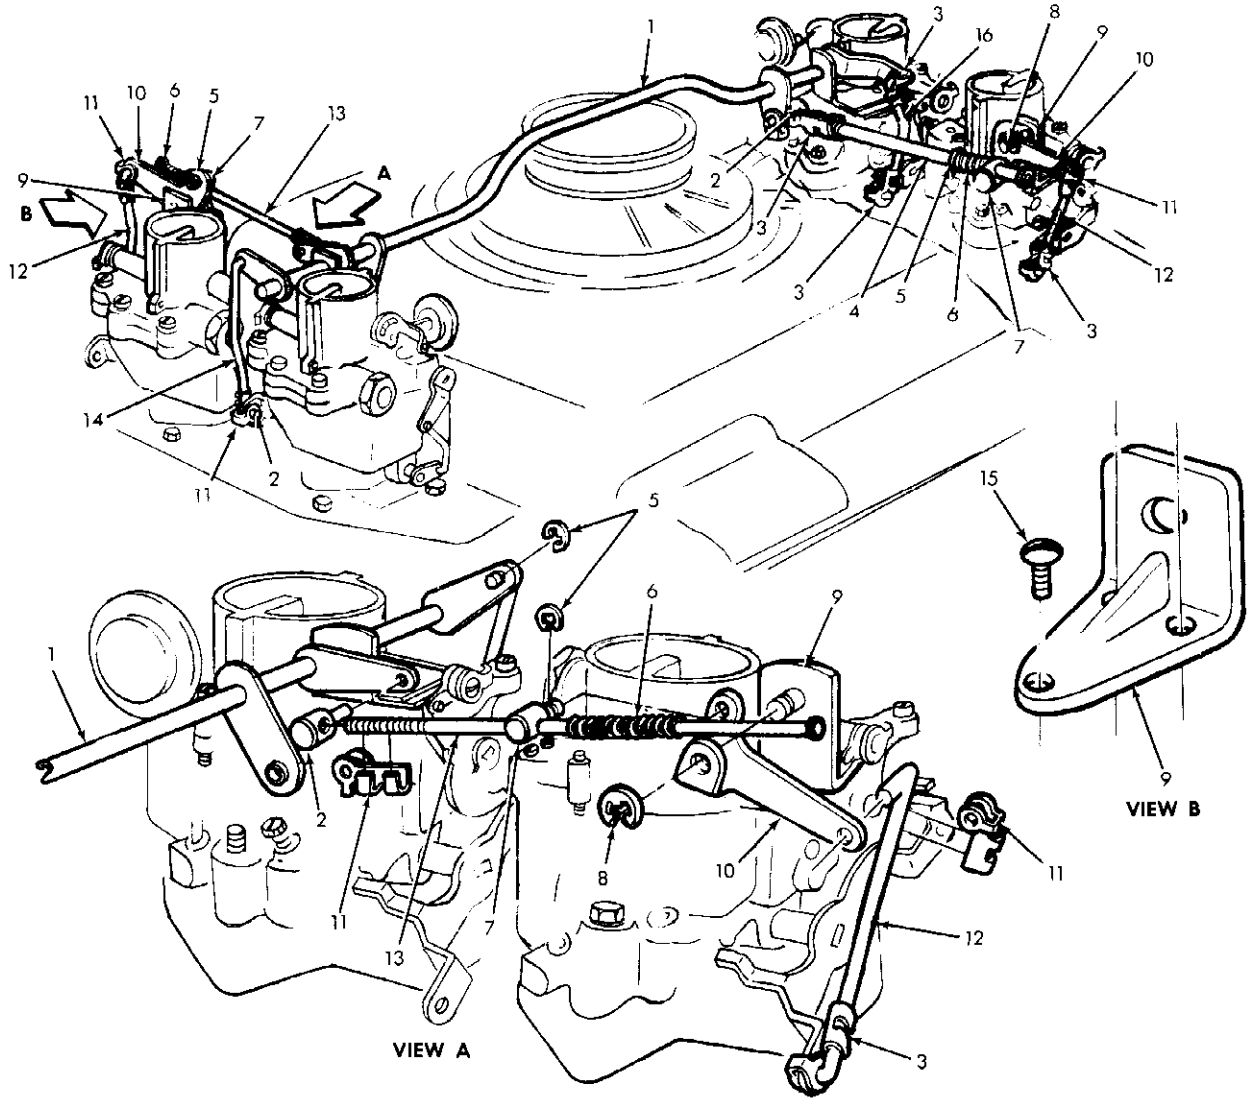

CORVAIR 4/IBC CARBURETOR LINKAGE

1.	3.463	SHAFT ASSY.
2.	3.425	SWIVEL
3.	3.762	CLIP
4.	3.430	ROD—R.H.
5.	8.934	RING
6.	3.425	SPRING
7.	3.425	SWIVEL
8.	8.934	RING (5/16)
9.	3.762	SUPPORT ASSY.
10.	3.762	LEVER
11.	3.425	CLIP
12.	3.752	ROD
13.	3.430	ROD
14.	3.430	ROD—L.H.
15.	8.906	SCREW (#10—32 x 3/4)
	8.932	WASHER (#10)
16.	3.752	ROD

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

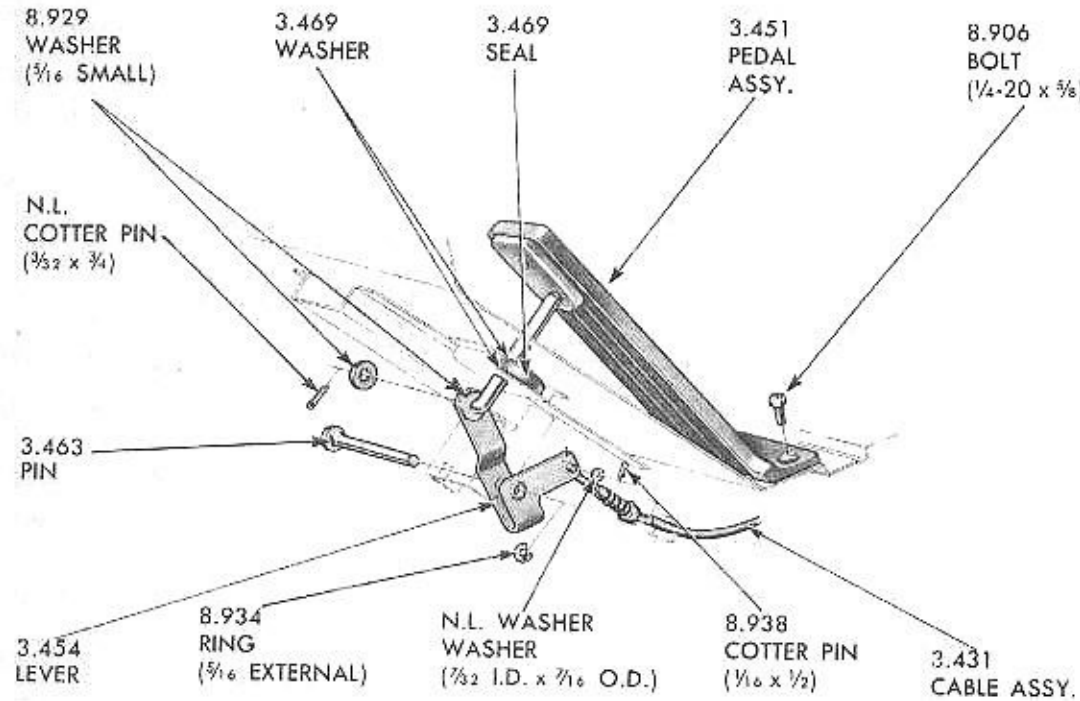

FRONT

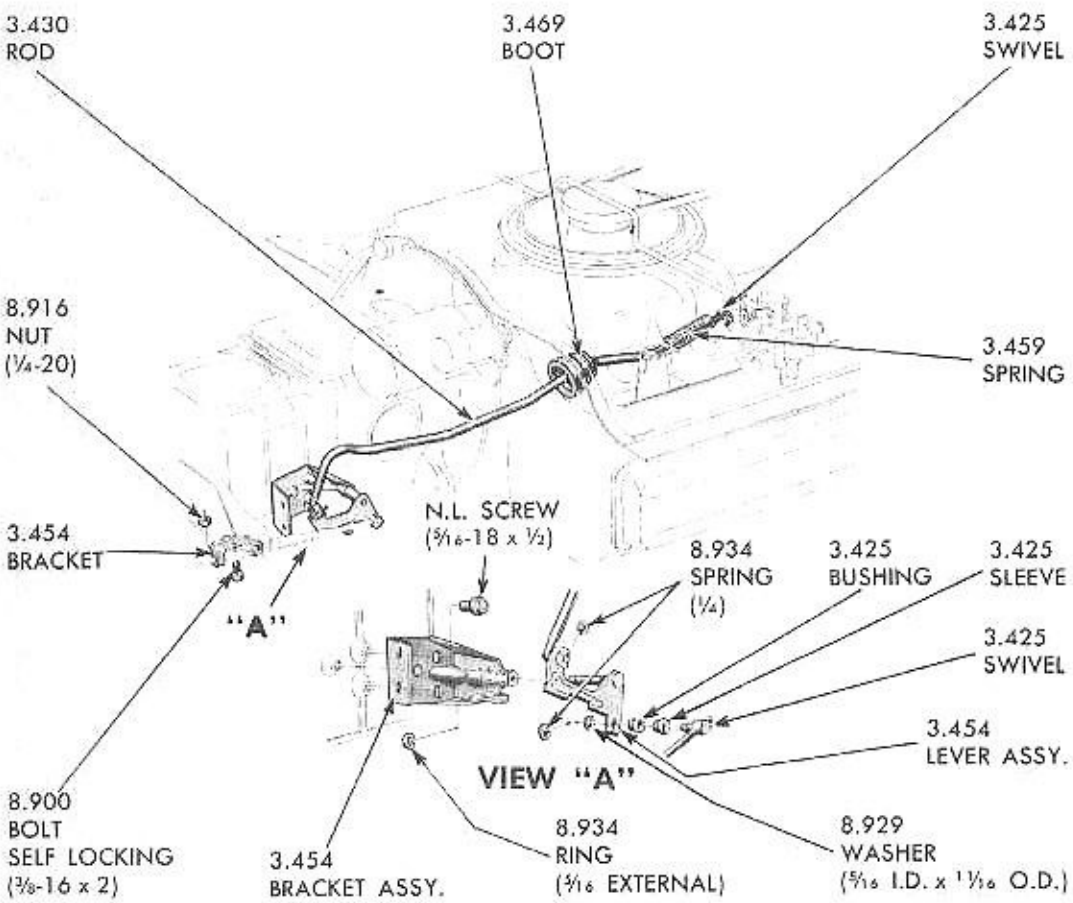

REAR

1961-63 CORVAIR F.C. ACCELERATOR PEDAL AND LINKAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

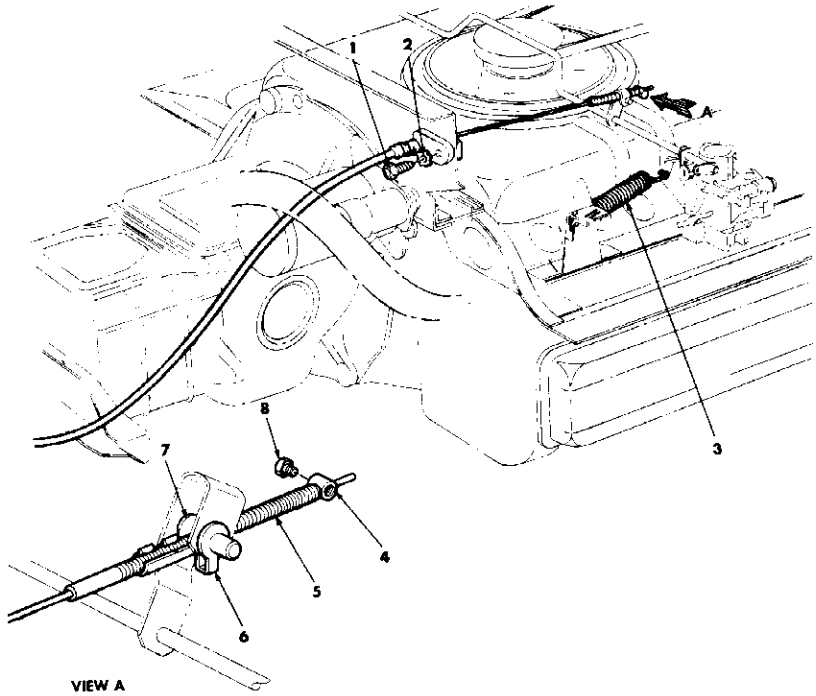

1963-65 CORVAIR F.C. ACCELERATOR LINKAGE—REAR

1.	8.977	SCREW (hex) (#14–10 x 5/8)		5.	3.425	ROD	3796372
2.	8.932	L/WASHER (external) (1/4)		6.	3.425	CLIP	3711177
3.	3.459	SPRING	3787041	7.	3.425	SWIVEL	3796373
4.	3.483	GUIDE	3796374	8.	8.977	SCREW (#8–32 x 7/16)	

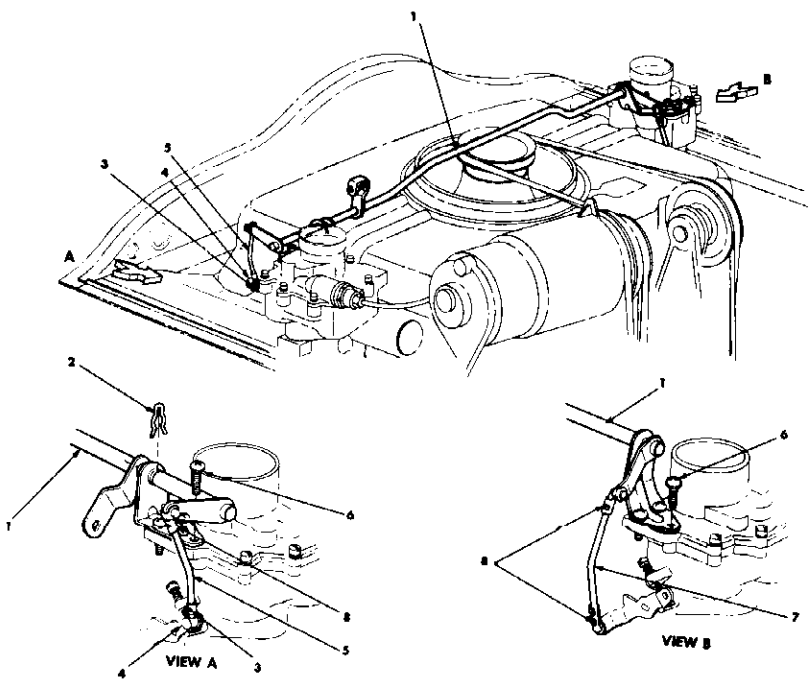

1963-65 CORVAIR F.C. ACCELERATOR CONTROL LINKAGE

1.	3.463	SHAFT ASSEMBLY	3796375	6.	8.906	BOLT (10–32 x 3/4) Use w/8.932 L/Washer (#10)	
2.	8.934	RETAINER (5/16)					
3.	3.425	CLIP	554285	7.	3.430	ROD	3814082
4.	3.425	SWIVEL	6255916	8.	3.762	CLIP	2294788
5.	3.430	ROD	3814081				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

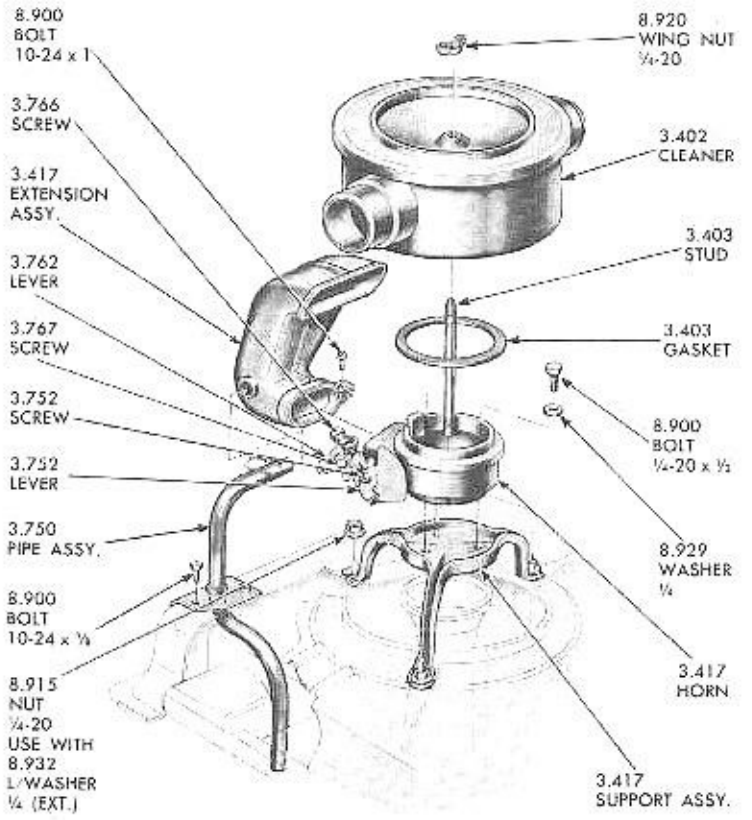

1960 CORVAIR AIR CLEANER AND AIR HORN

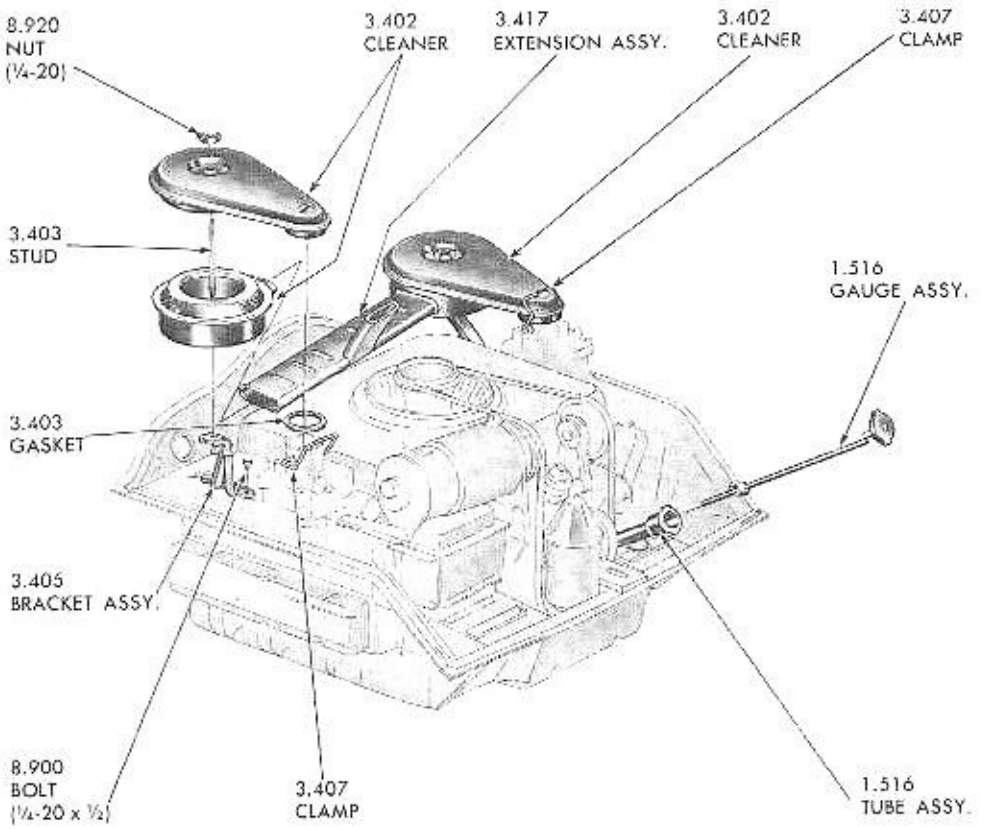

1961-63 CORVAIR AIR CLEANER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

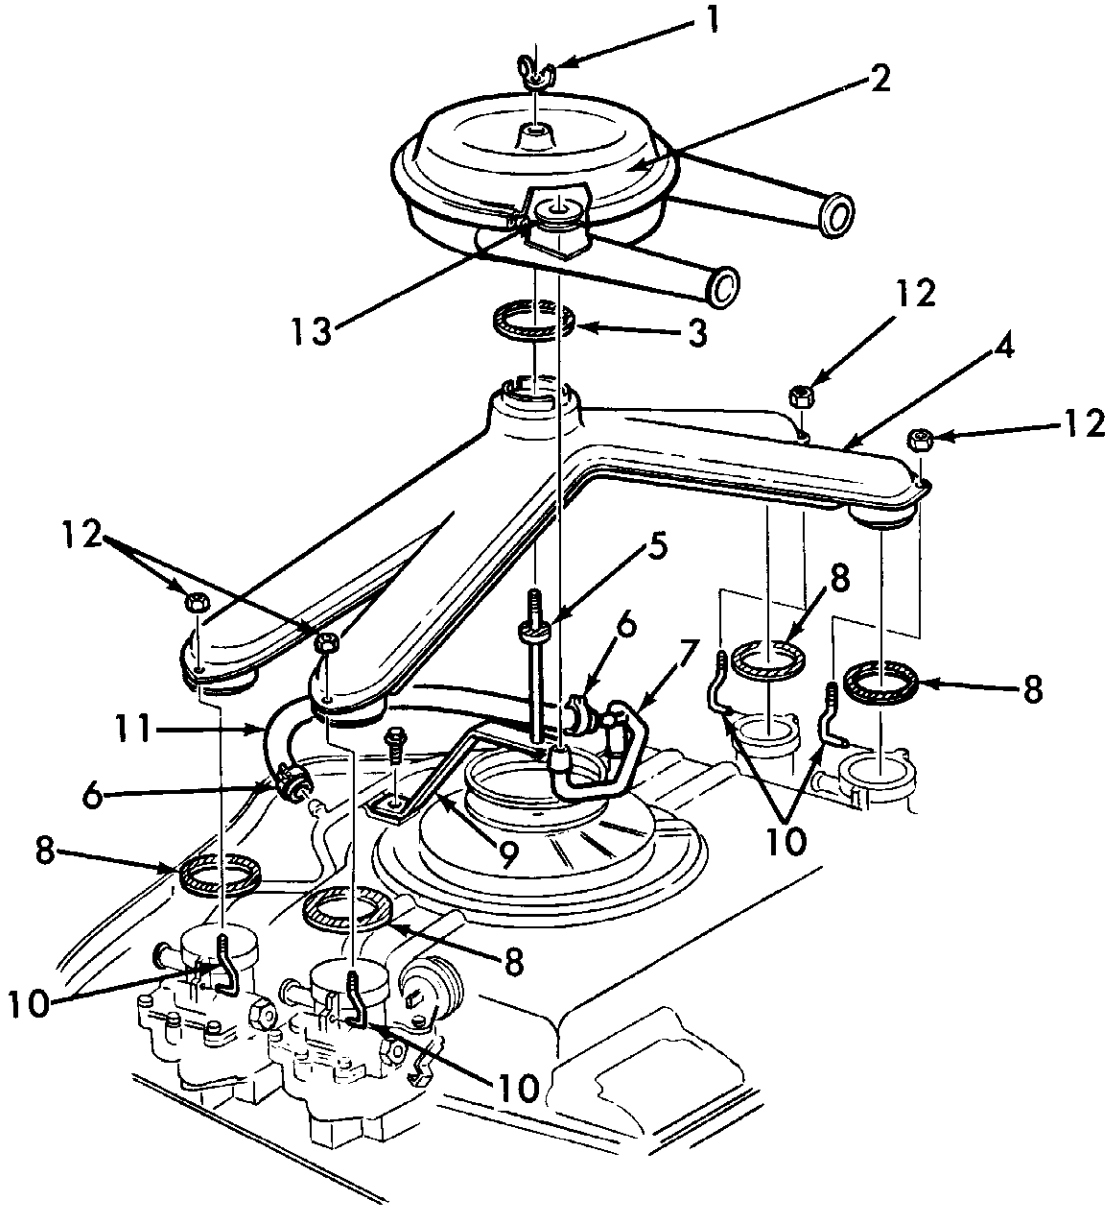

1965-69 CORVAIR AIR CLEANER DETAILS—4/1BC CARB.

1.	8.920	WING NUT (1/4—20)		8.	3.403	GASKET 3845685
2.	3.408	AIR CLEANER	6421253	9.	3.407	SUPPORT ASSEMBLY 3845683
3.	3.403	GASKET	3708408	10.	3.407	BOLT—J 3845682
4.	3.417	TUBE ASSEMBLY	3856779	11.	1.762	HOSE—Cut 12" from 3854408
5.	1.745	GASKET	5646135	12.	8.917	NUT (#10—24)
6.	1.750	CLAMP	3829058	13.	1.745	GROMMET 3851855
7.	1.762	TUBE ASSEMBLY	3867216			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

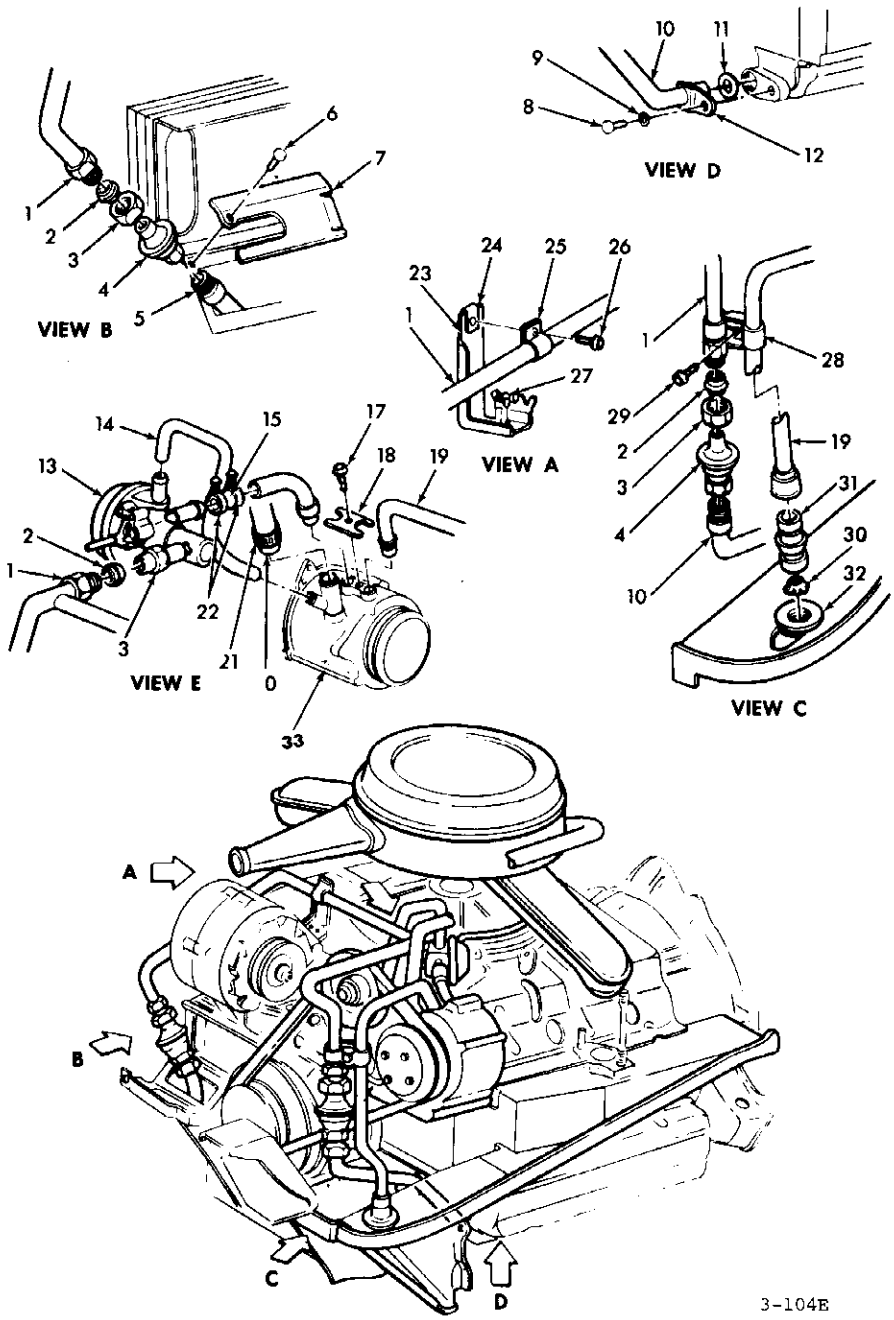

1968 CORVAIR AIR INJECTION REACTOR DETAILS

1.	3.675	PIPE ASSY.	3909447	18.	3.680	CLAMP	3883867
2.	8.963	SLEEVE (Ball) 3/4		19.	3.675	PIPE ASSY.	3909449
3.	8.977	NUT 3/4		20.	3.675	HOSE	3909468
4.	3.670	VALVE ASSY.	5361993	21.	1.166	CLAMP	9423581
5.	3.675	PIPE ASSY.	3901835	22.	1.166	CLAMP	1351812
6.	8.977	SCREW 10–16 x 1/2		23.	3.655	BRACKET	3880762
7.	1.020	COVER ASSY.	3909428	24.	1.303	NUT	3844999
8.	8.900	BOLT 3/8–16 x 7/8		25.	8.950	CLIP 3/4	
9.	8.931	L/WASHER 3/8		26.	8.900	SCREW 1/4–20 x 9/16	
10.	3.675	PIPE ASSY.	3901835	27.	N.L.	RIVET	
11.	3.670	GASKET	3875895	28.	3.680	CLAMP ASSY.	3909452
12.	3.680	CLAMP	3906630	29.	8.900	SCREW ASSY. 1/4–20 x 1	
13.	3.670	VALVE ASSY. (By-Pass.)	7028298	30.	3.670	PLUG (PRESS SETTING)	7801662
14.	3.675	HOSE	3909453	31.	3.670	VALVE ASSY.	5697366
15.	3.675	HOSE	3889356	32.	3.680	GROMMET	3888149
16.	3.675	PIPE	3909451	33.	3.660	PUMP	7801417
17.	1.062	SCREW ASSY.	3856672				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

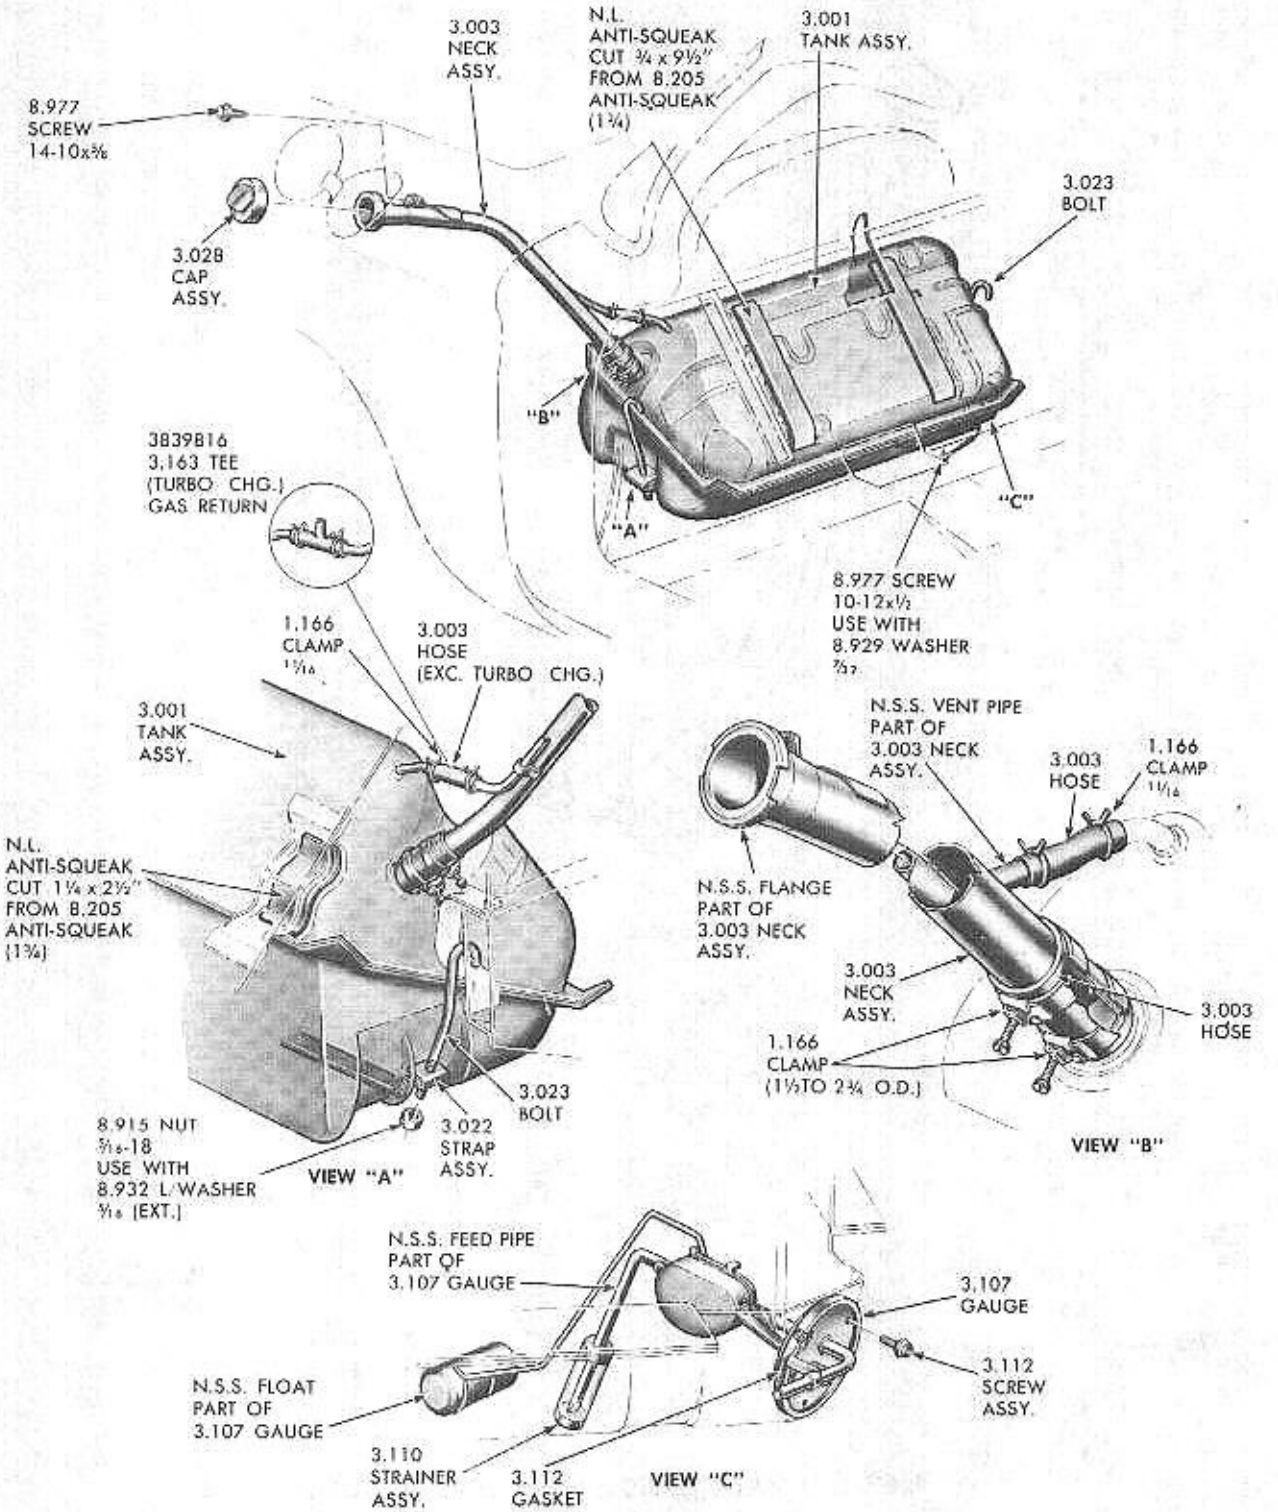

1960-64 CORVAIR GASOLINE TANK DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

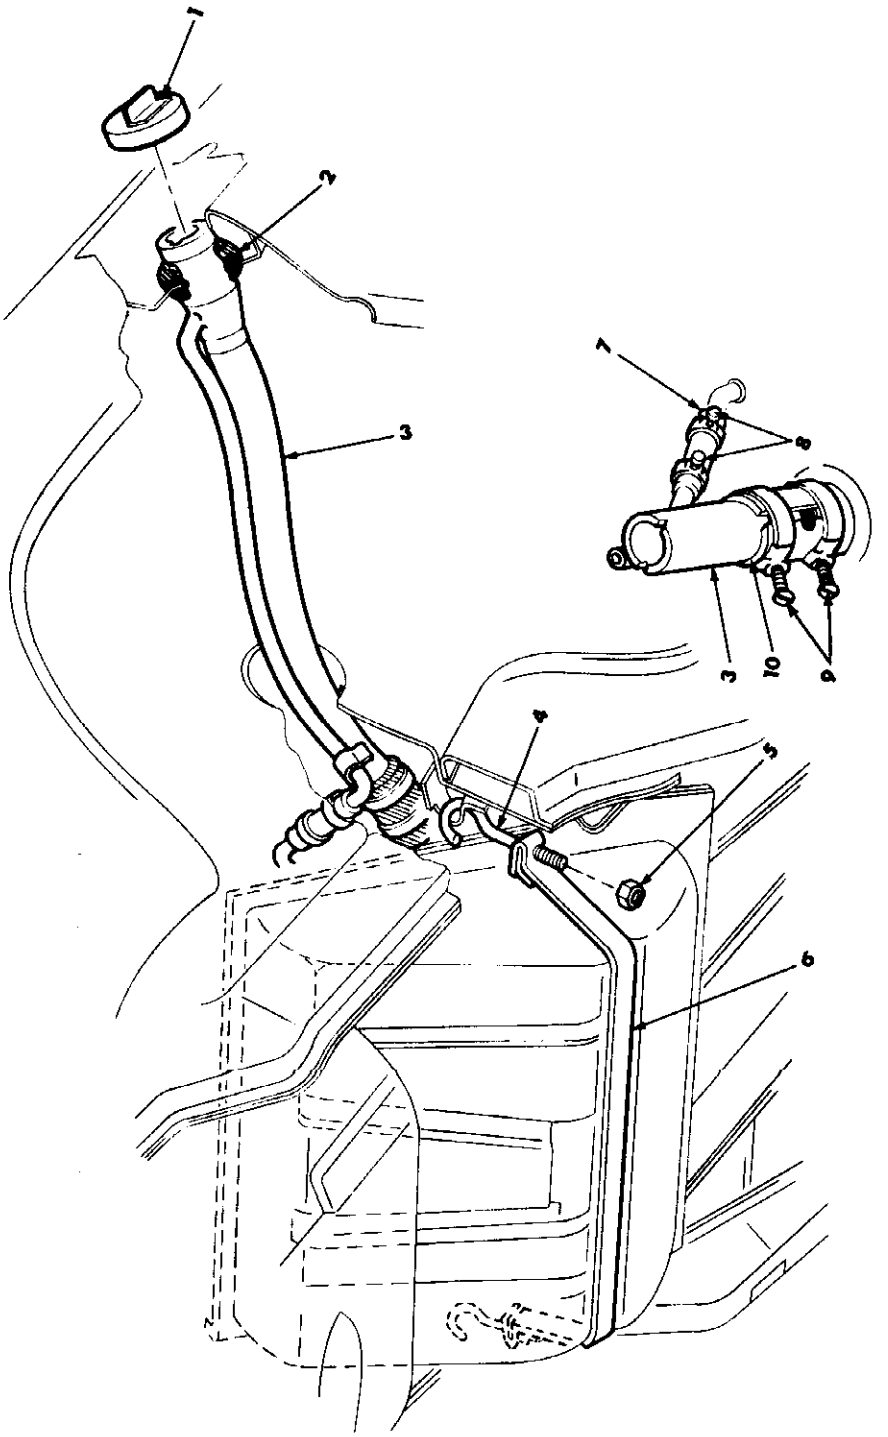

1965-69 CORVAIR GASOLINE TANK DETAILS

1.	3.028	CAP ASSEMBLY	3843698	6.	3.022	STRAP	6257682
2.	3.008	SEAL	580531	7.	N.S.	HOSE	
3.	3.003	NECK	3858110	8.	1.166	CLAMP	9419365
4.	3.023	BOLT	6257681	9.	1.166	CLAMP	3692864
5.	8.915	NUT (5/16–18)		10.	3.003	HOSE	3848525

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

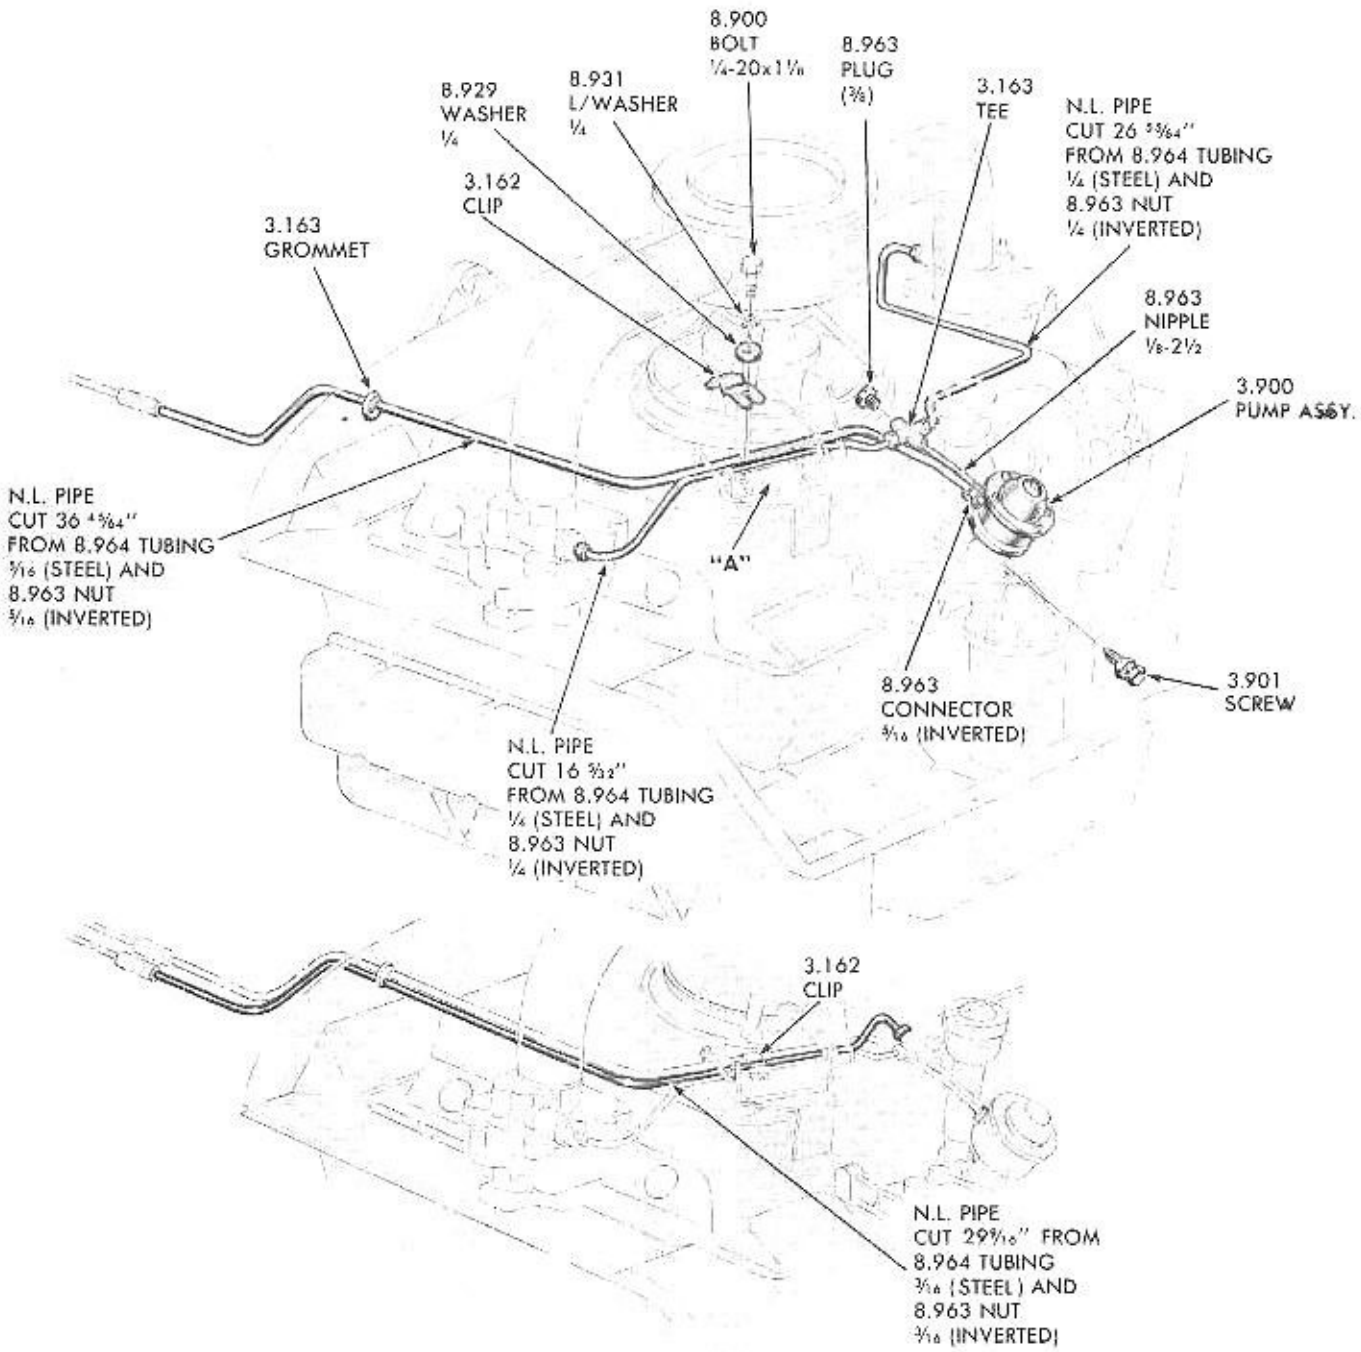

VIEW "A" (WITH HEATER)

1960-64 CORVAIR FUEL PUMP AND PIPES

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

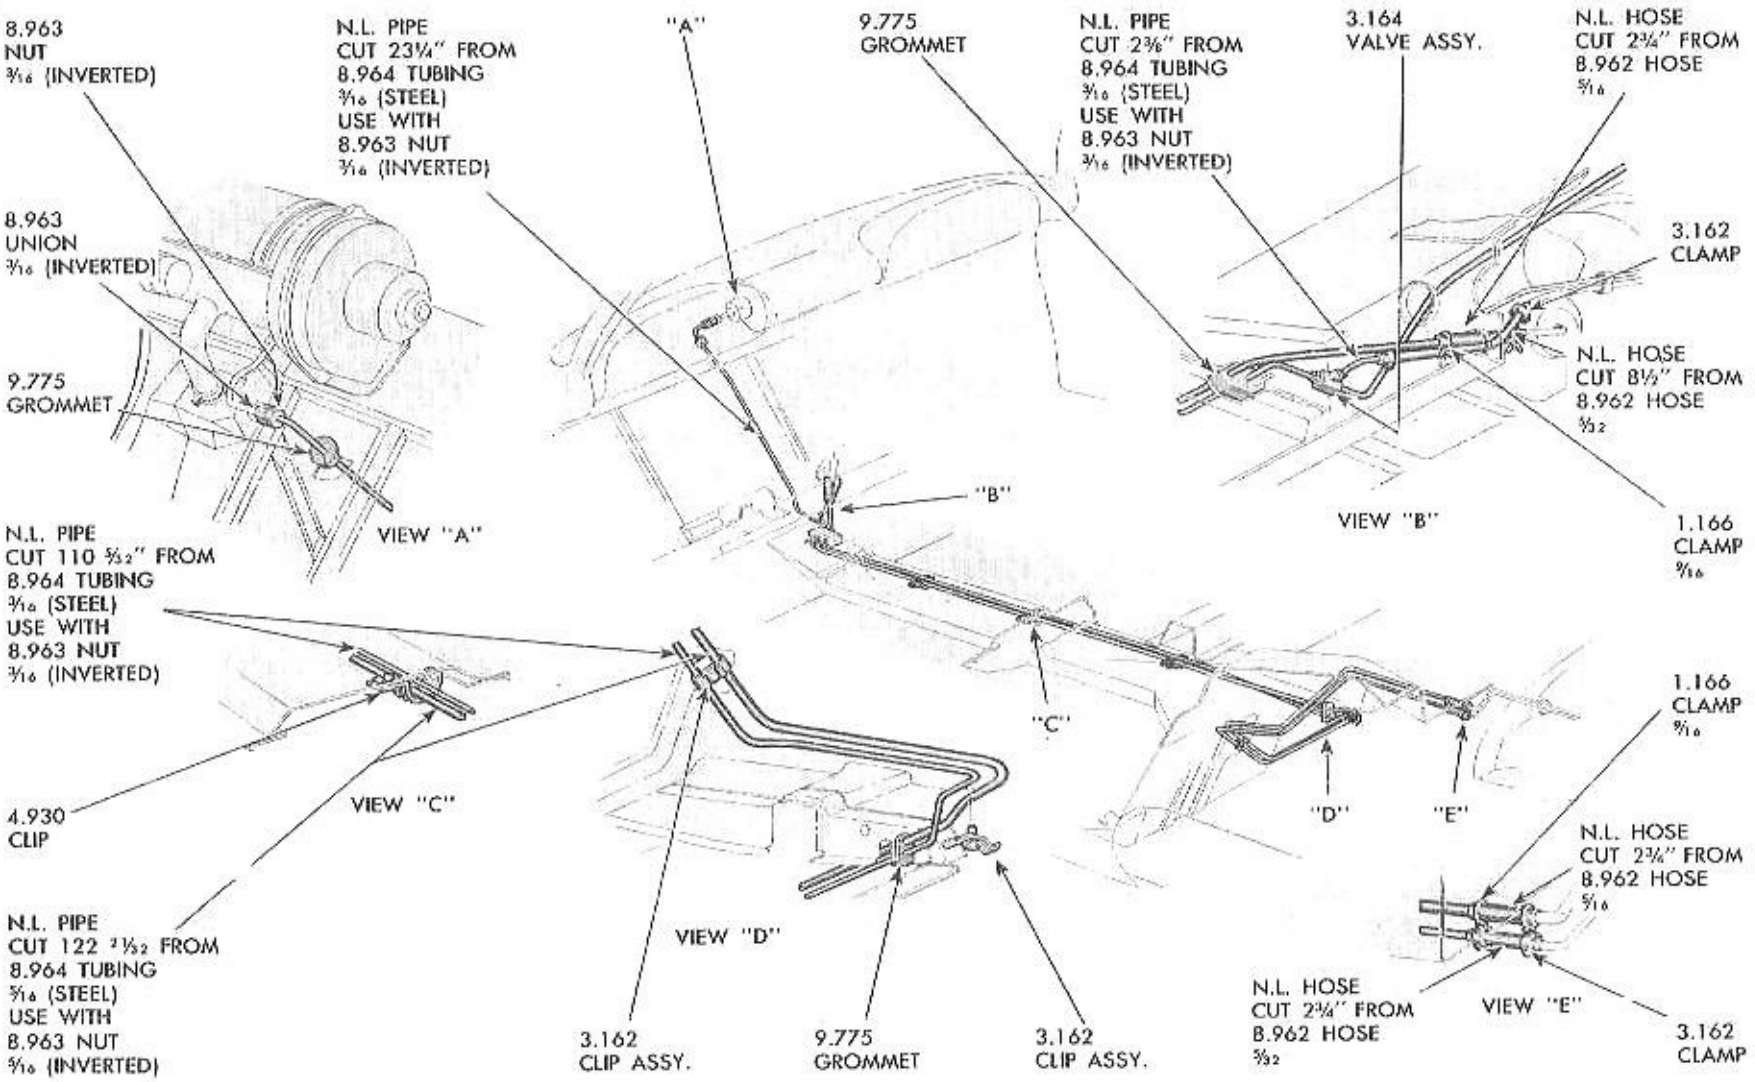

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

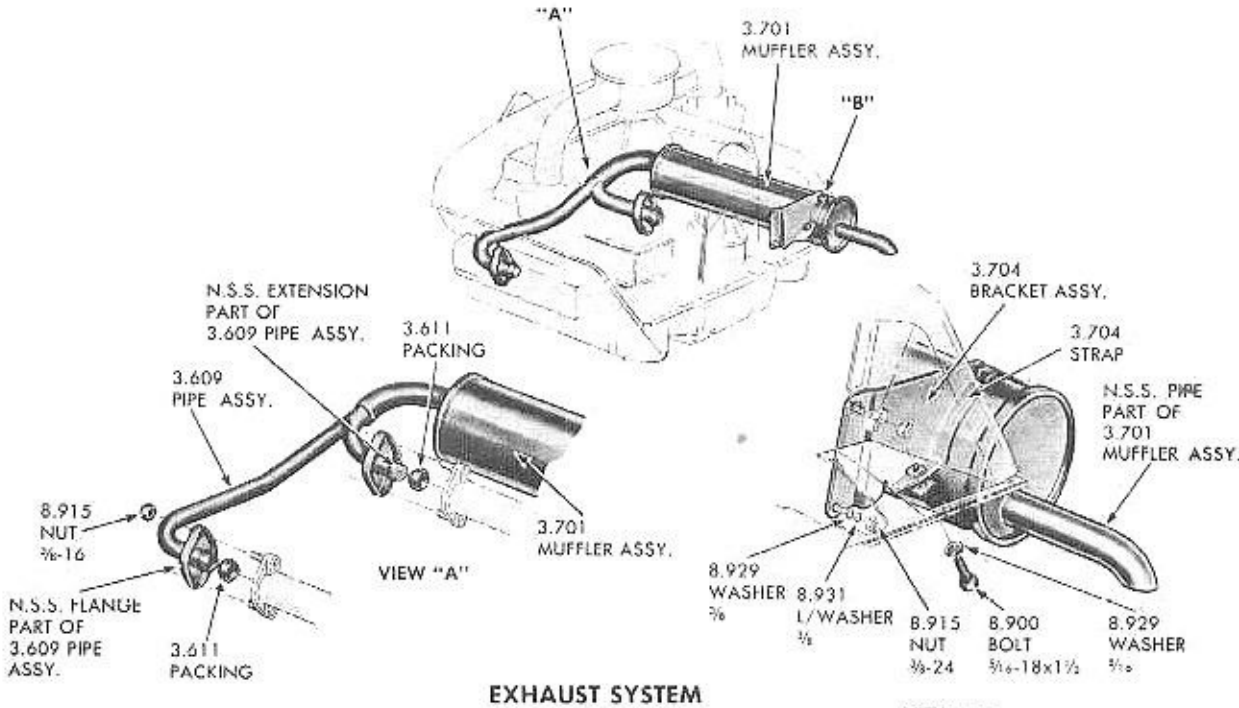

EXHAUST SYSTEM

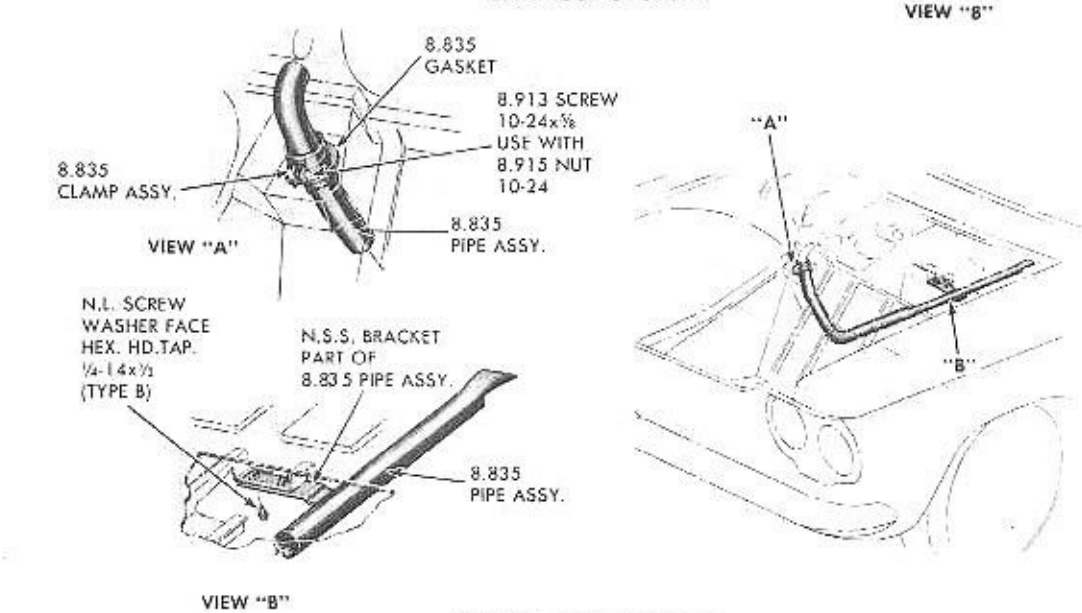

HEATER EXHAUST PIPE

1960-64 CORVAIR EXHAUST DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

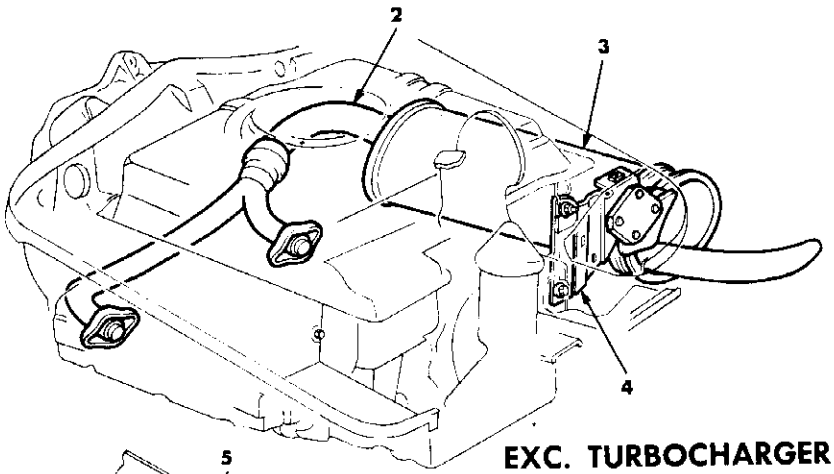

EXC. TURBOCHARGER

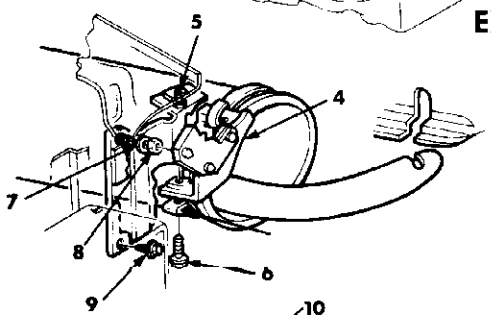

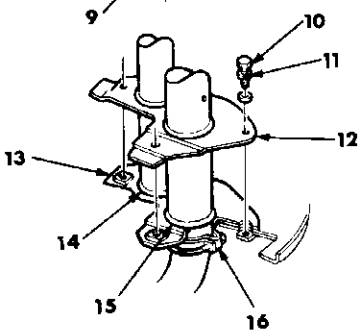

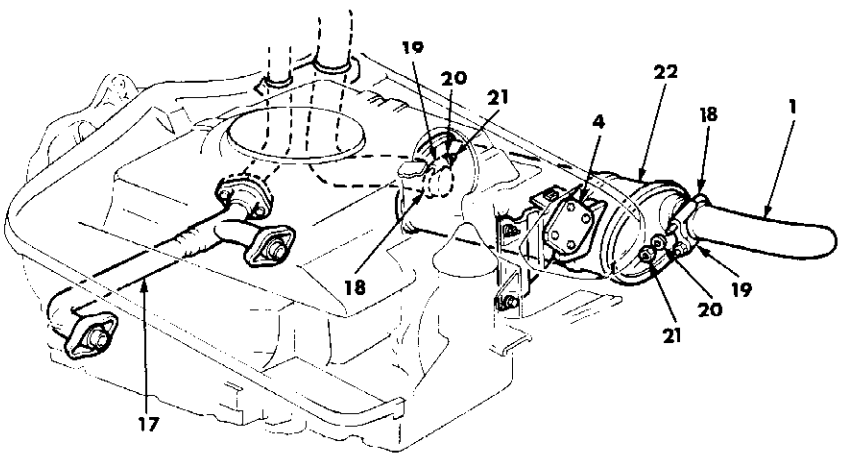

TURBOCHARGER

1965-69 CORVAIR—EXHAUST SYSTEM

1.	3.705	PIPE—TAIL	3858443	12.	3.610	RETAINER	3851979
2.	3.609	EXHAUST PIPE		13.	3.710	PLATE	3851978
3.	3.701	MUFFLER		14.	3.611	SEAL	3827241
4.	3.704	BRACKET ASSY.	3884818	15.	3.611	SEAL	3827240
5.	8.900	SCREW	3785130	16.	3.003	CLAMP	9414940
6.	8.900	SCREW (5/16—18 x 2-1/4)		17.	3.609	EXHAUST PIPE ASSY.	3858440
7.	8.931	WASHER (3/8)		18.	N.S.S.	"U" BOLT (Part of Clamp Unit)	
8.	8.915	NUT (3/8—24)		19.	3.708	CLAMP UNIT	2378616
9.	8.977	SCREW (10—12 x 5/8)		20.	8.931	L. WASHER (5/16)	
10.	8.900	BOLT (1/4—20 x 5/8)		21.	8.915	NUT (5/16—18)	
11.	8.929	WASHER (9/32 x 5/8 x 5/64)		22.	3.705	MUFFLER ASSY.	3858442

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

3.001 TANK ASSY., Fuel

60	CORVAIR	6257752	(11 gal.)	1
61-69	CORVAIR	3931549	complete (14 gal.) (Note 1)	1

NOTE 1 When using on Corvair with Turbo Charger it will be necessary to replace old neck asm. 3858110 with new neck asm. 3875010.

61-65	F.C.	3839613	complete (approx. 18½ gal.) (Note 2)	1

NOTE 2 When replacing gas tank that has no transmission control rod routed thru the tank, it will be necessary to use gas tank gauge 5641632.

3.003 NECK ASSY.—HOSE—TEE, Fuel Tank Filler

61-64	CORVAIR	3785828		1
61-64	F.C.	3843888	upper w/vent pipe	1
66-69	CORVAIR	3886532	(Note 1)	1

NOTE 1 When using on jobs not equipped with turbo. cut fuel return pipe nozzle and solder end on turbo., bend return pipe as req'd. for union with nozzle and replace spl. vent. pipe tee with hose, cut as req'd.

60-64	CORVAIR (exc. Turbo.)	3911539	**HOSE**, vent lower pipe to upper pipe (1½" I.D. x ¾" O.D.—gas resistant—3⅞" long)—(8.962)	1
60-69	CORVAIR, F.C.	3834073	**HOSE** (2 I.D. x 16¾" O.L.)	1
60-69	CORVAIR, F.C.	3830664	**HOSE** (7/32" I.D.) (gas resistant)—(8.962)	A.R.
60-69	CORVAIR, F.C.	3830665	**HOSE** (5/32" I.D.)—(8.962)	A.R.
61-62	F.C.		**HOSE**, between upper and lower filler,	
62-64	CORVAIR	3848525	neck (1⅜" I.D. x 12" O.L.)	1
63-66	CORVAIR w/Turbo.	3839816	**TEE**, gas tank vent pipe, fuel return pipe (frt. hose)—(3.163)	1

3.008 SEAL, Fuel Tank Filler Neck

61-69	CORVAIR	3786677	use w/vented cap assy.	1
61-65	F.C.	3775385	oil resistant rubber	1

3.015 SUPPORT—BRACKET, Fuel Tank

61-65	F.C.	3784162		1
61-65	F.C.	3779659	**BRACKET**, support	1
61-65	F.C.	3779969	**BRACKET ASSY.**, filler neck	1

3.022 STRAP ASSY., Fuel Tank

NOTE May be necessary to cut and rework straps. Use old part as guide.

60-69	CORVAIR	6257682	(28⅝4" O.L.)	1
61-65	F.C.	3785542	(42¼ O.L.)	2

3.023 BOLT—WASHER, Fuel Tank Strap

60-67	CORVAIR	6257681	hook type	2
68-69	CORVAIR	3938531	hook type	2
63	CORVAIR, F.C.	3792381	**WASHER** (¾" x ⅜" x ¼" thk.)—(6.606)	A.R.

3.028 CAP ASSY.—CAP UNIT, Fuel Tank Filler

60	CORVAIR	3736549		1
61-64	CORVAIR	3814436	vented	1
61-65	F.C.	3914958		1
65-67	CORVAIR	3843698	vented	1
68-69	CORVAIR	3931449	vented	1
64	CORVAIR, F.C.,			
65	F.C.	986893	**CAP UNIT**, locking	1
69	CORVAIR	987291	**CAP UNIT**, locking	1

3.107 GAUGE—CAM—METER ASSY.—WASHER—WIRE ASSY., Fuel Tank

61-63	F.C. (1st design)	5641632	use w/gas tank that has no trans. control rod routed thru the tank	1
63-65	F.C. (2nd design)	6425826		1
61-69	CORVAIR, F.C.	3774937	**CAM** (2⅝ dia.)	1
60	CORVAIR	6428055	**METER ASSY.**, w/gasket (Note 1)	1

NOTE 1. It will be necessary to replace gas feed hose.

61-64	CORVAIR	6428062	**METER ASSY.**, w/gasket	1
65-67	CORVAIR	6428063	**METER ASSY.**, w/gasket	1
68-69	CORVAIR	6428194	**METER ASSY.**, w/gasket	1
65-66	CORVAIR	1585975	**WASHER**, instr. cluster gas gauge insulator	A.R.
60-62	CORVAIR	2978301	**WIRE ASSY.**, gauge (30 O.L.)—(2.480)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

3.108 GAUGE ASSY., Fuel, Instrument Panel

60-64	CORVAIR (exc. Turbocharger),			
61-63	F.C.	5643032		1
63-64	CORVAIR w/Turbocharger	5644568		1
64-65	F.C.	5644545		1
65-66	CORVAIR (exc. CORSA)	6430291		1
65-66	CORSA	6430225	w/adapter assy.	1
67-69	CORVAIR	6430772		1

3.110 STRAINER ASSEMBLY, Fuel Tank Riser Pipe

60-65	CORVAIR, F.C.	3714812		1

3.112 GASKET—INSULATOR—SCREW ASSY., Fuel Tank Gauge

60	CORVAIR	6257095		1
61-69	CORVAIR, F.C.	3825206	(tab on I.D.)	1
60-64	CORVAIR, F.C. (exc. Turbocharger)	5644602	**INSULATOR**	1
60	CORVAIR	3767804	**SCREW ASSY.**, tank meter attaching (10—32 x 1/2)	5

3.162 CLIP—CLAMP—GROMMET—WASHER, Fuel Feed Pipe

60-69	CORVAIR, F.C.	1380949	gas feed pipe, double pipe clip (for 1/4"—3/8" pipe)	A.R.
60-69	CORVAIR, F.C.	3931078	gas rtn. pipe frt. (1/8"—1/4" pipe)	A.R.
60	CORVAIR		car heater gas front overflow pipe to tank,	
61-62	F.C.	3750695	traffic hazard lamp switch and flasher, fuse holder to pillar	1
61-65	F.C.	3781719	gas tank to gas feed front pipe hose	1
61-62	CORVAIR, F.C.		gas feed rear pipe assy. and carb. to fuel pump tee pipe assy., L.H.,	
63	CORVAIR, F.C.	3797828	gas feed pipe, rr. and inter.	A.R.
60-69	CORVAIR	3863520	carb. gas pipe	A.R.
65-67	CORVAIR	3754940	air conditioning evaporator to receiver tube	1
60	CORVAIR		**CLIP ASSY.**, fuel line and heater pipe,	
61	F.C.	6257577	choke rod and tube assy.	A.R.
60-69	CORVAIR, F.C.	3753771	**CLIP ASSY.**, gas feed front pipe	A.R.
61-64	CORVAIR	3786061	**CLIP ASSY.**, gas feed front pipe, brake main cyl. pipe, rr. brake pipe assy.	A.R.
65-68	CORVAIR	3886521	**CLIP ASSY.**, gas feed pipe, front	A.R.
66-68	CORVAIR	3881339	**CLIP ASSY.**, gas feed pipe	A.R.
60-69	CORVAIR, F.C.	2494772	**CLAMP**, car heater tee gas pipe to car heater gas rear pipe hose, car heater gas front overflow pipe to rear overflow pipe hose,	
68-69	CORVAIR	3920978	**GROMMET**, fuel return pipe—(9.775)	1
			car heater gas intermediate pipe to car heater gas rear pipe hose, spark control hose—(1.166)	A.R.
60-66	CORVAIR	3755763	**WASHER**, fuel line and heater pipe clip—(8.133)	A.R.
65	CORVAIR	3862998	**WASHER**, front	1

3.163 HOSE—LOOM—NUT—TEE, Fuel or Oil Feed Pipe

60	CORVAIR	3814338	(5/32") (gas resistant)—(2.420)	A.R.
60-69	CORVAIR, F.C.	3926960	**LOOM**, gas feed pipe shield (3/8")	A.R.
60-69	CORVAIR, F.C.	137398	**NUT**, gas and carb. pipes (5/16")—(8.963)	A.R.
60-63	CORVAIR		**TEE**, fuel pump (inverted flared tube)	
60-65	F.C.	3769934	(4 openings)	1
62-66	CORVAIR w/Turbo	3828680	**TEE**, oil pressure switch to inlet pipe (1/8—27 internal and external pipe thread plus 90 7/16—24 inverted flare threading) (chrome plated)	1
63-65	CORVAIR w/Turbo.	3839816	**TEE**, gas tank vent., pipe to fuel return pipe (frt. hose)	1
67	CORVAIR w/A.I.R.,			
68-69	CORVAIR	3920972	**TEE**, fuel pump	1

3.164 VALVE ASSY., Fuel Feed Pipe

60-65	CORVAIR, F.C.	3781142	heater pressure regulator	1
61-64	GREENBRIER	3151457	htr. safety (I.C.C. approved equip. only)	1

3.264 PIPE ASSY.—HOSE. Cylinder Head Induction

62-63	CORVAIR w/Turbo.	3824104	(Note 1)	1
	NOTE 1 Used with 7020987 return check valve (Group 3.440)			
64-66	CORVAIR w/Turbo.	3824170		1
62-66	CORVAIR w/Turbo.	3794415	**HOSE** (to turbocharger) (2 1/8 I.D.)	1

3.265 CAP—GUARD, Engine Intake

60-69	CORVAIR, F.C.	3767304	plug carb. vacuum pipe hole in L.H. carb. (plastic)—(3.670)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66	CORVAIR (A.I.R. w/4/1BC) (exc. P.G., Turbo.)		inlet manifold vac.,	
67	CORVAIR w/A.I.R. (exc. P.G.),			
68-69	CORVAIR	3786301	balance tube hose connector	1
61-65	CORVAIR, F.C. (exc. A.T., Turbo)	3758369	**GUARD,** inlet manifold oil splash	1

3.267 TUBE ASSY.—CLAMP—CONNECTOR—HOSE, Inlet Manifold

61-62	CORVAIR, F.C. (exc. closed vent., Turbocharger)	3787285	vacuum balance	1
62-64	CORVAIR, F.C. w/closed vent. (exc. Turbo.),			
65	F.C.	3817855	vacuum balance	R.H.
65-69	CORVAIR (exc. Turbo., 4/1BC)	3909455	vacuum balance	1
65-67	CORVAIR w/4/1BC (exc. Turbo., P.G., A.I.R.)	3870298	vacuum balance	1
65-66	CORVAIR (P.G. w/4/1BC) (exc. A.I.R., CORSA),			
68-69	CORVAIR w/4/1BC	3920966	vacuum balance	1
66	CORSA w/A.I.R.	3883846	vacuum balance	1
66-67	CORVAIR (P.G. w/A.I.R.) (exc. 4/1/BC, C.A.C.)	3883847	vacuum balance	1
66	CORVAIR (A.I.R. w/4/1BC)	3883848	vacuum balance	1
67	CORVAIR (A.I.R. w/Prod. C.A.C.)	3905977	vacuum balance	1
62-65	CORVAIR	3824836	**CLAMP,** induction pipe to turbocharger hose—(1.166)	2
61-69	CORVAIR, F.C.	3786462	**CONNECTOR,** vacuum balance tube hose	2
60	CORVAIR	6257731	**HOSE,** vacuum balance tube ($^{9}/_{16}$ I.D. x 2 long)	2
60	CORVAIR	3786303	**HOSE,** vacuum balance tube ($^{21}/_{64}$ I.D. one end—$^{9}/_{16}$ I.D. other end x $2\,^{3}/_{4}$ long) (Note 1)	2

NOTE 1 For use with universal heads.

61-66	CORVAIR, F.C. (exc. Turbo.),			
67-69	CORVAIR	3828954	**HOSE,** vacuum balance tube ($^{21}/_{32}$ I.D. x $1\,^{1}/_{2}$ O.L.)	2

3.270 GASKET, Inlet and Exhaust Manifold

62-66	CORVAIR w/Turbocharger	3817242	cyl. head induction pipe to cyl. head	2

3.273 CLAMP, Exhaust Manifold

60-69	CORVAIR, F.C.	6255784		6

3.275 STUD—BOLT, Exhaust Manifold (Also see group 3.288 manifold to carb., 3.613 manifold to exhaust pipe and 8.981)

60-69	CORVAIR, F.C.	3760425	inlet manifold ($^{3}/_{8}$"16—16 x $2\,^{3}/_{16}$")	A.R.
60-69	CORVAIR, F.C.	3772479	($^{3}/_{8}$—16—16 x $1\,^{27}/_{32}$) (.003 O.S.) (painted dark blue)	A.R.
60-69	CORVAIR, F.C.	3772480	($^{3}/_{8}$—16—16 x $1\,^{27}/_{32}$) (.006 O.S.) (painted light green)	A.R.
60-69	CORVAIR, F.C.	3772481	($^{3}/_{8}$—16—16 x $1\,^{27}/_{32}$) (.009 O.S.) (painted orange)	A.R.
60-69	CORVAIR, F.C.	3909830	**BOLT,** at end holes ($^{3}/_{8}$"16 x $2\,^{1}/_{16}$")	A.R.
60-69	CORVAIR, F.C.	3733130	**BOLT,** exhaust manifold assy. ($^{3}/_{8}$"—16 x $2\,^{1}/_{4}$")	12

3.278 CAP—FITTING—NIPPLE, Manifold Vacuum Take-off

60-69	CORVAIR, F.C.	3767304	plug carb. vacuum pipe hole in L.H. carb. (plastic)—(3.265)	1
61-65	CORVAIR, F.C. (exc. P.G.),			
66-68	CORVAIR w/A.I.R., 4/1BC (exc. P.G., Turbo.)	3786301	trans. vacuum modulator hose connector—(3.265)	1
62-66	CORVAIR w/Turbo.	3886605	**FITTING,** inlet manif. to manif. press. gauge hose—(3.374)	1
62-63	CORVAIR,			
65	CORVAIR w/Air Cond.	3749168	**NIPPLE,** vacuum control ($^{1}/_{8}$"—27) (for $^{1}/_{4}$" I.D. hose)—(2.420)	1

3.288 STUD, Carburetor Mounting

60-69	CORVAIR, F.C. (exc. Turbo.)	6255676	($^{5}/_{16}$"—18—24 x $3\,^{9}/_{16}$")	A.R.
60-64	CORVAIR, F.C. (exc. Turbo.)	3772495	($^{5}/_{16}$—18—24 x $3\,^{9}/_{16}$) (.003 O.S.) (painted dark blue)	A.R.
60-64	CORVAIR, F.C. (exc. Turbo.)	3772496	($^{5}/_{16}$—18—24 x $3\,^{9}/_{16}$) (.006 O.S.) (painted light green)	A.R.
60-64	CORVAIR, F.C. (exc. Turbo.)	3772497	($^{5}/_{16}$—18—24 x $3\,^{9}/_{16}$) (.009 O.S.) (painted orange)	A.R.
60-69	CORVAIR, F.C. (exc. Turbo.)	6255682	($^{5}/_{16}$"—18—24 x $4\,^{14}/_{16}$")	A.R.
60-64	CORVAIR, F.C. (exc. Turbo.)	3772498	($^{5}/_{16}$—18—24 x $4\,^{13}/_{16}$) (.003 O.S.) (painted dark blue)	A.R.
60-64	CORVAIR, F.C. (exc. Turbo.)	3772499	($^{5}/_{16}$—18—24 x $4\,^{13}/_{16}$) (.006 O.S.) (painted light green)	A.R.
60-64	CORVAIR, F.C. (exc. Turbo.)	3772500	($^{5}/_{16}$—18—24 x $4\,^{13}/_{16}$) (.009 O.S.) (painted orange	A.R.
60-69	CORVAIR, F.C.	3731702	R.H. ($^{3}/_{8}$"—16-16 x $1\,^{49}/_{64}$")	A.R.
62-66	CORVAIR w/Turbo.	3817508	($^{3}/_{8}$—24—16 x $1\,^{3}/_{4}$)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

3.342 TURBOCHARGER ASSY.—BRACKET ASSY.—GASKET—REPAIR KIT—SEAL—SHIELD—SPRING, Turbocharger

62-64	CORVAIR	3840830	(Note 1)	1

NOTE 1 When using on 1962-63 models it is necessary to use Exhaust Pipe 3840771.

65-66	CORVAIR	3856709		1
62-66	CORVAIR	3840320	**BRACKET ASSY.** (w/4 welded bolts)	1
62-66	CORVAIR	3826092	**GASKET,** housing	1
62-66	CORVAIR	3857207	**GASKET,** compressor housing	1
62-66	CORVAIR	3869214	**REPAIR KIT,** (w/3 seals, 2 gaskets, 1 suppressor, and 8 shims)	1
62-66	CORVAIR	3826099	**SEAL,** bearing housing "O" ring	1
62-66	CORVAIR	3869230	**SEAL ASSY.**	1
62-65	CORVAIR	3826317	**SEAL UNIT,** turbine shaft (w/plastic suppressor ring)	1
62-66	CORVAIR	3869213	**SEAL UNIT**	1
62-66	CORVAIR	3826086	**SHIELD,** turbine	1
62-66	CORVAIR	3826088	**SPRING,** turbine shield	1

3.344 HOUSING ASSY.—RING, Turbocharger

63-64	CORVAIR	3839292	compressor	1
65-66	CORVAIR	3869233	compressor	1
62-66	CORVAIR	3869229	**RING,** turbine shaft oil seal	1

3.346 HOUSING—BEARING—CLAMP ASSY.—PIN—RETAINER—RING—SPACER, Turbocharger

62-66	CORVAIR	3857206	bearing	1
62-63	CORVAIR	3826084	**HOUSING ASSY.,** turbine	1
64	CORVAIR	3846386	**HOUSING ASSY.,** turbine	1
65-66	CORVAIR	3869232	**HOUSING ASSY.,** turbine	1
62-66	CORVAIR	3826082	**BEARING,** turbine shaft	1
62-66	CORVAIR	3869231	**CLAMP ASSY.,** turbine housing	1
62-66	CORVAIR	3826081	**PIN,** bearing housing	1
62-66	CORVAIR	3826083	**RETAINER,** turbine shaft bearing	1
62-66	CORVAIR	3826095	**RING,** turbine shaft oil seal retaining	1
62-66	CORVAIR	3826089	**SPACER,** turbine shaft	1

3.348 IMPELLER—NUT—SHAFT—WASHER, Turbocharger

62-64	CORVAIR	3826100	compressor	1
65-66	CORVAIR	3869228	compressor	1
62-66	CORVAIR	3826097	**NUT,** turbine shaft lock	1
62-64	CORVAIR	3826087	**SHAFT,** turbine	1
65-66	CORVAIR	3869227	**SHAFT,** turbine	1
62-66	CORVAIR	3826096	**WASHER,** turbine shaft nut	1

3.358 PIPE ASSY.—PIPE—CONNECTOR, Turbocharger

62-64	CORVAIR	3815313	inlet	1
65-66	CORVAIR	3869883	inlet	1
62-64	CORVAIR	3817266	**PIPE,** oil drain back	1
65-66	CORVAIR	3856717	**PIPE,** oil drain back	1
62-64	CORVAIR	3817282	**CONNECTOR,** oil drain back hose	R.H.

3.374 HOSE—FERRULE—FITTING, Manifold Pressure Gauge

62-64	CORVAIR,			
65-66	CORSA	3824378	inlet manifold and vacuum balance tube to manifold pressure gauge ($^{1}/_{8}$ O.D. x $^{13}/_{64}$ I.D.)	1
65-66	CORSA	3886604	**FERRULE,** w/nut inlet manifold to manifold pressure gauge hose	1
62-64	CORVAIR	3819068	**FITTING,** gauge end	1
62-66	CORVAIR w/Turbo.	3886605	**FITTING,** inlet manifold end	1

3.402 CLEANER—OUTLET ASSY., Carburetor Air

NOTE When using certain cleaners on non-closed vent. systems, it will be necessary to pinch shut closed system tube.

CORVAIR

60		5645830	w/silencer	1
61-64	w/C.A.C.,			
63-64	w/oil bath (1st design) (exc. Turbo., C.A.C.),			
65	w/C.A.C. (exc. oil bath)	6420892	w/silencer((Note 1)	A.R.

NOTE 1. When using on L.H. side, pinch shut crankcase vent. connector on air cleaner. Can be used in place of 5649194 when extremely dusty conditions warrant it.

62-63	w/Turbo.	6418069	w/silencer	1
63-65	w/C.A.C., oil bath (exc. Turbo.)	6420085	w/silencer	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

63-64	w/oil bath (1st design) (exc. Turbo)	6418552	w/silencer	1
64-65	w/oil bath (2nd design) (exc. Turbo., C.A.C.),			
66	w/oil bath, H.D. cleaner (exc. Turbo., A.I.R.,			
67	w/oil bath (exc. A.I.R.)	6419984	w/silencer	1
64	w/oil bath (2nd design) (exc. Turbo., C.A.C.),			
64-65	w/Turbo., oil bath,			
65-66	w/H.D. A/CL. oil bath (exc. Air Cond.),			
67-69	w/oil bath	6419985	auxiliary, w/silencer	1
64	(Turbo. w/oil bath)	6420494	w/silencer	1
64-65	(exc. Turbo., oil bath, C.A.C., 4/1BC, H.D. cleaner),			
66	(exc. 4/1BC, H.D. cleaner, Turbo., oil bath, A.I.R.),			
67	(exc. oil bath, A.I.R.)	6419705	w/silencer	1
64-66	w/Turbo. (exc. oil bath)	6420244	w/silencer	1
65-66	(Turbo. w/oil bath) w/silencer	6420884		1
65-66	w/4/1BC (exc. oil bath, A.I.R.)	6421253	w/silencer (chrome)	1
66	w/A.I.R. (exc. 4/1BC, CORSA, oil bath),			
67	w/A.I.R. (exc. oil bath),			
68-69	(exc. oil bath, 4/1BC)	6422728	w/silencer	1
66	w/A.I.R. (exc. 4/1BC, oil bath),			
68-69	w/4/1BC (exc. oil bath)	6422729	w/silencer (chrome)	1
66-67	A.I.R., w/oil bath,			
68-69	w/oil bath	6427730	w/silencer	1

F.C.

60		5645830	w/silencer	1
61-63	(exc. Turbo., C.A.C.),			
63-64	w/oil bath (exc. Turbo.),			
65	w/Air Cond. (exc. oil bath)	6420892	w/silencer (Note 2 and 3)	A.R.
63-65	w/oil bath	6420552	w/silencer	1

NOTE 2. Can be used in place of 5649194 when extremely dusty conditions warrant it.
NOTE 3. When used on L.H. side, pinch shut crankcase vent. connector on air cleaner.

OUTLET ASSY.

63-69	CORVAIR w/oil bath, H.D. A/CL (exc. Turbo.)	3851802	**OUTLET ASSY.**, air	1
64-65	CORVAIR (Turbo. w/oil bath)	6420495	**OUTLET ASSY.**, air	1

3.403 GASKET—NUT—SCREW—SEAL—STUD, Air Cleaner

60	CORVAIR	6256122	to air horn (4 I.D. x $4\frac{7}{16}$ O.D. x $\frac{1}{16}$ thick)	1
61-66	CORVAIR, F.C. w/Air Cond. (exc. Turbo., CORSA)	3799840	to carb. ($1\frac{7}{8}$ I.D.—$2\frac{3}{8}$ O.D.)	2
61-65	CORVAIR, F.C. (exc. Turbo.)	5646135	silencer assy. to stud, air inlet tube ($1\frac{1}{4}$" I.D. x $\frac{5}{8}$" O.D.)—(1.745)	2
61-66	CORVAIR, F.C. w/oil bath (exc. Turbo.)	5646809	elbow and shroud ($6\frac{1}{2}$ I.D. x $\frac{1}{4}$ thick)	A.R.
64-69	CORVAIR	3708408	to carb. and silencer, carb. to A/CL hose, A/CL and sil. to carb. air inl. tube	A.R.
64-66	CORVAIR (exc. Air Cond., Turbo.),			
67-69	CORVAIR	3845685	air inlet tube to carb.	A.R.
60-69	CORVAIR, F.C.	3752760	**NUT**, wing ($\frac{1}{4}$"—20 serrated)	1
68-69	CORVAIR w/Roch. 1BC	7037573	**SCREW**, carb. A/CL bracket (No. 10—32 x $\frac{3}{8}$")—(3.730)	2
63-66	CORVAIR w/Turbo., oil bath	6418450	**SEAL**, to air horn—(3.730)	1
60-69	CORVAIR, F.C.	3921975	**STUD** ($\frac{1}{4}$—20—20 x $3\frac{1}{2}$)	1
60-69	CORVAIR, F.C.	3785255	**STUD**, air cleaner ($\frac{1}{4}$"—20—20 x 5)	1
60-69	CORVAIR, F.C.	3785256	**STUD** ($\frac{1}{4}$"—20—20 x 9) (Note1)	1

NOTE 1. This is a universal stud that must be cut as required. If excess length is not removed damage may result to the hood panel or carburetor upon closing the hood.

63-66	CORVAIR w/oil bath, H.D. A/CL, C.A.C. (exc. Turbo.),			
67-68	CORVAIR w/oil bath	3856710	**STUD**, ($\frac{1}{4}$—20 x $5\frac{1}{8}$)	1

3.405 BRACKET—SUPPORT, Air Cleaner Stud Mounting

63-65	F.C. w/oil bath	3794409	support	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

68	CORVAIR w/A.I.R. (exc. 4/1BC, oil bath),			
68-69	CORVAIR w/4/1BC (exc. oil bath)	6421266	**COVER ASSY.** (w/6421253-2729)	1
69	CORVAIR	6484966	**BREATHER,** air cleaner and silencer (painted gray or brown)	1
62-66	CORVAIR w/Turbocharger	6420796	**ELEMENT** (w/5648783-6418069-9148-9985-6420494-6420244) (AC-A-200CW)	1
64-69	CORVAIR (exc. C.A.C.)	6419892	**ELEMENT** (w/6419705-9984-64211253-2728-29-30) (A-178 CW)	1
60	CORVAIR	5645381	**ELEMENT ASSY.** (A-99C) (less screen)	1
61-63	CORVAIR (exc. Turbocharger),			
61-65	F.C.,			
63-66	CORVAIR w/C.A.C., oil bath (exc. Turbo.)	6420322	**ELEMENT ASSY.** (paper) (w/6419025-26-6420891-92) (A170 CW)	2
63-65	F.C. w/oil bath	1544871	**ELEMENT ASSY.** (w/5649631, 6419943)	1
65	F.C. w/oil bath	6421285	**ELEMENT ASSY.**	1
61-63	CORVAIR, F.C.,			
64	F.C.	5647258	**SCREEN**	A.R.
62-65	CORVAIR w/Turbocharger	5649157	**SCREEN ASSY.** (w/6418069-9148-9985-6420494)	1
61-62	CORVAIR, F.C.,			
63-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C. (1st design)	5647323	**SHROUD ASSY.,** w/tubes (w/6419025-26) (Note 1)	2
	NOTE 1. When using on vehicle without pos. vent. it will be necessary to pinch close tube.			
65	CORVAIR (exc. Turbo., 4/1BC),			
65	F.C. (2nd design)	6421242	**SHROUD ASSY.,** w/tube (w/6420891-92)	2

3.417 EXTENSION ASSY.—HOSE—STUD—TUBE ASSY., Air Cleaner Intake

61-63	CORVAIR (exc. STA. WAG., C.A.C., Turbocharger)	3794221	air intake	1
61-62	CORVAIR w/C.A.C. (exc. STA. WAG.),			
61-62	CORVAIR (STA. WAG.),			
61-62	F.C.,			
63	CORVAIR w/Access. C.A.C.,			
63-65	F.C. (exc. oil bath),			
64-65	CORVAIR w/Air Cond. (exc. oil bath)	3794222	air intake	1
63-65	F.C. w/oil bath	3830633	air intake	1
63-64	CORVAIR w/oil bath	3840770	air intake	1
63-65	CORVAIR w/Air Cond., oil bath	3851803	air intake (w/6240085-986379)	1
65-67	CORVAIR w/Air Cond.	3858413	**HOSE,** air cleaner center outlet duct	1
68	CORVAIR w/P.G. (6 cyl.)	9427817	**STUD,** carb. air heater stove—(8.981)	3
64	CORVAIR (exc. C.A.C.),			
65-66	CORVAIR (exc. H.D. A/CL, Air Cond., 4/1BC, Turbo., A.I.R.),			
67	CORVAIR (exc. A.I.R.)	3856700	**TUBE ASSY.,** carb. air inlet	1
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3856779	**TUBE ASSY.,** carb. air inlet	1
66	CORVAIR w/A.I.R. (4/1BC)	3891549	**TUBE ASSY.,** carb. inl. (does not include control valve screen)	1
66-67	CORVAIR w/A.I.R. (1st design) (exc. 4/1BC)	3891548	**TUBE ASSY.,** carb. inlet (includes control valve screen)	1
67	CORVAIR w/A.I.R. (2nd design),			
68-69	CORVAIR (exc. 4/1BC)	3909460	**TUBE ASSY.,** carb. inlet	1
68-69	CORVAIR w/4/1BC	3920968	**TUBE ASSY.,** carb. air inlet	1

3.425 SWIVEL—BUSHING—CLIP—SLEEVE—SPRING—WASHER, Throttle Control Rod

60-69	CORVAIR, F.C. (exc. Turbo.)		carb. to cross shaft lever left rod, throttle lever to cross shaft rod,	
65	CORVAIR w/4/1BC (1st design)	6255916	secondary carb. actuating rod to lever	A.R.
60-61	CORVAIR	3711199	carb. cross shaft rod	1
60-69	CORVAIR	6257704	accel. control rear idler lever rod ($1^{1}/_{8}$ O.L.)	1
61-65	F.C.	3796373	accel. control cable ($1^{5}/_{64}$ O.L.) (Note 1)	1
61-69	CORVAIR, F.C.	3785360	carb. cross shaft rod	1
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR	3888150	secondary carb. actuating rod to lever	1
60-69	CORVAIR (exc. F.C.)	3710620	**BUSHING,** accelerator pedal rod	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60-68	CORVAIR	6255952	**BUSHING,** accelerator control front idler lever rod	2
60-64	CORVAIR		**BUSHING,** accel. cont. rear idler lever rod, accel. cont. rear idler lever rod swivel,	
61	F.C.	3794377	accel. cont. cable assy. swivel	A.R.
60-61	CORVAIR, F.C. (exc. P.G.)	6257487	**BUSHING,** accel. control rear idler lever pivot pin	2
65-69	CORVAIR	3861880	**BUSHING,** idler lower rod	1
60-69	CORVAIR, F.C.	3749084	**CLIP,** throttle valve control lower rod, accelerator control rod, throttle lever rod swivel retaining—(4.037)	A.R
60-69	CORVAIR, F.C.	6255773	**CLIP,** thermo. modifier link rod end, L.H. (w/7015300-10-11-12-13-19), auto. choke upper rod end, auto. choke rod at carb.	A.R.
60	CORVAIR,			
61	F.C. w/P.G.	6257343	**CLIP,** carb. cross shaft rod	1
60	CORVAIR	6257344	**CLIP,** carb. cross shaft rod swivel	1
60-69	CORVAIR, F.C.		**CLIP,** carb. cross shaft lever left rod, throttle lever to cross shaft rod end, secondary carb. L.H. actuating rod,	
65-66	CORVAIR (exc. Turbo.)	3962782	accel. control rod	A.R.
61-62	CORVAIR, F.C.		**CLIP,** engine cooling air thermostat actuating rod to thermostat,	
65	CORVAIR, F.C.	3700188	carb. to accel. lever rod, carb. to accel. lever control rod, carb. to accel. lever rod swivel	1
65	CORVAIR, F.C.	3711177	**CLIP,** carb. to accel. rod, carb. to accel. rod lever	A.R.
	Not required in this group. See Group 1.035	1455017	**CLIP**	
60-69	CORVAIR, F.C.	3866271	**SLEEVE,** accel. control rear idler lever rod, accel. control rear idler lever rod swivel, accel. control cable assy. swivel, accel. control rod	A.R.
60-64	CORVAIR	6255914	**SLEEVE,** accel. control front idler lever pilot pin bushing	2
65-69	CORVAIR	3861877	**SLEEVE,** front idler lever	1
68-69	CORVAIR w/4/1BC	3909404	**SLEEVE,** sec"d. carb. actuator rod	2
66	CORVAIR w/A.I.R., 4/1BC,			
68-69	CORVAIR w/4/1BC	3905987	**SPRING,** sec"d. carb. actuator rod	2
60-61	CORVAIR, F.C.,			
62-64	CORVAIR	813046	**WASHER,** accel. control front idler lever—(7.371)	1
60-69	CORVAIR	3718496	**WASHER,** accel. control idler lever rod swivel	3
61	CORVAIR		**WASHER,** accel. control rr. idler lever assy.,	
62-65	CORVAIR (exc. P.G.)	3787002	thrust ($^{21}/_{64}$ I.D. x $^{19}/_{32}$ O.D. x $^{3}/_{64}$ thk.) (Note 1)	2
	NOTE 1 See Note 1 at end of group 3.431.			

3.430 ROD—CABLE ASSY., Carburetor to Accelerator Lever

60	CORVAIR	6255917	carb. to cross shaft lever left	1
60	CORVAIR	6255921	carb. to cross shaft lever right	1
60	CORVAIR	6257584	throttle lever to cross shaft	1
60-64	CORVAIR	6255951	accel. control front idler lever	1
60-64	CORVAIR	6257547	accel. control rear idler lever	1
61-65	F.C.	3796372	accel. control adjusting	1
61-69	CORVAIR, F.C. (exc. Turbo., 4/1BC	3814082	carb. to cross shaft lever right	1
61	CORVAIR, F.C.			
62-64	CORVAIR (exc. Turbocharger),			
62-65	F.C. w/P.G.	3784991	carb. to cross shaft to transmission	1
62-64	CORVAIR, F.C. (exc. Turbocharger),			
65-69	CORVAIR, F.C. (exc. 4/1BC)	3814081	carb. to cross shaft lever left	1
62-64	CORVAIR w/Turbocharger	3817135	carb. cross shaft	1
62-66	CORVAIR w/Turbocharger	3824172	carb. cross shaft to throttle lever	1
65-69	CORVAIR	3868644	accel. control front idler lever	1
65-69	CORVAIR	3861879	accel. control rear idler lever	1
65	CORVAIR (exc. Turbo.)	3861883	carb. cross shaft	1
66-69	CORVAIR (exc. Turbo.)	3875095	carb. cross shaft	1
65-66	CORVAIR w/Turbo.	3861884	carb. cross shaft	1
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4/1BC	3905983	carb. cross shaft lever to prime carb.	L.H.
65	CORVAIR w/4/1BC (1st design)	3867207	second carb. actu.	L.H.
65	CORVAIR w/4/1BC (2nd design)	3867208	second carb. actu.	R.H.
65	CORVAIR w/4/1BC (2nd design),			
66	CORVAIR w/4/1BC (1st design) (exc. A.I.R.)	3873991	second carb. actu.	L.H.
66	CORVAIR w/4/1BC (1st design) (exc. A.I.R.)	3873992	second carb. actu.	R.H.
66	CORVAIR w/4/1BC, A.I.R. (2nd design)	3880771	second carb. actu.	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Info

66	CORVAIR w/4/1BC, A.I.R. (2nd design)	3880772	second carb. actu.	R.H.
68-69	CORVAIR w/4/1BC	3905985	secondary carb. actuator	L.H.
68-69	CORVAIR w/4/1BC	3905986	secondary actuator	R.H.
65	CORVAIR w/4/1BC	3827696	**ROD ASSY.**, accel. control	1
61-65	F.C.	3843816	**CABLE ASSY.**, accel control	1

3.431 ROD—CONTROL UNIT—GUIDE—SPACER, Accel. Pedal

60-64	CORVAIR	3779328		1
61-63	F.C.	3779748		1
64-65	F.C.	3848675	accel. pedal	1
66-69	CORVAIR	3886549	accel. pedal	1
61	F.C.	3798642	**CONTROL UNIT** (Note 1)	1

NOTE 1 This unit is used to convert an early model F.C. accelerator linkage to a new design. When ordering replacement parts on an early model on which conversion has not been made, the above unit must be used. This unit contains all necessary parts required for this conversion.

61-65	F.C.	3796374	**GUIDE**, accel. control cable	1
64-65	F.C.	3843814	**SPACER**, accel. pedal rod	1

3.440 VALVE ASSY., Carburetor Throttle Return Check

62-63	CORVAIR w/Turbocharger	7020987	(Note 1)	1

NOTE 1. Used with 3824104 induction pipe assy. (group 3.264)

3.451 PEDAL ASSY.—PEDAL, Accelerator

60-69	CORVAIR	3878071		1
61-63	F.C.	3778135	(Note 1)	1

NOTE 1 Part number appears on part.

64-65	F.C.	3843813	**PEDAL**	1

3.452 SUPPORT ASSY.—PIN—STUD, Accel. Pedal

60-64	CORVAIR	6255947		1
64-65	F.C.	3843817		1
65-69	CORVAIR	3861874		1
61-63	F.C.	3741578	**PIN**, bracket	1
64-65	F.C.	3842884	**STUD** ($^{5}/_{16}$—18 x $1^{11}/_{32}$)	1

3.454 LEVER—BOLT—BRACKET—SUPPORT ASSY., Accel.

61-63	F.C.	3796369	accel. control ($3^{7}/_{8}$ O.L.)	1
62-66	CORVAIR w/Turbo.	3817253	carb. cross shaft to carb. cross shaft rod	1
64-65	F.C.	3843818	accel. control	1
66-69	CORVAIR (exc. P.G.)	3888691	accel. control rear idler	1
60-64	CORVAIR	6257548	**LEVER ASSY.**, front idler control	1
60-64	CORVAIR (exc. P.G.)	3787687	**LEVER ASSY.**, rear idler control (Note 1)	1

NOTE 1 See Note 1 at end of group 3.431.

60	CORVAIR, F.C. w/P.G.	3915011	**LEVER ASSY.**, rear idler—(4.050)	1
65-69	CORVAIR	3886576	**LEVER ASSY.**, control front idler	1
65	CORVAIR	3861881	**LEVER ASSY.**, control rear idler	1
65-69	CORVAIR	3876942	**BOLT**, control front idler lever ($^{5}/_{16}$—18 x $1^{7}/_{16}$)	1
61-63	F.C.	3779752	**BRACKET**, control lever	1
60-65	CORVAIR w/3-SPD.	3787007	**BRACKET ASSY.**, idler lever control r.r. (Note 1)	1
61-65	CORVAIR w/4-SPD.	3787438	**BRACKET ASSY.**, idler lever control r.r.	1
60-64	CORVAIR	6255956	**SUPPORT ASSY.**, idler lever control, frt.	1

3.459 SPRING, Accelerator Pull Back

60	CORVAIR	3821966	($6^{1}/_{4}$" free length) (white)	1
61	F.C. (1st design)	3766395	($6^{3}/_{4}$ free length—46 coils) (brown)	1
61	F.C.	3766840	($5^{13}/_{32}$ free length—$39^{1}/_{2}$ coils) (tan)	1
61	CORVAIR,			
61	F.C. (2nd design),			
62-63	CORVAIR (exc. Turbo),			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65	CORVAIR w/Air Cond. (exc. Turbo, 4/1BC),			
62-65	F.C. (exc. P.G.)	3787041	(3 5/8 free length—40 coils) (black)	A.R.
62-66	CORVAIR w/Turbo	3791577	(2 13/16" free length—37 coils) (black)	1
64-66	CORVAIR (exc. Turbo., C.A.C., 4/1BC),			
67	CORVAIR,			
68-69	CORVAIR (exc. 4/1BC)	3851924	accel. pedal pull back	1
65-66	CORVAIR w/4/1BC (exc. Turbo.),			
68-69	CORVAIR w/4/1BC	3873990	accel. pedal pull back	1

3.463 SHAFT ASSY.—PIN—SHIELD—SEAL—STUD—WASHER, Accelerator Intermediate

61-63	CORVAIR, F.C. (exc. Turbo),			
64-65	F.C.,			
65	CORVAIR w/Air Cond. (exc. 4/1BC, Turbo.)	3796375	(Note 1)	1
62-66	CORVAIR w/Turbo	3824178		1
64-66	CORVAIR (exc. Turbo, 4/1BC, C.A.C.),			
67	CORVAIR (exc. A.I.R.),			
68-69	CORVAIR (exc. 4/1BC)	3850535		1
65	CORVAIR w/4/1BC	3867200		1
66	CORVAIR (exc. A.I.R., Turbo)	3873988	carb. cr.	1
66	CORVAIR (A.I.R. w/4/1BC),			
68-69	CORVAIR w/4/1BC	3905981	carb. cr.	1
61-63	F.C.	3831026	**PIN,** control lever	1
61-63	F.C.	3796370	**SHIELD,** control (Note 1)	1
60-62	CORVAIR F.C. w/P.G.	8623040	**SEAL,** "O" ring, rear idler lvr. pivot pin—(4.220)	1
66-69	CORVAIR	3879738	**STUD,** accel. cont. rear idler lever	1
65-69	CORVAIR	3866515	**WASHER,** cont. frt. idler lever insulator	1

NOTE 1 See Note 1 at end of group 3.431.

3.469 BOOT—PLUG—RETAINER—SEAL—WASHER, Accelerator Rod Linkage

60-69	CORVAIR	6256998	control rear idler lever rod	1
61-63	CORVAIR,			
61-63	F.C. w/P.G.	3782356	carb. cross shaft rod (3 23/32 free lgth.) (Note 1)	1

NOTE 1 See Note at end of group 3.431.

64-69	CORVAIR,			
64-65	F.C., w/P.G.	3784992	carb. cross shaft rod (3 3/8 free length)	1
61	CORVAIR, F.C.	4410574	**PLUG,** accel. control rod (1" dia.)—(12.981)	A.R.
61-63	F.C.	3796412	**RETAINER,** seal	1
61-63	F.C.	3695652	**SEAL** (felt—7/16 I.D. x 1 3/4 O.D. x 3/8 thick)	1
61-63	F.C.	3658395	**WASHER** (fibre—5/8 I.D. x 1 3/4 O.D.)	2

3.480 ROD—KNOB, Hand Choke with Button, Wire and Tube

61	CORVAIR	1991744	front inst. compt. to eng. compt.	1
61	F.C.	1991748	front, inst. compt. to eng. compt. (Note 1)	1

NOTE 1 Used with (1) 1953083 knob.

61	CORVAIR, F.C.	1991745	rear, w/bracket, eng. compt. to carbs.	1
61	F.C.	1953083	**KNOB** (black)	1

3.483 CLIP—BRACKET—COVER—GUIDE, Hand Control Wires and Tubes

61-64	CORVAIR	3786899	gas overflow drain hose	1
61	F.C.	3785738	**BRACKET,** choke rod and tube	1
61	CORVAIR	3813044	**COVER,** choke cable bracket dust	1
61	F.C.	3796374	**GUIDE,** accel. control cable—(3.431)	A.R.

3.601 MANIFOLD, Engine Exhaust

60	CORVAIR	3783872		R.H.
60-66	CORVAIR, F.C. (exc. 4/1BC, A.I.R.),			
67	CORVAIR (exc. A.I.R.)	3846999		L.H.
61-66	CORVAIR, F.C. (exc. 4/1BC, A.I.R.),			
67	CORVAIR (exc. A.I.R.)	3797576		R.H.
65-66	CORVAIR w/4/1BC (exc. A.I.R.)	3856741		L.H.
65-66	CORVAIR w/4/1BC (exc. A.I.R.)	3856742		R.H.
66-67	CORVAIR w/A.I.R. (exc. 4/1BC),			
68-69	CORVAIR (exc. 4/1BC)	3872749		L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

66-67	CORVAIR w/A.I.R. (exc. 4/1BC),			
68-69	CORVAIR (exc. 4/1BC)	3872750		R.H.
66-67	CORVAIR (A.I.R. w/4/1BC),			
68-69	CORVAIR w/4/1BC	3872751		L.H.
68-69	CORVAIR w/4/1BC	3872752		R.H.

3.602 SLEEVE ASSY.—CLAMP—SEAL—SHIELD, Exhaust Manifold

60-61	CORVAIR, F.C.	6255625	(std.)	6
60	CORVAIR	6257898	(.002 O.S.) (stamped 6257898)	6
60	CORVAIR	6257795	(.010 O.S.) (stamped 6257795)	6
61-69	CORVAIR, F.C. (exc. 4/1BC)	3910310	(.002 O.S.)	6
61-69	CORVAIR, F.C. (exc. 4/1/BC)	3786960	(.010 O.S.)	6
62-66	CORVAIR, F.C. (exc. 4/1BC, A.I.R.),			
67	CORVAIR (exc. A.I.R.)	3798522	(std.)	6
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4/1BC	3910316	(.010 O.S.)	1
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4/1BC	3910314	(.002 O.S.)	1
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4/1BC	3888144	(std.)	6
68-69	CORVAIR (exc. 4/1BC)	3910312	(.010 O.S.)	1
62-64	CORVAIR w/Turbo	3823077	**CLAMP,** spare wheel manifold head shield to exhaust pipe	1
62-64	CORVAIR w/Turbo	3851836	**SEAL,** exhaust pipe to engine front shield	1
61-69	CORVAIR, F.C.	3830431	**SHIELD,** air therm.	L.H.
61-64	CORVAIR, F.C.	3830432	**SHIELD,** air therm.	R.H.
62-65	CORVAIR w/Turbo	3824180	**SHIELD,** heater hose inlet pipe heat	1
62-66	CORVAIR w/Turbo	3851995	**SHIELD,** spare wheel manifold heat	1
65-69	CORVAIR, F.C.	3856798	**SHIELD,** air therm.	1

3.603 TUBE—PLUG—SLEEVE, Exhaust Manifold Choke Heat

60	CORVAIR	6257200		1
60-61	CORVAIR, F.C.	444613	**PLUG,** tube hold—(8.971)	R.H.
60	CORVAIR	6257813	**SLEEVE,** carb. choke pipe	1

3.604 LOCK, Exhaust Manifold Bolt Locking

60-69	CORVAIR, F.C.	6255797	nut	6

3.609 PIPE ASSY.—EXTENSION—MUFFLER ASSY., Engine Exhaust

NOTE Refer to group 3.701 Chart for 1968-69 Exh. Pipes.

CORVAIR

60-63	(exc. Turbo.)	3824514		1
62-64	w/Turbo.	3815316	(35 dev. length)	1
62-63	w/Turbo (1st design)	3821168	turbocharger outlet (25 1/4 dev. length) (gasket type flange)	1
63-64	w/Turbo. (2nd design)	3840771	turbocharger outlet (25 dev. length) (packing type flange)	1
64	(exc. Turbo.)	3850226	(exhaust)	1
65-66	(exc. 4/1BC, Turbo.),			
67	ALL	3858159	(exhaust)	1
65-66	w/Turbo.	3858440	(exhaust)	1
65	w/Turbo. (1st design)	3858444	turbocharger outlet (Note 1)	1
65-66	w/Turbo. (2nd design)	3872226	turbocharger outlet (Note 1)	1

NOTE 1. 2nd design pipe has narrow area at curve to eliminate interference.

F.C.

61-65		3851851	(exhaust)	1

EXTENSION—MUFFLER ASSY., Engine Exhaust

62-63	CORVAIR,			
64	CORVAIR, w/Turbo.,			
64-65	F.C.	3822693	(1 9/32 long x 1 3/8 O.D. and 1 3/16 O.D.)	2
64	CORVAIR w/Turbo	3890689	turbocharger outlet (1 13/32" O.L. x 2 1/2" O.D.) (steel)	2
65-66	CORVAIR w/H/Per.	3858161	**MUFFLER ASSY.,** w/exh. pipe—(3.701)	1
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3869829	**MUFFLER ASSY.,** w/exh. pipe—(3.701)	L.H.
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3869830	**MUFFLER ASSY.,** w/exh. pipe—(3.701)	R.H.
66	CORVAIR (A.I.R. w/4/1BC)	3887459	**MUFFLER ASSY.,** w/exh. pipe—(3.701)	L.H.
66	CORVAIR (A.I.R. w/4/1BC)	3887460	**MUFFLER ASSY.,** w/exh. pipe—(3.701)	R.H.

3.610 PLATE—FLANGE—RETAINER, Inlet and Exhaust Pipe

62-64	CORVAIR w/Turbo	3817261		1
65-66	CORVAIR w/Turbo.	3851978		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-66	CORVAIR w/Turbo.	**3858447**	inlet pipe	1
64-66	CORVAIR w/Turbo.	**3850231**	**FLANGE,** turbocharger outlet	A.R.
62-64	CORVAIR w/Turbo	**3817263**	**RETAINER,** front seal	1
65-66	CORVAIR w/Turbo	**3851979**	**RETAINER,** front seal	1

3.611 PACKING—GASKET—SEAL, Exhaust Pipe

60-69	CORVAIR	**6255845**	(1 13/32 I.D. x 1 7/8 O.D.)	2
63-66	CORVAIR	**3767556**	muffler and exhaust pipe (2 17/32" I.D. x 3" O.D.)	A.R.
65-66	CORVAIR,			
68-69	CORVAIR	**3866590**	(1 5/8 I.D. x 2 O.D.)	1
60	CORVAIR	**6255637**	**GASKET,** exhaust manifold sleeve	6
61-66	CORVAIR, F.C. w/Turbo. (exc. 4/1BC),			
67	CORVAIR,			
68-69	CORVAIR (exc. 4/1BC)	**3788174**	**GASKET,** exhaust manifold sleeve	6
61-69	CORVAIR, F.C.	**3786798**	**GASKET,** exhaust manifold to lower shroud	A.R.
62-63	CORVAIR w/Turbo.	**1345198**	**GASKET,** outlet pipe flange, exhaust manifold valve	1
65-66	CORVAIR w/4/1BC (exc. Turbo.),			
68-69	CORVAIR w/4/1BC	**3856736**	**GASKET,** exh. manifold	6
62-66	CORVAIR w/Turbo	**3827240**	**SEAL,** exhaust pipe	1
62-66	CORVAIR w/Turbo	**3827241**	**SEAL,** inlet pipe	1

3.613 STUD—NUT—WASHER, Exhaust Pipe

60-69	CORVAIR, F.C.	**3760425**	exh. pipe and muffler exh. crossover pipe to exh. manifold, turb. to muffler (4 5/8"—16—16 x 2 3/16")—(3.275)	A.R.
60-69	CORVAIR, F.C.	**3760426**	exh. pipe and muffler, exh. crossover pipe to exh. manifold (3 5/8"—16—16 x 21/64")—(3.275)	A.R.
60-69	CORVAIR, F.C.	**838780**	**NUT,** exh. pipe and muffler (3 5/8"—16 x 3/8" thick) (brass)	A.R.
60-69	CORVAIR, F.C.	**3829086**	**NUT,** exh. pipe to exh.manifold (3 5/8" x 1 5/8" thick)—(5.385)	A.R.
60-69	CORVAIR, F.C.	**3754153**	**WASHER,** exh. pipe to exh. manifold (3 5/8" x 1 5/8" thick)—(5.385)	A.R.

3.650 BELT—PULLEY, Air Injection Reactor Pump

67	CORVAIR (A.I.R. w/C.A.C.)	**3927158**	"V" inj. pump—(1.066)	1
68-69	CORVAIR	**3925630**	"V" (3 5/8" x 50)—(1.066)	1
66	CORVAIR,			
67	CORVAIR (exc. Air Cond.),			
68-69	CORVAIR	**3888122**	**PULLEY**	1
67-68	CORVAIR w/C.A.C.	**3887102**	**PULLEY**	1

3.655 BOLT—BRACKET—NUT—SUPPORT, Air Injection Reactor Pump Mounting

66-68	CORVAIR	**3877606**	(3/8—16 x 5 1/4)	1
66	CORVAIR,			
67	CORVAIR (exc. Air Cond.),			
68-69	CORVAIR	**3888123**	**BRACKET,** pump	1
66	CORVAIR,			
67	CORVAIR (exc. Air Cond.),			
68-69	CORVAIR	**3888124**	**BRACKET,** belt idler pulley and bearing	1
67	CORVAIR w/Air Cond. . . .	**3899490**	**BRACKET,** belt idler pulley and bearing	1
68	CORVAIR	**2487146**	**NUT,** pump—(3.706)	1
66	CORVAIR,			
67	CORVAIR (exc. Air Cond.),			
68-69	CORVAIR	**3878501**	**SUPPORT,** bracket	1

3.660 PUMP ASSY.—COVER, Air Injection Reactor Pump

66-67	CORVAIR (1st design)	**5696409**	. . . . .	1
67	CORVAIR (2nd design),			
68-69	CORVAIR	**7801417**	. . . . .	1
66-69	CORVAIR	**5695484**	**COVER**	1

3.665 BEARING—GREASE—SCREW—SEAL—SHOE—SPRING—VANE, Air Injection Reactor

66-69	CORVAIR	**5696030**	housing rot. r.r.	1
66-69	CORVAIR	**1050525**	**GREASE,** exh. gas comb. pump (2 oz. container)—(8.800)	1
66-69	CORVAIR	**5697026**	**SCREW,** housing rot. end plate	6
66-69	CORVAIR	**7801092**	**SEAL,** pump hsg. rear	1
66-69	CORVAIR	**5695846**	**SHOE,** vane	6
66-69	CORVAIR	**5695845**	**SPRING,** vane shoe	3

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

66-69	CORVAIR	5696594	VANE, w/bearing (symmetrical)	1
66-69	CORVAIR	5696599	VANE, w/bearing (offset)	2

3.670 BRACKET—PLUG—VALVE ASSY., Air Injection Reactor

66-69	CORVAIR	3880762	by-pass valve	1
67	CORVAIR	5697400	PLUG, pressure setting	1
68-69	CORVAIR	7801662	PLUG, pressure setting (blue)	1
68	CORVAIR (exc. A.T.)	7801663	PLUG, pressure setting (red)	1
66-69	CORVAIR	5361993	VALVE ASSY., check	2
66-69	CORVAIR	5697366	VALVE ASSY., injection press relief	1
66-67	CORVAIR	7027194	VALVE ASSY., fuel mixture control	2
67	CORVAIR	3909421	VALVE ASSY., exh. gas cmb. by-pass	1
68-69	CORVAIR	7028298	VALVE ASSY., diverter (stamped 28298)	1

3.675 HOSE—PIPE ASSY.—SEAL—TUBE, Air Injection Reactor

66-67	CORVAIR (exc. 4/1BC w/oil bath, CORSA)	3885071	injection pump to A/CL	1
67-69	CORVAIR	3909453	injection pump to by-pass valve	1
67-69	CORVAIR	3909468	injection pump to A/CL	1
67	CORVAIR	3889356	injection pump outlet	1
66-69	CORVAIR	3875895	air inlet pipe	2
66-67	CORVAIR (1st design)	3901837	PIPE ASSY., injection pump to exhaust manifold L.H.	1
66-67	CORVAIR	3899494	PIPE ASSY., injection pump to exhaust manifold R.H.	1
66-69	CORVAIR	3901835	PIPE ASSY., injection air inlet	L.H.
66-69	CORVAIR	3899480	PIPE ASSY., injection air inlet	R.H.
67-69	CORVAIR (2nd design)	3909447	PIPE ASSY., injection by-pass valve to exh. manifold	1
67-69	CORVAIR	3909449	PIPE ASSY., injection pump to relief valve	1
67-69	CORVAIR	3909451	PIPE ASSY., injection pump to by-pass valve	1
66-67	CORVAIR	3849320	SEAL, to exhaust manif. pipe—(1.745)	2
66-69	CORVAIR	3872753	TUBE, air-inlet	6
68	CORVAIR	7035403	TUBE, diverter valve	1

3.680 CLAMP—GASKET—GROMMET, Air Injection Reactor

66-69	CORVAIR	3906630	air inlet pipe	A.R.
66-69	CORVAIR	3883867	inj. pump/to exh. manifold pipe	1
66	CORVAIR	2494772	fuel mixture cont. valve to hose—(1.166)	2
67-69	CORVAIR	3909452	exh. gas to relief valve pipe	1
66-69	CORVAIR	3875895	GASKET, air inlet pipe	2
66-68	CORVAIR		GROMMET, injector pump to exh. manifold L.H. pipe,	
69	CORVAIR	3888149	pump to relief valve pipe	1
66	CORVAIR w/4/1BC	3883845	GROMMET	2

3.701 MUFFLER ASSEMBLY, Engine Exhaust

62-65	CORVAIR w/Turbo. (1st design)	3858442	aluminized	1
65-66	CORVAIR w/Turbo. (2nd design)	3869877	aluminized	1
65-66	CORVAIR w/H/Per.	3858161	with exh. pipes	1
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3869829	with exh. pipes	L.H.
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3869830	aluminized, with exh. pipes	R.H.
66	CORVAIR (A.I.R. w/4/1BC)	3887459	with exhaust pipes	L.H.
66	CORVAIR (A.I.R. w/4/1BC)	3887460	with exhaust pipes	R.H.
66-67	CORVAIR w/A.I.R.	3888623		1
60-63 61-65	CORVAIR, F.C.	3834756	MUFFLER UNIT, w/tailpipe and clamp aluminized	1
64 65-67	CORVAIR, CORVAIR (exc. H/Per., 4/1BC, A.I.R.)	3884482	MUFFLER UNIT, w/tailpipe and clamp	1

1968-69 CORVAIR EXHAUST SYSTEM

NOTE: See Dealer Price Schedule (P&A 26) for Applicable Prices.

Engine	MUFFLER 3.701	EXHAUST PIPE 3.609	TAILPIPE 3.705
164	3888623●	3858159	—
164 H/Per.	3888623●	3858159	—
164 Sp. H/Per.	3887459 (R.H.)*● 3887460 (L.H.)*●	—	—

* w/exh. pipe
● w/tailpipe

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

3.704 BRACKET ASSY.—BOLT—INSULATOR—SPACER—STRAP—STUD, Muffler

60-63	CORVAIR (exc. Turbocharger)	3787224		1
61-65	F.C.	3787174	(held in place by engine rear shield)	1
62-64	CORVAIR w/Turbo.	3821538		1
64	CORVAIR (exc. Turbo.)	3851302		1
65-69	CORVAIR (exc. Turbo.)	3901312		R.H.
65-69	CORVAIR w/4/1BC (exc. Turbo.)	3901311		L.H.
65-66	CORVAIR w/Turbo.	3873602		L.H.
61-65	F.C.	3745928	**BOLT,** strap ($^{5}/_{16}$-18)	1
60-66	CORVAIR (exc. Turbo.)	3872228	**INSULATOR,** bracket	R.H.
65-66	CORVAIR w/Turbo.	3851307	**SPACER,** special	1
60-65	F.C.	3746524	**STRAP** (1 wide x $15^{3}/_{8}$ O.L.-ends hooked)	1
60-69	CORVAIR	3821542	**STRAP** ($^{3}/_{4}$" wide x 20^{1} O.L. one end hooked) (Note 1)	R.H.

NOTE 1. On 1962-64 models rework by folding and tapping $2^{1}/_{2}$ inches of center section of strap.

65-69	CORVAIR w/4/1BC (exc. Turbo.)	3869841	**STRAP** (L.H.)	2
60-69	CORVAIR, F.C.	3772487	**STUD,** bracket, rear shield, rear shroud, distributor clamp and air exhaust duct attaching ($^{3}/_{8}$—16—24 x $1^{35}/_{64}$) (.003 O.S.) (painted dark blue)	A.R.
60-69	CORVAIR, F.C.	3772488	**STUD,** bracket, rear shield, rear shroud, distributor clamp and air exhaust duct attaching ($^{3}/_{8}$—16—24 x $1^{35}/_{64}$) (.006 O.S.) (painted light green)	A.R.
60-69	CORVAIR, F.C.	3772489	**STUD,** bracket, rear shield, rear shroud and distributor clamp ($^{3}/_{8}$—16—24 x $1^{35}/_{64}$) (.009 O.S.) (painted orange)	A.R.

3.705 PIPE—MUFFLER UNIT, Muffler Tail

NOTE Refer to group 3.701 Chart for 1968-69 Tailpipe.

CORVAIR

61-63	w/H/Per.	3834758		1
62-65	w/Turbo. (1st design)	3858443	(chrome) (straight at muffler)	1
64-66	(exc. Turbo., A.I.R.),			
65-66	w/H/Per.	3884485		1
65-66	w/Turbo (2nd design)	3869879	(chrome) (curved at muffler)	1

FC

61-65		3834758		1

MUFFLER UNIT, Muffler Tail

60-63	CORVAIR,			
61-65	F.C.	3834756	**MUFFLER UNIT,** w/tailpipe and clamp aluminized—(3.701)	1
64	CORVAIR,			
65-67	CORVAIR (exc. H/Per., 4/1BC, A.I.R.)	3884482	**MUFFLER UNIT,** w/tailpipe and clamp—(3.701)	1

3.708 CLAMP UNIT—SCREW—WASHER, Muffler and Exhaust Pipe

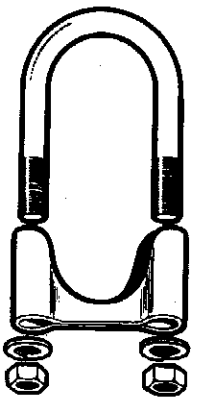

ALL	w/$1^{1}/_{2}$" pipe	3837878
ALL	w/$1^{3}/_{4}$" pipe	2378615
ALL	w/$1^{7}/_{8}$" pipe	3754882

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

	ALL		w/2" pipe	3754883
	ALL		w/2 1/4" pipe	3857547
	ALL		w/2 1/2" pipe	2414398(*1)
	ALL		w/3" pipe	2378617
	ALL		w/3 1/2" pipe	2378618
	ALL		w/4" pipe	2378620
60-69	CORVAIR	9424814	SCREW, hanger clamp (No. 20—9 x 1 1/2")—(8.977)	A.R.
65	F.C.	3865799	WASHER, bracket (15/64 x 1 1/4—1/8 thk. x 27/64 I.D.)	A.R.

3.724 GASKET KIT, Carburetor

60-64	CORVAIR, F.C.,			
65-66	CORVAIR, F.C. (exc. Turbo.)		w/7015300-10-11-12-13-19-7019100-01-07-10-11-7020100-01-02-3100-01-02-4022-23-24-5023-24-25-26-27,	
67-69	CORVAIR w/Roch. 1BC	7033068	w/7026023-4-8004-05-7026-7036014-5-6365	A.R.
62	CORVAIR w/Turbo.	3833361	w/3817245-3829180	1
63-64	CORVAIR w/Turbo.		w/3829476-3833038-3844233,	
65-66	CORSA w/Turbo.	3869362	w/3856713-3873818-3880786 (Carter)	1

3.725 CARBURETORS—REPAIR KIT

ROCHESTER CARBURETORS

60	CORVAIR	7016015	unit (Note 1)	2
	NOTE 1 Use 7017760 Venturi for H/Per. engine.			
61	CORVAIR, F.C. (exc. H/Per.)	7016160	unit	2
62-63	CORVAIR, F.C. (exc. Turbo),			
64-65	CORVAIR w/H/Per. (exc. C.A.C.),			
65-67	CORVAIR w/P.G. (exc. H/Per., Air Cond., A.I.R.),			
65-66	CORVAIR w/4/1BC (exc. CORSA, A.I.R.)	7016524	unit (primary)	2
64	CORVAIR (exc. H/Per., C.A.C.),			
65	CORVAIR (exc. H/Per., Turbo., 4/1BC, C.A.C.),			
65	CORSA (exc. Turbo.),			
66-67	CORVAIR (exc. CORSA, P.G., A.I.R.),			
66	CORSA (exc. Turbo., A.I.R.)	7016523	unit (primary)	2
64-65	CORVAIR, F.C. w/C.A.C.,			
64	CORVAIR w/oil bath	7016525	unit	2
65	CORVAIR w/4/1BC (1st design) (exc. Turbo)	7016526	unit, secondary (w/7025226)	2
65	CORVAIR w/4/1BC (2nd design) (exc. Turbo.)	7031441	unit, secondary (w/7025227)	1
66	CORSA (exc. TURBO.),			
66	CORVAIR w/Sp. H/Per. (exc. CORSA),			
68-69	CORVAIR w/4/1BC	7027026	assy. (secondary)	2
66-67	CORVAIR w/A.I.R.	7036015	assy.	2
68	CORVAIR,			
69	CORVAIR w/2/1BC	7036365	unit	2

ROCHESTER MAJOR REPAIR KIT

NOTE Repair Kits consist of necessary parts to overhaul one carburetor-including jets, nozzles, intake needle and seat, pump lever, etc.

60-63	CORVAIR, F.C.	7016436	w/7015300-10-11-19-9100-01-07-10-11-17-7020100-01-02-3101-02-4022-23-24	1
64	CORVAIR, F.C. (exc. SPYDER)		w/7024022-23-24-25,	
65-66	CORVAIR, F.C. (exc. Turbo)		w/7025023-24-25-5226-6023-7036014-15-23,	
67-68	CORVAIR		w/7026023-4-7036014-5-7028004-05,	
69	CORVAIR w/2/1BC	7033066	w/7028005	1

ROCHESTER MINOR REPAIR KIT

NOTE Repair kits (minor) consist of pump, needle and seat unit, air horn gasket, thermostat housing cover gasket, clip and gauge.

60-63	CORVAIR, F.C.	7039028	w/7015300-10-11-7019100-9101-9110-11-7020100-0101-0102 (Viton)	2
64-67	CORVAIR F.C. (exc. Turbo),			
68-69	CORVAIR w/1BC	7039105	(Viton) w/7024022-23-24-25-5023-5226-27-6023-6-7036014-15-7028004-05-7026-7036365	A.R.
65-66	CORVAIR w/4/1BC		w/7025226-7-6023,	
68-69	CORVAIR w/4/1BC	7033067	w/7027026	2

CARTER CARBURETORS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-63	CORVAIR w/Turbo.	3833038	assy. (used w/camshaft 3832586 only) (YH 3586S)	1
64	CORVAIR w/Turbo.	3844233	assy. (YH-36925)	1
65-66	CORSA w/Turbo	3880786	assy. (YH-414SA)	1

CARTER MAJOR REPAIR KIT

NOTE Repair kits consist of necessary parts to overhaul one carburetor-including jets, nozzles, intake neddle and seat, pump lever, etc.

62-63	CORVAIR w/Turbo.	3840349	w/3817245-3829180-3829476	1
63	CORVAIR w/Turbo.	3840350	w/3833038	1
64	SPYDER	3855119	w/3844233	1
65	CORVAIR w/Turbo	3869364	w/3856713	1
65	CORVAIR w/Turbo	3877189	w/3873818	1
65-66	CORVAIR w/Turbo.	3888840	w/3880786	1

CARTER MINOR REPAIR KIT

NOTE Repair kits (minor consist of pump, needle and seat unit, air horn gasket, thermostat housing cover, gasket, clip and gauge.

62-65	CORVAIR w/Turbo.	3869363	w/3817245-3829180-3829476-3833038-3844233-3856713-3873818	1
65-66	CORVAIR w/Turbo.	3888839	w/3880786	1

3.726 INSULATOR—GASKET, Carburetor to Manifold

60	CORVAIR	6256836	(asbestos) (Note 1)	2
	NOTE 1 For use where hot starting conditions exist.			
61-69	CORVAIR, F.C. (exc. Turbo.)	3826302	($^3/_{16}$ thick)	A.R.
60	CORVAIR	6256537	**GASKET**	2
62-65	CORVAIR w/Turbo.	3817247	**GASKET,** carb. to turbocharger	1
62-66	CORVAIR w/Turbo.	3815335	**GASKET,** turbocharger inlet pipe flange	1
62-63	CORVAIR w/Turob.	3815334	**GASKET,** turbocharger outlet pipe fl.	1

3.730 HORN—SCREW, Carburetor Air

61	CORVAIR, F.C.	7019816	w/7019100-9101-9107-9110-9111-9117	2
62-63	CORVAIR, F.C.		w/7020100-0101-0102,	
64-65	CORVAIR, F.C. w/Air Cond. .	7028900	w/7024025-5025	1
64-68	CORVAIR		**HORN ASSY.** (w/7024022-23-24-5023-24-227-6023-4-8004-05-7036014-5),	
69	CORVAIR w/2/1BC	7027710	w/7028005	1
65	CORVAIR w/4/1BC (exc. Turbo.)	7029742	**HORN ASSY.** (secondary) w/7025226	2
66-69	CORVAIR w/4/1BC (exc. CORSA),			
66	CORSA (exc. Turbo.)	7031490	**HORN ASSY.** (secondary) w/7026026	2
60-66	CORVAIR, F.C. (exc. H/Per., Turbo),			
67-69	CORVAIR	7000249	**SCREW,** horn attach. w/washer and spring (10—32 x $^3/_4$ fill hd.)	A.R.
62-69	CORVAIR, F.C.	7004079	**SCREW,** horn attach. (No. 10—32 x $1^5/_{16}$)	A.R.
68	CORVAIR w/Roch. 1BC	7037573	**SCREW,** carb. A/CL bracket (10—32 x $^3/_8$)	2

3.731 GASKET, Float Bowl

66-67	CORVAIR	7033980	air horn to float bowl (w/7026023-4-7036014-15)	A.R.

3.734 BOWL ASSY.—BODY ASSY.—INSERT, Carburetor Float and Throttle Body

62	CORVAIR, F.C.	7021538	w/7020100-0101-0102-06-08	1
64	CORVAIR, F.C.	7027711	w/7024022-23-24-25	2
65	CORVAIR, F.C. (exc. H/Per., Turbo.)	7029741	w/body (w/7025023-25)	2
65	CORVAIR w/4/1BC (exc. Turbo.)	7029743	w/body (secondary) w/7025226	2
65	CORVAIR w/4/1BC,			
65	CORVAIR w/H/Per. (exc. Air. Cond.)	7029757	w/body (primary) (w/7025024)	2
66-67	CORVAIR w/P.G. (exc. A.I.R., CORSA)	7031491	w/7026024	1
66-67	CORVIR (exc. Turbo., P.G., A.I.R.)	7032920	w/body (w/7026023)	2
66	CORVAIR w/Sp. H/Per.,			
66	CORSA (exc. Turbo.)		secondary (w/7026026),	
67-69	CORVAIR w/4/1BC	7033074	w/7027026	2
68	CORVAIR		**BODY ASSY.,** w/bowl, carb. throttle float,	
69	CORVAIR w/2/1BC	7036361	w/7028005	2
60-68	CORVAIR, F.C.	7021528	**INSERT,** mainwell (w/7015300-10-11-12-13-19-7019100-9101-9107-9110-9111-9117-7020006-0007-0008-0012-0018-0100-0101-0102-6023-4-7031415-16)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

3.735 GASKET, Carburetor Throttle Body

62	CORVAIR w/Turbocharger	3833361	to air horn (w/3817245-3829180)—(3.724)	1

3.738 GASKET, Carburetor Bowl Cover

62	CORVAIR w/Turbo	3833361	w/3817245-3899180—(3.724)	1

3.740 FILTER—GASKET—NUT—PLATE—SCREEN—SCREW—SPRING, Carburetor Fuel Inlet

60-69	CORVAIR, F.C.	7013404	w/3923289	2
68-69	CORVAIR w/Roch. 1BC	5651393	fuel inlet	1
60-62	CORVAIR, F.C.,			
63-66	CORVAIR, F.C. (exc. H/Per., Sp. H/Per.),			
67	CORVAIR w/Roch. Carb.,			
68-69	CORVAIR	7013584	GASKET, fuel filter inlet (w/7015300-10-11-12-13-19-9100-01-07-10-17-7020103-04-05-08-14-15-3105-4000-01-06-08-20-25-26-4220-25-26-5000-3-5105-8-7026-7101-3 3-10-12-14-16-7200-01-2-3-7037101-3-10-12-14-16-7200-1-2-3-8005	A.R.
60-69	CORVAIR, F.C.	7032508	GASKET, gas pipe connecting carb. end ($\frac{7}{8}$ I.D. x $1\frac{1}{64}$ O.D. x $\frac{1}{2}$ thk.)	1
62-66	CORVAIR w/Turbo.	1875030	GASKET, strainer nut (w/3829476-3833038-3844233-3856713-3873818-3880786)	1
60-63	CORVAIR, F.C.,			
64-69	CORVAIR, F.C. (exc. Turbo.)	7015233	NUT, carb. end ($\frac{7}{64}$"—24 int. $\frac{7}{8}$"—20 ext. thds.) (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-01-02-03-04-05-08-14-15-4023-24-25-7025023-4-5-5226-6023-4-6-703-6014-15-24-26	A.R.
62-63	CORVAIR w/Turbo. (1st design)	3828226	PLATE, fuel bowl baffle (w/3817245-3829180-9476) (Carter 186-54)	1
63-65	CORVAIR w/Turbo, (2nd design)	3842007	PLATE, fuel bowl baffle (Carter-186-105)	1
62-66	CORVAIR w/Turbo.	342139	SCREEN, strainer (w/3829476-3833038-3844233-3856713-3873818-3880786)	1
60	CORVAIR	7010434	SCREW, choke thermostat modifier lever (w/7015300-10-11-12-13-19)	1
60-66	CORVAIR, F.C.	7010007	SPRING, fuel filter	A.R.
67-69	CORVAIR w/Roch. 1BC	7034356	SPRING	A.R.

3.745 FLOAT ASSY., Carburetor

60-63	CORVAIR, F.C.	7015241	w/lever (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-01-02) (Note 1)	2

NOTE 1. Solid needle and seat must be used with this float.

62-66	CORVAIR w/Turbo.	3825229	w/lever (w/3829476-3833038-3856713-3873818-3880786)	1
64-68	CORVAIR, F.C. (exc. Turbo.)		w/lever (w/7025023-4-5-7025226-7-6023-6-7036023-4-6-14-15),	
69	CORVAIR w/2/1BC	7028501	w/7028005	A.R.

3.747 PIN—SPRING, Carburetor Float Hinge

60-68	CORVAIR, F.C. (exc. Turbo.)		w/7025023-4-5-226-7026023-24-26-7036014-15-23-24,	
68-69	CORVAIR	7001595	w/7028004-05-7026	A.R.
62-66	CORVAIR w/Turbo.	3708209	w/3792945-3019-3817245-3829180-9476-3856713-3873818-3880860-1-3891595-6	1
64-68	CORVAIR, F.C. (exc. Turbo.)		SPRING, float torsion (w/7025023-4-5-5226-7-6023-4-6-7036023-4-14-15),	
69	CORVAIR w/2/1BC	7028503	w/7028005	A.R.

3.750 THERMOSTAT ASSY.—COIL ASSY.—COVER—GASKET—HOSE—HOUSING ASSY.—LEVER—PLATE—PLUG—RETAINER—SCREW, Automatic Choke Control

60	CORVAIR	3780372	w/cover	1
62-63	CORVAIR, F.C.	3813527	w/bracket	1
64-69	CORVAIR, F.C. (exc. H/Per., Sp. H/Per).	3856639	w/bracket	2
64-68	CORVAIR w/H/Per.	3847831	w/bracket	2
62-65	CORVAIR w/Turbo.	3825248	COIL ASSY., thermostat, w/cover	1
65-66	CORVAIR w/Turbo.	3888838	COVER, w/coil thermostat (w/3880786)	1
60	CORVAIR	7002760	GASKET, choke valve thermostat	1
62-66	CORVAIR w/Turbo.	1423131	GASKET, choke housing	1
60-69	CORVAIR, F.C.	3815458	HOSE, carb. heat ($\frac{7}{32}$" I.D. x $17\frac{1}{4}$" O.L.)	A.R.
60	CORVAIR	6257408	HOUSING ASSY., choke w/plug	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-66	CORVAIR w/Turbo.	3825249	**HOUSING ASSY.**, choke w/plug	1
60	CORVAIR	6257859	**LEVER**, thermostat modifier	1
60	CORVAIR	6257150	**PLATE**, thermostat baffle	1
62-66	CORVAIR w/Turbo.	3825253	**PLATE**, thermostat baffle	1
62-66	CORVAIR w/Turbo.	7007893	**PLUG**, choke hsg. expansion ($^{9}/_{16}$" dia.)	1
60	CORVAIR	7000614	**RETAINER**, choke valve thermo. hsg. cover	2
64-66	CORVAIR w/Turbo.	3849979	**SCREW**, choke housing	1

3.751 VALVE—SCREW, Carburetor Choke

60	CORVAIR	6256473	choker (w/7015300-10-11-12-13-19)	1
62-67	CORVAIR, F.C. (exc. Turbo.)		w/7020100-01-02-4023-24-25-5023-24-25-6023-7026-7036023-14-15-24),	
68-69	CORVAIR	7020739	. . . . .	2
63-64	CORVAIR, F.C. (exc. SPYDER),			
62-65	CORVAIR w/Turbo.	1875233	w/3905971-2-5-6-9405	1
60-64	CORVAIR, F.C. (exc. Turbocharger)		**SCREW**, choker valve attach.	
63-64	CORVAIR, F.C. (exc. SPYDER),			
69	CORVAIR w/2/1BC	7007627	(No. 16—32 x $^{17}/_{64}$")	A.R.
62-65	CORVAIR w/Turbocharger . .	342146	**SCREW**, choke valve attach. (No. 3-45 x $^{7}/_{32}$") (w/3817245)—(3.761)	2
68	CORVAIR w/4/1BC	7020926	**SCREW**, carb. choke valve w/7027026—(3.820)	2

3.752 CLIP—LEVER—LINK—PIN—PISTON—RETAINER—ROD—SCREW—SHAFT—SPRING—SWIVEL—WASHER, Carburetor Choke

61-69	CORVAIR, F.C.	7003137	rod upper	A.R.
60	CORVAIR	3779140	**LEVER**, trip (w/7015300-10-11-12-13-19)	1
62-67	CORVAIR, F.C. (exc. Turbo.)		**LEVER**, trip (w/7020100-01-02-4022-23-24-25-5023-24-25-6023-4-7026-7036014-15-23-24),	
68	CORVAIR w/Roch. 1BC,			
69	CORVAIR w/2/1BC	7028796	. . . . .	2
62-67	CORVAIR, F.C. (exc. Turbo.)		**LEVER**, shaft (w/7020100-0101-0102-4023-24-25-5023-4-5-6023-4-7026-7036014-15-23-24),	
68	CORVAIR w/Roch. 1BC,			
69	CORVAIR w/2/1BC	7022594	. . . . .	2
65	CORVAIR w/4/1BC (exc. Turbo.)	7031085	**LEVER**, carb. choke shaft (w/7025227)	2
66	CORVAIR w/4/1BC (exc. Turbo),			
68-69	CORVAIR w/4/1BC	7031301	**LEVER**, carb. choke shaft (w/7026026, 7027026)	2
60	CORVAIR	6256908	**LEVER ASSY.**, w/link, shaft (w/7015300-10-11-12-13-19)	1
62-66	CORVAIR w/Turbo.	3825226	**LEVER ASSY.**, w/shaft (w/3856713-3873818-3880786)	1
60	CORVAIR	6257494	**LINK**, thermostat modifier (w/7015300-10-11-12-13-19)	1
60	CORVAIR	7002854	**PIN**, piston (w/7015300-10-11-12-13-19)	1
62-66	CORVAIR w/Turbo.	3825245	**PIN**, piston (w/3817245-3829180, 9476-3833138-3856713-3873818-3880786)	1
60	CORVAIR	6257860	**PISTON** (w/7015300-10-11-12-13-19)	1
62-64	CORVAIR w/Turbocharger . .	3828579	**PISTON** (w/3817245-3829180-9476-3833038)	1
65	CORVAIR w/Turbo.	1875075	**PISTON** (w/3873818)	1
61	CORVAIR, F.C.	838884	**RETAINER**, lever (w/7019100-9101-9107-91-10-9111-9117-7020103-0104-0114-0115)	1
62-66	CORVAIR w/Turbo.	3825250	**RETAINER**, choke rod (w/3817245-3829180-3856713-3873818-3880786)	1
62-66	CORVAIR w/Turbo.	3825231	**RETAINER**, choke housing cover (w/3873818-3817245-3829180-9476-3833038-3856718-3880786)	3
62-67	CORVAIR, F.C. (exc. Turbo.)		**ROD**, (w/7020100-0101-0102-4023-24-25-5023-24-25-6023-4-7026-7036014-15),	
68	CORVAIR w/Roch. 1BC,			
69	CORVAIR w/2/1BC	7020747	. . . . .	2
62	CORVAIR, F.C. (1st design) (exc. C.A.C.)	3813521	**ROD**, upper, right and left ($7^{1}/_{8}$" dev. length)	A.R.
62-69	CORVAIR, F.C. (2nd design) (exc. C.A.C. Turbo.)	3819238	**ROD**, upper ($5^{27}/_{32}$ dev. length)	2
62-66	CORVAIR w/C.A.C. (exc. CORSA)	3819239	**ROD**, upper, L.H. ($5^{7}/_{8}$ dev. length)	1
63-66	CORVAIR w/Turbo.	3837828	**ROD**, choke connector (w/3829476-3833038-3856713-3873818-3880786)	1
65-66	CORVAIR w/4/1BC (exc. Turbo.),			
68-69	CORVAIR w/4/1BC	3905984	**ROD**, carb. cross shaft lever to primary carb., R.H.	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT PERFORMANCE

65-66	CORVAIR w/4/1BC (exc. A.I.R.)	3867211	**ROD,** secondary carb. lever to carb.	L.H.
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3867212	**ROD,** secondary carb. lever to carb.	R.H.
66	CORVAIR w/A.I.R., 4/1BC	3880757	**ROD,** secondary carb. lever to carb.	2
68-69	CORVAIR w/4/1BC	3905988	**ROD,** secondary carb. lever to carb.	2
62-63	CORVAIR, F.C.	3819237	**ROD ASSY.,** lower (Note 1)	2
	NOTE 1 When using this part, 3819238 or 3819239 must also be used.			
64-69	CORVAIR F.C. (exc. Turbo)	3847828	**ROD ASSY.,** lower	2
60	CORVAIR,			
62-69	CORVAIR, F.C. (exc. 4 cyl.)	7019709	**SCREW,** trip lever, choke rod	A.R.
61	CORVAIR, F.C.	131954	**SCREW,** lever swivel w/7019100-9101-9107-9110-9111-9117, 7036101-03-10-12—(8.907)	1
62-67	CORVAIR, F.C. (exc. Turbo.)		**SHAFT,** w/lever (w/702100-01-02-4022-23-24-25-5023-24-25-6023-4-7026-7036014-15-23-24),	
68	CORVAIR w/Roch. 1BC,			
69	CORVAIR w/2/1BC	7020736		1
65	CORVAIR w/4/1BC (exc. Turbo.)	7031082	**SHAFT,** w/lever (w/7025227)	2
66	CORVAIR w/4/1BC (exc. Turbo.)		**SHAFT,** w/lever (w/7026026),	
68-69	CORVAIR w/4/1BC	7031299	w/7027026	2
60	CORVAIR	836159	**SPRING,** retainer (hairpin type) (w/7015300-10-11-12-13-19)—(3.841)	2
65-66	CORVAIR w/4/1BC (exc. Turbo., A.I.R.)	3873994	**SPRING,** second. carb. actu. rod	2
62-65	CORVAIR w/C.A.C.	3813788	**SWIVEL,** left upper rod	1
60	CORVAIR	6257543	**WASHER,** trip lever, fast idle cam (1/4) (w/7015300-10-11-13-19)	1

3.753 SPRING, Carburetor Choke

61-63	CORVAIR, F.C.	7019434	valve (w/7019100-9101-9107-9110-9111-9117-7230100-0101-0102)	2

3.755 CONTROL ASSY.—HOSE—NIPPLE—ROD, Carburetor Choke Vacuum

62-68	CORVAIR, F.C.		w/7020100-0101-0102-4023-24-25-5023-4-5-6023-4-7026-7036023-5-14-15,	
69	CORVAIR w/2/1BC	7021050	w/7028005	A.R.
62-63	CORVAIR, F.C.,			
69	CORVAIR w/2/1BC	3830665	**HOSE,** control assy. 5/32" I.D. (w/7020100-0101-0102-3100-3101-3102)—(8.962)	2
62	CORVAIR (exc. STA. WAG.)	3749168	**NIPPLE**—(2.420)	1
62-68	CORVAIR, F.C. (exc. Turbo.)		**ROD,** actuating (w/7025023-4-5-6023-4-6-7036023-4-14-15),	
69	CORVAIR w/2/1BC	7021042	w/7028005	2

3.757 SPACER, Carburetor Air Valve

65-66	CORVAIR w/4/1BC (exc. Turbo.),		lockout lever (w/7025227-6026),	
68-69	CORVAIR w/4/1BC	7031084	w/7027026	2

3.758 VALVE, Carburetor Throttle

62-66	CORVAIR w/Turbo.	3708202	(w/3817245-3829180-3833038-3856713-3873818-3880786)	1

3.759 LEVER ASSY., Carburetor Throttle

62-66	CORVAIR w/Turbo.	3825220	w/shaft (w/3817245-3829180-9476-3833038-3856713-3873818-3880786)	1

3.761 SCREW—SPRING, Carburetor Throttle Lever Adjusting

61	CORVAIR, F.C.	7001619	fast idle lever adjusting (w/7019100-9101-9107-9110-9111-9117-7020103-0104-0114-0115)	1
66	CORVAIR w/Turbo.	342146	throttle valve attaching (No. 3—45 x 7/32) (w/3817245-3829180-9476-3833038-3793019-2945-3856713-3873818-5966-6749-3880860-1-0786)	1
64-66	CORVAIR w/Turbo.	3849978	**SPRING,** adjusting screw (Carter 61-756)	1
63	CORVAIR w/Turbocharger	1451460	**SPRING,** adjusting screw (w/3792945-3829476-3833038-3891591-2),	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

3.762 ARM ASSY.—CLAMP—CLIP—LEVER—SCREW—SUPPORT ASSY., Carburetor Throttle

62	CORVAIR w/Turbo.	3825237	shaft (w/3817245-3829180)	1
63-66	CORVAIR w/Turbo	3837827	shaft (w/3829476-3833038-3856713-3873818-3880786)	1
65-67	CORVAIR w/Air Cond. . . .	3856674	**CLAMP,** cross shaft idle control lever	1
60-65	CORVAIR (F.C. w/side door) (exc. Turbo.)		**CLIP,** cross shaft lever rod (w/7015300-10-11-12-13-19-9100-01-07),	
68	CORVAIR	3908243	carb. to accel. control lever rod	A.R.
60	CORVAIR	3779651	**LEVER** (w/7015300-10-11-12-13-19)	1
65	CORVAIR w/4/1BC (exc. Turbo.)	7031089	**LEVER,** carb. lockout (w/7025227)	2
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4 1BC	3905982	**LEVER,** secondary carb.	2
66	CORVAIR w/4/1BC (exc. Turbo.)		**LEVER,** lockout (w/7026026),	
68	CORVAIR w/4/1BC	7031306	. . . . .	2
60-66	CORVAIR, F.C. (exc. Turbo.)		**SCREW,** pump actuating lever,	
67-68	CORVAIR w/Roch. 1BC	7010435	w/7026023-4-8004-8005-7036014-5	A.R.
65-66	CORVAIR w/4/1BC (exc. A.I.R.)	3867210	**SUPPORT ASSY.,** secondary carb. lever	2
66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4/1BC	3880755	**SUPPORT ASSY.,** sec"d. carb. lever	2

3.763 SPRING, Carburetor Throttle Shaft Lever

65	CORVAIR w/4/1BC (exc. Turbo.)		carb. lockout (w/7025227),	
66	CORVAIR w/A.I.R. (exc. H/Per., Sp./H/Per.)		w/7026023,	
68-69	CORVAIR w/4/1BC	7031088	w/7027026	2

3.766 CAM ASSY.—CAM—CONTROL ASSY.—DIAPHRAGM ASSY.—LEVER—SCREW—SOLENOID KIT—SPRING—TEE, Carburetor Fast Idle

60	CORVAIR	6257544	w/7015300-10-11-12-13-19	1
64	CORVAIR w/Turbo	3849980	w/3844233-3856713	1
66	CORVAIR w/Turbo	3877188	w/3880(Carter 181-202S)	1
62	CORVAIR, F.C.	7020746	**CAM**	2
63-68	CORVAIR, F.C. (exc. Turbo.)		**CAM** (w/7025023-4-5-6024-3-70360-14-15-23-24),	
69	CORVAIR w/2/1BC	7024430	w/7028005	A.R.
65	CORVAIR w/Turbo.	7031375	**CAM,** w/3873818	1
62-63	CORVAIR w/C.A.C.	7020095	**CONTROL ASSY.,** idle speed	1
64-66	CORVAIR w/C.A.C.	3879888	**CONTROL ASSY.,** idle speed	1
66	CORVAIR w/C.A.C.	3880774	**CONTROL ASSY.,** idle speed	1
67	CORVAIR w/C.A.C.	3899492	**CONTROL ASSY.,** idle speed	1
64-66	CORVAIR w/Air Cond. . . .	7027830	**DIAPHRAGM ASSY.,** w/bracket, idle speed-up control .	1
64	CORVAIR w/Air Cond. . . .	3850282	**LEVER,** cross shaft idle control	1
65-67	CORVAIR w/Air Cond. . . .	3856673	**LEVER,** cross shaft idle control	1
60	CORVAIR	7011546	**SCREW,** adjusting (w/7015300-10-11-12-13-19)	1
60-68	CORVAIR, F.C.		**SCREW,** throttle idler adj. (No. 10—32 x 1) (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-0101-0102-4022-23-24-25-5023-24-25-7036023-24-14-15),	
69	CORVAIR w/2/1BC	7006213	w/7028005	A.R.
64-66	CORVAIR w/Air Cond. . . .	7027838	**SCREW,** speed-up control contact	1
66	CORVAIR w/4/1BC (exc. Turbo.)		**SCREW,** secondary,	
68-69	CORVAIR w/4/1BC	7031307	w/7027026	2
62-63	CORVAIR w/C.A.C.	7021852	**SOLENOID KIT,** idle speed-up control	1
64-66	CORVAIR w/C.A.C.	7031406	**SOLENOID KIT,** idle speed-up control	1
60-68	CORVAIR, F.C. (exc. Turbo.)		**SPRING,** adjusting screw (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020103-04-14-15-4022-23-24-25-5023-24-25-6023-24-7036023-24-14-15),	
69	CORVAIR w/2/1BC	7001690	w/7028005	2
62-65	CORVAIR w/C.A.C.	3760438	**TEE,** idle speed control hose—(10.155)	1

3.767 SCREW, Carburetor Fast Idle Cam

60-64	CORVAIR, F.C.	7003561	throttle lever (12—28 x $^{3}/_{8}$") (w/$^{3}/_{16}$" dia. shldr.)	A.R.

3.768 LINK, Carburetor Fast Idle

62-66	CORVAIR w/Turbo.	3825240	fast idle (w/3829476-3833038-3856712-3873818-3880786)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

3.775 PLUG, Carburetor Nozzle Passage

60	CORVAIR	7012330	float bowl hole (button head—aluminum) ($^{5}/_{32}$ dia.) (w/7015300-10-11-12-13-19)	8
65-66	CORVAIR w/Turbo. (1st design)	7002439	$^{1}/_{4}$" rd. head, w/3793945-3019-3873818-3880786	4
65-66	CORVAIR w/Turbo.	3877184	pass. idle part (w/3873818-3880786)	1
65-66	CORVAIR w/Turbo (2nd design)	7000777	w/3873818-3880786 (Carter 11B-223)	1

3.786 VENTURI-SCREW, Carburetor

62	CORVAIR, F.C. w/P.G. (exc. H/Per.),			
63	CORVAIR w/H/Per.	7021654	w/7020100-3102	2
64	CORVAIR (exc. H/Per.)	7026901	(w/7024022-23)	1
64	CORVAIR w/H/Per.	7026900	(w/7024024)	1
64	F.C.	7028709	w/7024025-6424-7016525	2
64	CORVAIR (exc. Air Cond., 4/1BC, Turbo.)		w/7025023-4,	
65	CORVAIR w/4/1BC	7029337	(primary)	2
65	F.C.,			
65	CORVAIR w/Air Cond.	7029356	w/7025025	2
65	CORVAIR w/4/1BC	7029620	w/7025226-27 (secondary)	2
66-67	CORVAIR (exc. CORSA)	7032479	w/7026023-24-6036023-24-14-15	2
68	CORVAIR w/Roch. 1BC		w/7038004-05,	
69	CORVAIR w/2/1BC	7032284	w/7028005	2
68-69	CORVAIR	7000293	**SCREW,** Venturi at outer holes attaching (No. 8—32 x $1^{3}/_{16}$)	2

3.792 JET, Carburetor Metering

60	CORVAIR	7002948	main (sq. approach) (w/7015300-11-19)	2
60	CORVAIR w/P.G.	7002950	main (square approach) (stamped 50) (w/7015310-12) (Note 1)	2
60	CORVAIR (exc. P.G.)	7002951	main (square approach) (stamped 51) (w/7015311-13-19) (Note 1)	2
61-62	CORVAIR, F.C. w/P.G.		main (60 degree approach) (stamped 49).	
63	CORVAIR w/H/Per.		(w/7019100-9110-7020100-3102),	
66	CORVAIR w/A.I.R., P.G., H/Per., Sp./H/Per. (exc. CORSA)		w/7026023-4-7036024-14,	
67-68	CORVAIR		w/7026023-8004-05 (Note 1),	
69	CORVAIR w/4/1BC	7002649	w/7027026	2
61-63	CORVAIR, F.C. (exc. P.G., H/Per.)		main (60 degree approach) (stamped 50),	
65	CORVAIR (exc. Air Cond., Turbo.),			
66	CORVAIR w/A.I.R. (exc. P.G., H/Per.)		(w/7019100-01-10-11-7020101-0102-3101-5024-5226-7036023-14),	
67	CORVAIR	7002650	w/7026024-7036014-5	1
61	CORVAIR w/H/Per.,			
64	CORVAIR w/P.G. (exc. H/Per.),			
65	CORVAIR, F.C. (exc. Turbo.)		main (60 degree approach) (stamped 51) (w/7019107-9117-7025023-24),	
68	CORVAIR (1BC w/P.G.)	7002651	w/7028004 (Note 1)	2
62-63	CORVAIR w/Turbocharger	1459366	primary (Carter 120-166)	1
64	CORVAIR w/C.A.C., oil bath		main (60 degree approach) (stamped 53)	
64	F.C.	7002653	(w/7020104-4025) (Note 1)	1
63	CORVAIR, F.C. w/P.G. (exc. H/Per.)		main (60 degree approach) (stamped 48) (w/7023100),	
65	CORVAIR w/4/1BC	7002648	secondary carb., main (60 degree approach) (w/7025226) (Note 1)	2
63	CORVAIR w/Turbocharger	3841359	carb. metering rod (w/3833038) (Carter 120-170)	1
64	CORVAIR w/Turbocharger	3815049	primary (w/3844233) (Carter 120-161)	A.R.
65	CORVAIR w/Turbo.	1456135	secondary (w/3873818)	1
66	CORVAIR w/Sp./H/Per. (exc. CORSA)	7002646	main (60 degree approach) (w/7026026)	2
68	CORVAIR (exc. P.G.),			
69	CORVAIR w/2/1BC	7002652	w/7028005	2

NOTE 1 Stamp on top or side of jet denotes orifice diameter in thousands.

3.806 ROD, Carburetor Metering

62-63	CORVAIR w/Turbocharger (1st design)	3825232	w/3817245-3829180 (Carter 75-1612)	1
63	CORVAIR w/Turbocharger (2nd design)	3841358	w/3833038 (Carter 75-1623)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

64	CORVAIR w/Turbocharger	3851630	w/3844233	1
65	CORVAIR w/Turbo.	3869360	w/3856713 (Carter 75-1654)	1
65	CORSA		w/3873818 (Carter 75-1716),	
66	CORSA w/Turbo.	3877185	w/3880786	1
69	CORVAIR w/Roch. 1BC (6 cyl.)	7037974	w/7029014-15-17	1

3.807 ARM, Carburetor Metering Rod

62-66	CORVAIR w/Turbocharger	3708219	(Carter 111-59S)	1

3.810 SPRING, Carburetor Metering Rod

62-66	CORVAIR w/Turbo.	839397	(Carter 61-242)	1

3.814 NEEDLE UNIT, Carburetor Float

60-63	CORVAIR, F.C.	7023814	w/seat and gasket (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-0101-0102)	2
62-65	CORVAIR w/Turbo.	3841357	w/seat and gasket (Carter 25-721S) (w/3844233-3873818)	1
64-69	CORVAIR, F.C. (exc. Turbo.)	7023803	w/seat gasket (w/7024022-23-24-25-7025023-24-25-5226-6023-4-6-8004-05-7026-7036014-15-23-24)	A.R.
65-66	CORVAIR w/Turbo.	3888837	w/seat and gasket (w/3880786) (Carter 25-3925)	1

3.820 VALVE ASSY.—COMPENSATOR KIT—SCREW, Carburetor Idle Air Compensator

60-69	CORVAIR, F.C.	7015110	all bleed	1
69	CORVAIR w/Roch. 1BC	7035870	**COMPENSATOR KIT**, w/7029014-15	1
67	CORVAIR		**SCREW**,idle compensator w/7027200-1-2-3-10-11-12-13-7037200-1-2-3-10-11-12-13,	
68	CORVAIR w/4/1BC	7020926	w/7027026	2

3.822 SCREW, Carburetor Idle Adjusting

60-69	CORVAIR, F.C. (exc. Turbo.)	7016864	w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-01-01-4022-24-25-5023-4-5-6014-15-6023-4-7036014-15-23-24-7028005)	2
62-66	CORVAIR w/Turbo.	3825222	(chrome plated) w/3856713-3880786	1

3.823 SPRING, Carburetor Idle Adjusting Screw

60-67	CORVAIR, F.C.,			
67-69	CORVAIR w/Roch. Carb.	7011479		A.R.

3.825 SPRING—BALL—GUIDE—VALVE, Carburetor Pump Outlet Valve

60	CORVAIR	7002118	(w/7015300)	2
63-65	CORVAIR w/Turbo.	3708212	carb. pump check (w/3833038-3856713)	1
60-64	CORVAIR, F.C.	7002117	**BALL**, check ($^3/_{16}$)	2
60	CORVAIR	7003838	**GUIDE**, spring	1
61-68	CORVAIR, F.C. (exc. Turbo)		**VALVE**, discharge check (w/7019100-9101-9107-9110-9111-9117-7020100-0101-0102-4022-23-24-25-6023-4-7036014-15-23-24),	
69	CORVAIR w/2/1BC	7001674	w/7028005	A.R.

3.826 BALL, Carburetor Pump Inlet

65	CORVAIR w/Turbo.	1875237	check, (w/3856713-3873818) ($^5/_{32}$ dia.)	2

3.832 NEEDLE, Carburetor Pump Discharge Ball Check

62-65	CORVAIR w/Turbocharger	7000711	(Carter 17-51) (w/3851761-2-5581-3873818)	1

3.838 PLUNGER—CLIP—HOUSING ASSY.—ROD—SCREW—SPACER, Carburetor

60-68	CORVAIR, F.C. (exc. Turbo.)		(w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-01-02-3100-01-02-4022-23-24-25-5023-24-25-5226-227-6023-4-6-8004-05-7026-7036014-15-23-24),	
69	CORVAIR w/2/1BC	7024746	w/7028005	A.R.
62-66	CORVAIR w/Turbo.	3708229	w/rod (w/3817245-3829180-3829476-3833038-3844233-3856713-3873818-3880786)	1
60-64	CORVAIR, F.C.	7003137	**CLIP**, pump rod—(3.752)	1
62-66	CORVAIR, w/Turbo.	3825256	**HOUSING ASSY.**, pump diaphragm	1
61-68	CORVAIR, F.C. (exc. Turbo.)		**ROD**, pump (w/7019100-9101-9107-9110-9111-9117-7020100-0101-0102-4022-23-24-25-5023-24-25-5222-7-6023-4-6-8004-05-7026-7036014-15-23-24-6),	
69	CORVAIR	7020187	w/7027026-8005	A.R.
62-66	CORVAIR w/Turbocharger	3825247	**SCREW**, diaphragm housing w/washer	4

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65	CORVAIR w/Turbo.	3877186	SPACER, pump diaphragm (w/3873818)	1

3.841 SPRING, Carburetor Pump

60-67	CORVAIR, F.C.	836159	retaining clip (hairpin type P) (Carter 150-A-10)	2
60-68	CORVAIR, F.C. (exc. Turbo.),			
69	CORVAIR w/2/1BC	7017436	return	2
62-66	CORVAIR w/Turbo.	3828227	upper inner (w/3856713-3873818-3880786)	1
62-66	CORVAIR w/Turbo.	3825230	upper outer (w/3856713-3873818-3880786)	1
65-66	CORVAIR		carb. pump return,	
68-69	CORVAIR w/4/1BC	7027944	w/7027026	2
62-66	CORVAIR w/Turbo.	3708216	RETAINER, upper pump spring (w/3817245-3829180-3829476-3833038-3844233-3856713-3873818-3880786)	1

3.842 LEVER—SHAFT ASSY., Carburetor Pump

60-69	CORVAIR, F.C. (exc. Turbo.)	7015249	air horn pump, inside (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-0101-0102-4022-23-24-25-5023-4-5-5226-227-6023-4-6-7026-8005-7036014-15-23-24	A.R.
60-68	CORVAIR, F.C. (exc. Turbo.)		actuating (w/7015300-10-11-12-13-19-9100-01-07-10-11-17-7020100-0101-0102-4022-23-24-25-5023-24-25-5226-227-6023-4-6-7036014-15-23-24),	
69	CORVAIR	7015280	w/7027026-8005 (Note 1)	A.R.

NOTE 1. If replacement of this part is required on carbs. with two holes in the pump lever replace with 7020226 Pump Modification Kit on carb. 7019100.

61-67	CORVAIR, F.C. (exc. Turbo.) (1st design),			
68-69	CORVAIR	7020188	SHAFT ASSY., air horn pump, w/outside lever (w/7019100-9101-9107-9110-11-17-7020100-01-02-4022-23-24-25-5023-4-5-5226-27-6023-4-8004-05-7026-7046014-15-23-24-26)	2
67	CORVAIR w/A.I.R. (2nd design)	7035794	SHAFT ASSY., carb. air horn w/outside lever assy. (w/7036014-15)	1

3.843 LINK, Carburetor Pump Connector

62-65	CORVAIR w/Turbo.	3825242	(w/3817245-3829180-9476-3844233-3856713)	1

3.845 ARM, Carburetor Pump Lifter

62-64	CORVAIR w/Turbo.	3825241	(w/3817245-3829180-9476-3833038-3844233-3856713)	1
65-66	CORVAIR w/Turbo.	3877187	w/3873818-3880786	1

3.852 SCREW—VALVE, Carburetor Idle Vent

64-68	CORVAIR, F.C. (exc. Turbo.),			
67	CORVAIR w/Roch. Carb.,			
69	CORVAIR w/2/1BC	7012548	valve arm	A.R.
64-68	CORVAIR, F.C.,			
68	CORVAIR w/1BC	7007129	VALVE, w/7028004-05	A.R.
64-68	CORVAIR, F.C. (exc. Turbo.)		VALVE KIT (w/7024022-23-24-25-5023-4-5-6023-4-8004-05-7036014-15-23-24),	
69	CORVAIR w/2/1BC	7027892	w/7028005 (Note 1)	2

NOTE 1 Consists of arm, valve, and screw.

3.858 VALVE, Carburetor Power

65-66	CORVAIR, F.C. (exc. Turbo.),			
67-68	CORVAIR w/Roch. 1BC		primary (w/7025023-4-5-6023-4-8004-05-7036023-4-6014-5),	
69	CORVAIR w/2/1BC (6 cyl.) .	7029341	. . . . .	2

3.859 SPRING, Carburetor Power Vacuum Piston

62-66	CORVAIR w/Turbo.	7005868	diaphragm (w/3817245-3829180-9476-3833038-3856713-3873818-3880786)	1
64-66	CORVAIR w/Turbo.	3825252	fast idle cam (w/3856713-3873818-3880786)	1

3.862 BALL, Carburetor Pump

62-65	CORVAIR w/Turbo.	1875237	intake check ($^5/_{32}$") (stainless steel) (w/3817245-3829180-9476-3856713-3873818-3880786)—(3.826)	1

3.890 FILTER KIT—STRAP, Carburetor Fuel

62-66	CORVAIR w/Turbo.	5650899	(Note 1)	1

NOTE 1 If $^1/_8$" vent opening is not required, crimp and solder.

62-66	CORVAIR w/Turbo.	3840323	STRAP, filter ($^1/_{16}$" thick w/$^1/_2$" T tab)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

3.900 PUMP ASSY., Fuel

60-69	CORVAIR, F.C.	6415433	(stamped 5656774) (Note 1)	1

NOTE 1. Use with push rod 3797593 on 1960 and early 1961 models.

3.901 SCREW ASSY., Fuel Pump Mounting

60-69	CORVAIR, F.C.	6256367		1

3.904 SEAL—DIAPHRAGM, Fuel Pump Mounting

60-69	CORVAIR, F.C.	5622170	"O" ring	1
60-64	CORVAIR, F.C. (1st design)	5622169	**DIAPHRAGM** (used as gasket) ($^{15}/_{32}$" I.D.)—(3.910)	1
64-69	CORVAIR, F.C. (2nd design)	6413964	**DIAPHRAGM** (used as gasket) ($^{13}/_{16}$" I.D.) w/5656774—(3.910)	1

3.910 DIAPHRAGM, Fuel Pump Pulsator

60-64	CORVAIR, F.C. (1st design)	5622169	w/5594886-5621704-1776	1
64-69	CORVAIR, F.C. (2nd design)	6413964	w/5656774	1

3.925 KIT, Fuel Pump Repair

60-61	CORVAIR, F.C. (1st design)	5622391	w/5621704	1
61-63 64	CORVAIR, F.C. (2nd design), CORVAIR, F.C. (1st design)	5624260	w/5621776	1
64-69	CORVAIR, F.C. (2nd design)	6415601	w/5656774	1

3.927 SPRING, Fuel Pump

60-69	CORVAIR, F.C.	6256365	push rod return	1

3.935 ROD ASSEMBLY—ECCENTRIC—SPACER, Fuel Pump

60-61	CORVAIR, F.C. (1st design)	6256495	push, w/spring guide (w/5621704) ($3^{5}/_{8}$ O.L.)	1
61-69	CORVAIR, F.C. (2nd design)	3797593	push, w/spring guide (w/5621776) ($3^{7}/_{8}$ O.L.)	1
60-69	CORVAIR, F.C.	6256870	**ECCENTRIC,** operating	1
60-69	CORVAIR, F.C.	6256370	**SPACER,** eccentric to dist. drive gear crank	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 4.000

TRANSMISSION—

BRAKES

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

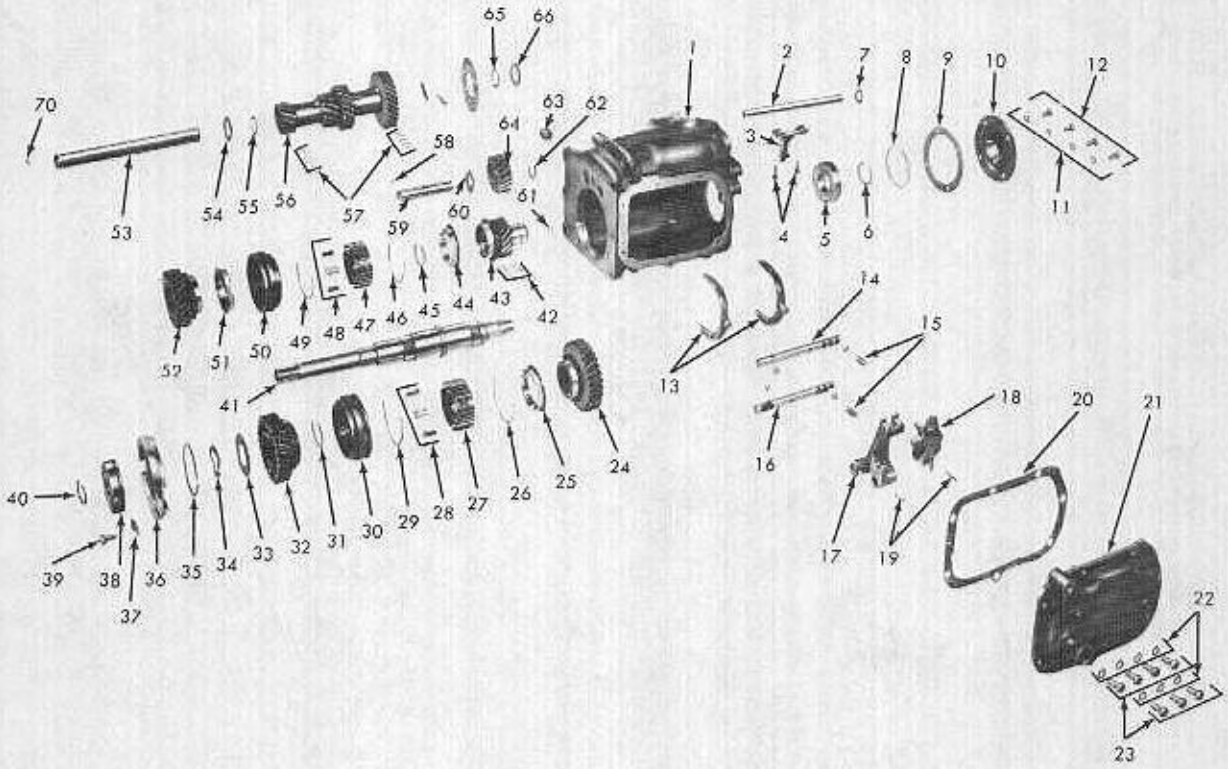

1966-69 CORVAIR THREE SPEED TRANSMISSION—EXPLODED

1.	4.103	CASE ASSY.	3859944	36.	4.317	RETAINER	3859983
2.	4.309	SHAFT	3859969	37.	4.317	LOCK	3864499
3.	4.302	SELECTOR	3859949	38.	4.408	BEARING ASSY.	907810
4.	8.900	SCREW (1/4—28 x 3/4)		39.	8.900	BOLT (5/16—18 x 3/4)	
5.	4.355	BEARING ASSY.	907762	40.	4.412	RING	3707189
6.	4.376	RING	3709351	41.	4.403	SHAFT	3859980
7.	4.313	SEAL ASSY.	3866719	42.	4.352	ROLLER	7451240
8.	4.376	RING	590849	43.	4.351	GEAR	3859987
9.	4.358	GASKET	3839607	44.	4.383	RING	3859027
10.	4.356	RETAINER	3859988	45.	4.384	RING	3859025
11.	8.932	L/WASHER (Ext. tooth—5/16)		46.	4.413	SPRING	3859024
12.	8.900	BOLT (5/16—18 x 3/4)		47.	N.S.S.	HUB, Part of 4.380 Sync. Assy.	
13.	4.303	FORK	3859960	48.	4.384	KEY	3871250
14.	4.309	SHAFT	3859961	49.	4.383	RING	3859027
15.	4.311	SPRING	3709310	50.	N.S.S.	SLEEVE, Part of 4.380 Sync. Assy.	
16.	4.309	SHAFT	3859961	51.	4.383	RING	3859027
17.	4.303	HEAD	3859948	52.	4.395	GEAR	3859019
18.	4.303	HEAD	3859962	53.	4.428	SHAFT	3859005
19.	8.939	PIN (3/16 x 7/8)		54.	4.423	WASHER	3859004
20.	4.109	GASKET	3858990	55.	4.423	WASHER	3859006
21.	4.105	COVER	3859956	56.	4.421	GEAR ASSY.	3859951
22.	8.931	L/WASHER (5/16 Med.)		57.	4.431	ROLLER	435847
23.	8.900	BOLT (5/16—18 x 3/4)		58.	8.960	KEY (1/8 x 5/8)	
24.	4.417	GEAR	3859014	59.	4.433	SHAFT	3859012
25.	4.383	RING	3859027	60.	4.437	WASHER	3859011
26.	4.413	SPRING	3859024	61.	8.934	RING (Internal—13/32 bore dia.)	
27.	N.S.S.	HUB, Part of 4.380 Sync. Assy.		62.	4.435	RING	9414486
28.	4.384	KEY	3871250	63.	8.971	PLUG (Sq. Hd. 1/2—14)	
29.	4.413	SPRING	3859024	64.	4.430	GEAR ASSY.	3859007
30.	N.S.S.	SLEEVE, Part of 4.380 Sync. Assy.		65.	4.423	WASHER	3859006
31.	4.384	RING	3859025	66.	4.423	WASHER	3859004
32.	4.417	GEAR ASSY.	3859015	67.		Removed-No Longer Necessary	
33.	4.419	WASHER	3870205	68.		Removed-No Longer Necessary	
34.	4.419	WASHER	3884595	69.		Removed-No Longer Necessary	
35.	4.412	RING	3707174	70.	8.960	KEY (1/8 x 5/8)	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

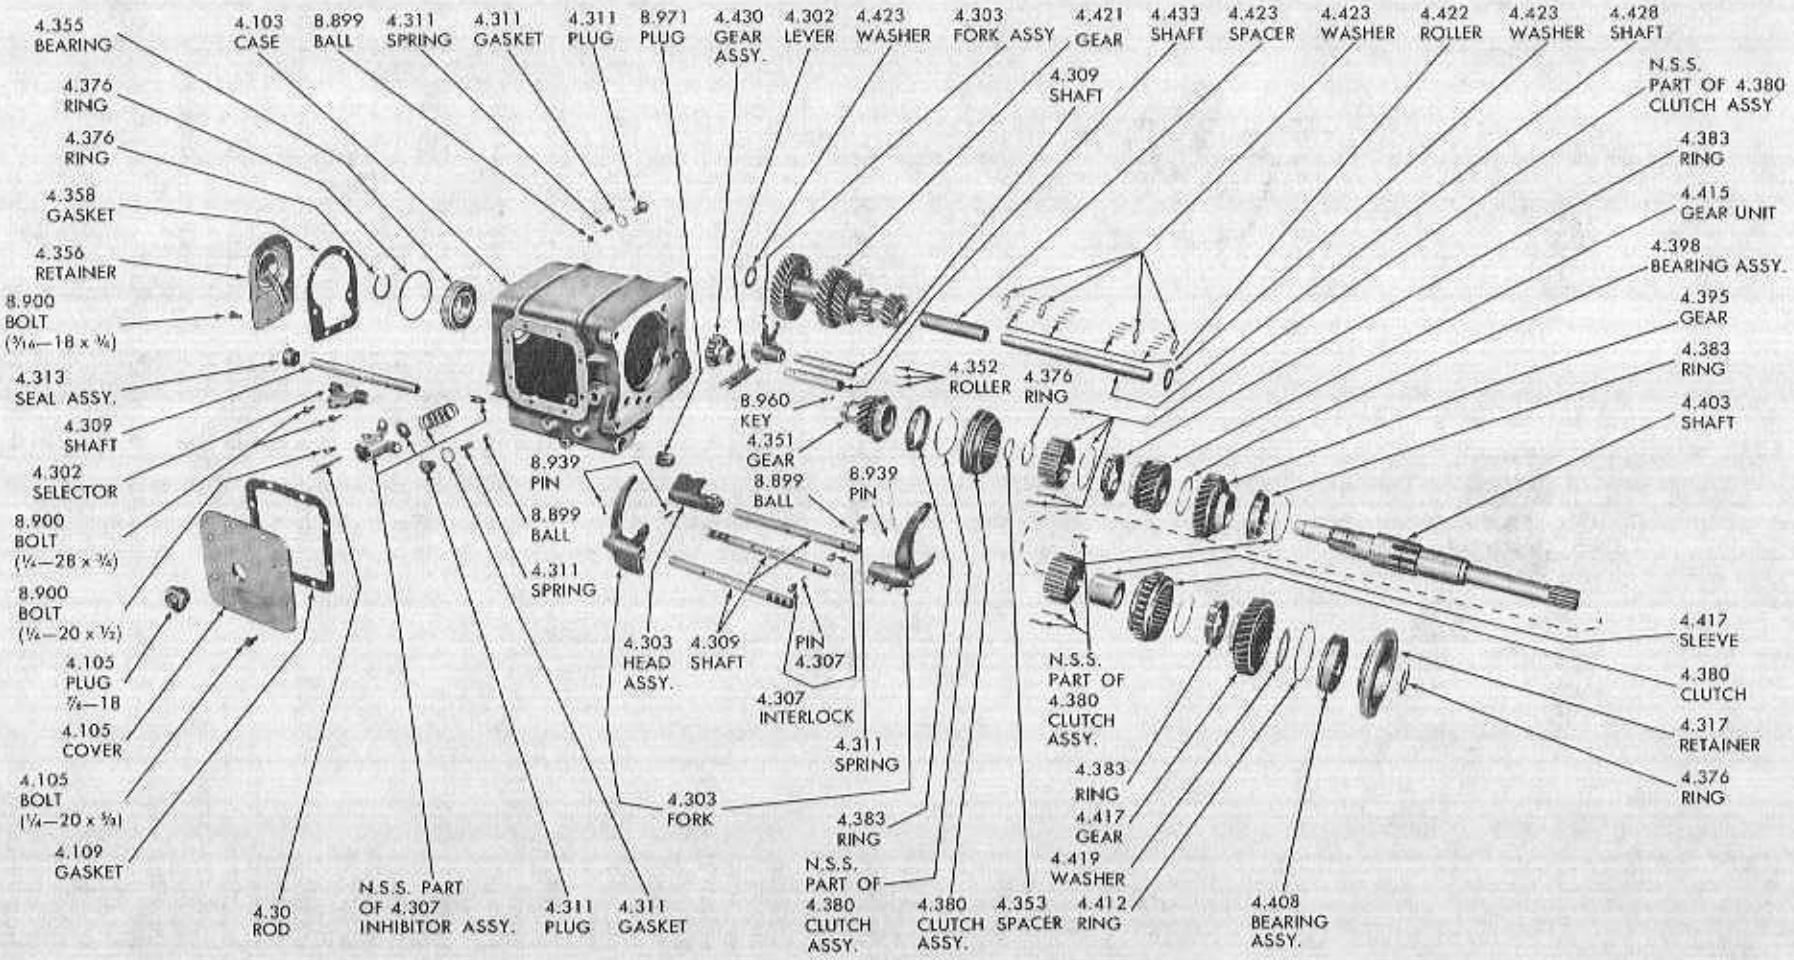

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

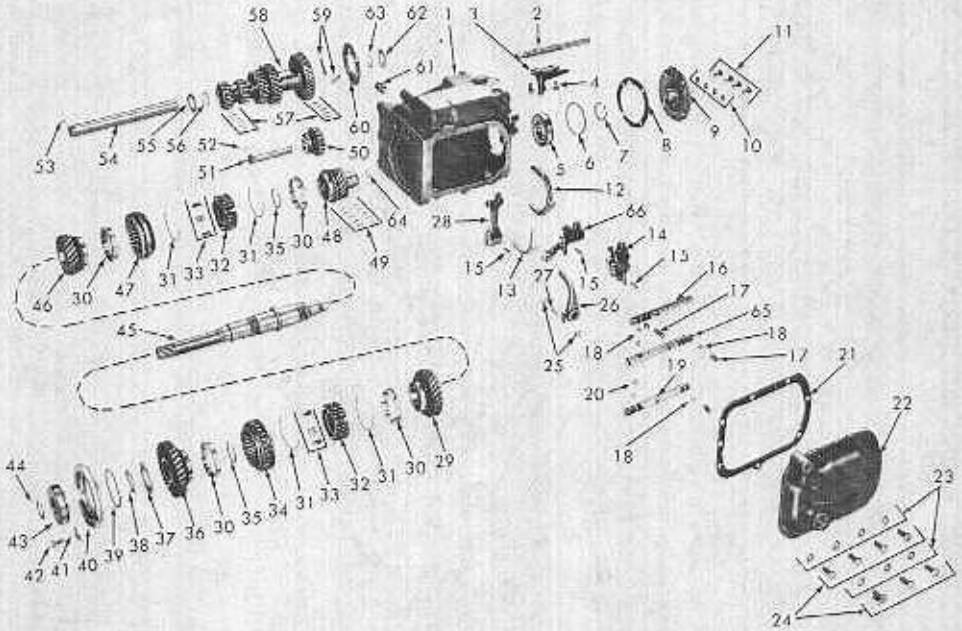

1966-69 CORVAIR 4-SPD. TRANS.—EXPLODED

1.	4.103	CASE	3874333	35.	4.384	RING	3859025
2.	4.309	SHAFT	3859969	36.	4.417	GEAR	3859981
3.	4.302	SELECTOR	3859968	37.	4.419	WASHER	3870205
4.	8.900	SCREW (1/4–28 x 3/4)		38.	4.419	WASHER	3884595
5.	4.355	BEARING ASSY.	907929	39.	4.412	RING	3707174
6.	4.376	RING	590849	40.	4.317	RETAINER	3859983
7.	4.376	RING	3709351	41.	4.317	LOCK	3864499
8.	4.358	GASKET	3839607	42.	8.900	BOLT (5/16–18 x 3/4)	
9.	4.356	RETAINER	3859968	43.	4.408	BEARING ASSY.	907810
10.	8.932	L/WASHER (Ext. tooth–5/16)		44.	4.412	RING	3707189
11.	8.900	BOLT (5/16–18 x 3/4)		45.	4.403	SHAFT	3859980
12.	4.303	FORK	3859960	46.	4.415	GEAR	3859986
13.	4.303	FORK	3859957	47.	N.S.S.	SLEEVE–Part of 4.380 SYNCHRONIZER ASSY.	
14.	4.303	HEAD	3859962	48.	4.351	GEAR	3859987
15.	8.939	PIN (3/16 x 7/8)		49.	4.352	ROLLER	7451240
16	4.309	SHAFT	3859958	50.	4.430	GEAR ASSY.	3859975
17.	4.311	SPRING	3709310	51.	4.433	SHAFT	3859978
18.	8.899	BALL (3/8)		52.	8.960	KEY (1/8 x 5/8)	
19.	4.309	SHAFT	3859964	53.	8.960	KEY (1/8 x 5/8)	
20.	4.307	PIN	3775038	54.	4.428	SHAFT	3859005
21.	4.109	GASKET	3858990	55.	4.423	WASHER	3859004
22.	4.105	COVER	3859956	56.	4.423	WASHER	3859006
23.	8.931	L/WASHER (5/16 Medium)		57.	4.422	ROLLER	435847
24.	8.900	BOLT (5/16–18 x 3/4)		58.	4.421	GEAR ASSY.	3859970
25.	8.934	RING (#3 External–1/4 dia. shaft)		59.	N.S.S.	SPRING–Part of 4.421 GEAR ASSY.	
26.	4.302	LEVER	3859965	60.	N.S.S.	PLATE–Part of 4.421 GEAR ASSY.	
27.	4.302	PIN	3859973	61.	8.971	PLUG (Sq. Hd. 1/2–14)	
28.	4.303	HEAD	3859963	62.	4.423	WASHER	3859004
29.	4.395	GEAR	3859982	63.	4.423	WASHER	3859006
30.	4.384	RING	3859027	64.	8.934	RING (Internal–13/32 bore dia.)	
31.	4.413	SPRING	3924768	65.	4.309	SHAFT	3859961
32.	N.S.S.	HUB–Part of 4.380 SYNCHRONIZER ASSY.		66.	4.303	HEAD	3859959
33.	4.384	KEY	3871250				
34.	N.S.S.	SLEEVE–Part of 4.380 SYNCHRONIZER ASSY.					

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

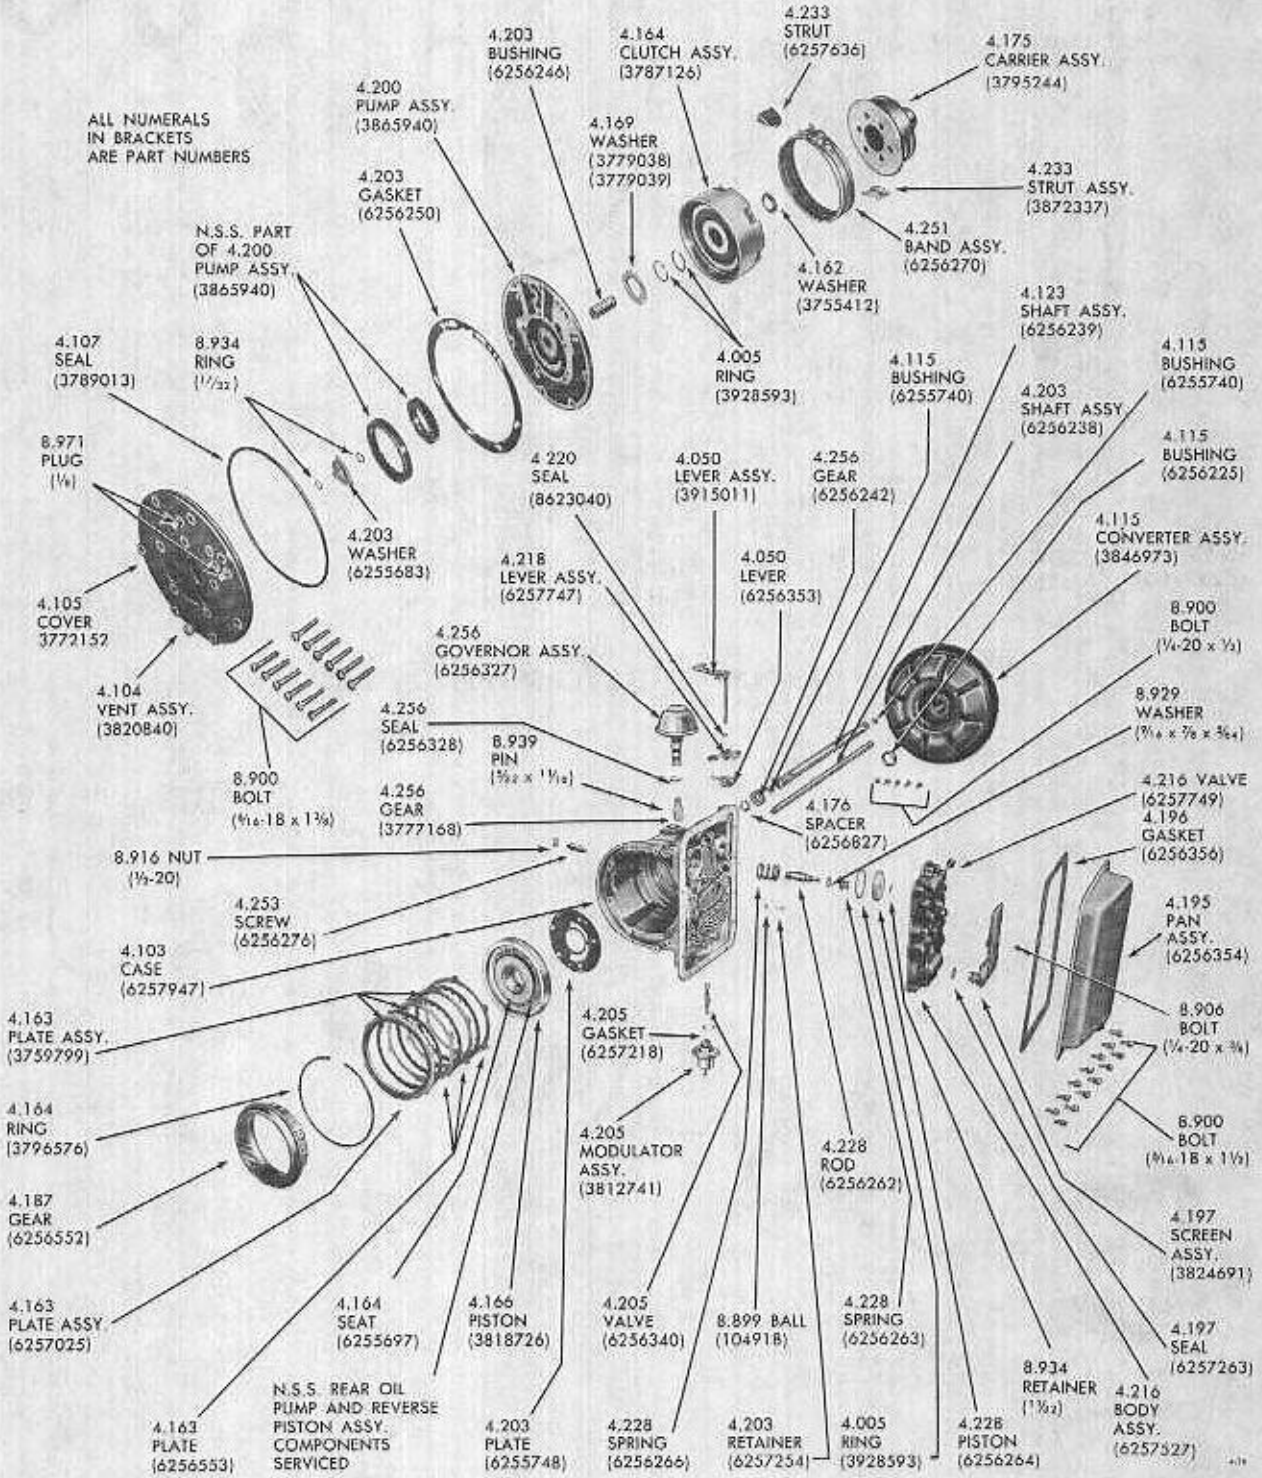

1960-69 CORVAIR POWERGLIDE TRANSMISSION—EXPLODED (TYPICAL)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

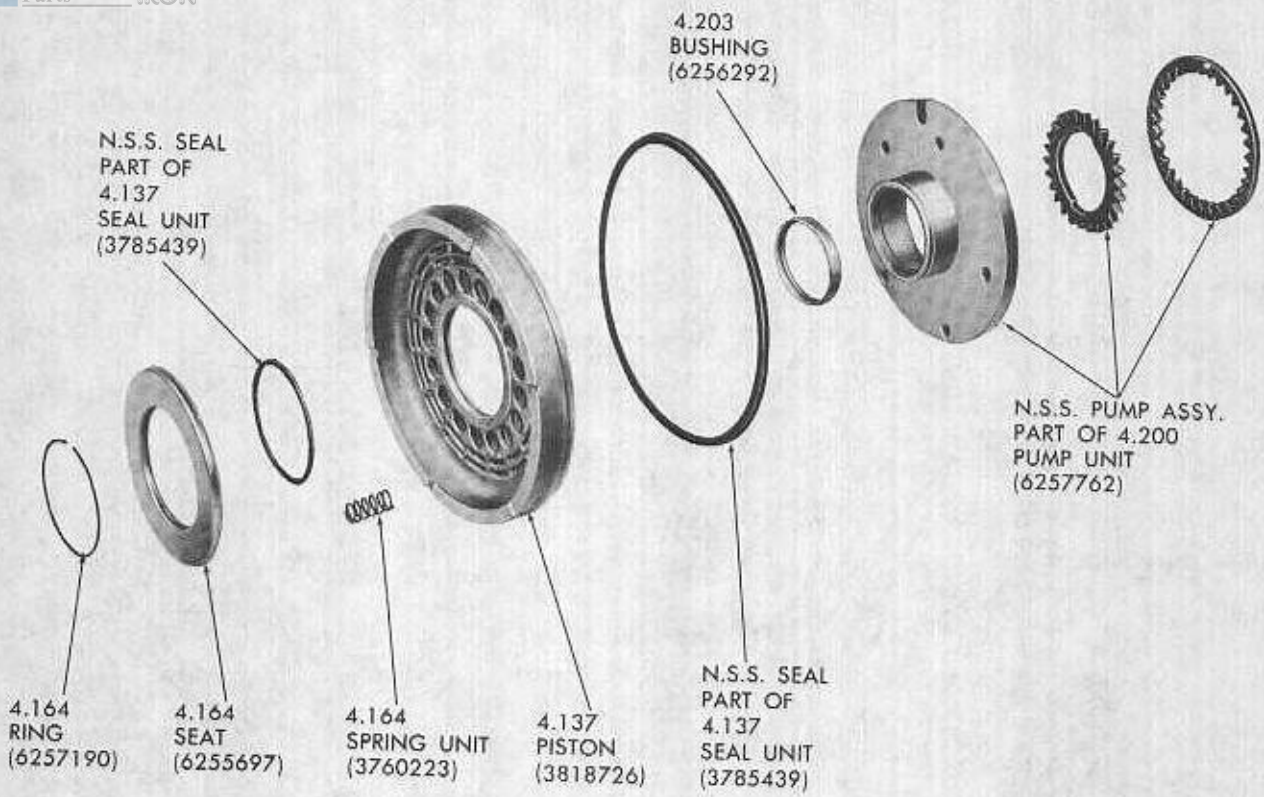

REAR OIL PUMP & REVERSE PISTON ASSY.

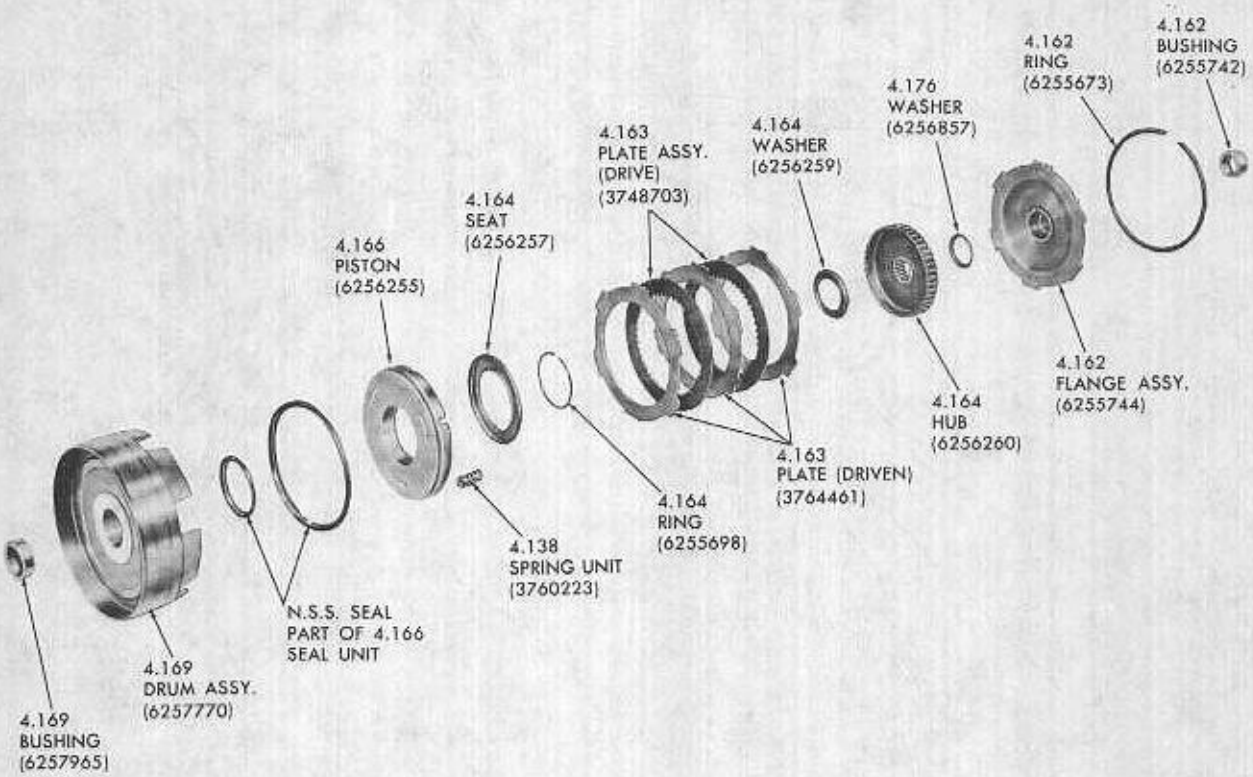

CLUTCH DRUM PLATE AND HOUSING

1960-69 CORVAIR POWERGLIDE TRANSMISSION REVERSE PISTON AND CLUTCH DRUM (TYPICAL)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

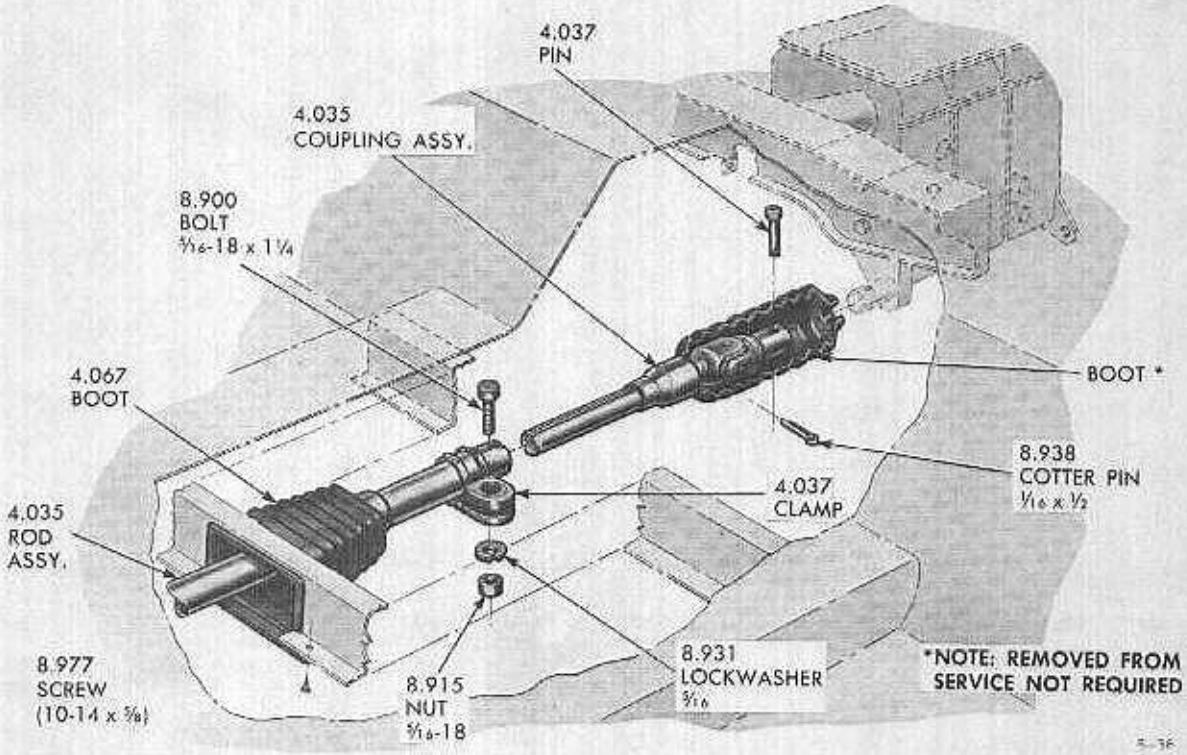

THREE SPEED TRANSMISSION CONTROL LINKAGE

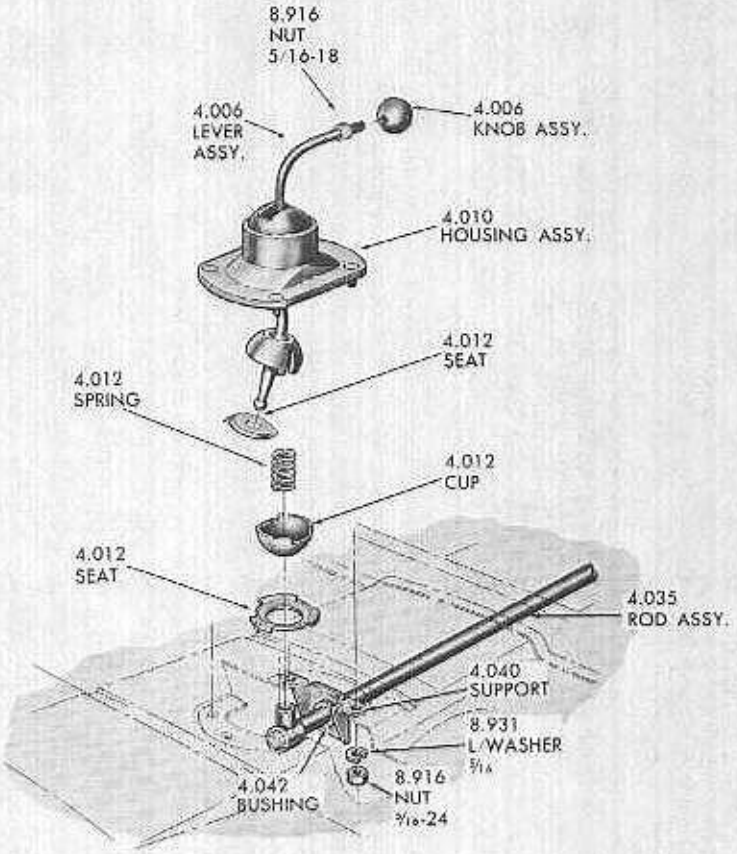

1960-64 CORVAIR GEARSHIFT CONTROL DETAILS (TYPICAL)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

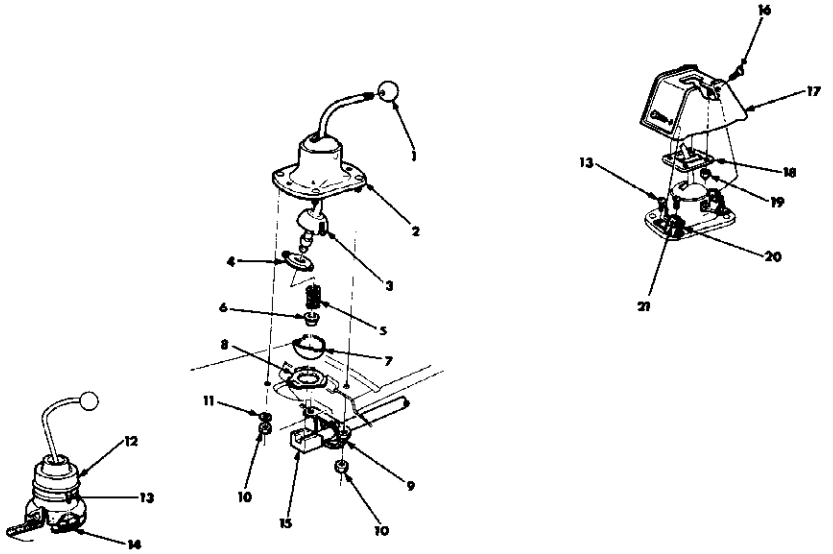

1965-69 CORVAIR—TRANSMISSION GEARSHIFT CONTROL

1.	4.006	KNOB	3788202	12.	4.015	BOOT (exc. Corsa)	3862494
2.	4.010	HOUSING ASSEMBLY	3869810	13.	8.977	SCREW (8—32 x 3/4)	
3.	4.006	LEVER ASSY.—(exc. Corsa)	3872870	14.	4.015	RETAINER (exc. Corsa)	3859631
	4.006	LEVER ASSY.—(Corsa)	3872872	15.	4.035	ROD ASSEMBLY	3879762
4.	4.012	SEAT	3859286	16.	N.L.	SCREW	
5.	4.012	SPRING	3851266	17.	4.017	COVER (Corsa)	3861871
6.	4.008	BUSHING	3859288	18.	4.028	SEAL ASSY. (Corsa)	3861872
7.	4.012	CUP	3859287	19.	8.921	NUT (1/8 Stud)	
8.	4.012	SEAT	3787056	20.	4.017	BRACKET	3861845
9.	N.S.	SUPPORT		21.	8.147	"J" NUT (1/8)	
10.	8.917	NUT (5/16—24)					
11.	8.929	WSR. (11/32 I.D. x 5/8 O.D. x 1/16 thk.)					

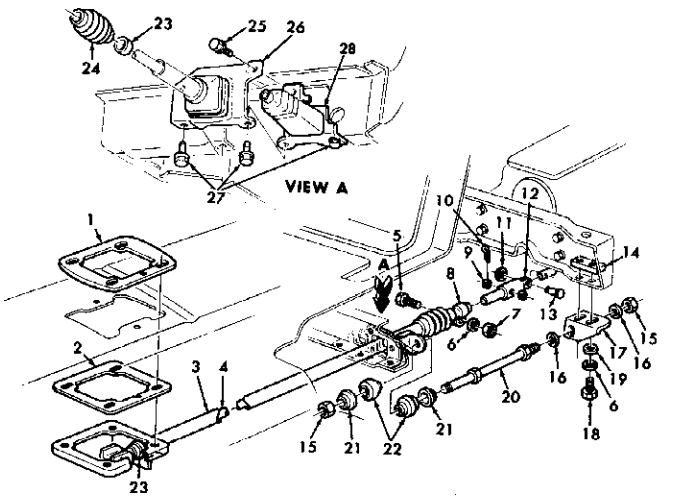

1965-69 CORVAIR—TRANSMISSION TUBE, BRACKET & ROD ASSY.

1.	4.015	SEAL—Upper	3872876	16.	8.929	WASHER	
2.	4.015	SEAL—Lower	3872878	17.	4.027	BRACKET	3869451
3.	4.025	TUBE ASSY.	3869804	18.	8.900	BOLT (5/16—18 x 7/8)	
4.	4.035	ROD ASSY.	3869805	19.	8.929	WASHER	
5.	8.900	BOLT (5/16—18 x 1-1/4)		20.	4.027	LINK	3869809
6.	8.931	L. WASHER (5/16)		21.	7.245	RETAINER	5544049
7.	8.915	NUT (5/16—18)		22.	7.388	GROMMET	3910700
8.	6.234	CLAMP	3742920	23.	4.042	BUSHING	3869452
9.	4.037	PIN	3796886	24.	4.067	BOOT	3869806
10.	8.938	C. PIN (1/16 x 1/2)		25.	8.977	SCREW (#8—18 x 1-1/2) (Type AB)	
11.	8.929	WASHER					
12.	4.035	COUPLING ASSY.	3859294	26.	4.067	BOOT ASSY.—Trans.	3869808
13.	4.037	PIN	3827306	27.	8.977	SCREW (#8—18 x 1/2) (Type BA)	
14.	4.037	NUT	3869817				
15.	8.917	NUT (3/8—16)		28.	0.797	BOOT ASSY.—Clutch	3869807

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

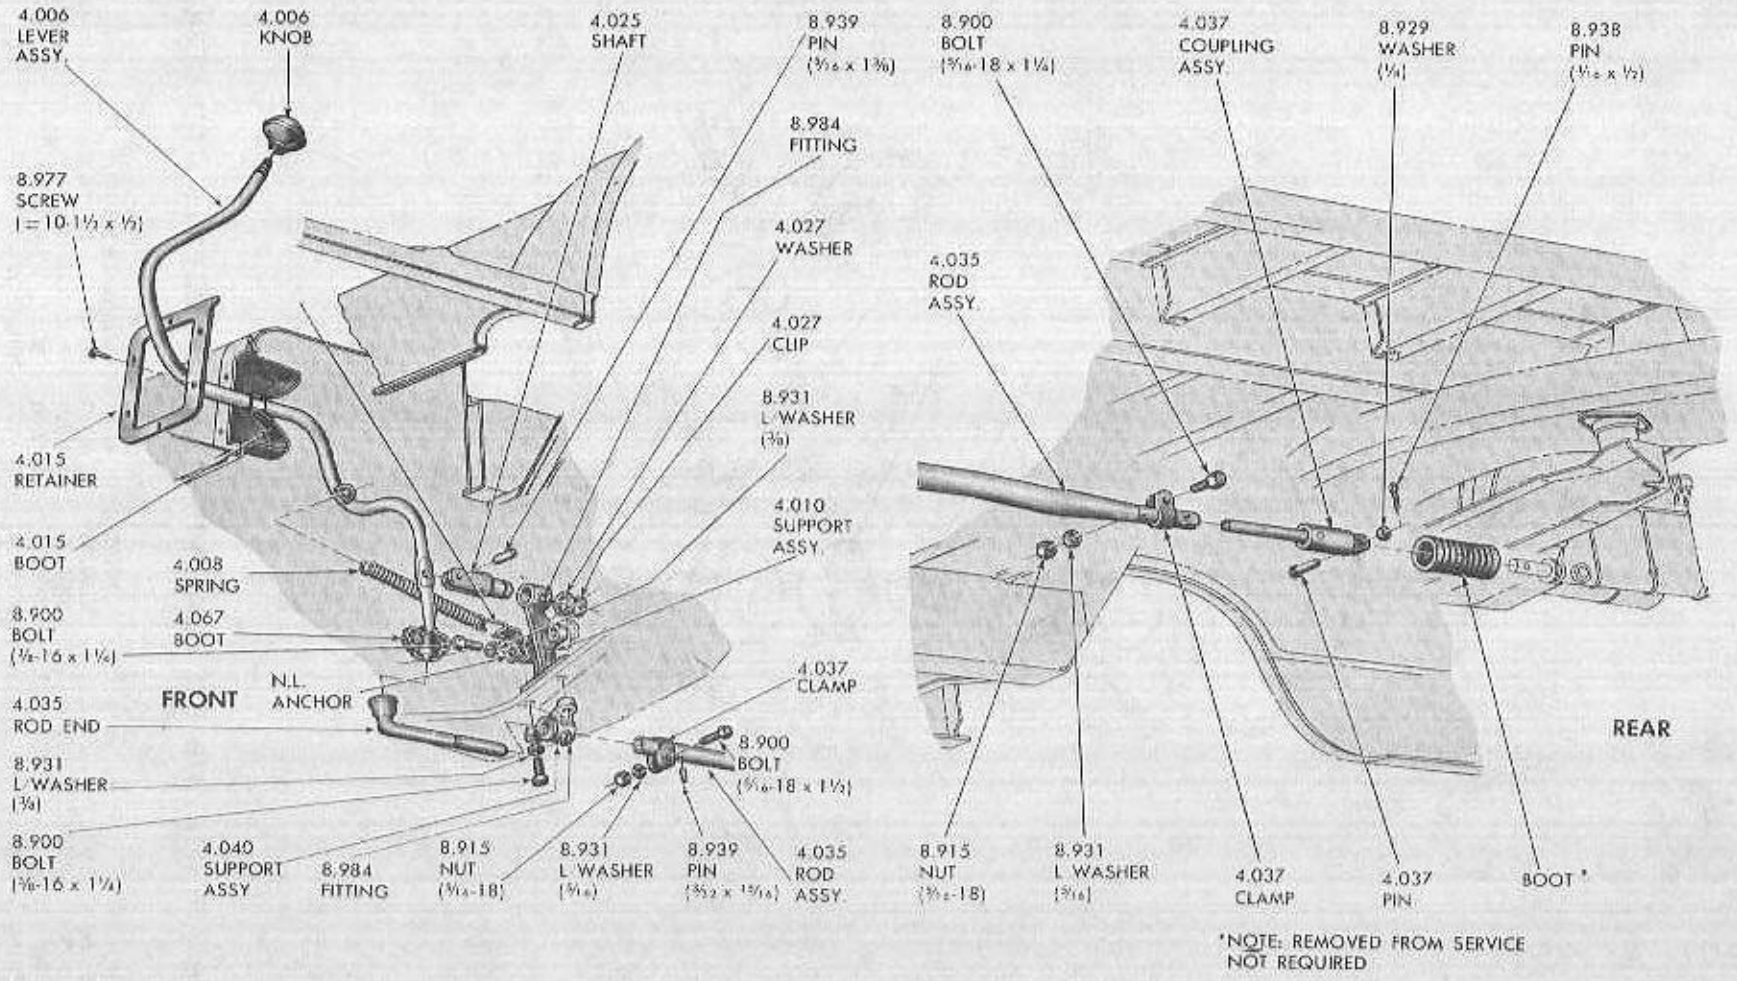

*NOTE: REMOVED FROM SERVICE NOT REQUIRED

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

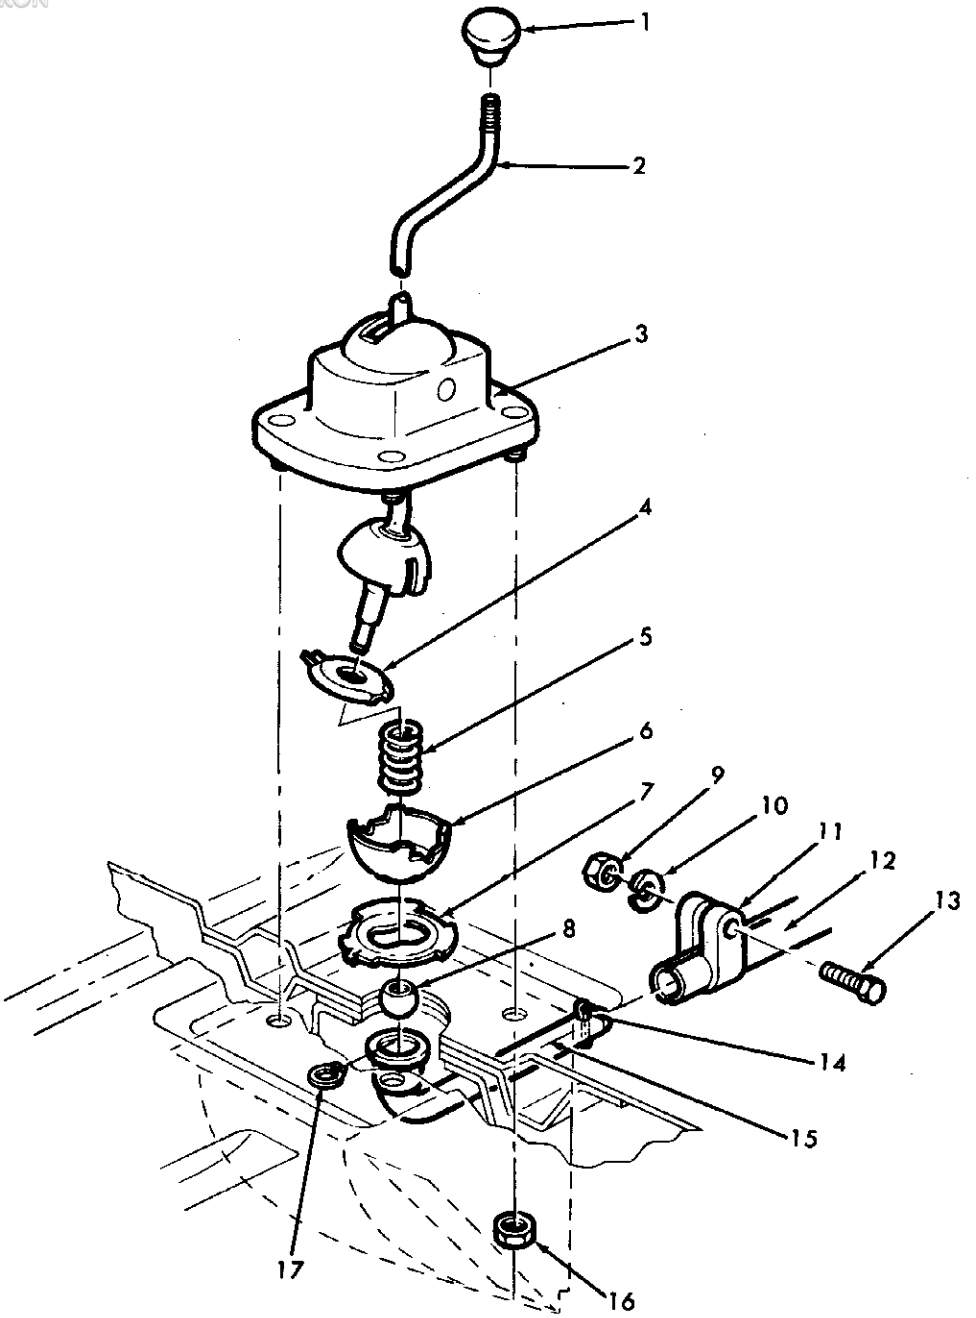

MID–1963-65 CORVAIR F.C. GEARSHIFT CONTROL DETAILS (2ND DESIGN)

1. 4.006	KNOB	374993	10. 8.931	L/WASHER, (5/16)		
2. 4.006	LEVER ASSEMBLY	3834006	11. 4.022	STOP		3767107
3. 4.010	HOUSING ASSEMBLY	3834033	12. 4.019	ROD ASSEMBLY		3834007
4. 4.012	SEAT	3859286	13. 8.900	BOLT, (5/16–18 x 1-1/2)		
5. 4.012	SPRING	3851266	14. 8.939	PIN (3/32 x 15/16)		
6. 4.012	CUP	3859288	15. 4.019	END		3786269
7. 4.012	SEAT	3787056	16. 8.917	NUT, (5/16–24)		
8. 4.008	BALL	3834008	17. 8.934	RING, (5/16)		
9. 8.915	NUT, (5/16–18)					

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

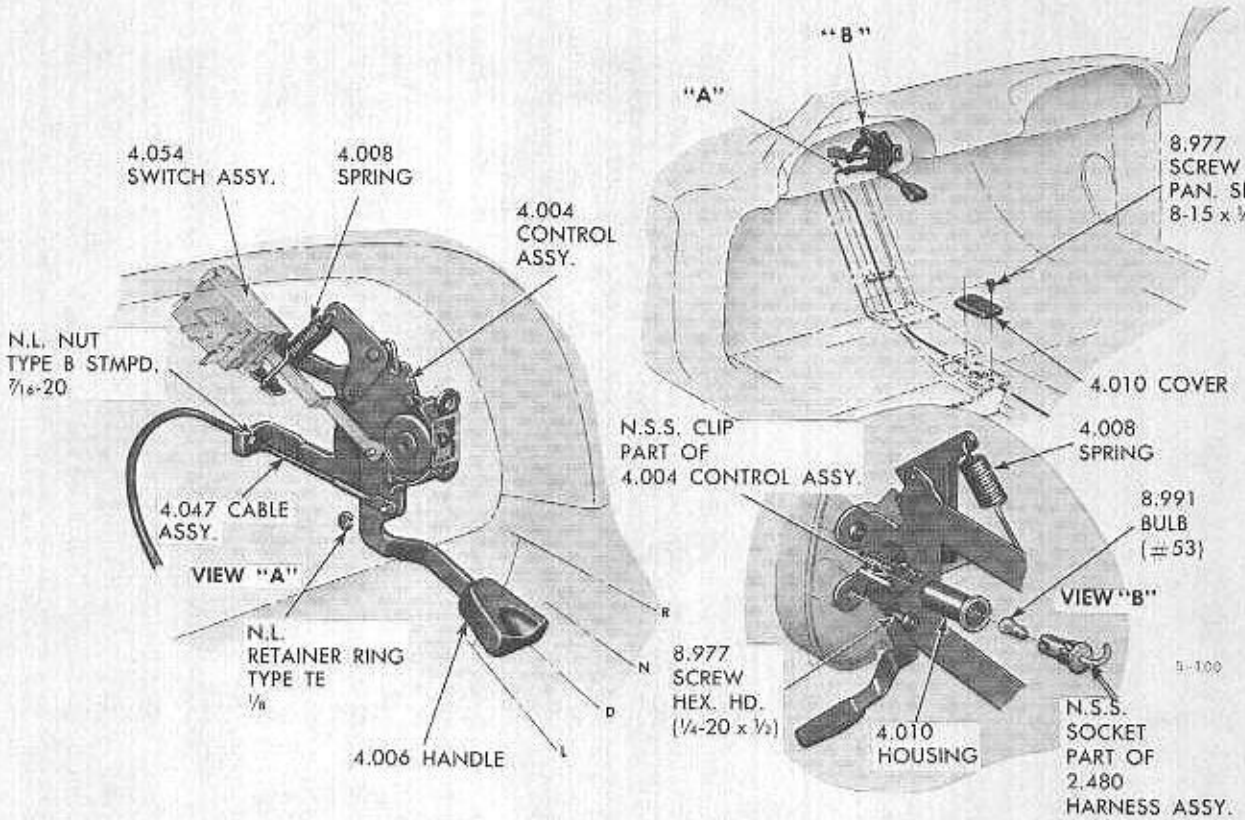

1961-64 CORVAIR AUTOMATIC TRANSMISSION CONTROL CABLE

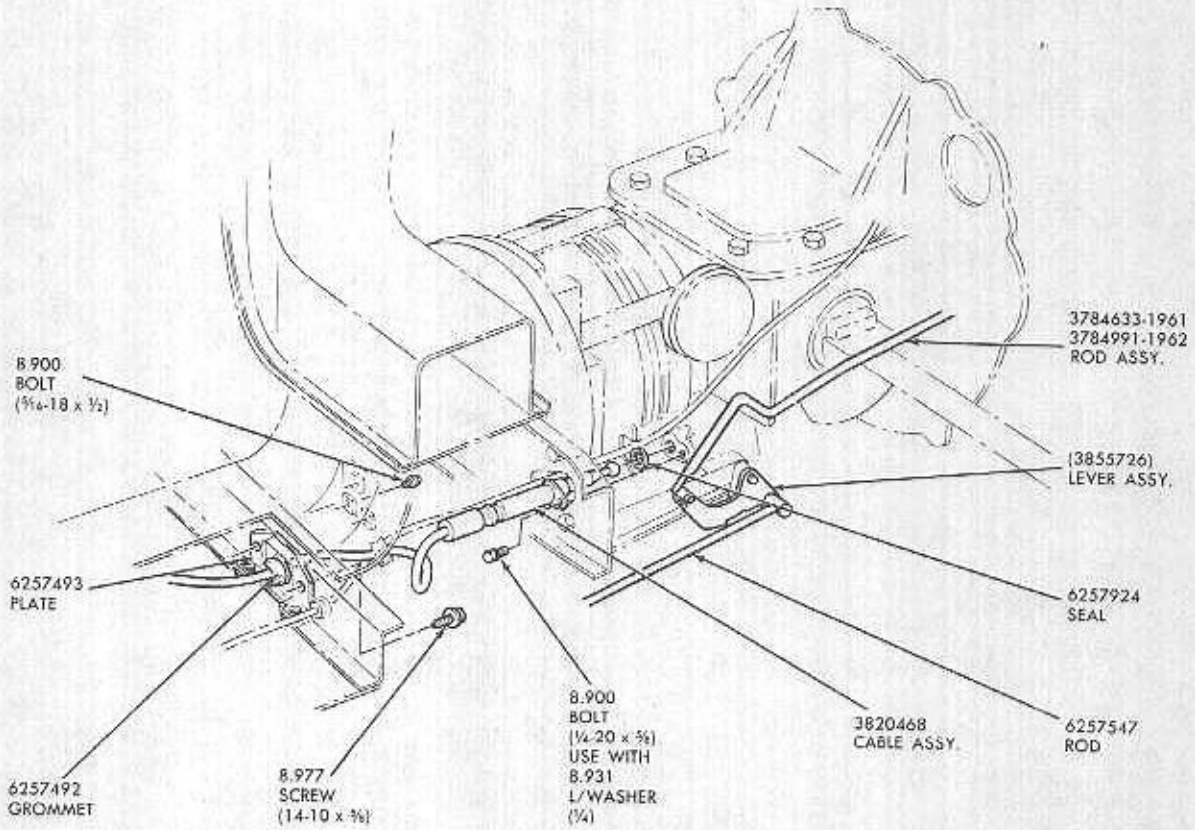

1960-64 CORVAIR AUTO. TRANSMISSION CONTROL AND LINKAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

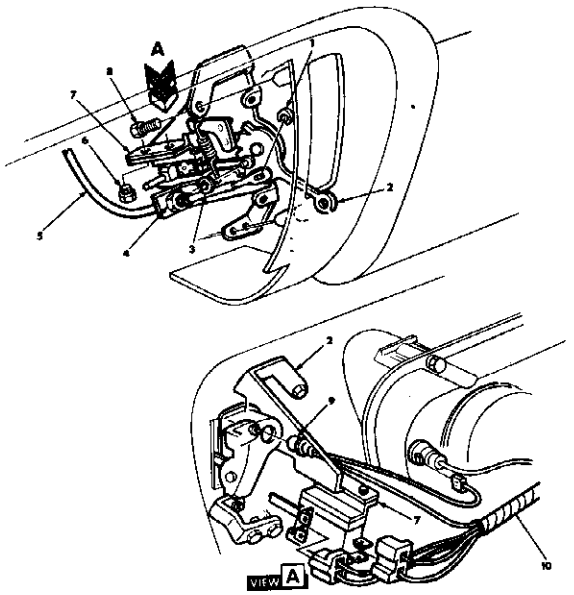

1965-69 CORVAIR POWERGLIDE CONTROL LEVER & NEUTRAL SAFETY SWITCH

1.	8.934	RING (1/8)		6.	8.906	SCREW ASSY. (8–32 x 1/4)	
2.	4.004	LEVER & BRACKET ASSY.	7028980	7.	2.698	SWITCH ASSY.	1993691
3.	8.934	RING (1/8 dia.)		8.	8.977	SCREW (5/8–18)	
4.	8.921	NUT (7/16–20)		9.	8.991	BULB (#1445)	
5.	4.047	CABLE ASSY.	3861045	10.	4.054	HARNESS ASSY.	2988024

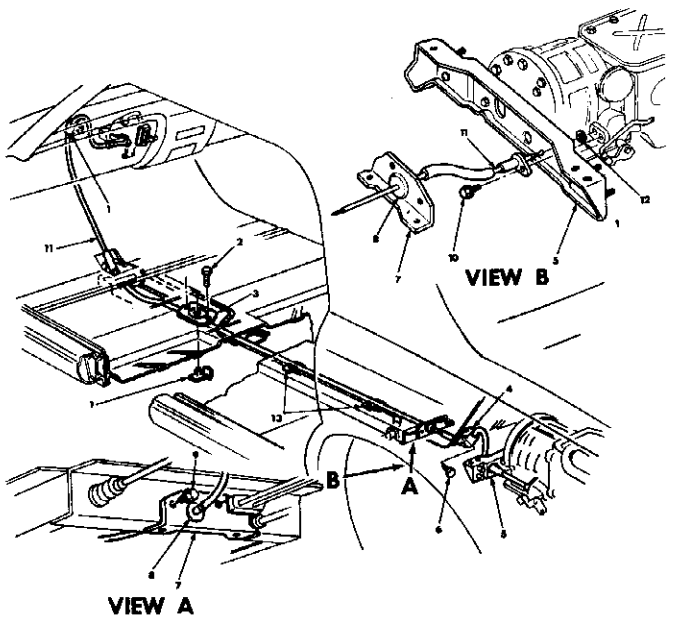

1965-69 CORVAIR–AUTO. TRANSMISSION CONTROL CABLE

1.	4.047	CLIP	3772324	8.	4.047	GROMMET	6257492
2.	8.977	SCREW (8–18 x 3/8)		9.	8.977	SCREW (8–18 x 1/2)	
3.	4.010	COVER	3869815	10.	8.900	SCREW (1/4–20 x 5/8)	
4.	4.866	CLIP	3751041	11.	4.047	CABLE–CONTROL	3861045
5.	4.081	SUPPORT ASSY.	3868693	12.	4.047	SEAL–"O" RING	6257924
6.	8.977	SCREW (10–12 x 5/8)		13.	N.S.	CLIP	
7.	4.047	PLATE	3869453				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

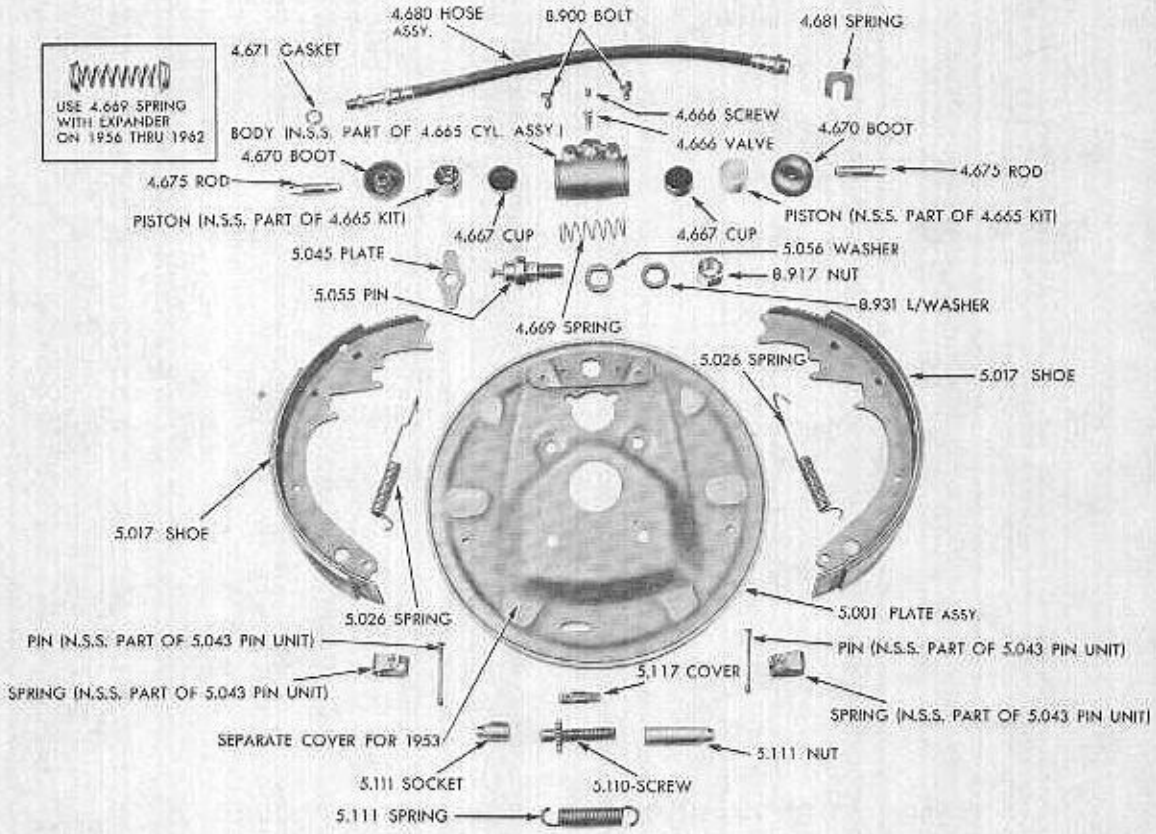

FRONT BRAKE PARTS (DUO SERVO)

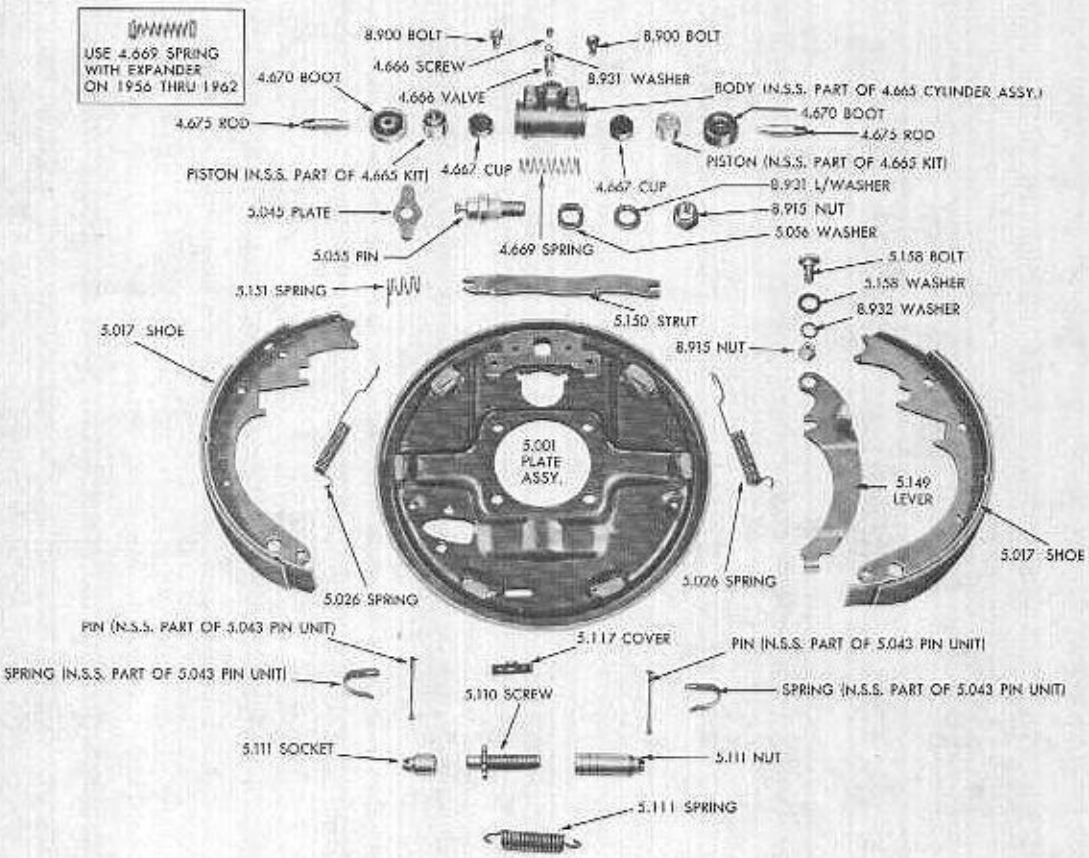

REAR BRAKE PARTS (DUO SERVO)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Reproduction DETROIT Parts IRON

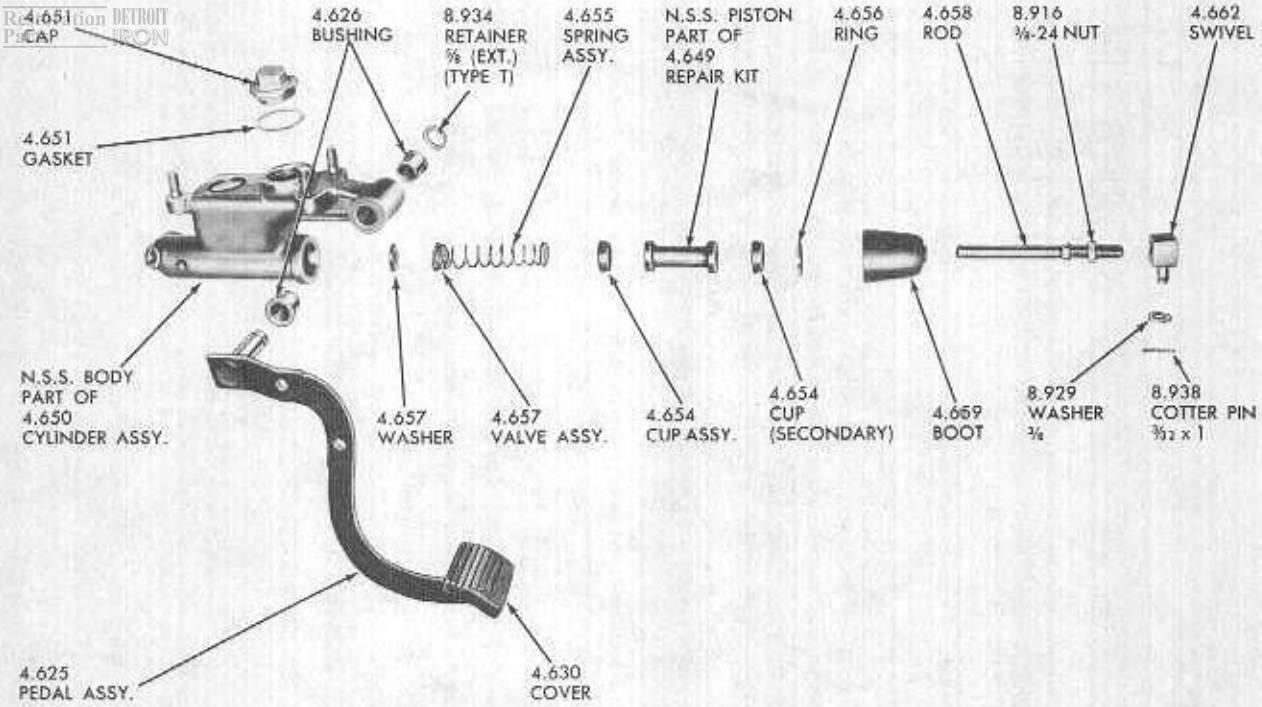

1960-61 CORVAIR BRAKE CYLINDER—EXPLODED

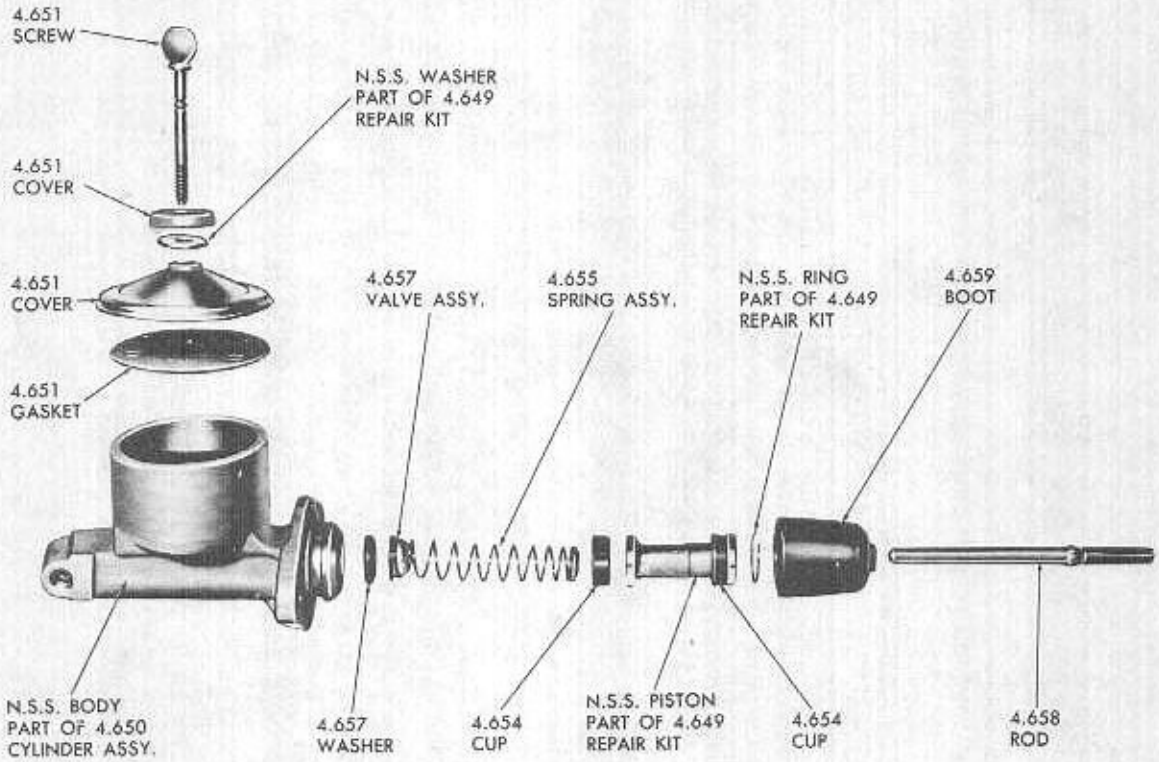

1962-66 CORVAIR MASTER CYLINDER—EXPLODED

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

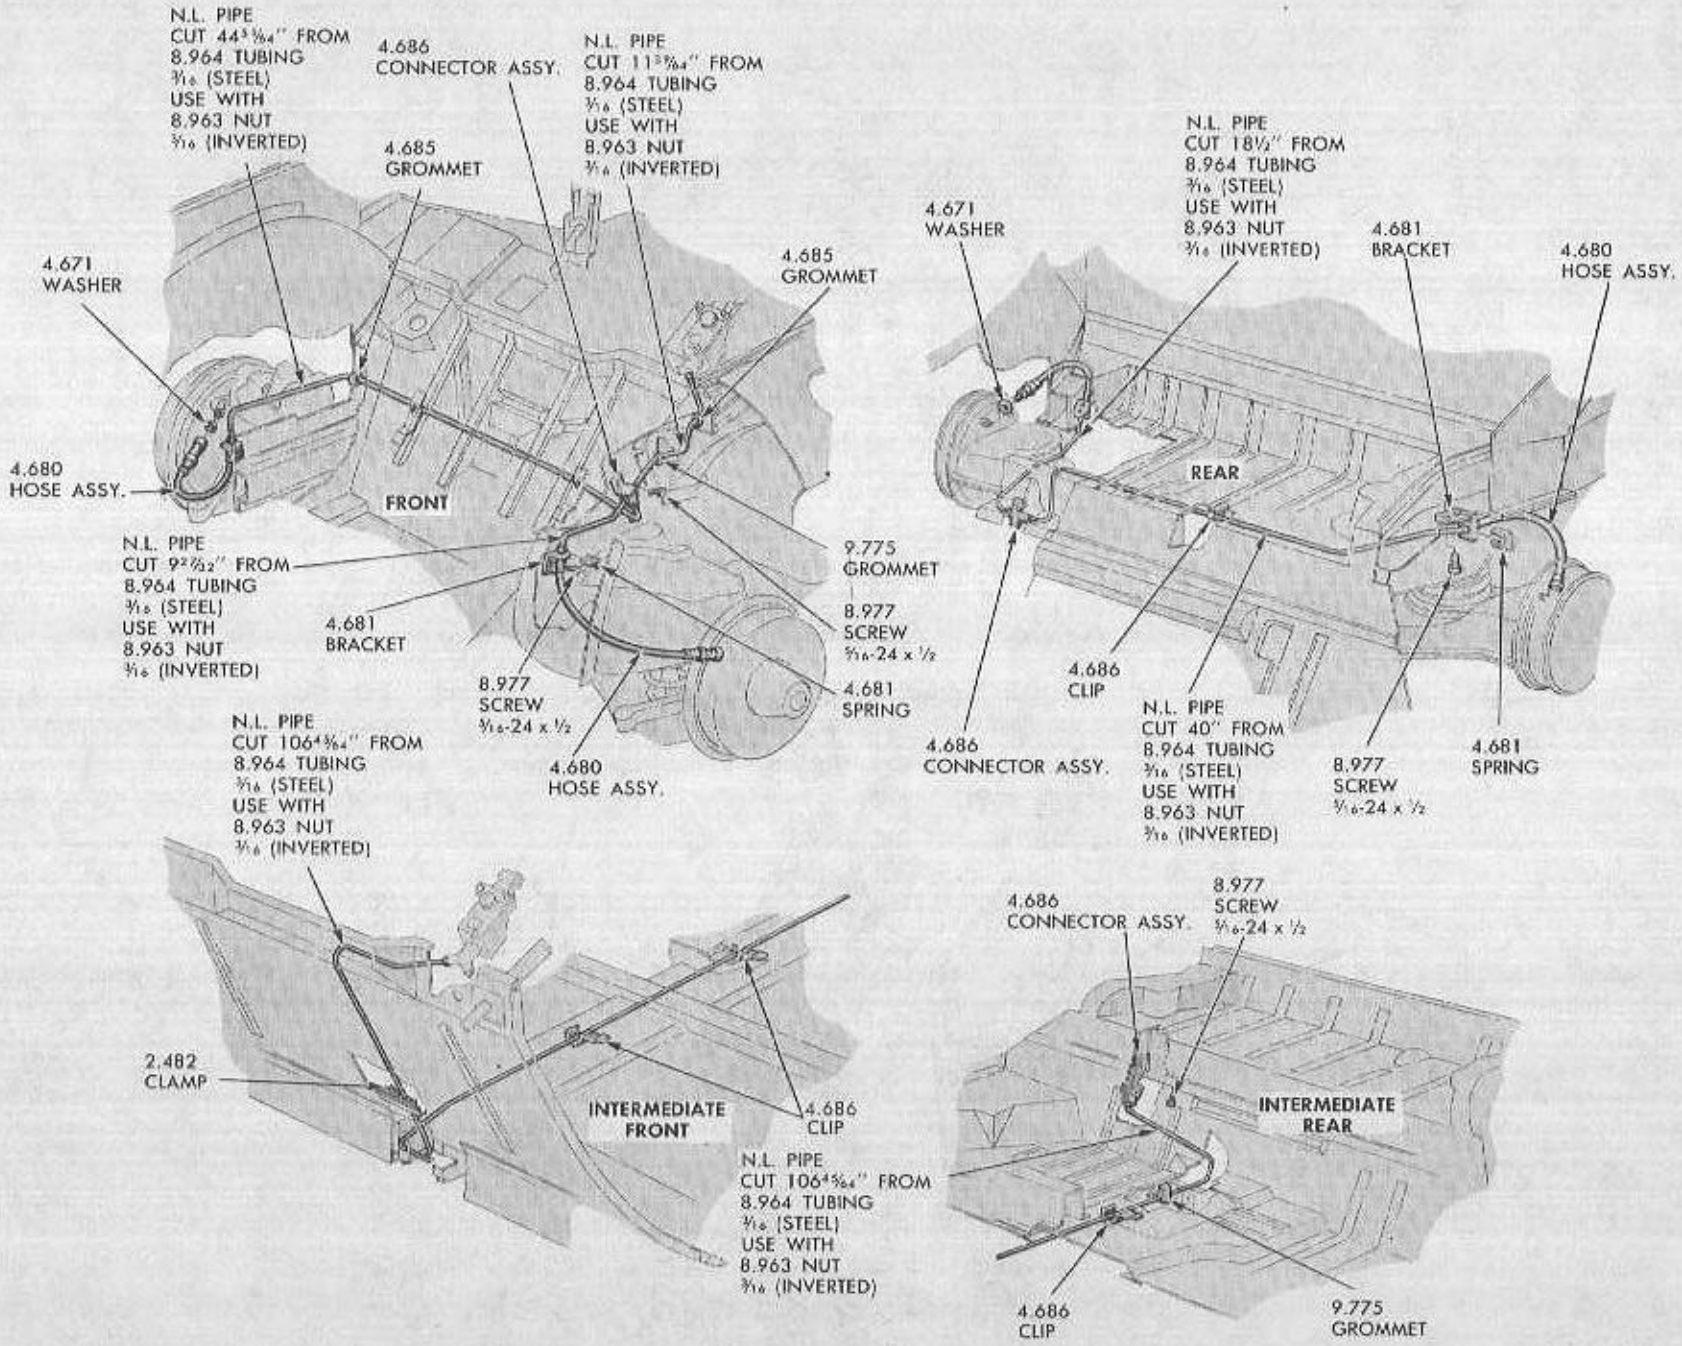

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

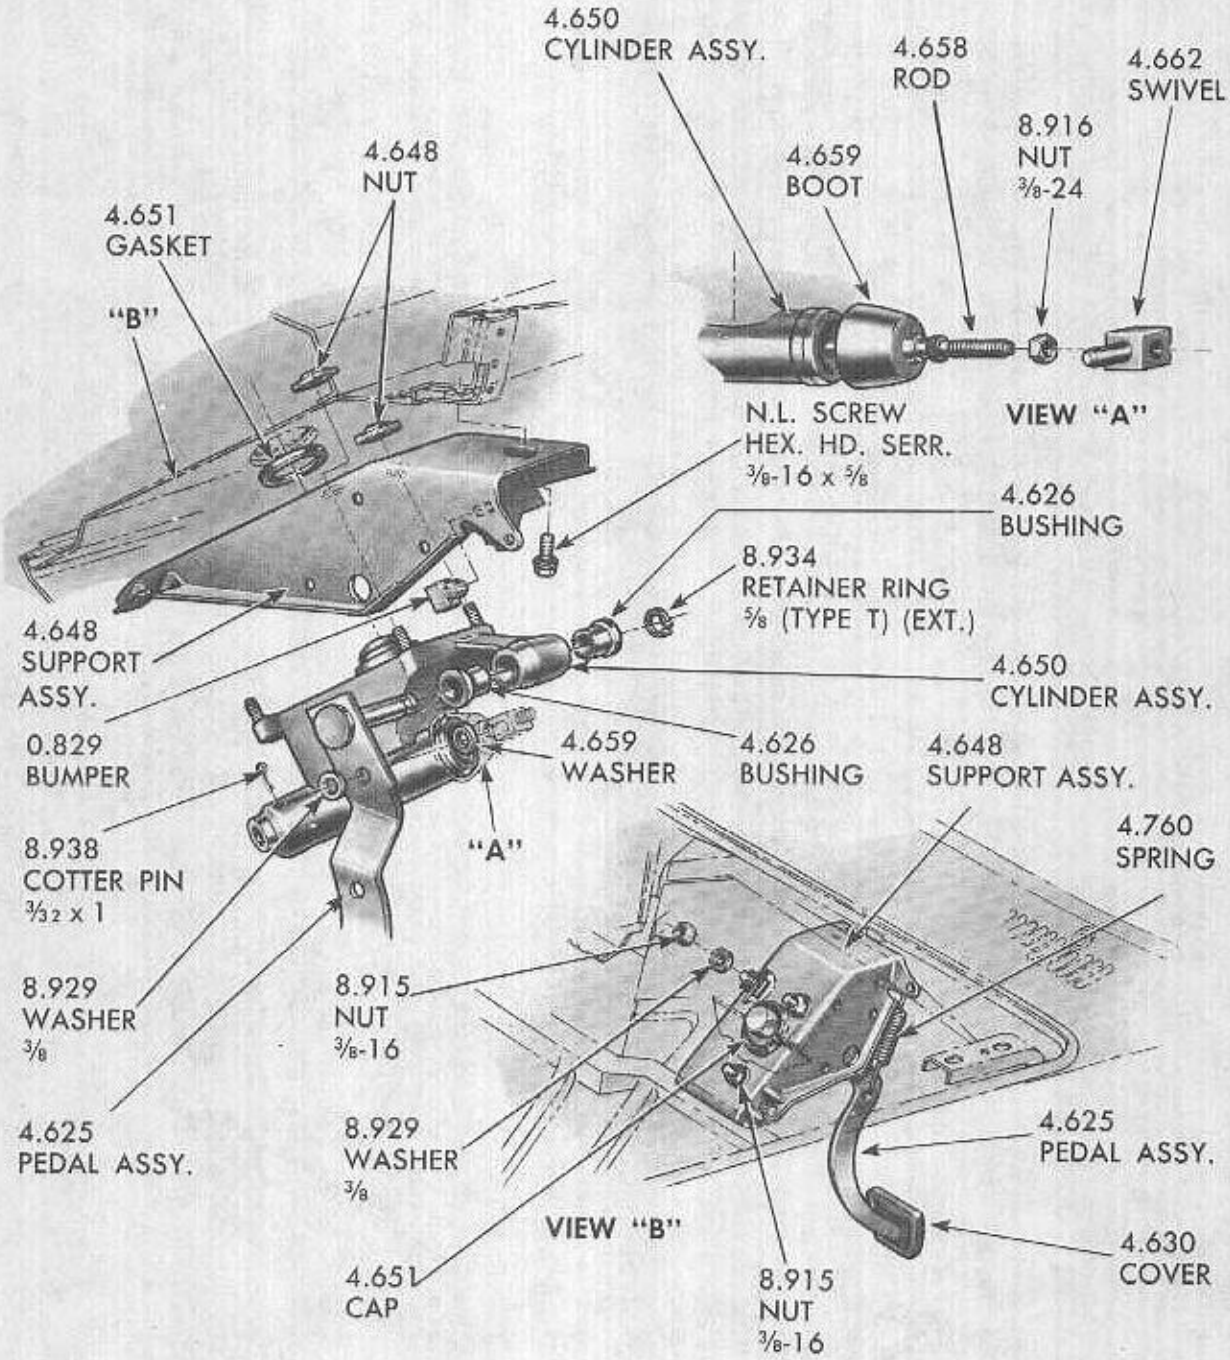

1960-61 CORVAIR BRAKE PEDAL LINKAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

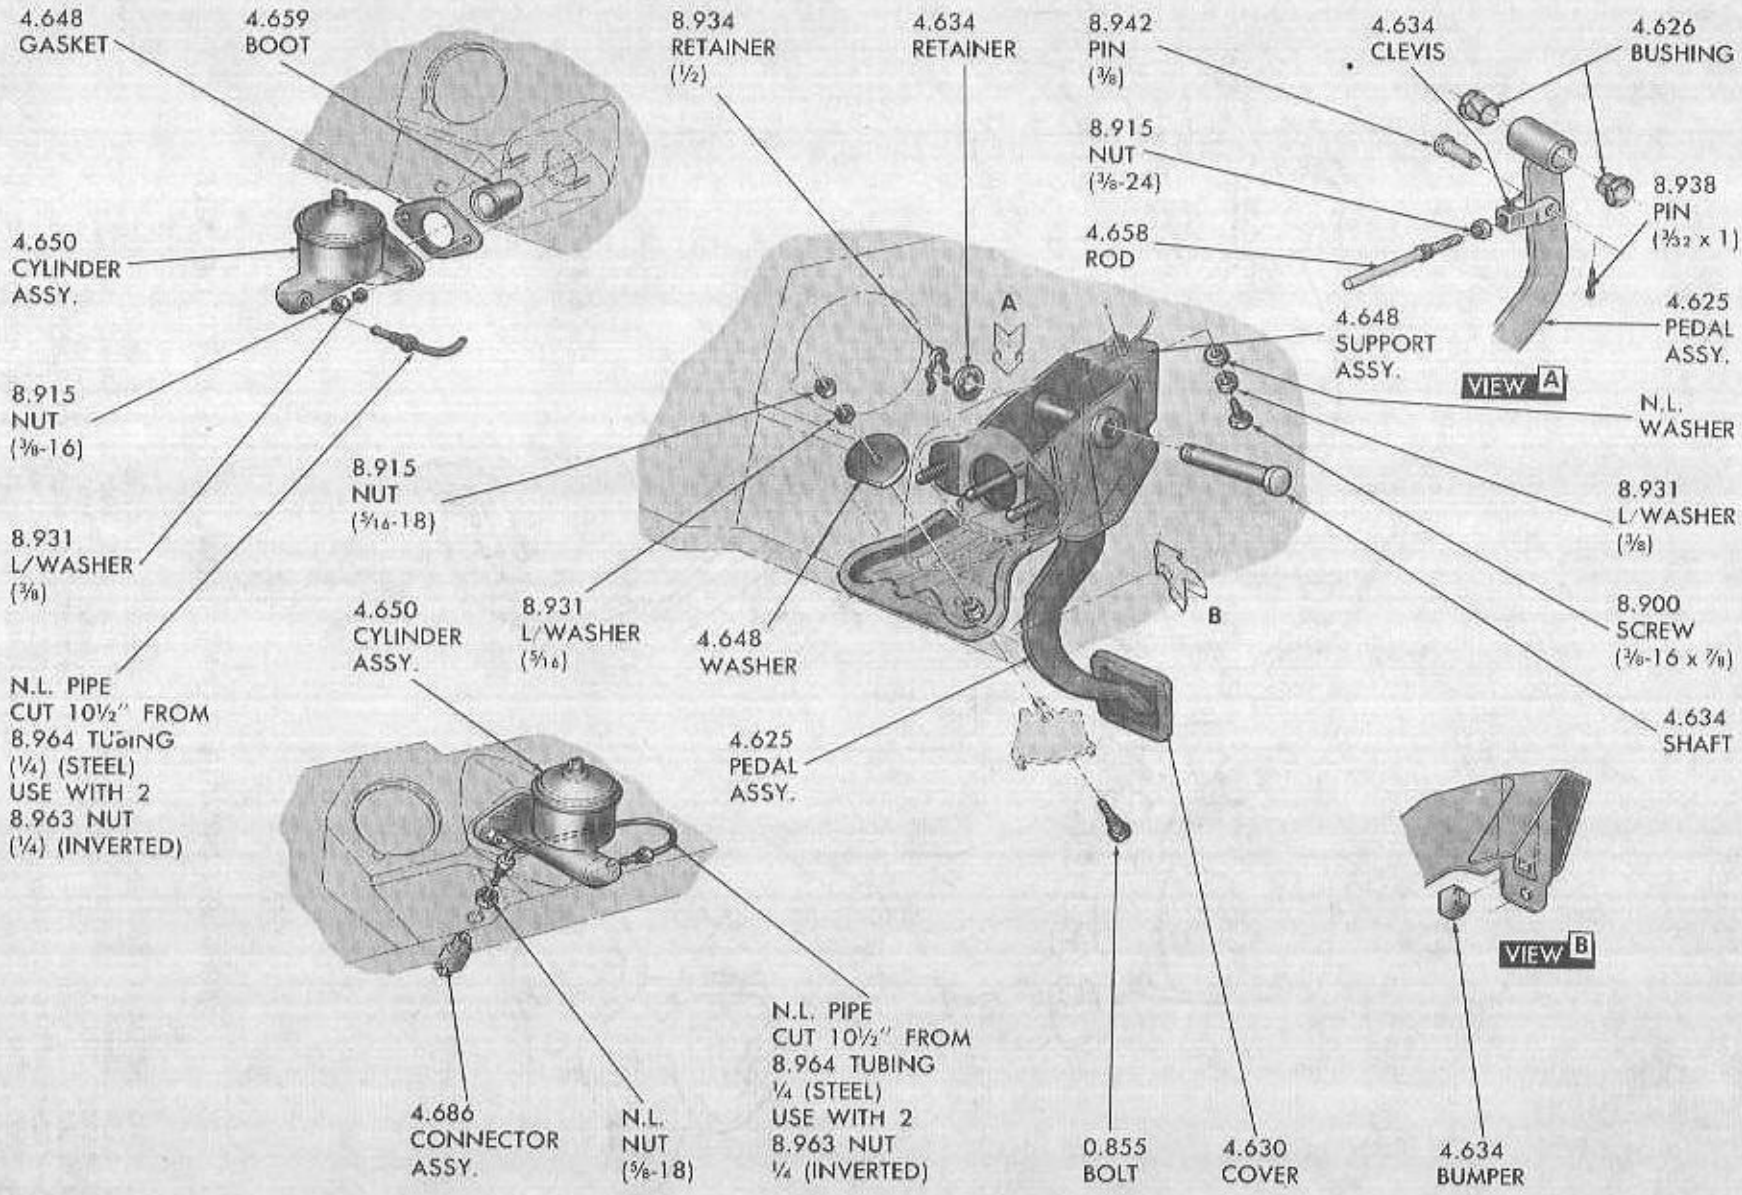

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

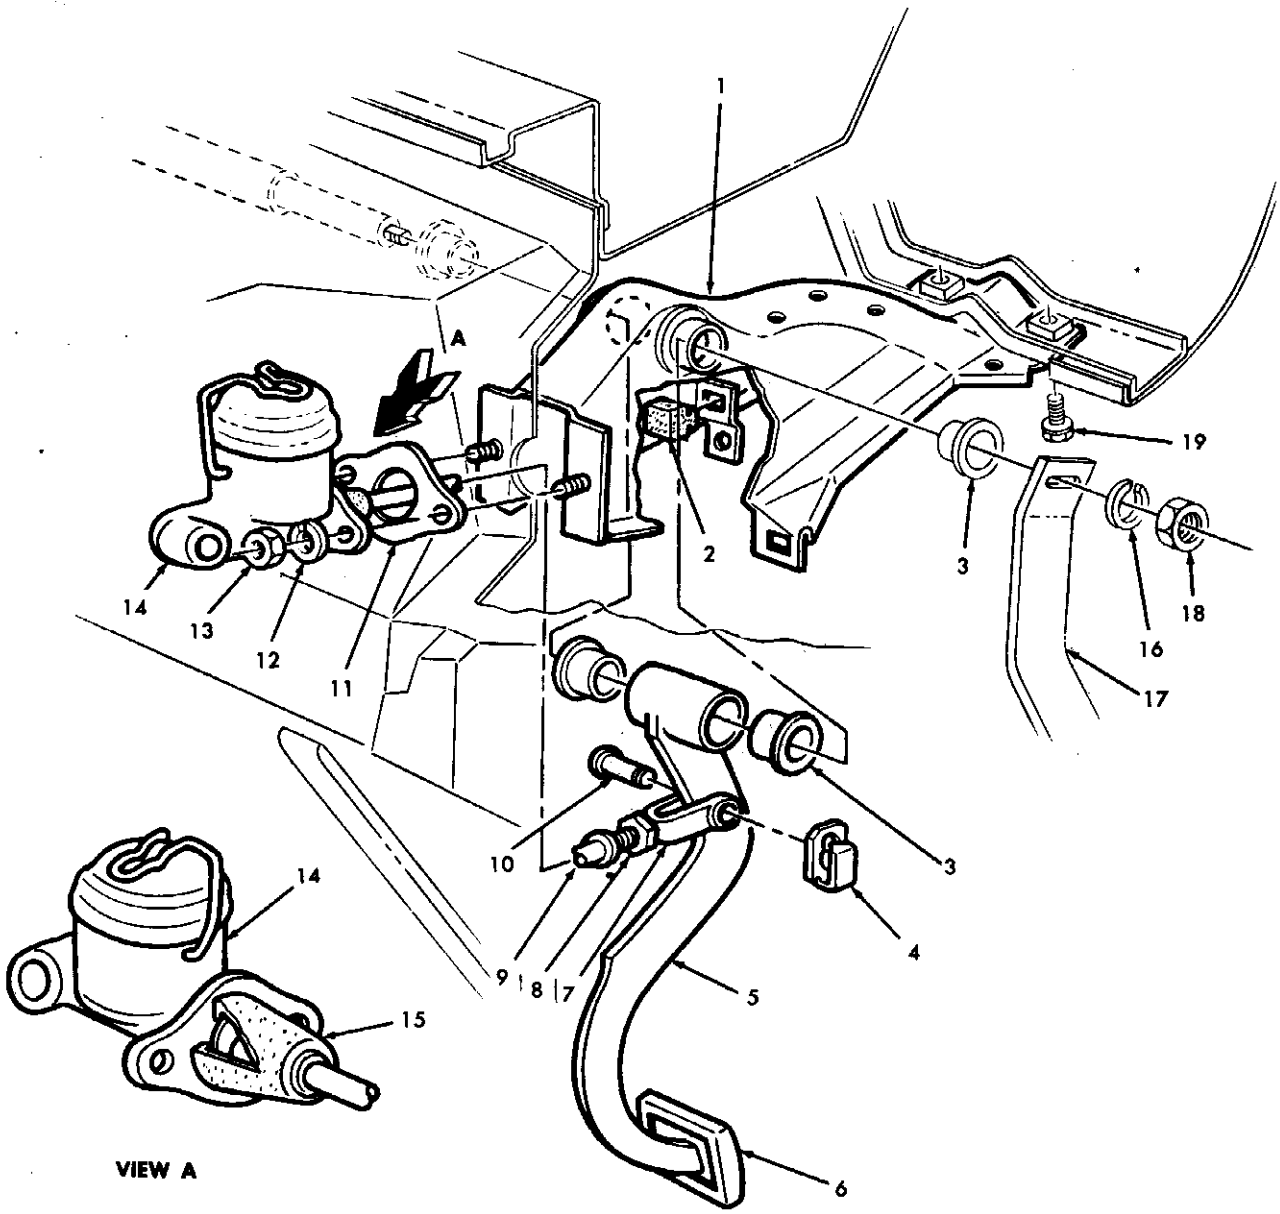

1965-69 CORVAIR BRAKE PEDAL & CYLINDER DETAILS

1.	4.648	BRACKET ASSEMBLY	3852897	11.	4.648	GASKET	3792566
2.	0.829	BUMPER	3723230	12.	8.931	L/WASHER (3/8)	
3.	4.626	BUSHING	3798256	13.	8.915	NUT (3/8–16)	
4.	4.662	RETAINER	3817880	14.	4.650	CYLINDER ASSEMBLY	5465489
5.	4.625	PEDAL ASSEMBLY–BRAKE	3857885	15.	4.659	BOOT	5456779
6.	4.630	COVER	6256368	16.	8.931	L/WASHER (1/2)	
7.	4.634	CLEVIS	3812904	17.	0.830	PEDAL ASSY.–CLUTCH	3859471
8.	8.916	NUT (3/8–24)		18.	8.916	NUT (1/2–20)	
9.	4.658	ROD	3812970	19.	8.900	BOLT (5/16–18 x 7/8)	
10.	4.662	PIN	3817879				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

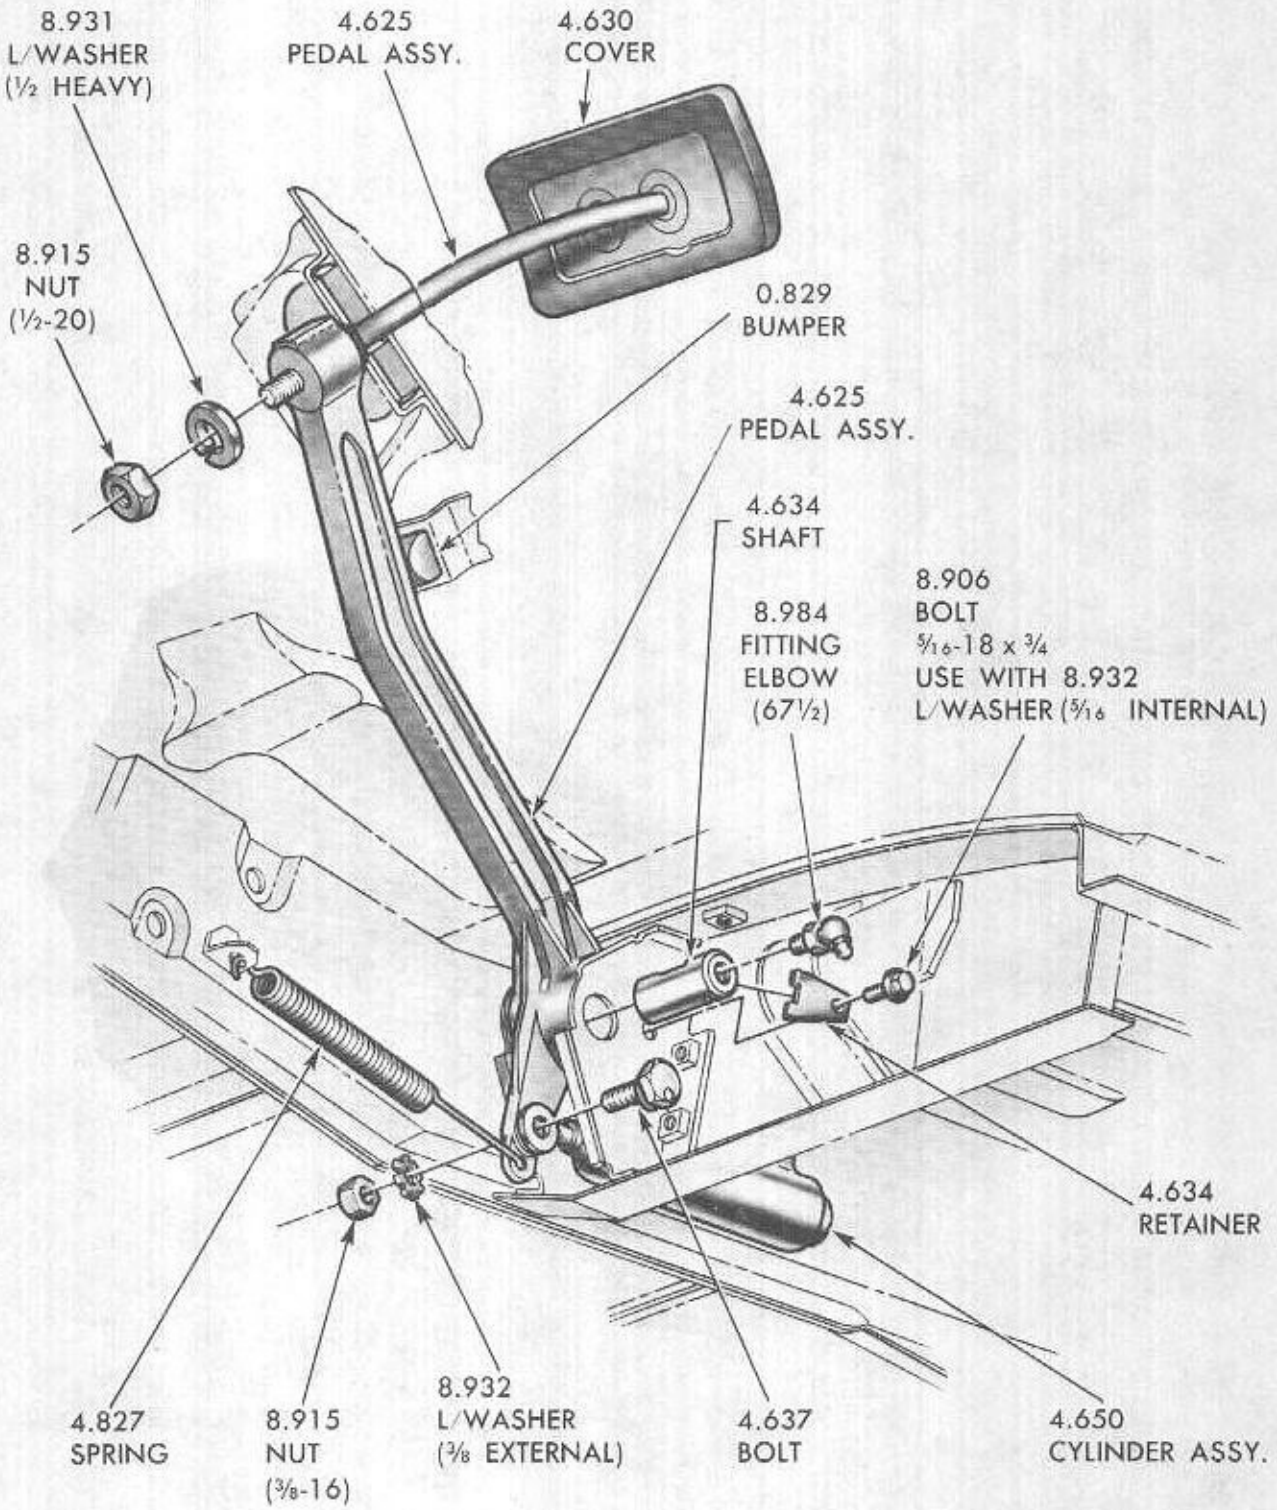

1961-65 CORVAIR F.C. BRAKE PEDAL

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

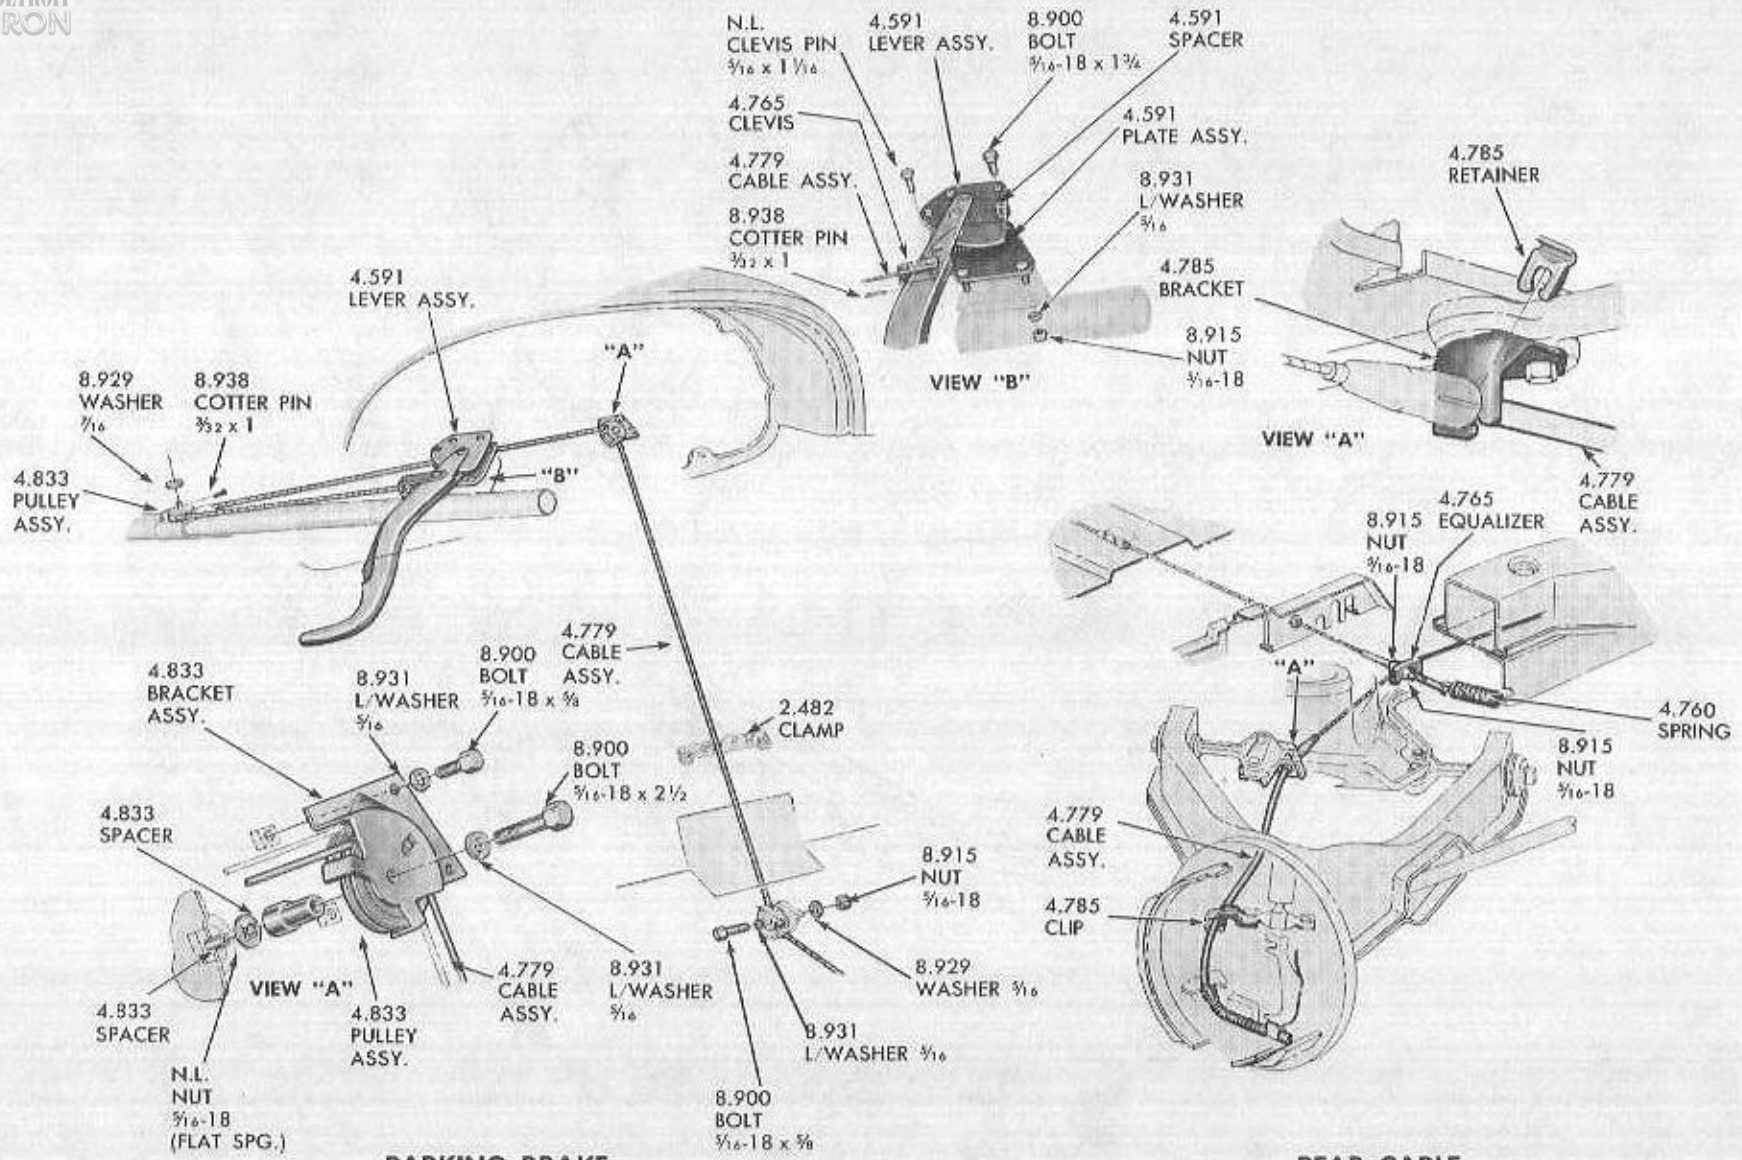

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

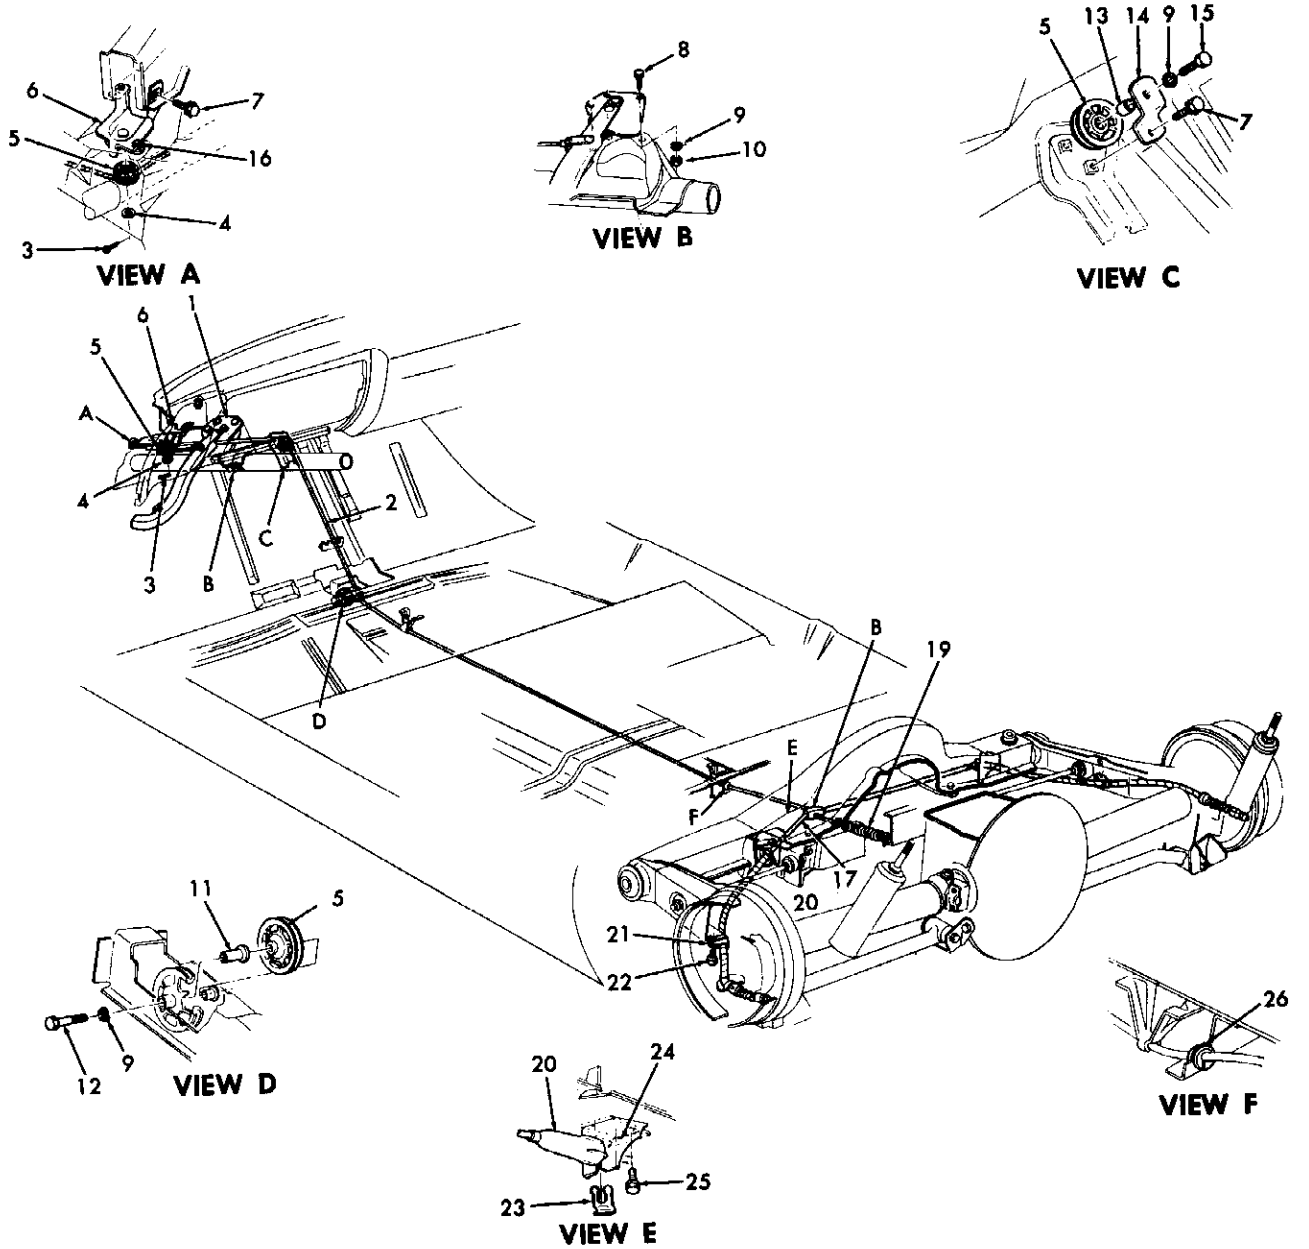

1965-69 CORVAIR PARKING BRAKE

1.	4.591	LEVER ASSY.	3857839	14.	4.833	RETAINER	3863517
2.	4.779	CABLE ASSY.—Front	3857838	15.	8.900	BOLT (5/16–18 x 1)	
3.	8.938	C. PIN (3/32 x 1)		16.	8.900	SCREW (5/16–18 x 7/8)	
4.	8.929	WASHER (7/16)		17.	8.915	NUT (5/16–24)	
5.	4.833	PULLEY	3866579	18.	4.765	EQUALIZER	6256437
6.	4.833	BRACKET	3863515	19.	4.760	SPRING	3829404
7.	8.977	SCREW (5/16–18 x 1/2)		20.	4.779	CABLE ASSY.	3857798
8.	8.900	BOLT (5/16–18 x 3/4)		21.	4.866	CLIP	3732015
9.	8.931	L. WASHER (5/16)		22.	8.977	SCREW (5/16–24 x 1/2)	
10.	8.915	NUT (5/16–18)		23.	4.785	RETAINER	516213
11.	4.833	SPACER	3857796	24.	4.785	BRACKET	3857872
12.	8.900	BOLT (5/16–18 x 2)		25.	8.900	SCREW (5/16–18 x 7/8)	
13.	4.833	SPACER	3863518	26.	4.784	SEAL	6257446

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

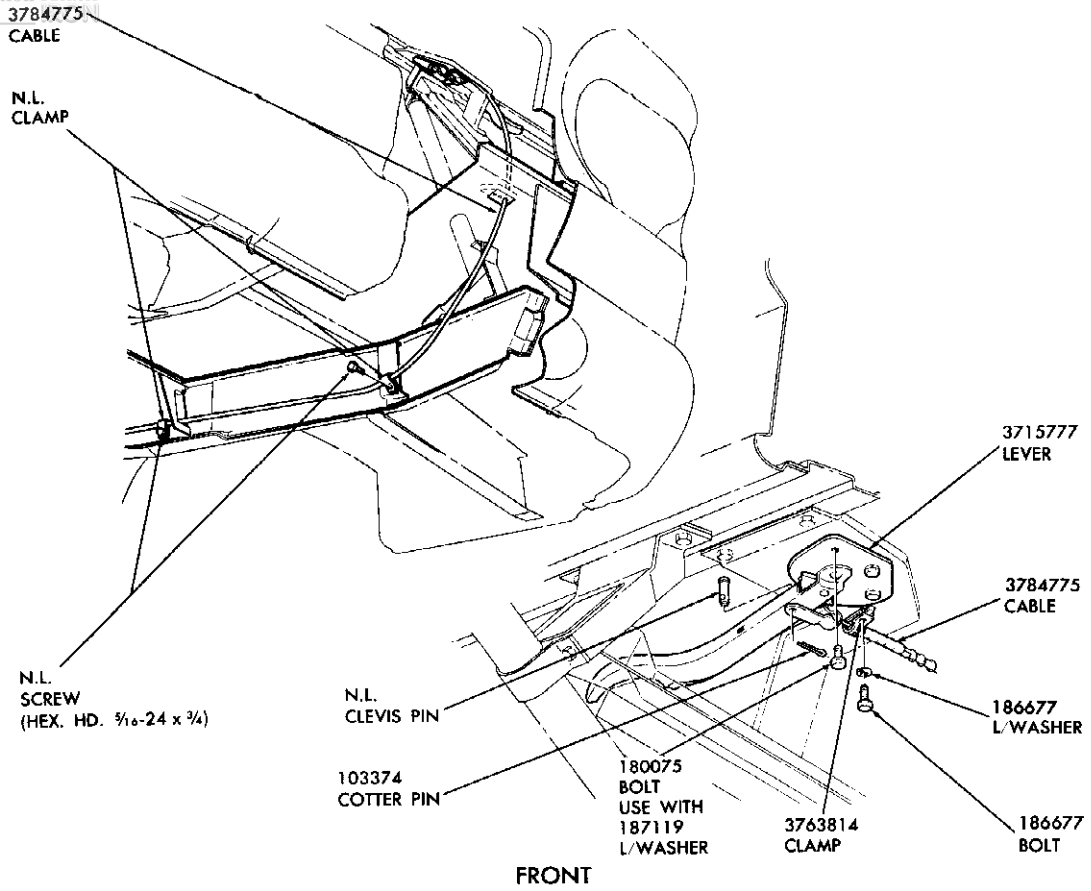

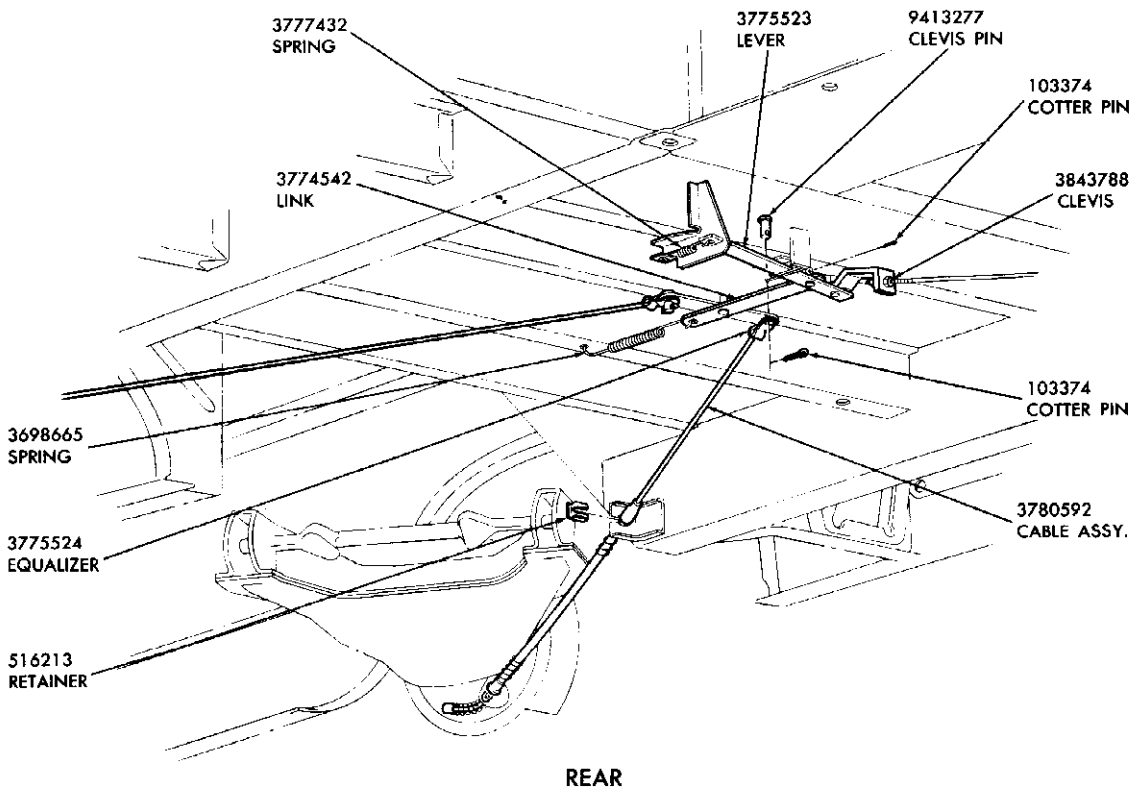

1961-65 CORVAIR F.C. PARKING BRAKE DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

4.003 TRANSMISSION ASSEMBLY

3-SPD. TRANSMISSION

61-63	CORVAIR, F.C.,			
64-65	F.C.	3840785	(Saginaw)	1
64-65	CORVAIR	3837981	(Saginaw)	1
66-67	CORVAIR	3859165	(Saginaw)	1
68-69	CORVAIR	3924773	(Saginaw)	1

4-SPD. TRANSMISSION

61-63	CORVAIR, F.C.,			
64-65	F.C.	3864460	(Note 1)	1

NOTE 1 When using on 1962-63 models it will be necessary to use 3840297 tran. input shaft, 3885295 seal and 3841373 spacer.

64-65	CORVAIR	3864461	(Saginaw)	1
66-69	CORVAIR	3924765	(Saginaw)	1

POWERGLIDE TRANSMISSION

60-63	CORVAIR, F.C.	3872465		1
64-67	CORVAIR, F.C. (exc. 4/1BC),			
68-69	CORVAIR	3958608		1

4.004 KIT—CONTROL ASSEMBLY, Transmission Gearshift

60-65	CORVAIR, F.C. w/3-SPD.	3854056	thrust washer and needle bearing	1
66-69	CORVAIR (exc. P.G.)	3886337	thrust washer and needle bearing	1
60-64	CORVAIR w/P.G.	7022240	**CONTROL ASSY.**, w/lever and mtg. bracket (includes LDNR indicator)	1
61-65	F.C. w/P.G.	7022241	**CONTROL ASSY.**, w/lever and mtg. bracket (included LDNR indicator)	1
65-66	CORVAIR w/P.G.	7028980	**CONTROL ASSY.**, w/lever and bracket	1
67-69	CORVAIR w/P.G.	7033250	**CONTROL ASSY.**, w/lever and bracket	1

4.005 GASKET UNIT—RING UNIT, Transmission

60-69	CORVAIR, F.C. w/P.G.	6257722	(Note 1)	1

NOTE 1 Consists of all Gaskets and Seals for complete overhaul.

60-65	CORVAIR, F.C. w/3-SPD.	3795321	(Note 2)	1

NOTE 2 Consists of Gaskets for trans. differential, first and reverse detent spring retainer, clutch gear bearing cover, trans. cover and a trans. shifter selector shaft seal assy.

61-65	CORVAIR, F.C. w/4-SPD.	3789198	(Note 3)	1

NOTE 3 Consists of Gaskets for trans. differential, (2) first and reverse detent spring retainer, clutch gear bearing cover, trans. oil filler plug,
trans. side cover and a trans. shifter slector shaft seal.

65-66	CORVAIR, F.C. w/P.G.	3910040	(Note 5)	1

NOTE 5 Consists of (1 each) gasket, trans. low servo cover, front oil pump body, govenor support body, trans. upper valve body plate, transfer plate to upper and lower valve body,
trans. vacuum modulator, oil pan, oil pump suction screen, governor. (1 each) seal, rear oil pump, low servo cover, front oil pump body oil, throttle valve control shaft oil
ring, speedometer driven gear fitting, trans. clutch piston outer, and inner. (7 each) front oil pump to trans. case bolt, clutch piston outer. (1 each) seal unit, trans.
reverse clutch piston. (1 each) seal assy., trans. parking lock and range selector. (2 each) gaskets for transfer plate to valve body upper and lower. (1 each) seal, filler tube "O" ring.

66-69	CORVAIR (exc. P.G.)	3886336		1
60-69	CORVAIR w/P.G.	3928593	**RING UNIT**, trans. oil seal (see NOTE A)	1

NOTE A Consists of 2 clutch drum seals, 1 sector shaft seal, 1 low servo seal.
piston seal, 1 rear servo cover gasket, 1 governor cover gasket, 1 "O" ring parking pawl shaft seal, 2 manual shaft "O" rings, 1 manual shaft seal assy., 2 vacuum modulator
gasket, 1.36 dia. parking shaft plug.

4.006 LEVER—HANDLE—KNOB, Gear Shift Control (Hand)

60-63	CORVAIR w/3-SPD. (exc. B.S.)	3780349	(knob end 2 1/2 off center)	1
60-63	MONZA (3-SPD. w/bucket seats),			
64	CORVAIR w/3-SPD. (exc. F.C.)	3812703		1
61-64	CORVAIR w/4-SPD. (exc. B.S.)	3796141	(knob end 2 1/2 off center) (chrome)	1
61	MONZA (4-SPD. w/bucket seats)	3784297	(bend at knob end) (painted)	1
61-63	F.C. (1st design) (exc. P.G.)	3799058	w/return spring bracket (34 1/4 O.L.)	1
61-64	MONZA (4-SPD. w/bucket seats)	3812701	(chrome)	1
63-65	F.C. (2nd design) (exc. P.G.)	3834006		1
65	CORVAIR w/3-SPD. (exc. CORSA)	3872870		1
65-69	CORVAIR w/4-SPD.	3872872		1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

65	CORSA w/3-SPD.	3872871		1
66-69	CORVAIR w/3-SPD. (exc. CORSA)	3881738	control	1
60-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	6256708	**HANDLE** ($1^{23}/_{32}$ long x $^{3}/_{8}$ thk.)	1
61-67	CORVAIR w/4-SPD.	3770344	**KNOB** ($1^{1}/_{2}$ dia.) (white-plastic)	1
61-65	F.C. w/3-SPD.	374993	**KNOB** ($2^{1}/_{32}$ dia.) (hard rubber)	1
61-65	F.C. w/4-SPD.	3780259	**KNOB** ($1^{63}/_{64}$) (black-tenite)	1
65-66	CORVAIR w/P.G.	3861074	**KNOB**	2
67	CORVAIR w/P.G.	3895207	**KNOB,** control	1
68-69	CORVAIR w/P.G.	3923624	**KNOB,** control lever (black)	1
60-69	CORVAIR w/3-SPD.	3921146	**KNOB UNIT,** control (black) (w/shift pattern)	1

4.008 BALL—BUMPER—BUSHING—RING—SPRING—STUD, Gearshift Control Hand Lever

63-65	F.C. (exc. P.G.)	3834008	(Note 1)	1

NOTE 1 First design models did not require this part.

60-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	7016176	**BUMPER,** detent spring	1
65-69	CORVAIR (exc. P.G.)	3859288	**BUSHING,** lever spring seat	1
60-69	CORVAIR, F.C.	9412978	**RING,** control lever pin retaining—(0.934)	1
60-64	CORVAIR, F.C.,			
65	F.C. w/P.G.	7016365	**SPRING,** cont. lever detent	1
61-65	F.C. (exc. P.G.)	3653114	**SPRING,** pull back (50 coils-$5^{43}/_{64}$" free length)—(0.844) (Note 3)	1

NOTE 3 When using in place of 3786560 discard original spring extension 3780837.

65-66	CORVAIR w/P.G.	7029322	**SPRING,** cont. lever detent	1
65-66	CORVAIR w/P.G.	3883685	**STUD,** cont. lever knob lock	1

4.010 SUPPORT ASSY.—COVER—HOUSING ASSY., Gearshift Hand Lever Control

For floor shift models not using strg. column shift lever housing, see group 6.518 for equivalent parts, listed as a cover, jacket extension, housing etc.

61-63	F.C. (exc. P.G.)	3799678	lever (upper)	1
60-64	CORVAIR w/P.G.,			
63-65	F.C. w/P.G.	6255993	**COVER,** housing hole ($4^{9}/_{16}$ x $3^{9}/_{16}$)	1
65-69	CORVAIR w/P.G.	3869815	**COVER,** housing hole	1
60-63	MONZA w/bucket seats (exc. P.G.),			
64	CORVAIR w/3-SPD.	3784295	**HOUSING ASSY.,** lever	1
60	CORVAIR (exc. P.G.),			
61	CORVAIR (exc. bucket seats. P.G.),			
62	CORVAIR w/3-SPD. (exc. bucket seats),			
62-63	MONZA (4-SPD. w/bucket seats),			
63	CORVAIR (exc. MONZA, P.G.),			
64	CORVAIR w/4-SPD.	3787016	**HOUSING ASSY.,** lever	1
63-65	F.C. (2nd design) (exc. P.G.)	3834033	**HOUSING ASSY.,** control lever	1
65-66	CORVAIR w/4-SPD.,			
67-69	CORVAIR (exc. P.G.)	3872875	**HOUSING ASSY.,** control lever	1
65-66	CORVAIR w/3-SPD.	3872873	**HOUSING ASSY.,** control lever	1

4.012 SPRING—CUP—SEAT—SHIM—WASHER, Gearshift Hand Lever Housing

60-69	CORVAIR (exc. P.G.),			
63-65	F.C. (exc. P.G.)	3851266		1
60-69	CORVAIR (exc. P.G.),			
63-65	F.C. (exc. P.G.)	3859287	**CUP,** control lever spring (Note 1)	1

NOTE 1. When using on models previous to 1965 it is necessary to use bushing 3859288 in grp. 4.008.

60-69	CORVAIR w/P.G.,			
63-65	F.C. w/P.G.	3859286	**SEAT,** control lever spring	1
65	F.C. (exc. P.G.),			
65-69	CORVAIR (exc. P.G.)	3787056	**SEAT,** spring cup ($2^{1}/_{8}$ O.D. x $^{13}/_{32}$ thick)	1
65-69	CORVAIR	3872879	**SHIM,** trans. cont. lever hsg. upper seal	A.R.
67-69	CORVAIR (exc. T.W.)	7800580	**WASHER,** steering shaft upper retainer ring thrust	1
67-69	CORVAIR (exc. T.W.)	7800581	**WASHER,** strg. shaft upr. ret. ring wave	1

4.015 BOOT—RETAINER—SEAL—SCREW, Gearshift Floor Mounted Lever

61-63	F.C. (exc. P.G.)	3786271	control lever ($6^{3}/_{4}$ x $4^{3}/_{4}$)	1
64-65	MONZA	3862494	control lever (fawn) (Note 1)	1
64-69	MONZA	3862493	control lever (black) (Note 1)	1
66	MONZA	3877516	control lever (dark fawn) (Note 1)	1
61-63	F.C. (exc. P.G.)	3786272	**RETAINER,** control lever boot ($6^{15}/_{16}$ O.L.)	1
64-69	MONZA (exc. P.G.)	3859631	**RETAINER,** control lever boot	2
65-66	CORSA	3861872	**SEAL,** cont. lever hsg. trim cover	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-69	CORVAIR (exc. P.G.)	3872876	**SEAL,** control lever upper	1
65-69	CORVAIR (exc. P.G.)	3869499	**SEAL,** control lever lower (1/2 thk.)	A.R.
65	CORVAIR w/3-SPD. (exc. STD.)	9415952	**SCREW,** lever seal front and rear guide, boot ret. and hsg. trim cover brkt.—(8.977)	3

NOTE 1 It may be necessary to paint to match.

4.017 BRACKET—COVER, Underbody Trim (floor mounted)

65-66	CORSA	3861845	cont. lever hsg. trim cover	2
65-66	CORSA	3886500	**COVER,** cont. lever hsg. trim	1

4.020 BEZEL—DIAL—HOUSING, Transmission Gearshift Control

65-66	CORVAIR w/P.G.	3858938	control lever	1
67-69	CORVAIR w/P.G.	3893893	control lever	1
63-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	7025759	**DIAL,** indicator	1
60-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	6257145	**HOUSING,** indicator dial lamp (1 1/4 long)	1
65-66	CORVAIR w/P.G.	3858939	**HOUSING,** cont. lever bezel lamp	1
67-69	CORVAIR w/P.G.	3893894	**HOUSING,** lever bezel lamp	1

4.022 GLASS—NUT, Gearshift Control Indicator

60-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	3782245	indicator dial (1 1/4" O.D. x 13/16" deep)	1
65-69	CORVAIR w/P.G. (exc. CORSA)	3862909	**NUT,** control lever bezel (No. 8—32)	1

4.025 TUBE ASSY.—LINER—SHAFT, Gearshift Control Shifter

65-69	CORVAIR (exc. P.G.)	3889688	w/bracket	1
65-69	CORVAIR (exc. P.G.)	3889689	**LINER,** contr. rod tube	1
61-63	F.C. (exc. P.G.)	3786266	**SHAFT,** center shift lever (3 23/32 w/two 5/16 holes)	1

4.027 BRACKET—CLIP—LINK—WASHER, Transmission Gearshift Control Shaft or Tube

65	CORVAIR (exc. P.G.)	3869451	rod tube link	1
66-69	CORVAIR (exc. P.G.)	3881737	rod tube link	1
61-63	F.C. (exc. P.G.)	3786268	**CLIP,** lever shaft (13/16 I.D.)	1
65	CORVAIR (exc. P.G.)	3869809	**LINK,** cont. rod tube	1
66-69	CORVAIR (exc. P.G.)	3881735	**LINK,** cont. rod tube	1
61-63	F.C. (exc. P.G.)	3786267	**WASHER,** lever shaft (57/64" I.D.)	1

4.035 COUPLING ASSY.—END—ROD ASSY., Transmission Gearshift Lever

60	CORVAIR w/3-SPD.	6257675		1
61-64	CORVAIR (exc. P.G.),			
61	F.C. (1st design) (exc. P.G.)	3781752	(Note 1 and 2)	1

NOTE 1. When using on F.C. with 4-SPD., weld pin in place.
NOTE 2. See 3798130 Rod Assy. for 2nd design.

65	CORVAIR (exc. P.G.)	3859294	control rod	1
66-69	CORVAIR (exc. P.G.)	3881731	cont. rod	1
61-65	F.C. (exc. P.G.)	3786269	**END,** rod (7 11/16 O.L.)	1
60	CORVAIR w/3-SPD.,			
61-63	CORVAIR (exc. P.G.),			
64	CORVAIR	3851268	**ROD ASSY.**	1
61-62	F.C. (2nd design) (exc. P.G.),			
63	F.C. (1st design) (exc. P.G.)	3798130	**ROD ASSY.,** w/coupling	1
63-65	F.C. (2nd design) (exc. P.G.)	3834007	**ROD ASSY.,** w/coupling	1
65-69	CORVAIR (exc. P.G.)	3879762	**ROD ASSY.,** control	1

4.037 TRANSMISSION GEARSHIFT ROD TO LEVER ATTACHING PARTS

60-62	CORVAIR, F.C. (exc. P.G.),			
65	CORVAIR (exc. P.G.)	3902938	**CLAMP,** control rod—(6.234)	1
63-64	CORVAIR (exc. P.G.)	3851270	**CLAMP,** control rod	1
66	CORVAIR,			
67-69	CORVAIR (exc. P.G.)	3891605	**CLAMP,** control rod	1
60-69	CORVAIR, F.C.	382103	**CLAMP,** cup shade (13/32" I.D. x 25/32" O.D. x 7/32" thk.)	
60-64	CORVAIR, F.C.	3749084	**CLIP,** control rod (all locations)	A.R.
60-69	CORVAIR, F.C.	3833107	**GROMMET,** control lower rod to control rod idler lever (5/16" I.D. x 11/16" O.D.)	1
60-69	CORVAIR, F.C.	3833108	**GROMMET,** upper control rod to shift tube lever (1/2" I.D. x 3/4" O.D. x —RD" thk.)	1
67-69	CORVAIR (exc. P.G.)	3910700	**GROMMET,** cont. rod tube link to rod assy.—(7.388)	2
65-69	CORVAIR (exc. P.G.)	3869817	**NUT,** cont. rod link bracket (5/16—18)	1
60	CORVAIR	6257230	**PIN,** control rod coupling (7/32 x 1 1/16)	1
61-65	CORVAIR, F.C. (exc. P.G.)	3827306	**PIN,** coupling assy. clevis (7/32 x 13/16)	1
61-64	CORVAIR,			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT

66-69	CORVAIR (exc. P.G.)	3796886	**PIN,** coupling assy. spring (3/8 dia. x 1/4 O.L. slotted)	2
66-69	CORVAIR (exc. P.G.)	3881734	**PIN,** cont. rod coupling clevis (7/32 x 1 1/16)	1
60-69	CORVAIR, F.C.	382104	**SWIVEL** (3/8" x 16" thds., 1 1/2" long w/1 3/8" dia. hole)	1

4.040 SUPPORT, Transmission Control Rod Idler

60-63	CORVAIR (exc. P.G.)	3787099	rod (1 3/32" dia. hole)	1
61-63	F.C. (exc. P.G.)	3795730	rod (lower)	1
63-65	F.C. (exc. P.G.)	3834014	rear	1
63-65	F.C. (exc. P.G.)	3834009	**SUPPORT ASSY.,** front	1

4.042 SEAL ASSY.—BUSHING—COVER—WASHER, Gearshift Control Idler Attaching

61	F.C. (exc. P.G.)	3786274	support (1 1/4 O.D.)	1
60-64	CORVAIR (exc. P.G.)	3814684	**BUSHING,** front support (1 I.D. x 1 7/64 O.D.)	1
61	F.C. (exc. P.G.)	3786202	**BUSHING,** lever support (7/8 I.D.) (Note 1)	1
	NOTE 1. Not used on late design vehicles.			
63-65	F.C. (exc. P.G.)	3834013	**BUSHING**	1
65-69	CORVAIR (exc. P.G.)	3869452	**BUSHING,** control rod	2
63-65	F.C. (exc. P.G.)	3834012	**COVER,** support	1
66-69	CORVAIR (exc. P.G.)	3888621	**WASHER,** cont. rod tube link to trans. cont. rod	1

4.047 CABLE ASSY.—CLAMP—CLIP—GROMMET—PLATE—SEAL, Gearshift Control

60	CORVAIR w/P.G.	6257214	(threaded type) (125 17/32 O.L.)	1
60-64	CORVAIR w/P.G.	3820468		1
61-65	F.C. w/P.G.	3829644	(158 O.L.)	1
65-69	CORVAIR w/P.G.	3861045		1
65-68	CORVAIR	3858771	**CLAMP,** cable—(4.686)	1
60-69	CORVAIR w/P.G.	3772324	**CLIP** (in tunnel) (1 5/16" long)	A.R.
65	F.C. w/P.G.	3777036	**CLIP,** control cable (1/2)	7
65-69	CORVAIR w/P.G.	3869473	**CLIP,** trans. control cable (1 9/16 long)	1
60-69	CORVAIR w/P.G.	6257492	**GROMMET,** trans. control cable (1 19/32 O.D. x 3/4 thk.)	1
60-64	CORVAIR w/P.G.	6257493	**PLATE,** cable grommet (3 31/64" x 2 1/4")	1
65-69	CORVAIR w/P.G.	3953569	**PLATE,** cable grommet	1
60-69	CORVAIR, F.C. w/P.G.	6257924	**SEAL,** "O" ring (use w/6257926 cable)	1

4.050 LEVER, Transmission Throttle Valve Control (T.V.)

60-69	CORVAIR, F.C. w/P.G.	6256353	inner	1
60-66	CORVAIR, F.C. w/P.G.	3855726	**LEVER ASSY.,** w/shaft, outer	1
67-69	CORVAIR, F.C. w/P.G.	3915011	**LEVER ASSY.,** w/shaft, outer	1

4.052 CLIP—SWIVEL, Transmission Throttle Valve Control Rod

62-69	CORVAIR, F.C.	3700188	swivel—(3.425)	1
60-65	CORVAIR, F.C.	3711199	**SWIVEL** (use w/1/4" rod)—(3.425)	A.R.

4.054 SWITCH ASSEMBLY—RING, Transmission Control Safety

60-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	1998717	also back up lamp	1
65-69	CORVAIR w/P.G.	1993691	also back up lamp	1
60-61	CORVAIR, F.C. w/P.G.	9415099	**RING,** switch retaining (17/64" O.D. w/6 teeth)—(8.934)	1

4.067 BOOT—INSULATOR—SHIELD, Gearshift Linkage

60-64	CORVAIR (exc. P.G.)	6257362	control rod front (4 27/32 x 2 13/64 x 3 1/2)	1
61-62	F.C. (exc. P.G.)	3786273	control rod end (2 19/32 O.D.)	1
65-69	CORVAIR (exc. P.G.)	3869806	cont. rod to cont. rod tube	1
65-69	CORVAIR (exc. P.G.)	3869808	**BOOT ASSY.,** cont. rod tube	1
63-69	CORVAIR (exc. P.G.)	3851264	**INSULATOR,** control rod front and rear shield	1
60-64	CORVAIR	6256039	**SHIELD,** trans., underbody and accel. control rod, front	1
60-64	CORVAIR	6256040	**SHIELD,** trans. underbody and accel. control rod, rear	1
63-65	F.C. (exc. P.G.)	3834015	**SHIELD,** control rod front	1
63-65	F.C. (exc. P.G.)	3834016	**SHIELD,** control rod rear	1
65-69	CORVAIR	3853067	**SHIELD,** trans. underbody and accel. control rod front	1
65-69	CORVAIR	3853068	**SHIELD,** trans. underbody and accel. control rod rear	1

4.081 MOUNTING ASSY.—SUPPORT, Transmission

60-63	CORVAIR, F.C.,			
64-65	F.C.	3803890	support	2
64	CORVAIR	3852592	support	2
65-69	CORVAIR	3872898	support	2
60	CORVAIR w/P.G.	6257725	**SUPPORT,** front	1
60-64	CORVAIR w/3-SPD.	3798069	**SUPPORT,** front (Note 1)	1
	NOTE 1. It may be necessary to drill 17/32 dia. hole to properly route shaft. Using old part as reference, drill hole using correct dimple as center point.			
61-64	CORVAIR w/4-SPD	3786898	**SUPPORT,** front	1
61-64	CORVAIR w/P.G.	3787216	**SUPPORT,** front	1
61-62	F.C. w/3-SPD.	3779295	**SUPPORT,** front	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-62	F.C. w/4-SPD.	3779296	**SUPPORT,** front	1
61-65	F.C. w/P.G.	3779297	**SUPPORT,** front	1
63-65	F.C. w/4-SPD.	3827679	**SUPPORT,** front	1
63-65	F.C. w/3-SPD	3827678	**SUPPORT,** front	1
65	CORVAIR w/3-SPD.	3868692	**SUPPORT**	1
65-69	CORVAIR w/P.G.	3876969	**SUPPORT**	1
65	CORVAIR w/4-SPD.	3868699	**SUPPORT**	1
66-69	CORVAIR (exc. P.G.)	3879400	**SUPPORT ASSY.**	1

4.083 BRACKET ASSY., Transmission Mounting

61-63	F.C. (exc. P.G.)	3799222	engine stabilizing	1

4.085 BOLT ASSY.—BOLT—NUT—SHIM, Transmission Mounting Support

60-63	CORVAIR, F.C.,			
64	F.C. (exc. 4-SPD.)	3774960	to trans. assy., w/lock washer ($^{3}/_{8}$—16 x $1^{5}/_{8}$)	A.R.
61-63	F.C. (exc. P.G.)	3799224	**BOLT,** stabilizer adjusting ($^{1}/_{2}$—13 x $3^{1}/_{4}$)	1
61-65	F.C.,			
65-68	CORVAIR	3774712	**NUT,** mounting assy. to support ($^{7}/_{16}$"—20—slotted)—(0.002)	2
60-64	CORVAIR, F.C. (exc. 4-SPD.),			
65	F.C. w/4-SPD	6257832	**SHIM** ($2^{9}/_{32}$ x $1^{1}/_{2}$ x .030 thk)	A.R.
61-64	CORVAIR, F.C. w/4-SPD.,			
65	F.C. w/4-SPD.	3779084	**SHIM** ($1^{17}/_{32}$ x $1^{1}/_{4}$)	A.R.

4.101 FLUID—ADDITIVE, G.M. Automatic Transmission

60-69	CORVAIR, F.C. w/A.T.	1050568	(1 qt. can) (Type "A") (Dexron)—(8.800)	A.R.
60-69	CORVAIR, F.C. w/A.T.	1050569	(4 qt. can) (Type "A") (Dexron)—(8.800)	A.R.
60-69	CORVAIR, F.C. w/A.T.	1050570	(55 gal. drum) (Type "A") (Dexron)—(8.800)	A.R.
60-69	CORVAIR, F.C. w/A.T.	1050008	**ADDITIVE,** fluid stop leak (sealing compound—16 oz. container) (ATC)—(8.800)	A.R.

4.103 CASE, Transmission

60-63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.	3852340	(Note 1)	1

NOTE 1 When using in place of 3784344, trans. filler plug 445096 must also be used.

60-67	CORVAIR, F.C. w/P.G.	6257947	(Note 2)	1

NOTE 2 When using 6257947 in place of early prod. case, it will be necessary to use trans. control cable 3820468.

64-65	CORVAIR w/3-SPD.	3837982		1
66-67	CORVAIR w/3-SPD.	3859944	w/magnet	1
68-69	CORVAIR w/3-SPD	3925641	w/magnet	1
68-69	CORVAIR w/P.G.	3930902		1
61-63	CORVAIR, F.C. w/4-SPD.	3814897	**CASE ASSY.,** w/reverse inhibitor	1
64	CORVAIR, F.C. w/4-SPD.,			
65	F.C. w/4-SPD.	3846295	**CASE ASSY.,** w/reverse inhibitor	1
65	CORVAIR w/4-SPD.	3869186	**CASE ASSY.,** w/reverse inhibitor	1
66-69	CORVAIR w/4-SPD	3931610	**CASE ASSY.,** w/inhibitor	1

4.104 VENT—BOLT, Transmission Case

60-68	CORVAIR, F.C. w/P.G.	3820840	($^{21}/_{32}$" head dia.—$^{7}/_{8}$" O.L.)—(5.387)	1
61	MONZA w/P.G.	3751692	(1 O.L. w/$1^{1}/_{8}$ head dia.)	1
60-65	CORVAIR, F.C.,			
66-67	CORVAIR w/P.G.	3767317	**BOLT,** to diff. carrier ($^{7}/_{16}$—14 x $1^{1}/_{2}$—260 M—steel)	4
66-69	CORVAIR (exc. P.G.)	3859990	**BOLT,** to diff. carrier ($^{7}/_{16}$—14 x $1^{3}/_{16}$)	6

4.105 COVER—BOLT—MAGNET UNIT—PLUG—WASHER, Transmission

60-65	CORVAIR, F.C. w/3-SPD.	6256673	($6^{1}/_{2}$ x $4^{31}/_{32}$ ctr. to ctr. holes)	1
60-69	CORVAIR, F.C. w/P.G.	3772152	front	1
61-65	CORVAIR, F.C. w/4-SPD.	3775031		1
66-69	CORVAIR (exc. P.G.)	3859956		1
60-65	CORVAIR, F.C. (exc. P.G.)	3770309	**BOLT,** cover assy., w/lockwasher ($^{1}/_{4}$"—20 x $^{5}/_{8}$")—(0.206)	8
60-64	CORVAIR w/3-SPD.	3869240	**MAGNET UNIT,** case chip collector	1
61-62	CORVAIR, F.C. w/4-SPD.,			
63	CORVAIR, F.C. (exc. P.G.)	445096	**PLUG,** filler ($^{7}/_{8}$"—18 x $^{7}/_{8}$" w/$^{6}/_{8}$" hex. hd.—$1^{1}/_{8}$" O.D.)—(8.971)	1
61-62	CORVAIR, F.C. w/4-SPD.,			
62	CORVAIR, F.C. w/3-SPD., P.G.,			
63-64	CORVAIR, F.C. (exc. P.G.),			
65	CORVAIR w/3-SPD.,			
65	F.C. (exc. P.G.)	3826178	**WASHER,** filler plug	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

4.109 GASKET, Transmission Case Cover

60-65	CORVAIR, F.C. w/3-SPD.	6256674	(6 1/2" x 4 31/32" ctr. to ctr. holes—cork)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775033	(cork—5 1/4 O.L. x 1/16 thk. w/eight 5/16 dia. holes)	1
66-69	CORVAIR (exc. P.G.)	3858990		1

4.115 CONVERTER ASSY.—BOLT—BUSHING—RETAINER, Transmission

60-69	CORVAIR, F.C. w/P.G.	3846973	w/plugs (rebuilt) (Exchange item, Note 2)	1
60-69	CORVAIR, F.C. w/P.G.	3799830	**BOLT,** converter assy. to flywheel, trans. assy. to flywheel (3/8"—24 x 9/16")	A.R.
60-69	CORVAIR, F.C. w/P.G.	6256225	**BUSHING,** housing hub (1 13/32 O.D. x 9/16 thk.)	1
60-69	CORVAIR, F.C. w/P.G.	6255740	**BUSHING,** turbine shaft (9/16 I.D. x 7/16 thk.)	2
60-69	CORVAIR, F.C. w/P.G.	6257011	**RETAINER,** converter assy. to flex plate (3/8—24) (Note 1)	3

NOTE 1 To be used only on welded converters having drive lugs with two small depressed areas.

4.123 SHAFT—RING, Transmission Input

60	CORVAIR w/3-SPD.	6256165	(12 teeth—21 3/4 O.L.)	1
61-63	CORVAIR, F.C. w/3-SPD.	3785450	(12 teeth) (ident. by band of yellow paint)	1
61-63	CORVAIR, F.C. w/4-SPD.	3785456	(12 teeth) (23 5/16 O.L.)	1
64-65	CORVAIR, F.C. w/4-SPD.	3840297		1
64-65	CORVAIR, F.C. w/3-SPD.	3840789		1
60-69	CORVAIR, F.C. w/P.G.	6256239	**SHAFT ASSY.,** w/bushing, turbine	1
66-69	CORVAIR (exc. P.G.)	3890530	**SHAFT ASSY.**	1
60-63	CORVAIR w/3-SPD.	274267	**RING,** shaft retaining (11/16" dia. x 1/2" thk.)—(8.934)	1

4.128 COOLER ASSY.—BRACKET—CLAMP—CLIP—SPACER, Transmission Oil

61-65	F.C. w/P.G.	8529636	(6.600)	1
61-65	F.C. w/P.G.	3784263	**BRACKET,** cooler	2
61-63	F.C. w/P.G.	9419365	**CLAMP,** inlet and outlet hose—(1.166)	4
60-69	CORVAIR	3710497	**CLIP,** inlet, outlet pipe assy.	1
61-65	F.C. w/P.G.	3788835	**CLIP,** front and rear pipe (1 1/2 x 11/16)	2
65	F.C. w/P.G.	3776068	**SPACER,** cooler hose clamp	1

4.133 TUBE ASSY.—BOOT—GAUGE—GROMMET—SEAL, Transmission Oil Filler

60	CORVAIR w/P.G.	6256125	(20 1/16 long)	1
61-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	3786670	(13 45/64 long)	1
65	CORVAIR (P.G. w/Air Cond.)	3861996		1
65	CORVAIR w/P.G. (exc. Air Cond.),			
66-69	CORVAIR w/P.G.	3885000		1
61-63	CORVAIR F.C. w/P.G.,			
65	F.C. w/P.G.	3786673	**BOOT,** tube (2 15/16 O.D. and 1 13/32 O.D. ends) (rubber)	1
65-69	CORVAIR w/P.G.	3861999	**BOOT,** tube	1
60-64	CORVAIR, F.C. w/P.G.,			
65	F.C. w/P.G.	6256124	**GAUGE,** cap and level	1
65-69	CORVAIR w/P.G.	3905448	**GAUGE,** cap and level	1
60	CORVAIR w/P.G.	6255638	**GROMMET,** tube (1 11/16" O.D.-rubber)—(9.775)	1
62-69	CORVAIR, F.C. w/A.T.	6255641	**SEAL,** tube	1

4.162 FLANGE ASSY.—BEARING ASSY.—BUSHING—RING—WASHER, Low Sun Gear and Clutch

60-61	CORVAIR, F.C. w/P.G. (1st design)	6255744	(w/o raised "X" on flange)	1
61-64	CORVAIR, F.C. w/P.G. (2nd design)	3795253	(raised "X" on flange)	1
65-69	CORVAIR, F.C. w/P.G.	3863133		1
63-69	CORVAIR, F.C. w/P.G.	3771838	**BEARING ASSY.,** w/race, low sun gear, needle thrust	1
60-66	CORVAIR, F.C. w/P.G.	6256742	**BUSHING** (7/8 I.D. x 7/16 thk.)	1
67-69	CORVAIR w/P.G.	3886078	**BUSHING**	1
60-66	CORVAIR, F.C. w/P.G.	6256673	**RING,** flange retaining (5 31/64 dia.)	1
67-69	CORVAIR w/P.G.	3779911	**RING,** clutch flange retaining	1
60-64	CORVAIR, F.C. w/P.G.	3755412	**WASHER,** thrust (1 1/2 O.D. x 31/32 I.D.)	1

4.163 PLATE, Transmission Clutch Drive and Driven

60	CORVAIR w/P.G.	3764461	high clutch driven	3
61-69	CORVAIR, F.C. w/P.G.	3779903	high clutch driven	3
60-69	CORVAIR, F.C. w/P.G.	6256553	reverse clutch driven (wavy)	A.R.
60	CORVAIR w/P.G.	3748703	**PLATE ASSY.,** high clutch drive	2
60-69	CORVAIR, F.C. w/P.G.	3832386	**PLATE ASSY.,** reverse clutch drive	A.R.
61-69	CORVAIR, F.C. w/P.G.	3779904	**PLATE ASSY.,** high clutch drive	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

4.164 CLUTCH ASSY.—HUB—RING—SEAT—SPRING UNIT—WASHER, Transmission

60-61	CORVAIR, F.C. w/P.G. exc. H/Per. (1st design)	3787126	high (Note 1)	1
61-64	CORVAIR, F.C. w/P.G. (2nd design)	3851626	high (Note 1)	1

NOTE 1 1st design used on models without raised "X" on high clutch flange & 2nd design used on models with raised "X" on high clutch flange.

65-69	CORVAIR, F.C. w/P.G.	3863132	high	1
60-69	CORVAIR, F.C. w/P.G.	6256260	**HUB,** high clutch	1
60-69	CORVAIR, F.C., w/P.G.	6255698	**RING,** high clutch piston return spring seat retainer ($1^{31}/_{32}$" dia.)	1
60-69	CORVAIR, F.C. w/P.G.	6257190	**RING,** reverse clutch piston return spring ($2^{1}/_{8}$ I.D.)	1
60-69	CORVAIR, F.C. w/P.G.	3796576	**RING,** snap, reverse clutch pack, retaining ($7^{1}/_{4}$ free dia.—angled cut)	1
60-69	CORVAIR, F.C. w/P.G.	6256257	**SEAT,** high clutch piston return spring ($3^{25}/_{64}$)	1
60-69	CORVAIR, F.C. w/P.G.	6255697	**SEAT,** reverse clutch piston return spring ($3^{31}/_{32}$ O.D. x $2^{5}/_{16}$ I.D.)	1
60-69	CORVAIR, F.C. w/P.G.	3760223	**SPRING UNIT,** high clutch and reverse clutch piston return (20 springs)	A.R.
60-69	CORVAIR, F.C. w/P.G.	6256259	**WASHER,** high clutch, hub thrust ($2^{3}/_{64}$ O.D.)	1

4.166 PISTON—BALL—SEAL UNIT, Transmission Clutch

60-69	CORVAIR, F.C. w/P.G.	3818726	reverse (cast 3818726) ($6^{1}/_{2}$" O.D.)	1
60-69	CORVAIR, F.C. w/P.G.	3782107	high clutch ($4^{3}/_{4}$ O.D.)	1
61-62	F.C. w/P.G.	7002117	**BALL,** anti-centrifugal valve ($^{3}/_{16}$")—(3.825)	1
60-69	CORVAIR, F.C. w/P.G.	3785351	**SEAL UNIT,** high piston	1
60-62	CORVAIR, F.C. w/P.G. (1st design)	3785439	**SEAL UNIT,** reverse piston (Note 1)	1
62-69	CORVAIR, F.C. w/P.G. (2nd design)	3799008	**SEAL UNIT,** reverse piston (Note 1)	1

NOTE 1 Consists of one inner and one outer seal.

65-66	CORVAIR, F.C. w/P.G.	3794123	**SEAL UNIT,** piston	1

4.169 DRUM ASSY.—BUSHING—RING—WASHER, Transmission Clutch

60-69	CORVAIR, F.C. w/P.G.	6257770	w/bushing, high clutch (cast 6256253)	1
62-69	CORVAIR, F.C. w/P.G.	6257965	**BUSHING,** high clutch drum ($1^{27}/_{64}$ O.D.)	1
60-69	CORVAIR, F.C. w/P.G.	3817693	**RING,** drum oil sealing	2
60-69	CORVAIR, F.C. w/P.G.	3779038	**WASHER,** drum thrust (.058) (Note 1)	1
60-69	CORVAIR, F.C. w/P.G.	3779039	**WASHER,** drum thrust (.089) (Note 1)	1

NOTE 1 Use selectively.

4.175 CARRIER ASSEMBLY—GEAR—PINION—SHAFT, Transmission Planet

60-64	CORVAIR, F.C. w/P.G.	3795244	(spline depth $1^{27}/_{32}$")	1
65-69	CORVAIR, F.C. w/P.G.	3795320		1
60-69	CORVAIR, F.C. w/P.G.	6255734	**GEAR,** input sun	1
60-69	CORVAIR, F.C. w/P.G.	6255732	**PINION,** short	3
61-69	CORVAIR, F.C. w/P.G.	3795248	**PINION,** long ($1^{1}/_{4}$" O.L.)	3
60-69	CORVAIR, F.C. w/P.G.	6255735	**SHAFT,** short pinion	3
61-69	CORVAIR, F.C. w/P.G.	3795249	**SHAFT,** long pinion ($1^{3}/_{4}$" O.L.)	3

4.176 BEARING—SPACER—WASHER, Planet Carrier

60-69	CORVAIR, F.C. w/P.G.	6256686	short pinion needle ($^{11}/_{16}$ O.L.)	60
60-69	CORVAIR, F.C. w/P.G.	6256059	long pinion needle ($^{1}/_{2}$ O.L.)	A.R.
60-69	CORVAIR, F.C. w/P.G.	6255737	**SPACER,** pinion needle bearing ($^{1}/_{2}$ I.D. x $^{21}/_{32}$ O.D. x $^{3}/_{32}$ thk.) (Note 1)	A.R.

NOTE 1 On models without raised "X" on high clutch flange, this spacer is used in all locations for a total of (15).
On Models with raised "X" on high clutch flange, used in all locations except between the two rows of needle bearings on long planets for total of (12).

61-69	CORVAIR, F.C. w/P.G.	3751043	**SPACER,** pinion needle bearing ($^{1}/_{2}$ I.D. x $^{11}/_{16}$ O.D. x $^{3}/_{32}$ thk.) (Note 2)	1

NOTE 2 Use (3) between the two rows of needle bearings on long planets on CORVAIR, F.C. models with raised "X" on high clutch flange.

60-69	CORVAIR, F.C. w/P.G.	6256827	**SPACER,** rear ($1^{1}/_{4}$ free dia. x .016 thk.)	A.R.
60-69	CORVAIR, F.C. w/P.G.	6255738	**WASHER,** pinion rear thrust (1 O.D. x .015" thk. on tab)	6
60-69	CORVAIR, F.C. w/P.G.	6256160	**WASHER,** input sun gear thrust ($1^{5}/_{8}$" O.D.—6 grooves)	1
60-69	CORVAIR, F.C. w/P.G.	6256857	**WASHER,** low sun gear front thrust ($1^{1}/_{2}$" O.D.)	1
60-69	CORVAIR, F.C. w/P.G.	3790777	**WASHER,** pinion thrust ($1^{1}/_{2}$" ctr. to ctr. of holes) (1" dia. holes)	A.R.

4.187 GEAR, Transmission Rear Unit

60-69	CORVAIR, F.C. w/P.G.	6256552	reverse ring (25 splines)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit Iron

4.195 PAN—CONNECTOR—SCREW, Transmission Oil

60-69	CORVAIR, F.C. w/P.G.	6256354		1
60-69	CORVAIR, F.C. w/P.G.	3759304	**CONNECTOR,** filler tube ($1^{5}/_{16}$ O.D. x $^{19}/_{32}$ thk.)	1
60-69	CORVAIR, F.C. w/4-SPD.	3923420	**SCREW,** pan drain ($1/2$"—20 x $^{13}/_{16}$")—(1.453)	A.R.

4.196 GASKET, Transmission Oil Pan

60-69	CORVAIR, F.C.	3921989	($1/2$" I.D. x 9/10" O.D. x $^{25}/_{32}$")	A.R.
60-69	CORVAIR, F.C. w/P.G.	6256356	($8^{9}/_{16}$ x $12^{54}/_{64}$ w/fourteen $^{3}/_{8}$ holes)	1

4.197 SCREEN ASSY.—SEAL, Transmission Oil Pan Pump Suction

60-69	CORVAIR, F.C. w/P.G.	3824691	valve body	1
60-68	CORVAIR, F.C. w/P.G.	6257263	**SEAL,** screen	1

4.200 PUMP ASSY.—PUMP UNIT—VALVE, Transmission Oil Supply

60-69	CORVAIR, F.C. w/P.G.	3865940	front (Note 1)	1

NOTE 1 The above part includes front oil pump priming parts, valve 3850849, valve spring 3850850 and valve spring washer 3850851.

The above parts used in conjunction with pump assy. 3865940 will be used as a service substitution for all models.

60-69	CORVAIR, F.C. w/P.G.	6257762	**PUMP UNIT,** rear oil (Note 2)	1

NOTE 2 Contains one (1) Pump Assy. and one (1) Plate.

60-69	CORVAIR, F.C. w/P.G.	6256323	**VALVE,** oil pump check	1
60-69	CORVAIR, F.C. w/P.G.	3783780	**VALVE,** oil pump check (rear)	1

4.203 OIL SUPPLY PUMP PARTS

60-69	CORVAIR, F.C. w/P.G.	6255748	**PLATE,** rear pump wear ($5^{1}/2$ O.D. x $^{1}/2$ thk.)	1
64-69	CORVAIR, F.C. w/P.G.	3850849	**VALVE,** front oil pump priming	1
60-62	CORVAIR, F.C. w/P.G.	3780998	**SHAFT,** transmission stator (27 teeth)	1
63-69	CORVAIR, F.C. w/P.G.	3794254	**SHAFT,** transmission stator (27 teeth)	1
60-69	CORVAIR, F.C. w/P.G.	6256238	**SHAFT ASSY.,** front pump	1
61-63	CORVAIR, F.C. w/P.G.	3750866	**SUPPORT ASSY.,** stator	1
60-69	CORVAIR, F.C. w/P.G.	6255756	**RING,** stator shaft to turbine shaft oil ($1^{1}/4$")	1
60-61	CORVAIR, FLC. w/P.G.	9414842	**RING,** retaining front oil pump shaft end thrust washer ($1^{7}/_{32}$" I.D.)—(8.934)	2
60-64	CORVAIR, F.C. w/P.G.	6257254	**RETAINER,** front pump air relief valve	1
60-69	CORVAIR, F.C. w/P.G.	6256292	**BUSHING,** rear pump body (2 O.D.)	1
60-69	CORVAIR, F.C. w/P.G.	6256246	**BUSHING,** front pump ($^{37}/_{64}$ I.D.)	1
64-69	CORVAIR, F.C. w/P.G.	3849107	**BUSHING,** front pump drive gear	1
60-69	CORVAIR, F.C. w/P.G.	3853984	**SEAL,** trans. stator shaft	1
60-69	CORVAIR, F.C. w/P.G.	3789013	**SEAL,** trans. front cover	1
60-69	CORVAIR, F.C. w/P.G.	6256192	**SEAL,** converter oil ($2^{13}/_{32}$ O.D. x $^{3}/_{8}$ thk.)	1
69	CORVAIR w/A.T.	1384746	**SEAL,** oil pump body inner—(4.226)	1
60-69	CORVAIR, F.C. w/P.G.	6256358	**PIN,** rear pump drive ($1/4$ x $^{1}/_{8}$)	2
60-69	CORVAIR, F.C. w/P.G.	6256250	**GASKET,** front pump ($8^{5}/_{8}$ O.D. x $^{1}/_{64}$ thk.)	1
60-69	CORVAIR, F.C. w/P.G.	6255683	**WASHER,** front pump drive shaft thrust (3 tangs)	1
64-69	CORVAIR, F.C. w/P.G.	3850851	**WASHER,** front pump priming valve spring	1
60-68	CORVAIR, F.C. w/P.G.	9410883	**BOLT,** front pump cover, front pump cover to cover ($^{5}/_{16}$"—18 x $1^{3}/_{8}$") (280M-steel)—(8.900)	A.R.
64-69	CORVAIR, F.C. w/P.G.	3850850	**SPRING,** front pump primary valve—(4.226)	1

4.205 MODULATOR and PARTS, Vacuum

60-69	CORVAIR, F.C. w/P.G.	3812741	(1 piece design)	1
60-63	CORVAIR, F.C. w/P.G.	6257529	**BODY,** hydraulic modulator	1
64-69	CORVAIR, F.C. w/P.G.	3847803	**BODY,** hydraulic modulator	1
60-69	CORVAIR, F.C. w/P.G.	6256340	**VALVE** ($2^{23}/_{32}$ O.L.)	1
60-69	CORVAIR, F.C. w/P.G.	6257218	**GASKET** (1 O.D. x $^{23}/_{32}$" I.D. x $^{1}/_{64}$" thk.)	1
60	CORVAIR w/P.G.	3772248	**TEE,** hose ($1^{19}/_{32}$ O.L.—nylon)	1
60-69	CORVAIR, F.C. w/P.G.	3841391	**CLIP,** modulator pipe to trans. ($^{7}/_{16}$")	1
69	CORVAIR w/A.T. (6 cyl.)	3945472	**CLIP,** transmission oil cooler pipe	1
60-69	CORVAIR, F.C.	3830663	**HOSE** ($^{7}/_{16}$" I.D.)—(8.962)	A.R.

4.208 VALVE, Hydraulic Modulator

64-69	CORVAIR, F.C. w/P.G.	3847804		1

4.212 SLEEVE, Servo

60-69	CORVAIR, F.C. w/P.G.	3759098	regulator valve spring retainer ($1^{17}/_{32}$ O.L.)	1

4.215 PLATE, Transmission Transfer

60-63	CORVAIR, F.C. w/P.G.	6257530		1
64-69	CORVAIR, F.C. w/P.G.	3847799		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

4.216 BODY ASSEMBLY and PARTS, Transmission Main Valve

POWERGLIDE BODY ASSY., COMPLETE

60-63	CORVAIR, F.C.	6257527	complete	1
64-66	CORVAIR, F.C. (exc. 4/1BC);			
68-69	CORVAIR (exc. 4/1BC)	3847798	complete	1
65-66	CORVAIR w/4/1BC,			
68-69	CORVAIR w/4/1BC	3870368	complete	1

POWERGLIDE BODY ASSY., LOWER

60-69	CORVAIR, F.C. w/P.G.	6256300	**VALVE,** pressure regulator	1
60-69	CORVAIR, F.C. w/P.G.	6257749	**VALVE,** manual	1
64-69	CORVAIR w/P.G.	3830128	**VALVE,** downshift timing	1
61-65	F.C. w/P.G.	3786998	**VALVE UNIT,** oil cooler by-pass	1
60-69	CORVAIR, F.C. w/P.G.	6257908	**SPRING,** press. regulator valve ($3^{5}/_{32}$ O.L.)	1
60-69	CORVAIR, F.C. w/P.G.	6257100	**SPRING,** oil pump check valve ($^{25}/_{32}$" O.L.)	2
63-66	CORVAIR, F.C. w/P.G.	3814086	**SPRING,** pressure regulator	1
60-63	CORVAIR, F.C.	3857756	**SPRING UNIT,** low and drive valve	1
64-66	CORVAIR, F.C.	3857754	**SPRING UNIT,** low and drive valve	1
60-69	CORVAIR, F.C. w/P.G.	3744352	**RING,** snap, press regulator valve spring inner seat	1
65-66	CORVAIR, F.C.	9411820	**RING,** internal retaining (type T)—(8.934)	1

4.217 GASKET and ACCUMULATOR DETAILS, Transmission Main Valve Body

60-69	CORVAIR, F.C. w/P.G.	6257531	to case	1
60-68	CORVAIR, F.C. w/P.G.	6256296	valve body	1
60-69	CORVAIR, F.C. w/P.G.	3767300	**NUT,** throttle valve spring adjusting ($^{1}/_{4}$" x 28)	1
60-69	CORVAIR, F.C. w/P.G.	3769896	**PIN,** locating, valve body to case ($^{1}/_{4}$ x $^{3}/_{4}$)	2
60-69	CORVAIR, F.C. w/P.G.	6256830	**SCREW,** body assy. and modulator body to trans. transfer plate assy. ($^{1}/_{4}$—20 x $^{5}/_{8}$)	4
60-62	CORVAIR, F.C. w/P.G.	9416713	**RING,** throttle valve locating (type TE) (for $^{7}/_{32}$" shaft)—(8.934)	1

4.218 LEVER ASSY.—RING—SCREW, Manual Valve

60-69	CORVAIR, F.C. w/P.G.	6257747	range selector inner adjusting, w/sleeve	1
60-62	CORVAIR, F.C. w/P.G.	9416094	**RING,** throttle valve spring seat retainer—(8.934)	1
60-69	CORVAIR, F.C. w/P.G.	3770137	**SCREW,** range selector inner lever adjusting (10—24 x $^{3}/_{8}$)	1

4.220 SEAL, Transmission Parking Lock

63-69	CORVAIR, F.C. w/P.G.	8623040	throttle shaft	1

4.226 SEAL—SPRING—VALVE, Transmission Front Servo

69	CORVAIR w/A.T.	1384746	oil pump body inner	1
64-68	CORVAIR, F.C. w/P.G.	3850850	**SPRING,** front pump priming valve	1
64-68	CORVAIR, F.C. w/P.G.	3850849	**VALVE,** front oil pump priming valve	1

4.228 PISTON—ROD—SPRING—RING—WASHER—RETAINER, Low Servo

60-69	CORVAIR, F.C. w/P.G.	6256264		1
64-69	CORVAIR, F.C. w/P.G.	3847806	**ROD,** piston	1
60-68	CORVAIR, F.C. w/P.G.	6256263	**SPRING,** piston apply ($^{5}/_{8}$ O.L. w/$3^{13}/_{32}$ coils)	1
60-63	CORVAIR, F.C. w/P.G.	6256266	**SPRING,** piston return ($1^{35}/_{64}$ free length—$4^{23}/_{64}$ coils)	1
64-69	CORVAIR, F.C. w/P.G.	3847807	**SPRING,** piston return	1
60-69	CORVAIR, F.C. w/P.G.	3928593	**RING,** piston ($2^{11}/_{32}$ O.D. aluminum)	1
60-68	CORVAIR, F.C. w/P.G.	6257022	**RING,** piston ($2^{11}/_{32}$ O.D.—aluminum)	1
60-64	CORVAIR, F.C. w/P.G.	3702807	**WASHER,** piston apply spring ($^{7}/_{8}$" O.D. x $^{1}/_{16}$" thk.)	1
62-69	CORVAIR, F.C. w/P.G.	3713624	**RETAINER,** piston rod (hairpin type)	1

4.233 STRUT, Low Brake Band

60-69	CORVAIR, F.C. w/P.G.	6257636	anchor	1
60-69	CORVAIR, F.C. w/P.G.	3872337	**STRUT ASSY.,** apply	1

4.251 BAND ASSEMBLY, Transmission Low Brake

60-69	CORVAIR, F.C. w/P.G.	6256270		1

4.253 SCREW, Brake Band Adjusting

60-69	CORVAIR, F.C. w/P.G.	6256276	anchor ($^{1}/_{2}$—20 x $1^{19}/_{64}$ full thd.)	1

4.256 GOVERNOR ASSY.—GEAR—PIN—SEAL, Transmission

60-66	CORVAIR, F.C. w/P.G. (exc. 4/1BC),			
67	CORVAIR w/P.G.,			
68-69	CORVAIR w/P.G. (exc. 4/1BC)	6256327	w/cover	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT

65-66	CORVAIR w/P.G. (4/1BC),			
68-69	CORVAIR w/P.G. (4/1BC)	3878298	w/cover	1
60-69	CORVAIR, F.C. w/P.G.	3777168	**GEAR,** governor driven	1
60-69	CORVAIR, F.C. w/P.G.	6256242	**GEAR,** governor drive	1
60-62	CORVAIR, F.C. w/P.G.	273390	**PIN,** gov. driven gear to gov. sleeve—(8.939)	1
61-69	CORVAIR, F.C. w/P.G.	3702148	**PIN,** weight (.090 dia. x $1\frac{5}{8}$)	2
60-69	CORVAIR, F.C. w/P.G.	6256328	**SEAL,** "O" ring, gov. cover to case	1

4.260 LENS ASSY.—SEAL, Retarding Brake Control

Not required in this group. See group 10.275.	5939863	
Not required in this group. See groups 0.829 and 4.626	3748023	**SEAL**
Not required in this group. See groups 0.892 and 4.626	3748022	**SEAL**

4.278 SEAL, Transmission Throttle Valve

60-67	CORVAIR, F.C. w/P.G.	8623040	throttle shaft seal—(4.220)	1

4.302 SELECTOR—LEVER—PIN, Transmission Shifter

60-65	CORVAIR, F.C. w/3-SPD.	3779679	($\frac{1}{4}$—20 selector bolt holes)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775030	($2\frac{1}{2}$ O.L.)	1
66-69	CORVAIR w/3-SPD.	3859949	shifter	1
66-69	CORVAIR w/4-SPD.	3859968	shifter	1
61-63	CORVAIR, F.C. w/4-SPD.	3775039	**LEVER,** reverse ($2\frac{5}{32}$ O.L. x $\frac{7}{32}$ thk.)	1
64-65	CORVAIR, F.C. w/4-SPD.	3833321	**LEVER,** reverse	1
66-69	CORVAIR w/4-SPD.	3859965	**LEVER,** reverse	1
61-63	CORVAIR, F.C. w/4-SPD.	3781370	**PIN,** reverse pivot lever ($1\frac{1}{32}$ O.L.)	1
64-65	CORVAIR, F.C. w/4-SPD.	3833196	**PIN,** reverse pivot lever	1
66-69	CORVAIR w/4-SPD.	3859966	**PIN,** reverse pilot lever	1
66-69	CORVAIR w/4-SPD.	3859973	**PIN,** reverse lever to reverse shaft	1

4.303 FORK—HEAD, Gearshift

60-65	CORVAIR, F.C. w/3-SPD.	6256630	second and third	1
60-65	CORVAIR, F.C. w/4-SPD.	3837824	first and second (malleable type)	1
61-65	CORVAIR, F.C. w/4-SPD.	3837825	third and fourth (malleable type)	1
64-65	CORVAIR, F.C. w/4-SPD.	3849459	reverse shifter	1
66-69	CORVAIR w/4-SPD.	3859957	1st and 2nd	1
66-69	CORVAIR w/3-SPD.		1st and reverse, 2nd and 3rd,	
66-69	CORVAIR w/4-SPD.	3859960	3rd and 4th	A.R.
60-65	CORVAIR, F.C. w/3-SPD.	6257278	**FORK ASSY.,** first and reverse	1
61-63	CORVAIR, F.C. w/4-SPD.	3775109	**FORK ASSY.,** reverse	1
66-69	CORVAIR w/3-SPD.	3859948	**HEAD,** 1st and reverse	1
66-69	CORVAIR w/4-SPD.	3859959	**HEAD,** 1st and 2nd	1
66-69	CORVAIR w/4-SPD.		**HEAD,** 3rd and 4th,	
66-69	CORVAIR w/3-SPD.	3859962	2nd and 3rd	1
66-69	CORVAIR w/4-SPD.	3859963	**HEAD,** reverse	1
61-63	CORVAIR, F.C. w/4-SPD.	3775110	**HEAD ASSY.,** reverse	1
64-66	CORVAIR, F.C. w/4-SPD.	3833194	**HEAD ASSY.,** reverse	1

4.307 INTERLOCK—INHIBITOR ASSY.—ROD—SPRING—SEAT—PIN—LOCK, Transmission Shifter

60-65	CORVAIR, F.C. (exc. P.G.)	3812874	($\frac{23}{64}$ dia. x $\frac{47}{64}$ long)	1
61	CORVAIR, F.C. w/4-SPD.	3775070	**INHIBITOR ASSY.,** reverse	1
62-69	CORVAIR, F.C. w/4-SPD.	3814306	**ROD,** reverse inhibitor ($1\frac{7}{16}$ O.L.)	1
62-64	CORVAIR, F.C. w/4-SPD.,			
65	F.C. w/4-SPD.,			
66-69	CORVAIR w/4-SPD.	3820112	**SPRING,** inhibitor	2
65	CORVAIR w/4-SPD.	3866718	**SPRING,** reverse inhibitor	2
62-69	CORVAIR, F.C. w/4-SPD.	3799368	**SEAT,** inhibitor detent ball and spring	1
61-69	CORVAIR, F.C. w/4-SPD.	3775038	**PIN,** interlock ($\frac{3}{8}$ O.D.)	1
60-63	CORVAIR, F.C. w/3-SPD.	591539	**LOCK,** interlock ret. stud nut	2

4.309 SHAFT, Gear Shifter

60-65	CORVAIR, F.C. w/3-SPD.	6256629	first and reverse ($6\frac{5}{16}$ O.L.)	1
60-65	CORVAIR, F.C. w/3-SPD.	6256631	second and third ($\frac{25}{32}$ O.L.)	1
60	CORVAIR w/3-SPD.	3779680	selector	1
61-65	CORVAIR, F.C. w/3-SPD.	3784920	selector ($8\frac{1}{8}$ O.L.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3781758	selector ($7\frac{7}{16}$ O.L.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3780113	first and second ($7\frac{19}{32}$ O.L.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775034	third and fourth ($7\frac{19}{32}$ O.L.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775040	reverse shifter fork ($3\frac{5}{8}$ O.L.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3788156	reverse head ($8\frac{3}{32}$ O.L.)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66-69	CORVAIR w/3-SPD.	3859947	1st and reverse	1
66-69	CORVAIR w/3-SPD.		2nd and 3rd,	
66-69	CORVAIR w/4-SPD.	3859961	3rd and 4th	A.R.
66-69	CORVAIR w/4-SPD.	3859958	1st and 2nd	1
66-69	CORVAIR w/4-SPD.	3859964	reverse head	1
66-69	CORVAIR (exc. P.G.)	3859969	shift selector	1

4.311 PLUG—SPRING—GASKET, Gearshift Detent

60-61	CORVAIR, F.C. w/3-SPD.	445078	1st and reverse detent spring, 3rd and 4th detent retainer (1/2"—20)—(8.971)	1
60-69	CORVAIR, F.C. w/3-SPD.		shifter shaft bore seal, selector shaft rear bore seal, backing lamp switch hole,	
61-69	CORVAIR, F.C. w/4-SPD.	6256809	backing lamp switch hole (25/32)	A.R.
61-65	CORVAIR, F.C. w/4-SPD.	3775043	1st and 2nd detent retainer (1/2 —20 x 47/64)	1
60-69	CORVAIR, F.C. (exc. P.G.)	3709310	**SPRING,** trans. detent (8 coils—25/32" free length)	3
60-65	CORVAIR, F.C. w/3-SPD.		**GASKET,** 1st and rev. detent spring ret.,	
61-65	CORVAIR, F.C. w/4-SPD.	513975	1st, 2nd, 3rd and 4th detent spring retainer (1/2" I.D. x 13/16" O.D. nylon)—(1.456)	1
60-69	CORVAIR, F.C. w/4-SPD.	3921989	**GASKET,** 1st, 2nd, 3rd and 4th detent spring—(1.456)	A.R.

4.313 SEAL, Transmission Internal Selector Shaft

60-69	CORVAIR, F.C. (exc. P.G.)	3866719		1

4.317 RETAINER—LOCK, Transmission Rear Main Bearing

61-63	CORVAIR, F.C. w/4-SPD.	3775046	rear bearing (3/4 thk.)	1
64-65	CORVAIR, F.C. w/4-SPD.	3852241	rear bearing	1
66-69	CORVAIR (exc. P.G.)	3859983	rear bearing	1
66-69	CORVAIR (exc. P.G.)	3864499	**LOCK,** retainer	1

4.329 ADAPTER—RETAINER, Speedometer

65-69	CORVAIR	3863646	speedo. flex shaft	1
65-69	CORVAIR	3858813	**RETAINER,** speedo. shaft adapter	1

4.330 CUP, Speedometer Adapter

60-69	CORVAIR, F.C.	860187	drive (1/4"—32 x 3/16")	1

4.337 GEAR, Speedometer Driven

65	CORVAIR w/3.36 axle		(6.50 x 13),	
68	CORVAIR	3860345	(3.55 axle w/7.00 x 13) (green—22 teeth)	1
68	CORVAIR	3860343	(3.08 axle w/7.00 x 13 tires) (blue—20 teeth)	1

4.338 FITTING ASSY.—FITTING—SEAL—RETAINER, Speedometer Driven Gear

60	CORVAIR w/3.55 axle (1st design),			
61-63	F.C. w/3.89 axle	6256593	w/gear (natural color) (24 teeth)	1
60	CORVAIR w/3.89 axle (1st design)	6256591	w/gear (yellow) (26 teeth)	1
60-61	CORVAIR w/3.55 axle (2nd design) (exc. LAKEWOOD),			
61-62	CORVAIR (STA. WAG.) (exc. 3.89 axle),			
62-63	CORVAIR w/3.55 axle (exc. STA. WAG.),			
63	CORVAIR w/P.G. (exc. 3.89 axle),			
63	CORVAIR w/C.A.C. (exc. 3.89 axle, P.G.),			
60-61	CORVAIR w/3.89 axle (2nd design)	3780021	w/gear (brown) (25 teeth)	1
61-63	CORVAIR w/3.27 axle,			
63	CORVAIR (4-SPD. w/3.08 axle) (2nd design) (exc. C.A.C.),			
64	CORVAIR w/3.27 axle (exc. SPYDER),			
64	SPYDER, F.C. w/3.55 axle	3783087	w/gear (orange) (21 teeth)	1
61	F.C. w/3.27 axle,			
64	SPYDER, F.C. w/3.55 axle	3780019	w/gear (blue) (23 teeth)	1
64-65	F.C. w/3.89 axle	3833114	**FITTING,** w/gear (red) (22 teeth)	1
60-68	CORVAIR, F.C. (exc. 4-SPD.)		**SEAL,** "O" ring, fitting,	
62	F.C.	3708146	fitting hole plug (11/16" I.D.)	1
60	CORVAIR w/P.G.,			
61-65	CORVAIR, F.C.	3708148	**RETAINER,** fitting (9/32" I.D.)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

4.342 SHAFT ASSY.—SHAFT KIT—CLIP—RETAINER—SEAL, Speedometer without Casing

60	CORVAIR	1584405	(139 1/8 O.L.)	1
61-64	CORVAIR	3870871	(144 5/8 O.L.)	1
61	F.C.(1st design)	1589606	(171 1/8 O.L.)	1
61-65	F.C. (2nd design)	6409654	(170 1/8)	1
65-66	CORVAIR	6452661	(60 3/8 O.L.) (Note 1)	1
	NOTE 1 On later models see shaft w/casing.			
69	CORVAIR	6477478		1
60-69	CORVAIR, F.C.	6451120	**SHAFT KIT** (AC 622) (172 O.L.) (Note 2)	1
	NOTE 2 For models requiring length of 81" to 172". Cut to required length.			
60-69	CORVAIR, F.C.	6451067	**SHAFT KIT** (AC-615) (81 O.L.) (Note 3)	1
	NOTE 3 Cut to required length.			
61	F.C.,			
64	F.C.	3753771	**CLIP,** flexible shaft (1 11/32" max. length)—3.162)	A.R.
61-65	F.C.	3780691	**RETAINER,** flexible shaft—(2.559)	1
65-69	CORVAIR	3861052	**SEAL,** shaft assy. to strg. knuckle	1

SHAFT ASSY., with casing

NOTE Shaft length is generally 1 1/8" longer than casing dimension listed.

60-69	CORVAIR, F.C.	6451025	(55 O.L.) (CC 156)	1
60-69	CORVAIR, F.C.	3862083	(61 O.L.)	1
60-64	CORVAIR	3830459	(casing 143 1/2) (type AC-CC-65)	1
61-65	F.C.	5655509	(casing 170 7/8) (type AC-CC-96)	1
62-68	CORVAIR, F.C.	1588291	(67 1/2 O.L.) (type AC-CC-75)	1
65-68	CORVAIR	6451536	(58 1/2)	1
69	CORVAIR	6477614	(59 5/8" O.L.)	1

4.343 GEAR, Speedometer Drive

61-65	CORVAIR w/3.27 axle (exc. STA. WAG.)	3783093	8 teeth (1 27/32 O.D. x 27/32 thk.)	1
61-65	CORVAIR, F.C. w/3.55, 3.89 axle	3783099	8 teeth (1 49/64 O.D. x 27/32 thk.)	1
66-67	CORVAIR w/3.07, 3.08, 3.31, 3.36 axle	3708144	(7.00 x 13 tires)	1
66-67	CORVAIR w/3.36, 3.55 axle	3708145	(7.00 x 13 tires)	1

4.351 GEAR ASSY.—GEAR, Transmission Main Drive (Clutch)

60	CORVAIR w/3-SPD.	6256694	w/synchronizer spring	1
61-63	CORVAIR, F.C. w/3-SPD.	3774506	w/synchronizer spring	1
64-65	CORVAIR w/3-SPD.	3848099	w/synchronizer spring	1
64-65	F.C. w/3-SPD.	3848098	w/synchronizer spring	1
61	F.C. w/4-SPD. (1st design)	3785455	**GEAR** (2 29/32 O.L.) (16 teeth)	1
61-63	CORVAIR w/4-SPD.,			
61-63	F.C. w/4-SPD. (2nd design)	3814014	**GEAR** (2 25/32 O.L.) (17 teeth)	1
64	CORVAIR, F.C. w/4-SPD.(1st design)	3840294	**GEAR** (2 25/32 O.L.) (14 teeth) (hub towards engine w/30 degree angle)	1
64-65	CORVAIR, F.C. w/4-SPD. (2nd design)	3851508	**GEAR** (17 teeth) (hub towards engine w/45 degree angle)	1
66-69	CORVAIR (exc. P.G.)	3859987	**GEAR** (18 teeth)	1

4.352 ROLLER, Transmission Main Shaft

60-65	CORVAIR, F.C. w/3-SPD.	7450247	front bearing, rear (1/8" x 1/2")	A.R.
61-66	CORVAIR, F.C. w/4-SPD.,			
66-69	CORVAIR (exc. P.G.)	7451240	front bearing (3/32 x 15/32)	72

4.353 SPACER, Transmission Main Shaft

60-65	CORVAIR, F.C. w/3-SPD.	6256604	front roller bearing (1 1/8 O.D. x 59/64 I.D.)	1
60-65	CORVAIR, F.C. w/3-SPD.	6256605	rear roller bearing (1 1/4 O.D. x 1 1/64 I.D.)	1
60-63	CORVAIR, F.C. w/4-SPD.	3775048	rear roller bearing (1 3/16 O.D. x 1 3/32 I.D. x 3/64 thk.)	1
64-65	CORVAIR, F.C. w/4-SPD.	3840296	rear bearing	1

4.355 BEARING, Transmission Main Drive Gear

60-63	CORVAIR, F.C. w/4-SPD.,			
60-64	CORVAIR, F.C. w/3-SPD., (exc. O.D.),			
65-69	CORVAIR, F.C. (exc. P.G.)	907929	(single row) w/snap ring (ND 47507)	1
64	CORVAIR, F.C. w/4-SPD.	907930	(single row) w/snap ring	1

4.356 COVER—RETAINER, Transmission Clutch Gear Bearing

60-65	CORVAIR, F.C. w/3-SPD.	6256811	(4 1/2 O.D. w/four 19/64 holes)	1
61-65	CORVAIR, F.C. w/4-SPD.	3779336	**RETAINER** (6 holes—11/32)	1
66-69	CORVAIR (exc. P.G.)	3859988	**RETAINER**	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

4.358 GASKET, Transmission Clutch Gear Bearing

60-65	CORVAIR, F.C. w/3-SPD.	6256812	cover ($3^{11}/_{16}$ I.D. x $4^{7}/_{32}$ O.D.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775057	retainer (6 holes—$^{23}/_{64}$)	1
66-67	CORVAIR w/3-SPD. (exc. H.D.),			
66	CORVAIR w/4-SPD.	3839607	retainer ($3^{1}/_{2}$" I.D. x 4 O.D.)	1
68-69	CORVAIR w/3-SPD. (exc. H.D.),			
68-69	CORVAIR w/Saginaw 4-SPD.	3916113		1

4.376 RING, Transmission Clutch Gear Bearing

60-65	CORVAIR, F.C. w/3-SPD.	6256599	retaining ($1^{1}/_{4}$ free dia.)	1
60-65	CORVAIR, F.C. w/3-SPD.	3707174	locating ($2^{11}/_{16}$" free dia.)—(4.412)	1
62-65	CORVAIR, F.C. w/4-SPD.,			
66-69	CORVAIR (exc. P.G.),			
69	CORVAIR w/Saginaw 4-SPD.	590849	locating ($2^{11}/_{16}$ I.D. x $2^{23}/_{32}$ x $^{1}/_{16}$ thk.)	1
61-62	CORVAIR, F.C. w/4-SPD.	274267	clutch gear to input shaft and rear bearing retaining—(8.934)	A.R.
61-65	CORVAIR, F.C. w/4-SPD.	3775089	3rd and 4th hub retaining ($1^{1}/_{8}$ I.D. x $^{5}/_{64}$ thk.)	1
66-67	CORVAIR w/3-SPD.,			
68-69	CORVAIR w/Saginaw 4-SPD.	3709351	retaining (.087 thk.)	A.R.
	Not required in this group. See group 4.412	3709353		
	Not required in this group. See group 4.412	3709352		
	Not required in this group. See group 4.412	3709354		
	Not required in this group. See group 4.412	3709356		

4.380 CLUTCH ASSEMBLY—SYNCHRONIZER, Transmission

60-63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.	3774720	2nd and 3rd	1
61-62	CORVAIR, F.C. w/4-SPD.	3813904	3rd and 4th	1
61-65	CORVAIR, F.C. w/4-SPD.	3813901	1st and 2nd	1
63-65	CORVAIR, F.C. w/4-SPD.	3794203	3rd and 4th	1
64-65	CORVAIR w/3-SPD.	3848090	2nd and 3rd synchronizer	1
66-69	CORVAIR w/4-SPD.	3924769	**SYNCHRONIZER,** 1st and 2nd	1
66-69	CORVAIR w/3-SPD.		**SYNCHRONIZER,** 1st and reverse, 2nd and 3rd,	
66-69	CORVAIR w/Saginaw 4-SPD.	3924766	3rd and 4th	1

4.383 RING—RETAINER, Transmission Synchronizing

60-65	CORVAIR, F.C. w/3-SPD.	3845039	(blocking) ($^{3}/_{32}$" O.D. at small end)	2
61-63	CORVAIR, F.C. w/4-SPD.	3813902	(blocking) 1st and 2nd (30 teeth) ($^{1}/_{2}$ thk.)	2
61-63	CORVAIR, F.C. w/4-SPD.	3813905	(blocking) 3rd and 4th (30 teeth) ($^{7}/_{16}$ thk.)	2
64-65	CORVAIR, F.C. w/4-SPD.	3849962	(blocking) 1st and 2nd	2
64-65	CORVAIR, F.C. w/4-SPD.	3849964	(blocking) 3rd and 4th	2
66-69	CORVAIR (exc. P.G.)	3859027	(blocking)	A.R.
60-65	CORVAIR, F.C. w/3-SPD.	3845202	**RETAINER,** ring ($2^{3}/_{32}$" I.D.)	2

4.384 RING—KEY—SPRING, Transmission Synchronizing

66-69	CORVAIR (exc. P.G.)	3859025	all clutch hub retaining	2
62-65	CORVAIR, F.C. w/4-SPD	5257865	**KEY,** synchro (Warner gear 4682x)	1
66-69	CORVAIR (exc. P.G.)	3871250	**KEY,** all clutch	6
62-65	CORVAIR, F.C. w/4-SPD	5257866	**SPRING,** synchro (Warner Gear T91F-13B)	1

4.395 GEAR ASSY.—GEAR, Transmission 2nd Speed

60-63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.	3737859	w/energizing spring	1
64-65	CORVAIR	3834224	w/energizing spring	1
61	F.C. w/4-SPD. (1st design)	3775093	**GEAR** (26 teeth)	1
61-63	CORVAIR w/4-SPD.,			
61-63	F.C. w/4-SPD. (2nd design)	6257856	**GEAR** (28 teeth)	1
64-65	F.C. w/4-SPD.	3837300	**GEAR** (28 teeth)	1
64-65	CORVAIR w/4-SPD.	3837302	**GEAR** (26 teeth)	1
66-69	CORVAIR w/3-SPD. (exc. H.D.)	3859019	**GEAR** (24 teeth)	1
66-68	CORVAIR w/4-SPD.	3915055	**GEAR** (26 teeth)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

4.398 BEARING ASSY.—WASHER, Transmission 2nd Speed Gear Thrust

61-63	CORVAIR, F.C. w/4-SPD. . .	9415297		1
60-65	CORVAIR, F.C. w/3-SPD. . .	3736753	**WASHER** ($1^{3}/_{16}$" I.D. x $1^{25}/_{32}$" O.D. x $^{3}/_{16}$" thk.)	1

4.403 SHAFT, Transmission Main

60	CORVAIR w/3-SPD.	6257540	(9 O.L.) (8 teeth)	1
61-63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.	3848092		1
61	CORVAIR, F.C. w/4-SPD. . .	3785453	($13^{15}/_{16}$ O.L.) (16 teeth) (ring of white paint)	1
62-63	CORVAIR, F.C. w/4-SPD. . .	3813663	($13^{15}/_{16}$ O.L.) (16 teeth)	1
64-65	CORVAIR, F.C. w/4-SPD. . .	3852240		1
64-65	CORVAIR w/3-SPD.	3848093		1
66-69	CORVAIR (exc. P.G.)	3859980		1

4.408 BEARING ASSY., Transmission Main Shaft Rear

60-65	CORVAIR, F.C. w/3-SPD. . .	907258	ball (single row)	1
60-61	CORVAIR, F.C. w/4-SPD. (1st design)	907929	ball (single row) (N.D. 47507-51773A) unshielded—(4.355)	1
61-65	CORVAIR, F.C. w/4-SPD. (2nd design)	907443	ball (single row)	1
66-69	CORVAIR (exc. P.G.)	907810	single row	1

4.412 RING, Transmission Rear Bearing and Mainshaft

60-65	CORVAIR, F.C. w/3-SPD. . .	3712723	locating ($2^{11}/_{16}$" I.D.)—(4.477)	1
60-65	CORVAIR, F.C. w/3-SPD. . .	3707188	retaining (snap—.086—.088 thick)	1
60-69	CORVAIR, F.C. w/3-SPD. (exc. H.D.),			
66-69	CORVAIR w/4-SPD.	3707189	retaining (snap—.092—.094 thick)	1
60-65	CORVAIR, F.C. w/3-SPD. . .	3707190	retaining (snap—.092—.094 thick)	1
60-65	CORVAIR, F.C. w/3-SPD. . .	3707191	retaining (snap—.095—.097 thick)	1
61-65	CORVAIR, F.C. w/4-SPD. . .	3709351	retaining (.087 thk.)—(4.376)	1
61-66	CORVAIR, F.C. w/4-SPD. . .	3709353	retaining (.093 thk.)—(4.376)	1
61-66	CORVAIR, F.C. w/4-SPD. . .	3775053	retaining (.084 thk.)	1
61-66	CORVAIR, F.C. w/4-SPD. . .	3709352	retaining (.090)—(4.376)	1
61-66	CORVAIR, F.C. w/4-SPD. . .	3709354	retaining (.096)—(4.376)	1
61-66	CORVAIR, F.C. w/4-SPD. . .	3709356	retaining (.102)—(4.376)	1
61-65	CORVAIR, F.C. w/4-SPD.,			
66-68	CORVAIR (exc. P.G.)	3707174	locating ($2^{11}/_{16}$" I.D.)	1

4.413 SPRING, Transmission Synchronizer

60-65	CORVAIR, F.C. w/3-SPD. (exc. O.D., H.D.)	3737448	2nd speed gear energizing clutch gear and bearing energizing ($^{3}/_{8}$ free dia.)	A.R.
66-69	CORVAIR w/3-SPD.,			
66-68	CORVAIR w/4-SPD.	3924768	all locations	1

4.415 GEAR UNIT—GEAR—WASHER, Transmission High Speed

61-63	CORVAIR, F.C. w/4-SPD. . .	3821380	3rd, w/thrust washer	1
64-65	CORVAIR, F.C. w/4-SPD. . .	3837298	**GEAR,** 3rd	1
66-69	CORVAIR w/4-SPD.	3859986	**GEAR,** 3rd	1
62-63	CORVAIR, F.C. w/4-SPD. . .	3817703	**WASHER,** 3rd gear thrust ($1^{5}/_{16}$ I.D. x $1^{5}/_{8}$ O.D. x .030 thk.)	1

4.417 GEAR, Transmission 1st and Reverse

60-63	CORVAIR, F.C. CHEVY w/3-SPD.,			
64-65	F.C. w/3-SPD.	3725646	(29 teeth—16 spline)	1
61-63	CORVAIR, F.C. w/4-SPD. . .	3775090	1st ($3^{7}/_{8}$ O.D.) (31 teeth)	1
64-65	CORVAIR w/3-SPD.	3848091	1st and reverse	1
64-65	CORVAIR w/4-SPD.	3852243	1st	1
64-65	F.C. w/4-SPD.	3852244	1st	1
66-69	CORVAIR w/4-SPD.	3859981	1st	1
66-69	CORVAIR w/3-SPD.	3859014	1st speed	1
66-69	CORVAIR w/3-SPD.	3859015	reverse	1

4.419 SLEEVE—WASHER, Transmission 1st and Reverse

61-65	CORVAIR, F.C. w/4-SPD. . .	3775091	($1^{5}/_{8}$ O.D. x $1^{3}/_{8}$ I.D. x $1^{11}/_{32}$)	1
61-64	CORVAIR, F.C. w/4-SPD. . .	3775092	**WASHER,** thrust ($^{13}/_{32}$ I.D.)	1
64-65	CORVAIR, F.C. w/4-SPD. . .	3852242	**WASHER,** thrust ($1^{25}/_{64}$ dia.)	1
66-69	CORVAIR (exc. P.G.)	3870205	**WASHER,** reverse thrust (2 3/5 O.D.)	1
66-68	CORVAIR w/3-SPD.,			
68	CORVAIR w/4-SPD.	3884595	**WASHER,** reverse thrust ($1^{27}/_{32}$" O.D.)	1
66-68	CORVAIR w/3-SPD.,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

69	CORVAIR w/Saginaw 3-4-SPD.	3869940	**WASHER,** reverse thrust ($^{13}/_{32}$ O.D.)	1

4.421 GEAR, Transmission Countershaft

60	CORVAIR w/3-SPD.	6257017	(22-28 teeth)	1
61-63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.	3772522	(27-14-22T)	1
61	F.C. w/4-SPD. (1st design)	3784644	(33 teeth)	1
61-63	CORVAIR w/4-SPD.,			
61-63	F.C. w/4-SPD. (2nd design),			
64	F.C. w/4-SPD. (1st design)	6257855	(30 teeth) w/1 lubrication hole)	1
64	CORVAIR w/4-SPD. (1st design)	3833197	(w/1 lubrication hole—30T-27T-21T-14T-16T)	1
64-65	CORVAIR w/4-SPD. (2nd design)	3851510	(w/2 lubrication holes) (30T-27T-21T-14T-16T)	1
64-65	F.C. w/4-SPD. (2nd design)	3851512	(w/2 lubrication holes)	1
64-65	CORVAIR w/3-SPD.	3837983	(28T)	1
66-69	CORVAIR w/3-SPD.	3859951	**GEAR ASSY. counter** (29T)	1
66-69	CORVAIR w/4-SPD.	3859970	**GEAR ASSY.,** counter (29T-23T-19T-15T) (Note 1)	1
69	CORVAIR w/Saginaw 4-SPD.	3924708	**GEAR ASSY.,** counter	1

NOTE 1 Lube hole forward of reverse gear section.

4.422 ROLLER, Transmission Countershaft Gear

60-69	CORVAIR, F.C. w/3-SPD.,			
65-69	CORVAIR, F.C. w/4-SPD. (exc. F.C.)	435847	($^{1}/_{8}$" dia. x $^{3}/_{4}$" long)	A.R.
61-65	CORVAIR, F.C. w/4-SPD.	9414193	bearing ($^{7}/_{64}$ dia. x $^{3}/_{4}$ long)	92

4.423 WASHER—SPACER, Transmission Countergear Bearing

60-65	ALL w/3-SPD. (exc. H.D.)	3737814	($^{7}/_{8}$ I.D. x $1^{5}/_{32}$ O.D.) (Note 1)	2

NOTE 1 3737814 to be used on the needle bearing side of thrust washer 3740819.

60-63	CORVAIR, F.C. w/3-SPD.,			
65	F.C. w/3-SPD.	3740819	($1^{5}/_{8}$ O.D.)	2
61-65	CORVAIR, F.C. w/4-SPD.	3775060	($1^{5}/_{16}$ O.D. x $^{23}/_{32}$ I.D.)	2
61-65	CORVAIR, F.C. w/4-SPD.	3775063	($^{7}/_{8}$ O.D. x $^{23}/_{32}$ I.D.)	4
64-65	CORVAIR w/3-SPD.	3834209		2
66-69	CORVAIR w/Saginaw 3,4-SPD.	3890565	thrust ($1^{1}/_{64}$" I.D. x $1^{3}/_{8}$" I.D.)	2
66-69	CORVAIR w/Saginaw 3,4-SPD.	3859006	bearing ($^{31}/_{32}$" x $1^{15}/_{64}$" O.D.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775062	**SPACER,** bearing ($3^{25}/_{32}$ O.L. $^{7}/_{8}$ O.D. x $^{23}/_{32}$ I.D.)	1

4.428 SHAFT, Transmission Counter

60-65	CORVAIR, F.C. w/3-SPD.	3707179	($^{7}/_{8}$ dia. x $7^{1}/_{8}$ O.L.)	1
61-65	CORVAIR, F.C. w/4-SPD.	3775061	($8^{31}/_{64}$ O.L. x $^{45}/_{64}$ thk.)	1
66-69	ALL w/Saginaw 3,4-SPD.	3859005	($^{61}/_{64}$" dia. x $9^{19}/_{32}$**S** O.L.)	1

4.430 GEAR ASSY., Transmission Reverse Idler

60-63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.	3743358	(Note 1)	1

NOTE 1 If clash is experienced in first gear, also use 3725646, 1st and reverse gear.

61-63	CORVAIR, F.C. w/4-SPD.	3780111		1
64-65	CORVAIR, F.C. w/4-SPD.	3833198	(17 teeth)	1
64-65	CORVAIR, F.C. w/3-SPD.	3834233	for use w/bushing	1
66-69	CORVAIR w/4-SPD.	3859975	($1^{1}/_{2}$)	1
66-69	CORVAIR w/3-SPD.	3859007		1

4.433 SHAFT, Transmission Reverse Idler

60-62	CORVAIR, F.C. w/3-SPD.,			
64-65	CORVAIR, F.C. w/3-SPD. (2nd design)	3820058	w/oil flat. Use w/bushing	1
61-65	CORVAIR, F.C. w/4-SPD.	3780887	($3^{9}/_{16}$ O.L. x $^{5}/_{8}$ thk.)	1
63	CORVAIR, F.C. w/3-SPD.,			
64-65	F.C. w/3-SPD.,			
64-65	CORVAIR w/3-SPD. (6 cyl.) (1st design)	590831	w/o oil flat Use w/bearing	1
66-69	CORVAIR w/3-SPD.	3859012		1
66-69	CORVAIR w/4-SPD.	3910029	**SHAFT UNIT,** w/stop ring ($3^{27}/_{32}$)	1

4.435 PLUG-PIN-RING, Transmission Reverse Idler Shaft

60-65	CORVAIR, F.C. w/3-SPD.	6256810	bore seal ($^{31}/_{32}$)	1
60-65	CORVAIR, F.C. w/3-SPD.	590832	**PIN,** lock ($^{1}/_{4}$" tapered x $^{11}/_{16}$" long)	1
66-69	CORVAIR w/3-SPD.,			
67-68	CORVAIR w/4-SPD.	9414486	**RING,** gear retainer—(8.934)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

4.437 WASHER—BEARING, Transmission Reverse Idler Gear Thrust

60-65	CORVAIR, F.C. w/3-SPD.	3746442	rear ($1^{11}/_{16}$" O.D. x $^{3}/_{4}$" to $^{29}/_{64}$" I.D.)	1
64-65	CORVAIR, F.C. w/3-SPD.	591091	front ($^{49}/_{64}$ I.D.—4 notches x $1^{1}/_{4}$ O.D. x $^{1}/_{2}$ thk.)	1
66-67	CORVAIR w/3-SPD.	3859011	($^{49}/_{64}$ I.D. x $1^{1}/_{2}$ O.D.)	1
60-65	CORVAIR, F.C. w/3-SPD.	457202	**BEARING** (Terrington FA 20077)	1

4.589 SWITCH—NUT—LAMP ASSY.—BRACKET—LENS, Parking Brake Alarm

62-64	CORVAIR	3814030	(use w/985333)	1
65-66	CORVAIR	3862822		1
67-69	CORVAIR	4889278	(11.950)	1
60-64	CORVAIR	510657	**NUT,** attaching ($^{3}/_{8}$"—32)—(2.697)	1
60-64	CORVAIR	3780496	**LAMP ASSY.** (use w/985333)	1
62-64	CORVAIR	3814023	**BRACKET,** switch mtg. (use w/985333)	1
67-69	CORVAIR	3904840	**BRACKET**	1
64-66	CORVAIR	3843523	**LENS,** w/housing	1

4.591 LEVER ASSY., Parking Brake Apply

60-64	CORVAIR, F.C.,			
65	F.C.	3907218		1
65-66	CORVAIR,			
68-69	CORVAIR	3913800		1
67	CORVAIR	3901354		1

4.595 PAWL, Parking Brake

60-69	CORVAIR, F.C.	3715786		1

4.597 REPAIR KIT, Parking Brake Lever

60	CORVAIR	3732868	(Note 1)	1

NOTE 1 Contains (1) each spring and bushing.

4.625 PEDAL ASSEMBLY, Brake

60-61	CORVAIR	3783181		1
61-65	F.C.	3771981	upper	1
61-65	F.C.	3771982	lower	1
62-64	CORVAIR (exc. P.G.)	3812706		1
62-64	CORVAIR w/P.G.	3812707		1
65-66	CORVAIR (exc. P.G.)	3921144		1
65-66	CORVAIR w/P.G.	3921145		1
67-69	CORVAIR w/P.G.	3908359		1
67-69	CORVAIR (exc. P.G.)	3908355		1

4.626 BUSHING—SEAL, Brake Pedal

60-69	CORVAIR	3798256	pedal shaft ($^{5}/_{8}$)	A.R.
61-64	F.C.	3720800	lower half ($^{7}/_{8}$ I.D. x $^{37}/_{64}$ O.L.)	2
62-65	F.C.	3748023	**SEAL,**upper—(4.260)	1
62-65	F.C.	3748022	**SEAL,**lower—(4.260)	1

4.630 COVER, Brake (and Clutch) Pedal Pad

60-61	CORVAIR,			
62-69	CORVAIR (exc. P.G.)		brake,	
60-69	CORVAIR	6256368	clutch (rubber—$3^{5}/_{16}$ x $2^{5}/_{16}$)	A.R.
61-65	F.C.	3711698	(rubber—$3^{3}/_{4}$ x $2^{1}/_{2}$) (Note 1)	A.R.
65-69	CORVAIR w/P.G.	3881784	brake pedal pad	1

NOTE 1 Part number appears on these parts.

4.634 SHAFT—BUMPER—RETAINER, Brake (and Clutch) Pedal

61-65	F.C.	3719611	($^{7}/_{8}$ x $2^{7}/_{8}$)	A.R.
62	CORVAIR	3828427		1
63-64	CORVAIR	3828434		1
65-69	CORVAIR w/P.G.	3857914		1
61	F.C.	3779432	**BUMPER,** brake pedal (1 x $1^{1}/_{8}$")—(0.829)	1
61-65	F.C.	3712797	**RETAINER,** shaft (1 hole $^{11}/_{32}$ dia.)	A.R.
62	CORVAIR	3814039	**RETAINER,** pedal shaft inner ($^{5}/_{8}$ dia. shaft)	1
63-69	CORVAIR, F.C. w/A.T.	3828428	**RETAINER,** shaft	1

4.637 BOLT, Brake Pedal

61	F.C.	3763877	adjusting ($^{3}/_{8}$"—16 x $1^{9}/_{64}$")—(0.841)	1
62-64	F.C.	3814688	adjusting ($^{3}/_{8}$"—16 x $1^{9}/_{64}$")—(0.841)	1

4.639 SPRING, Brake Pedal Return

61-65	F.C.	3698665	pedal return—(4.760)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

4.648 BRACKET ASSY.—BOLT—GASKET—NUT—SUPPORT ASSY., Brake Main Cylinder and Pedal Shaft

65-66	CORVAIR	3852897	brake pedal	1
67-69	CORVAIR	3899879	brake pedal	1
62-64	CORVAIR (exc. P.G.)	3812884	**BOLT**, support lower end ($^{5}/_{16}$"—18 x $1^{5}/_{8}$")—(0.855)	1
62-64	CORVAIR w/P.G.	180081	**BOLT**, support lower end ($^{5}/_{16}$"—18 x $1^{1}/_{4}$")—(8.900)	1
63-69	CORVAIR	3792566	**GASKET**, mounting (.18" thk.)	1
62	CORVAIR	3791270	**GASKET**, mounting (.18" thk. w/three $^{13}/_{32}$" holes)	1
60-61	CORVAIR	9414297	**NUT**, attach. ($^{3}/_{8}$"—16 spring—type A)—(8.921)	1
60-61	CORVAIR	6256446	**SUPPORT ASSY.**	1
62-64	CORVAIR	3816118	**SUPPORT ASSY.**	1

4.649 REPAIR UNIT, Hydraulic Brake Main Cylinder

62	*CORVAIR (exc. Metallic Linings),*			
62	F.C. (2nd design)	3905792	(Bendix 617475)	1
60-61	CORVAIR, F.C.,			
62-63	CORVAIR,			
62	F.C. (1st design),			
63	F.C.	5463669	(1" dia.) (repair of 5462031-2540) (Moraine) (Note 1)	1

NOTE 1 Contains (1) each piston assembly, spring assy., cup, check valve assy., washer, retaining ring, boot, reservoir gasket, and filter.

62-63	CORVAIR w/metallic linings	5461305	($^{7}/_{8}$" dia.) (repair of 5461765) (Note 2)	1

NOTE 2 Contains (1) each piston assy., cup w/ring, valve assy., washer, spring assy., reservoir gasket, ring and boot.

64	CORVAIR	5465033	*($^{7}/_{8}$" dia.) (repair of 5464275-5464435) (Moraine)*	1
64	CORVAIR, F.C. (exc. metallic linings)		(repair of 5464405, 5464735, 5460594),	
64-66	CORVAIR, F.C. (exc. metallic lining)	5464569	(repair 5465094-5489) (Moraine) (1" dia.)	1
67-69	CORVAIR (exc. metallic linings)	5468453		1

4.650 CYLINDER ASSEMBLY, Hydraulic Brake Main

60-61	CORVAIR	5459390	(Moraine)	1
61-62	F.C.	5456789	(1" dia. piston) (320-W) (Moraine)	1
62-63	*CORVAIR w/metallic linings*	5464275	*($^{7}/_{8}$" dia. cyl.) (Moraine)*	1
62-66	CORVAIR, F.C.	5465489	(1 dia. cyl.) (Moraine)	1
67-69	CORVAIR (exc. metallic brake)	5458523	(1" dia. cyl.) (stamped BS)	1

4.651 BAIL—CAP—COVER—GASKET—SCREW, Main Cylinder Filler

64-66	CORVAIR, F.C.	5462996	reservoir cover	1
67-69	CORVAIR (exc. metallic brakes)	5468053	reservoir cover	1
60-61	CORVAIR, F.C.,			
62	F.C.	5460820	**CAP**, ($1^{3}/_{4}$ dia.)	1
65-66	*CORVAIR, F.C.*	2458523	**CAP**, (Bendix 617177)	1
62-64	CORVAIR,			
63	F.C.	5461879	**COVER**, reservoir	1
62-63	CORVAIR, F.C.	5461813	**COVER**, reservoir, vented ($1^{7}/_{16}$ O.D.) (Note 1)	1

NOTE 1 Not used on early F.C. models.

64-66	CORVAIR, F.C.	5462994	**COVER**, reservoir	1
67-69	CORVAIR (exc. metallic linings)	5462320	**COVER**	1
60-61	CORVAIR, F.C.	080445	**GASKET**, cap ($1^{1}/_{4}$ I.D. x $1^{11}/_{16}$ O.D.)	1
62-63	CORVAIR, F.C.	5460946	**GASKET**, reservoir (3 O.D. w/six $^{9}/_{32}$ holes)	1
64-66	CORVAIR, F.C.	5465725	**GASKET**, reservoir	1
65-66	CORVAIR, F.C.	2458524	**GASKET** (Bendix 617178)	1
67-69	*CORVAIR (exc. metallic brakes)*	5452319	**GASKET**, reservoir	1
62-64	CORVAIR, F.C.	5460944	**SCREW**, reservoir thumb ($1^{1}/_{4}$—20 thd.—$3^{3}/_{16}$ O.L.)	1

4.653 PISTON, Main Cylinder Floating

67-69	CORVAIR (exc. metallic brakes)	5452694	secondary	1

4.654 CUP, Main Cylinder Piston

60-66	CORVAIR, F.C. (exc. metallic linings),			
62-63	*CORVAIR (w/metallic linings)*	5460419	primary	1
60-62	CORVAIR (exc. metallic linings),			
63	CORVAIR, F.C.	5460420	secondary ($1^{1}/_{16}$ O.D.)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts DIVISION

65	F.C.	534075	(Bendix 49294)	1
67-69	CORVAIR	5453620	primary	2
65	F.C.	543345	secondary (Bendix 617632)	1
67-69	CORVAIR (exc. metallic brakes)	5460195	secondary	2

4.655 SPRING ASSY.—RETAINER, Main Cylinder Piston Return

60-65	CORVAIR, F.C. (exc. metallic linings)	5451121	(1 dia.)	1
65-66	CORVAIR, F.C.	534080	w/retainer (Bendix 308813)	1
62-64	CORVAIR w/metallic linings	5454142	w/retainer (11 coils—$3\frac{3}{8}$" O.L.)	1
67-69	CORVAIR (exc. metallic brake)	5452314	secondary piston	1
67-69	CORVAIR	5462637	check valve	A.R.
67-69	CORVAIR (exc. metallic brakes)	5451070	**RETAINER**, piston spring	1

4.656 RING—SCREW, Main Cylinder Lock

62-63	CORVAIR w/metallic linings	5461779	(1" O.D.)	1
62-66	CORVAIR, F.C.,			
67-69	CORVAIR (exc. metallic brakes)	5467356	lock	1
67-69	CORVAIR	5464418	**SCREW**, cyl. stop	1

4.657 VALVE ASSY.—WASHER, Main Cylinder

60-66	CORVAIR, F.C. (exc. metallic linings)	5453711	check	1
65-66	CORVAIR, F.C.	534082	check ($\frac{15}{16}$ O.D. w/4 lugs on O.D.) (Bendix 308815)	1
62-65	CORVAIR w/metallic linings	5454145	check	1
64	CORVAIR, F.C.	5462945	bleeder—(4.666)	2
67-69	CORVAIR	5462642	check	A.R.
60-62	CORVAIR (exc. metallic linings)	5456123	**WASHER**, valve seat ($\frac{9}{16}$" I.D. x 1" O.D.—rubber)	1
62-65	CORVAIR w/metallic linings	5461778	**WASHER**, valve seat ($\frac{7}{16}$" I.D. x $\frac{27}{32}$" O.D.—rubber)	1

4.658 ROD, Brake Main Cylinder

60-61	CORVAIR	5456432	push ($5\frac{7}{32}$ O.L.)	1
61-65	F.C.	3771990	push ($4\frac{17}{32}$ O.L.)	1
62-66	CORVAIR	3812970	clevis ($4\frac{13}{32}$ O.L.)	1
67-69	CORVAIR	3819077	push	1

4.659 BOOT—PROTECTOR—WASHER, Main Cylinder

60-69	CORVAIR, F.C.	5456779	(2 x $1\frac{17}{32}$"—rubber)	1
68-69	CORVAIR	5462635	**PROTECTOR**, primary cup	2
60-62	CORVAIR	3788262	**WASHER**, push rod clevis ($\frac{13}{32}$")	2

4.662 CLEVIS—PIN—RETAINER—SWIVEL, Main Cylinder Adjusting

62-67	CORVAIR	3812904	main cyl. push rod ($1\frac{3}{4}$ O.L.)	1
62-69	CORVAIR, F.C.	3817879	**PIN**, clevis brake main cylinder, P.B. push rod to brake pedal end and actuator lever (use w/3817880 ret.)	A.R.
62-69	CORVAIR, F.C.	3817880	**RETAINER**, clevis pin, brake main cylinder, P.B. push rod to brake pedal end and actuator lever	A.R.
60-61	CORVAIR	6255965	**SWIVEL**, push rod to pedal ($1\frac{33}{64}$ x $\frac{3}{4}$ w/one$\frac{3}{8}$ hole)	1

4.665 CYLINDER ASSEMBLY—REPAIR UNIT, Wheel Brake (See group 4.667 for piston repair unit)

60-64	CORVAIR (exc. metallic linings)	5459713	front (cast 5459117) ($\frac{7}{8}$")	L.H.
60-64	CORVAIR (exc. metallic linings)	5459712	front (cast 5459716) ($\frac{7}{8}$")	R.H.
60-64	CORVAIR	5459714	rear (cast 5459720)	L.H.
60-64	CORVAIR	5459715	rear (cast 5459721)	R.H.
61-65	F.C.	5456944	front (Model 543-G)	L.H.
61-65	F.C.	5456945	front (Model 543-H)	R.H.
61-65	F.C.	5460714	rear	L.H.
61-65	F.C.	5460713	rear	R.H.
63-64	CORVAIR w/metallic linings	5460812	front	L.H.
63-64	CORVAIR w/metallic linings	5460813	front	R.H.
65-68	CORVAIR	5465640	front	R.H.
65-68	CORVAIR	5465641	front	L.H.
65-69	CORVAIR	5465642	rear	R.H.
65-69	CORVAIR	5465643	rear	L.H.
69	CORVAIR	5463985	front	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

69	CORVAIR	5463986	front	L.H.

REPAIR UNIT

60-69	CORVAIR	5467233	rear (15/16" dia.) (Note 1)	2
60-69	CORVAIR	5467234	front (7/8" dia.) (Note 1)	2
61-65	F.C.	5467295	front (1 1/8" dia.) (Note 1)	A.R.
61-64	F.C.	5467284	rear (1" dia.) (Note 1)	A.R.
63	CORVAIR w/metallic linings	5461649	front (1" dia.) (Note 1)	2
67-69	CORVAIR	5466562	front (7/8 dia.) (without piston)	A.R.

NOTE 1 Contains 2 pistons, 2 piston cups, 2 boots and 1 spring and expander assy.

4.666 VALVE, Wheel Cylinder

60-64	CORVAIR	5455122	bleeder, rear	2
60-64	CORVAIR, F.C.		bleeder, front,	
62	F.C.		bleeder, rear,	
63-64	F.C.	5459470	bleeder, front and rear (1 15/32 O.L.)	2
65-69	CORVAIR	5462999	bleeder, front and rear	2

4.667 CUP, Piston (See group 4.665 for cylinder repair units)

60-69	CORVAIR	5455439	rear (15/16 dia.)	4
60-69	CORVAIR	5455481	front (7/8 dia.)	2
61-65	F.C.	5455298	front (1 1/8" dia.)	4
61-64	F.C.,			
62	CORVAIR (STD.)		rear,	
63-64	CORVAIR w/metallic linings,			
65	F.C.	5455299	front (1 dia.)	4

4.669 SPRING ASSEMBLY, Wheel Cylinder Piston

60-69	CORVAIR	5455422	rear (15/16 dia.)	2
65-69	CORVAIR	5455421	front (7/8 dia.)	2
61-64	F.C.	5455487	front (1 1/8" dia.)	2
61-65	F.C.		rear,	
63-64	CORVAIR w/metallic linings	5455489	front (1 dia.)	2

4.670 BOOT, Wheel Cylinder

60-69	CORVAIR	5459963	*front and rear (1 3/32" O.D. x 13/32" thk.)*	8
61-65	F.C.	5450031	front (1 7/16 O.D. x 9/16 thk.)	4
61-65	F.C.	231335	rear (1 1/2 O.D. x 1/2 thk.) (rubber)	4
63-64	CORVAIR w/metallic linings	5461238	front (1 1/4 O.D. x 1/2 thk.) (rubber)	4

4.671 WASHER—INSERT, Brake Hose Yoke

60-61	CORVAIR,			
62-65	F.C.,			
65-66	CORVAIR		front and rear,	
62-64	CORVAIR		rear,	
61	F.C.	231343	front (7/16 I.D. x 11/16 O.D. x 1/32—copper)	4
67-69	CORVAIR	5452322	**INSERT**, main cyl. pipe connector bolt	2

4.675 ROD, Wheel Cylinder to Brake Shoe Thrust

60-64	CORVAIR, F.C.		rear,	
60	CORVAIR,			
61	F.C.,			
62	CORVAIR,			
63-64	CORVAIR, F.C.	509233	front (2 1/16 long w/13/16 slot)	8
65-68	CORVAIR		rear,	
65-69	CORVAIR	5464748	front	4

4.680 HOSE ASSEMBLY, Hydraulic Brake

FRONT

60-68	CORVAIR	3910721	(7/16—20 ext.—3/8—24 int. 16 5/16 O.L.)	2
61-65	F.C.	3779287	(7/16—20 ext.—3/8—24 int.—12 7/8 O.L.)	2
69	CORVAIR	3953556	(16 3/8 O.L.)	2

REAR

60-64	CORVAIR, F.C.,			
65	F.C.	3910723	(7/16"—20 ext.—3/8"—24 int.—14 3/8" O.L.) (Note 1 & 2)	2

NOTE 1 When using on CORVAIR with H.D. Susp., wrap 3" of 3830666 HOSE around long fitting end.
NOTE 2. Part appears in both sections of this group.

65-66	*CORVAIR*	3910722	(3/8—24 int.—both ends—10 3/4 O.L.)	2
67-69	CORVAIR	3898208	(3/8—24 both ends—10 3/4 O.L.)	2

4.681 BRACKET—SPRING, Brake Hose or Pipe

60-64	CORVAIR	6257458	front (1 1/4 wide w/two 11/32 holes)	2
60-64	CORVAIR	6256851	rear (1 1/2" wide w/two 23/64"holes)	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

60-69	CORVAIR, F.C.	476737	**SPRING,** brake hose, front and rear (1 1/8" x 1 1/4" x 15/64") (yoke type)	4

4.683 FLUID—DECLENE, Hydraulic Brake

60-69	CORVAIR, F.C. (Heavy Duty)	5464835	super No. 11 (30 gallon)	A.R.
60-69	CORVAIR, F.C. (Heavy Duty)	5464831	supreme No. 11 (1 pint)	A.R.
60-69	CORVAIR, F.C. (Heavy Duty)	5464832	supreme No. 11 (1 quart)	A.R.
60-69	CORVAIR, F.C. (Heavy Duty)	5464833	supreme No. 11 (1 gallon)	A.R.
60-69	CORVAIR, F.C. (Heavy Duty)	5464834	supreme No. 11 (5 gallon)	A.R.
60-69	CORVAIR, F.C.	5450412	**DECLENE,** flushing fluid (1 qt.)	A.R.

4.685 PIPE ASSY.—GROMMET—SHIELD, Hydraulic Brake

67-69	CORVAIR	3905531	rear to distributor and switch	1
60-68	CORVAIR	3794074	**GROMMET,** main cylinder front pipe, front brake pipe (at R.H. wheel housing) (1 9/32 O.D. x 13/32 thk.)	1
69	CORVAIR	3950299	**GROMMET,** front brake pipe assy. grommet, front brake pipe grommet L.H. and R.H. wheel housing	A.R.
60-69	CORVAIR, F.C.	3886933	**SHIELD** (1/4" O.D.) pipe	A.R.

4.686 CONNECTOR—BRACKET—CLAMP—CLIP—NUT—SWITCH ASSY., Hydraulic Brake (See Group 4.686, P & A 30 for Connector Illustration)

61	F.C.	3760082	rear brake pipe to crossmember hose	1
65	CORVAIR	3862459	brake pipe tee	1
66	CORVAIR	3877753	front, brake pipe	1
67-69	CORVAIR	3899030	*front brake pipe connector*	1
67-69	CORVAIR	3899028	rear brake pipe front	1
61-64	CORVAIR	3795557	**CONNECTOR ASSY.,** rear brake pipe tee (Type "R")	1
61-65	F.C.	3779284	**CONNECTOR ASSY.,** main cyl. pipe tee (Type "P")	1
63-65	F.C.	6256567	**CONNECTOR ASSY.,** rear brake pipe tee (Type "R")	1
65	CORVAIR	3860275	**CONNECTOR ASSY.,** rear brake pipe tee (Type "R")	1
66	CORVAIR	3877761	**CONNECTOR ASSY.,** rear brake pipe (Type "R")	1
67-69	CORVAIR	3908332	**CONNECTOR ASSY.,** rear brake pipe (Type "R")	1
65-68	CORVAIR	3860271	**BRACKET,** front hose	2
69	CORVAIR	3950279	**BRACKET,** front brake hose	2
69	CORVAIR	3954495	**BRACKET,** front brake hose connector, L.H.	1
69	CORVAIR	3954496	**BRACKET,** front brake hose connector, R.H.	1
65-69	CORVAIR	3858771	**CLAMP,** brake line auto. trans.	1
60-62	CORVAIR, F.C.	3753771	**CLIP,** front and rear pipe (3/16"—3/8" double pipe)—(3.162)	A.R.
63-64	CORVAIR	3794075	**CLIP,** front pipe	1
63-65	F.C.	3758020	**CLIP,** rr. brake front pipe—(7.482)	1
66-68	CORVAIR	3881339	**CLIP,** rear brk. pipe, rear brk. front pipe—(3.162)	A.R.
60-69	CORVAIR, F.C.	9424954	**NUT** (3/16" x 1/2"—20)—(8.963)	A.R.
60-69	CORVAIR, F.C.	9424955	**NUT** (1/4" x 9/16"—18)—(8.963)	A.R.
67-69	CORVAIR	3904303	**SWITCH ASSY.,** w/distributor—(4.874)	1

4.760 SPRING, Brake Pull Back

60-61	CORVAIR	6255971	pedal return (3 13/16 free length—20 1/2 coils)	1
60-69	CORVAIR	3829404		1
61-65	F.C.	3777432	idler lever anti rattle (11 active coils—1 19/32 free length)	1
61-65	F.C.	3698665	cable retainer, pedal return (30 coils—5 free length)	1

4.765 EQUALIZER—CLIP, Parking Brake

60-68	CORVAIR	6256437	rear cable (13/16" O.L.)	1
60-64	CORVAIR	3779278	(2 3/32 O.L. w/5/16 holes)	1
61-65	F.C.	3843788	front cable rear	1
61-65	F.C.	3775524	idler lever (5 9/32 O.L.)	1
60-69	CORVAIR, F.C.	3749084	**CLIP,** idler lever and actuating lever—*(4.037)*	4

4.779 CABLE ASSY., Parking Brake

FRONT

60-64	CORVAIR	3829402	(113 5/8 O.L.)	1
61-65	F.C.	3784775	(109 11/32 O.L.)	1
65-66	CORVAIR	3857838	(106 3/4" O.L.)	1
67-69	CORVAIR	3908378	(106 3/4" O.L.)	1

REAR

60-63	*CORVAIR (1st design)*	*3777554*	*(73 O.L.) (Note 1)*	1
61-65	F.C.	3780592	(54 1/16 O.L.)	2
63-64	CORVAIR (2nd design)	3830059	(74 O.L.) (Note 1)	1
65-69	CORVAIR	3857798	(75 1/2" O.L.)	1

NOTE 1 Part number 3777554 has 7 1/2" spring length both ends, part number 3830059 has 6 1/2" spring length both ends.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

4.784 SEAL, Parking Brake Cable

60-69	CORVAIR	6257446	front ($^{25}/_{32}$ O.D. x $^{3}/_{8}$ thk.)	1
60-69	CORVAIR	3782536	rear ($2^{5}/_{16}$ O.L.) (Note 1)	2

NOTE 1 The above part can not be serviced separately, part of assy. 3857798.

4.785 BRACKET—CLIP—GUIDE—RETAINER, Parking Brake Cable

60-64	CORVAIR	6256435	rear	L.H.
60-64	CORVAIR	6256436	rear	R.H.
61-65	F.C.	3780580	rear ($2^{31}/_{32}$ long x $1^{5}/_{8}$ wide)	2
65-69	CORVAIR	3857872	rear	2
60-64	CORVAIR	6256476	**CLIP,** rear cable ($2^{9}/_{32}$ O.L.)	2
67-68	CORVAIR	3908628	**CLIP,** front	1
61-65	F.C.	3775529	**GUIDE** ($3^{3}/_{8}$ O.L.)	1
60-69	CORVAIR	3875092	**RETAINER** ($^{15}/_{16}$" x $^{13}/_{16}$")	A.R.
61-65	F.C.	3780691	**RETAINER** ($4^{1}/_{16}$" x $2^{15}/_{16}$" w/four $^{15}/_{16}$" holes)—(2.559)	1

4.790 BRACKET—CLAMP—CLIP—PULLEY ASSY.—SPACER, Parking Brake Cable

60-63	CORVAIR	3777090	brake pedal pulley mtg.	1
65-69	CORVAIR	3863517	pulley at toe panel	1
60-64	CORVAIR	6257866	**BRACKET ASSY.,** cable pulley mtg.	1
65-67	CORVAIR	3863515	**BRACKET ASSY.,** pulley at strg. gear jacket	1
67-69	CORVAIR	3901366	**BRACKET ASSY.,** pulley at strg. gear jacket	1
61-65	F.C.	3763814	**CLAMP,** front	1
61	F.C.	3758174	**CLAMP,** front inter	3
65-68	CORVAIR	3858771	**CLAMP** (4.686)	1
67-69	CORVAIR	3908628	**CLIP,** front clevis	1
60-69	CORVAIR	3866579	**PULLEY ASSY.,** at strg. gear, at floor panel, at toe panel	A.R.
60-64	CORVAIR w/P.G.	6256490	**SPACER,** pulley, at dash panel ($^{29}/_{64}$ I.D. x $^{3}/_{4}$ O.D.)	1
60-64	CORVAIR	6257865	**SPACER,** pulley assy. ($^{7}/_{8}$ O.D. x 1 long)	1
60-64	CORVAIR	3777199	**SPACER,** pulley stiffner (at toe panel)	1
65-69	CORVAIR	3863518	**SPACER,** pulley at toe panel	1
65-69	CORVAIR	3875054	**SPACER,** pulley	1

4.792 LEVER ASSY.—BRACKET—LINK, Parking Brake

61-65	F.C.	3775523	idler (12 O.L.)	1
61-65	F.C.	3775528	**BRACKET** ($4^{1}/_{4}$ x $3^{3}/_{8}$)	1
61-65	F.C.	3774642	**LINK,** idler lever ($6^{9}/_{16}$ O.L. w/four $^{3}/_{8}$ holes)	1

4.866 CLIP, Brake

60-69	CORVAIR, F.C.	2476234	($^{1}/_{2}$")	A.R.

4.874 SWITCH ASSY.—BRACKET, Brake Press Ind.

67-69	CORVAIR	3904303	w/distributor	1
67-69	CORVAIR	3910798	**BRACKET,** brk. pipe distrib. and switch	1

4.910 CUP, Vacuum Power Brake Cylinder

65	F.C.	534075	(Bendix 49294)—(4.654)	1
65	F.C.	543345	secondary (Bendix 617632)—(4.654)	1
67-69	CORVAIR (exc. metallic brakes)	5460195	secondary—(4.654)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 5.000

BRAKES—REAR

AXLE and DRIVE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

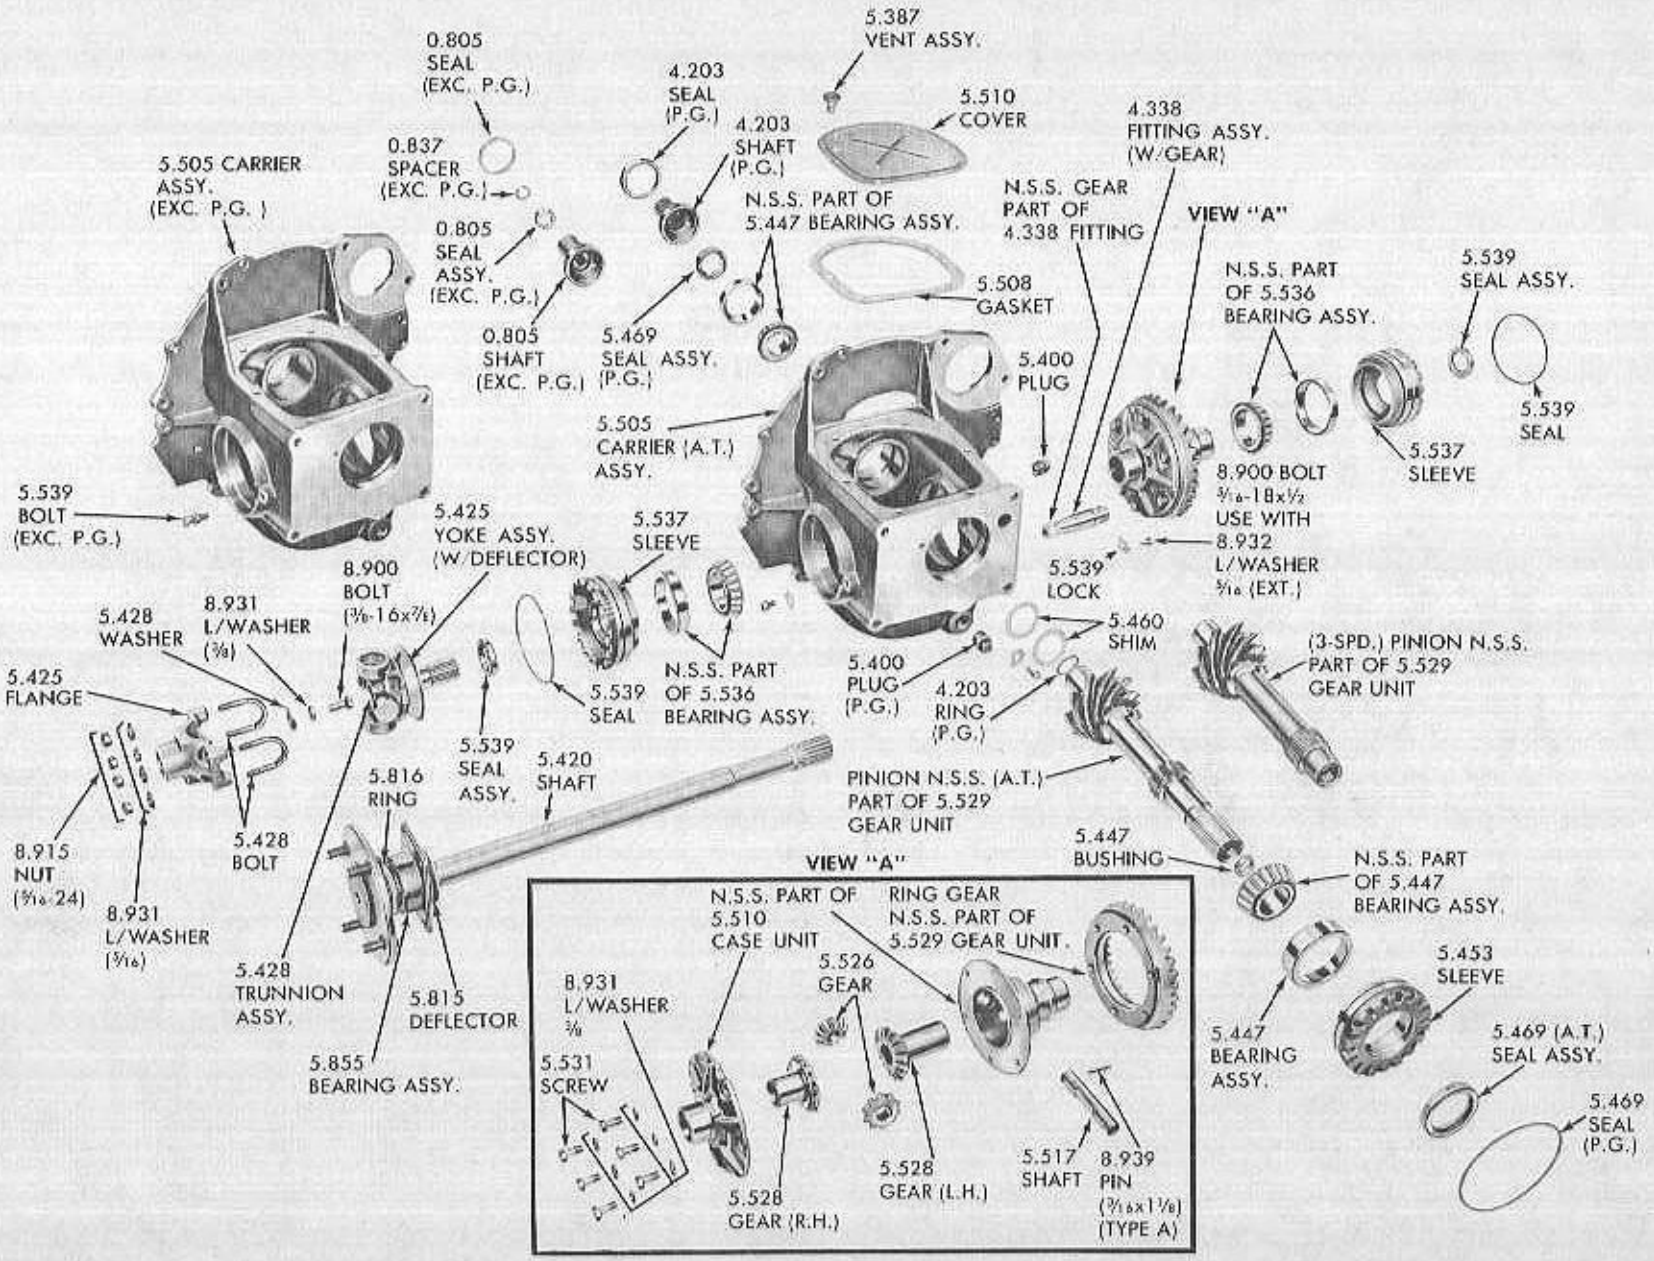

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

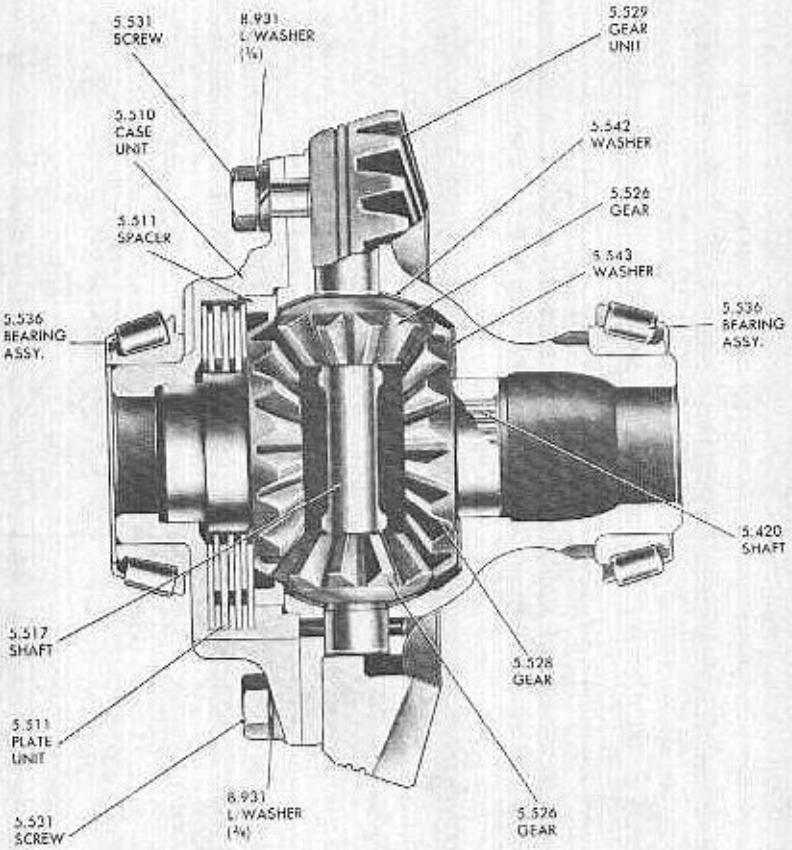

1962-69 CORVAIR POSITRACTION REAR AXLE

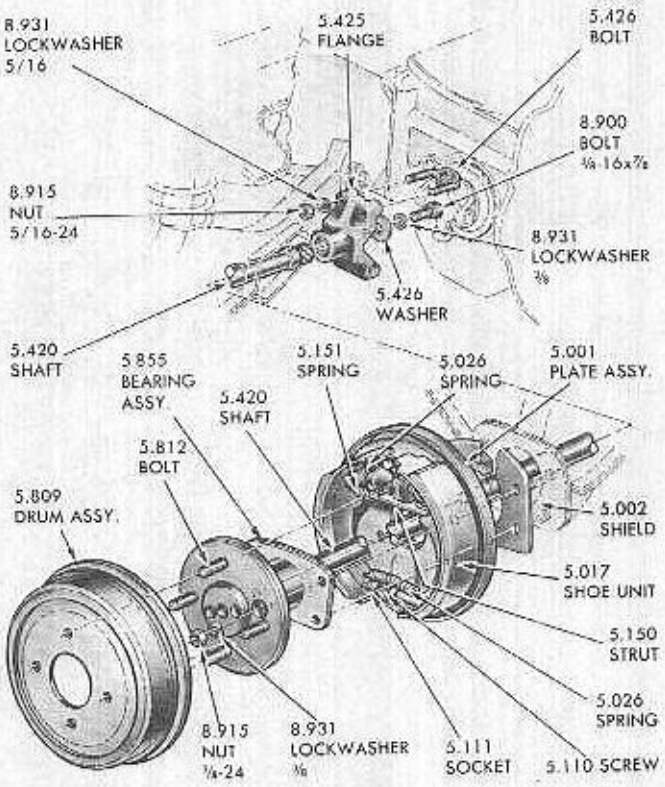

1960-69 CORVAIR REAR AXLE SHAFT AND BRAKE DRUM

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

5.000 KIT, Brake Conversion

64	CORVAIR *w/metallic linings*	**3851093**	*(Note 1)*	1

NOTE 1 When using metallic brake kit use 5460812 left, 5460813 right front wheel cylinder assy., and 5464275 main cylinder.

5.001 PLATE ASSEMBLY—BRACKET, Brake Flange

60-62	CORVAIR	**3786845**	rear	L.H.
60-62	CORVAIR	**3786846**	rear	R.H.
60-63	CORVAIR	**3832523**	front	2
61-65	F.C.	**3849355**	front	L.H.
61-65	F.C.	**3849356**	front	R.H.
61-65	F.C.	**3772031**	rear	L.H.
61-65	F.C.	**3772032**	rear	R.H.
63	CORVAIR (1st design)	**3823357**	rear, (w/welded reinforcement)	L.H.
63	CORVAIR (1st design)	**3823358**	rear, (w/welded reinforcement)	R.H.
63-64	CORVAIR (2nd design)	**3849943**	rear (w/o welded reinforcement)	L.H.
63-64	CORVAIR (2nd design)	**3849944**	rear (w/o welded reinforcement)	R.H.
64	CORVAIR	**3850103**	front	2
65	CORVAIR (1st design)	**3857807**	front ($^{3}/_{4}$" anchor pin hole)	2
65-69	CORVAIR	**3857861**	rear	L.H.
65-69	CORVAIR	**3857862**	rear	R.H.
65-68	CORVAIR (2nd design)	**3885917**	front ($^{21}/_{32}$" anchor pin hole)	2
69	CORVAIR	**3953395**	front	L.H.
69	CORVAIR	**3953396**	front	R.H.

5.002 BOLT—GASKET—SHIELD—SPACER, Flange plate

60-64	CORVAIR, F.C.,			
65	F.C.	**3784869**	rr. flange and brake ($^{3}/_{8}$—24 x $1^{1}/_{2}$)	8
61-65	F.C.	**3748370**	front flange plate ($^{7}/_{16}$"—20 x $1^{31}/_{32}$"—short)	2
61-65	F.C.	**3748401**	front flange plate ($^{7}/_{16}$—20 x $2^{15}/_{64}$—long)	2
65-69	CORVAIR	**579092**	**GASKET,** front brake backing plate to knuckle	2
60-62	CORVAIR	**3780078**	**SHIELD,** rear wheel brg. dust ($4^{3}/_{8}$" wide w/six $^{7}/_{16}$" holes)	2
61-65	F.C.	**3771922**	**SHIELD,** rear axle shaft brg. sust. inner ($2^{19}/_{64}$" O.D. x $1^{3}/_{8}$" I.D.)	2
61-65	F.C.	**3784868**	**SHIELD,** rear axle shaft brg. dust outer (four holes $^{7}/_{16}$" dia.—two holes $^{23}/_{64}$" dia.)	2
63-64	CORVAIR	**3825406**	**SHIELD,** rear axle brg. dust ($2^{21}/_{32}$" wide w/four $^{7}/_{16}$" holes)	2
64	CORVAIR	**3794380**	**SPACER,** rear brake flange plate	2

5.017 SHOE UNIT, Brake with Facing

Non-metallic

60-64	CORVAIR	**3794193**	front or rear (primary and secondary) (Note 1)	2

NOTE 1 When using 3794193 in place of 3797839 it will be necessary to use 5461146 washer.

61-62	F.C.,			
64-65	F.C.	**3849026**	front and rear (primary and secondary)	2
61-65	F.C.	**3849062**	front, rear (primary and secondary) (.030 O.S. facings)	1
63	F.C.	**3840163**	front and rear (primary and secondary)	2
65-69	CORVAIR	**3829996**	front (primary and secondary)	1
65-69	CORVAIR	**3865946**	rear (primary and secondary)	1

Metallic

62	CORVAIR	**3828338**	front and rear (primary and secondary)	A.R.
63-64	CORVAIR	**3794192**	front and rear (primary and secondary)	1

5.026 SPRING—REPAIR KIT, Brake Shoe

60-64	CORVAIR	**3790239**	front and rear, pull back (primary) ($10^{1}/_{2}$" coils—$3^{5}/_{16}$" free length) (yellow)	A.R.
60-62	CORVAIR, F.C.		front and rear,	
63	CORVAIR	**3707417**	rear adjusting screw (21 coils—$3^{1}/_{16}$ free length)	A.R.
61-62	F.C.	**3739278**	secondary, pull back (front axle) ($20^{1}/_{2}$ coils $^{9}/_{16}$ free length)	2
61-65	F.C.	**3694822**	front primary, rear pull back ($20^{1}/_{2}$ coil s—$4^{9}/_{16}$ free length) (painted gray)	A.R.
62	CORVAIR w/Turbocharger (exc. H.D. Susp.)		front and rear pull back,	
63-64	CORVAIR w/metallic linings	**5461793**	front pull back ($10^{1}/_{2}$" coils—$3^{5}/_{16}$" free length)	4
63-64	F.C.		pull back front secondary,	
65	F.C.	**3820277**	front primary pull back	2
63 64	CORVAIR, CORVAIR	**3824212**	front and rear adjusting screw ($16^{1}/_{2}$ coils—$3^{1}/_{8}$ free length)	A.R.
63-64	F.C.,			
63-69	CORVAIR		front and rear adjusting screw,	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65	F.C.	**3887347**	front adjusting screw ($2^{31}/_{32}$ O.L. green)	2
63-65	F.C.	**3820163**	secondary pull back (rear axle)	2
63-64	CORVAIR w/metallic linings	**3824719**	secondary pull back (front)	A.R.
63	CORVAIR (exc. metallic linings),			
64	CORVAIR		secondary pull back (front and rear),	
65	CORVAIR (1st design)	**5462958**	secondary pull back (front) ($^{43}/_{64}$ O.D.)	2
65	CORVAIR		primary rear,	
65	CORVAIR (1st design)	**5462970**	primary front	2
65-69	CORVAIR	**5462500**	front and rear	2
65-69	CORVAIR (2nd design)		primary pull back, front,	
65-69	CORVAIR	**3869580**	primary pull back, rear	A.R.
65-69	CORVAIR (2nd design)		front and rear brake shoe secondary pull back ($^{45}/_{64}$" O.D.),	
65-69	CORVAIR	**3869581**	rear brake shoe secondary pull back	2
60-62	CORVAIR (exc. metallic linings),			
63	CORVAIR	**6256929**	**REPAIR KIT,** front and rear (Note 1)	2

NOTE 1 Consists of 4 each Pull Back Springs, Hold Down Pins, and Springs, Hold Down Pin Spring Cups, 2 Adj. Hole Covers.

61-62	F.C.		**REPAIR KIT,** front and rear,	
63	F.C.	**3767668**	rear (Note 2)	A.R.
62	CORVAIR, w/metallic linings	**3792382**	**REPAIR KIT,** repair parts (Note 2)	2

NOTE 2 Consists of 4 each Pull Back Springs, Hold Down Springs, Hold Down Spring Cups, 8 Hold Down Pins.

5.043 PIN UNIT—NUT, Brake Shoe Hold Down, with Spring

60-62	CORVAIR (exc. metallic linings),			
61-62	F.C.		front and rear,	
65	F.C. (exc. metallic brakes)	**3794200**	front	A.R.
62	CORVAIR w/metallic linings		front and rear (2 pins, 1 spring, 1 cup),	
63-64	CORVAIR, F.C.	**3833475**	front and rear	A.R.
64-65	F.C. w/metallic brakes	**3794197**	front and rear	A.R.
65-69	CORVAIR	**3917724**	front and rear	A.R.
69	CORVAIR	**3917938**	rear	A.R.
66-68	CORVAIR	**9424987**	**NUT,** anchor pin, rear—(8.915)	2

5.045 PLATE, Brake Shoe Guide

60-61	ALL (exc. F.C.)	**6255545**	front and rear brake ($2^{1}/_{8}$ wide w/$^{1}/_{2}$ hole)	4
61-65	F.C.	**497812**	front and rear brake ($2^{1}/_{2}$" wide w/$^{1}/_{2}$" hole)	2
63	F.C.	**3764978**	front ($2^{1}/_{2}$ wide w/$^{1}/_{2}$ hole)	2
65-67	CORVAIR	**5460399**	front ($2^{15}/_{64}$" wide w/$^{1}/_{2}$" hole)	2

5.055 PIN, Brake Shoe Anchor

60-61	ALL (exc. F.C.)	**6257875**	rear ($2^{49}/_{64}$ O.L. w/$^{9}/_{16}$—18 x $^{45}/_{64}$ thds.)	2
61-65	F.C.	**3820272**	front ($2^{3}/_{8}$ O.L. w/$^{5}/_{8}$—18 x $^{37}/_{64}$ thds.)	2
61-62	F.C.	**3705732**	rear ($2^{39}/_{64}$ O.L. w/$^{5}/_{8}$—18 x $^{21}/_{32}$ thds.)	2
62	CORVAIR	**3796200**	rear ($2^{39}/_{64}$ O.L. w/$^{9}/_{16}$—18 x $^{45}/_{64}$ thds.)	2
62-64	CORVAIR	**3823360**	front ($2^{17}/_{64}$ O.L. w/$^{9}/_{16}$—18 x $^{11}/_{16}$ thds.)	A.R.
63	CORVAIR (1st design)	**3823359**	rear ($2^{43}/_{64}$ O.L. w/$^{9}/_{16}$—18 x $^{45}/_{64}$ thds.)	2
63-64	CORVAIR (2nd design)	**3793416**	rear ($2^{13}/_{32}$ O.L. w/$^{9}/_{16}$—18 x $^{45}/_{64}$ thds.)	2
63-65	F.C.	**3820146**	rear ($2^{29}/_{64}$" O.L. w/$^{5}/_{8}$"—18 x $^{21}/_{32}$" thds.)	2
65	CORVAIR (1st design)	**3832869**	front ($2^{29}/_{64}$ O.L. w/$^{1}/_{2}$—20 thds.)	2
65-69	CORVAIR (2nd design)	**3885913**	front ($2^{29}/_{64}$" O.L. w/$^{5}/_{8}$"—18 thds.)	2
65-69	CORVAIR	**3866182**	rear ($2^{13}/_{32}$ O.L. w/$^{9}/_{16}$—18 thds.)	1

5.056 WASHER—LOCK—NUT, Brake Shoe Anchor Pin

60-63	CORVAIR	**6257603**	front brake ($1^{1}/_{8}$ O.D. w/$^{19}/_{32}$ hole—hook end)	2
61-68	ALL	**3846589**	front brake	2
65	CORVAIR (1st design)	**3832870**	**LOCK,** front brake (hole dia. $^{25}/_{32}$)	2
65-69	CORVAIR (2nd design)	**3885914**	**LOCK,** front brake (hole dia. $^{11}/_{16}$")	2
ALL	ALL	**3742251**	**NUT,** rear brake pin ($^{9}/_{16}$"—18 hex.)—(6.172)	2

5.103 LEVER—PIVOT, Brake Shoe Automatic Adjusting

63-69	ALL (exc. F.C.)	**3823363**	left front and rear	A.R.
63-69	ALL (exc. F.C.)	**3823364**	right, front and rear	A.R.
63-65	F.C.	**5462098**	front and rear	L.H.
63-65	F.C.	**5462099**	front and rear	R.H.
63-69	ALL (exc. F.C.)	**5462769**	**PIVOT,** front and rear lever	L.H.
63-69	ALL (exc. F.C.)	**5462770**	**PIVOT,** front and rear lever	R.H.
63-65	F.C.	**3856855**	**PIVOT,** front and rear	L.H.
63-65	F.C.	**3856856**	**PIVOT,** front and rear	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

5.105 LINK, Brake Shoe Automatic Adjusting Lever

63	CORVAIR		rear,	
64	CORVAIR	5462258	front and rear	L.H.
63	CORVAIR		rear,	
64	CORVAIR	5462259	front and rear	R.H.
63-65	F.C.	5461156	front and rear ($5^{15}/_{16}$" O.L.	L.H.
63-65	F.C.	5461157	front and rear ($5^{15}/_{16}$" O.L.	R.H.
65-69	CORVAIR	5462526	front and rear	L.H.
65-69	CORVAIR	5462527	front and rear	R.H.

5.107 SPRING, Brake Shoe Automatic Adjusting Lever

63-69	ALL (exc. metallic linings)			
69	CORVAIR	5461984	front and rear lever return ($7^{1}/_{2}$" coils—$1^{1}/_{2}$" free length)	A.R.
63-64	ALL w/metallic linings		*front and rear lever override,*	
65-67	ALL w/metallic brakes, H.D. Brakes	3824720	front and rear ($3^{51}/_{64}$ O.L.—green)	1
63-69	ALL (exc. metallic linings)	5462264	front and rear override ($24^{1}/_{2}$ coils—$3^{7}/_{8}$ free length)	A.R.
63-64	ALL w/metallic linings		front lever return,	
67	ALL w/metallic lining, H.D. Brakes	5462097	front and rear, return	A.R.
64	F.C.	5462096	rear lever override ($2^{21}/_{32}$ O.L.-green)	2
64-65	F.C.	5461145	front (18 coils—$2^{5}/_{8}$ free length)	2

5.110 SCREW—WASHER, Brake Shoe Adjusting

60-62	CORVAIR, F.C.	496351	front and rear brake shoe adjusting (2 O.L. w/$^{1}/_{2}$—20 x $1^{45}/_{64}$ thds.) (Bendix 29491)	2
63-64	CORVAIR,	3823475	front and rear adjusting	L.H.
63-64	CORVAIR,	3823476	front and rear adjusting	R.H.
63-65	F.C.	3820157	front and rear	L.H.
63-65	F.C.	3820158	front and rear	R.H.
65-69	CORVAIR	5467202	front and rear	R.H.
65-69	CORVAIR	5467203	front and rear	L.H.
62	CORVAIR, F.C.	3820200	**SCREW ASSY.**, w/nut, front and rear, ($^{13}/_{32}$ I.D.)	A.R.
63-64	CORVAIR	3823361	**SCREW ASSY.**, w/nut, front and rear	L.H.
63-64	CORVAIR	3823362	**SCREW ASSY.**, w/nut, front and rear	R.H.
63-64	F.C.	3820155	**SCREW ASSY.**, w/nut, front and rear	L.H.
63-64	F.C.	3820156	**SCREW ASSY.**, w/nut, front and rear	R.H.
65-69	CORVAIR	5462961	**SCREW ASSY.**, w/nut, front and rear	L.H.
65-69	CORVAIR	5462962	**SCREW ASSY.**, w/nut, front and rear	R.H.
63-64	F.C.,			
63-69	ALL (exc. F.C.)		**WASHER**, front and rear adjusting screw,	
65	F.C.	5462496	front adjusting screw	4

5.111 NUT—SOCKET, Brake Shoe Adjusting Screws

60-62	CORVAIR, F.C., (1st design)	3694702	front and rear, pivot ($2^{5}/_{16}$ O.L. w/slot) (Note 1)	A.R.

NOTE 1 Use 3820200, SOCKET UNIT for 2nd design.

63-64	*CORVAIR, F.C.,*			
65	F.C.	3820166	front and rear	R.H.
63-64	CORVAIR, F.C.		front and rear,	
65	F.C.	3817346	rear	L.H.
65-69	CORVAIR	5462947	front and rear	L.H.
65-69	CORVAIR	5462948	front and rear	R.H.
60-62	CORVAIR, F.C.	3768027	**SOCKET**, front and rear ($^{15}/_{32}$ I.D. x 1 O.L.)	A.R.
63-64	CORVAIR, F.C.,			
65	F.C.	3828808	**SOCKET**, front and rear	2
65-69	CORVAIR	5462946	**SOCKET**, front and rear	2

5.117 COVER, Brake Flange Plate Hole

60-63	ALL	1455658	(rubber)	A.R.

5.149 LEVER ASSEMBLY, Parking Brake Shoe

60-61	ALL (exc. F.C.	6257669		L.H.
60-61	ALL (exc. F.C.)	6257670		R.H.
61-65	F.C.	3886371		L.H.
61-65	F.C.	3886372		R.H.
62-64	CORVAIR	3793487		L.H.
62-64	CORVAIR	3793488		R.H.
65-69	CORVAIR	5464760		L.H.
65-69	*CORVAIR*	*5464761*		R.H.

5.150 STRUT, Parking Brake Shoe Lever

60-64	CORVAIR	6256541	($5^{15}/_{32}$ O.L.)	2
61-65	F.C.	3825500		2
65-69	CORVAIR	5465089		2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

5.151 SPRING, Parking Brake Shoe Lever

60-64	CORVAIR	6256527	strut (oblong—1 1/4 O.L.)	2
61-65	F.C.	1312281	strut (27/32 max. I.D. x 1 1/4 O.L.)	2
65-69	CORVAIR	5464520	strut (21/32 max. I.D. x 53/64 free length)	2

5.158 WASHER—RING, Parking Brake Lever Anchor

60-63	CORVAIR, F.C.	5454797	spring (3/8 I.D. x 3/4 O.D.)	2
60	ALL,			
61-62	F.C.	274560	RING, attaching (5/16" I.D.—type TE)—(8.934)	A.R.

5.380 BRACKET—SHIM—SUPPORT, Rear Suspension Crossmember

65-69	CORVAIR	3858040	rear strut	2
65-69	CORVAIR	3858013		L.H.
65-69	CORVAIR	3858014		R.H.
60	ALL	3772594	SHIM, brace (1/2")—(6.163)	A.R.
61-65	F.C.	3784807	SUPPORT, (9 15/16")	L.H.
61-65	F.C.	3784808	SUPPORT, (9 15/16")	R.H.

5.381 SHAFT UNIT—BRACKET UNIT—BUSHING ASSY.—RETAINER—SCREW ASSY.—SHIELD—STRUT, Axle Control arm.

60-64	CORVAIR, F.C.,			
65	F.C.	6256493	(Note 1)	2
	NOTE 1 Consists of 1 Shaft, 2 Bushings, 2 retainers, 2 bolts and 2 washers.			
65-67	CORVAIR	3877077	BRACKET UNIT, front strut	1
60-64	CORVAIR, F.C.	3714368	BUSHING ASSY. (2 5/64" x 1 51/64")—(6.170)	4
65-69	CORVAIR	3880422	BUSHING ASSY., torque control	2
65-69	CORVAIR	3857918	BUSHING ASSY., cross member	2
60-61	ALL,			
62	F.C.	3714369	RETAINER, bushing (1 51/64" w/one 7/16" hole)—(6.170)	4
65-69	CORVAIR	3791421	SCREW ASSY., front strut bracket w/washers (3/8-16 x 1 1/8)	4
60-64	CORVAIR,			
65	F.C.	6257609	SHIELD, pivot splash (2 19/32 x 56/64—hooked)	A.R.
65-69	CORVAIR	3858034	STRUT, rear susp. rear	2

5.382 ARM ASSEMBLY, Rear Axle Control

60-64	CORVAIR, F.C.,			
65	F.C.	3851447		L.H.
60-64	CORVAIR, F.C.,			
65	F.C.	3851448		R.H.
65-69	CORVAIR	3880423	torque control	L.H.
65-69	CORVAIR	3880424	torque control	R.H.

5.383 BOLT—NUT—WASHER, Rear Axle Control Arm

60-63	CORVAIR, F.C.	454972	shaft (7/16"—20 x 1 1/8") (GM 300M steel)—(8.900)	4
60-64	CORVAIR, F.C.	3777828	control arm to cross member (3/8"—24 x 1 3/4")—(6.104)	A.R.
64	CORVAIR, F.C.,			
65	F.C.	3849210	w/arm assy. 3851447-8 (5/16—18 x 7/8)	A.R.
65-69	CORVAIR	3888609	torque control arm (9/16—18 x 3 1/2)	2
65-69	CORVAIR	3875097	torque control arm (3/8—24 x 2 1/8)	8
60-67	CORVAIR, F.C.	3866766	NUT (3/8"—24)—(0.626)	A.R.
62-67	CORVAIR	3791855	NUT (11/16" x 18)—(6.172)	2
ALL	CORVAIR	6257608	NUT (3/8"—24 x 1 15/16")—(6.178)	A.R.
64	CORVAIR	3863558	WASHER, rear spring to control arm—(7.529)	4
	Not required in this group. See groups 0.293-1.060-6.509	3754153	WASHER	

5.387 VENT ASSY.—MEMBER ASSY.—BOLT, Rear Suspension

60-65	F.C.		diff. carrier,	
60-69	CORVAIR	3751692	(1 O.L. w/1 1/8 head dia.)	1
62-69	ALL	3820840	axle	1
60	ALL	3780081	MEMBER ASSY., cross	1
61-65	F.C.	3829546	MEMBER ASSY., cross	1
61-64	CORVAIR (exc. 4-SPD.)	3856942	MEMBER ASSY., cross	1
61-64	CORVAIR w/4-SPD.	3856946	MEMBER ASSY., cross (Note 1)	1
	NOTE 1 Use two 3856949 Cushions with 3856946.			
65-69	CORVAIR	3881648	MEMBER ASSY., cross	1
60	ALL,			
61	F.C.		BOLT, inner, cross member assy.,	
61-64	CORVAIR		rear, cross member,	
62-65	F.C.	454948	outer, cross member (7/16"—14 x 2 5/8")—(8.900)	2
60	ALL		BOLT, inner, cross member assy.,	
61-65	F.C.	6257777	(7/16"—14 x 5 1/2")	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60	ALL	3767317	**BOLT,** trans. to diff. carrier assy. (7/16"—14 x 1 1/2")—(4.104)	4
61-63	CORVAIR	3786265	**BOLT,** front cross member (7/16—14 x 3 1/16) (300—M steel)	2

5.390 STRAP—PLATE, Rear Axle Rebound

62	CORVAIR w/H.D. Susp.	3820910	(8 holes)	2
62	CORVAIR w/H.D. Susp.	3706115	**PLATE,** strap (3/4 x 1 1/2)	8

5.395 BUMPER, Rear Axle

63-64	F.C.	3852039	control arm—(7.535)	2
60-62	CORVAIR, F.C. (exc. H.D. Susp.),			
62	CORVAIR w/H.D. Susp.,			
63-64	CORVAIR (exc. H.D. Susp.)	3783569	**BUMPER ASSY.,** control arm (Note 1)	2
	NOTE 1 May be necessary to use 3789222 Spacer.			
65-69	CORVAIR	3858017	**BUMPER ASSY.,** torque control arm (2 13/32 high x 1 51/64 wide)	2

5.400 PLUG—BOOT—GASKET—GAUGE ASSY.—SCREW—TUBE ASSY., Axle Filler and Drain

60-63	CORVAIR, F.C.	444746	oil (1/2"—14 sq. hd.)—(8.971)	2
64	CORVAIR, F.C.,			
65	F.C.	3849637	**BOOT,** diff. carrier oil level gauge tube	1
68	CORVAIR	3921989	**GASKET** (1/2" I.D. x 15/16" O.D. nylon)—(1.456)	A.R.
64-65	F.C.,			
64-65	CORVAIR (1st design)	3864011	**GAUGE ASSY.,** diff. carrier oil level	1
65	CORVAIR (2nd design)	3874531	**GAUGE ASSY.,** diff. carrier oil level	1
62-67	ALL	3779764	**SCREW,** drain (1/2"—20 x 13/16")—(1.453)	1
68	CORVAIR	3923420	**SCREW,** drain (1/2"—20 x 13/16")—(1.453)	1
64-66	CORVAIR, F.C.	3849613	**TUBE ASSY.,** diff. carrier oil level gauge	1
65	CORVAIR	3874530	**TUBE ASSY.,** diff. carrier oil level gauge	1

5.415 STRUT, Rear Axle

65-69	CORVAIR	3858423	front	L.H.
65-69	CORVAIR	3858424	front	R.H.

5.417 BOLT—CAM—CAP, Rear Axle

66-69	CORVAIR	3886599	rear strut assy. (1/2"—20 x 3 1/4")	2
65-69	CORVAIR	3790331	**CAM,** rear strut adjusting—(6.172)	2
65-69	CORVAIR	3858038	**CAM ASSY.,** rear strut adjusting	2
65-69	CORVAIR	3877519	**CAP,** rear strut bushing	2

5.418 SUPPORT—WASHER, Rear Wheel Suspension

60-64	CORVAIR	6276238	rear	2
61-65	F.C.	3775513	outer (5 1/8 O.D.)	2
65-69	CORVAIR	3858018	torque control arm	2
66-67	CORVAIR	9418151	**WASHER,** rear strut—(8.929)	2

5.420 SHAFT, Rear Axle

60-64	CORVAIR	3813321	(less bearings) (25 splines—22 5/8 O.L.)	2
61-65	F.C.	3771921	(25 splines—23 9/16" O.L.)	2
65-69	CORVAIR	3859431	(16 15/32 O.L.)	2

5.425 YOKE ASSY.—DEFLECTOR—FLANGE, Rear Axle Universal Joint

60	CORVAIR		w/deflector, left and right,	
61-64	CORVAIR, F.C.,			
65	F.C.	3784936	w/deflector, right, diff. carrier to axle (stamped 34)	A.R.
61-64	CORVAIR, F.C.,			
65	F.C.	3784935	w/deflector, diff. carrier to axle (stamped 33)	L.H.
65-69	CORVAIR	3890827	(Note 1)	L.H.
	NOTE 1 Consists of 1-3887349 Yoke assy., 2-3882979 strap, 4-3887348 bolts.			
65	CORVAIR	3859782	diff. carrier U-joint	R.H.
66-69	CORVAIR	3890828	diff. carrier U-joint (Note 2)	R.H.
	NOTE 2 Consists of 1-3887350 Yoke assy., 2-3882979 strap, 4-3887348 bolts.			
65-69	CORVAIR	3820241	**DEFLECTOR,** rear wheel spindle flange dust	2
60-64	CORVAIR, F.C.,			
65	F.C.	6255781	**FLANGE,** rear axle (cast 6255781)	2

5.428 BEARING ASSY.—BOLT—LOCK RING—REPAIR KIT—ROLLER—WASHER, Rear Axle Shaft "U" Joint

60-62	CORVAIR		differential carrier,	
61-62	F.C. (1st design)	3709838	(1 1/16" O.D. x 9/16" thk.) (without black oxide rollers)—(5.566)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

62	F.C. (2nd design)		differential carrier,	
63	CORVAIR, F.C.	**3828467**	(1 1/16" O.D. x 9/16" thick) (black oxide on rollers)—(5.566)	A.R.
64-67	CORVAIR, F.C.	**3841935**	(5.566)	A.R.
ALL	ALL	**1358938**	**BOLT,** "U" rear axle flange (1 13/32" ctr. to ctr. stud) (5/16"—18 thd.)—(5.566)	4
60-63	CORVAIR, F.C.	**3721887**	**LOCK RING,** snap differential carrier (1 1/4" dia.)—(5.586)	2
60-62	CORVAIR,			
61-62	F.C (1st design)	**3830580**	**REPAIR KIT,** diff. carrier, "U" joint—(5.548) (Note 1)	2

NOTE 1 Contains trunnion assy., 4 bearing assys., 4 "U" joint snap rings, 2 bolts, 4 nuts, 4 washers and 4 seals.

62-65	F.C. (2nd design)			
63-68	CORVAIR	**3849500**	**REPAIR KIT,** diff. carrier, "U" joint (Note 2)	2

NOTE 2 Contains trunnion assy., 4 bearing assys., 4 "U" joint snap rings, 2 bolts, 4 nuts, 4 washers and 2 seals.

60-62	CORVAIR,			
61-62	F.C. (1st design)	**606868**	**ROLLER,** differential carrier (13/32" O.L. x 3/32" dia.) (without black oxide)—(5.566)	92
62	F.C. (2nd design),			
63-64	CORVAIR, F.C.	**9418456**	**ROLLER,** differential carrier (13/32" O.L. x 3/32" dia.) (black oxide coated)—(5.566)	A.R.
60-64	CORVAIR, F.C.,			
65	F.C.	**6255782**	**WASHER,** flange (1 3/16 O.D. x 13/32 I.D. x 9/64 thk.)	2

5.430 SEAL, Rear Axle Shaft "U" Joint

60-62	CORVAIR			
61-62	F.C. (1st design)	**3774326**	differential carrier (1 3/32" O.D. x 1/4" thk.)—(5.560) (Note 1)	A.R.
62	F.C. (2nd design),			
63	CORVAIR, F.C.	**3821777**	diff. carrier (1 3/32" O.D. x 1/4" thk.) (w/oblong identification mark)—(5.560) (Note 1)	1
64-67	CORVAIR, F.C.	**3841923**	diff. carrier—(5.560)	A.R.

NOTE 1. These two parts have the same appearance but are not interchangeable.

5.447 BEARING ASSY.—BUSHING, Drive Pinion Front

60-69	CORVAIR, F.C.	**7450984**	(Hyatt-A-200248-Z)	A.R.
60-61	ALL w/P.G.,			
62	CORVAIR, F.C.,			
63-69	CORVAIR, F.C. w/P.G.	**6256075**	**BUSHING,** pinion shaft, front (1 I.D. x 7/16 long)	1

5.453 SLEEVE, Pinion Shaft Bearing

60	ALL,			
61-69	CORVAIR, F.C. w/P.G.	**3781394**	front, adjusting (2 I.D. x 3 1/2 O.D.)	1
61-65	CORVAIR, F.C. (exc. P.G.)	**3779083**	front, adjusting (2 11/16 I.D. x 3 17/32 O.D.)	1
66-69	CORVAIR (exc. P.G.)	**3889700**	front adjusting	1

5.460 SHIM, Pinion Shaft Bearing

60-67	CORVAIR, F.C.	**6255506**	(.006)	A.R.
60-67	CORVAIR, F.C.	**6255507**	(.009)	A.R.
60-69	CORVAIR, F.C.	**6257501**	(.012)	A.R.
60-67	CORVAIR, F.C.	**6257502**	(.015)	A.R.
60-67	CORVAIR, F.C.	**6257503**	(.018)	A.R.

5.469 SEAL, Drive Pinion

60-69	CORVAIR, F.C. w/P.G.	**3853983**	front bearing adjusting sleeve	A.R.
60-69	CORVAIR, F.C. w/P.G.	**3813621**	**SEAL ASSY.,** hypoid shaft oil (1 5/16 I.D. x 2 O.D.)	2

5.484 BEARING ASSY., Drive Pinion, Rear

60-69	CORVAIR, F.C.	**7450984**	(1 5/16" I.D. x 2 11/16" O.D. x 7/8" thk.) (Hyatt A-200248-Z)—(5.447)	1

5.505 CARRIER ASSY., Differential, with Cap

60-64	CORVAIR, F.C. (exc. P.G.)	**3856267**	(cast 3826196)	1
60-62	CORVAIR, F.C. w/P.G.	**3852301**	(Note 1)	1

NOTE 1 When using in place of original production carrier, it may be necessary to use two (2) adj. sleeves—3781396 and plug 103869.

63-64	CORVAIR, F.C. w/P.G.	**3848105**	(Note 2)	1
65	CORVAIR (exc. P.G.)	**3855502**		1
65-69	CORVAIR w/P.G.	**3855503**	(Note 2)	1
65	F.C. (exc. P.G.)	**3857450**		1
65	F.C. w/P.G.	**3857451**		1
66-69	CORVAIR (exc. P.G.)	**3873484**		1

NOTE 2 It may be necessary to plug oil level gauge tube hole using pipe plug 444577 or equivalent.

5.508 GASKET—SEAL UNIT, Differential Carrier

60-69	CORVAIR, F.C.	**6255758**	cover (23/64 dia.—6 holes)	1
60-61	ALL w/3-SPD.,			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-62	CORVAIR, F.C. w/4-SPD.,			
62-65	CORVAIR, F.C. (exc. P.G.)	3849448	to transmission	1
60-64	CORVAIR, F.C. w/P.G.,			
65-69	CORVAIR w/P.G.	3780741	mounting face ($^{11}/_{32}$ wide w/four QIH holes)	1
66-69	CORVAIR (exc. P.G.)	3887361	to transmission	1
60-69	CORVAIR, F.C. w/P.G.	6257706	**SEAL UNIT** (9 seals, 2 gaskets)	1
60-65	CORVAIR, F.C. (exc. P.G.)	3855683	**SEAL UNIT** (8 seals, 3 gaskets)	1
66-69	CORVAIR (exc. P.G.)	3887827	**SEAL UNIT** (5 seals, 2 gaskets)	1

5.510 CASE UNIT—COVER—GROMMET, Differential Carrier

60	ALL	6256613	w/cover	1
61-64	CORVAIR, F.C. (exc. P/Trac.),			
65	F.C. (exc. P/Trac.)	3784927	w/cover	1
62-64	CORVAIR, F.C. w/P/Trac.,			
65	F.C. w/P/Trac.	3820113	w/cover	1
62	CORVAIR w/P/Trac.,			
63-64	CORVAIR, F.C. w/P/Trac.,			
65	F.C. w/P/Trac.	3813553	w/internal gears	1
65-69	CORVAIR (exc. P/Trac.)	3855507	w/cover	1
65-69	CORVAIR w/P/Trac.	3870780	w/cover (Dana 23736-X)	1
65-69	CORVAIR w/P/Trac	3863431	w/internal gears	1
60-69	CORVAIR, F.C.	3905832	**COVER**	1
65	CORVAIR	3864013	**GROMMET**, oil level tube assy.—(9.775)	1

5.511 PLATE UNIT—SPACER, Differential Clutch (Positraction)

62	CORVAIR,			
63-69	CORVAIR, F.C.	3820114	w/discs (Dana 22924X) (Note 1)	1
	NOTE 1 Consists of 3 plates and 2 discs.			
62	CORVAIR,			
63-69	CORVAIR, F.C.	3815500	**SPACER**, clutch ($3^{3}/_{32}$ O.D. x $2^{3}/_{4}$ I.D. x $^{11}/_{32}$ thk.) (Dana 31940)	1

5.517 SHAFT, Differential Pinion

60	ALL	6255503	($^{43}/_{64}$ x $4^{1}/_{64}$ long)	1
61-64	CORVAIR, F.C.,			
65	F.C. w/P/Trac.	3784928	($4^{1}/_{64}$ long x $^{43}/_{64}$ dia.)	1
65-69	CORVAIR	3855511	($^{43}/_{64}$ O.D. x $4^{1}/_{64}$ O.L.)	1

5.526 GEAR, Differential Pinion

60-69	CORVAIR, F.C.	6255502	(10 teeth—shaft hole $^{11}/_{16}$)	2

5.528 GEAR, Differential Side

60	ALL	6255763	(25 splines—16 teeth)	L.H.
60	ALL	6255764	(25 splines—16 teeth)	R.H.
61-69	CORVAIR, F.C. (exc. P/Trac.)		right or left,	
62-69	CORVAIR, F.C. w/P/Trac.	3855510	left (25 splines—16 teeth) (Note 1)	A.R.
	NOTE 1 One required with P/Trac. Two required with all other axles.			
62-68	CORVAIR w/P/Trac.,			
64-65	F.C. w/P/Trac.	3870781	(25 splines—16 teeth) (Dana 32992)	R.H.

5.529 GEAR UNIT, Ring and Pinion

60	ALL w/3-SPD.	3795112	(3.55 to 1 ratio)	1
60-64	CORVAIR w/P.G.	3781704	(3.55 to 1 ratio)	1
60	ALL w/3-SPD.	3795108	(3.89 to 1 ratio)	1
61-64	CORVAIR (exc. P.G.)	3781695	(3.55 to 1 ratio)	1
61-64	CORVAIR w/P.G.	3781708	(3.27 to 1 ratio)	1
60-63	CORVAIR F.C. w/P.G.	3781706	(3.89 to 1 ratio)	1
61-64	CORVAIR (exc. P.G.)	3781702	(3.27 to 1 ratio)	1
61-63	CORVAIR F.C. (exc. P.G.)	3781697	(3.89 to 1 ratio)	1
64-65	F.C. (exc. P.G.)	3848066	(3.55 to 1 ratio)	1
64-65	F.C. w/P.G.	3848065	(3.55 to 1 ratio)	1
65-69	CORVAIR w/P.G. (exc. H/Per. S/H/Per.)	3859228	(3.27 to 1 ratio)	1
65-69	CORVAIR (exc. P.G.)	3856569	(3.55 to 1 ratio)	1
65-69	CORVAIR w/P.G.	3859829	(3.55 to 1 ratio)	1
65-69	CORVAIR (exc. P.G.)	3859830	(3.27 to 1 ratio)	1
65-69	CORVAIR (exc. P.G.)	3887853	(3.27 to 1 ratio)	1
65-69	CORVAIR (exc. P.G.)	3887854	(3.55 to 1 ratio)	1
65-69	CORVAIR (exc. P.G.)	3896660	(3.89 to 1 ratio) (Yenko)	1
	NOTE Axle ratio is equal to No. of Ring Gear Teeth divided by No. of Pinion Gear Teeth.			

5.531 SCREW—BOLT, Hypoid Drive Gear

60-64	CORVAIR, F.C.	3857960	($^{3}/_{8}$—24 x $^{29}/_{32}$)	1
65-69	CORVAIR, F.C.	3884941	($^{3}/_{8}$—24 x $1^{5}/_{16}$)	9

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

5.535 LUBRICANT, Hypoid Gear

60-68	ALL	1050927	special hypoid (1 quart container)—(8.800)	1
60-64	ALL	1050016	special hyp id (15 gal.)—(8.800)	A.R.
65-68	ALL	1050928	special hypoid (15 gal.)—(8.800)	1
65-68	ALL	1050428	(P/Trac. adapter) (4 oz. can)—(8.800)	1

5.536 BEARING ASSEMBLY— , Differential Side

60-69	CORVAIR, F.C.	7451090	($25/32$ I.D. x $3\ 1/16$ O.D. x $25/32$ thk.)	2

5.537 SLEEVE, Differential Bearing Adjusting

60	CORVAIR (1st design)	6257877	(4.18 small O.D. x $1\ 3/4$ I.D.)	2
60-64	CORVAIR, F.C. (2nd design) (exc. P/Trac.)		left and right,	
62-64	CORVAIR, F.C. w/P/Trac.,			
65	F.C.	3781396	left (4.16 small O.D. x $1\ 3/4$ I.D.)	A.R.
62-64	CORVAIR, F.C. w/P/Trac.,			
65	F.C. w/P/Trac.	3815644		R.H.
65-69	CORVAIR w/P/Trac.	3867365	($4\ 23/64$" O.D. x $1\ 59/64$" I.D.)	R.H.
65-69	CORVAIR	3867366	($4\ 11/64$" O.D. x $1\ 59/64$" I.D.) (Note 1)	L.H.

NOTE 1 1 required with P/Trac. & 2 used on all other axles.

5.539 LOCK—BOLT—SEAL, Differential Bearing Adjusting Sleeve

60-69	CORVAIR		differential bearing,	
60-65	F.C.	3848407	pinion front bearing	A.R.
60-65	CORVAIR, F.C. (exc. P.G.)	3765074	**BOLT** ($5/16$"—18 x $5/8$")	R.H.
60-69	CORVAIR, F.C.	3849165	**SEAL**	2
60-69	CORVAIR, F.C.	3866845	**SEAL ASSY.**, bearing oil ($1\ 3/4$" O.D. x $5/16$" thk.)	2

5.542 WASHER, Differential Pinion Thrust

60-69	CORVAIR, F.C.	6257430	($1\ 11/32$ O.D. x $43/64$ I.D.) (Note 1)	2

NOTE 1 1 required with P/Trac. & 2 required with other axles.

5.543 WASHER, Differential Side Gear Thrust

60-69	CORVAIR, F.C.	6257691	($2\ 25/64$ O.D. x $1\ 13/32$ I.D.)	A.R.

5.545 BOLT—LOCK—NUT—WASHER, Differential Carrier or Propeller Shaft Pinion

65-69	CORVAIR	3855648	U-joint yoke, left ($3/8$"—16 x $4\ 3/4$" hex. hd.)	1
65-69	CORVAIR	3855649	U-joint yoke, right ($3/8$"—16 x $3\ 37/64$" hex. hd.)	1
65-69	CORVAIR	3855524	**LOCK**, U-joint yoke belt (3 Tabs)	2
65-69	CORVAIR	3855512	**NUT**, U-joint yoke ($1\ 23/64$ O.D.—25 teeth) (Note 1)	2

NOTE 1 1 required with P/Trac. & 2 required with other axles.

60-63	CORVAIR, F.C.	3754153	**WASHER**, carrier to flywheel housing ($13/32$")—(5.383)	A.R.

5.548 REPAIR KIT, Universal Joint (For Corvair diff. carrier and axle shaft "U" joints see grp. 5.428)

69	CORVAIR	3955571	"U" joint	A.R.

5.560 SEAL, Universal Joint Yoke Trunnion

64	CORVAIR, F.C.	3821777	bearing ($13/32$" O.D. x $1/4$" thk.) (w/oblong identification mark)	A.R.
64-69	ALL	3841923	bearing ($21/32$ I.D. x $1\ 1/2$ O.D.)	8

5.566 BEARING ASSY.—ROLLER— Universal Joint Yoke Trunnion

64	CORVAIR, F.C.	3828467	($1\ 1/16$" O.D. x $9/16$" thick) (black oxide on rollers)	A.R.
	Not required in this group. See group 5.428	3709838		
64-69	ALL	9419578	**ROLLER**, U-joint yoke trunnion brg.	8
	Not required in this group. See group 5.428	9418456	**ROLLER**	

5.586 LOCK RING—BOLT—STRAP, Universal Joint Trunnion and Yoke

63-68	CORVAIR	3721887	snap (finger dia. 596)	1
ALL	ALL	1358938	**BOLT** ($5/16$—18) (finger dia. 596)	A.R.
65	CORVAIR	3877199	**BOLT**, rr. wheel drive shaft strip ($17/64$" head thickness) ($1/4$"—20 x $3/4$")	16
66-69	CORVAIR	3887348	**BOLT** ($5/16$"—24 x $1\ 7/16$" rear wheel drive shaft strap)	16
65	CORVAIR	3875779	**STRAP**, rear wheel drive shaft	8
66-69	CORVAIR	3882979	**STRAP**, rear wheel drive shaft	8

5.638 CLAMP, Rear Axle

61-69	ALL	2494772	$1/4$" to $5/8$" diameters—(1.166)	A.R.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

5.803 WHEEL ASSEMBLY—ADAPTER, Front or Rear

60-61	ALL (exc. F.C.)	3789560	(13 x 5½)	5
61-65	F.C.	3870769	(14 x 5J) (9/16 offset)	A.R.
62-64	CORVAIR	3790693	(13 x 5½")	5
62-64	CORVAIR w/wire wheels	3838280	(13 x 5½J) (knock-off type)	5
65-69	CORVAIR (exc. wire wheel)	3860957	(13 x 5.5J)	A.R.
62-64	CORVAIR w/wire wheels	3838283	**ADAPTER**, wire wheel	L.H.
62-64	CORVAIR w/wire wheels	3838284	**ADAPTER**, wire wheel	R.H.

5.805 WEIGHT, Wheel Balance

60-69	ALL	9421502	(½ oz.) (size cast on weight)	A.R.
60-69	ALL	9421504	(1 oz.) (size cast on weight)	A.R.
60-69	ALL	9421506	(1½ oz.) (size cast on weight)	A.R.
60-69	ALL	9421508	(2 oz.) (size cast on weight)	A.R.
60-69	ALL	9421510	(2½ oz.) (size cast on weight)	A.R.

5.806 SPINDLE—FLANGE UNIT—SUPPORT, Rear Wheel

65-69	CORVAIR	3857809	(Note 1)	1

NOTE 1 Consists of 1-3887353 Flange assy., 2-3882979 strap, 4-3887348 bolts.

65-69	CORVAIR	3890829	**FLANGE UNIT**	2
65-69	CORVAIR	3857811	**SUPPORT**, spindle	2

5.809 DRUM ASSEMBLY, Front and Rear Wheel, Brake

60-63	CORVAIR (exc. metallic linings)	3830094	front	2
60-63	CORVAIR (exc. metallic linings),			
64	CORVAIR	3850107	rear (Note 1)	2

NOTE 1 3850107 brake drum is used with standard brakes only.

61-65	F.C.	3828709	front or rear	4
62	CORVAIR, w/metallic linings	3824714	rear	2
62-63	CORVAIR w/metallic linings	3830095	front	2
63	CORVAIR w/metallic linings,			
64	CORVAIR	3855568	rear (Note 2)	2
64	CORVAIR	3851280	front (Note 2)	2

NOTE 2 For metallic brakes on 1964 Corvair, use conversion kit 3851093.

65-69	CORVAIR	3853712	front	2
65-69	CORVAIR	3858300	rear	2

5.810 SPRING, Brake Drum

61-64	F.C.	3694290	front anti-squeak (32¾ free length)	2

5.812 BOLT, Hub (Front and Rear Wheel)

60	CORVAIR (1st design)	3829376	(7/16—20 x 1 3/8)	16
60-69	ALL (2nd design)	3775683	(7/16—20 x 1 3/8)	A.R.

5.813 NUT, Hub (Front and Rear)

60-69	ALL	358501	(7/16—20)	A.R.
63	CORVAIR w/wire wheels	3819543	**NUT ASSY.**, (knock-off type) (stamped left side)	2
63	CORVAIR w/wire wheels	3819544	**NUT ASSY.**, (knock-off type) (stamped right side)	2
64	CORVAIR w/wire wheels	3854301	**NUT ASSY.**, (knock-off type) left	2
64	CORVAIR w/wire wheels	3854302	**NUT ASSY.**, (knock-off type) right	2

5.815 DEFLECTOR—SHIELD, Rear Wheel Hub and Drum

60-64	CORVAIR	3779875	axle shaft brg. oil (2⅛ O.D. x 11/16 thk.)	2
60-63	CORVAIR	3780078	**SHIELD**, brg. dust (4⅜" wide w/six 7/16" holes)—(5.002)	2

5.816 RING—SPACER, Rear Axle Shaft Bearing

60-64	CORVAIR	535883	removing (2½ O.D. x 1 3/16 I.D.)	2
61-65	F.C.	3814314	removing (2⅛ O.D. x 1⅜ I.D.)	2
65-69	CORVAIR	3858095	**SPACER**, rear wheel bearing	2

5.822 SEAL ASSY.—SHIELD, Rear Wheel Bearing

65-69	CORVAIR	3858096	outer brg.	2
65-69	CORVAIR	3794002	inner brg.	2
65-69	CORVAIR	3820238	**SHIELD**, inner brg. dust	2

5.829 NUT, Rear Wheel

65	CORVAIR	378137	spindle flange (¾"—20)—(6.022)	2

5.830 WASHER, Rear Wheel

65-69	CORVAIR	3839832	(7/32 thick) spindle flange	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Division

5.855 BEARING ASSEMBLY—BEARING UNIT—SHIM—CONE—CUP, Rear Wheel

60-62	CORVAIR	7451254	axle shaft (Hy. AD-11034Z-18)	2
63-64	CORVAIR	7451328	axle shaft	2
65-69	CORVAIR	7451202	inner, taper (Hyatt A-200233-Z)—(5.447)	2
65-69	CORVAIR	7450630	outer bearing—(6.311)	2
61-65	F.C.	7451321	**BEARING UNIT**, w/removing ring	2
65-69	CORVAIR	3820233	**SHIM**, rear wheel bearing (.097)	1
65-69	CORVAIR	3820232	**SHIM**, rear wheel bearing (.103)	1
65-69	CORVAIR	3820231	**SHIM**, rear wheel bearing (.109)	1
65-69	CORVAIR	3820230	**SHIM**, rear wheel bearing (.115)	1
65-69	CORVAIR	3820229	**SHIM**, rear wheel bearing (.121)	1
65-69	CORVAIR	3820228	**SHIM**, rear wheel bearing (.127)	1
65-69	CORVAIR	3820227	**SHIM rear wheel bearing** (.133)	1
65-69	CORVAIR	3820226	**SHIM**, rear wheel bearing (.139)	1
65-69	CORVAIR	3820225	**SHIM**, rear wheel bearing (.145)	1
65-69	CORVAIR	7451205	**CONE**, inner—(5.447)	2
65-69	CORVAIR	7451206	**CUP**, inner—(5.447)	2

5.858 HUB CAP—COVER—COVER UNIT, Wheel

GREASE CAP—See group 6.330

HUB CAP

60-61	CORVAIR	3783575		4
61-63	F.C. (exc. deluxe equip.)	3780114	(painted)	4
61-63	F.C. w/deluxe equip.	3780115	(chrome)	4
62-63	CORVAIR	3796742		4
64	CORVAIR	3840162		4
64-65	F.C. (exc. deluxe equip.)	3875620		4
64-66	F.C. w/deluxe equip.	3875624		4
65-66	CORVAIR (STD.)	3859254		4
67-69	CORVAIR (STD.) (exc. wire, mag. wheels)	3840898		4

COVER (full wheel)

60	MONZA	3784817		4
61	MONZA	3796149		4
61	F.C.	3783336		4
62-63	CORVAIR w/13" wire wire wheels	3820245	less ornament (Note 1)	4
62	CORVAIR (exc. wire wheels)	3796757	less emblem (Note 2)	4
63	CORVAIR (exc. wire wheels)	3821404	less emblem (Note 2)	4
	NOTE 2 Emblem 3814493 or 3814968 must also be used.			
64-66	CORVAIR w/13" wire wire wheels	3855383	w/ornament (Note 1)	4
64	CORVAIR (exc. wire wheels)	3840301	less emblem	4
64	F.C. (exc. wire wheels)	3840980		4
65	F.C. (exc. wire, mag. wheels)	3860204		4
65-69	CORVAIR w/13" mag. wheels	3874648	(Note 1)	4
65	CORVAIR (exc. wire mag. wheels)	3861087	less emblem	4
66-69	CORVAIR (exc. wire, mag. wheels)	3878318	less emblem	4
67-69	CORVAIR w/13" wire wheel	3908393	w/ornament	4

COVER UNIT (full wheel) (Consists of 4 covers)

65-68	CORVAIR w/13" mag. wheels,			
69	CORVAIR w/13" mag. wheels	986416	(Note 1)	1
66-69	CORVAIR (exc. wire mag. wheels)	986601	less emblem	1
67-69	CORVAIR w/13" wire wheel	987107		1
	NOTE 1 Emblem Attached. No additional emblem necessary.			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

HUB CAPS AND WHEEL COVERS

1964

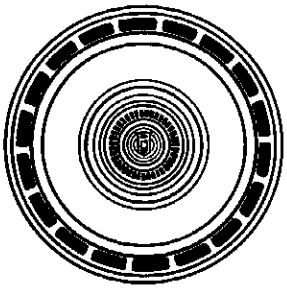

3840301*

1965

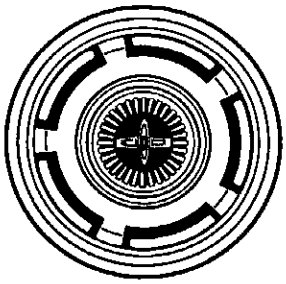

3861087*
986123▲*

1965-66

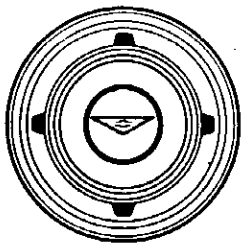

3859254

1966

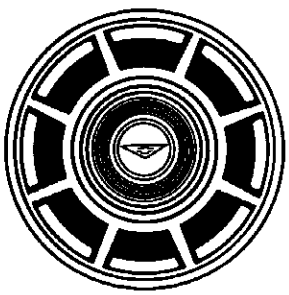

3878318*
986601▲*

1964-66

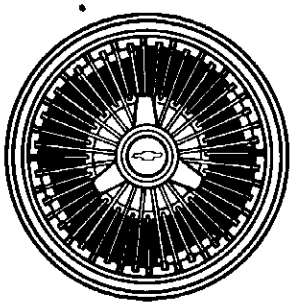

3855383-13″
986013▲

1965-66

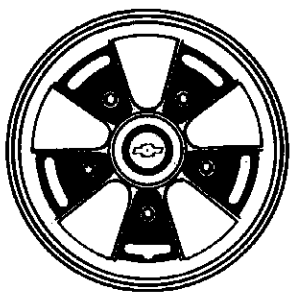

3874648-13″
986416▲

1967-69

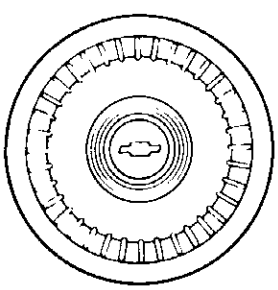

3840898
STD. ON 500 MODELS

1967-69

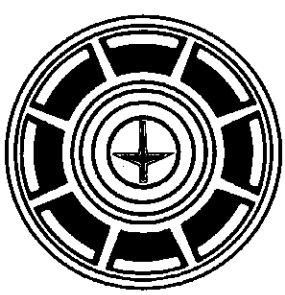

3878318-(1)*
986601-(4)*

1967-69

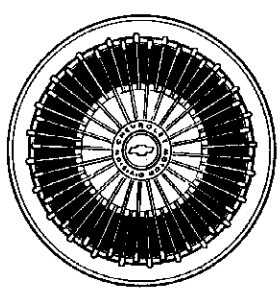

3908393
OPT. ON ALL MODELS
W/13″ WHEEL

*—LESS INSERT
▲—CONSISTS OF 4 WHEEL COVERS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

5.871 RING—EMBLEM—ORNAMENT—SCREW—NUT ASSY.—SPOKE ASSY., Wheel Appearance

60-61	ALL (exc. MONZA, F.C.)	6257052		4
61	F.C.	3783339	**EMBLEM,** wheel cover (crossed flags—plastic)	4
62-63	CORVAIR (exc. MONZA)	3814968	**EMBLEM,** wheel cover (black plastic)	4
62-63	MONZA	3814493	**EMBLEM,** wheel cover (black plastic w/"MONZA")	4
62-63	F.C.	3789926	**EMBLEM,** wheel cover (blue plastic)	4
64	CORVAIR (exc. MONZA)	3840306	**EMBLEM,** wheel cover	4
64	MONZA (exc. SPYDER)	3840302	**EMBLEM,** wheel cover	4
64	SPYDER	3840304	**EMBLEM,** wheel cover	4
64	F.C.	3843120	**EMBLEM,** wheel cover	4
65	CORVAIR (STD.)	3861090	**EMBLEM,** wheel cover w/986123	4
65	MONZA	3861088	**EMBLEM,** wheel cover ("MONZA")	4
65	CORSA	3869470	**EMBLEM,** wheel cover ("CORSA")	4
65	F.C.	3860206	**EMBLEM**	4
66-69	CORVAIR (STD.)	3878325	**EMBLEM,** wheel cover (Note 1)	4
66-69	MONZA (exc. wire, mag. wheels)	3878319	**EMBLEM,** wheel cover (Note 1)	4
66	CORSA	3878322	**EMBLEM,** wheel cover (Note 1)	4
	NOTE 1 Used on Wheel Cover 986601			
62-63	CORVAIR	3814757	**ORNAMENT,** wire wheel cover (spinner)	4
64-69	CORVAIR w/wire wheels	3908762	**ORNAMENT** (Note 2)	4
	NOTE 2. Due to motor vehicle safety standards it is necessary to replace open end winged spinner on 1964-66 models.			
62-66	CORVAIR,			
67-69	CORVAIR w/mag. wheels	3824195	**SCREW,** wire wheel cover ornament (8—18 x 7/8") (hex. hd.—spherical face)	A.R.
65-69	CORVAIR	385958	**SCREW,** simulated wire wheel (Garwood 551404-5)	16
63	CORVAIR w/wire wheels	3819543	**NUT ASSY.** (knock-off type) (stamped left side)—(5.813)	2
63	CORVAIR w/wire wheels	3819544	**NUT ASSY.** (knock-off type) (stamped right side)—(5.813)	2
64	CORVAIR w/wire wheels	3854301	**NUT ASSY.** (knock-off type) left—(5.813)	2
64	CORVAIR w/wire wheels	3854302	**NUT ASSY.** (knock-off type) right—(5.813)	2
65-69	CORVAIR w/13" wire wheels	3888830	**SPOKE ASSY.,** inner	A.R.
65-69	CORVAIR w/13" wire wheels	3888831	**SPOKE ASSY.,** outer	A.R.

5.875 STEM ASSEMBLY—EXTENSION—CAP, Tubeless Tire Valve

60	ALL (exc. MONZA)	274083	(1 1/4 in. snap in type) w/cap	5
60-62	ALL	274288	(1 1/2 in. snap in type) w/cap	5
61	F.C.	9422872	**EXTENSION,** tubeless tire valve stem (1 27/32")	A.R.
63-65	CORVAIR	9417745	**EXTENSION** (use w/985142, 985539, 985821, 986123, 98634) (7/8" O.L.)	4
62-65	F.C.,			
64-69	ALL	9422212	**EXTENSION,** valve stem (1 3/8" O.L.)	4

5.880 INFLATOR ASSY.—RETAINER

ALL	ALL	3891441		4

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 6.000

FRONT AXLE—

STEERING

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

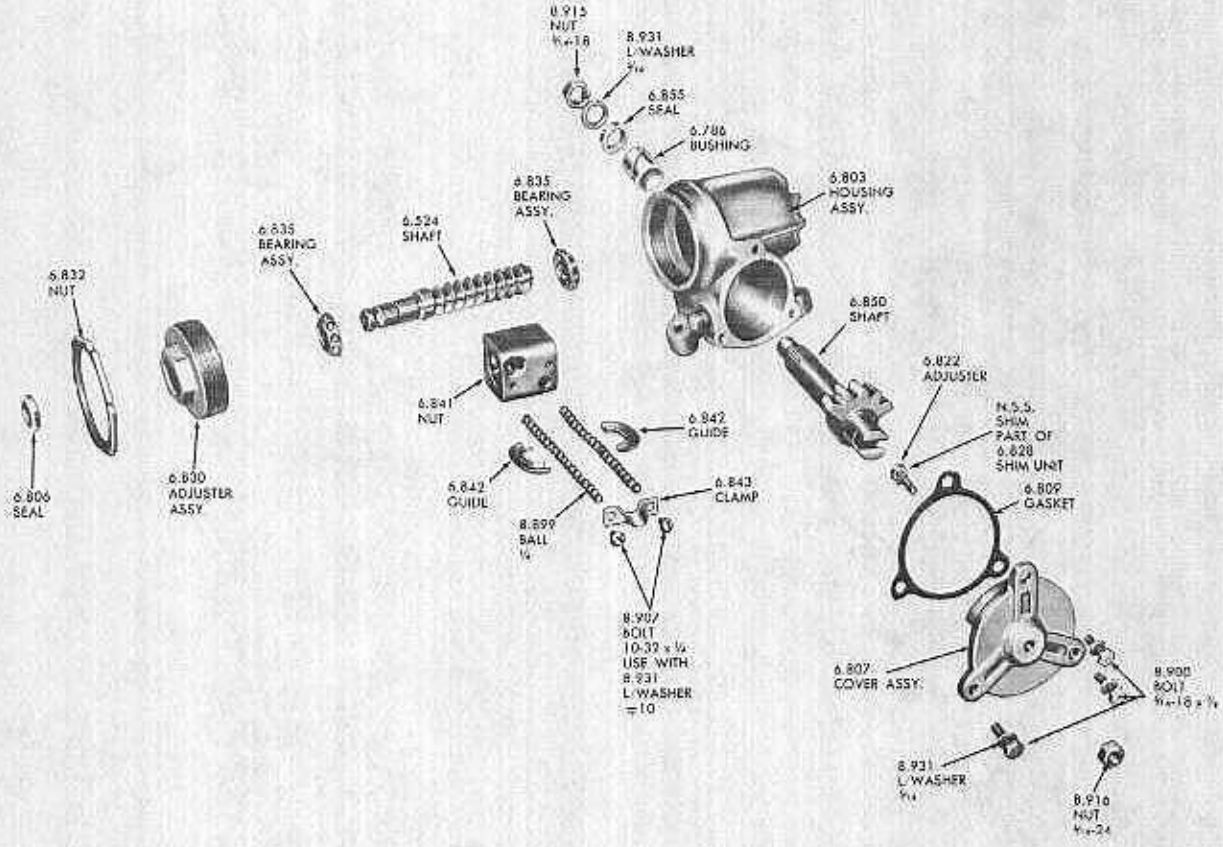

1960-64 CORVAIR STEERING GEAR (EXPLODED)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

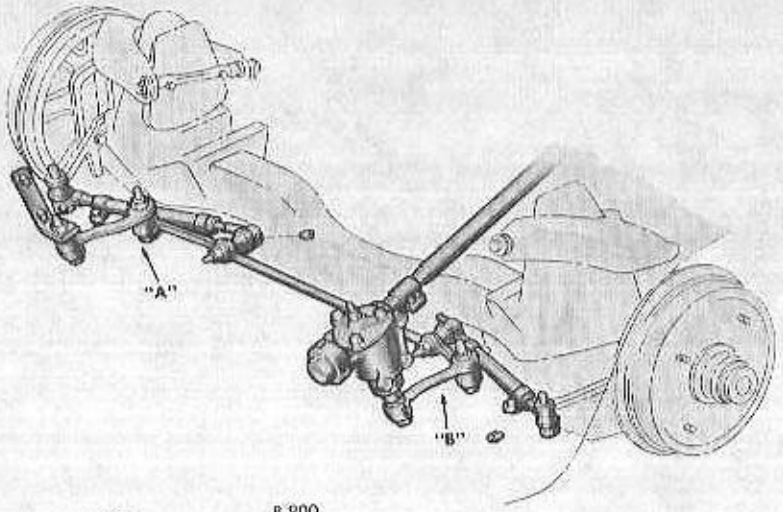

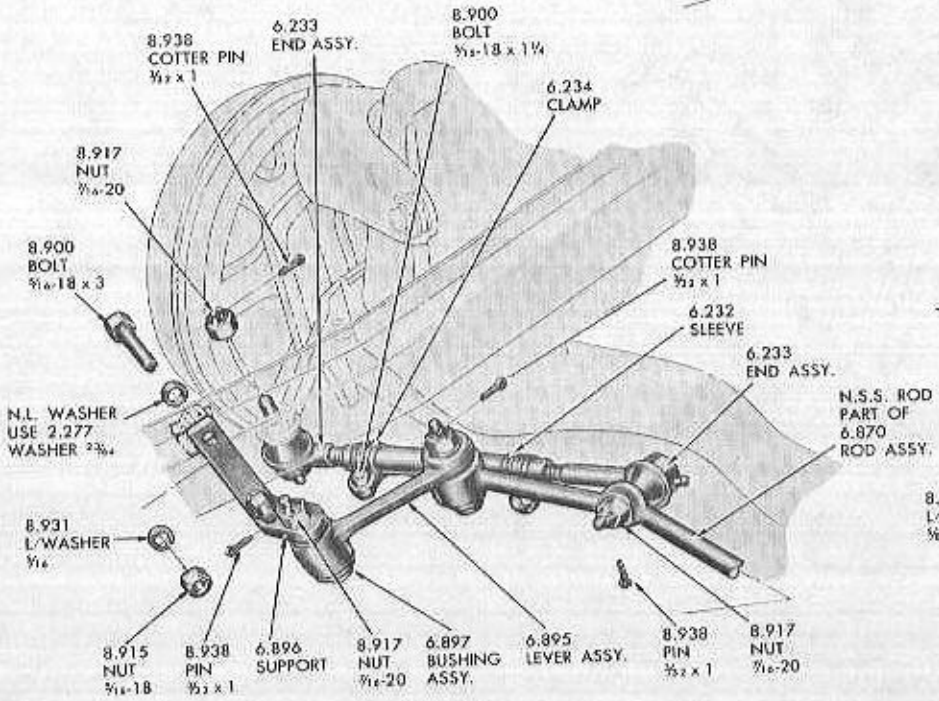

VIEW "A"

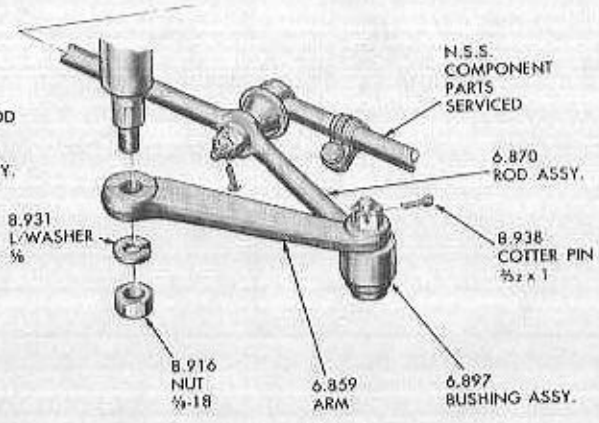

VIEW "B"

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

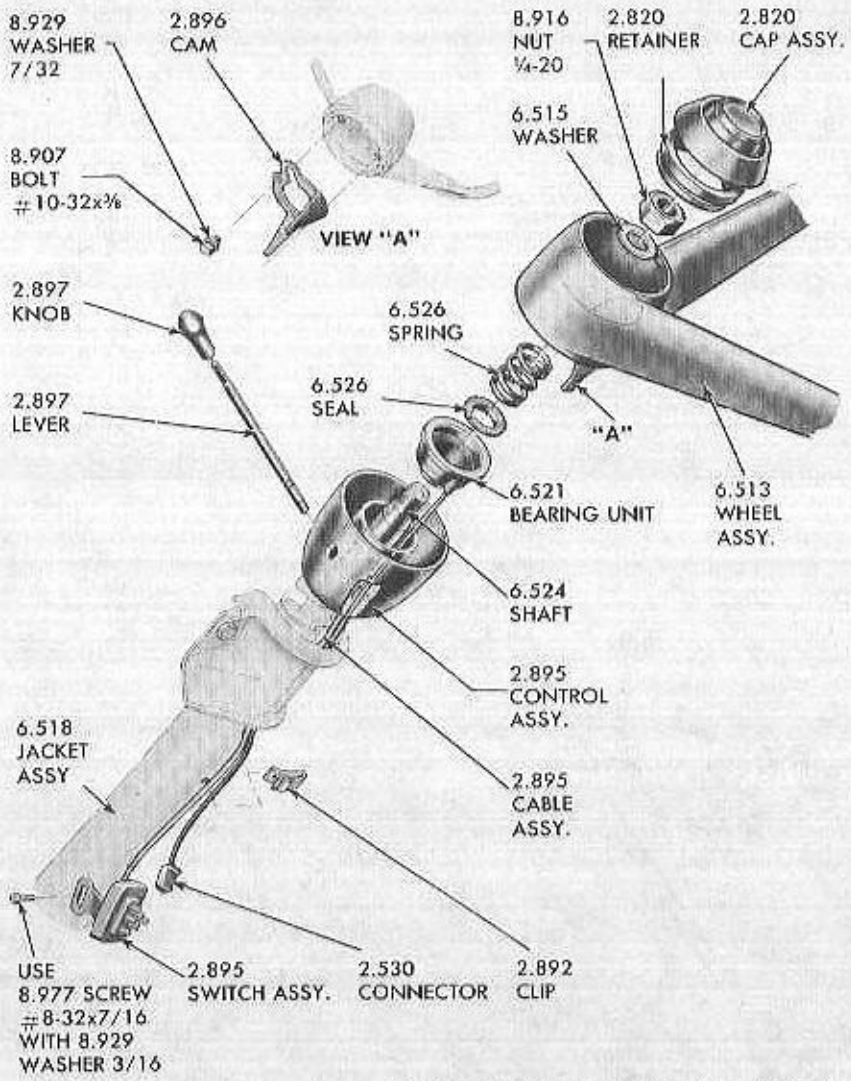

HORN AND DIRECTIONAL SIGNAL

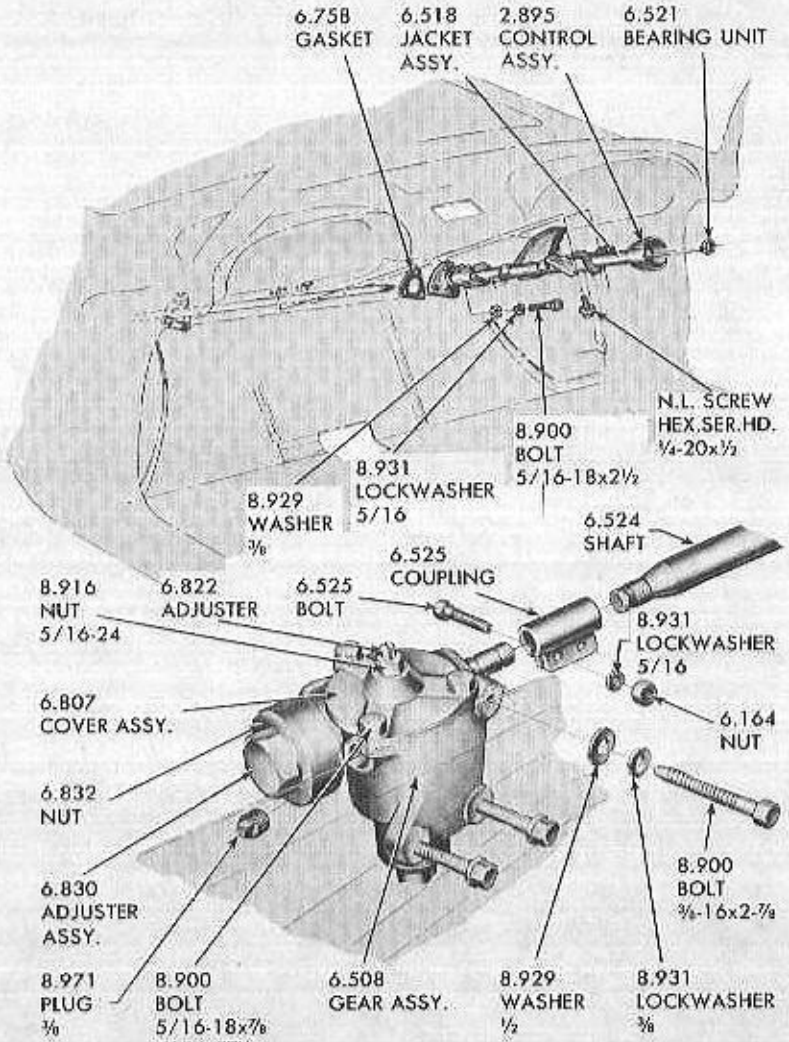

STEERING GEAR AND JACKET

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

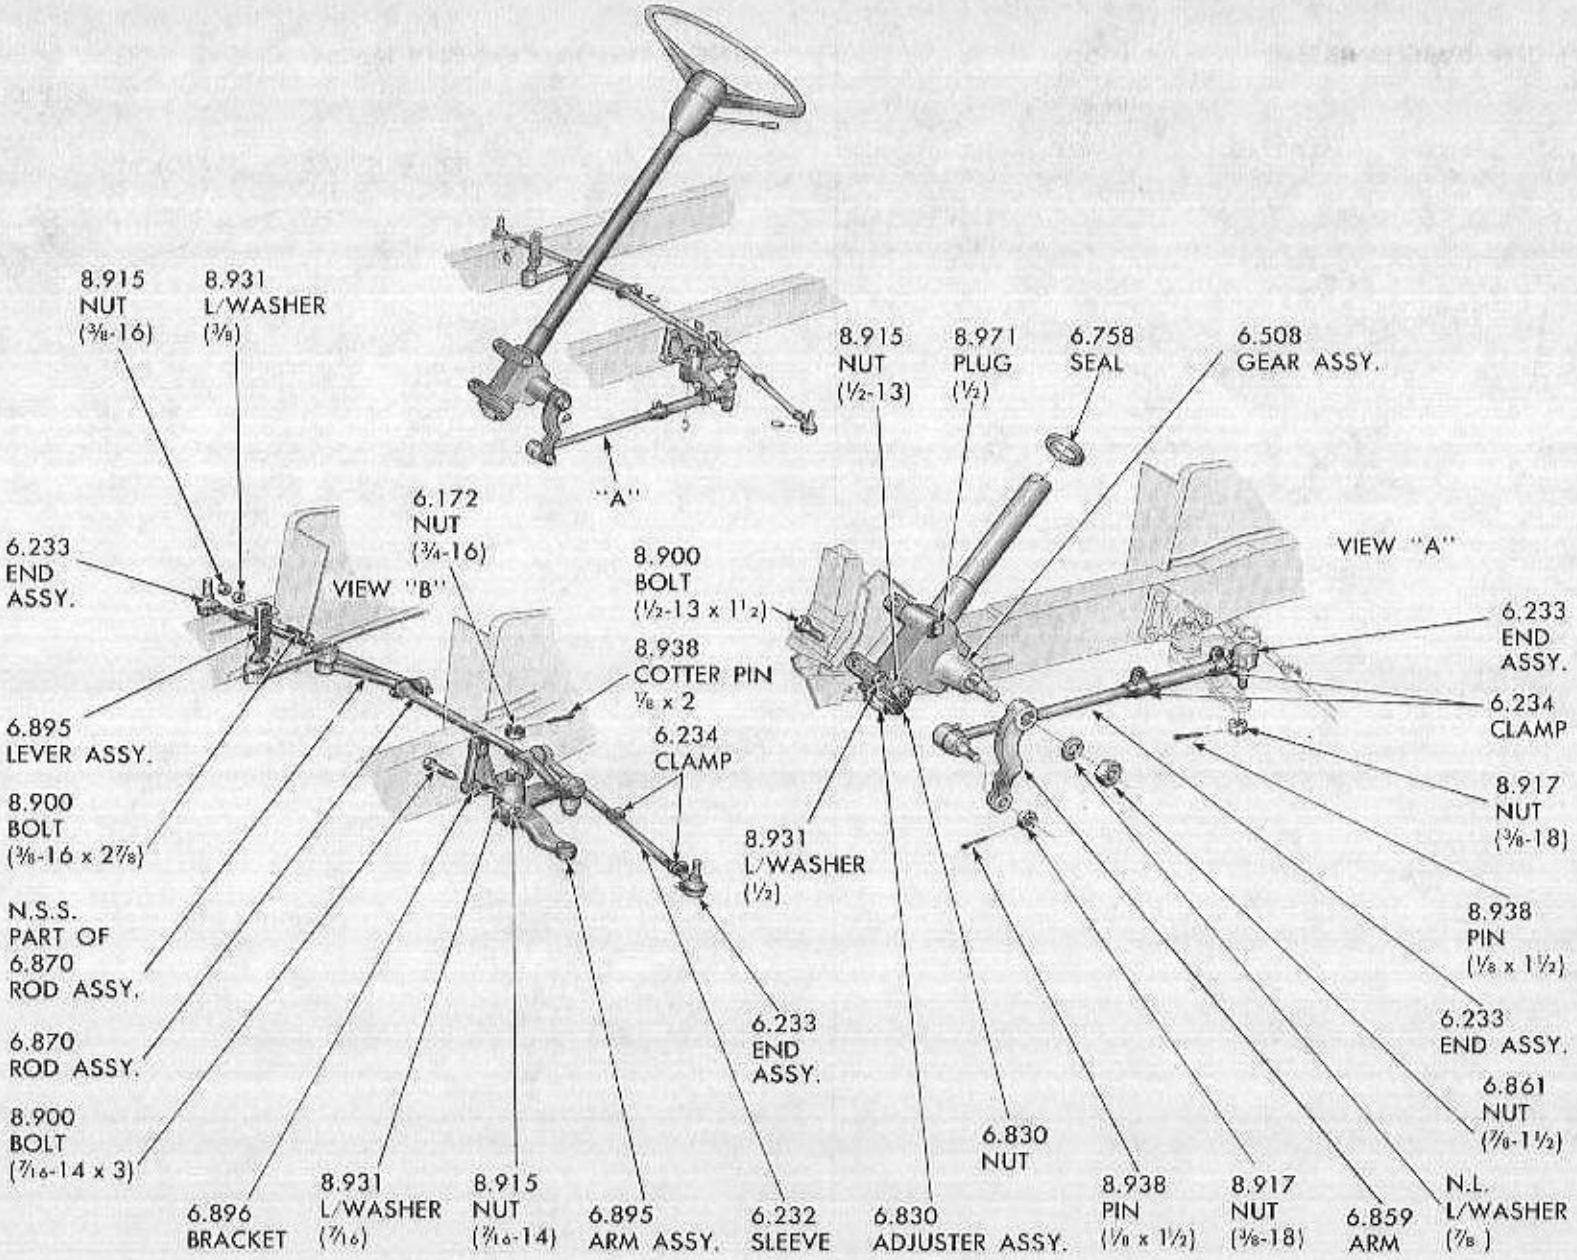

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit Iron

6.009 STOP, Steering Knuckle

65-69	CORVAIR	3857685	lower control arm ($3^{23}/_{64}$ O.L. x $^{59}/_{64}$ wide)	2

6.020 KNUCKLE, Steering

60	ALL	3774704		R.H.
60	ALL,			
61-64	CORVAIR	3794022		2
61-65	F.C.	3785497		2
65-69	CORVAIR	3890127	**KNUCKLE UNIT** ($^{5}/_{8}$"—18 anchor hole on knuckle) (Note 1)	L.H.
65-69	CORVAIR	3890128	**KNUCKLE UNIT** ($^{5}/_{8}$"—18 anchor hole on knuckle) (Note 1)	R.H.

NOTE 1 Includes steering knuckle, brake shoe anchor pin and anchor pin lock.

6.022 NUT—RING, Steering Knuckle Spindle

60-64	CORVAIR	6255563	($^{11}/_{64}$—24 hex. hd.)	2
61-65	F.C.	378137	($^{3}/_{4}$"—20 hex. hd.)	2
65-69	CORVAIR	3858108	($^{3}/_{4}$—20)	2
65-69	CORVAIR	3872951	**RING,** nut lock	2

6.103 ARM, Steering Knuckle

60-64	CORVAIR	6255541	(forged 6255541)	L.H.
60-64	CORVAIR	6255542	(forged 6255542)	R.H.
61-65	F.C.	3772055	(forged 3772055)	L.H.
61-65	F.C.	3772056	(forged 3772056)	R.H.
65-69	CORVAIR (exc. H.D. Susp., Sp. Strg.)	3863467		L.H.
65-69	CORVAIR (exc. H.D. Susp., Spl. Strg.)	3863468		R.H.
65-69	CORVAIR w/H.D. Susp., Spl. Strg.	3876417		L.H.
65-69	CORVAIR w/H.D. Susp., Spl. Strg.	3876418		R.H.

6.104 BOLT—NUT, Steering Knuckle

60-69	CORVAIR	3777827	short ($^{3}/_{4}$—24 x $1^{1}/_{2}$) (300M steel)	2
60-61	ALL (exc. F.C.),			
63-65	CORVAIR, F.C.	3777828	long ($^{3}/_{8}$—24 x $1^{3}/_{4}$) (300M steel)	A.R.
60-65	CORVAIR	9422298	**NUT,** attach. ($^{3}/_{8}$"—24) (Type EA) (301M steel)—(8.917)	4
63-67	CORVAIR, CHEVY	9422300	**NUT,** attach. ($^{7}/_{16}$"—20)—(8.917)	2

6.111 SEAL, Tie Rod Dust

60-62	CORVAIR, F.C.	3687643	tie rod socket ($1^{1}/_{2}$ O.D.)	A.R.
63-64	CORVAIR, F.C.	3826598	tie rod socket ($1^{35}/_{64}$" O.D.)	2
64-69	CORVAIR	3844028	tie rod socket	4
65	F.C.	3854823	conn. rod ball stud	2

6.163 RETAINER—SHIM, Steering Knuckle Upper Control Arm

60-64	CORVAIR	6257697	shaft rear bushing inner ($^{1}/_{2}$ I.D. x $1^{1}/_{2}$ O.D.)	2
60-69	CORVAIR	6255569	bushing ($^{11}/_{32}$ I.D. x $1^{1}/_{2}$ O.D.)	4
63-65	F.C.	3710586	bushing (small hole $^{3}/_{8}$" I.D.)	4
60-66	CORVAIR	3772594	**SHIM** ($^{1}/_{32}$)	A.R.
61-65	CORVAIR, F.C.	3751282	**SHIM** ($^{7}/_{16}$")	A.R.

6.164 SHAFT UNIT—BUSHING ASSEMBLY—SPACER—STUD UNIT, Steering Knuckle Upper Control Arm

60-64	CORVAIR	3845269	(Note 1)	1

NOTE 1 Consists of 1 shaft, 2 bushings, 2 retainers, 5 washers, 2 bolts and 1 spacer.

61-65	F.C.	3844420	(Note 2)	2

NOTE 2 Consists of 1 shaft, 2 bushings, 2 retainers, 4 washers and 4 bolts.

65-69	CORVAIR	3865963	(Note 3)	1

NOTE 3 Consists of 1 shaft, 2 bushings, 2 retainers, 4 washers and 2 bolts.

60-69	CORVAIR	6255602	**BUSHING ASSY.,** shaft front ($^{1}/_{2}$ I.D. x $1^{1}/_{2}$ O.D. x $1^{1}/_{2}$ O.L.)	2
61-65	F.C.	3711826	**BUSHING ASSY.** ($^{5}/_{8}$" I.D. x $1^{1}/_{2}$" O.D. x $1^{1}/_{2}$" O.L.)	4
60	ALL	6257966	**BUSHING UNIT,** shaft rr. ($1^{1}/_{2}$ O.D. x $1^{1}/_{2}$ O.L.) (Note 5)	2
61-64	CORVAIR	6257846	**BUSHING UNIT,** shaft rr. ($^{1}/_{2}$" I.D. x $1^{1}/_{2}$" O.D. x $1^{3}/_{32}$" O.L.) (Note 3)	2

NOTE 3 Consists of 1 bushing, 1 spacer.

60	ALL	6257850	**SPACER,** shaft ($^{5}/_{8}$ I.D. x $1^{7}/_{16}$ O.D. x $^{1}/_{4}$ thk.)	2
61-64	CORVAIR	3813952	**SPACER,** shaft ($^{5}/_{8}$ I.D. x $1^{1}/_{4}$ O.D. x $^{9}/_{32}$ thk.)	2
60-69	CORVAIR	3865959	**STUD UNIT,** ball replacement (Note 4)	2

NOTE 4 Consists of 1 stud assy., 9 nuts, 1 pin, 4 bolts, 4 washers, and 4 lockwashers.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-65	F.C.	3865827	**STUD UNIT,** ball replacement (Note 5)	2

NOTE 5 Consists of 3 bolts, 3 washers, 6 nuts, 3 lockwashers.

6.166 SEAL, Steering Knuckle Control Arm

60-63	CORVAIR	763711	ball stud, upper arm ($^{9}/_{16}$ I.D. x $1^{1}/_{2}$ O.D.)	2
61-62	F.C.	3861869	ball stud, lower arm inner	2
61-62	F.C.	762599	ball stud, lower arm outer ($^{3}/_{4}$ I.D. x $1^{3}/_{4}$ O.D.)	2
61-62	F.C.	770982	**SEAL ASSY. ball stud,** upper control arm ($1^{9}/_{64}$ x $1^{11}/_{64}$ x $2^{1}/_{64}$)	2

6.168 ARM ASSY.—STRUT, Steering Knuckle Control Arm

60-69	CORVAIR	3865961	upper, w/ball stud	L.H.
60-69	CORVAIR	3865962	upper, w/ball stud	R.H.
60-61	ALL (exc. F.C.),			
62-64	CORVAIR		lower, left, w/ball stud,	
64	CORVAIR	3862964	lower, right	1
60-61	ALL (exc. F.C.),			
62-63	CORVAIR		lower, right, w/ball stud,	
64	CORVAIR	3862961	lower, left	1
61-65	F.C.	3846269	lower, w/ball stud	L.H.
61-65	F.C.	3846270	lower, w/ball stud	R.H.
61-65	F.C.	3832349	upper, w/ball stud	L.H.
61-65	F.C.	3832350	upper, w/ball stud	R.H.
65-69	CORVAIR	3857671	lower	L.H.
65-69	CORVAIR	3857672	lower	R.H.
60-61	ALL (exc. F.C.)	6255677	**STRUT,** lower	L.H.
60-64	CORVAIR	3854124	**STRUT,** lower	R.H.
62-64	CORVAIR	3854123	**STRUT,** lower	L.H.
65-69	CORVAIR	3888690	**STRUT,** lower	2

6.169 SHAFT UNIT—Steering Knuckle Lower Control Arm

61-65	F.C.	3844418	(Note 1)	2

NOTE 1 Consists of 1 shaft, 2 bushings, 2 retainers, 2 washers and 4 bolts.

6.170 BUSHING—CAP—RETAINER—SLEEVE—WASHER ASSY., Steering Knuckle Lower Control Arm

60-64	CORVAIR	6255708	($1^{1}/_{2}$ I.D. x $1^{5}/_{8}$ O.D. x 2 O.L.)	2
60-61	ALL (exc. F.C.)	6257421	strut, inner ($1^{23}/_{32}$ dia. depression)	2
60-61	ALL (exc. F.C.)	6257422	strut, outer ($1^{11}/_{16}$ dia. insert)	2
61-65	F.C.	3714368	($1^{13}/_{16}$ O.D. x $2^{3}/_{32}$ O.L.)	4
65-69	CORVAIR	3857679	($^{9}/_{16}$ I.D. x $1^{39}/_{64}$ O.D. x $1^{31}/_{32}$ O.L.)	2
62-69	CORVAIR	3793684	**BUSHING UNIT,** lower arm strut	1
65-69	CORVAIR	3791519	**CAP,** bushing	4
61-65	F.C.	3714369	**RETAINER** ($^{7}/_{16}$ I.D. x $1^{13}/_{16}$ O.D.)	4
62-69	CORVAIR	3790250	**RETAINER,** strut bushing ($^{11}/_{16}$ I.D. x $2^{1}/_{4}$ O.D.)	4
60-61	ALL (exc. F.C.)	6255680	**SLEEVE,** strut bushing (1 O.D. x $1^{1}/_{2}$ O.L.)	2
62-66	CORVAIR	3813879	**SLEEVE,** strut bushing ($^{7}/_{8}$ O.D. x $1^{3}/_{8}$ O.L.)	2
67-69	CORVAIR	3792486	**SLEEVE,** strut bushing ($^{7}/_{8}$ O.D. x $1^{5}/_{16}$ O.L.)	2
60-61	ALL (exc. F.C.)	6257050	**WASHER ASSY.,** strut bushing ($^{3}/_{4}$ I.D.)	4

6.172 NUT—BOLT—CAM—WASHER, Steering Knuckle Lower Control Arm Attaching

60-61	ALL	9417614	($^{1}/_{2}$"—20) (301-M steel—copper color)—(8.915)	2
60-69	ALL	3866766	($^{3}/_{8}$"—20) (301-M steel)—(0.626)	A.R.
61-65	F.C.	3742249	($^{7}/_{16}$—20) (2 holes, $2^{1}/_{2}$ long)	2
62-69	CORVAIR	3791855	strut bushing ($^{11}/_{16}$—18) (268-M steel)	4
66	CORVAIR	9422302	($^{1}/_{2}$"—20) (301-M steel) rear susp. lower control arm—(8.917)	2
ALL	ALL	9422301	($^{1}/_{2}$"—13)—(8.917)	A.R.
62	CORVAIR, F.C.	454972	**BOLT** ($^{7}/_{16}$"—20 x $1^{1}/_{8}$") (300-M steel)—(8.900)	4
61-65	F.C.	3779097	**BOLT,** ($^{9}/_{16}$—18 x $2^{5}/_{16}$) (300-M steel)	2
63-65	F.C.,			
65-69	CORVAIR	3707480	**BOLT** ($^{7}/_{16}$—20 x $1^{1}/_{2}$)	A.R.
60-64	CORVAIR	6255674	**BOLT,** strut ($^{3}/_{8}$—24)	4
65-69	CORVAIR	3871580	**BOLT,** strut ($^{3}/_{8}$"—24)	4
65-69	CORVAIR	3857683	**CAM**	2
65-69	CORVAIR	3857680	**CAM ASSY.** ($3^{49}/_{64}$ O.L.)	2
61	F.C.	3779096	**WASHER,** ($^{37}/_{64}$)	2

6.174 STUD UNIT—BOLT UNIT, Steering Knuckle Lower Control Arm

60-69	CORVAIR	9743331	ball replacement	2
61-65	F.C.	3886422	ball replacement	2
60-69	CORVAIR	3719018	**BOLT UNIT,** arm bracket attaching ($^{5}/_{16}$"—24 x $^{3}/_{8}$") (Note 1)—(5.164)	8

NOTE 1 Consists of 4 bolts, 4 nuts and 4 washers.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit Iron

6.176 BUMPER—SPACER, Steering Knuckle Control Arm

60-64	CORVAIR, F.C.	3742247	upper arm (1 1/2 dia. x 2 high)	2
65-69	CORVAIR	3857669	upper arm (1 1/2 dia. x 1 35/64 high)	2
65	F.C.	3852039	rear arm (1 5/32" dia. x 2 33/64" high)—(7.535)	2
60-64	CORVAIR	6255923	**BUMPER ASSY.**, lower arm (1 x 3 3/4 x 1 1/4)	2
61-65	F.C.	3742252	**BUMPER ASSY.**, lower arm (1 x 3 7/8 x 1 7/8)	2
61-65	F.C.	3772053	**SPACER**, lower bumper assy. bolt (3/8 I.D. x 5/8 O.D. x 3/8 thk.)	4

6.178 BOLT—NUT, Steering Knuckle Upper Control Arm

61-64	F.C.	3888248	(7/16—20 x 2 1/8) (300-M steel)	4
ALL	CORVAIR	6257608	(3/8—24 x 1 15/16)	A.R.
60-69	ALL	3866766	**NUT** (3/8"—24) (301-M steel), use with bolts not requiring cotter pins—(0.626)	A.R.
66	CORVAIR	9422298	**NUT**, rr. susp. lower control arm (3/8"—24)—(8.917)	A.R.
ALL	ALL	9422302	**NUT** (1/2"—20) (301-M CAD)—(8.917)	A.R.
ALL	ALL	3765425	**NUT** (7/16—14) (301-M)	A.R.

6.232 SLEEVE, Front Axle Tie Rod

60-69	CORVAIR, F.C.	3854805	adjusting (9/16" I.D. x 13/16" O.D. x 8 3/4" O.L.)	2

6.233 END ASSY., Tie Rod

60-62	CORVAIR	6256524	long (5 15/32 center of socket to end)	2
61-62	F.C.	3777870	long (10 5/16 center of socket to end)	2
60-62	ALL	3790672	short (3 7/16 center of socket to end) (w/o seal)	2
63-64	CORVAIR, F.C.	3826596	short	2
63-64	CORVAIR	3827117	long	2
63-64	F.C.	3827727	long	2
65	F.C.	3855947	right thread	2
65	F.C.	3855948	left thread	2
65-69	CORVAIR	3857009	outer	2
65-69	CORVAIR	3861078	inner	2

6.234 CLAMP, Tie Rod End

60-66	CORVAIR, F.C.,			
68	CORVAIR	3902938	(13/16 I.D. x 3/4 wide)	4
69	CORVAIR	3954397	(fits 27/32" rod)	4

6.307 HUB, Front Wheel

60-64	CORVAIR	3790279	(8 holes—5 7/8 O.D.)	2
64-69	ALL	3887867	(5 holes) w/bolt assy.	2
61-65	F.C.	3812712	**HUB ASSY.**, w/bolts (6 holes—6 O.D.)	2

6.311 BEARING ASSEMBLY, Front Wheel Inner

60-64	CORVAIR	7451080	(HY. A-140183Z)	2
61-65	F.C.,			
65-69	CORVAIR	7450630	(HY. A-153213Z)	2

6.313 BEARING ASSEMBLY, Front Wheel Outer

60-64	CORVAIR	7451077	(HY. A-108142Z)	2
61-65	F.C.,			
65-69	CORVAIR	7450627	(HY. A-113158Z)	2

6.316 CUP, Front Wheel Inner Bearing

60-64	CORVAIR	7451081	(HY. 140183Z)	2
61-69	F.C.	7450631	(HY. 153213Z)	2

6.317 CUP, Front Wheel Outer Bearing

60-64	CORVAIR	7451078	(HY. 108142Z)	2
61-64	F.C.	7450628	(ND 909667)	2

6.318 SEPARATOR ASSY., Front Wheel Inner Bearing with Rollers and Cone

60-64	CORVAIR	7451082	(HY. A-140183Z)	2
61-64	F.C.	7450632	(HY A-153213)	2

6.319 SEPARATOR ASSY., Front Wheel Outer Bearing with Rollers and Cone

60-64	CORVAIR	7451079	(HY. A-108142Z)	2
61-64	F.C.	7450629	(HY. A-113158)	2

6.321 WASHER, Steering Knuckle Spindle

60-64	CORVAIR	6255552	(11/16 I.D. x 1 7/16 O.D.)	2
61-64	F.C.,			
65-69	ALL	3775189	(3/4 I.D. x 1 41/64 O.D.)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

6.326 SEAL ASSEMBLY, Front Wheel Bearing

60-64	CORVAIR	3814160	inner (w/four tabs)	2
61-65	F.C.	3876192	inner	2
64-69	ALL	3876191	inner ($1^{11}/_{16}$ I.D. x $2^{13}/_{16}$ O.D.)	2

6.330 GREASE CAP, Wheel Bearing

60-64	CORVAIR	6255554	front wheel ($1^{7}/_{32}$ x $1^{9}/_{16}$)	2
61-65	F.C.,			
65-69	CORVAIR	3775190	front wheel ($1^{1}/_{4}$ x $2^{1}/_{32}$)	2
65-69	CORVAIR	3858811	*w/adapter, front wheel*	2

6.508 GEAR ASSY.— Steering

60-63	CORVAIR	5674990		1
61-63	F.C.	5673732	(w/steering gear shaft)	1
64	CORVAIR	5678901		1
64-65	F.C.	5692521		1
65	CORVAIR (exc. Tel. W.) (1st design)	5696535	(Note 1)	1

NOTE 1 *Use with one piece shaft.*

65	*CORVAIR w/Tel. W. (1st design)*	5696540		1
65-66	CORVAIR w/H.D. Susp., Spec. Steering	5696344		1
65-66	CORVAIR (exc. H.D. Susp., Tel W., Spec. Steering) (2nd design)	5695482	(Note 2)	1

NOTE 2 Use with two piece shaft.

67-69	*CORVAIR (exc. Spl. Strg.)*	5699255		1
67-69	*CORVAIR w/Spl. Strg.*	5699258		1

6.509 SHIM— —SPACER— , Steering Gear Mounting

60-62	CORVAIR—(6.163)	3772594	($^{1}/_{2}$)	A.R.
61-65	F.C.	3789795	**SPACER**, strg. gear to toe panel ($^{1}/_{2}$ *hole*, $^{1}/_{8}$ *thk.*) (Note 1)	1

NOTE 1 Use w/3789794 reinforcement, Group 16.551.

6.512 HUB ASSY.—SHROUD—SKIRT, Steering Wheel

NOTE All direction control housings are in group 2.906.

64	▪ CORVAIR w/wood grain wheel	3845728	plastic	1
65-66	*CORVAIR w/Tel. W.*	3863902		1
65-66	*CORVAIR w/wood grain wheel*	9742535		1
67-68	CORVAIR w/wood grain wheel	3930062	plastic	1
67	CORVAIR (STD.)	9746460	**SHROUD**	1
67	MONZA	9745805	**SHROUD**	1
68	CORVAIR	9748925	**SHROUD** (black)	1
68	CORVAIR w/del. wheel	9748926	**SHROUD** (dk. blue)	1
68	CORVAIR	9748927	**SHROUD** (dk. gold)	1
68	CORVAIR (exc. del. wheel)	9748163	**SHROUD**	1
69	MONZA	9750089	**SHROUD**	1
65-66	CORVAIR w/wood grain wheel	9742543	**SKIRT**	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

6.513 WHEEL ASSEMBLY, Steering

NOTE For Horn Ring See Group 2.830, for Horn Cap See Group 2.820.

60	ALL (exc. MONZA)	**764407**	(med. turquoise)	1
60-63	CORVAIR	**768248**	(black)	1
60-61	ALL (exc. MONZA, F.C.)	**766200**	(black)	1
61-65	F.C.	**9742209**	(med. fawn) (17")	1
62-65	GREENBRIER	**9743956**	(white and red) (17")	1
62-65	GREENBRIER	**9743957**	(white and green) (17")	1
62-65	GREENBRIER	**9743958**	(white and turquoise) (17")	1
62-65	GREENBRIER	**9743959**	(white and med. fawn) (17")	1
64-66	CORVAIR w/wood grain wheel	**9741032**	plastic (walnut)	1
64	F.C.	**9740732**	(white and red) (16" dia. deep dish) (Note 1)	1
64	*GREENBRIER (1st design)*	**9740733**	*(white and green) (16" dia. deep dish) (Note 1)*	1
64	GREENBRIER	**9740734**	(white and turquoise) (16" dia. deep dish) (Note 1)	1
64	F.C.	**9740735**	(white and fawn) (16" dia. deep dish) (Note 1)	1
67	ALL w/wood grain wheel	**9746195**	plastic (walnut)	1
68	ALL w/wood grain wheel	**9748390**	plastic (walnut)	1

NOTE 1 Used with half horn ring.

NOTE For Steering Wheel Prices, See Dealer Price Schedule (P&A 26).

	BLUE	RED	FAWN	SADDLE	BLACK	AQUA	BRT. BLUE	GOLD
64 CORVAIR	9740511+	9740510+	9740508+	9740512	9740513	9740509+		
64 CORVAIR		9741954●						
64 CORVAIR		9742019+						
65 CORVAIR (STD.)		9742333	9741608			9742332		
65 CORVAIR (DEL.)	9742346	9742345	9741788	9742347	9742348	9742344●		
66 CORVAIR (STD.)	3876652	9742333	3876651					
66 CORVAIR (DEL.)	3883662	3886548	3883661	3883664	9742348	3883665		
66 CORVAIR, w/TEL. WHL.	3888603	3888602	3888601	3888606	3888608	3888607	3888604	
67 CORVAIR	9745978	9745979	9745988		9745977			9745981
67 CORVAIR		9746033			9746031	9746034	9746442	9746035

	BLACK	GOLD	BLUE
68 CORVAIR (exc. Del. Wheel)	9747524	9747526	9747525
68 CORVAIR (MONZA) (exc. Del. Wheel)	9747926	9747943	9747927
68 CORVAIR, w/Del. Wheel	9747536	9747538	9747537

	BLACK	DARK GREEN	BLUE
69 CORVAIR (exc. tel. w)		9749617	9749614
69 MONZA		9749616	9749615
69 CORVAIR w/tel. w	9747524		

+NOTE: For service use two-tone in place of single-tone.
Two-Tone w/White

6.514 LEVER ASSY., and PARTS, Tilt or Telescopic Steering Column

67-69	CORVAIR w/Tel. W. (exc. Wood Grain Wheel)	**3931813**	strg. column lk.	1
65-66	CORVAIR w/Tel. W.	**5694261**	**PLATE,** strg. column shaft brg. ret.	1
65-66	CORVAIR w/Tel. W.	**5694641**	**SPRING,** strg. column inner jacket stop	1
65-66	CORVAIR w/Tel. W.	**5694658**	**WASHER,** strg. column inner jacket stop ($^{3}/_{4}$ I.D. x $1\,^{1}/_{64}$ O.D. plastic)	1
65-69	CORVAIR	**3863914**	**SCREW,** strg. shaft lock knob	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66	CORVAIR	**3886592**	**SCREW,** strg. shaft lock knob	1
67-69	CORVAIR (w/Wood Grain Whl.)	**3905513**	**SCREW,** strg. col. lk.	1
65	CORVAIR w/Tel. W.,			
67-69	CORVAIR	**5690977**	**PIN,** strg. column shaft	1
65-66	CORVAIR	**5694189**	**ROD,** stg. column upr. shaft lock	1
67-69	CORVAIR	**7800419**	**ROD,** shaft locking	1
65-66	CORVAIR w/Tel. W.	**3863913**	**KNOB,** strg. shaft lock	1
67-69	CORVAIR w/Tel. W., Wood Grain Wheel	**3931817**	**KNOB,** strg. column lock	1
65-66	CORVAIR w/Tel. W.	**5694806**	**STOP,** strg. column inner jacket	1
67-68	CORVAIR w/Wood Grain Wheel	**3910763**	**SPACER,** strg. column lock lever	1
67-69	CORVAIR w/Tel. W. (exc. Wood Grain Wheel)	**3910788**	**COVER,** horn button cap	1

6.515 WASHER—RING, Steering Wheel

65-69	CORVAIR w/Tel. W.	**3905522**	($19/32$ I.D. x $15/16$ O.D.)	1
61-69	ALL	**415919**	($17/32$ I.D. x $15/16$ O.D. x $3/32$ thk.)	A.R.
64	MONZA, F.C.,			
65	MONZA,			
66	CORVAIR (exc. STD.)	**9740637**	**RING,** rim trim (chrome)	4

6.518 COLUMN ASSY.—JACKET ASSY.—COVER—SUPPORT ASSY.—STRAP—BUMPER ASSY., Steering Gear

67-68	CORVAIR (exc. Tel. W.)	**7803110**		1
67-69	CORVAIR w/Tel. W.	**7802999**		1
69	CORVAIR (exc. Tel. W.)	**7806151**		1
60-64	CORVAIR	**3819652**	**JACKET ASSY.** (26 O.L.) (w/$7/16$ hole in support)	1
64-65	F.C.	**5692536**	**JACKET ASSY.** ($24 5/8$ O.L.)	1
65	CORVAIR (1st design) (exc. Tel. W.)	**3862452**	**JACKET ASSY.** ($23 31/32$ O.L.)	1
65	CORVAIR w/Te. W.	**5696385**	**JACKET ASSY.,** inner and outer	1
66	CORVAIR w/Tel. W.	**5696840**	**JACKET ASSY.,** inner and outer	1
65-66	CORVAIR (2nd design) (exc. Tel. W.)	**3875003**	**JACKET ASSY.** ($23 1/16$ O.L.)	1
67-68	CORVAIR (exc. Tel. W.)	**5698509**	**JACKET ASSY.**	1
67-69	CORVAIR w/Tel. W.	**7803023**	**JACKET ASSY.**	1
69	CORVAIR (exc. Tel. W.)	**3958679**	**JACKET ASSY.**	1
65-66	CORVAIR w/Tel W.	**5697016**	**COVER,** steering column toe pan	1
67-69	CORVAIR	**3901945**	**COVER,** steering gear jacket lower	1
67-69	CORVAIR	**3901944**	**COVER,** steering gear jacket upper	1
69	CORVAIR (exc. Tel. W.)	**7800512**	**COVER,** strg. column mesh.	1
67-69	CORVAIR	**7800016**	**SUPPORT ASSY.,** strg. shf. brg. and sig. sw	1
67-69	CORVAIR w/Tel. W.	**7801284**	**STRAP,** inr. jacket stop bumper	1
67-69	CORVAIR w/Tel. W.	**7800411**	**BUMPER ASSY.,** inr. jacket stop	1

6.519 SEAL, Steering Shaft

60-63	CORVAIR	**3708146**	"O" ring, upper bearing ($11/16$ I.D.)—(4.338)	1
65-69	CORVAIR	**5690733**	**SEAL ASSY.,** upper, lower shaft	1

6.521 BEARING UNIT and PARTS, Mast Jacket

60-63	CORVAIR, F.C.,			
64-65	CORVAIR	**5672508**	upper (w/horn wire) ($1 5/8$ O.D.) (Note 1)	1
	NOTE 1 Consists of bearing and cable assy., spring and "O" ring seal.			
63	ALL	**5691182**	**BEARING ASSY.,** dir. signal switch—(2.895)	1
65-66	CORVAIR (exc. Tel./W.)	**7802845**	**BEARING ASSY.,** strg. shaft lwr., intermediate shaft and yoke upr.	1
64-65	F.C.	**5955201**	**BEARING ASSY.,** dir. signal switch—(2.895)	1
65-66	CORVAIR w/Tel. W.	**5674684**	**BEARING ASSY.,** upper shaft lower	2
67	CORVAIR w/Tel. W.	**7800407**	**BEARING ASSY.,** shaft lower	1
68-69	CORVAIR (exc. Tel. W.)	**7806142**	**BEARING ASSY.,** shaft lower	1
65-66	CORVAIR w/Tel. W.,			
69	CORVAIR	**5694191**	**RETAINER,** lwr. and upr. shaft brg., strg. shaft stop ring	A.R.
65-66	CORVAIR,			
67	CORVAIR (exc. Tel. W.),			
68-69	CORVAIR	**5673944**	**RETAINER,** upper shaft seal	1
65-66	CORVAIR w/Tel. W.	**5696431**	**RETAINER,** lower shaft brg. assy.	1
65	CORVAIR (exc. Tel. W.)	**580074**	**RETAINER,** upper shaft	1
67-69	CORVAIR w/Tel. W.	**7800413**	**RETAINER,** lower brg.	1
69	ALL	**7804439**	**RETAINER,** lower bearing adapter	1
67	ALL	**7801219**	**SLEEVE UNIT,** w/adjuster, lower strg. shaft	1
66	CORVAIR (exc. Tel. W.)	**3824101**	**SEAT,** lower	1
65-66	CORVAIR w/Tel. W.	**5694227**	**WASHER,** lwr. shaft brg.	1
67-69	CORVAIR w/Tel. W.	**7800399**	**WASHER,** lower	1
69	CORVAIR (exc. Tel. W)	**7806805**	**ADAPTER,** lower bearing	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65-66	CORVAIR w/Tel. W.	5694195	**PACKING,** lwr. shaft brg.	1
67-69	CORVAIR w/Tel. W.	7802244	**PACKING,** lower brg.	1
60-61	CORVAIR,			
60-65	F.C.,			
63-64	CORVAIR	6256574	**SPRING,** upper (1 1/2" length-6 coils)	1
67	CORVAIR (exc. T.W.)	5673012	**SPRING,** upper (1 3/32 length)	1
65-66	CORVAIR w/Tel. W.	3863915	**SPRING,** upper	1
65-66	CORVAIR w/Tel. W.	5694196	**SPRING,** lwr. shaft brg.	1
65-66	CORVAIR (exc. Tel. W.)	3862907	**SPRING,** 1 5/32 O.L.	1
66	CORVAIR (exc. Tel. W.)	3758803	**SPRING,** strg. shaft and lower bearing	1
67-69	CORVAIR w/Tel. W.	7800397	**SPRING,** lower	1
67	CORVAIR w/Tel. W.	7800420	**WEDGE,** shaft locking	1
67-69	ALL (exc. T.W.)	5699603	**RING,** upper retaining	1
67-68	CORVAIR w/T.W. (exc. Tel. W.)	7800214	**RING,** lower brg. retaining	1
67-69	CORVAIR	7801404	**RING,** retainer	1
65-66	CORVAIR (exc. Tel. W.)	3840897	**SPACER,** lower	1
65	CORVAIR	3767107	**CLAMP** (7/8)	1
66-69	CORVAIR	3888611	**CLAMP,** lower	1
67-69	CORVAIR	7802662	**CLAMP,** lower	1
64	CORVAIR	3862475	**SLEEVE,** upper brg.	1
65	CORVAIR	3863599	**SLEEVE,** upper bearing	1

6.524 SHAFT, Steering Gear

60-63	CORVAIR	6255906	upper (47 13/16 O.L.)	1
60-63	CORVAIR	5674960	lwr. w/worm (less ball nut) (5 13/32 O.L.)	1
60-63	CORVAIR	5674988	lwr. worm (w/ball nut) (5 13/32 O.L.)	1
61-65	F.C.	5673919	w/worm (less ball nut) (34 5/16 O.L.)	1
61-65	F.C.	5673918	w/worm (w/ball nut) (34 5/16 O.L.)	1
64	CORVAIR	5678922	w/ball nut	1
64	CORVAIR	5678923	w/worm	1
65	CORVAIR w/Tel. W. (1st design)	5694187	upper assy. (knurled lwr. end)	1
65	CORVAIR w/Tel. W. (2nd design)	5695394	upper assy. (pinned lower end)	1
65	CORVAIR w/Tel. W. (1st design)	5695029	w/worm (19" O.L.)	1
65	CORVAIR w/Tel. W. (1st design)	5695028	w/ball nut (w/5695029)	1
65	CORVAIR (1st design) (exc. Tel. W.)	5693249	w/worm (52" O.L.)	1
65	CORVAIR (1st design) (exc. Tel. W.)	5693248	w/ball nut (w/5693242)	1
65-66	CORVAIR (2nd design)	5695484	w/worm (20" O.L.)	1
65-66	CORVAIR (2nd design)	5695483	w/ball nut (w/5695484)	1
65-66	CORVAIR (exc. Tel. W.)	5696337	w/coupling, upper	1
65-66	CORVAIR (exc. Tel. W.)	5696354	less coupling (w/pin), upper	1
65	CORVAIR w/H.D. susp.	5696401	w/worm (14/1 stg. gear)	1
65	CORVAIR w/H.D. susp.	5696400	w/ball nut	1
67-69	CORVAIR w/spl. strg.	5699244	w/worm	1
67-69	CORVAIR w/spl. strg.	5699243	w/ball nut	1
67-69	CORVAIR (exc. spl. strg.)	5699246	w/worm	1
67-69	CORVAIR (exc. spl. strg.)	5699245	w/ball nut	1
67-68	CORVAIR (exc. Tel. W.)	7803168	w/coupling and lower bearing	1
67	CORVAIR w/T.W.	7803479		1

6.525 COUPLING—BOLT—FLANGE—SPRING—PLATE ASSY.—BEARING—WASHER—SEAL—SPACER, Steering Gear Shaft

60-63	CORVAIR,			
65	CORVAIR w/Tel. W.	6256937		1
65-69	CORVAIR	5695477	upper, and lower U joint assy.	1
60-63	CORVAIR,			
65	CORVAIR w/Tel. W.	6256938	**BOLT,** to steering gear (5/16—24 x 1 3/8)	2
64	CORVAIR, F.C.	3777828	**BOLT,** to steering gear (3/8"—24 x 1 3/4")—(6.104)	A.R.
69	CORVAIR (exc. Tel. W.)	7800569	**FLANGE,** strg. jacket housing	1
65-69	CORVAIR	5675186	**SPRING,** upper & lower coupling	1
67-69	CORVAIR	7803265	**SPRING,** coupling	1
65-66	CORVAIR	3875008	**PLATE ASSY.,** stop	1
65-69	CORVAIR	5675599	**BEARING,** upper shaft	1
65-69	CORVAIR	5674962	**WASHER**	1
67-69	CORVAIR (exc. T.W.)	7800580	**WASHER,** upper ring thrust	1
67	ALL (exc. T.W.)	7800581	**WASHER,** upper ring wave	1
67-69	CORVAIR (exc. Tel. W.)	7800540	**WASHER,** lower	1
67-69	CORVAIR w/Tel. W.	7801247	**WASHER,** upper retaining ring thrust	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

67-68	ALL	5698384	**SEAL,** shift tube column, filler tube column	1
67-68	ALL	5698799	**SEAL,** shift tube strg. shaft	1
67-69	CORVAIR w/Tel. W.	7803157	**SPACER,** clamp	1
67-69	CORVAIR (exc. Tel. W.)	7803109	**SPACER,** clamp	1
69	CORVAIR (exc. Tel. W.)	7806856	**SPACER,** clamp	1

6.758 GASKET—SEAL—RETAINER—GROMMET— —FASTENER, Steering Gear Jacket

60-64	CORVAIR	6257615	(1 7/8 dia. center hole, (3) 11/32 holes)	1
60-65	CORVAIR (exc. Tel. W.)	6256088	**SEAL**	1
61-65	F.C.	3779442	**SEAL** (1 3/4 I.D. x 3 1/4 O.D.)	1
66	CORVAIR	3875049	**RETAINER,** jacket dash seal	1
61-65	F.C.	3716500	**GROMMET,** strg. gear cowl (1 1/4 x 5 7/8)	1
ALL	ALL	3764424	**FASTENER**	A.R.

6.760 CLAMP—BRACKET ASSY.—SUPPORT—SEAL—NUT, Steering Column

64-66	F.C.	262545	steering gear jacket	1
61-65	F.C.	3772993	**BRACKET ASSY.,** jacket cowl lower	1
65	CORVAIR	3862447	**BRACKET ASSY.,** jacket	1
65-66	CORVAIR (exc. Tel. W.)	3852899	**SUPPORT,** jacket	1
65	CORVAIR	3862450	**SEAL,** gear bracket jacket	1
ALL	ALL	3775180	**SEAL,** gear jacket cover—(9.749)	A.R.
66-69	CORVAIR (exc. Tel. W.)	3875001	**SEAL,** gear bracket jacket	1
ALL	ALL	1378333	**NUT** (3/8—16) strg. col. supt.	2

6.786 BUSHING— ., Pitman Shaft

60-69	CORVAIR	5674018	(7/8 I.D. x 1 O.D. x 1 3/8)	1
61-65	F.C.	266316	(1 1/8" I.D. x 1 3/8" O.D. x 1 3/8")	1

6.803 HOUSING ASSY., Steering Gear

60-63	CORVAIR	5674022	w/bushing and cup	1
64-69	CORVAIR	5678909		1
64-65	F.C.	5692532	w/bushing	1

6.806 SEAL, Steering Gear

60-69	CORVAIR	5696537	worm, dust	1

6.807 COVER ASSY., Steering Gear Housing

60-69	CORVAIR	5674020	side (5/16—24 center hole)	1
61-65	F.C. w/Spl. Strg.	5666722	side (7/16"—20 center hole)	1

6.809 GASKET, Steering Gear Side Cover

61-65	F.C.	5666734	(3 holes 13/32" I.D.)	1
60-69	CORVAIR	5679401		1

6.822 ADJUSTER— Steering Gear Lash

60-69	CORVAIR	5673112	(5/16—24 x 1 7/16)	1
ALL	ALL	266678	(7/16"—20 x 1 1/16")	1

6.828 SHIM UNIT, Steering Gear Lash Adjuster

60-69	CORVAIR	5673960	contains (1) each .063, .065, .067, .069 (1 1/2 O.D.)	1
61-65	F.C.	605142	contains (1) each .063, .065, .067, .069	1

6.830 ADJUSTER ASSY., Steering Gear Worm Bearing

60-69	CORVAIR	5673101	(1 5/16 O.D.)	1
61-65	F.C.	5666681	(2 3/4" O.D.)	1

6.832 NUT, Steering Gear Worm Bearing Lock

60-69	CORVAIR	5673119	adjuster lock (2 5/8—16 thd. 6 notches)	1
61-65	F.C.	5676217	adjuster lock (2 3/4"—16 thd. 6 notches)	1

6.835 BEARING ASSY.—RETAINER—CUP, Steering Gear Worm Thrust

60-69	CORVAIR	5673113	(1 5/8 x 5/16)	2
61-65	F.C.	5666693	(15/16" O.D. x 11/64")	2
61-65	F.C.	5668489	**RETAINER** (1 13/64" I.D. x 1 1/2" O.D.)	1
60-69	CORVAIR	5673103	**CUP** (1 5/16 O.D. x 5/16 thk.)	1
61-65	F.C.	5666683	**CUP** (1 1/2" O.D. x 5/16" thk.)	2

6.841 NUT, Steering Gear Worm Ball

60-63	CORVAIR	5674945	(1 1/2 x 1 19/32 x 1 5/8)	1
61-65	F.C.	5666886	(1 21/32" x 2 1/2" x 1 15/16")	1
63-69	CORVAIR	5679169		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65-69	CORVAIR w/H.D. Susp.	5696165	(1 63/64 O.D.)	1

6.842 GUIDE—GUIDE UNIT, Steering Gear Worm Ball Return

60-69	CORVAIR w/5674990 (2nd design)	5674946	(1 1/4 O.L.)	4
65-69	CORVAIR w/H.D. Susp.	5696164		1
61-65	F.C.	5676232	**GUIDE UNIT**, w/clamp (Note 1)	1

NOTE 1 Consists of 1 bolt and washer assy., 1 clamp, 1 guide, ball return.

6.843 CLAMP—SCREW ASSY., Steering Gear Worm Ball Return Guide

60-69	CORVAIR w/5674990	5674947	(1 5/8 long dbl. loop)	1
65-69	CORVAIR, w/H.D. susp	5696163	(1 31/64 long dbl. loop)	1
60-69	CORVAIR	5674951	**SCREW ASSY.**, w/lock washer (10—32 x 11/64)	1

6.844 BALL, Steering Gear

61-65	F.C.	266800	(9/64" dia.)	A.R.

6.850 SHAFT, Steering Gear Pitman

60-69	CORVAIR	5673118	(5/8—18 thd.)	1
61-65	F.C.	5671822	(7/8"—14 thd.)	1

6.855 SEAL, Steering Gear Pitman Shaft

60-69	CORVAIR	5673120	(1 1/4 O.D. x 3/16 thk.)	1
61-65	F.C.	5670325	(1 7/16" O.D. x 3/16" thk.)	1

6.859 ARM, Pitman

60-64	CORVAIR	6255787	(cast 6255787)	1
61-65	F.C.	3772007	(cast 3741383)	1
65-69	CORVAIR	3857005	(cast 6255787)	1

6.861 NUT—WASHER, Steering Gear Pitman Arm

61-65	F.C.	258779	(7/8"—14 x 1 1/2" hex.)	1
63-67	CORVAIR	3793578	**WASHER**, pitman arm to relay rod, pitman arm ball stud (5/8")—(6.897)	1

6.870 ROD ASSEMBLY—ROD—ROD UNIT—SOCKET ASSY.—CLAMP, Steering Relay

61-69	CORVAIR	3777825	(28 5/8 center to center of sockets)	1
64-65	F.C.	3854821	connecting	1
61-65	F.C.	3772027	**ROD**, relay (26 7/16 center to center of sockets)	1
60	ALL	3779896	**ROD UNIT**, w/idler lever (Note 1)	1

NOTE 1 Contains 1-rod assy., 1-lever assy., 1-support and 1-spacer.

61-64	F.C. (1st design)	3782920	**SOCKET ASSY.**, front steering connecting rod front (13 3/4 center ofsocket to end)	1
61-64	F.C. (2nd design)	3757564	**SOCKET ASSY.**, front steering connecting rod rear (13 7/16" center of socket to end)—(6.233)	1
65	CORVAIR (exc. Tel. W.)	3882938	**CLAMP**, steering shaft bearing lower end	1

6.881 PLUG, Steering Connecting Rod

61-64	F.C.	3826598	rear ball stud (5/8" I.D. x 1 5/8" O.D.)—(6.111)	1
61-65	F.C.	3744796	relay and conn. rod to relay rod—(6.898)	1

6.895 LEVER ASSEMBLY—ARM ASSY.—ROD UNIT, Steering Idler

60-64	CORVAIR	3829078	(forged 3744789)	1
61-65	F.C.	3820536	(forged 3779281)	1
65-69	CORVAIR	3913860		1
61-65	F.C.	3777940	**ARM ASSY.**	1
60	ALL (exc. MONZA)	3779896	**ROD UNIT**, w/idler lever (Note 1)—(6.870)	1

NOTE 1 Contains 1-rod assy., 1-lever assy., 1-support and 1-spacer.

6.896 SUPPORT—ROD UNIT—WASHER—BRACKET, Steering Idler

60-64	CORVAIR	3779414	lever (9/16 hole small end)	1
60	ALL (exc. MONZA)	3779896	**ROD UNIT**, w/idler lever (Note 1)—(6.870)	1

NOTE 1 Contains 1-rod assy., 1-lever assy., 1-support and 1-spacer.

60-62	CORVAIR	3790662	**WASHER**, relay and tie rod assy. to body side rail—(11/64")—(2.277)	2
61-65	F.C.	3772018	**BRACKET**, steering relay and connecting rod arm	1

6.897 BUSHING ASSEMBLY—SPACER—WASHER—NUT, Steering Idler

60-69	CORVAIR	6255721	relay rod (9/16 I.D. x 15/16 O.D. x 1 1/2 O.L.)	1
60-64	CORVAIR	3779415	**SPACER**, lever support (1/2 I.D. x 1 O.D. x 1/4 thk.)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-65	F.C.	**3820389**	**SPACER,** lever support ($^{7}/_{16}$ I.D. x $^{7}/_{8}$ O.D. x $^{1}/_{2}$ thk.) (Note 1) 1
	NOTE 1 Use with 3820536 Lever Assy.		
63-69	CORVAIR	**3793578**	**WASHER,** lever to relay rod ($^{5}/_{8}$"), pitman arm ball stud . 1
ALL	ALL	**382588**	**WASHER,** attach. strg. relay and tie rod assy. to frame ($^{25}/_{64}$) 2
66	CORVAIR	**9422295**	**NUT,** strg. idler to frame ($^{5}/_{16}$—18) (30 1M)—(8.917) . . 1

6.898 SEAL, Steering Idler

60-66	CORVAIR, F.C.		lever bearing,
61-65	F.C.	**3744796**	lever stud and strg. relay rod ($^{1}/_{2}$" I.D. x $1^{1}/_{4}$" O.D. x $^{1}/_{4}$" thk.) . . . . . A.R.
61-65	F.C.,		
65-69	CORVAIR	**3779196**	steering idler lever support 1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 7.000

FRAME—SPRINGS

BUMPER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

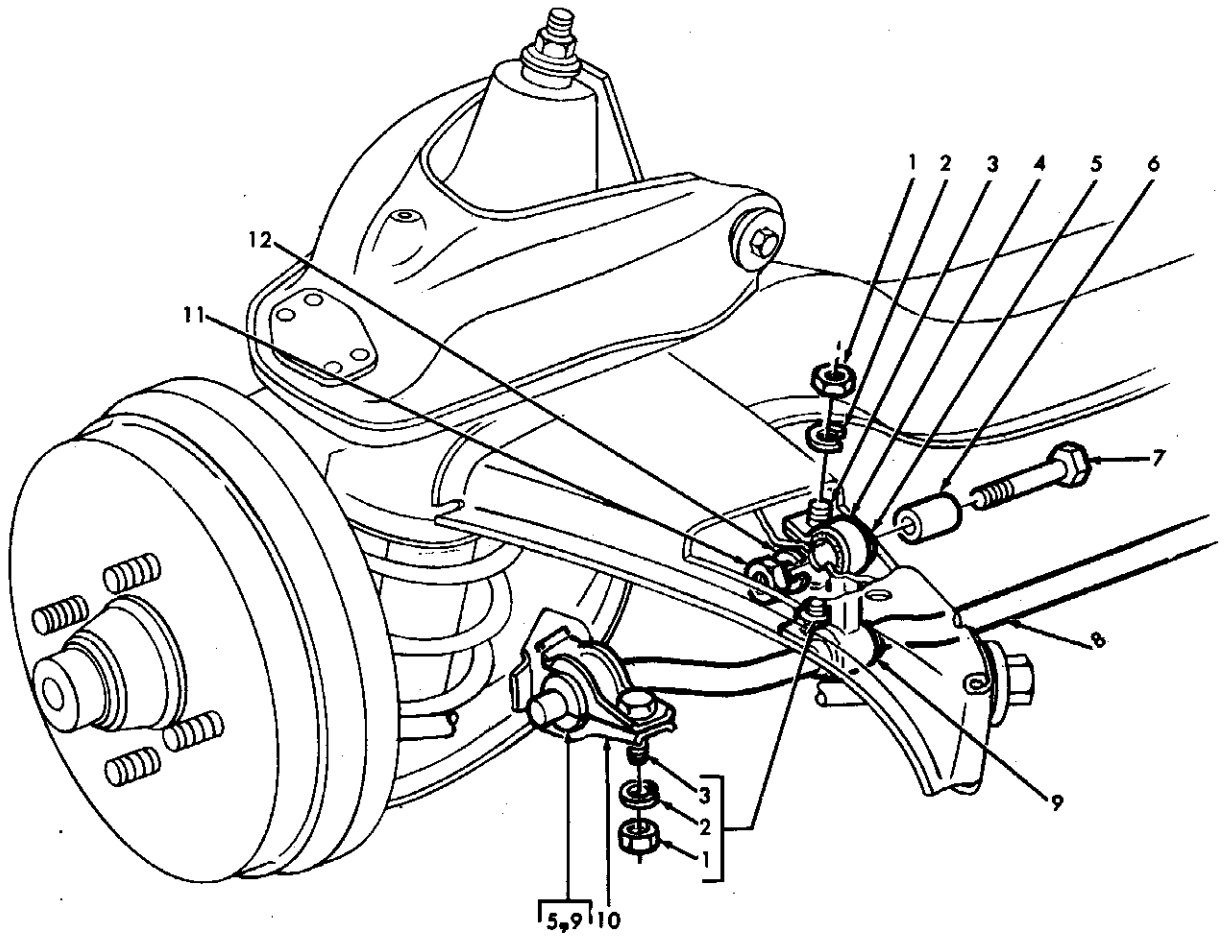

1964 CORVAIR FRONT STABILIZER BAR

1.	8.915	NUT (5/16–18)		7.	8.900	BOLT (3/8–16 x 2-1/4)	
2.	8.931	L/WASHER (5/16)		8.	7.241	SHAFT	3848329
3.	8.900	BOLT (5/16–18 x 1)		9.	7.243	BUSHING	3851087
4.	7.242	SUPPORT ASSEMBLY	3851085	10.	7.243	CLAMP	3851084
5.	7.243	BUSHING	3851086	11.	8.915	NUT (3/8–16)	
6.	7.240	SPACER	3848333	12.	8.931	L/WASHER (3/8)	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

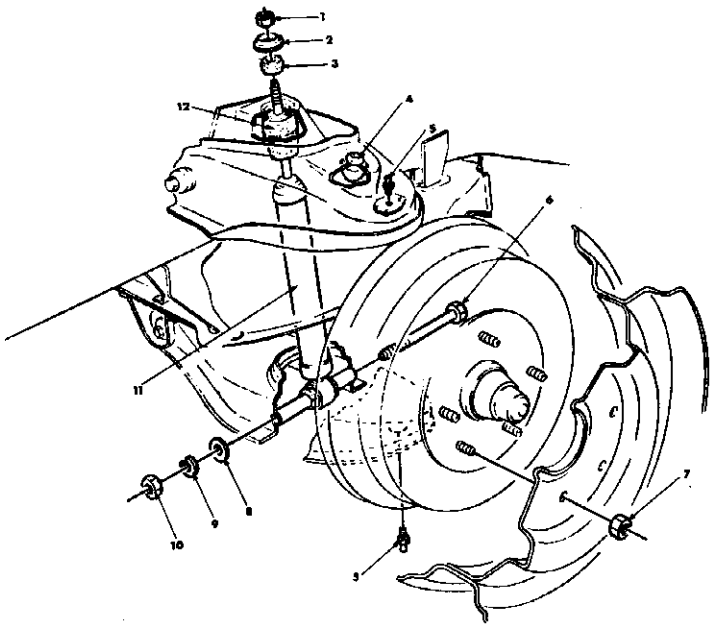

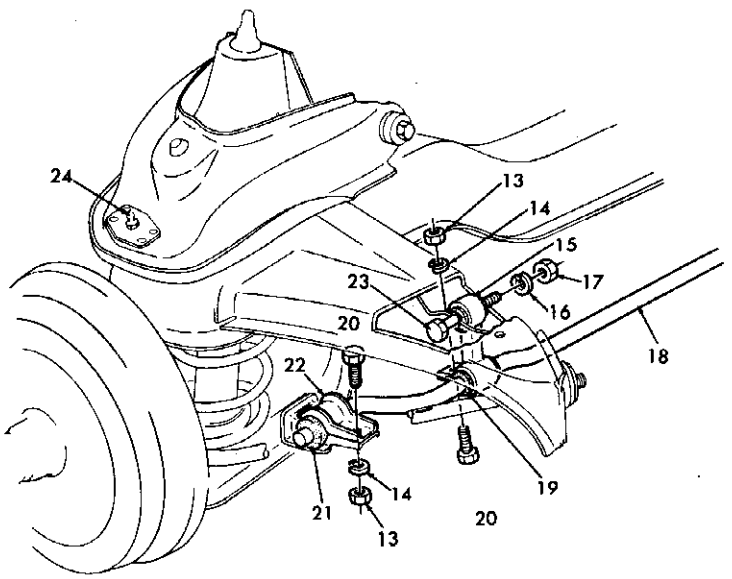

1965-69 CORVAIR FRONT SUSPENSION DETAILS

1.	8.915	NUT	1365067	14.	8.931	L/WASHER (5/16)	
2.	7.245	RETAINER	5544049	15.	7.242	SUPPORT ASSEMBLY	3859145
3.	7.388	GROMMET	3708378	16.	8.931	L/WASHER (3/8)	
4.	3.003	BUMPER	3857669	17.	8.915	NUT (3/8–16)	
5.	8.984	LUBE FITTING	9417901	18.	7.241	SHAFT	3859143
6.	8.900	BOLT (1/2–20 x 5)		19.	7.243	BUSHING	3851087
7.	5.813	NUT		20.	8.900	BOLT (5/16–18 x 1)	
8.	8.929	WASHER (17/32 I.D.)		21.	7.243	BUSHING	3859819
9.	8.931	L/WASHER (1/2)		22.	7.243	CLAMP	3859144
10.	8.915	NUT (1/2–20)		23.	3.275	BOLT (3/8–16 x 1-1/2) (300-M)	3733130
11.	7.345	SHOCK ABSORBER ASSEMBLY	3186935				
12.	7.395	BUMPER ASSEMBLY	3880522	24.	8.984	LUBE FITTING (Type C or D)	
13.	8.915	NUT (5/16–18)					

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

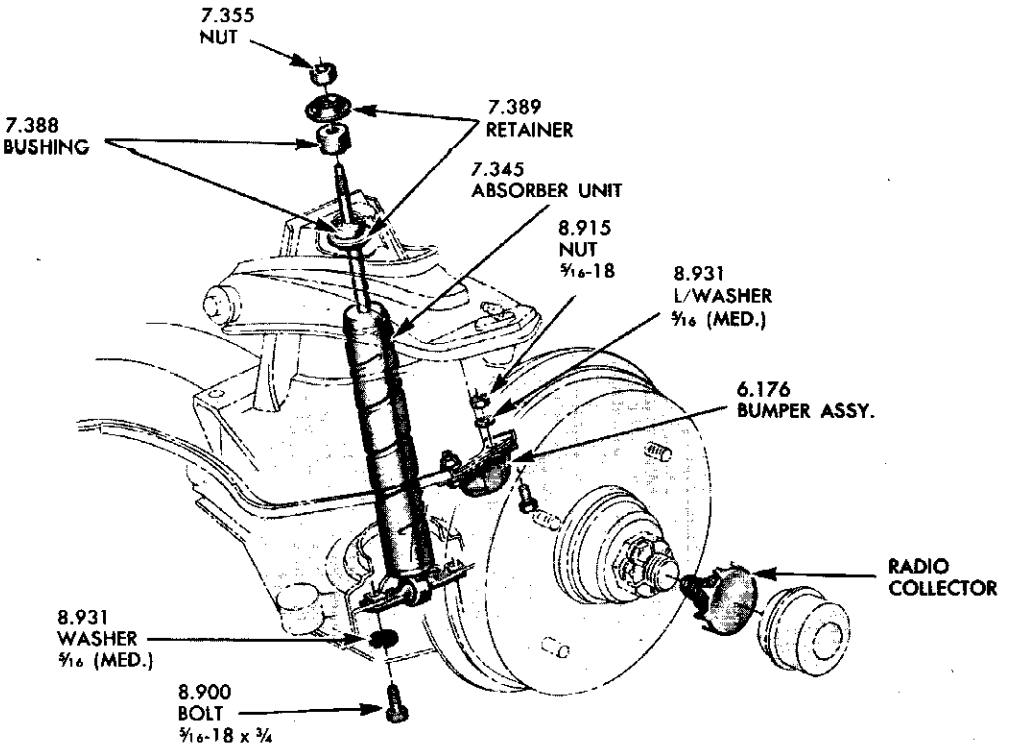

SHOCK ABSORBER & BUMPER ASSY.

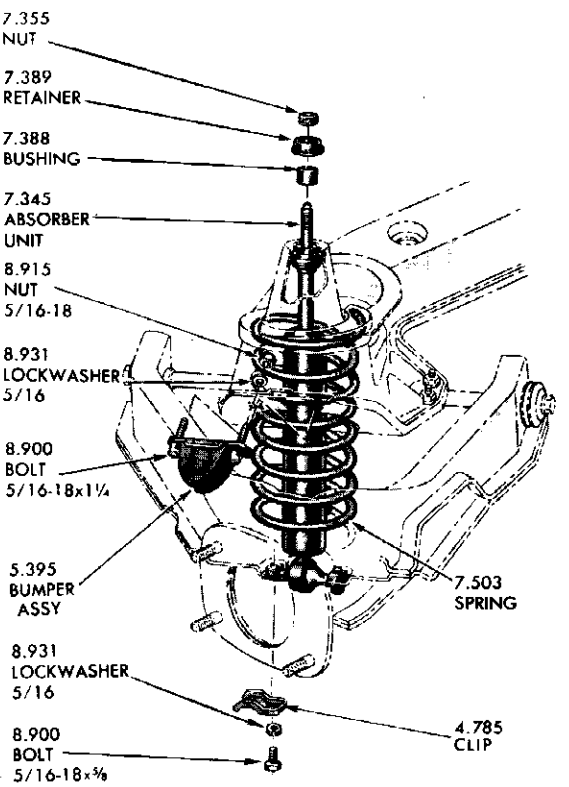

REAR SHOCK ABSORBER AND SPRING

1960-69 CORVAIR SUSPENSION DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

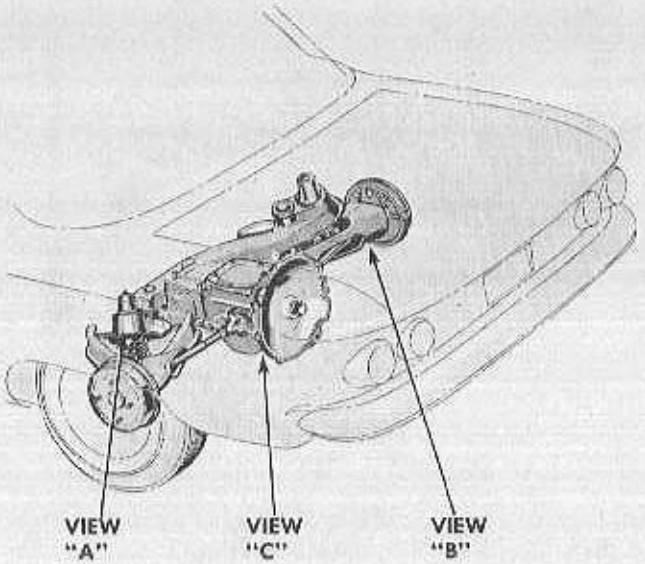

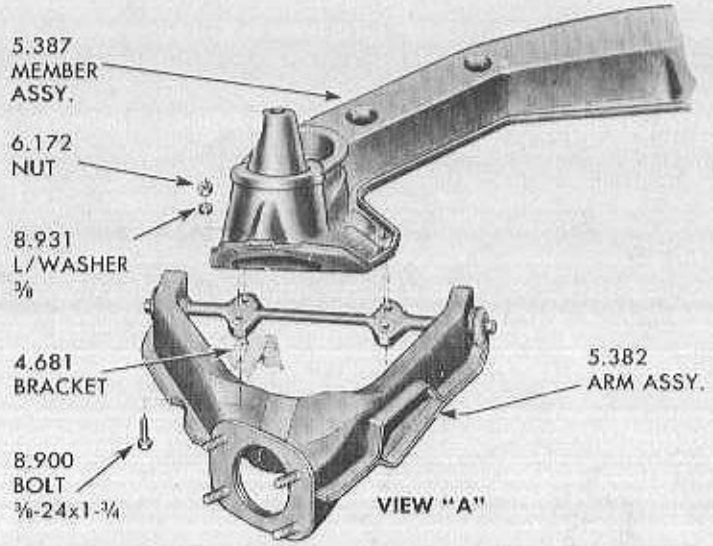

CONTROL ARM ASSY.

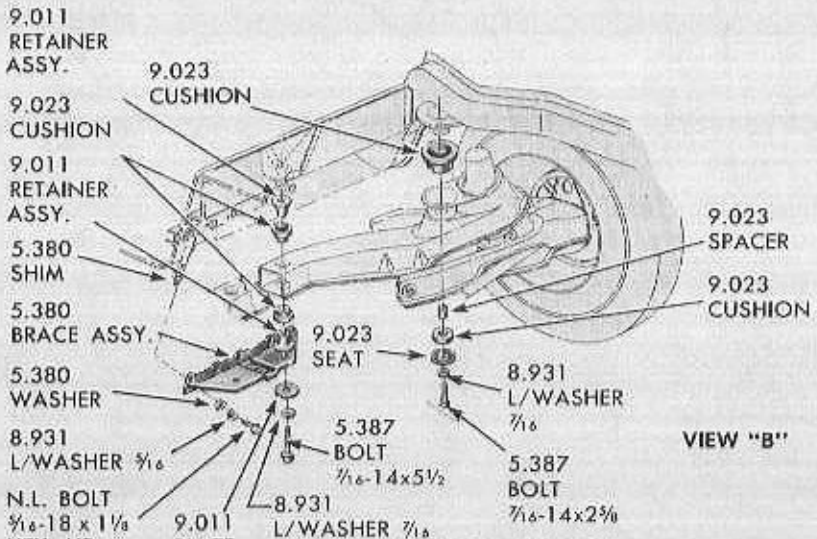

REAR SUSPENSION ASSY.

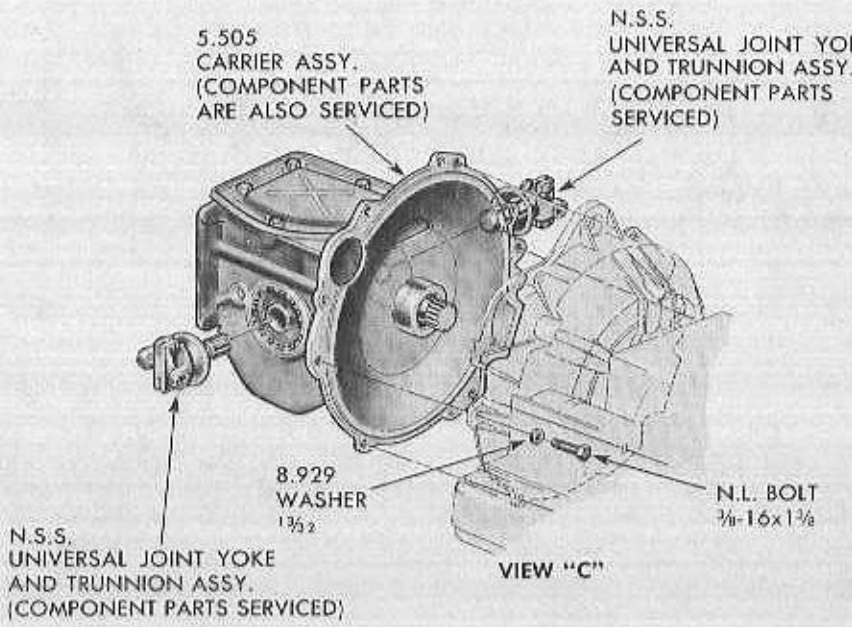

DIFFERENTIAL CARRIER

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

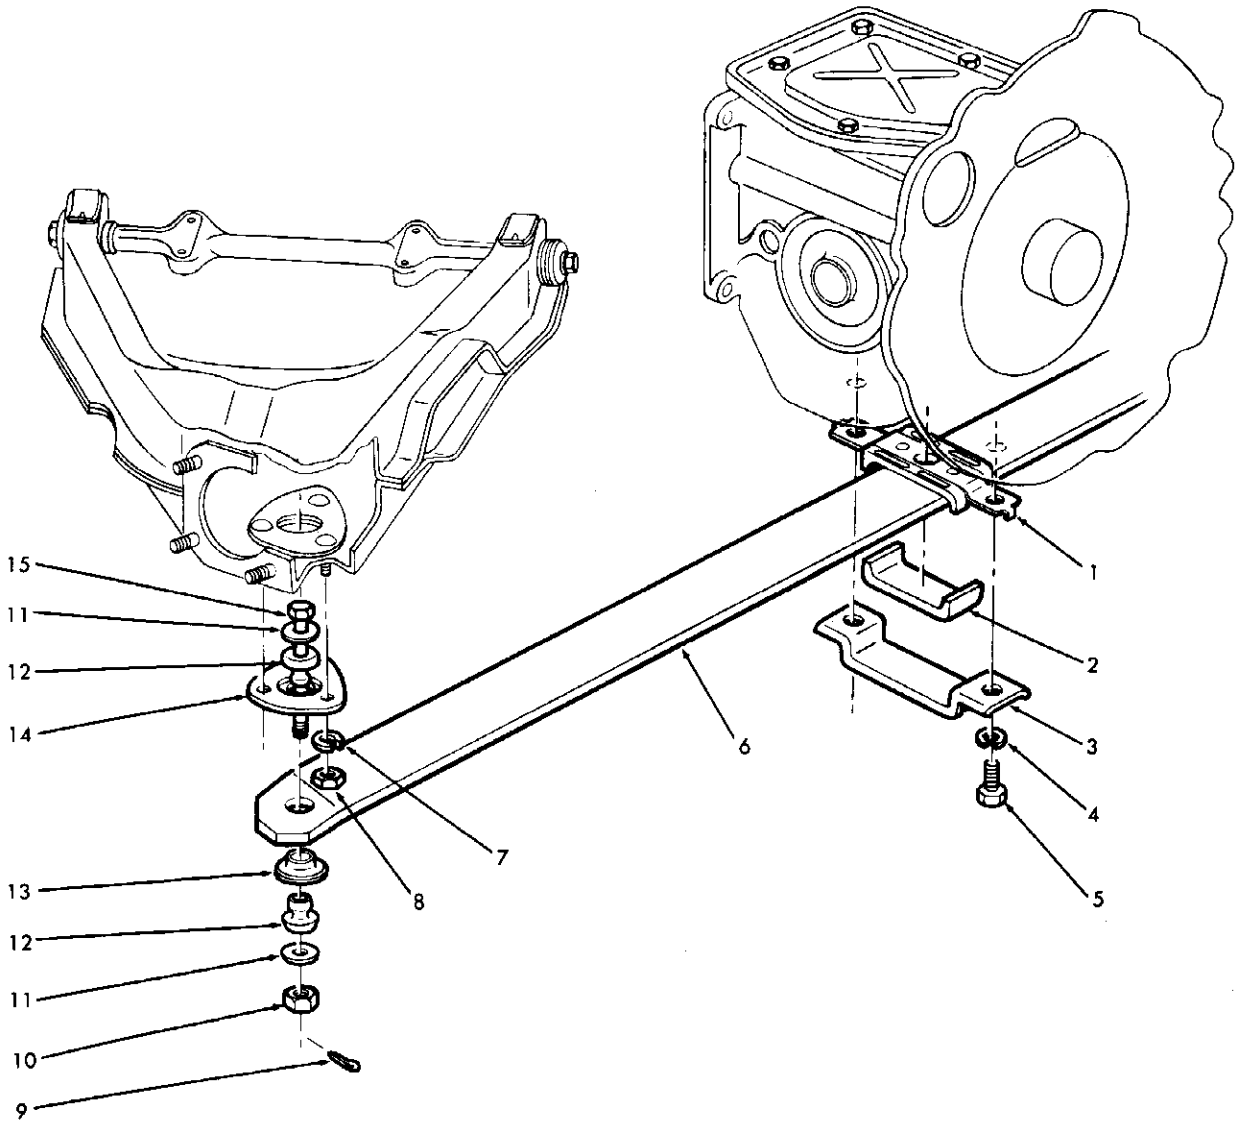

1964 CORVAIR TRANSVERSE LEAF SPRING

1. 7.545	CUSHION, Upper	3853612	9. 8.938	PIN (3/32 x 1)		
2. 7.545	CUSHION, Lower	3853611	10. 8.917	NUT (3/8–24)		
3. 7.518	PLATE	3853610	11. 7.529	WASHER		3863558
4. 8.931	L/WASHER (3/8)		12. 7.545	CUSHION		3849201
5. 8.900	BOLT (3/8–16 x 7/8)		13. 7.545	RETAINER		3849223
6. 7.503	SPRING ASSEMBLY	3848964	14. 7.545	RETAINER		3849202
7. 8.931	L/WASHER (5/16)		15. 7.529	BOLT (3/8–24 x 4-27/32)		3863557
8. 8.915	NUT (5/16–18)					

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

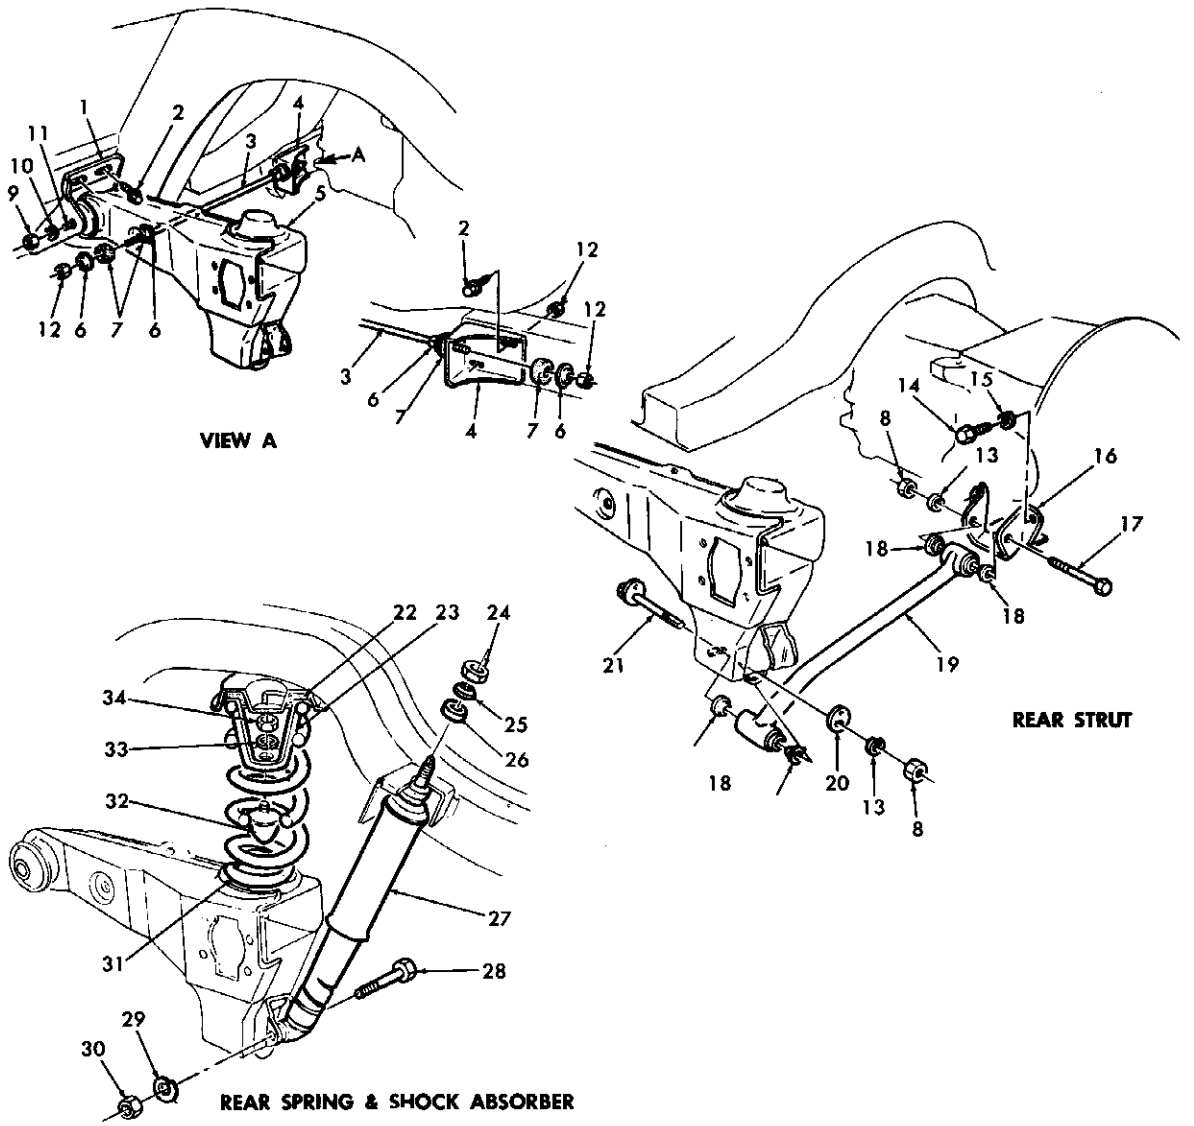

1965-69 CORVAIR REAR SUSPENSION DETAILS

1.	5.418	BRACKET	3858018	19.	5.381	STRUT ASSEMBLY—REAR	3858034
2.	8.900	BOLT (3/8—16 x 1-1/8)		20.	6.172	CAM	3790331
3.	5.415	STRUT—FRONT	3858423-24	21.	5.417	CAM ASSEMBLY	3858038
4.	5.381	BRACKET	3875055-56	22.	7.545	CUSHION	3858016
5.	5.381	BRACKET	3880423-24	23.	7.545	RETAINER	3858015
6.	7.389	RETAINER	5544049	24.	6.865	NUT	1365067
7.	7.388	GROMMET	5544296	25.	7.389	RETAINER	3798007
8.	8.915	NUT (1/2—20)		26.	7.388	GROMMET	5544296
9.	5.383	BOLT	3857928	27.	7.345	SHOCK ABSORBER ASSEMBLY	3186740
10.	8.931	L/WASHER (9/16)		28.	7.356	BOLT	3857934
11.	8.915	NUT (9/16—18)		29.	8.931	L/WASHER (7/16)	
12.	8.915	NUT (3/8—16)		30.	8.915	NUT (7/16—14)	
13.	8.931	L/WASHER (1/2)		31.	7.503	SPRING (exc. Air Cond.)	3859201
14.	8.900	BOLT (3/8—16 x 7/8)			7.503	w/Air Cond.	3859202
15.	8.931	L/WASHER (3/8)		32.	5.395	BUMPER ASSEMBLY	3858017
16.	5.380	BRACKET	3858040	33.	8.931	L/WASHER (3/8)	
17.	5.417	BOLT	3857932	34.	8.915	NUT (3/8—16)	
18.	5.417	CAP	3858039				

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

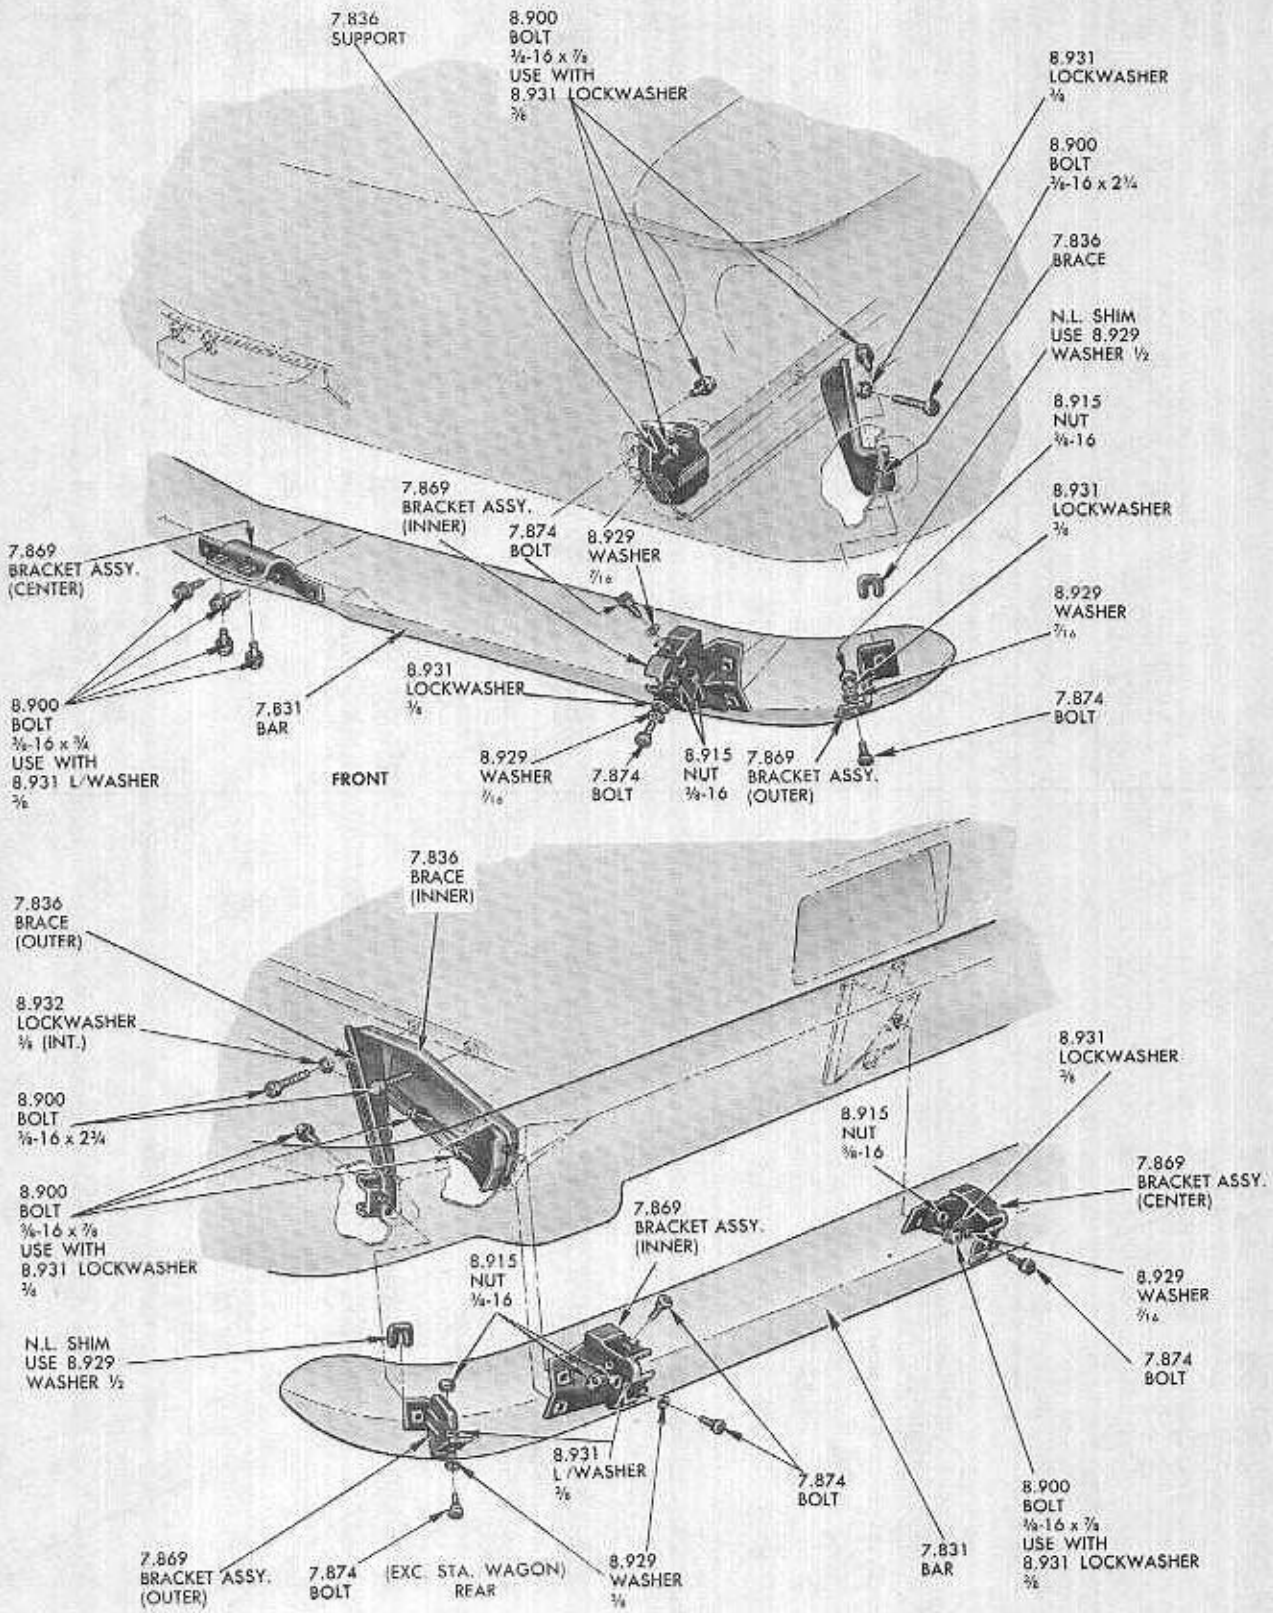

1960-64 CORVAIR FRONT AND REAR BUMPER (EXC. STATION WAGON)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

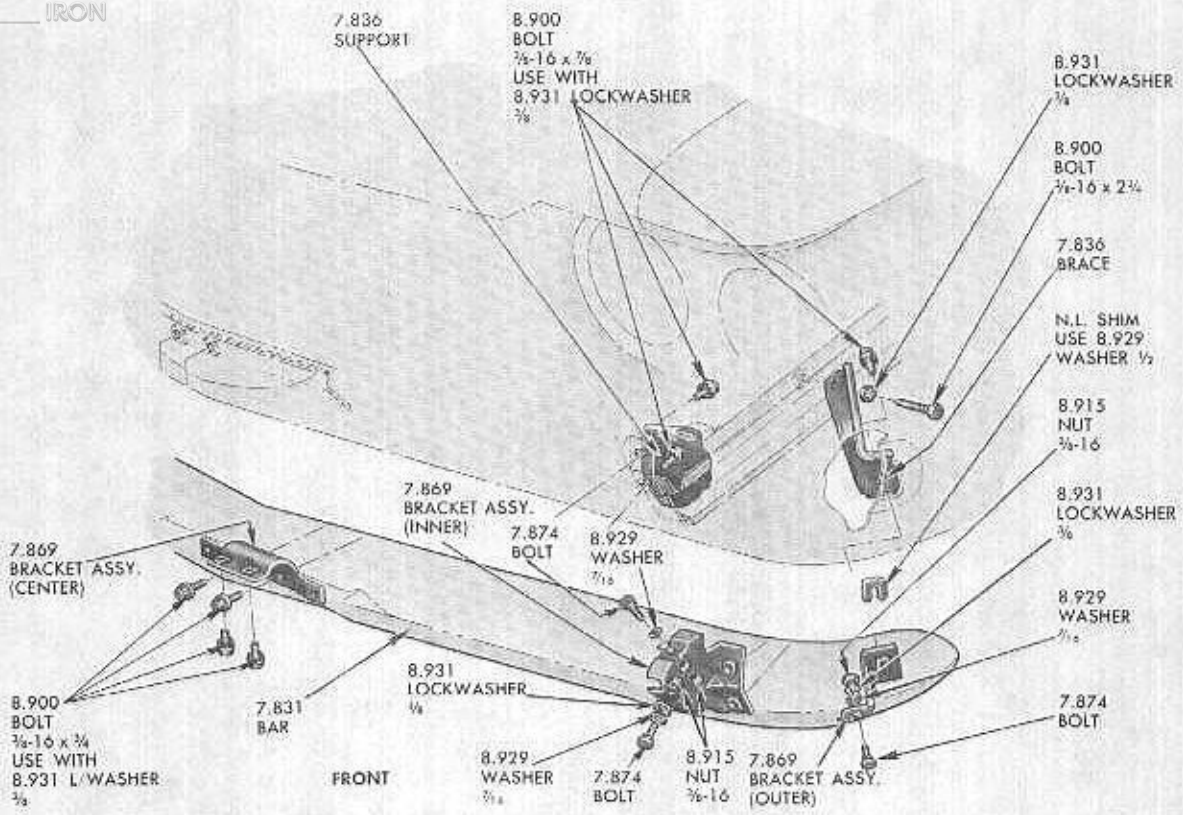

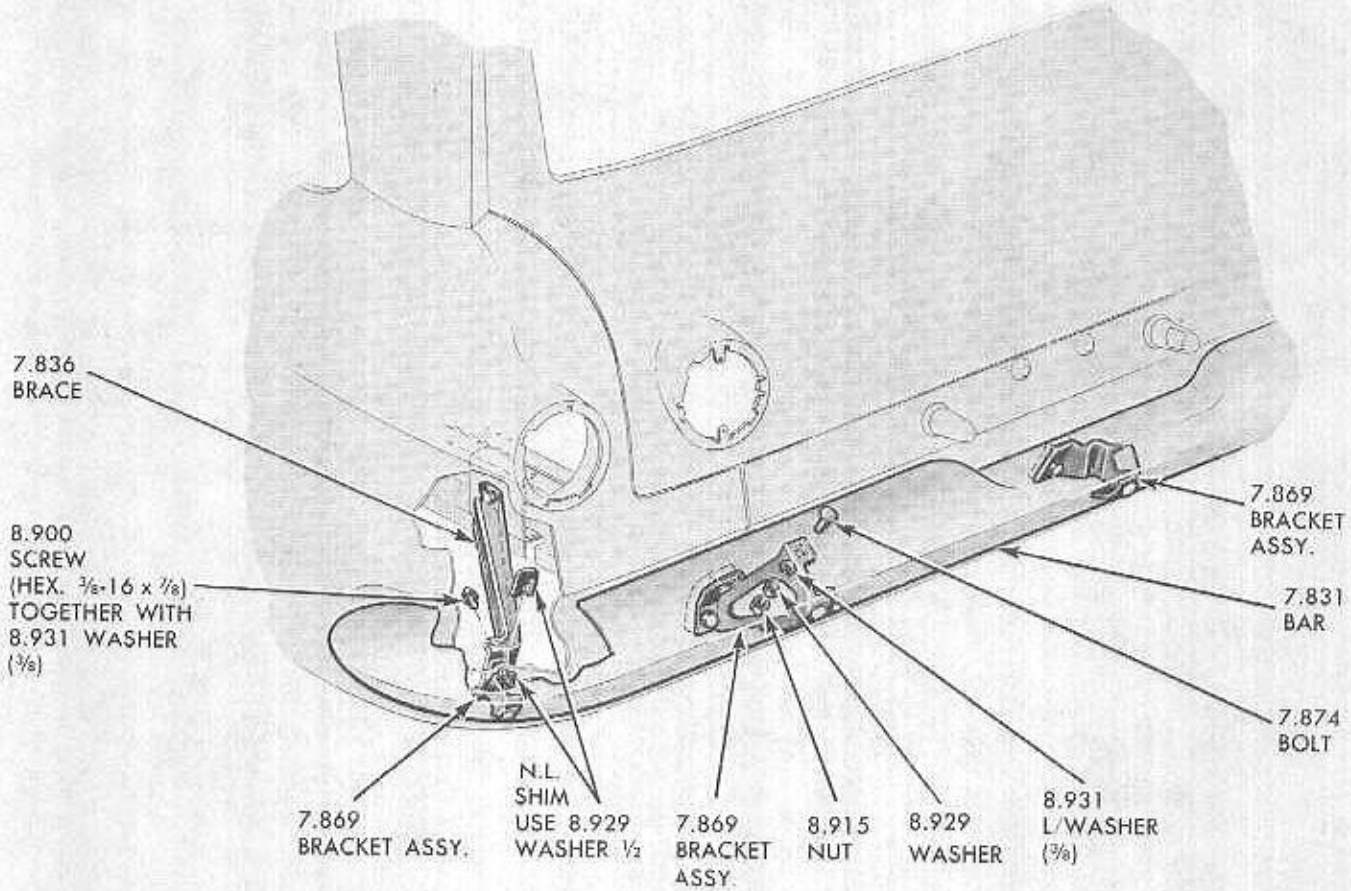

1961-62 CORVAIR STATION WAGON FRONT AND REAR BUMPER

©1969 CHEVROLET MOTOR DIVISION. GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

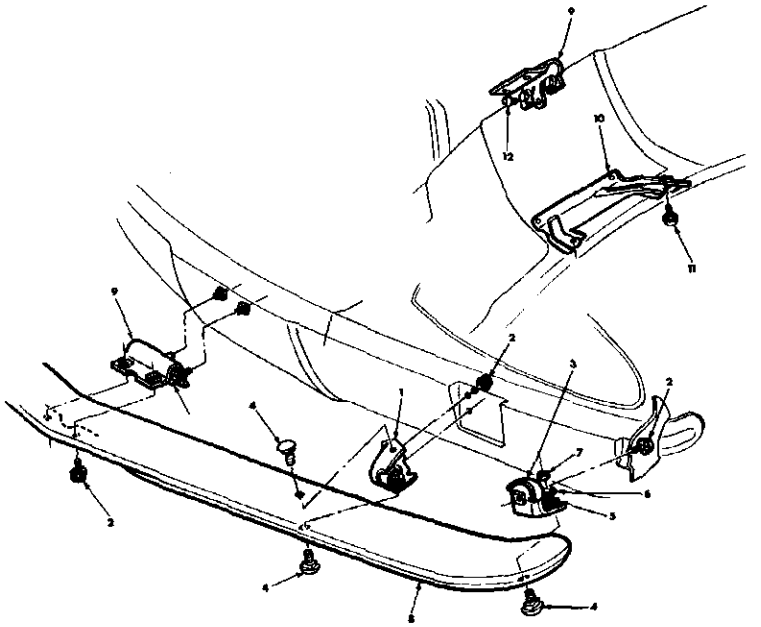

1965-69 CORVAIR—FRONT BUMPER—EXPLODED

1.	7.869	BRACKET ASSY.—Frt. Bumper Inner L.H. 3854105, R.H. 3854106	6.	8.931	L. WASHER (3/8)	
2.	8.900	BOLT (3/8—16 x 7/8)	7.	8.915	NUT (3/8—16)	
3.	7.869	BRACKET ASSY.—Frt. Bumper Outer L.H. 3854109, R.H. 3854110	8.	7.831	BUMPER—Front	3850867
			9.	7.869	BRACKET ASSY.—Center	3854102
4.	8.900	BOLT (3/8—16 x 15/16)	10.	7.800	BRACKET ASSY.—Frt. License	3878394
5.	8.929	WASHER (7/16 I.D.)	11.	8.900	BOLT (3/8—16 x 1/2)	
			12.	7.800	PLUG	3755922

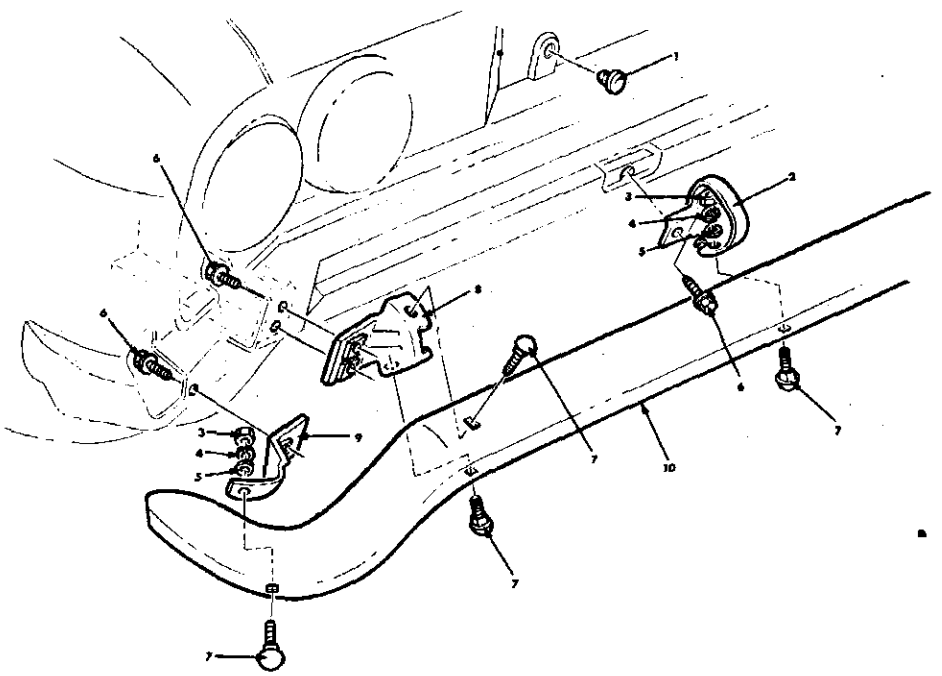

1965-69 CORVAIR—REAR BUMPER—EXPLODED

1.	7.800	PLUG	3745361	6.	8.900	SCREW (3/8—16 x 7/8)	
2.	7.869	BRACKET ASSY.	3854700	7.	7.874	BOLT	3774573
3.	8.915	NUT (3/8—16)		8.	7.869	BRACKET ASSY.	L-3854701 R-3854702
4.	8.931	L. WASHER (3/8)		9.	7.869	BRACKET ASSY.	L-3856593 R-3856594
5.	8.929	WASHER (7/16)		10.	7.831	BAR	3850868

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

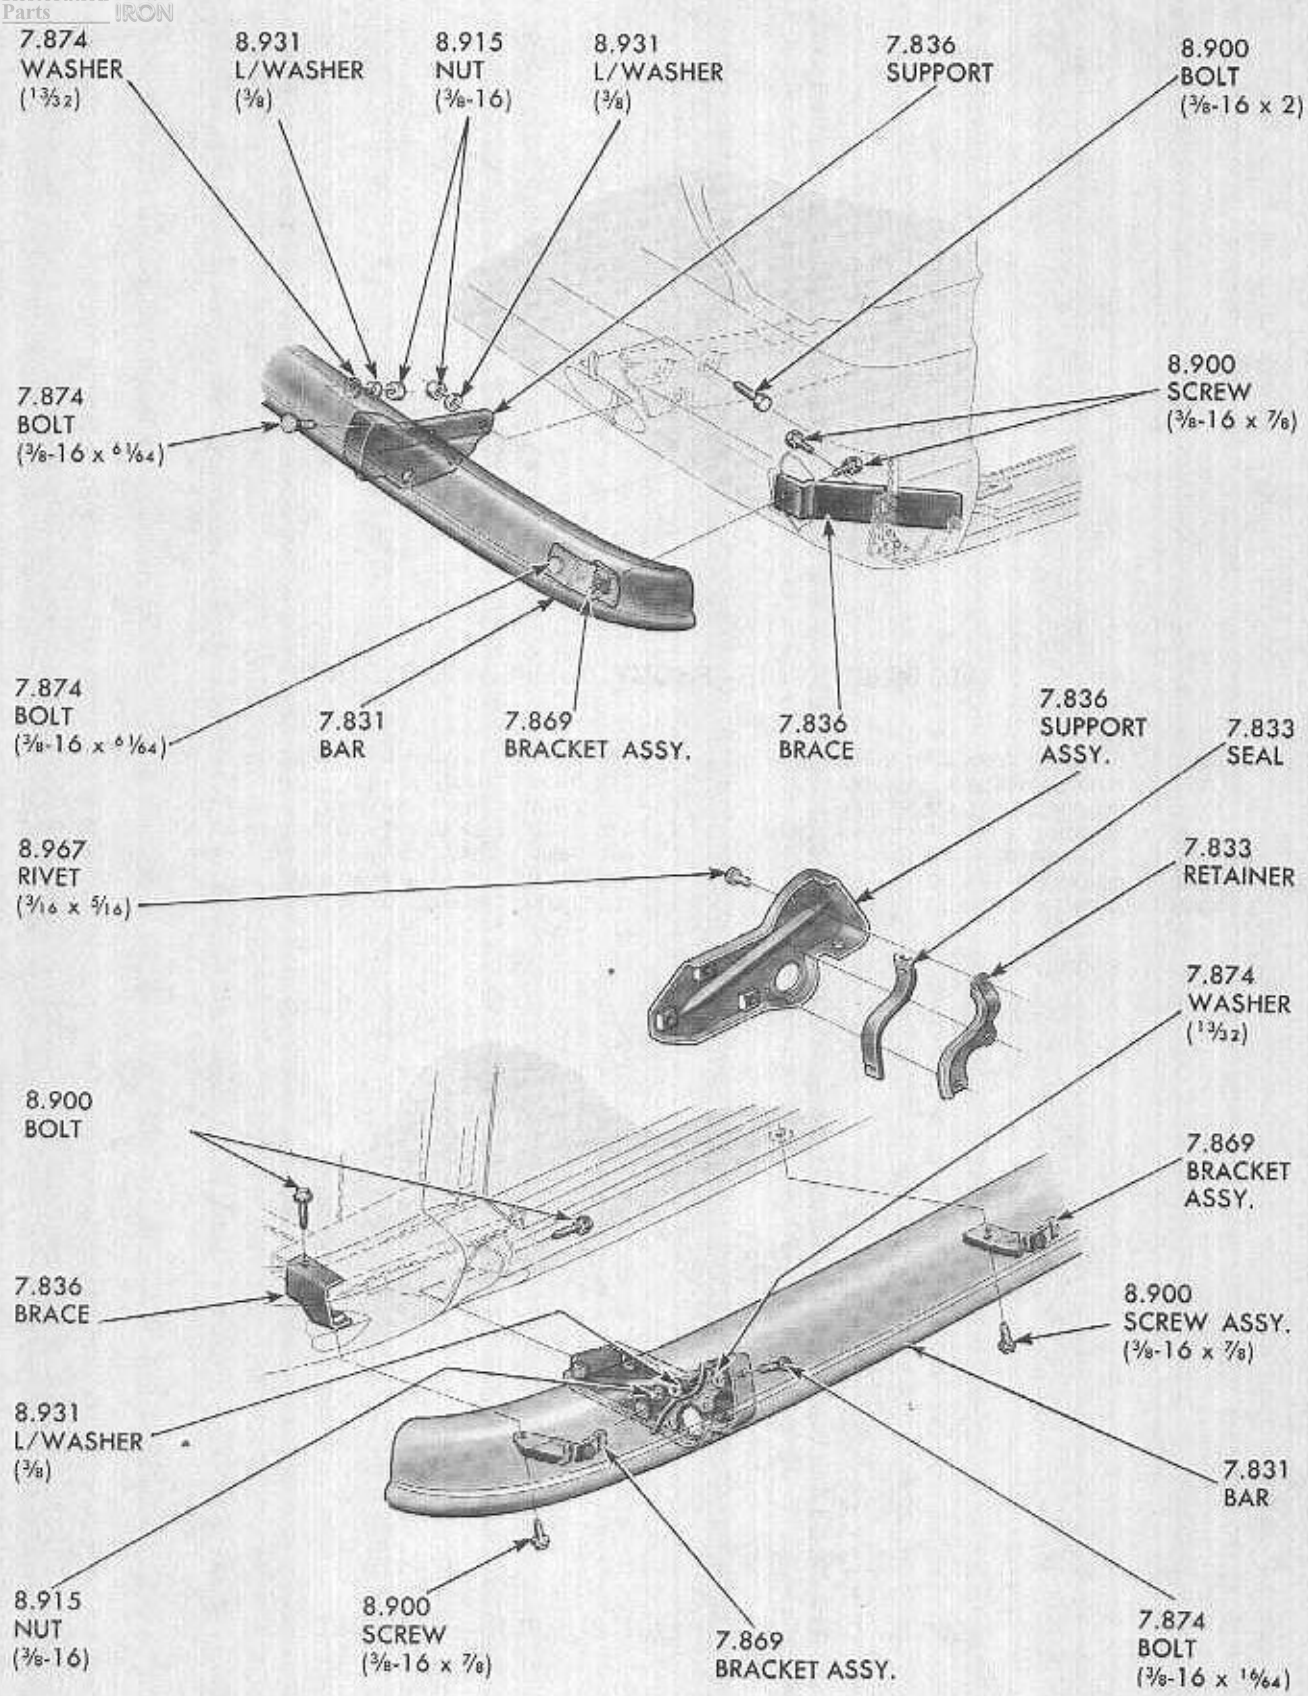

1961-65 CORVAIR F.C. FRONT AND REAR BUMPER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

7.006 RAIL—RAIL ASSY.—REINFORCEMENT—EXTENSION—MEMBER ASSY., Frame cross

61-62	F.C.	3774170	*rear front*	R.H.
61-65	F.C.	3785637	**RAIL ASSY.**, rear	L.H.
61-65	F.C.	3785638	**RAIL ASSY.**, rear	R.H.
61-64	CORVAIR (exc. STA. WAG.)	4869487	**RAIL ASSY.**, motor compt. side—(12.986)	R.H.
61-64	CORVAIR (exc. STA. WAG.)	4869488	**RAIL ASSY.**, motor compt. side—(12.986)	L.H.
60-64	CORVAIR	6276331	**REINFORCEMENT**, motor compt. side at bumper—(12.986)	L.H.
61-64	CORVAIR (exc. STA. WAG.)	6282507	**REINFORCEMENT**, motor compt. side at bumper—(12.986)	R.H.
61-65	F.C.	3780655	**EXTENSION**, side front rail	L.H.
61-65	F.C.	3780656	**EXTENSION**, side front rail	R.H.
61-65	F.C.	3820711	**EXTENSION**, side rear front rail	L.H.
61-65	F.C.	3820712	**EXTENSION**, side rear front rail	R.H.
61-65	F.C.	3856870	**MEMBER ASSY.**, engine upper and lower cross member, door sill	1

7.010 MEMBER ASSEMBLY—BRACKET ASSY.—BOLT—NUT—WASHER, Frame Cross, Front

60-64	CORVAIR (exc. Air Cond.)	3817232		1
63-65	F.C.	3829679		1
65-67	CORVAIR	3857617		1
68-69	CORVAIR	3931848	front cross	1
60-64	CORVAIR	6257355	**BRACKET ASSY.**, suspension unit and wheel hub *mounting*	*L.H.*
60-64	CORVAIR	6257356	**BRACKET ASSY.**, suspension unit and wheel hub mounting	R.H.
61-65	F.C.	3772042	**BOLT**, front suspension unit and wheel hub attaching ($^{9}/_{16}$—18 x $5\,^{3}/_{4}$)	4
61-62	F.C.	3742251	**NUT**, front suspension and hub assy. ($^{9}/_{16}$"—18)—(6.172)	4
60-68	CORVAIR	590936	**WASHER**, front suspension unit and wheel hub assy. to wheel hub mounting bracket (plain—$^{25}/_{64}$" I.D. x $^{11}/_{32}$" O.D. x $^{3}/_{8}$" thk.)—(4.404)	2
61-65	F.C.,			
66-69	CORVAIR	3783969	**WASHER**, front suspension unit and wheel hub attaching ($^{19}/_{32}$ I.D. x 1 O.D. x $^{3}/_{16}$ thk.)	4

7.012 MEMBER ASSY., Frame Cross, Intermediate

61-65	F.C.	3833986		1

7.014 MEMBER ASSY.—RAIL ASSY., Rear Cross

61-65	F.C.	3833986	(7.012)	1
60	ALL	6278878	**RAIL ASSY.**, motor compt.—(12.986)	1
61-64	CORVAIR (exc. STA. WAG.)	4459293	**RAIL ASSY.**, motor compt.—(12.986)	1

7.068 *HITCH UNIT—BALL—BOLT—HARNESS UNIT—WASHER, Trailer*

65-69	CORVAIR	986244		1
64-69	CORVAIR	3857026	**BALL**, hitch coupling	1
65-67	F.C. w/step bumper	3844416	**BALL**, hitch coupling	1
65	F.C. w/step bumper	271781	**BOLT**, $4\,^{1}/_{2}$" long—(8.900)	1
68	CORVAIR	987390	**HARNESS UNIT**, trailer wiring	1
69	CORVAIR	993589	**HARNESS UNIT**, trailer wiring	1
65-66	CORVAIR (exc. STA. WAG.)	2988874	**HARNESS ASSY.**, front trailer wiring	1
65-67	ALL	2988876	**HARNESS ASSY.**, rear trailer wiring	1
67	ALL	6291219	**HARNESS ASSY.**, front trailer wiring	1
68	CORVAIR	6295104	**HARNESS ASSY.**, front trailer wiring	1
65	F.C. w/step bumper	3846174	**WASHER**, 1/lock tooth	1

7.240 SPACER, Stabilizer Shaft

62-63	CORVAIR w/H.D. susp.	3783529	support	2
64	CORVAIR	3848333	front support	2

7.241 SHAFT, Stabilizer

62-63	CORVAIR w/H.D. susp.	3783523	front	1
64	CORVAIR	3848329	front	1
65-69	CORVAIR	3859143	front	1

7.242 SUPPORT ASSY., Stabilizer Shaft

62-64	CORVAIR	3851085		2
65-69	CORVAIR	3859145	front	2

7.243 BUSHING—CLAMP, Stabilizer Shaft

62-63	CORVAIR w/H.D. susp.	3783524		2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT

62-63	CORVAIR, w/H.D. susp.	3783527	support, upper	2
62-63	CORVAIR w/H.D. susp.	3783528	support, lower	2
64	CORVAIR	3851086	support, upper	2
64-69	CORVAIR	3851087	support, lower	2
64	F.C.	3834085	front shaft	2
64-69	CORVAIR	3859819	front shaft	2
62-63	CORVAIR w/H.D. susp.	3783525	**CLAMP,** bushing	2
64	CORVAIR	3851084	**CLAMP,** bushing	2
65-69	CORVAIR	3859144	**CLAMP,** bushing	2

7.245 RETAINER, Stabilizer Link

64-69	ALL	6544049	($^{25}/_{64}$" I.D. x $1\,^{1}/_{4}$" O.D.-plain)	A.R.
66-69	CORVAIR	5544399	($^{25}/_{32}$ I.D. x $1\,^{17}/_{32}$ O.D.)	8

7.345 ABSORBER ASSY—UNIT, Shock

FRONT

65-69	CORVAIR (exc. spec. perf. susp.)	3186935		2
65-69	CORVAIR w/spec. perf. susp.	3186986		2
60-64	CORVAIR	3192972	**UNIT**	2
61-65	F.C. (exc. H.D. TAXI)	3186754	**UNIT**	2
61-64	GREENBRIER (TAXI),			
61-65	F.C. w/H.D. (exc. TAXI)	5559075	**UNIT**	2

REAR

61-65	F.C.	3192097	**UNIT**	2
60-64	CORVAIR	3192093	**UNIT**	2
65-69	CORVAIR (exc. spec. perf. susp.)	3186740	**UNIT**	1
65-69	CORVAIR w/spec. perf. susp.	3186765	**UNIT**	2

7.346 CLIP, Shock Absorber

64	CORVAIR	3792833	rear, inlet tube and intake valve pipe—(3.162)	1

7.347 NUT, Shock Absorber

65-69	ALL	1365067	front, upper end ($^{3}/_{8}$"—24)	2
ALL	ALL	3866766	front & rear, to cross member ($^{3}/_{8}$"—24) ($^{3}/_{8}$" thick)—(0.626)	A.R.

7.371 WASHER, Shock Absorber

60	ALL		rear, to rear axle control arm,	
61-64	F.C. (exc. H.D.)	813046	front, to cross member assy. ($^{11}/_{32}$" ILD. x $^{5}/_{8}$" O.D. x $^{1}/_{16}$" thk.)	4
61-65	F.C. w/H.D.	2394722	front assembly ($^{11}/_{64}$" I.D. x $^{3}/_{4}$" O.D.)	4

7.380 BRACKET, Shock Absorber

60-64	CORVAIR	3776998	rear	2

7.388 GROMMET, Shock Absorber

62-67	CORVAIR, F.C. (exc. P.G.)		rear, upper,	
65-69	CORVAIR	3910700	rear, front strut ($1\,^{7}/_{32}$" O.D. x $^{7}/_{8}$" thk.)	4
61	F.C.		front and rear,	
62-64	F.C.	381957	front—(7.244)	4
60-69	CORVAIR	3879471	rear, front strut	8

7.389 RETAINER—WASHER, Shock Absorber Bushing

60-67	ALL	396797	front and rear ($^{25}/_{64}$" I.D. x $1\,^{1}/_{4}$" O.D.)—(7.245)	A.R.
62-69	CORVAIR, F.C.	3798007	**WASHER,** rear ($1\,^{3}/_{8}$" dia. x $^{1}/_{8}$" thk.)	4

7.395 BOLT—BUMPER, Shock Absorber

65-69	CORVAIR	3857934	($^{7}/_{16}$"—14 x $2\,^{7}/_{8}$")	2
65-69	CORVAIR	3880522	**BUMPER,** front shock absorber upper assy.	2

7.412 SPRING, Front (Coil)

NOTE Springs may be identified from the years 1963 thru 1965 by a piece of tape attached to the spring listing the part number.

NOTE Maximum Load Capacity should be used for comparison purposes only.

60-63	CORVAIR (exc. H.D. susp.)	3789173	($^{1}/_{2}$" orange, $^{1}/_{2}$" coral full length of spring) (max. load 770 lbs.)	2
61-65	F.C.	3781332	($^{1}/_{2}$" yellow, $^{1}/_{2}$" coral full length of spring) (max. load 1860 lbs.)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-64	MONZA (CONV.) (exc. H.D. susp.)	**3826077**	(1½" light blue, ½" line full length of spring) (max. load 855 lbs.)	2
62-63	CORVAIR w/H.D. susp., metallic brake (exc. CONV.)	**3817231**	(1½" orange, ½" light blue full length of spring) (max. load 770 lbs.)	2
62-63	MONZA (CONV.) w/H.D. susp., metallic brake	**3826939**	(1½" white, ½" blue full length of spring) (max. load 850 lbs.)	2
64	CORVAIR w/Custom (exc. SPYDER, MONZA CONV.),			
64	CORVAIR (exc. SPYDER CPE., MONZA CONV.)	**3848976**	(max. load 1221 lbs.)	2
65-68	CORVAIR (exc. CONV.),			
68	CORVAIR (6 cyl.) (exc. spec. perf. susp.)	**3857688**	(max. load 1089 lbs.)	2
65	CORVAIR w/C.A.C. (exc. CONV., CORSA),			
66-67	CORVAIR (C.A.C., w/Spec. Steering) (exc. CONV.)	**3857689**	(max. load 1151 lbs.)	2
65-66	CORVAIR (CONV.) (exc. C.A.C.),			
67-68	CORVAIR (CONV.) (exc. C.A.C. spec. per. susp.)	**3857690**	(max. load 1213 lbs.)	2
65	MONZA (CONV.) w/C.A.C.,			
66	CORVAIR (CONV.) (C.A.C. w/Spec. Steering),			
67	CORVAIR (CONV.) w/C.A.C. (exc. spec. perf. susp.)	**3861886**	(max. load 1364 lbs.)	2
65-69	CORVAIR w/H.D. (exc. CONV.)	**3875088**	(max. load 1258 lbs.)	2
65	CORVAIR (STD., CONV.) w/H.D.,			
66-67	CORVAIR w/H.D., C.A.C.,			
68-69	CORVAIR (CONV. w/spec. perf. susp.)	**3875089**	(max. load 1338 lbs.)	2

7.420 INSULATOR, Spring

60	ALL w/6257482		front, spring,	
61-62	CORVAIR w/C.A.C.	**6255922**	rear spring (rubber ¼ thk.)	2

7.503 SPRING, Rear

NOTE Springs may be identified from the years 1963 thru 1965 by a piece of tape attached to the spring listing the part number.

NOTE Maximum Load Capacity should be used for Comparison purposes only.

LEAF TYPE

64	CORVAIR	**3848964**	transverse (1 leaf)	1

COIL TYPE

60	ALL (1st design) (exc. MONZA),			
60	TAXI (2nd design)		R.H. or L.H. (1½" white, ½" light blue length of spring).	
61	TAXI,			
63-64	CORVAIR w/H.D. rr. spring (exc. CONV., SPYDER),			
62-64	CORVAIR (CONV.) w/H.D. susp.		R.H. side.	
62-63	CORVAIR w/H.D. susp. (exc. STA. WAG., CONV.),			
64	SPYDER (CPE.) w/H.D. susp.	**6257159**	**L.H. side** (max. load 2750 lbs.)	A.R.
61	ALL (exc. TAXI, F.C. LAKEWOOD),			
62-63	CORVAIR (exc. STA. WAG., H.D.)	**3789174**	(1½" purple, ½" dark green stripe) (max. load 2640 lbs.)	L.H.
60-61	CORVAIR (1st design) (exc. STA. WAG., H.D.)		L.H. or R.H.,	
61-63	CORVAIR (2nd design) (exc. STA. WAG., CONV. H.D.),			
64	SPYDER (CPE.) (exc. H.D.)	**3797734**	**R.H.** (1½" lime, ½" dark green stripe) (max.load 2,580 lbs.)	1
61-64	CORVAIR (STA. WAG., CONV.)	**3775098**	(1½" orange, ½" lt. blue stripe) (max. load 3,280 lbs.)	R.H.
61-62	F.C.	**3798434**	(1½" orange, ½" lime full length of spring) (max. load 3690 lbs.)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

61	TAXI.			
62-63	CORVAIR w/H.D. rr. spring	**3796318**	(1½" purple, 1½" light blue stripe) (max. load 2956 lbs.)	L.H.
62-64	CORVAIR w/H.D. susp. (exc. CONV.)	**3828552**	(1½" lime, 1½" lt. blue stripe) (max. load 2665 lbs.)	R.H.
63	CORVAIR (CONV.),			
63	CORVAIR w/C.A.C. (exc. CONV.)	**3830731**	(max. load 2791 lbs.)	L.H.
63	CORVAIR (CONV.),			
63	CORVAIR w/C.A.C. (exc. CONV.)	**3830732**	(max. load 2739 lbs.)	R.H.
63-64	SIDE—RAMP	**3829556**	(1½" yellow, 1½" purple stripe) (max. load 4601 lbs.)	2
63-65	F.C. (exc. SIDE—RAMP)	**3848586**	(max. load 4601 lbs.)	2
64	CORVAIR w/Custom (exc. SPYDER),			
64	MONZA (CONV.)		R.H.,	
64	MONZA (CONV.), SPYDER	**3848968**	L.H. (max. load 1369 lbs.)	1
64	CORVAIR w/Custom (exc. SPYDER, CONV.),			
64	MONZA (CONV.),			
64	MONZA (CONV.) w/Custom (exc. SPYDER)	**3848970**	(max. load 1170 lbs.)	L.H.
64	MONZA (CONV.) w/Custom (exc. SPYDER),			
64	CORVAIR (exc. CONV., SPYDER),			
64	SPYDER (CPE.)	**3856562**	(max. load 990 lbs.)	R.H.
64	MONZA (CONV.) w/Custom (exc. SPYDER),			
64	CORVAIR (exc. CONV., SPYDER),			
64	SPYDER (CPE.)	**3856560**	(max. load 1135 lbs.)	L.H.
65-66	CORVAIR (exc. CONV.),			
67	CORVAIR (exc. spc. per. susp. C.A.C.),			
68-69	CORVAIR (SPT. CPE.) (exc. spec. perf. susp.)	**3859201**	(max. load 1070 lbs.)	2
65-66	CORVAIR w/C.A.C. (exc. CONV., CORSA, H.D. susp.),			
65-66	CORVAIR (CONV.) (exc. H.D. susp.),			
67	CORVAIR w/C.A.C. (exc. spec. perf. susp.),			
67-68	CORVAIR (CONV.),			
69	MONZA (exc. Spec. Perf. Susp.)	**3859202**	(max. load 1130 lbs.)	2
65-66	CORVAIR (STD.) w/H.D. (exc. C.A.C.),			
65-66	MONZA w/H.D. (exc. CONV., C.A.C.),			
65-66	CORSA (SPT. CPE.) w/H.D.,			
67	CORVAIR w/spec. perf. susp. (exc. C.A.C.),			
68-69	CORVAIR w/spec. perf. susp.	**3875090**	(max. load 1506 lbs.)	2
65-67	CORVAIR (STD.) w/H.D.,			
65-67	MONZA w/H.D. (exc. C.A.C.),			
65-66	CORSA (CONV.) w/H.D.,			
67-69	CORVAIR w/C.A.C., spec. perf. susp.)	**3875091**	(max. load 1611 lbs.)	2

7.518 PLATE, Rear Spring and Shock Absorber

64	CORVAIR	**3853610**		1

7.529 BOLT UNIT—WASHER—NUT, Rear Spring

64	CORVAIR	**3867804**	rear spring to control arm (Note 1)	2
	NOTE 1 Bolt Unit consist of 1 bolt, 2 washers, 1 nut, 1 pin.			
64	CORVAIR	**3863558**	**WASHER to control arm** (27/64 I.D. x 1 3/4 O.D.)	4
64	CORVAIR	**3863559**	**NUT,** rear spring to control arm (3/8—16)	2

7.535 BUMPER—SPACER, Rear Spring

65	F.C.	**3852039**		2
63-64	F.C.	**3829551**	**SPACER** (7/16" thk.)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

7.545 CUSHION—RETAINER, Rear Spring

64	CORVAIR	3849201		4
64	CORVAIR	3853612	upper	1
64	CORVAIR	3853611	lower	1
65-69	CORVAIR	3858016		2
64	CORVAIR	3849202	**RETAINER**, upper (triangular shape)	2
64	CORVAIR	3849223	**RETAINER**, lower (circular shape)	2
65-69	CORVAIR	3858015	**RETAINER**	2

7.629 CARRIER ASSY.—STRAP, Wheel

61-64	CORVAIR (exc. C.A.C.)	3787409		1
62-64	CORVAIR w/wire wheels	3827317		1
65-68	CORVAIR (exc. C.A.C.),			
69	CORVAIR (exc. CONV.),			
69	CORVAIR (CONV.) (exc. Sp. H/Per.)	3898163		1
62-64	CORVAIR w/wire wheels	3827321	**STRAP**, wheel carrier lock bolt	1

7.632 BOLT ASSY.—BOLT, Wheel Carrier

60	ALL	3885710	wing ($^3/_8$—16 x $4^{13}/_{16}$)	1
61-64	PANEL, GREENBRIER,			
65	GREENBRIER	3784913	wing ($^3/_8$—16 x $8^1/_8$)	1
61-64	PICK-UP	3820472	wing ($^3/_8$—16 x $3^9/_{32}$)	1
61-64	CORVAIR (exc. C.A.C., wheel carrier lock, STA. WAG.)	3786296	carrier assy. (hex. hd. $^7/_{16}$—14 x $2^1/_8$)	2
61-62	CORVAIR (STA. WAG.),			
61-64	CORVAIR w/C.A.C.	3785771	**BOLT**, clamp ($^5/_{16}$—18 x 5)	1
61-64	CORVAIR w/wheel carrier lock	3787019	**BOLT** ($^7/_{16}$—14 x 2)	1
62-64	CORVAIR w/wire wheels	3827320	**BOLT**, wheel carrier lock	1
65-69	CORVAIR	3859065	**BOLT**, clamp	1

7.633 NUT—WASHER, Wheel Carrier

60-69	ALL	9785616	wing ($^5/_{16}$—18)	A.R.
69	ALL	358501	($^7/_{16}$"—20)—(5.813)	A.R.
61-65	F.C.	3772766	**WASHER**, clamp ($^9/_{16}$)	1

7.675 LOCK ASSY., Spare Wheel

61-69	ALL	3912416	w/key	1

7.679 CASE, Wheel Carrier Lock

61-62	CORVAIR w/production lock	379477	($^{13}/_{16}$ dia. x $1^7/_{16}$)	1

7.680 CYLINDER ASSY.—PLUNGER—SPRING, Wheel Carrier Lock

61-62	ALL w/production lock	601271	less tumblers (BRIGGS and STRATTON)	1
63-66	CORVAIR w/accessory lock	3829454	w/key (Briggs and Stratton No. 602430)	1
67	CORVAIR	3903537		1
68	CORVAIR	3929943		1
69	CORVAIR	3961326		1
61-62	CORVAIR w/production lock	496557	**PLUNGER**	1
61-62	CORVAIR w/production lock	496558	**SPRING**	1

7.751 BRACKET ASSY., Spare Wheel Mounting

61-64	PICK-UP	3778284		1

7.782 SUPPORT, Wheel Carrier

61-65	F.C. (exc. PICK-UP)	3784983	front	1
61-65	F.C. (exc. PICK-UP)	3784984	rear	1

7.783 PLATE, Wheel Carrier Lock Bolt Cover

61-64	CORVAIR w/wheel carrier lock	3787018		1

7.800 REINFORCEMENT—BEZEL—NUT—BUMPER—FRAME ASSY.—BRACKET—SPACER, License Plate

60	ALL	6276327	front compt. pan at plate	1
62-64	CORVAIR (exc. STA. WAG.)	3796457	**BEZEL**, rear housing	1
60-61	ALL (exc. LAKEWOOD)	4755299	**NUT** ($^1/_4$)	2
61-62	ALL,			
63	CORVAIR, F.C.	3783004	**NUT** (No. 10 spring) (front and rear)	A.R.
64-65	CORVAIR	3685721	**NUT**, front ($^1/_4$—20)	A.R.
65-69	CORVAIR		**NUT**, rear,	
66-69	CORVAIR	3877254	front ($^1/_2$"—14)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT IRON

60-69	ALL	9414403	**BOLT** (1/4"—14 x 1)—(8.977)	A.R.
65-69	CORVAIR	3745361	**BUMPER,** rear (rubber) (1/2" dia. x 7/16")	2
61-63	F.C.	3776879	**BUMPER,** rear (rubber) (9/16 dia. x 5/8)	2
61-65	F.C.	4563028	**BUMPER,** front (rubber)	2
62	CORVAIR	3762180	**BUMPER,** rear (rubber) (9/16" dia. x 1/32")—(8.024)	2
64-69	CORVAIR	3755922	**BUMPER,** front (9/16" dia. x 5/8")	2
63-64	CORVAIR	3690047	**BUMPER,** rear (3/4" x 5/16")—(8.024)	2
65-66	CORVAIR	3797485	**FRAME ASSY.**	2
65-69	CORVAIR	3878394	**BRACKET,** front	1
64	CORVAIR	3848672	**SPACER,** front	2
65-66	ALL	3885920	**SPACER,** front or rear	4

7.828 GUARD UNIT—GUARD ASSY., Bumper

65-69	CORVAIR	986138	front	1
65-69	CORVAIR	986139	rear	1
60-64	CORVAIR	6257385	**GUARD ASSY.,** front or rear	L.H.
60-64	CORVAIR	6257386	**GUARD ASSY.,** front or rear	R.H.
61-65	F.C. w/95 W.B.	3786346	**GUARD ASSY.** (painted)	1
61-65	F.C. w/95 W.B.	3780401	**GUARD ASSY.** (chrome)	1
65-69	CORVAIR	3861857	**GUARD ASSY.,** front	L.H.
65-69	CORVAIR	3861858	**GUARD ASSY.,** front	R.H.
65-69	CORVAIR	3861859	**GUARD ASSY.,** rear	L.H.
65-69	CORVAIR	3861860	**GUARD ASSY.,** rear	R.H.

7.829 CLAMP, Bumper Guard Mounting

60-63	CORVAIR	6257449	(frt. upper left, lower right, rear lower left, upper right)	A.R.
60-63	CORVAIR	6257450	(frt. lower left, upper right, rear upper left, lower right)	A.R.
61-65	F.C. w/95 W.B.	3780542	front or rear	4
65-69	CORVAIR	3861862	rear bumper guard	2
65-69	CORVAIR	3861861	front bumper guard	2

7.831 BAR—PANEL, Bumper Face

60-64	CORVAIR	6255799	front	1
60-64	CORVAIR (exc. STA. WAG.)	6255800	rear	1
61-65	F.C.	3776740	front (painted)	1
61-65	F.C.	3777356	front (chrome)	1
61-62	CORVAIR (STA. WAG.)	3777056	rear	1
61-65	F.C.	3777066	rear (painted)	1
61-65	F.C.	3777357	rear (chrome)	1
65-69	CORVAIR	3850867	front	1
65-69	CORVAIR	3850868	rear	1
66-69	CORVAIR	3883692	**PANEL,** front valance	1

7.833 SEAL, Rear Body

64-65	F.C.	3850737	left, rear to body (4 7/8" O.L.)	L.H.
64-65	F.C.	3850738	right, rear to body (4 7/8" O.L.)	R.H.

7.836 BRACE—SUPPORT, Bumper Attaching

60-64	CORVAIR	3842043	front	L.H.
60-64	CORVAIR	3842044	front	R.H.
60-64	CORVAIR (exc. STA. WAG.)	6256893	rear outer bumper face	L.H.
60-64	CORVAIR (exc. STA. WAG.)	6255894	rear outer bumper face	R.H.
60-64	CORVAIR (exc. STA. WAG.)	6255903	rear inner face bar	L.H.
60-64	CORVAIR (exc. STA. WAG.)	6255904	rear inner face bar	R.H.
61-65	F.C.	3776745	front	L.H.
61-65	F.C.	3776746	front	R.H.
61-65	F.C.	3779449	rear outer bracket	L.H.
61-65	F.C.	3779450	rear outer bracket	R.H.
61-65	F.C.	3775743	**SUPPORT,** front	L.H.
61-65	F.C.	3775744	**SUPPORT,** front	R.H.
61-64	CORVAIR	4429233	**SUPPORT,** front	R.H.
61-64	CORVAIR	4429234	**SUPPORT,** front	L.H.
61-65	F.C.	3777753	**SUPPORT ASSY.,** rear bumper	L.H.
61-65	F.C.	3777754	**SUPPORT ASSY.,** rear bumper	R.H.
65-68	CORVAIR	4438073	**SUPPORT ASSY.,** front	L.H.
65-68	CORVAIR	4438072	**SUPPORT ASSY.,** front	R.H.

7.865 SPACER, Bumper

61-65	F.C.	3779592	right rear support assy. (1 7/16 wide 2 tabs)	4

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

7.869 BRACKET ASSY., Front and Rear Bumper

60-64	CORVAIR	6255885	front inner	L.H.
60-64	CORVAIR	6255886	front inner	R.H.
60-64	CORVAIR	6255887	front outer	L.H.
60-64	CORVAIR	6255888	front outer	R.H.
60-64	CORVAIR	6256971	front center	1
60-64	CORVAIR (exc. STA. WAG.)	6256405	rear inner	L.H.
60-64	CORVAIR (exc. STA. WAG.)	6256406	rear inner	R.H.
60-64	CORVAIR (exc. STA. WAG.)	6255895	rear outer	L.H.
60-64	CORVAIR (exc. STA. WAG.)	6255896	rear outer	R.H.
60-64	CORVAIR (exc. STA. WAG.)	6256965	rear center	1
61-62	CORVAIR (STA. WAG.)	3777057	rear bumper center	1
61-65	F.C.	3779437	front outer	L.H.
61-65	F.C.	3779438	front outer	R.H.
61-65	F.C.	3777699	rear bumper center	1
61-65	F.C.	3779436	rear bumper outer	2
65-69	CORVAIR	3854102	front bumper face bar center	1
65-69	CORVAIR	3854105	front inner bumper face bar	L.H.
65-69	CORVAIR	3854106	front inner bumper face bar	R.H.
65-69	CORVAIR	3854109	front outer bumper face bar	L.H.
65-69	CORVAIR	3854110	front outer bumper face bar	R.H.
65-69	CORVAIR	3854700	rear bumper face bar center	1
65-69	CORVAIR	3854701	rear inner bumper face bar	L.H.
65-69	CORVAIR	3854702	rear inner bumper face bar	R.H.
65-69	CORVAIR	3856593	rear outer bumper face bar	L.H.
65-69	CORVAIR	3856594	rear outer bumper face bar	R.H.

7.874 BOLT—WASHER—SCREW ASSY., Bumper Bar

60-69	CORVAIR, F.C.	3774573	front and rear ($^{3}/_{8}$"—16 x $^{15}/_{16}$" stainless)	A.R.
60-65	CORVAIR (exc. STA. WAG.)	3779940	rear bumper outer brace, R.H. ($^{3}/_{8}$"—16 x $3\,^{3}/_{8}$") (hex. hd. cad.)	1
61-62	F.C.	3754153	**WASHER,** front and rear ($^{13}/_{32}$")—(5.383)	A.R.
60-63	CORVAIR	3817084	**SCREW ASSY.,** front bumper face bar inner brkt. (hex. w/spring washer and sealer washer—$^{3}/_{16}$—16 x 1)	4
61-65	F.C.	3779236	**SCREW ASSY.,** rear bumper support assy. (hex. washer face w/ext. tooth lockwasher $^{3}/_{8}$—16 thd.)	6

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 8.000

SHEET METAL—

HEATER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

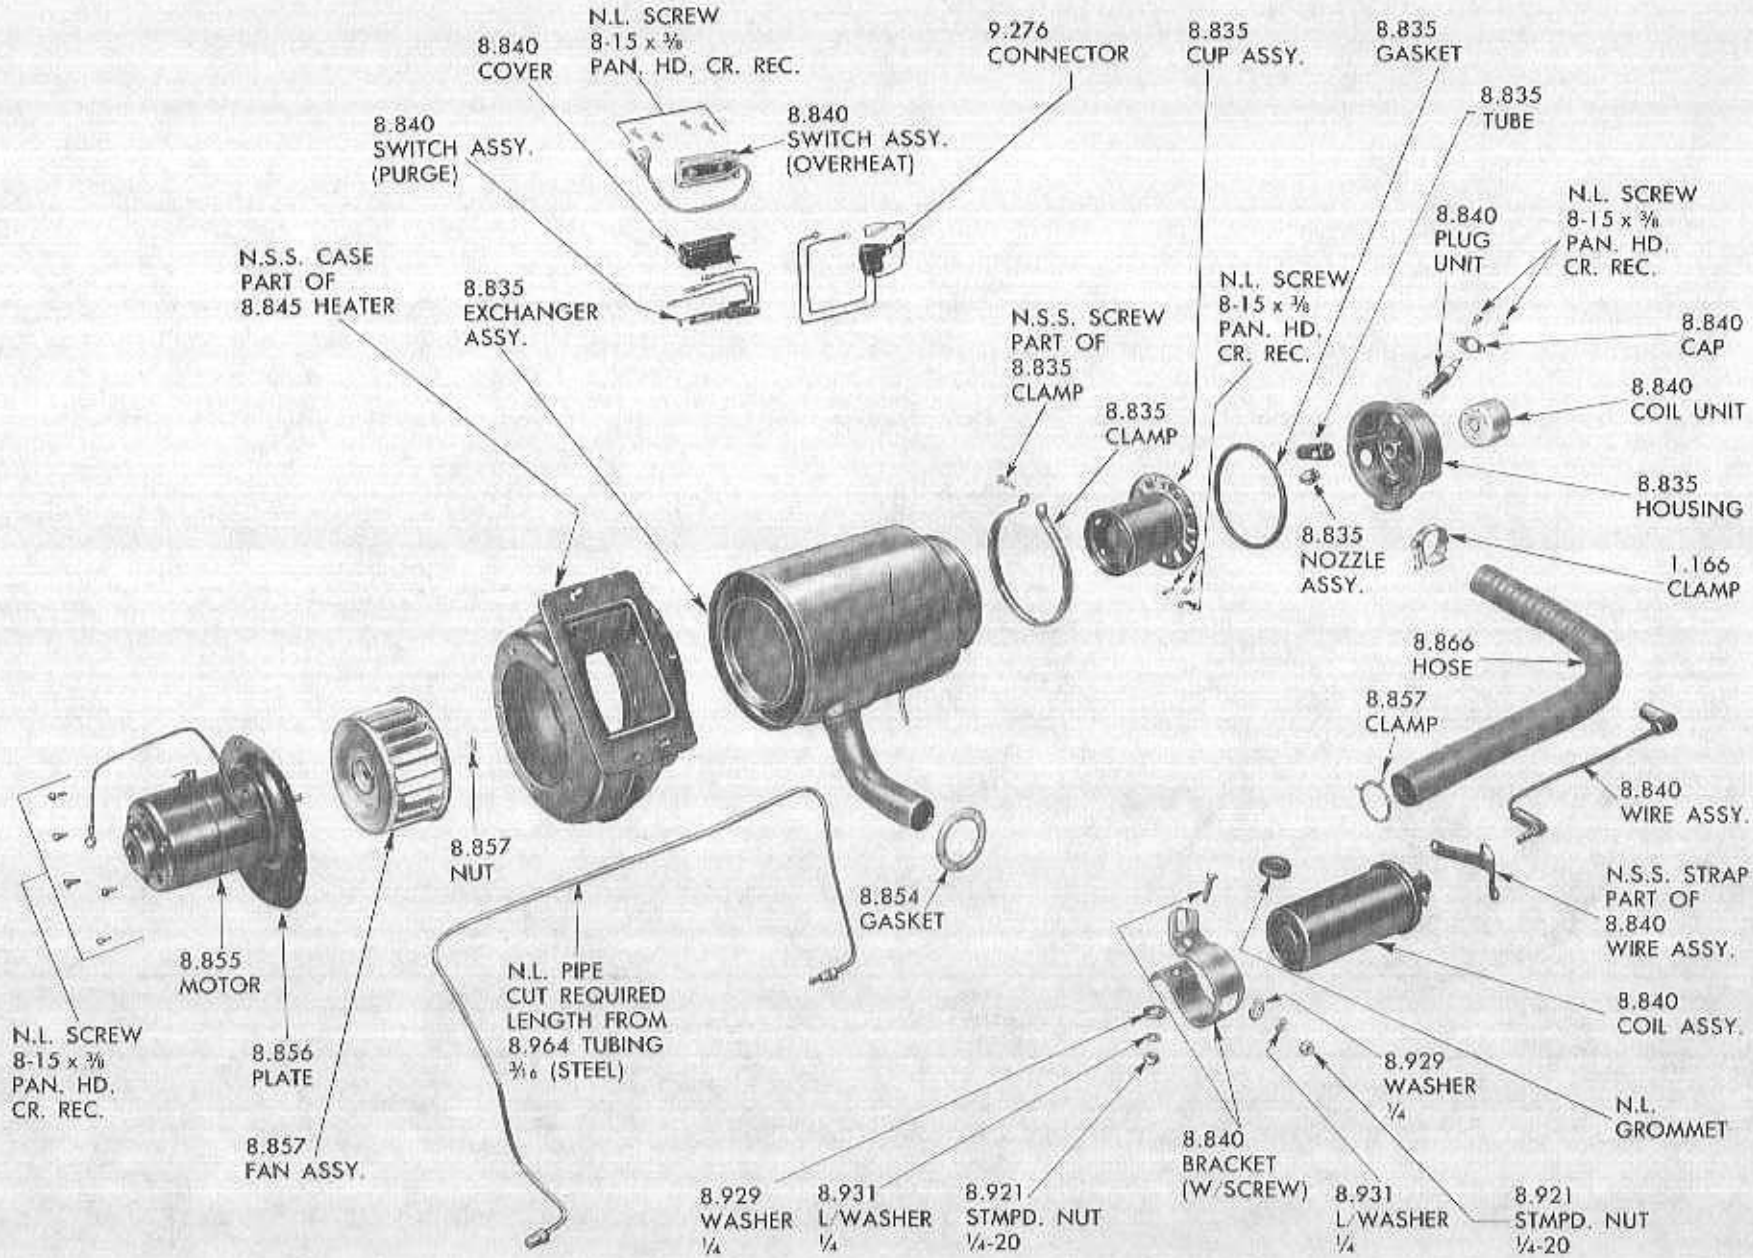

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

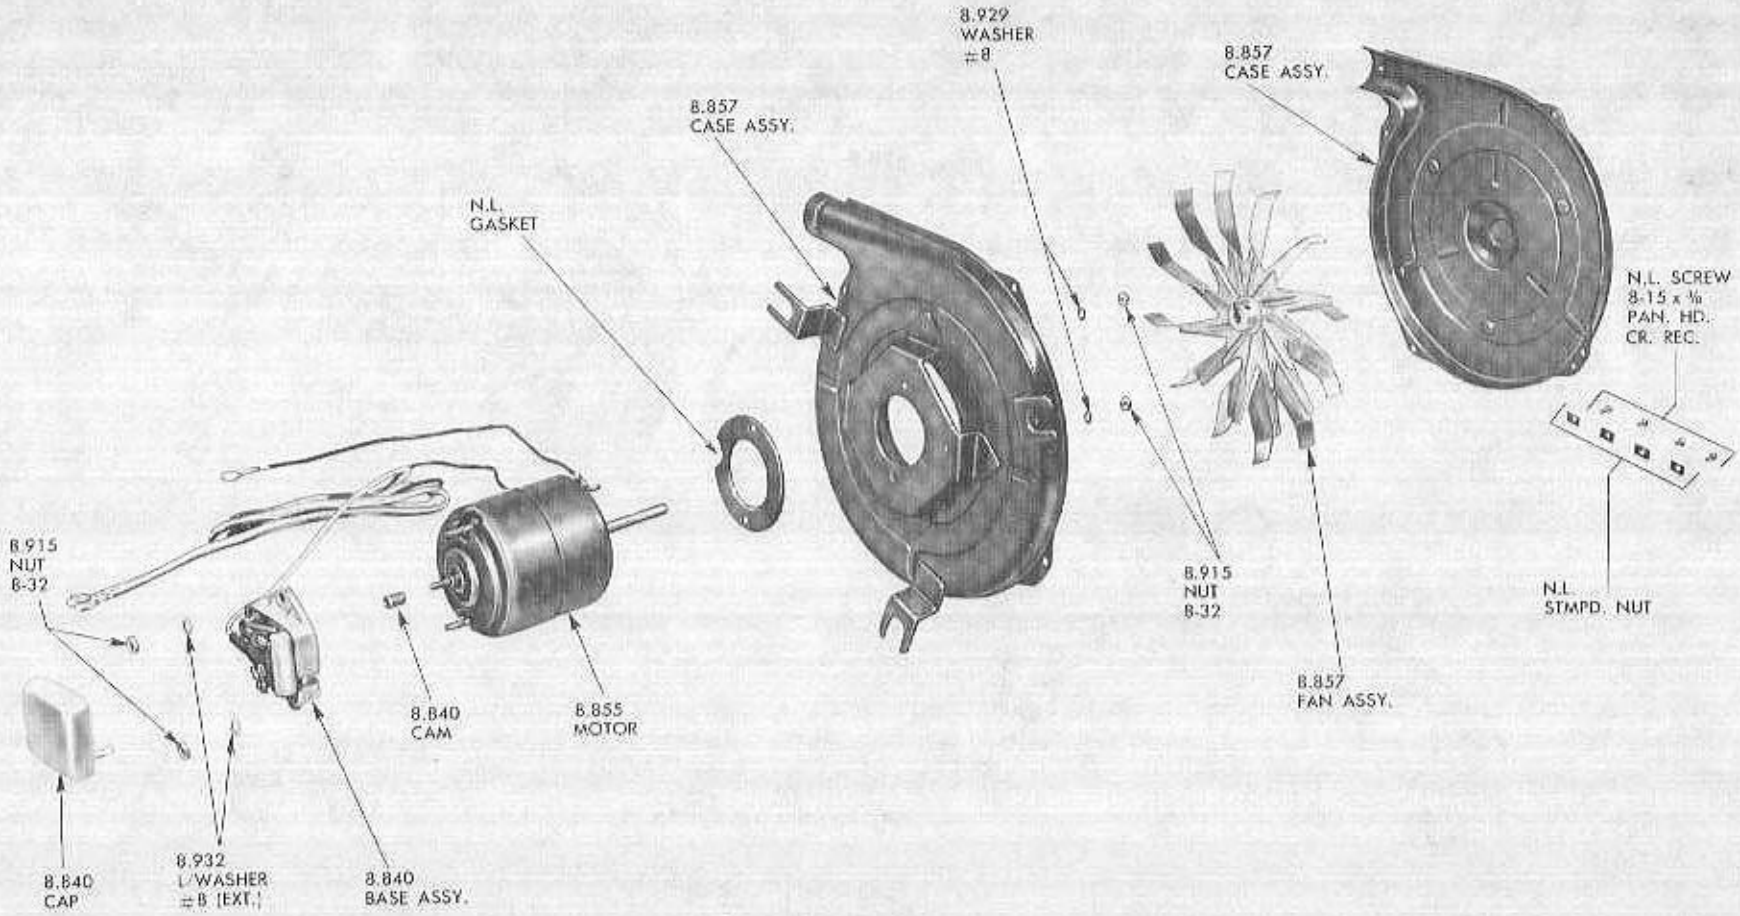

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

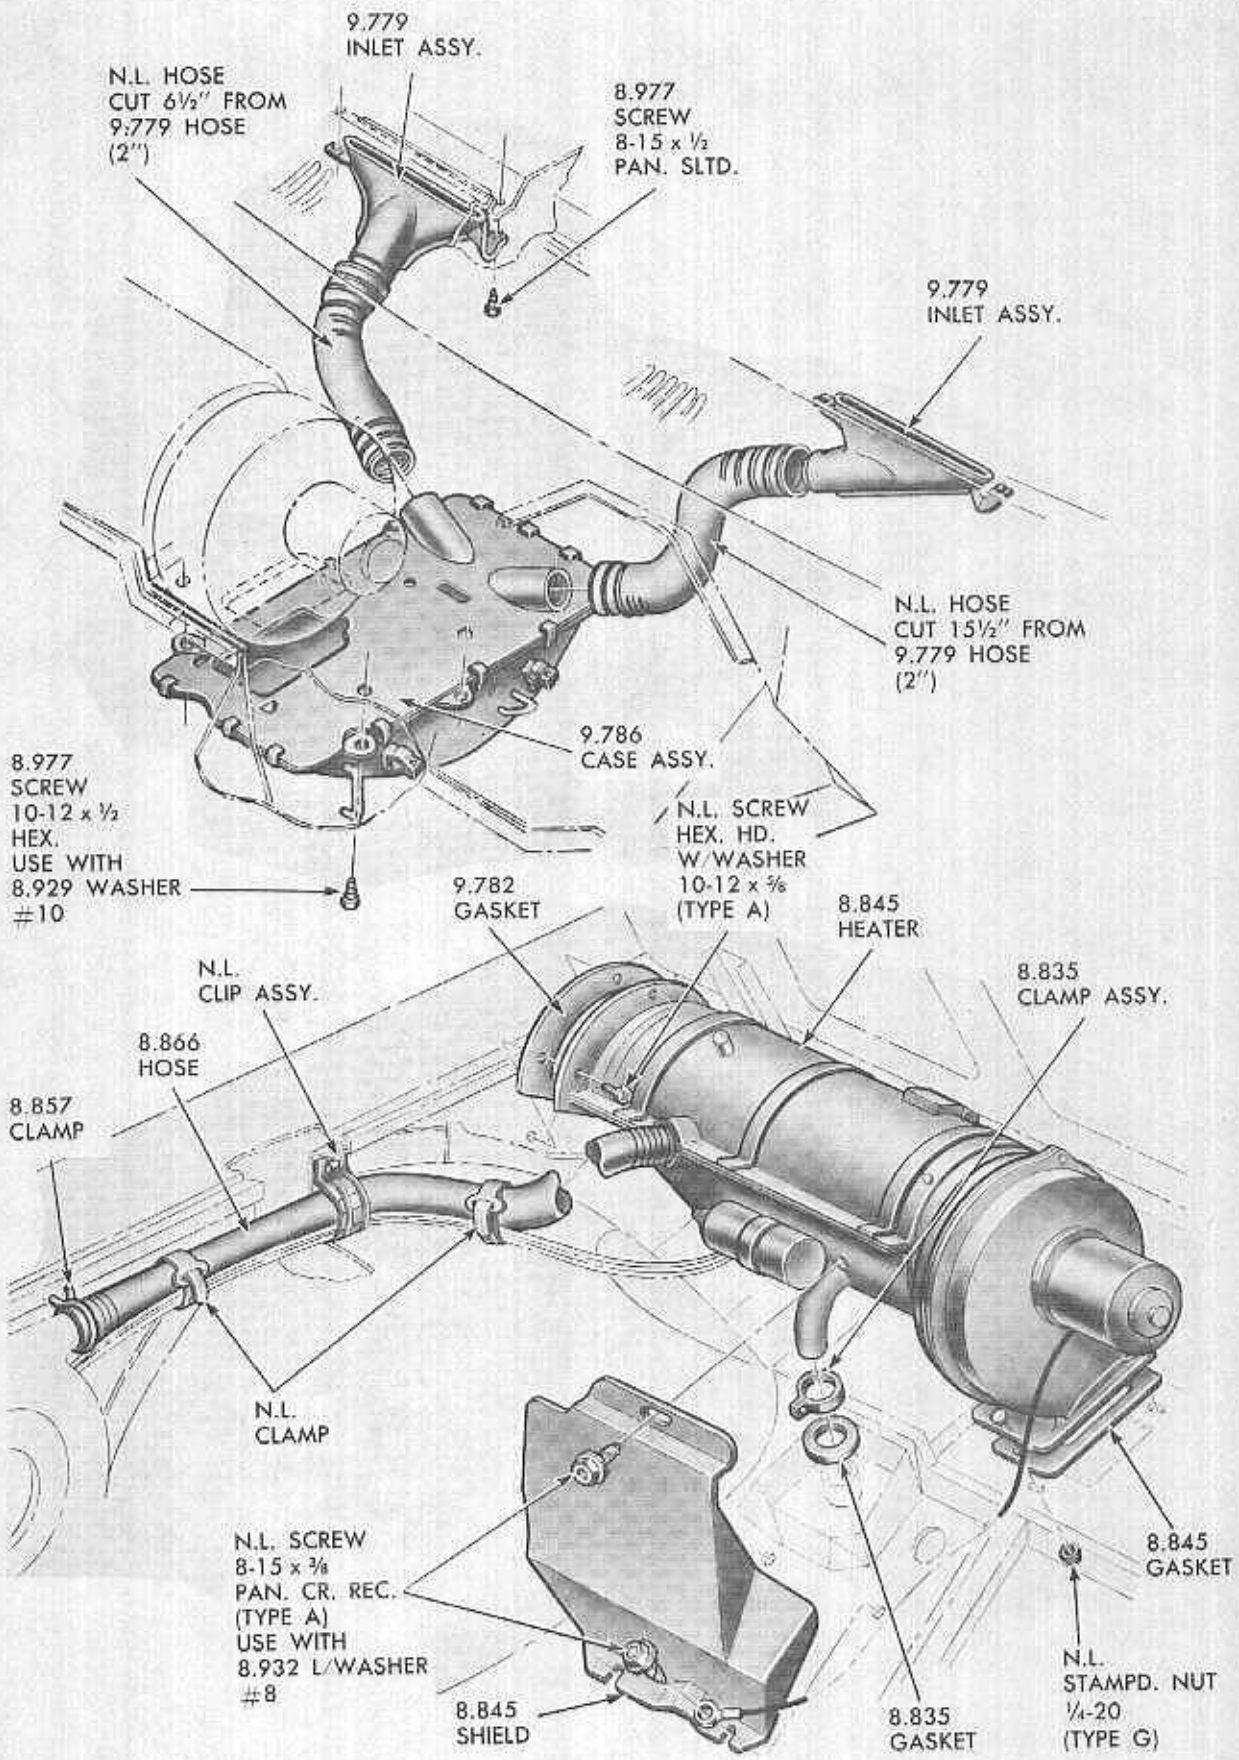

1960-62 CORVAIR GAS HEATER, DISTRIBUTOR AND DEFROSTER ASSEMBLY

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

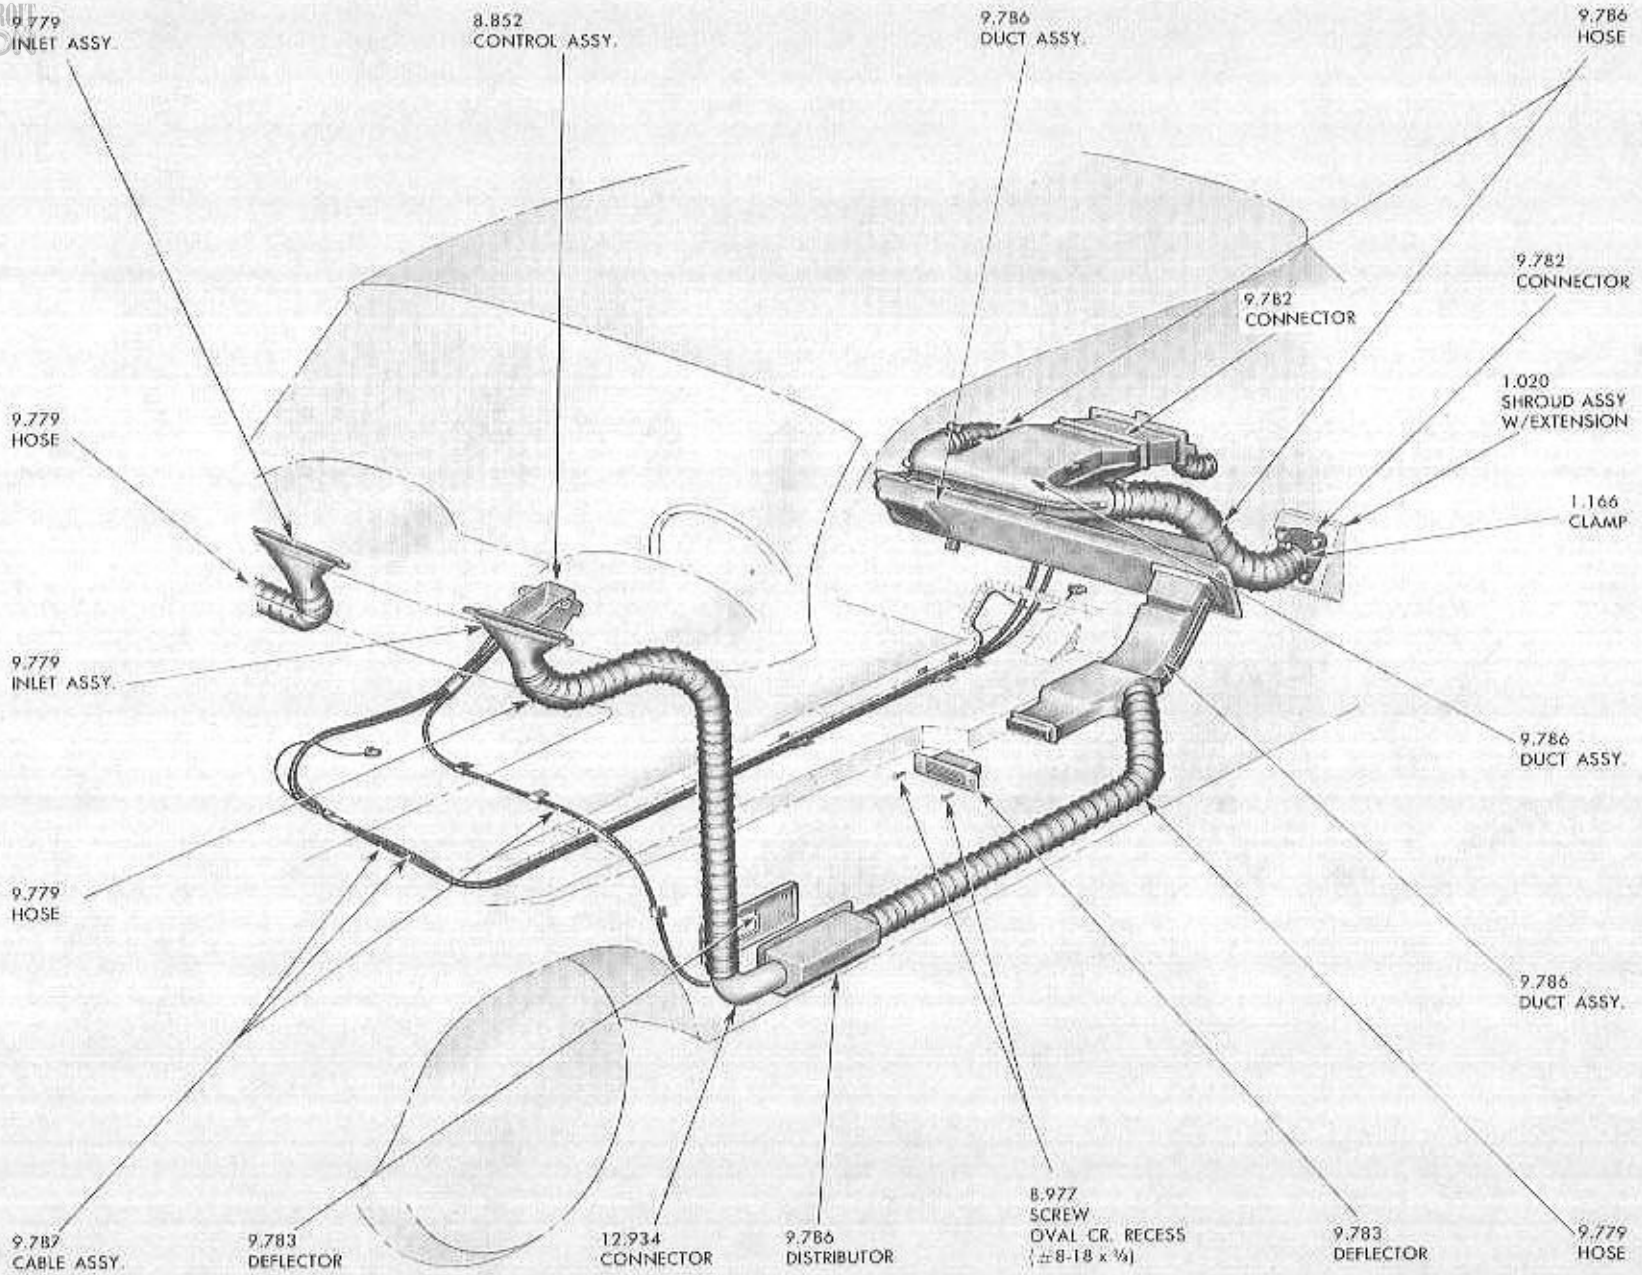

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

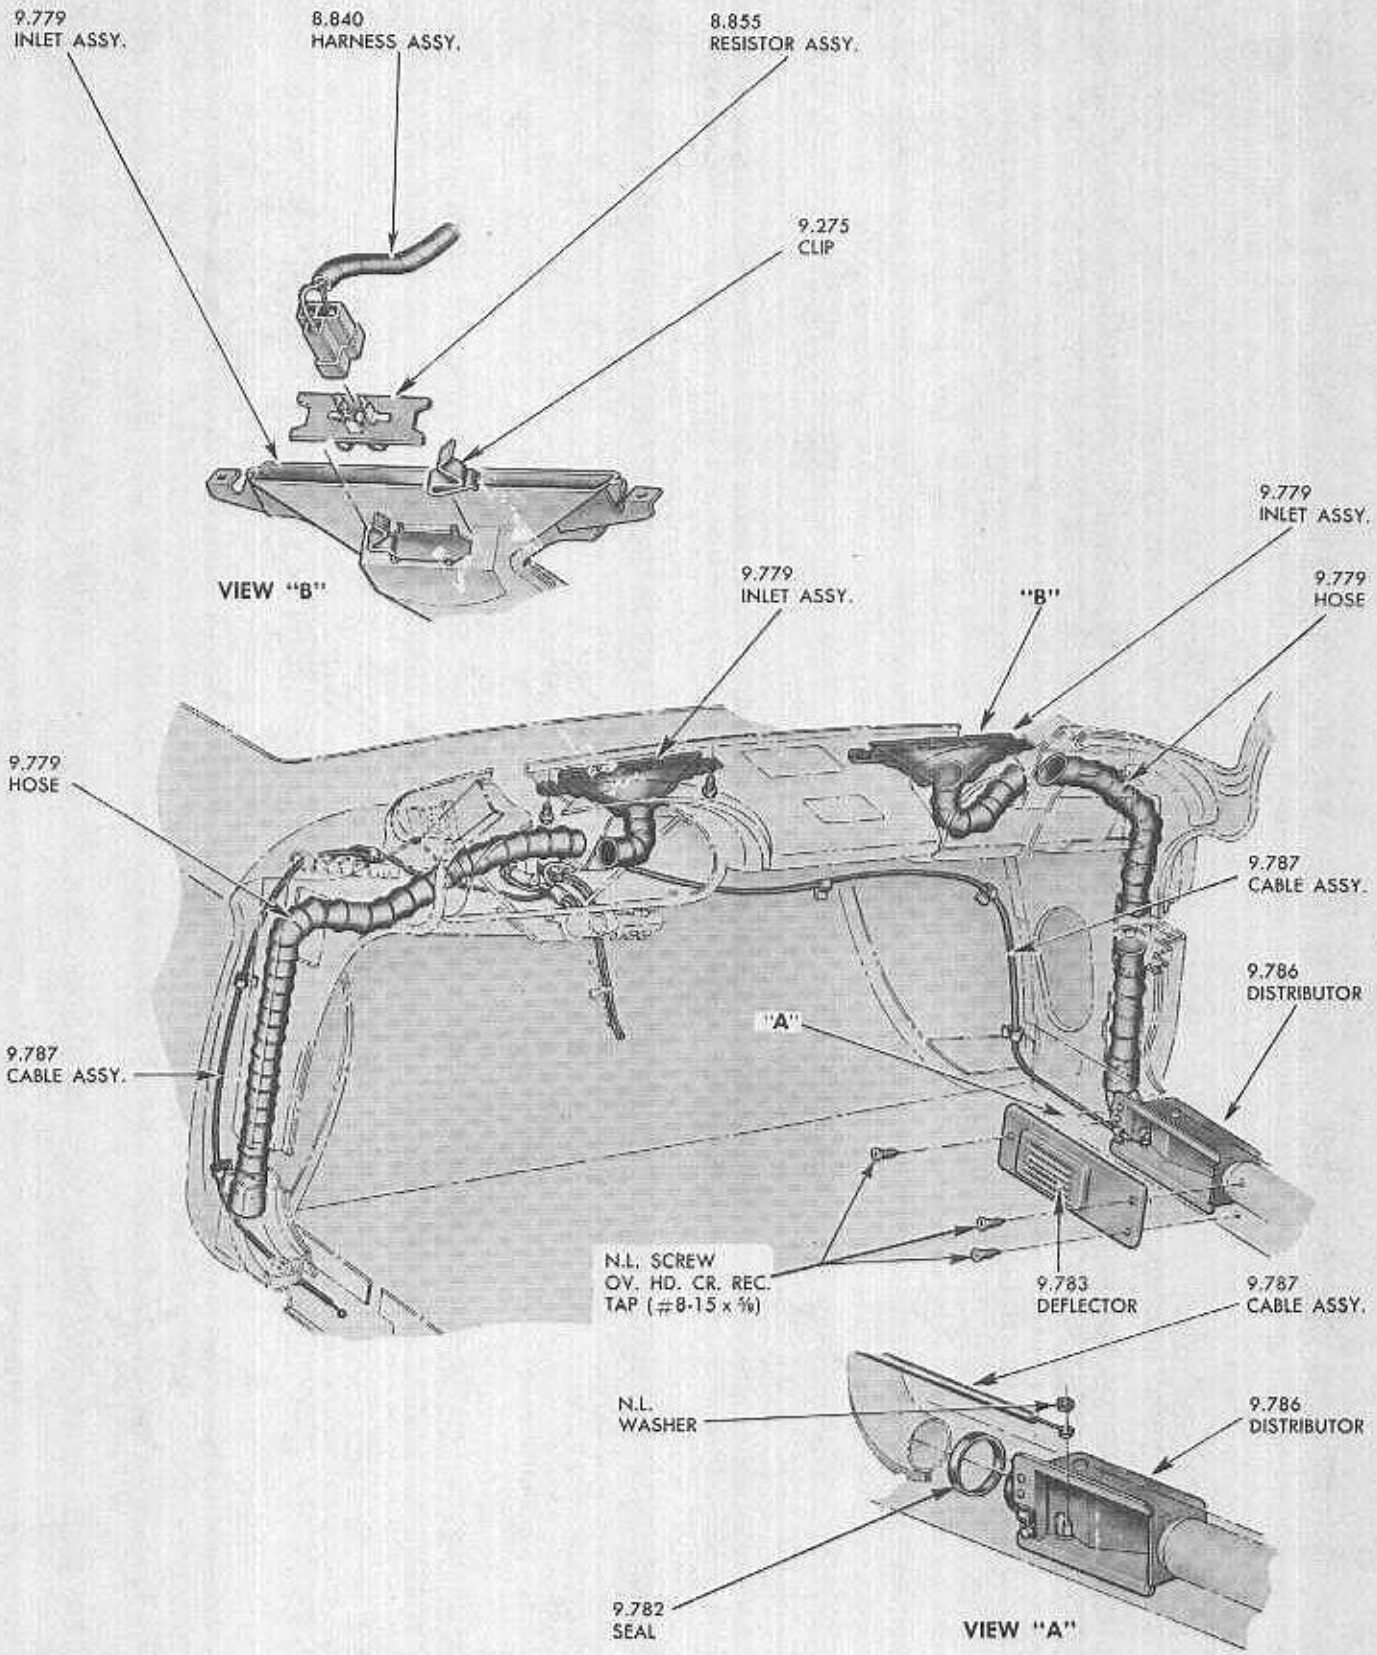

1961-64 CORVAIR AIR HEATER CABLES AND DEFROSTER DISTRIBUTOR PARTS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

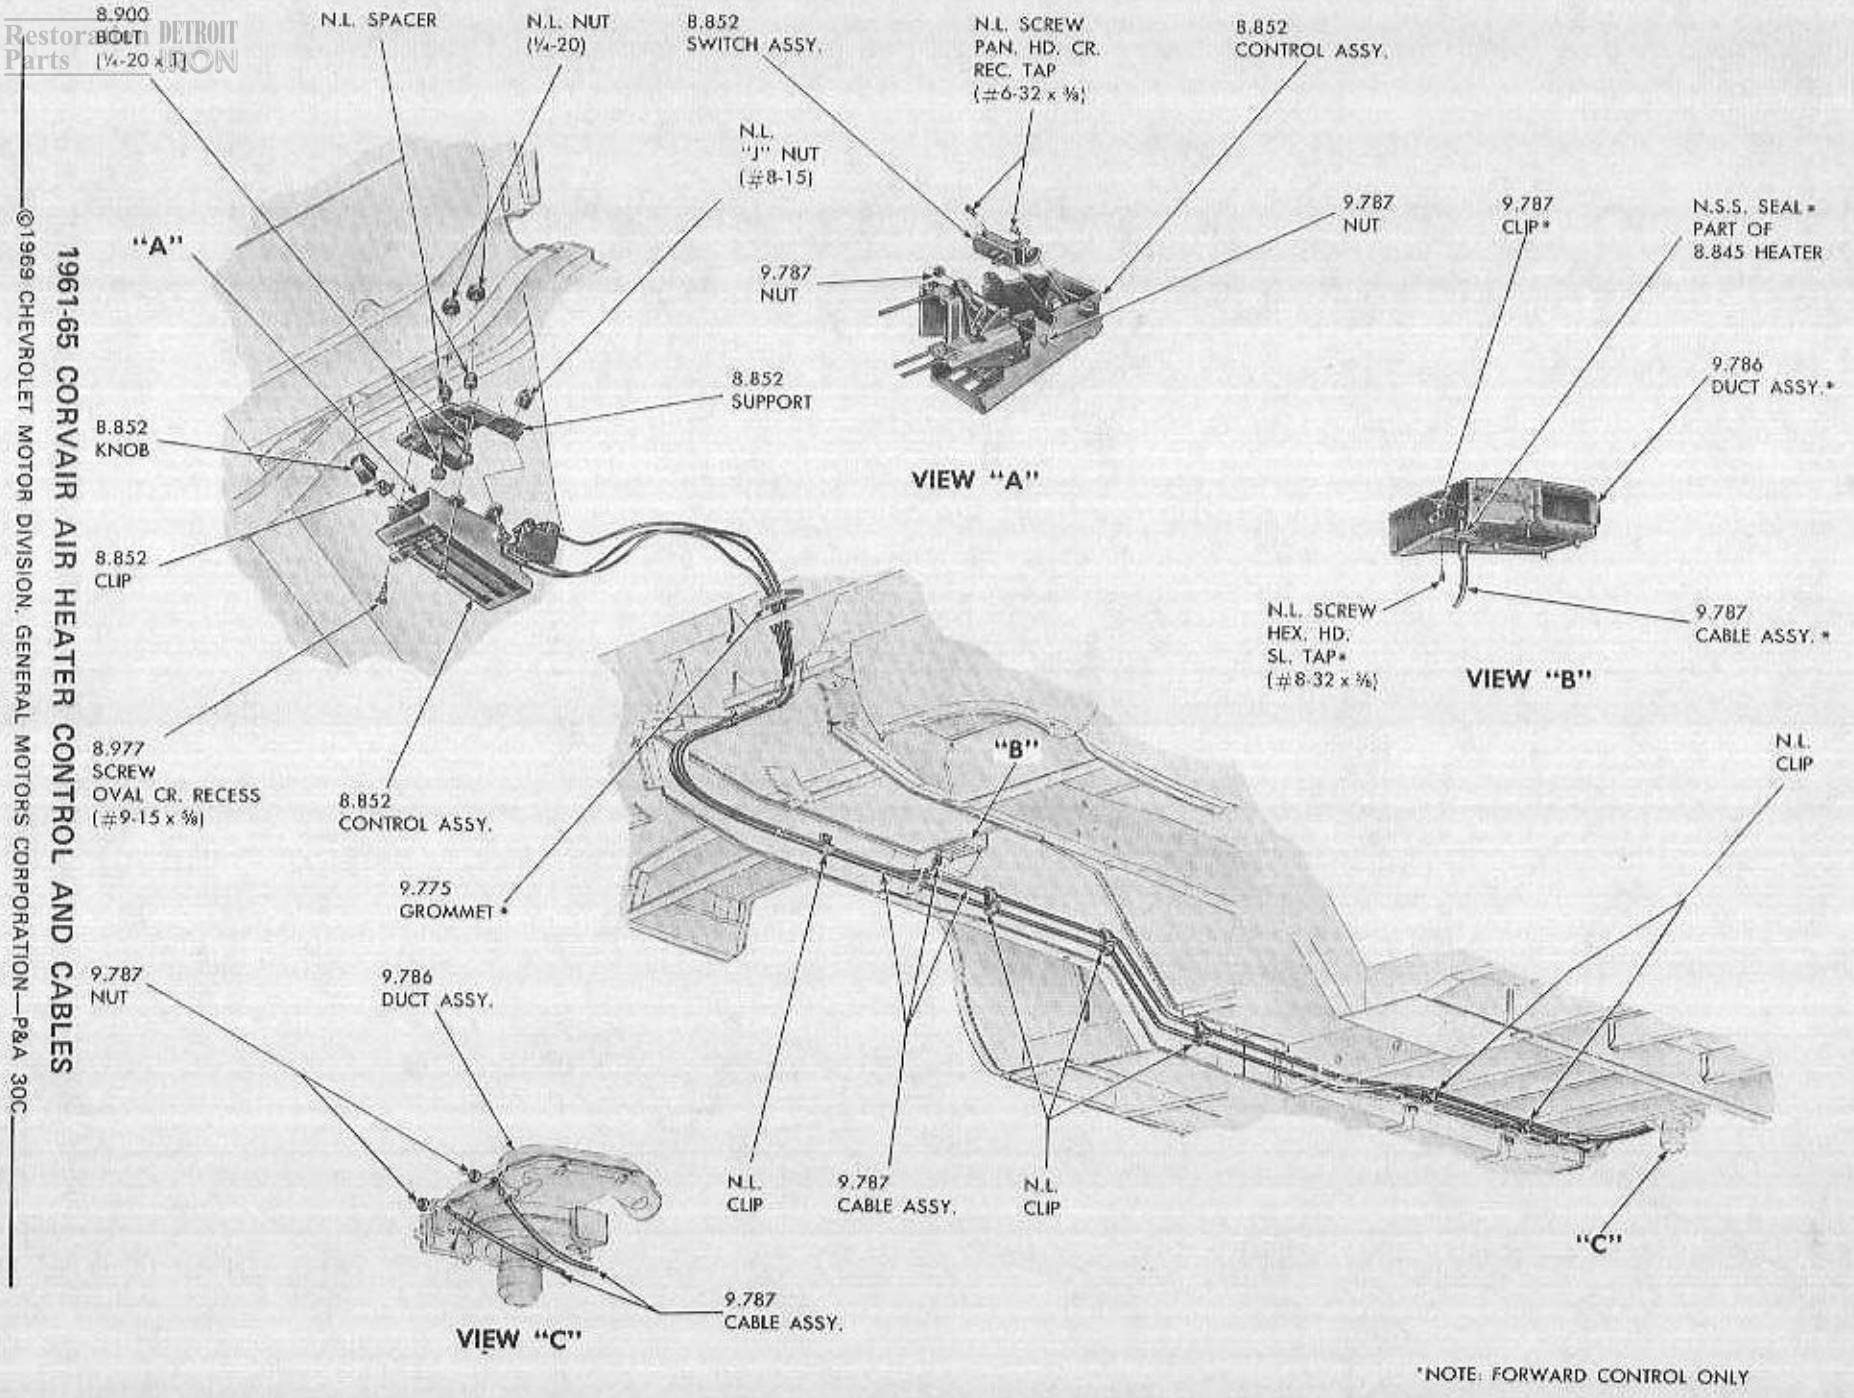

*NOTE: FORWARD CONTROL ONLY

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

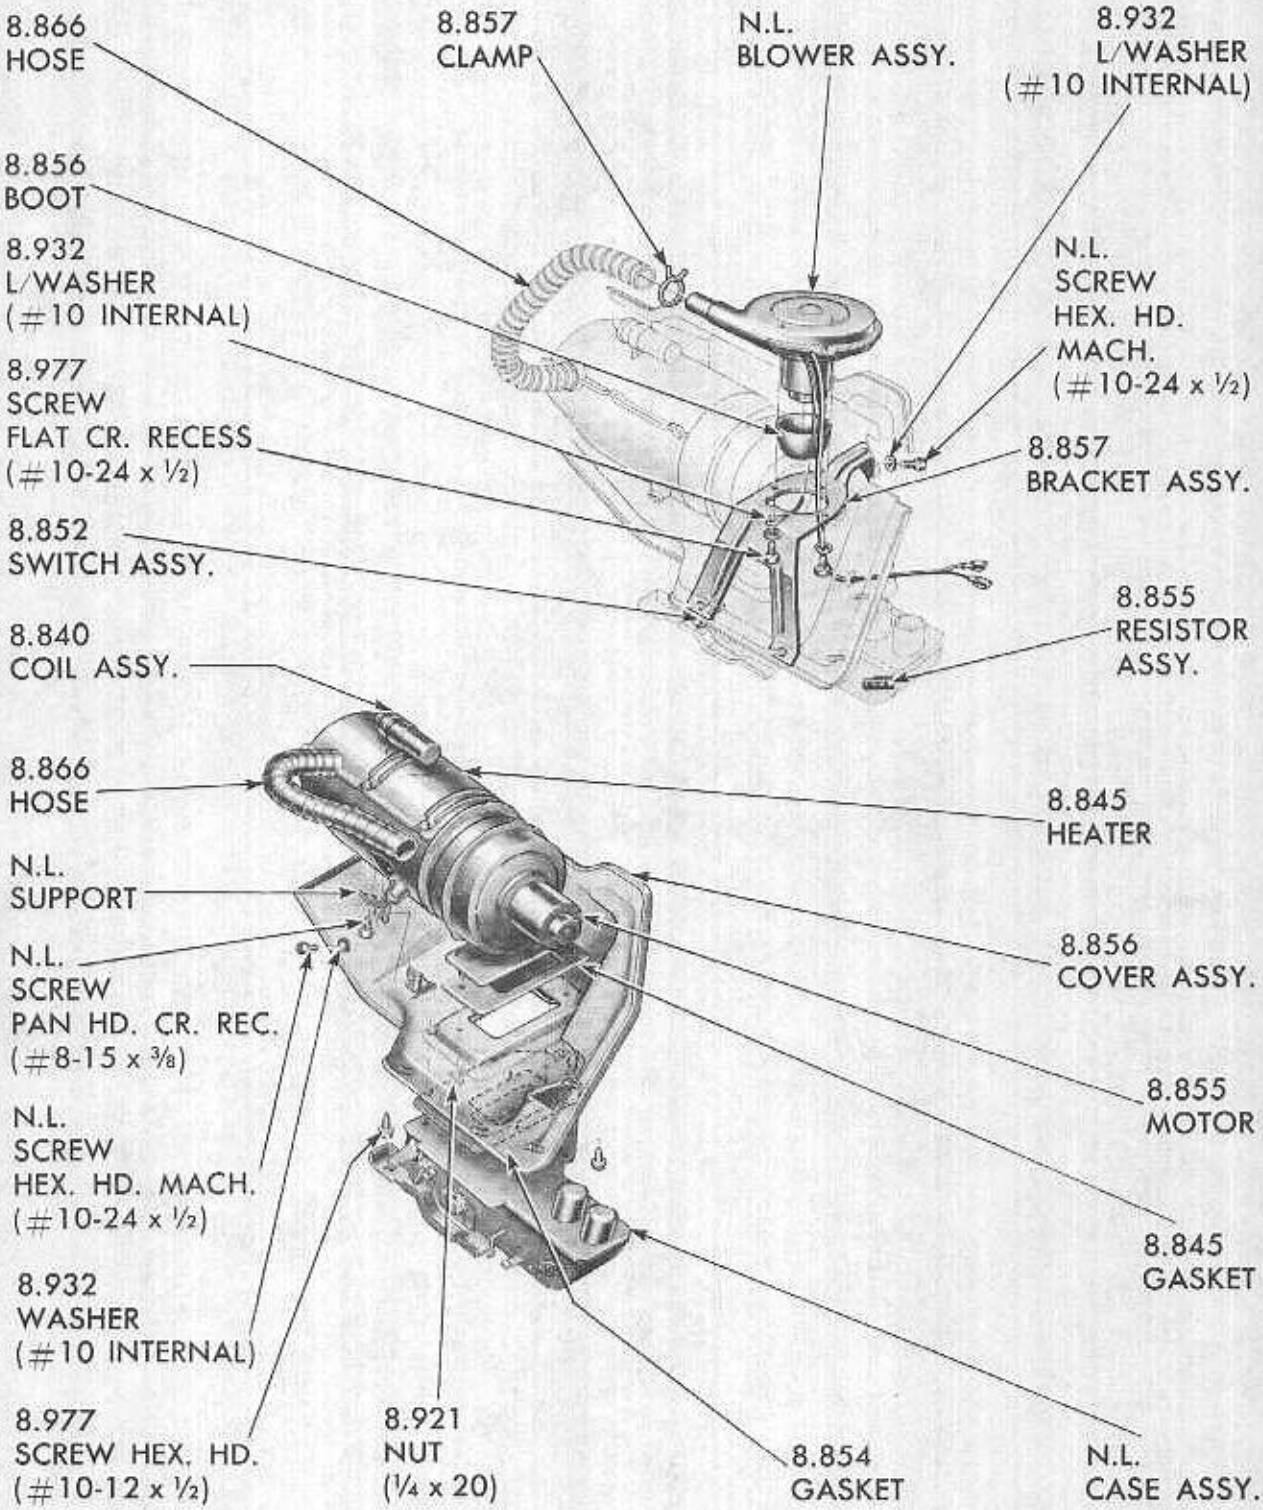

1961-65 CORVAIR F.C. GAS HEATER DISTRIBUTOR AND BLOWER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

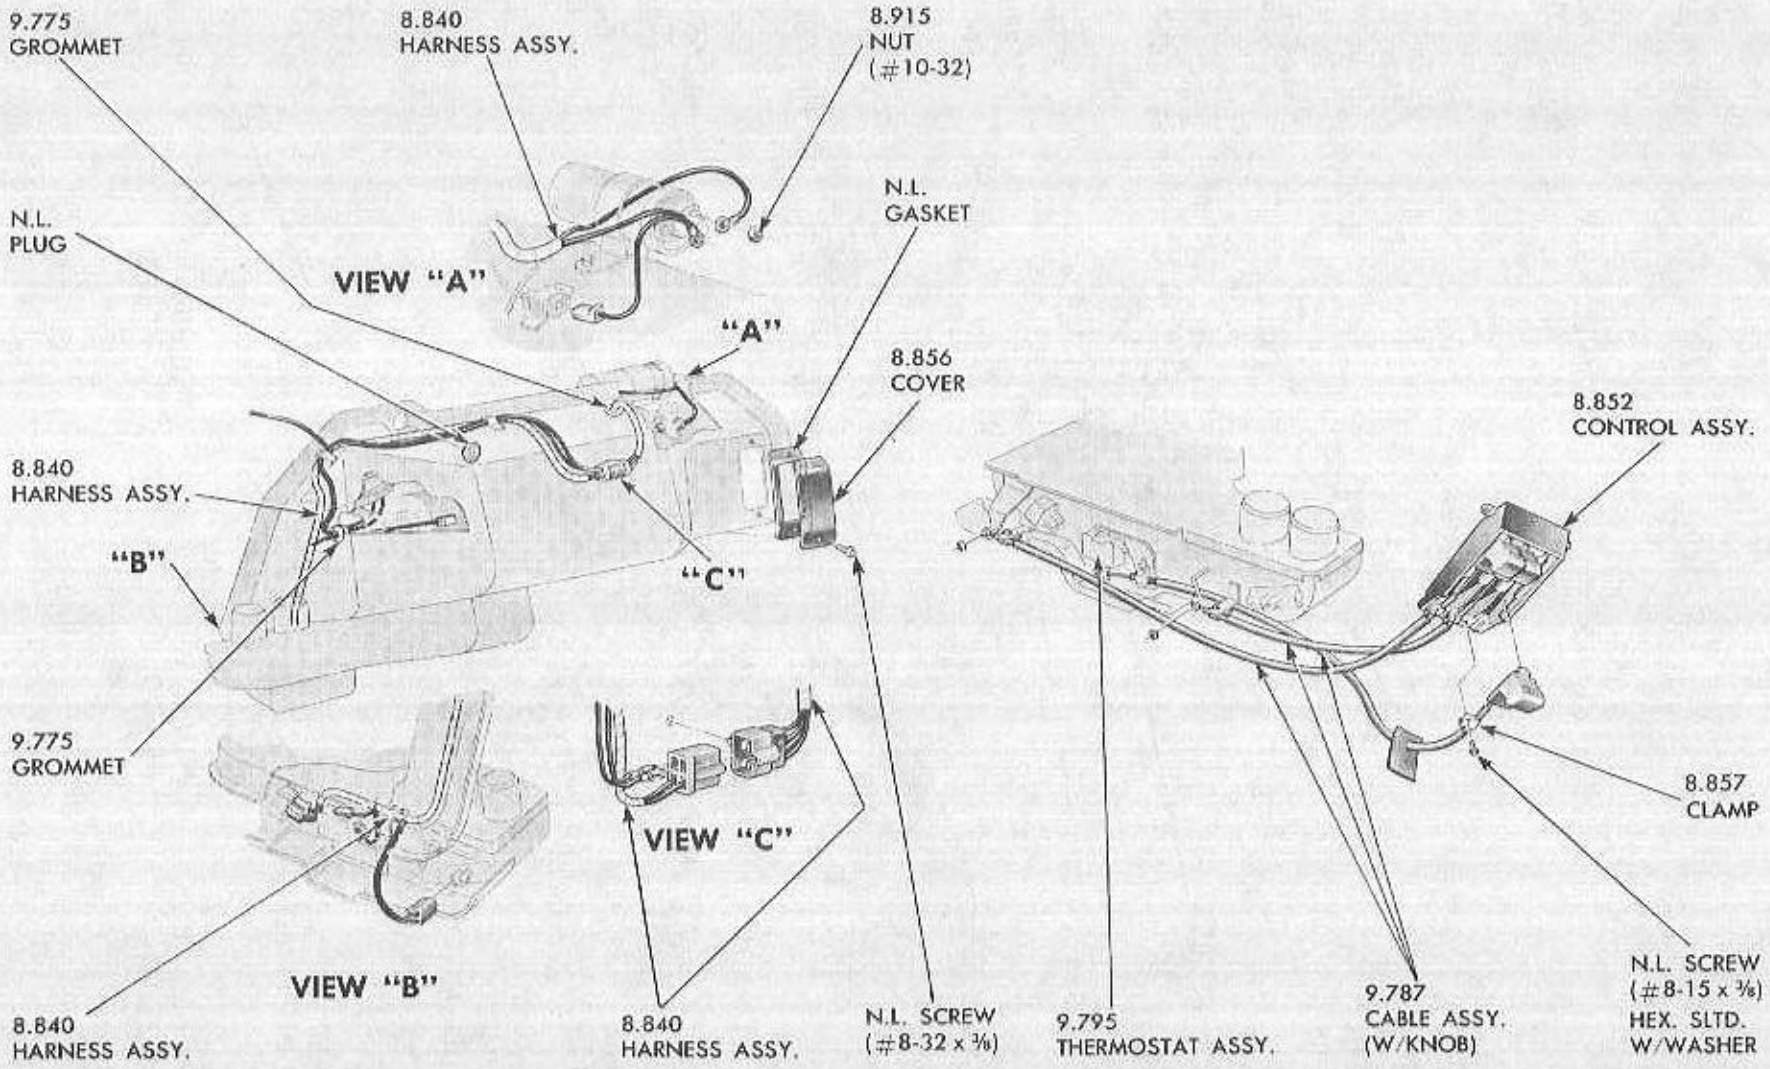

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

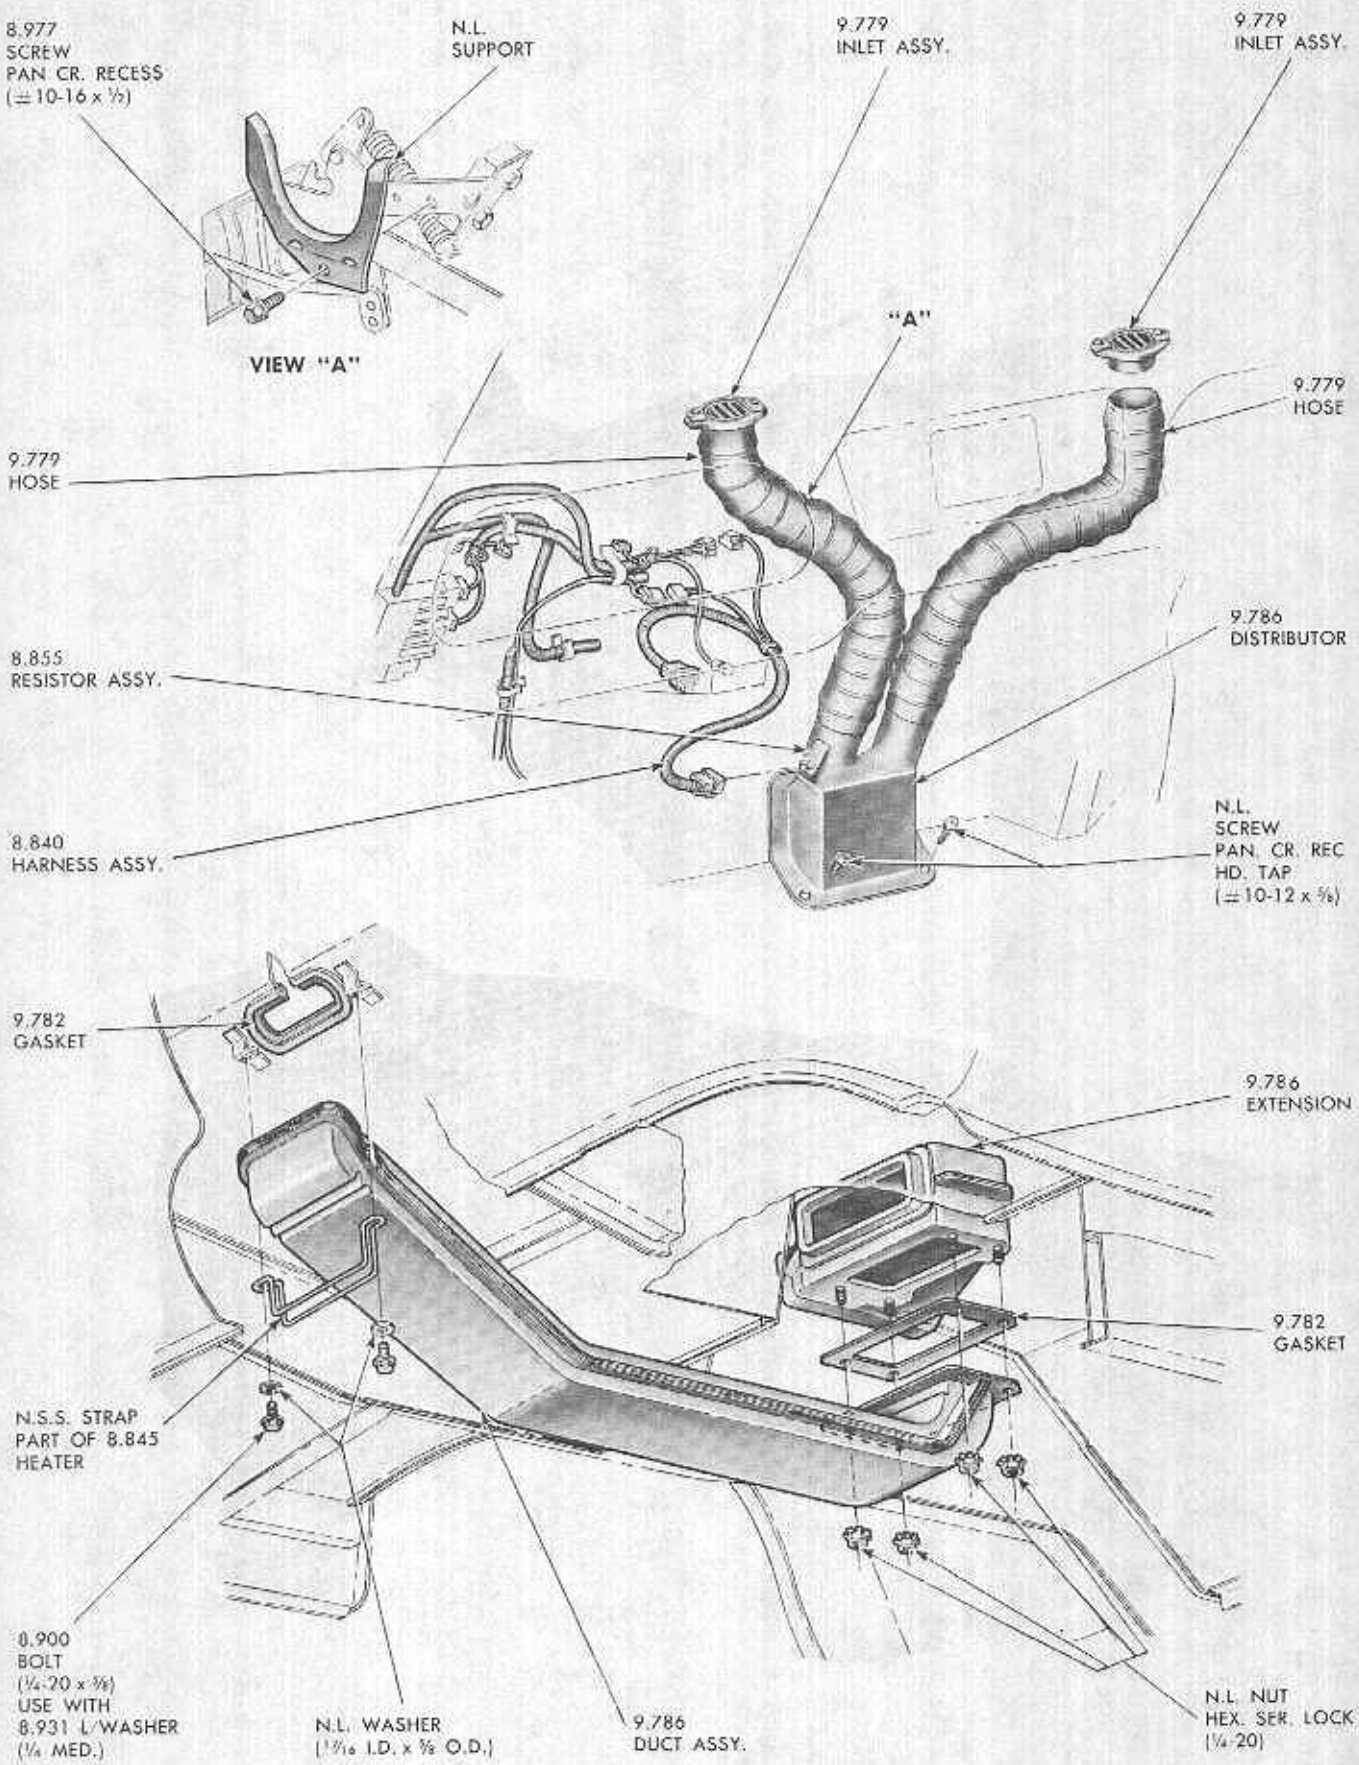

1961-65 CORVAIR F.C. AIR HEATER BLOWER AND HOSES

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

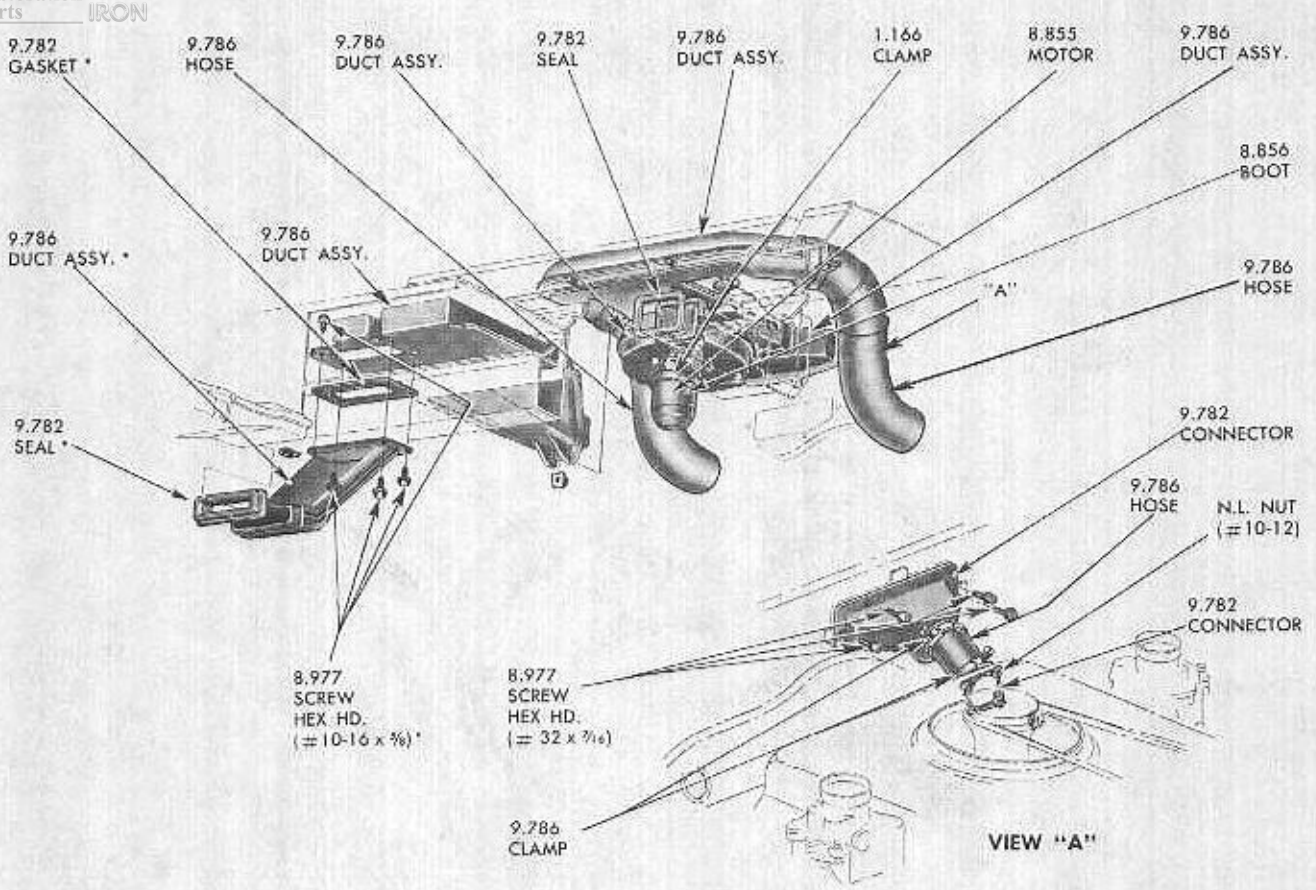

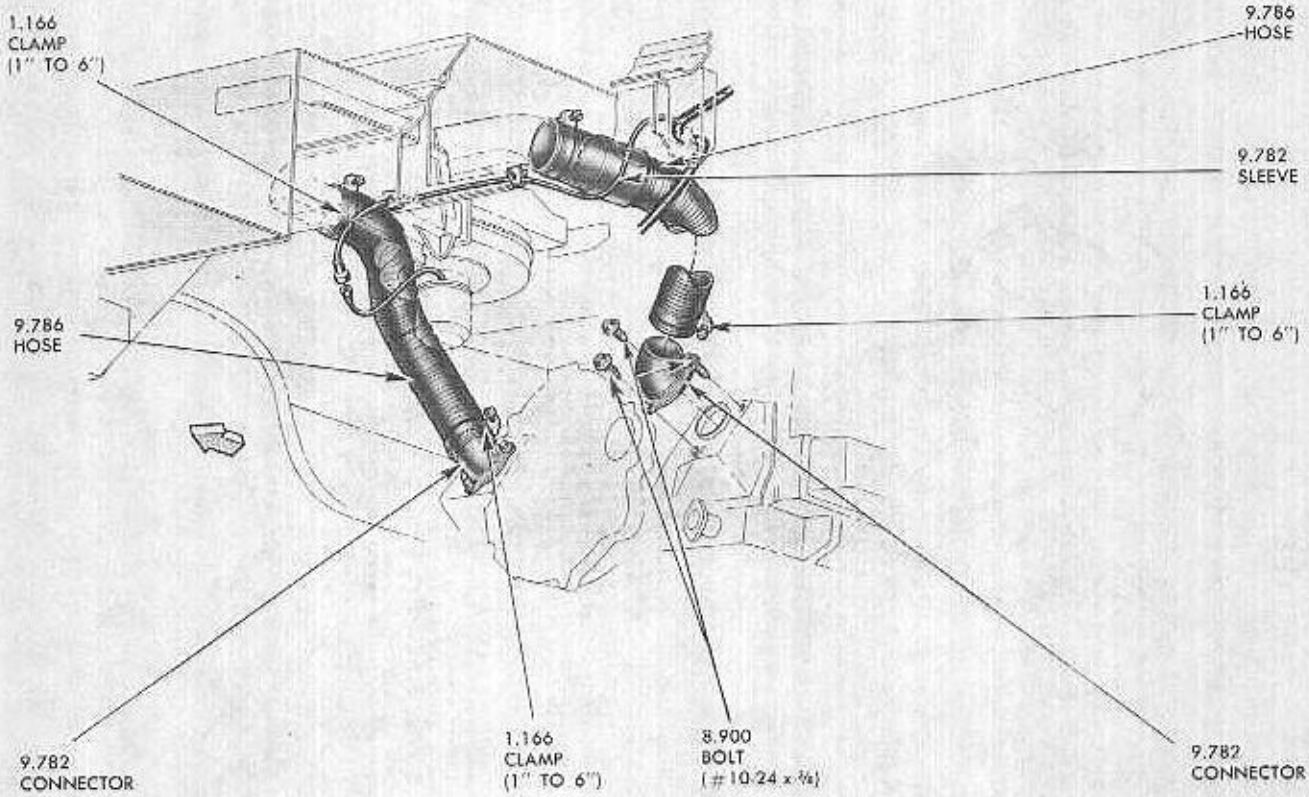

*NOTE: FORWARD CONTROLS ONLY

1961-65 CORVAIR F.C. AIR HEATER DEFROSTER HOSES AND AIR DUCT

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION— P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

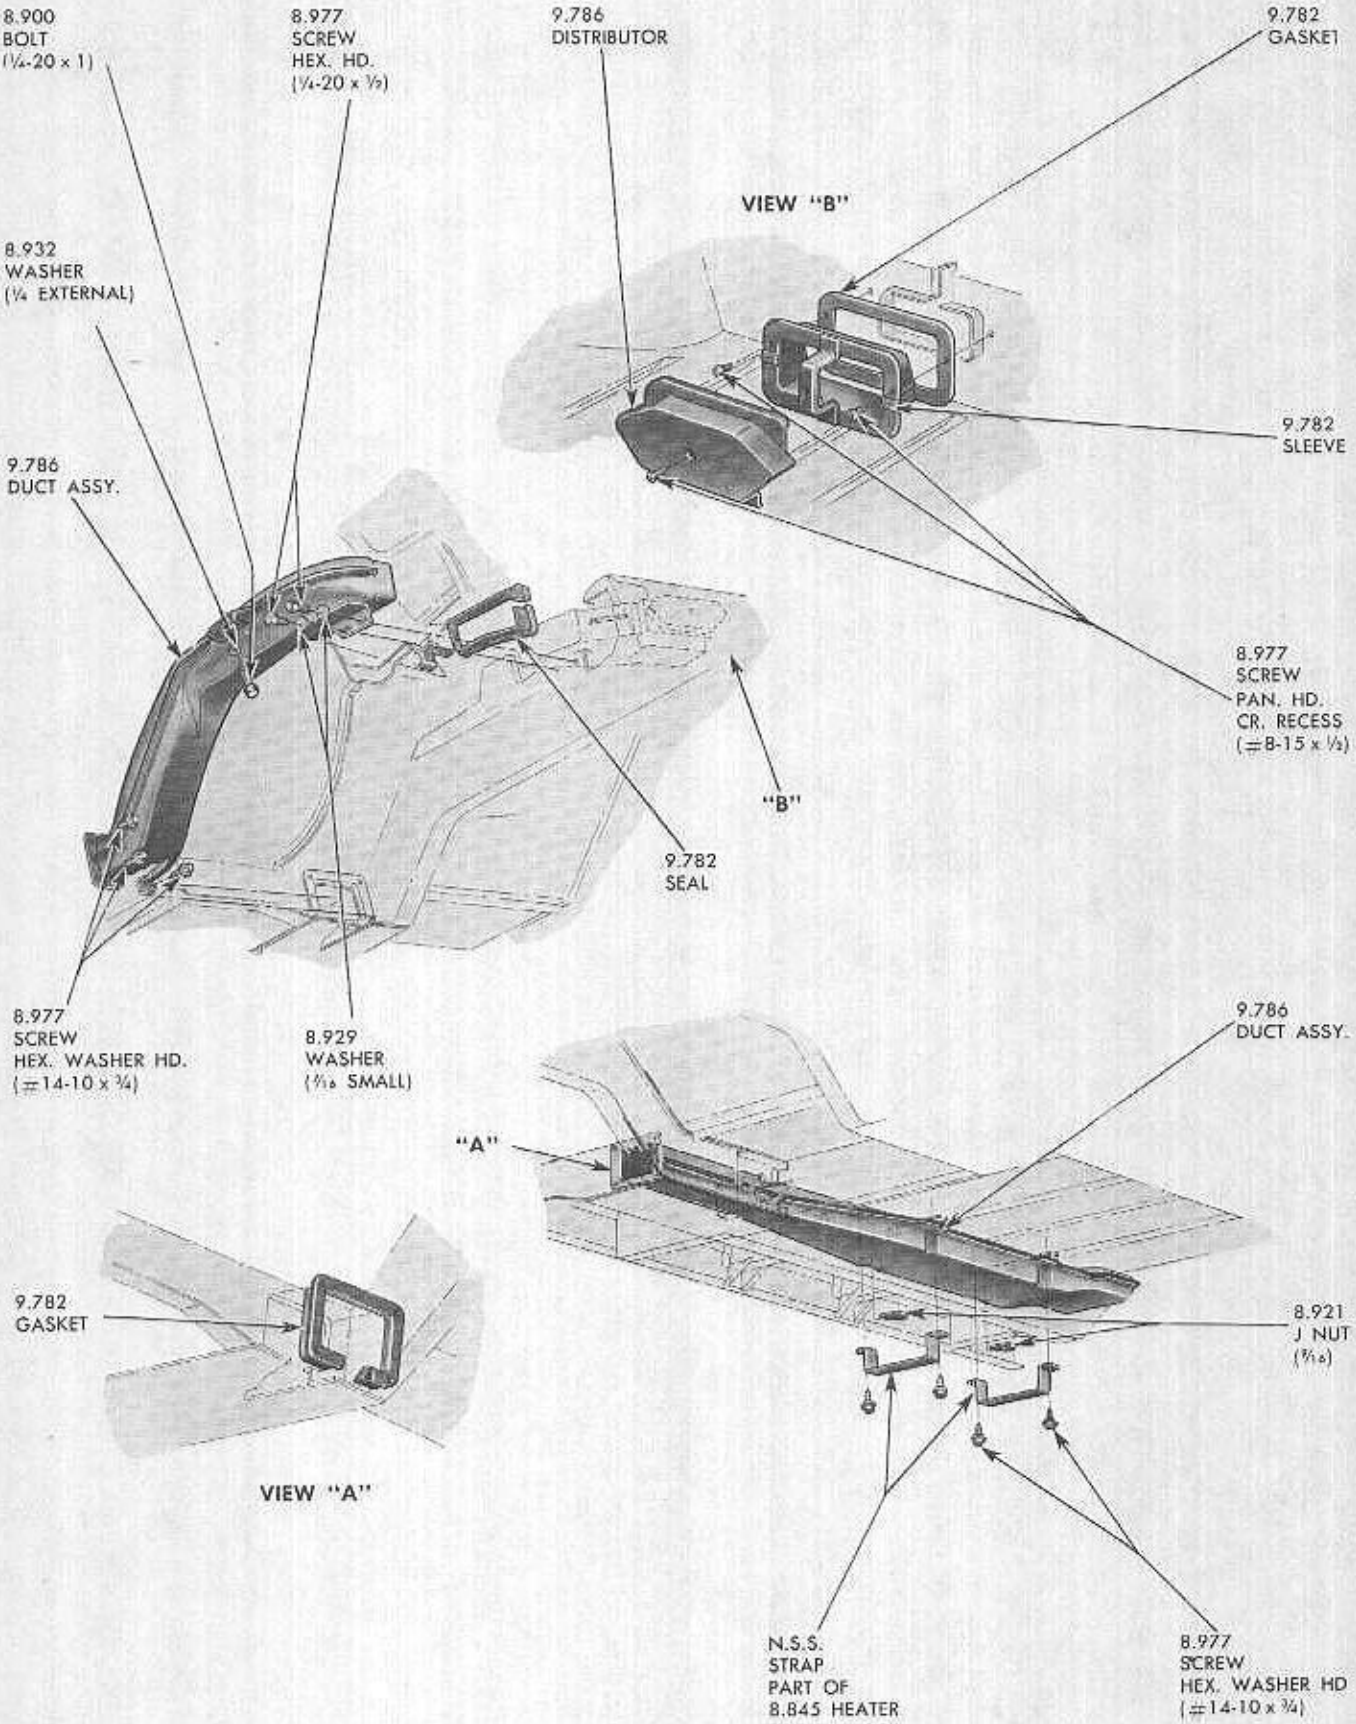

1961-65 CORVAIR F.C. AIR HEATER DUCT DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

8.000 LID ASSEMBLY, Hood or Engine Compartment

NOTE See group 12.181 for CORVAIR front luggage compartment lid assy.

60-63	CORVAIR (exc. STA. WAG.)	6282539	engine	1
64	CORVAIR	4465103	engine (pierced holes)	1
65-69	CORVAIR	4444779	engine	1

8.010 WEATHERSTRIP—CLIP—PLUG—STRIP, Engine Compartment Lower Gutter Sealing

62-64	CORVAIR (exc. STA. WAG.)	4880750	motor compt. lid gutter frt.	1
65	CORVAIR	4484836	motor compt. lid gutter—(12.269)	1
61-62	CORVAIR (STA. WAG.)	4739890	**CLIP,** access door strip—(10.695)	2
64	CORVAIR	4770719	**PLUG,** strip—(10.694)	A.R.
64	CORVAIR	4465089	**STRIP**	1

8.013 SPRING, Hood or Engine Compartment

60-64	CORVAIR	4304953	lid latch	1
65-69	CORVAIR	9702534	lid latch (4 1/4 coils)	1

8.015 MOULDING—HINGE ASSY.—PIN—PLATE—STRAP—SUPPORT, Hood or Engine Compartment

60-61	DELUXE (exc. LAKEWOOD)	6276421	lid outer panel	1
64	CORVAIR (4-DR.) (exc. MONZA)	3853536	lid	1
61-64	CORVAIR	6282321	**HINGE ASSY.,** lid	2
65-68	CORVAIR	9702892	**PIN,** engine compt. lid hinge	2
69	CORVAIR	5711767	**PIN,** engine compt. lid hinge	2
65	CORSA w/turbocharged	3854338	**PLATE,** eng. compt. lid (TURBOCHARGED)	1
66	CORSA	3878603	**PLATE,** engine compt. lid (TURBOCHARGED)	1
62-64	CORVAIR w/turbocharger	3817963	**PLATE ASSY.,** rear deck lid (TURBOCHARGED)	1
65-69	CORVAIR	9707405	**STRAP,** engine compt. lid hinge	2
63-64	CORVAIR	4403783	**SUPPORT,** engine compt. lid w/lower support	1
65-66	CORVAIR (2-DR.) (exc. CONV.)	9702896	**SUPPORT,** engine compt. lid hinge	R.H.
65-66	CORVAIR (2-DR.) (exc. CONV.)	9702897	**SUPPORT,** engine compt. lid hinge	L.H.
65-66	CORVAIR (4-DR.),			
65-67	CORVAIR (CONV.),			
68-69	CORVAIR	9707404	**SUPPORT,** left and right, engine compt. lid hinge	1
60-62	CORVAIR	6278589	**SUPPORT ASSY.,** lid w/lower support	1
65-69	CORVAIR	4488987	**SUPPORT ASSY.,** engine compt. lid	1

8.016 ATTACHING PARTS, Hood or Engine Compartment Moulding and Hinge

60-61	CORVAIR (exc. STA. WAG.)	4729220	**BOLT,** lid lock striker, hinge to reinforcement (1 1/4"—20 x 5/8")—(12.237)	8
61-63	CORVAIR (exc. STA. WAG.)	4849871	**BOLT,** lid hinge to lid—(11.620)	4
64-69	CORVAIR	4405445	**BOLT,** lid hinge to lid (5/16—18 x 1)	A.R.
64	CORVAIR	4406866	**BOLT,** hinge to reinf. w/washer (1 1/4"-20 x 3/4")—(12.237)	A.R.
60	DELUXE	6276673	**CLIP,** lid outer panel moulding	A.R.
61	DELUXE (exc. MONZA, LAKEWOOD),			
64	CORVAIR (4-DR.) (exc. MONZA)	6282841	**CLIP,** lid outer panel moulding	A.R.
65-69	CORVAIR (exc. STD.)	4490709	**CLIP ASSY.,** lid outer panel moulding	6
61-62	CORVAIR	9416865	**INSERT,** hinge bolt (1/4"—20 x 7/32")—(8.914)	A.R.
61	CORVAIR (exc. LAKEWOOD)	4803169	**INSERT,** hinge to lid bolt—(10.464)	A.R.
62	CORVAIR	4866142	**SCREW,** lid hinge to reinf.—(12.237)	A.R.
65-69	CORVAIR	4532739	**SCREW ASSY.,** lid hinge to lid screw (5/16—18 x 1.0 w/washer)	4

8.021 INSULATOR— —RETAINER, Hood Panel

65-69	CORVAIR	3868672	engine compt. lid	1
65-69	CORVAIR	3868673	engine compt. side	L.H.
65-66	CORVAIR	3868674	engine compt. side	R.H.
67	CORVAIR	3886666	engine compt. side	R.H.
68-69	CORVAIR	3919174	engine compt. side	R.H.
65-68 69	CORVAIR, MONZA	3934260	**RETAINER,** insulator pad	A.R.

8.024 BUMPER—PLUG—STUD, Hood or Engine Compartment Lid

60	2-DR. (exc. MONZA),			
60	4-DR. (1st type)	4721222	on lid (snap-on type)—(12.212)	2
60-64	CORVAIR (2nd type) (exc. STA. WAG.)	3792828	on lid (7/8" dia.) (bolt on type)	2
61-62	CORVAIR (STA. WAG.)	4565463	cover panel	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-66	CORVAIR	3762180	under hood lamp to hood	1
65	CORVAIR	3721637	**PLUG,** ($^{5}/_{16}$ dia. hole)	A.R.
60-64	CORVAIR (exc. STA. WAG.)	6279720	**STUD,** bumper adjuster on lid	2

8.055 EMBLEM ASSY.—Compartment Lid —LETTER UNIT—PLATE, Hood or Engine

60	CORVAIR	6256572	eng. compt., "Chevrolet"	1
62-64	CORVAIR w/H/Per.	3795346	engine compartment (flags)	1
65	CORVAIR w/H/Per.	3867730	**EMBLEM UNIT,** engine compt. "110"	1
65	CORVAIR w/Sp./H/Per.	3867731	**EMBLEM UNIT,** engine compt. "140"	1
66-69	CORVAIR w/H/Per.	3878601	**EMBLEM UNIT,** engine compt. "110"	1
66	CORVAIR w/Sp. H/Per.,			
68-69	CORVAIR w/Sp. H/Per.	3878602	**EMBLEM UNIT,** engine compt. "140"	1
64	CORVAIR (1st design)		**LETTER UNIT,** name body front,	
64	CORVAIR	3844231	engine compartment (includes letters C-O-R-V-A-I-R and mounting clips) (clip attaching)	A.R.
64	CORVAIR (2nd design)	3862004	**LETTER UNIT,** name body front (includes letters C-O-R-V-A-I-R and attaching parts) (nut attaching)	1
61	CORVAIR	3784580	**PLATE,** name (engine compartment)—(12.180)	1
62-63	CORVAIR	6256969	**PLATE** (Corvair) engine lid—(8.147)	1
62-64	CORVAIR w/Turbocharger	3817963	**PLATE,** eng. compt. "TURBOCHARGED"—(8.015)	1
65	CORSA w/Turbocharger	3854338	**PLATE,** eng. compt. "TURBOCHARGED"—(8.015)	1
65-68	CORVAIR	3865830	**PLATE UNIT,** engine compt. lid name	1

8.056 CLIP—NUT—WASHER, Hood and Body Front Emblem

64-65	CORVAIR	4889279	frt. and rr. name letter	A.R.
64	CORVAIR	4888347	lid emblem—(12.183)	A.R.
62-64	CORVAIR	9419763	**NUT,** front emblem ($^{3}/_{16}$")—(8.147)	A.R.
64	CORVAIR	4490699	**WASHER,** front lid name plate	12
65-66	CORVAIR	4817285	**WASHER,** front lid name plate—(12.118)	A.R.

8.080 CATCH ASSY.—HANDLE—LATCH ASSY.—LOCK ASSY.—SEAL—SPACER—SPRING—STRIKER, Hood or Engine Compartment

60-64	CORVAIR (exc. STA. WAG.)	4481632	lid	1
61-62	CORVAIR (STA. WAG.)	3783385	w/handle, access door (outside)	1
64-65	F.C.	3848805	**HANDLE,** engine access door	1
64-67	CORVAIR,			
69	CORVAIR	4477409	**LATCH ASSY.,** engine compt. lid	1
64-65	F.C.	3848802	**LOCK ASSY.,** engine access door	1
60	4-DR. (2nd type),			
60	2-DR.,			
61-63	CORVAIR (exc. STA. WAG.)	4307064	**SEAL,** handle sealing ($3^{3}/_{16}$ long)	1
64	CORVAIR	4481631	**SPACER,** lid latch striker	1
61-62	CORVAIR (STA. WAG.)		**SPRING,** door latch bolt (outside),	
61-65	F.C.	4308736	access door lock assy. latch bolt	1
61-62	CORVAIR (STA. WAG.)		**SPRING,** door handle lever (outside),	
61-65	F.C.	4308737	access door lock assy. handle lever	1
60-64	CORVAIR (exc. STA. WAG.)	4452596	**STRIKER,** lid latch—(12.237)	1
65-69	CORVAIR	4479247	**STRIKER,** lid latch—(12.237)	1

8.081 SPRING ASSEMBLY, Engine Compartment

60-64	CORVAIR (exc. STA. WAG.)	6276982	lid at latch	1

8.083 PLATE, Hood or Engine Compartment

60-63	CORVAIR (exc. STA. WAG.)	6276506	lid latch retainer	1
65-69	CORVAIR	4465765	lid latch anchor	1

8.130 PANEL, Front

60-64	CORVAIR	6284236	fender	R.H.
60-64	CORVAIR	6284237	fender	L.H.
65-67	CORVAIR	4541030	fender	R.H.
65-67	CORVAIR	4541031	fender	L.H.
68-69	CORVAIR	7742782	fender	R.H.
68-69	CORVAIR	7742783	fender	L.H.
60-62	CORVAIR (exc. STA. WAG., CONV.),			
63-64	CORVAIR (exc. CONV.)	4878329	**PANEL ASSY.,** w/hinge pillar and inner shroud	L.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4878328	**PANEL ASSY.,** w/hinge pillar and inner shroud	R.H.
61-62	CORVAIR (STA. WAG.)	4873321	**PANEL ASSY.,** w/hinge pillar, inner shroud and gas filler pocket	L.H.
62-64	MONZA (CONV.)	4435586	**PANEL ASSY.,** w/hinge pillar and inner shroud	R.H.
62-64	MONZA (CONV.)	4435587	**PANEL ASSY.,** w/hinge pillar and inner shroud	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

8.132 MOULDING UNIT, Fender

60-63	CORVAIR DELUXE (exc. MONZA),			
62	MONZA (STA. WAG.)	6257515	outer panel lower	L.H.
60-63	CORVAIR DELUXE (exc. MONZA),			
62	MONZA (STA. WAG.)	6257516	outer panel lower	R.H.
64	CORVAIR DELUXE (exc. MONZA)	3851358	outer panel lower	2
64	MONZA	3851359	wheel opening	L.H.
64	MONZA	3851360	wheel opening	R.H.
65	CORVAIR (exc. STD.)	3870743	front, wheel opening	L.H.
65	CORVAIR (exc. STD.)	3870744	front, wheel opening	R.H.
65	CORVAIR (exc. STD.)	3870745	rear wheel opening	L.H.
65	CORVAIR (exc. STD.)	3870746	rear wheel opening	R.H.
66-68	MONZA, CORSA	4227222	wheelhouse opening	L.H.
66-69	MONZA, CORSA	4227221	wheelhouse opening	R.H.

8.133 CLIP ASSY.—NUT, Fender Moulding

64	CORVAIR DELUXE (exc. MONZA)	4421811	front lower mldg.	2
60-69	CORVAIR	9427101	**NUT**, side, peak, headlamp (No. 10—24)—(8.921)	A.R.
65	CORVAIR (STD.)	3844130	**NUT**, front side mldg. (No. 8—32)	A.R.

8.147 PLATE—CLIP—EMBLEM—NUT, Front Fender

60	CORVAIR	6256969		2
60-61	MONZA	3782982	"900 MONZA"	2
61	DELUXE	3779270	"CORVAIR 700"	2
61-62	GREENBRIER	3785051	"GREENBRIER", left or right	2
61-62	F.C. (exc. GREENBRIER)	3784665	"CORVAIR 95", left or right	2
62	CORVAIR DELUXE	3789678	"CORVAIR 700"	2
62-64	MONZA (2-DR.)	3819679	"SPYDER"	2
63-64	F.C. (exc. GREENBRIER)	3819389	"CORVAIR 95" by Chevrolet left or right	2
63-64	GREENBRIER	3819390	"GREENBRIER" by Chevrolet left or right	2
63	CORVAIR STD.	3820991	"CORVAIR 500"	2
63	CORVAIR DELUXE	3821787	"CORVAIR 700"	L.H.
63	CORVAIR DELUXE	3821788	"CORVAIR 700"	R.H.
64	CORVAIR (4-DR.) (exc. MONZA)	3834977	"CORVAIR 700"	L.H.
64	CORVAIR (4-DR.) (exc. MONZA)	3834978	"CORVAIR 700"	R.H.
64	CORVAIR STD.	3834979	"CORVAIR 500"	2
64	MONZA	3839504	"MONZA"	2
65	GREENBRIER	3856033	"GREENBRIER"	2
65	CORVAIR STD.	3870748	"CORVAIR 500"	2
65	CORVAIR, MONZA	3870755	"MONZA"	2
65-66	CORVAIR, CORSA	3871679	"CORSA"	2
66-68	CORVAIR (STD.)	4227219	"CORVAIR 500"	1
66-69	MONZA	4227220	"MONZA"	1
69	CORVAIR (STD.)	8723824	**PLATE ASSY.** (500)	2
60-64	MONZA,			
61-62	CORVAIR (STD.)		**CLIP**, fender plate,	
62-68	CORVAIR w/H/Per.		rear emblem,	
62-65	CORVAIR w/Turbocharger, F.C.	3829006	rear deck name plate	A.R.
62-64	CORVAIR w/Turbocharger, F.C.	3770339	**CLIP**, front fender name plate	4
62-63	MONZA	3815062	**EMBLEM** ("900 MONZA")	2
63-64	CORVAIR	9419763	**NUT**, front fender series designation	A.R.
60	CORVAIR	3752642	**NUT ASSY.**, fender name plate	6

8.153 PLATE, Engine Compartment

61-64	CORVAIR (exc. STA. WAG.)	6282521	baffle side	R.H.
61-64	CORVAIR (exc. STA. WAG.)	6282522	baffle side	L.H.
64	CORVAIR	4417660	baffle front	1
60	CORVAIR	6277698	**PLATE ASSY.**, baffle front	1

8.154 SEAL, Front Fender and Skirt

60-69	CORVAIR	3827365	($^{9}/_{16}$" edge grip—$^{3}/_{4}$" seal reach) (Note 1)	A.R.

NOTE 1 Use for all fender skirt and other chassis sheet metal sealing applications requiring an edge type seal.

8.304 MOULDING UNIT—CAP UNIT, Body Sill

60-61	MONZA	3787466		2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60-61	CORVAIR (exc. MONZA, F.C.),			
62	CORVAIR STD	3782973		2
62	CORVAIR DELUXE	3816397		L.H.
62	CORVAIR DELUXE	3816398		R.H.
63	MONZA	3824711		L.H.
63	MONZA	3824712		R.H.
63	CORVAIR DELUXE (exc. MONZA)	3824734	left or right	2
64	CORVAIR DELUXE (exc. MONZA)	3843383	left or right	2
64	MONZA	3843546	left or right	2
65	CORVAIR, (exc. STD.)	3870747		2
66-69	MONZA, CORSA	4227218	left or right	2
64	MONZA	3843547	**CAP UNIT,** front mldg.	L.H.
64	MONZA	3843548	**CAP UNIT,** front mldg.	R.H.
64	♦MONZA	3843549	**CAP UNIT,** rear mldg.	L.H.
64	MONZA	3843550	**CAP UNIT,** rear mldg.	R.H.

8.309 CLIP—RETAINER—SCREW, Body Sill Moulding

60	CORVAIR (exc. MONZA)	3782471		8
60-61	MONZA	6280624		16
61	CORVAIR (exc. MONZA)	3787328		8
63-64	CORVAIR DELUXE (exc. MONZA)	4777621	—(12.118)	12
65-69	CORVAIR (exc. STD.)	4523879	**RETAINER,** rocker outer panel mldg.	12
62	CORVAIR (DELUXE)	3886638	**RETAINER,** moulding	4
63	MONZA (1st design)	3820327	**RETAINER,** moulding	4
63	MONZA (2nd, design)	3838388	**RETAINER,** moulding	4
64	MONZA (exc. SPYDER)	3839537	**RETAINER,** moulding	4
64	SPYDER	3898145	**RETAINER,** moulding	4
60-69	CORVAIR	9417706	**SCREW** (No. 10—24 x 3/4")—(8.908)	6

8.800 SERVICE ACCESSORIES, Auto Maintenance

NOTE Refer to P & A 24 for Service Accessories.

8.820 JACK—RETAINER—SPRING ASSY., Auto

61-65	F.C.	3778888		1
60-69	CORVAIR	3858952		1
61-64	CORVAIR (exc. STA. WAG.)	3819080	**RETAINER,** spring upper and lower	A.R.
61-64	CORVAIR (exc. STA. WAG., Air Cond.)	3785772	**SPRING ASSY.**	1
61-65	F.C.	3737504	**SPRING ASSY.,** jack storage	1

8.821 WRENCH—FLAG—FLARE ASSY.—HAMMER ASSY., Wheel and Tire

60-69	CORVAIR	3909176	jack handle and wheel (49/64" hex) (3/4" hex.)	1
60-69	CORVAIR, F.C.	3898172	jack handle and wheel (socket type)	1
60-69	CORVAIR	3891443	**FLAG** (distress)	1
60-69	CORVAIR	3891442	**FLARE ASSY.** (distress)	1
62-65	CORVAIR w/wire wheels	3859067	**HAMMER ASSY**	1

8.835 BURNER ASSY., and ATTACHING PARTS, Car Heater Burner

60-64	CORVAIR, F.C.	3149816	w/exchanger	1
60-65	CORVAIR, F.C.	3144931	**CLAMP,** burner	1
60-65	CORVAIR, F.C.	3783639	**CLAMP ASSY.,** exhaust pipe	1
60-65	CORVAIR, F.C.	3149518	**CUP ASSY.,** gas mixer	1
60-65	CORVAIR, F.C.	3144845	**EXCHANGER ASSY** (Note 1)	1
60-63	CORVAIR (exc. F.C.)	3783638	**GASKET,** exhaust pipe	1
60-65	CORVAIR, F.C.	3147591	**GASKET,** mixer cup to burner housing	1
60-65	CORVAIR, F.C.	3147610	**HOUSING**	1
60-65	CORVAIR, F.C.	3147590	**KIT,** service, burner	1
60-65	CORVAIR, F.C.	3147609	**NOZZLE ASSY.,** burner	1
60-63	CORVAIR (exc. F.C.)	6257920	**PIPE ASSY.,** exhaust	1
61-65	F.C.	3776884	**PIPE ASSY.,** exhaust	1
61-65	F.C.	3776897	**PIPE ASSY.,** overflow, upper	1
60-65	CORVIAR, F.C.	3147605	**SCREW,** burner valve seat (9/16—24 x 1/4)	1
60-65	CORVAIR, F.C.	3148053	**TUBE,** burner housing vent	1

NOTE 1 Exhaust pipe must be shortened to fit F.C. models, I.C.C. approved on F.C. models.

8.840 SWITCH ASSY., and PARTS, Car Heater Ignition

60-64	CORVAIR, F.C.	3149080	heat exchanger overheat	1
60-63	CORVAIR,			
61-65	F.C.	3147131	purge	1
61-65	F.C. w/gas	3151456	flame detector (Note 4)	1
61-65	F.C.	3783037	**ADAPTER,** purge	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

60-65	CORVAIR, F.C.	3144913	**BASE ASSY.**, unit (less cam)	1
60-64	CORVAIR, F.C.	1909326	**BRACKET**, coil—(2.183)	1
60-65	CORVAIR, F.C.	3144865	**CAM**, unit breaker point (nylon—$^{7}/_{16}$ long)	1
60-65	CORVAIR, F.C.	3144910	**CAP**, unit base	1
60-65	CORVAIR, F.C.	3147604	**CAP**, plug retainer	1
60-65	CORVAIR, F.C.	1115061	**COIL ASSY.**,w/bracket	1
60-65	CORVAIR, F.C.	3147587	**COIL UNIT**, burner solenoid	1
60-65	CORVAIR, F.C.	3146543	**COVER**, purge switch assy.	1
60-65	CORVAIR, F.C.	3147606	**COVER**, solenoid cup	1
60-65	CORVAIR, F.C.	3147608	**CUP ASSY.**, solenoid	1
61-65	F.C.	2976883	**EXTENSION ASSY.**, wiring harness	1
61-65	F.C. w/gas	2976886	**HARNESS ASSY.**, wiring	1
61-65	F.C. w/air	2985789	**HARNESS ASSY.**, wiring	1
62-64	CORVAIR w/air	2980920	**HARNESS ASSY.**, wiring	1
60-63	CORVAIR	5610491	**INTENSIFIER**, ignitor spark (Note 3)	1
	NOTE 3 To be used with 1st design spark plugs.			
60-65	CORVAIR, F.C.	3149821	**PLUG UNIT**, spark (1 gasket)	1
60	CORVAIR	3149073	**RELAY UNIT**, solenoid coil w/wiring	1
60-65	CORVAIR, F.C. w/gas	1116990	**RELAY ASSY.**, heater and defroster fuel circuit breaker—(13.095)	1
60-65	CORVAIR, F.C.	3148070	**SLEEVE**, spark plug	1
61-64	GREENBRIER w/gas	3151457	**VALVE ASSY.**, heater safety (Note 4)—(3.164)	1
	NOTE 4 I.C.C. approved.			
60-65	CORVAIR, F.C.	3147599	**WASHER**, spark plug	1
60-65	CORVAIR, F.C.	3146145	**WIRE ASSY.**, spark plug	1

8.845 HEATER INSTALLATION UNIT—wSdefroster —COVER—GASKET—TEE,

62-64	CORVAIR	3834296		1
63-65	F.C. w/gas (exc. GREENBRIER)	3881556	less exhaust pipe (Note 1)	1
	NOTE 1 On complete installations use exhaust pipe 3776884.			
65-67	CORVAIR	3870291		1
61-65	CORVAIR, F.C. w/gas,			
66-69	CORVAIR (exc. HEATER)	3787443	**COVER**, engine upper shroud air hose conn. hole	1
65-66	CORSA, (exc. heater),			
66-69	MONZA	3859246	**COVER**, instr. panel heater control hole	1
61-65	F.C. w/air	3786099	**COVER ASSY.**, heater hole	1
61-65	CORVAIR, F.C. w/gas	3150977	**GASKET**, heater to dash	1
61	CORVAIR w/gas	3787364	**TEE**, overflow pipe to fuel pump feed	1

8.849 CONTROL ASSY., Heater

60-65	CORVAIR, F.C. w/gas	3779181		1
61-64	CORVAIR, F.C. w/air,			
65	F.C. w/air	3834295		1
65-69	CORVAIR (exc. C.A.C.)	3010381		1
65-67	CORVAIR w/C.A.C.	3010382		1

8.852 SWITCH ASSY and PARTS, Heater

NOTE. See group 9.786 for vacuum valve details and part numbers.

60-61	CORVAIR w/gas	3784896	control	1
61-65	F.C. w/gas	3777691	blower	1
61-64	CORVAIR, F.C. w/air	3837971	blower	1
65-67	CORVAIR (exc. C.A.C.),			
68-69	CORVAIR	3854799	heater blower	1
65-67	CORVAIR w/C.A.C.	3902291	blower	1
65-69	CORVAIR	3009936	**ARM ASSY.**, w/guide, defr. and heat lever	2
65-67	CORVAIR w/C.A.C.	3009943	**ARM ASSY.**, w/guide, defr., heat, air	3
65-67	CORVAIR w/C.A.C.	3009946	**ARM ASSY.**, w/guide, control lever-cool	1
	NOTE 1 Use 7295955 knob with this assy.			
64-68	CORVAIR	3843466	**BUSHING**, control switch lever	1
61-63	CORVAIR, F.C. w/air	3158728	**CLAMP**, control cable—(9.787)	A.R.
64	CORVAIR (exc. CONV.), F.C.	3838037	**CLAMP**, air distributor	1
61-62	CORVAIR w/air	3138069	**CLIP**, blower switch knob to blower switch lever	1
61-63	CORVAIR, F.C.	3796310	**CLIP**, control knob retainer	1
61-64	CORVAIR, F.C.,			
65	F.C. w/air	3832816	**COVER**, control light housing	1
61-65	CORVAIR, F.C. w/air	3151246	**GUIDE**, control lever	3
65-69	CORVAIR	3003910	**GUIDE**, w/knob, fan lever	1
65-69	CORVAIR	3003846	**GUIDE**, control lever	A.R.
65-67	CORVAIR w/C.A.C.	3003904	**INSERT**, face plate plastic ($2^{3}/_{4}$ x $^{1}/_{2}$)	1
65-69	CORVAIR	3003842	**INSERT**, face plate plastic ($2^{3}/_{4}$ x $^{1}/_{2}$)	1
61-65	CORVAIR, F.C. w/air	3151175	**KNOB**, defroster control	1
61-65	CORVAIR, F.C. w/air	3151173	**KNOB**, temperature control	1
61-65	CORVAIR, F.C. w/air	3151174	**KNOB**, shut-off valve control	1
65-69	CORVAIR	3003839	**KNOB**, control lever fan	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-69	CORVAIR	3003870	**KNOB,** defr. control	1
65-69	CORVAIR	3003871	**KNOB,** heat control	1
65-67	CORVAIR w/C.A.C.	3857121	**KNOB,** blower switch	1
65-67	CORVAIR w/C.A.C.	3003869	**KNOB,** air cond.-cool (COOL)	1
65-66	CORVAIR w/C.A.C.	3003868	**KNOB,** air cond. (AIR)	1
61-64	CORVAIR, F.C. w/air	3832818	**LENS,** control light	1
61-65	CORVAIR, F.C. w/air	3148125	**LEVER,** control shaft	1
61-65	CORVAIR, F.C. w/air	3158833	**LEVER ASSY.,** defroster w/guide	1
61-65	CORVAIR, F.C. w/air	3158831	**LEVER ASSY.,** air control w/guide	1
61-65	CORVAIR, F.C. w/air	3158832	**LEVER ASSY.,** heat control, w/guide	1
61-66	CORVAIR, F.C.,			
68-69	CORVAIR	3144535	**NUT,** control frame (push on $^{3}/_{16}$"), control lever pivot pin to heater	1
65-67	CORVAIR, F.C.	3150992	**PIN,** heater control lever guide	A.R.
61-65	CORVAIR, F.C. w/air	3155392	**PLATE,** face w/bracket	1
65-66	CORVAIR (1st design)	3003841	**PLATE,** face w/insert, frame	1
66-69	CORVAIR (2nd design)	3009933	**PLATE,** face w/insert arm	1
65-66	CORVAIR w/C.A.C. (1st design)	3003902	**PLATE,** face w/insert, frame	1
66-67	CORVAIR (2nd design)	3009940	**PLATE,** face w/insert, frame	1
61-62	CORVAIR, F.C. w/air	3151202	**RETAINER,** knob	1
65-69	CORVAIR	3003838	**SHAFT,** control lever	1
65-67	CORVAIR w/C.A.C.	3003900	**SHAFT,** control lever	1
66-67	CORVAIR (exc. C.A.C.),			
69	CORVAIR	3885136	**SPRING,** control detent($1^{15}/_{16}$ O.L.)	1
66-67	CORVAIR w/C.A.C.	3902329	**SPRING,** control detent	1
62-65	CORVAIR, F.C.	3830794	**SPRING UNIT,** heater control (Note 1)	1
	NOTE 1 Consists of 1 each spring and screw.			
61-65	F.C.	3781814	**SUPPORT,** control	1

8.854 BRACKET—BUSHING—CASE—GASKET—LEVER—LINK—SEAL—VALVE, Car Heater

66-69	CORVAIR	3873978	air inlet	1
65-68	CORVAIR	3003276	**BUSHING,** div. valve shaft	2
65-68	CORVAIR	3003273	**BUSHING,** temp. valve shaft	1
65-68	CORVAIR	3003889	**BUSHING,** air inlet valve pin	1
65-66	CORVAIR	3003152	**CASE,** inlet lower	1
65	CORVAIR	3003280	**CASE,** inlet w/fittings	1
66-68	CORVAIR	3005795	**CASE,** blower	1
66-69	CORVAIR	3007183	**CASE,** air inlet lower	1
66-68	CORVAIR	3005798	**CASE,** air inlet upper	1
60-65	CORVAIR, F.C. w/gas	3144846	**GASKET,** exhaust case pipe	1
60-65	CORVAIR, F.C. w/gas	3147594	**GASKET,** gasoline burner coil housing	1
61-65	F.C.	3779063	**GASKET,** heater hole cover	1
65-68	CORVAIR	3003275	**LEVER,** w/shaft, air div. valve	1
65-68	CORVAIR	3003270	**LINK,** div. valve	1
65-68	CORVAIR	3003269	**LINK,** temp. valve	1
65-68	CORVAIR	3003278	**SEAL,** inlet blower to case	1
65-68	CORVAIR	3003274	**VALVE,** air diverter	1
65-68	CORVAIR	3003272	**VALVE,** w/shaft, inlet temp.	1

8.855 MOTOR—ADAPTER—CLIP—RESISTOR ASSY., Heater Blower and Ventilator

60-65	CORVAIR, F.C. w/gas	5044411	combustion blower	1
60-65	CORVAIR, F.C. w/gas	5044382	ventilator	1
61-64	CORVAIR, F.C. w/air,			
65-68	CORVAIR (exc. C.A.C.),			
65	F.C. w/air	4914906	deluxe	1
65-67	CORVAIR w/C.A.C.	5044595		1
65-69	CORVAIR	3852891	**ADAPTER,** blower	1
60-64	CORVAIR, F.C.	3138468	**CLIP,** resistor—(9.275)	2
60-69	CORVAIR	3929053	**RESISTOR ASSY.,** blower	1

8.856 COVER ASSY.—BOOT—PLATE—SEAL, Heater Blower Motor

61-65	F.C. w/gas	3829461		1
61-65	F.C. w/gas	3784690	**BOOT**	1
61-64	CORVAIR, F.C.	3143065	**PLATE,** blower mtr. mounting	1
61-64	CORVAIR, F.C. w/air	3157445	**SEAL,** mtr. mounting—(9.216)	1

8.857 FAN ASSY.—BLOWER ASSY.—BRACKET ASSY.—CASE ASSY.—CLAMP—NUT, Heater Defroster

60-65	CORVAIR, F.C. w/gas	3148002	ventilator blower	1
60-65	CORVAIR, F.C. w/gas	3148004	combustion blower	1
61-64	CORVAIR, F.C.	3144684	heater assembly (clock-wise rotation)	1
65-68	CORVAIR	3000067	w/mtg. plate	1
65-67	CORVAIR w/C.A.C.	3144683	(9.216)	1
65	CORVAIR	3866060	**BLOWER ASSY.,** heater w/inlet	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

66-69	CORVAIR	**3870292**	**BLOWER ASSY.,** heater w/inlet	1
61-65	F.C. w/gas	**3829462**	**BRACKET ASSY.,** heater blower	1
60-64	CORVAIR, F.C. w/gas	**3147120**	**CASE ASSY.,** blower half	1
60-65	CORVAIR, F.C. w/gas	**3147122**	**CASE ASSY.,** blower motor and fan half	1
65-68	CORVAIR	**3002357**	**CASE ASSY.,** blower	1
60	CORVAIR	**3134163**	**CLAMP,** control knob and cable—(9.281)	A.R.
60-64	CORVAIR, F.C. w/gas	**3135649**	**CLAMP,** blower hose to blower—(9.211)	1
60-63	CORVAIR, F.C.	**3130055**	**NUT,** fan retaining	1
64-68	CORVAIR	**3130804**	**NUT** (No. 10—32)	A.R.

8.866 HOSE—CAP—NIPPLE—PLUG—STRAP, Heater

60-65	CORVAIR, F.C. w/gas	**3143623**	combustion blower to burner head	1
65-69	CORVAIR	**3864393**	eng. to inlet assy. (3 O.D. x 35 1/2 O.L.)	1
64-69	CORVAIR, F.C.	**1191141**	**CAP,** water pump heater hose pipe—(1.070)	1
66-68	CORVAIR, F.C.	**3849848**	**NIPPLE,** water pump hose (2 25/32" O.L.)	1
60	CORVAIR, F.C.	**9414102**	**PLUG,** for 3/16" tube (3/8"—24 thd.)—(8.963)	1
65-69	CORVAIR	**3870281**	**STRAP,** heater hose	2

8.873 COMPASS UNIT—PLATE, Auto

68-69	CORVAIR	**987457**		1
69	CORVAIR	**3976375**	**PLATE,** mtg.	1

8.890 LAMP, Underhood

69	CORVAIR	**993563**		1

8.891 DISPENSER—CONTAINER, Tissue Litter

68-69	CORVAIR	**987403**		1
66-69	CORVAIR (exc. floor shift)	**986602**	**CONTAINER,** blue (saddle type)	1
66-69	CORVAIR (exc. floor shift)	**986603**	**CONTAINER,** fawn (saddle type)	1
66-69	CORVAIR (exc. floor shift)	**986607**	**CONTAINER,** black (saddle type)	1
66-69	CORVAIR (exc. floor shift)	**986608**	**CONTAINER,** red (saddle type)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 9.000

BODY MOUNTING—

AIR CONDITIONING

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

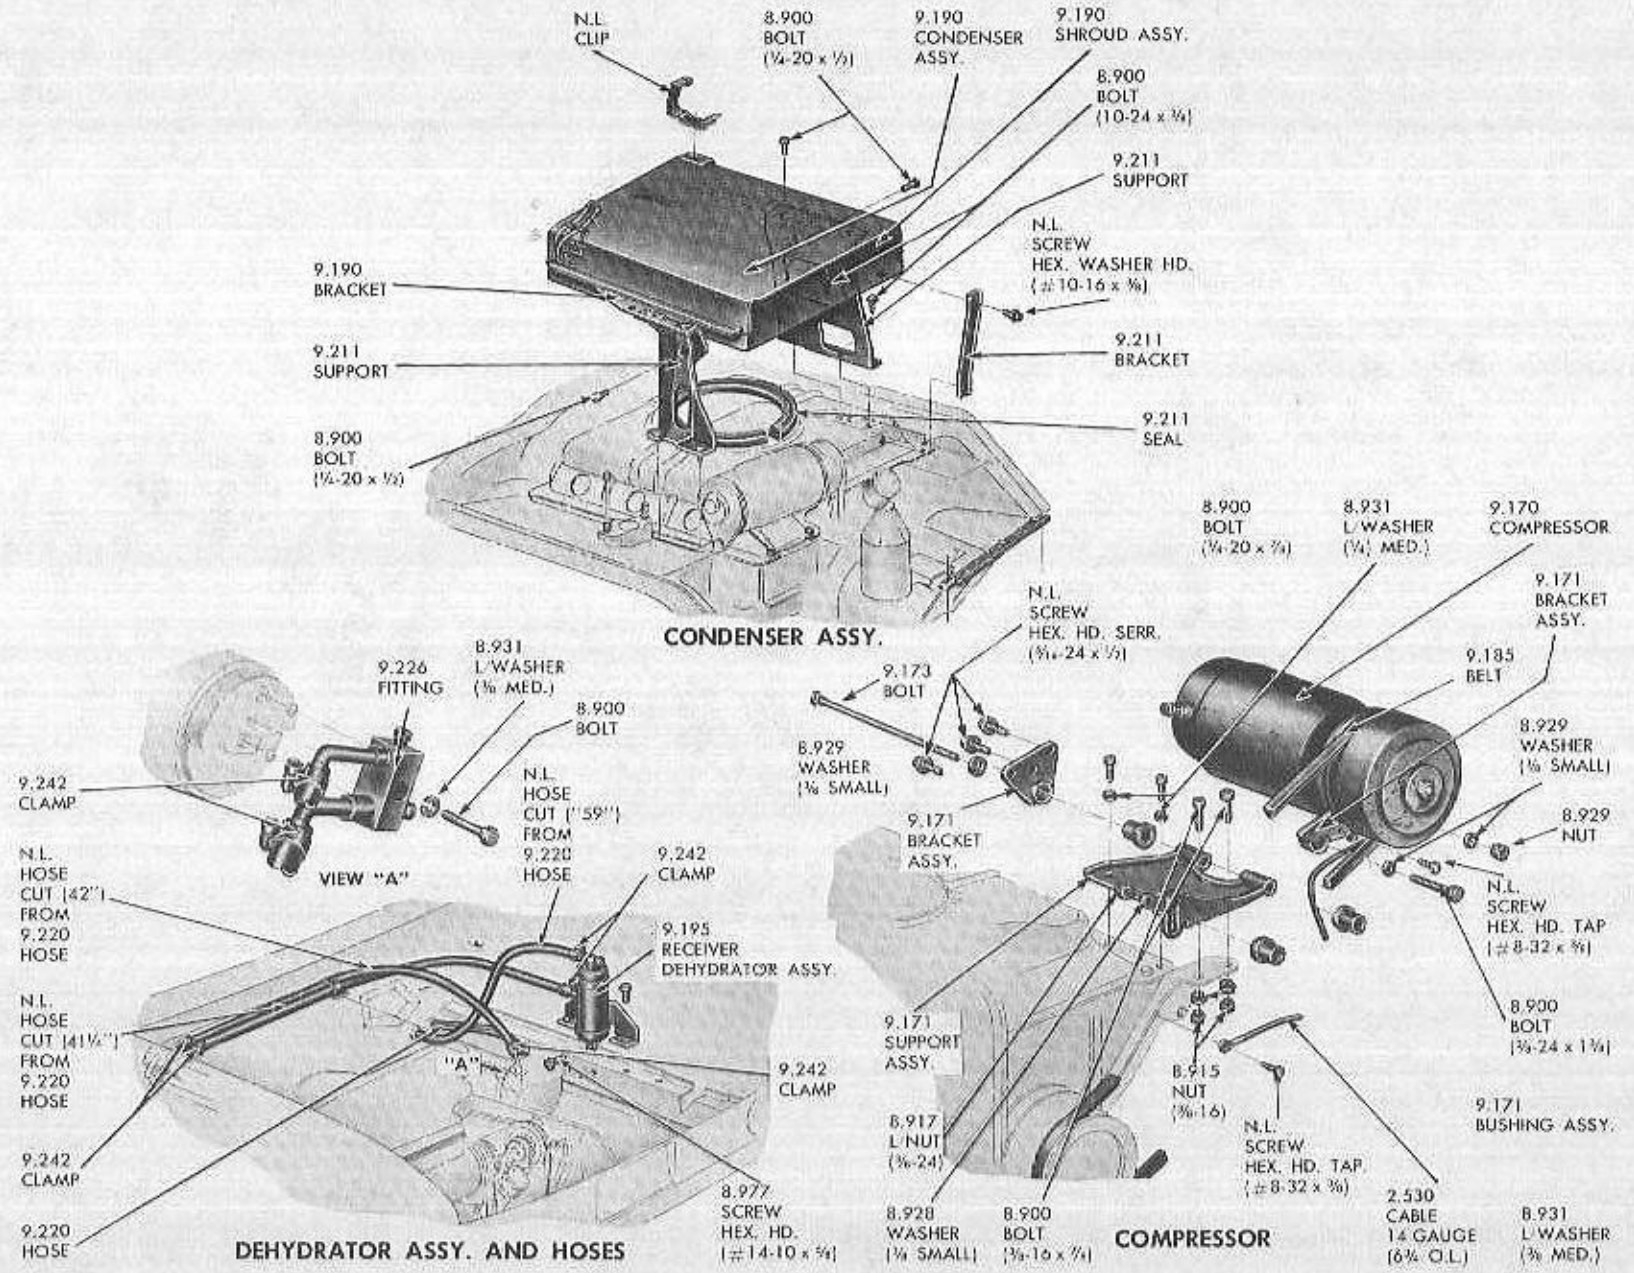

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

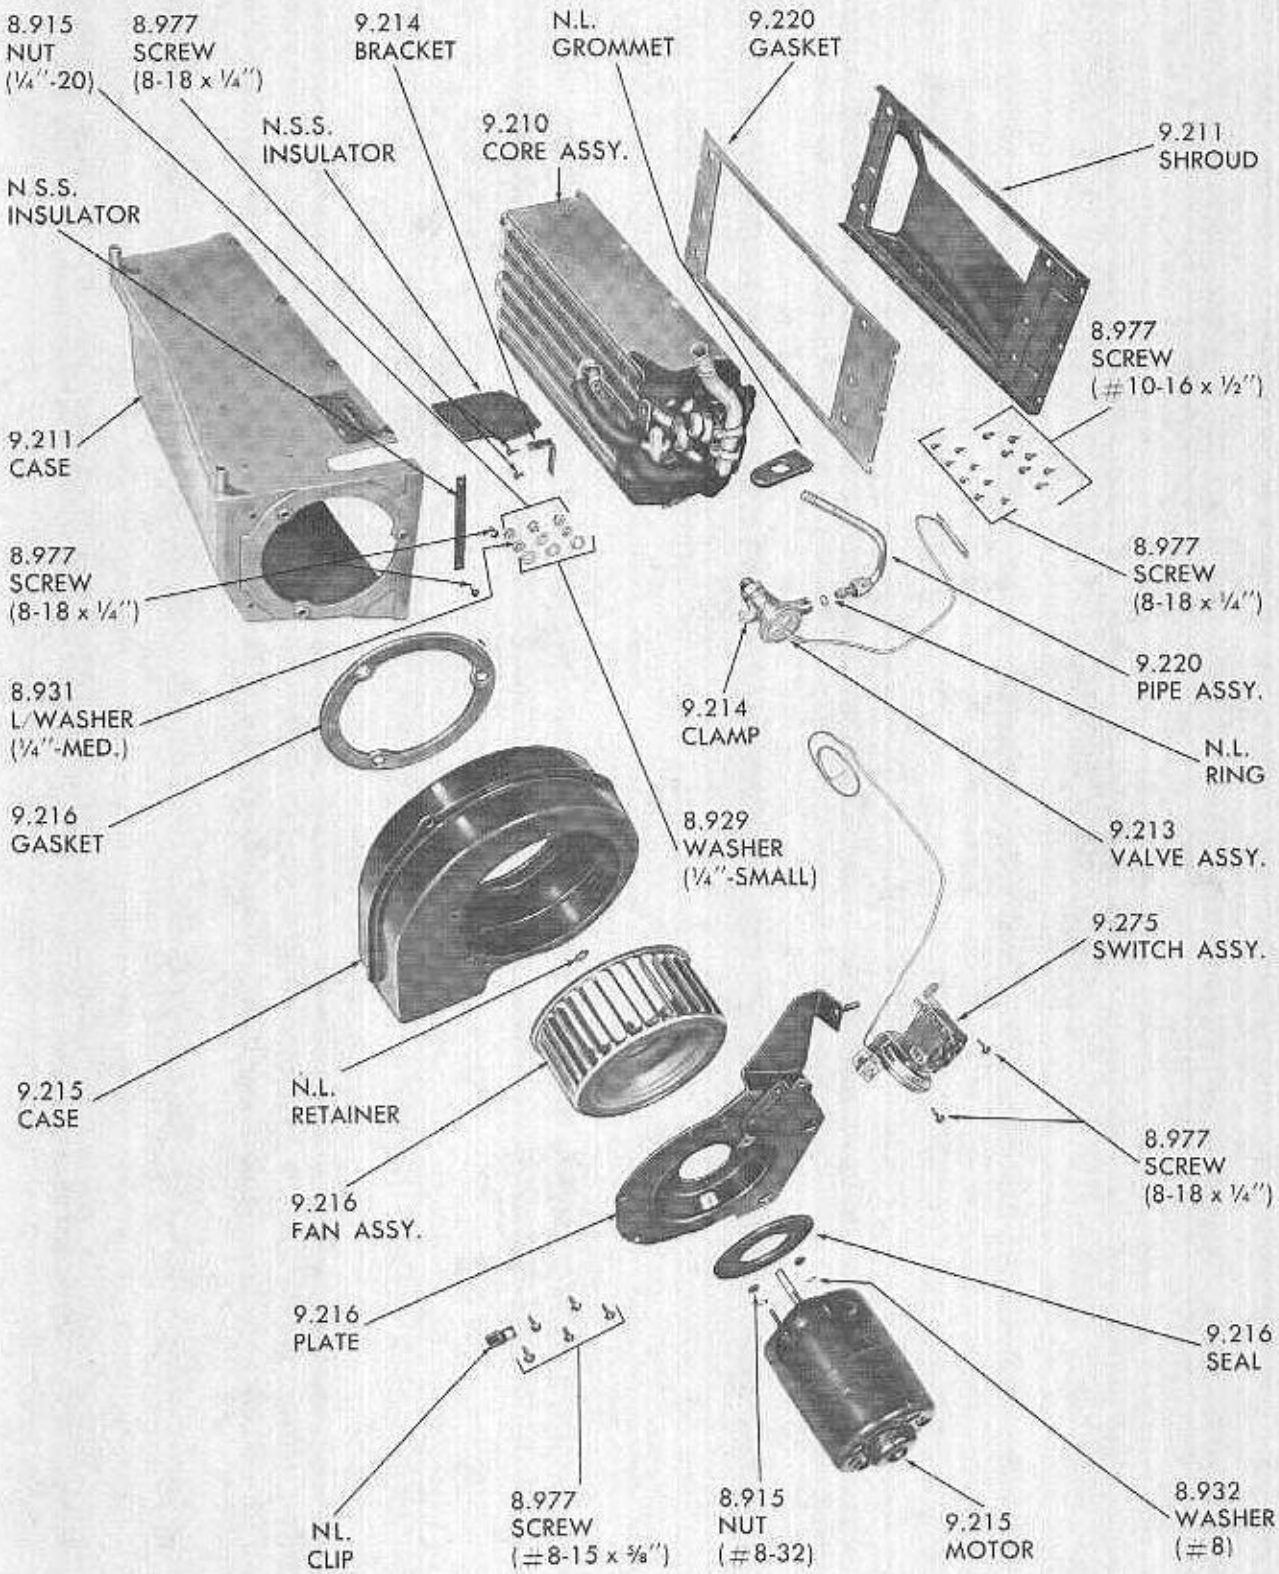

1961-64 CORVAIR AIR CONDITIONING EVAPORATOR AND BLOWER—(EXPLODED)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

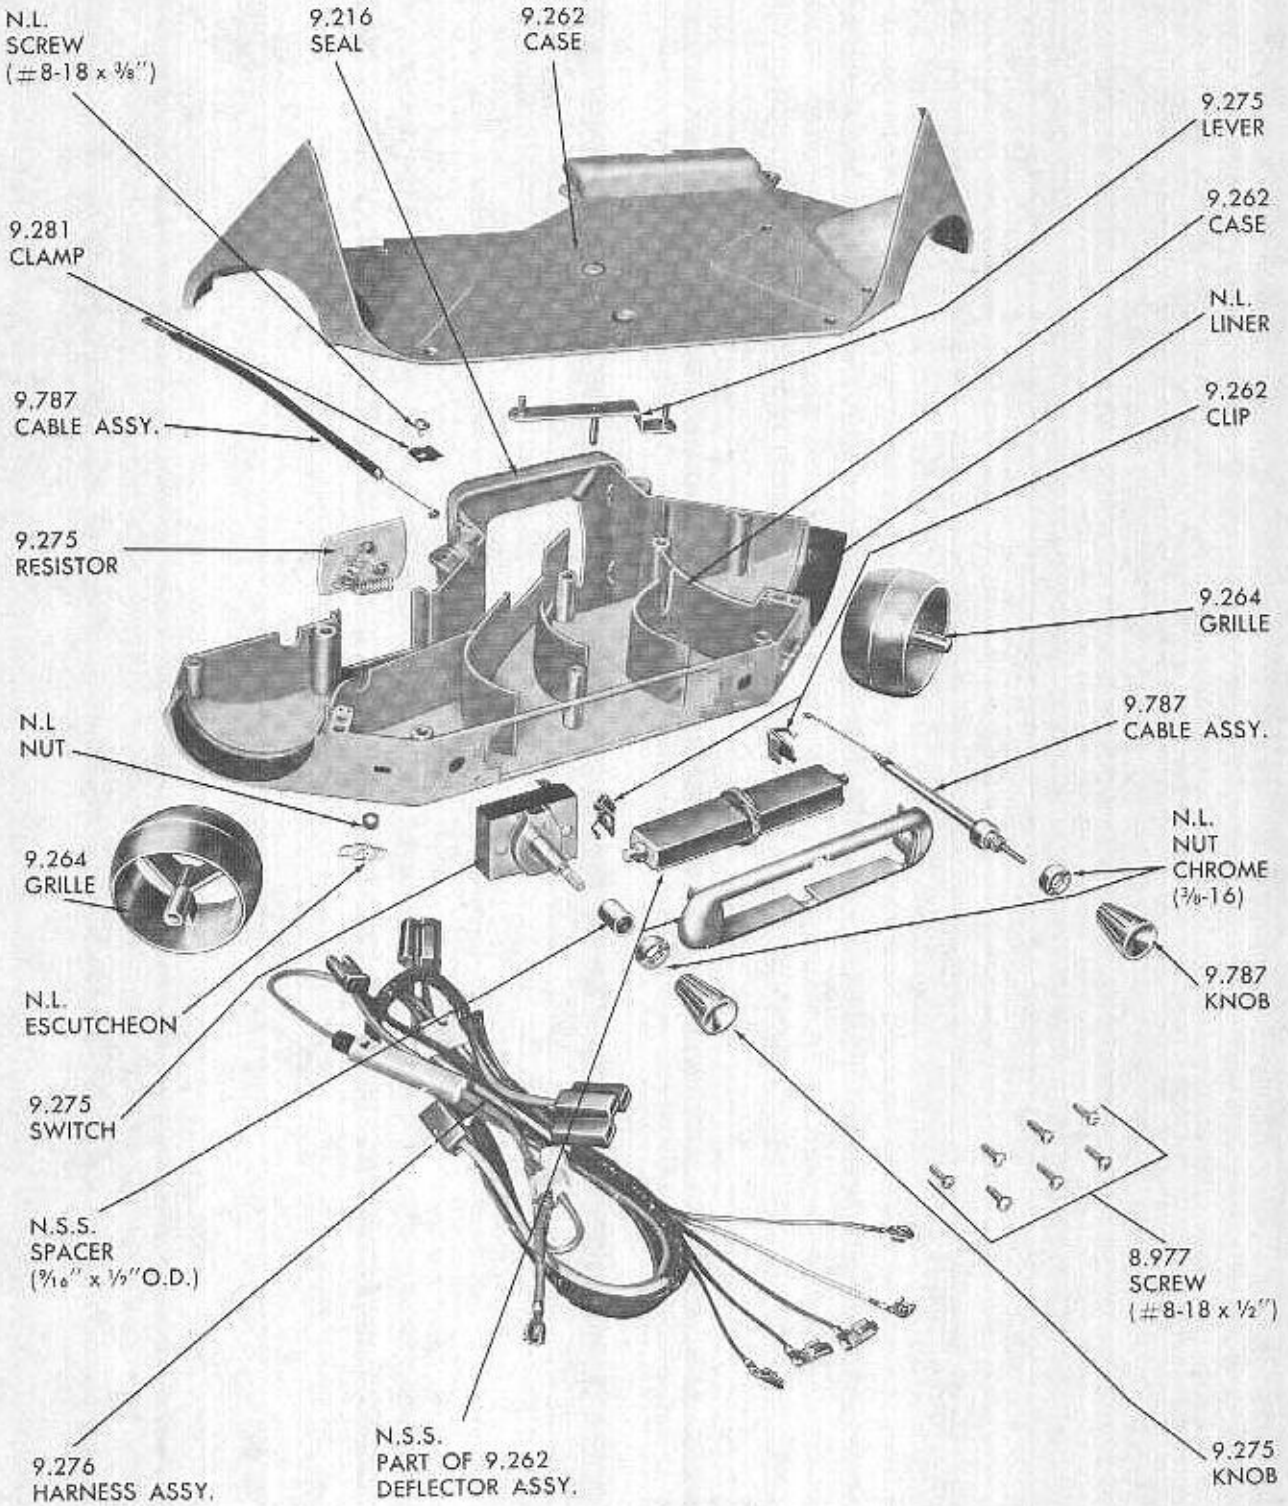

1961-64 CORVAIR AIR CONDITIONING DISTRIBUTOR—(EXPLODED)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

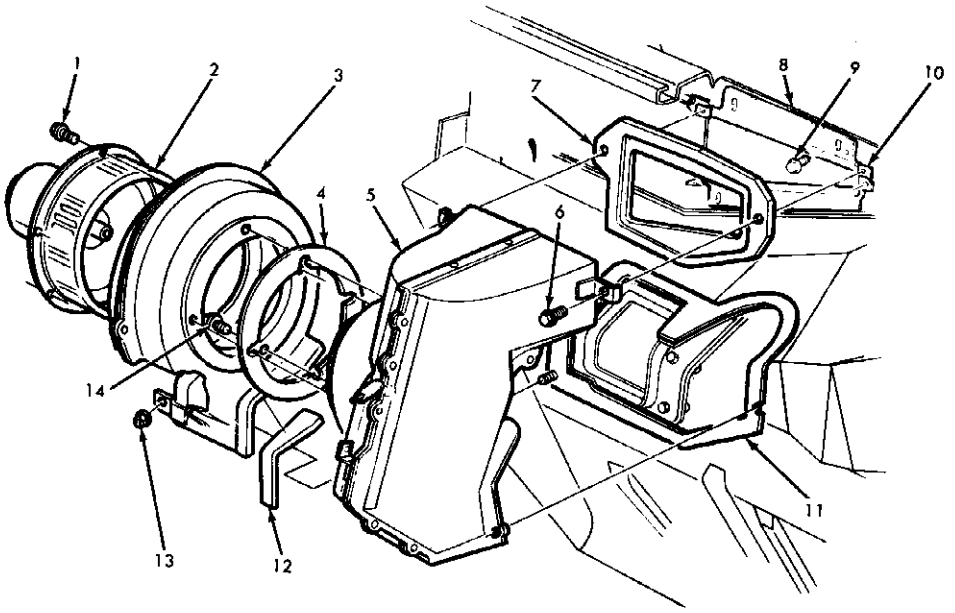

1965-69 CORVAIR AIR COND. BLOWER & AIR INLET

1.	8.977	SCREW (#8–18 x 3/8)	8.	9.784	BAFFLE–UPPER
2.	N.S.	BLOWER MOTOR	9.	8.977	SCREW (#8–18 x 3/8)
3.	9.215	BLOWER CASE ASSY.	10.	8.921	"U" NUT (1/4–14)
4.	9.211	SEAL	11.	9.216	SEAL
5.	9.779	INLET ASSY.	12.	9.216	SEAL
6.	8.977	SCREW	13.	8.921	NUT (1/4–20)
7.	9.218	SCREW	14.	8.977	SCREW (#10–16 x 5/8)

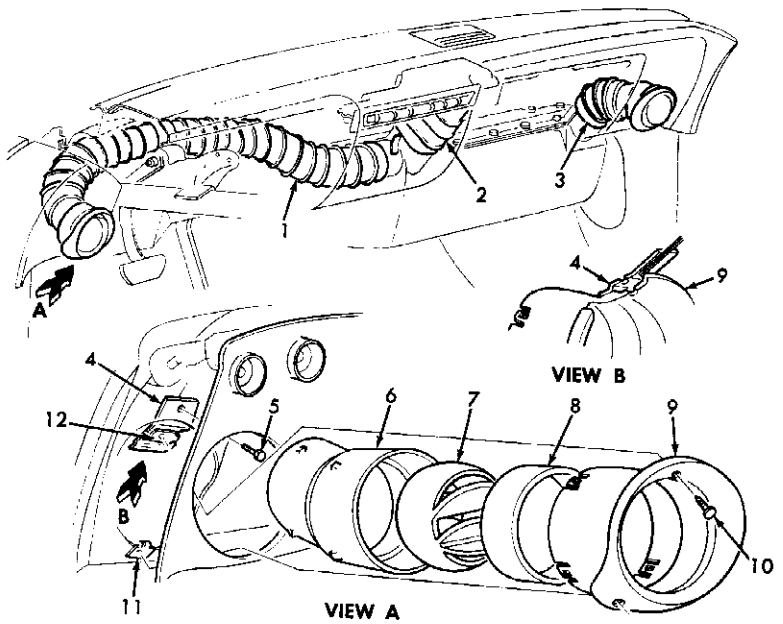

1965-69 CORVAIR A/C SIDE OUTLETS & AIR HOSES

1.	9.260	HOSE–L.H.	7.	9.262	DEFLECTOR
2.	3.417	HOSE–CENTER OUTLET	8.	N.L.	SEAL
3.	9.260	HOSE–R.H.	9.	9.262	BEZEL
4.	9.262	RETAINER	10.	8.977	SCREW (#8–18 x 3/4)
5.	8.977	SCREW (#6–32 x 3/8)	11.	8.921	"J" NUT (#8–15)
6.	9.262	ADAPTER	12.	8.921	"J" NUT (#8–18)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

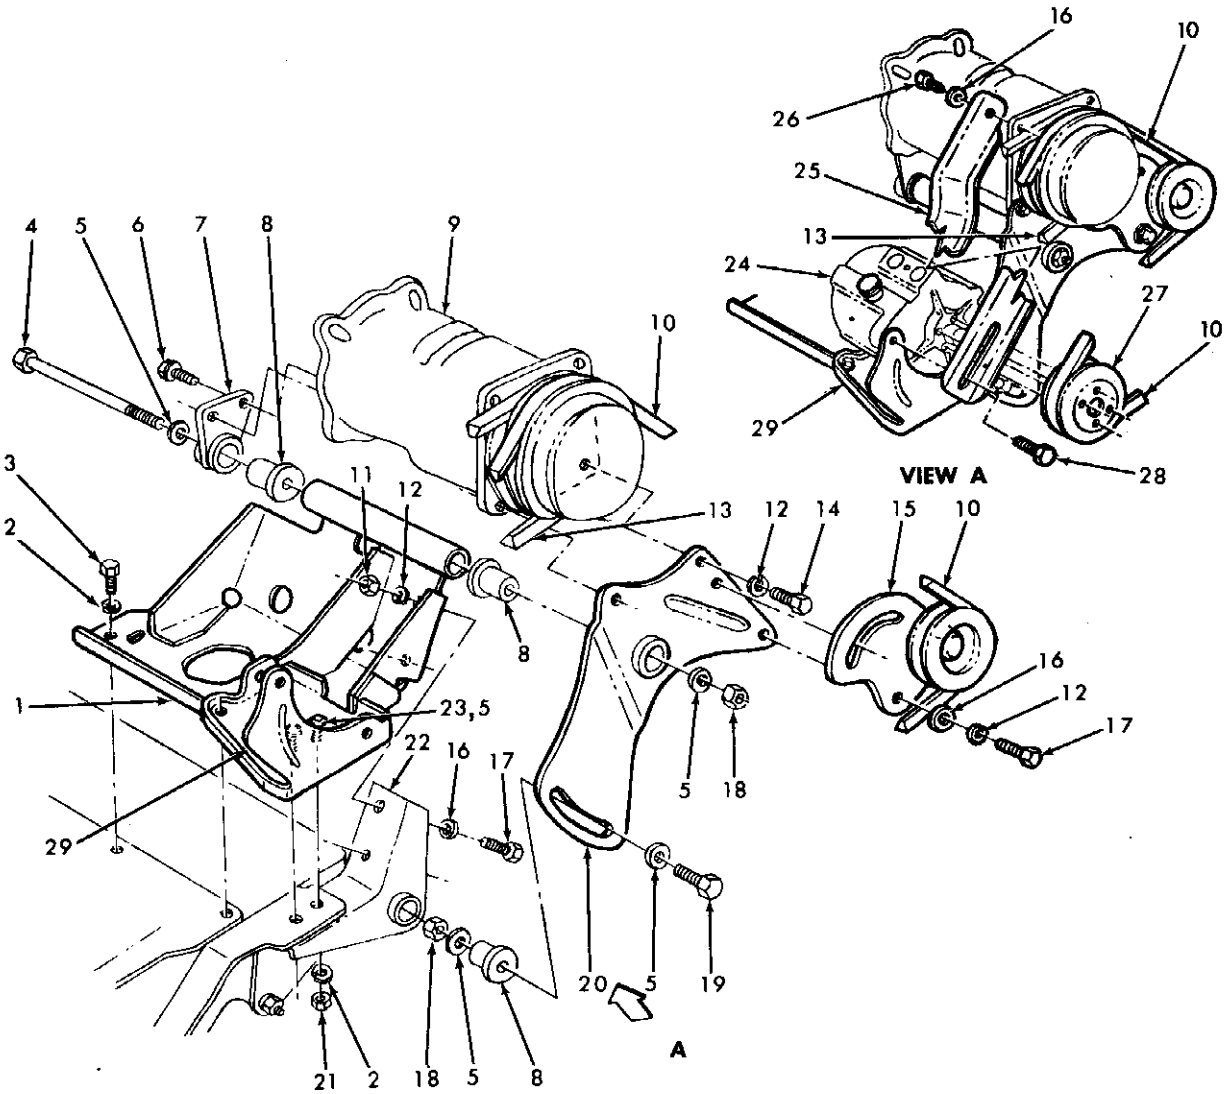

1967-69 CORVAIR AIR COND. COMPRESSOR AND AIR INJECTION REACTOR PUMP MOUNTING

1.	9.171	SUPPORT
2.	8.931	L/WASHER (3/8)
3.	8.900	BOLT (3/8–16 x 1)
4.	9.173	BOLT
5.	8.929	WASHER (13/32)
6.	8.900	BOLT (3/8–16 x 5/8)
7.	9.171	BRACKET ASSY.
8.	9.171	BUSHING
9.	N.S.	COMPRESSOR ASSY.–Component parts serviced
10.	1.066	BELT
11.	8.915	NUT (5/16–18)
12.	8.931	L/WASHER (5/16)
13.	1.066	BELT
14.	8.900	BOLT (5/16–24 x 3/4)
15.	3.650	BRACKET ASSY.–IDLER
16.	8.929	WASHER (11/32)
17.	8.900	BOLT (5/16–18 x 7/8)
18.	8.917	NUT (3/8–16)
19.	8.900	BOLT (3/8–16 x 1-7/8)
20.	9.171	BRACKET ASSY.
21.	8.915	NUT (3/8–16)
22.	9.171	REINFORCEMENT
23.	8.900	BOLT (3/8–16 x 7/8)
24.	3.660	PUMP ASSY.
25.	9.171	BRACE
26.	8.900	BOLT (5/16–24 x 5/8)
27.	3.650	PULLEY ASSY.
28.	8.900	BOLT (3/8–16 x 1-1/2)
29.	9.171	SUPPORT ASSY.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

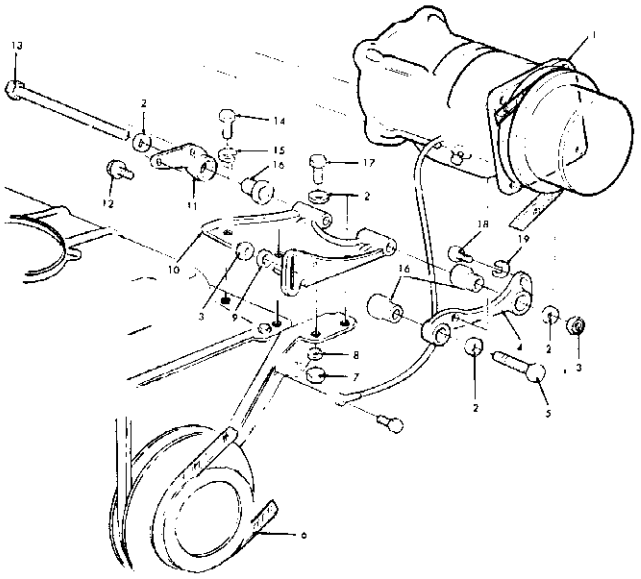

1965-69 CORVAIR AIR COND. COMPRESSOR MOUNTING

1.	N.S.	COMPRESSOR ASSY.	11.	9.171	BRACKET ASSY.
2.	8.929	WASHER (3/8)	12.	8.900	BOLT (3/8–16 x 5/8)
3.	8.917	NUT (3/8–16)	13.	9.173	BOLT (3/8–16 x 9-1/4)
4.	9.171	BRACKET ASSY.	14.	8.900	BOLT (1/4–20 x 3/4)
5.	8.900	BOLT (3/8–16 x 1-7/8)	15.	8.931	L. WASHER (1/4)
6.	9.185	BELT	16.	9.171	BUSHING
7.	8.915	NUT (3/8–16)	17.	8.900	BOLT (3/8–16 x 7/8)
8.	8.931	L. WASHER (3/8)	18.	8.900	BOLT (5/16–24 x 3/4)
9.	8.929	WASHER (1/8 thk.)	19.	8.931	L. WASHER (5/16)
10.	9.171	SUPPORT ASSY.			

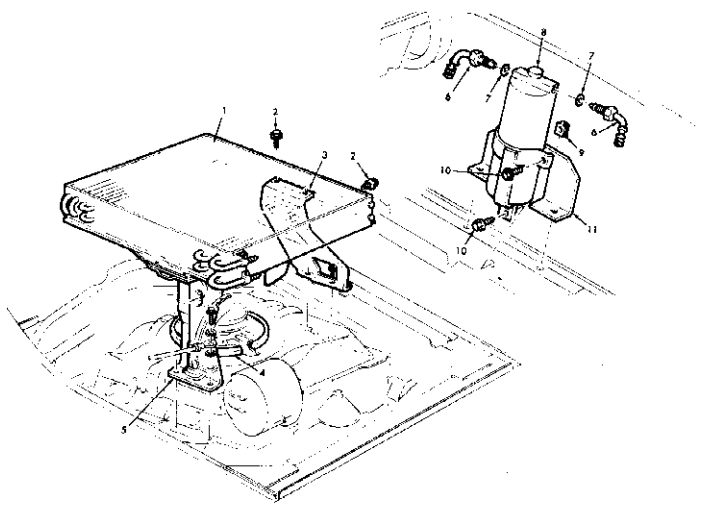

1965-69 CORVAIR A/C CONDENSER, RECEIVER & DEHYDRATOR

1.	N.S.	CONDENSER ASSY.	7.	9.211	"O" RING
2.	8.900	BOLT (1/4–20 x 3/4)	8.	9.195	RECEIVER & DEHYDRATOR ASSY.
3.	9.211	SUPPORT ASSY.–R.H.	9.	8.921	"U" NUT (1/4–14)
4.	9.211	SEAL	10.	8.977	SCREW (1/4–14 x 5/8)
5.	9.211	SUPPORT ASSY.–L.H.	11.	N.L.	BRACKET
6.	9.196	TUBE ASSY.			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

9.007 DAMPENER—SUPPORT ASSY., Body Mounting Vibration

65-69	CORVAIR (CONV.)	3871122	w/bracket, body front	R.H.
65-69	CORVAIR (CONV.)	3871121	w/bracket, body front	L.H.
65-69	CORVAIR (CONV.)	3871120	w/bracket, body rear	1
65-69	CORVAIR (CONV.)	3870138	**SUPPORT ASSY.**, rear dampener	2

9.011 RETAINER ASSY.—PLATE—WASHER, Body Mounting Inner Cushion

60	CORVAIR,			
61-65	F.C.	6257575		4
60	ALL,			
61-65	F.C.	6257775	**PLATE**, retainer (2 O.D. x $^{29}/_{64}$ I.D.)	4
60-69	CORVAIR, F.C.	3859708	**WASHER**, front cushion plate ($^{15}/_{32}$" x $1\,^{7}/_{8}$" x $^{1}/_{8}$")	A.R.

9.023 CUSHION—SEAT—SPACER, Body Mounting

60	CORVAIR,			
61-65	F.C.	6257616	inner	4
62-64	CORVAIR		rear upper,	
60-61	CORVAIR,			
61-65	F.C.	3813643	upper outer	2
60	CORVAIR,			
61-64	F.C.		lower outer,	
61-64	CORVAIR	3856949	lower rear	2
61-64	CORVAIR	3788637	**CUSHION ASSY.**, front, upper	2
61-64	CORVAIR	3795333	**CUSHION ASSY.**, front, lower	2
60-64	CORVAIR, F.C.,			
65	F.C.	6256392	**SEAT**, lwr. outer cushion	2
60	CORVAIR,			
61-65	F.C.,			
60-64	CORVAIR	3832279	**SPACER**, lower outer cushion, rear mtg., rear cushion	2

9.170 COMPRESSOR—BODY ASSY.—SHELL ASSY.—CYLINDER ASSY.—SHAFT ASSY.—NUT KIT—SEAL KIT, Air Conditioning

61	CORVAIR	5910427	less clutch	1
62-66	CORVAIR	5910433	**BODY ASSY.**	1
62-67	CORVAIR	5914808	**SHELL ASSY.**	1
62-67	CORVAIR	5914807	**CYLINDER ASSY.**, w/drive shaft brg.	1
62-67	CORVAIR	5914810	**CYLINDER ASSY.**, w/pistons, wobble plate and shaft	1
62-67	CORVAIR	5914705	**SHAFT ASSY.**, drive w/wobble plate	1
62-67	CORVAIR	6590589	**NUT KIT**, drive shaft and head	1
62-67	CORVAIR	6591956	**SEAL KIT** (Note 1)	1

NOTE 1 Consists of 8 "O" Ring Seals. When using on 1962-63 models formerly requiring Cover Gasket Seal, it is mandatory that cover 6555755 Grp. 9.172 be used in lieu of this cover gasket.

9.171 BRACE—BRACKET ASSY.—SUPPORT—BUSHING—REINFORCEMENT, Air Conditioning

61-67	CORVAIR	3851989	bracket support	1
65-67	CORVAIR (exc. 4/1BC)	3888188	comp. mounting ($11\,^{1}/_{64}$ O.L.)	1
67	CORVAIR (Air Cond. w/A.I.R.)	3909422	comp. mounting	1
62-67	CORVAIR	3828943	**BRACKET ASSY.**, front	1
62-66	CORVAIR	3828942	**BRACKET ASSY.**, rear	1
66	CORVAIR w/4/1BC (exc. A.I.R.)	3883224	**BRACKET ASSY.**, comp. front mtg.	1
66-67	CORVAIR (A.I.R. w/4/1BC)	3883226	**BRACKET ASSY.**, comp. rear mtg.	1
67	CORVAIR (exc. A.I.R.)	3904163	**BRACKET ASSY.**, comp. front	1
61-67	CORVAIR	3878524	**SUPPORT ASSY.**, bracket	1
66	CORVAIR w/4/1BC (exc. A.I.R.)	3883228	**SUPPORT ASSY.**, comp. bracket	1
67	CORVAIR (exc. A.I.R.)	3904161	**SUPPORT ASSY.**, comp. bracket	1
67	CORVAIR (Air Cond. w/A.I.R.)	3899478	**SUPPORT ASSY.**, comp. bracket	1
61-67	CORVAIR	3828944	**BUSHING**, front and rear bracket	A.R.
66	CORVAIR w/Sp. H/Per.	3891536	**REINFORCEMENT**, comp. bracket support, front	1
66	CORVAIR w/Sp. H/Per.	3883230	**REINFORCEMENT**, comp. bracket support, upper rear	1
66	CORVAIR w/Sp. H/Per.	3883231	**REINFORCEMENT**, comp. bracket support, lower rear	1
67	CORVAIR w/A.I.R. (164) (4/1/BC)	3895090	**REINFORCEMENT**, comp. bracket support	1

9.172 PARTS, Air Conditioning Compressor (Internal)

61	CORVAIR	5876853	**GEAR UNIT**, oil pump	1
61-62	CORVAIR	5916242	**WASHER**, wavy type comp.	1
62-65	CORVAIR	6555278	**COVER**, mainfold suction crossover passage	1
65-67	CORVAIR	6555755	**COVER**, manifold suction crossover passage	1
62-67	CORVAIR	6590594	**PUMP UNIT**, oil	1
62-67	CORVAIR	6555299	**SCREEN**, freon inlet	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-67	CORVAIR	6555279	**VALVE,** suction	2
62-67	CORVAIR	5914706	**VALVE PLATE,** front discharge w/valves	1
62-67	CORVAIR	5914709	**VALVE PLATE,** rear discharge w/valves	1
62-67	CORVAIR	6555318	**PISTON** (low compression ratio)	3
62-67	CORVAIR	6555259	**BEARING,** wobble plate thrust	2
62-67	CORVAIR	6555253	**BEARING,** drive shaft	2
62-67	CORVAIR	6590592	**TUBE,** manifold discharge crossover	1
62-67	CORVAIR	6555298	**TUBE,** oil pump suction	1
62-67	CORVAIR	6555440	**SLEEVE,** manifold discharge crossover tube	2
62-67	CORVAIR	6555258	**BALL,** piston drive	6
62-67	CORVAIR	6556000	**RACE,** wobble plate thrust brg. (stamped 0)	A.R.
62-67	CORVAIR	6556060	**RACE,** wobble plate thrust brg. (stamped 6)	A.R.
62-67	CORVAIR	6556065	**RACE,** wobble plate thrust brg. (stamped 6.5)	A.R.
62-67	CORVAIR	6556070	**RACE,** wobble plate thrust brg. (stamped 7)	A.R.
62-67	CORVAIR	6556075	**RACE,** wobble plate thrust brg. (stamped 7.5)	A.R.
62-67	CORVAIR	6556080	**RACE,** wobble plate thrust brg. (stamped 8)	A.R.
62-67	CORVAIR	6556085	**RACE,** wobble plate thrust brg. (stamped 8.5)	A.R.
62-67	CORVAIR	6556090	**RACE,** wobble plate thrust brg. (stamped 9)	A.R.
62-67	CORVAIR	6556095	**RACE,** wobble plate thrust brg. (stamped 9.5)	A.R.
62-67	CORVAIR	6556100	**RACE,** wobble plate thrust brg. (stamped 10)	A.R.
62-67	CORVAIR	6556105	**RACE,** wobble plate thrust brg. (stamped 10.5)	A.R.
62-67	CORVAIR	6556110	**RACE,** wobble plate thrust brg. (stamped 11)	A.R.
62-67	CORVAIR	6556115	**RACE,** wobble plate thrust brg. (stamped 11.5)	A.R.
62-67	CORVAIR	6556120	**RACE,** wobble plate thrust brg. (stamped 12)	A.R.
63-67	CORVAIR	6556055	**RACE,** wobble plate thrust brg. (stamped 5.5)	A.R.
64-67	CORVAIR	6556050	**RACE,** wobble plate thrust brg. (stamped 5)	A.R.
62-67	CORVAIR	6557000	**SEAT,** piston drive ball (stamped 9)	A.R.
62-67	CORVAIR	6556175	**SEAT,** piston drive ball (stamped 17.5)	A.R.
62-67	CORVAIR	6556180	**SEAT,** piston drive ball (stamped 18)	A.R.
62-67	CORVAIR	6556185	**SEAT,** piston drive ball (stamped 18.5)	A.R.
62-67	CORVAIR	6556190	**SEAT,** piston drive ball (stamped 19)	A.R.
62-67	CORVAIR	6556195	**SEAT,** piston drive ball (stamped 19.5)	A.R.
62-67	CORVAIR	6556200	**SEAT,** piston drive ball (stamped 20)	A.R.
62-67	CORVAIR	6556205	**SEAT,** piston drive ball (stamped 20.5)	A.R.
62-67	CORVAIR	6556210	**SEAT,** piston drive ball (stamped 21)	A.R.
62-67	CORVAIR	6556215	**SEAT,** piston drive ball (stamped 21.5)	A.R.
63-67	CORVAIR	6556220	**SEAT,** piston drive ball (stamped 22)	A.R.
62-67	CORVAIR	6555254	**RING,** piston	6
64-67	CORVAIR	5929144	**SEAL,** oil inlet tube	1

9.173 BOLT, Air Conditioning, Compressor Mounting Attaching Parts

61-64	CORVAIR	3794212	compressor to support ($^{3}/_{8}$—16 x 9 $^{1}/_{4}$)	1

9.174 HEAD, Air Conditioning Compressor

62-67	CORVAIR	6555283	front	1
62-66	CORVAIR	6555337	rear (reverse rotation)	1
65-67	CORVAIR	6555302	rear	1

9.175 PIN—RING—SEAL—SPACER, Air Conditioning Compressor Shaft —HOUSING—SHIM UNIT—

61-62	CORVAIR	5918307	oil seal seat ($^{7}/_{32}$ long)	1
61-62	CORVAIR	6554659	**RING,** retainer	1
62-67	CORVAIR	6555330	**RING,** coil hsg. retainer	1
62-67	CORVAIR	6555328	**RING,** drive shaft drive hub retaining	1
62-67	CORVAIR	6555292	**RING,** drive shaft seal	1
61-62	CORVAIR	5918315	**SEAL,** "O" ring, coil housing seat	1
61-62	CORVAIR	5876740	**SEAL UNIT** (Note 1)	1

NOTE 1. This unit consists of 1 pin, 2 rings, 2 "O" ring seals, 1 shaft seal, 1 oil drain hole seal and 1 seat seal.

62-69	CORVAIR	6597840	**SEAL UNIT** (Note 2)	1

NOTE 2 This unit consists of 1 seal "O" ring, 1 seat seal, 1 ring retainer, 1 retainer seal, 1 seal sleeve.

61-62	CORVAIR	6555188	**HOUSING,** coil	1
62-67	CORVAIR	5914710	**HOUSING,** w/coil—(9.186)	1
61	CORVAIR	5876742	**SHIM UNIT,** clutch mtg. to body	1
61-62	CORVAIR	5918459	**SPACER,** seal (3/32 thick) (Note 4)	1

NOTE 4 Selective fit.

9.177 GASKET—SCREW, Air Conditioning Compressor Oil Test

61-67	CORVAIR	5858696	oil fitting	1
62-67	CORVAIR	6555386	**SCREW,** oil drain hole ($^{5}/_{8}$"—24 x $^{21}/_{32}$" N.F.—2)	1

9.178 VALVE ASSY.—GASKET—PIN, Air Conditioning Compressor Pressure Relief

61-67	CORVAIR	5914435	(440 lbs.)	1
61-67	CORVAIR	640044	**GASKET,** valve	1
62-64	CORVAIR	274795	**PIN,** head locator—(8.939)	1
62-67	CORVAIR	6590686	**PIN,** cylinder locator	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

9.180 PULLEY, Air Conditioning Compressor Drive

62-66	CORVAIR	5914860	w/bearing	1
65-66	CORVAIR	5914745	w/bearing	1
67	CORVAIR	6550730	w/bearing	1

9.181 BEARING—RING—SPACER—WASHER—NUT, Air Conditioning Compressor Pulley

61-62	CORVAIR	906952	(ND stamped 995204B)	1
62-67	CORVAIR	907257	(ND stamped 907257)	1
61-62	CORVAIR	6554983	**RING,** comp. shaft bearing snap	1
62-67	CORVAIR	6555338	**RING,** brg. to pulley hub retaining	1
62-67	CORVAIR	6555329	**RING,** pulley bearing to hd. ret.	1
62-67	CORVAIR	6555384	**SPACER,** drive shaft nut to hub	1
61-62	CORVAIR	5918358	**WASHER,** mounting lock (4 tangs)	1
61-62	CORVAIR	639795	**NUT,** mounting	1
62-67	CORVAIR	6555385	**NUT,** drive shaft	1
62-67	CORVAIR	6590589	**NUT KIT,** drive shaft and head—(9.170)	1

9.185 BELT, Air Conditioning Compressor Drive

64-65	CORVAIR,			
66	CORVAIR (1st design) (exc. Sp. H/Per.)	3845653	(15 1/32"—47 1/4")—(1.066)	1
66	CORVAIR w/Sp. H/Per.	3848254	(15 1/32" x 58")—(1.066)	1
66	CORVAIR (2nd design) (exc. Sp. H/Per.)	3889376	(15 1/32"—45 3/4")—(1.066)	1

9.186 COIL—GASKET, Air Conditioning Compressor Clutch Actuating

61-62	CORVAIR	5912343		1
62-67	CORVAIR	5914710	w/housing	1
61-62	CORVAIR	6555089	**GASKET,** compressor coil insulator (inner)	1
61-62	CORVAIR	5918107	**GASKET,** compressor coil insulatro (outer)	1

9.188 PLATE—KEY, Air Conditioning Compressor Clutch Actuating

61-62	CORVAIR	5914663	magnetic clutch rotor	1
62-66	CORVAIR	5914719	w/hub	1
67	CORVAIR	5914720	w/hub	1
62-67	CORVAIR	6555320	**KEY,** drive hub to drive shaft	1

9.190 CONDENSER ASSY.—BRACKET—SHROUD ASSY.—NUT, Air Conditioning Refrigerant

61-64	CORVAIR	3152200		1
65	CORVAIR w/Prod. Air Cond.	3005220		1
66-67	CORVAIR	3878581		1
61-65	CORVAIR	3152468	**BRACKET,** condenser mtg. support	2
65-66	CORVAIR	3002490	**BRACKET,** tube support	1
61-62	CORVAIR (exc. STA. WAG.),			
63-64	CORVAIR,			
65	CORVAIR w/Prod. Air Cond.	3157859	**SHROUD ASSY.,** condenser	1
65	CORVAIR	3869588	**SHROUD ASSY.,** condenser upper	1
65-67	CORVAIR	3844999	**NUT,** A/C evap. ranco control switch—(1.303)	A.R.

9.195 RECEIVER ASSY., Air Conditioning with Dehydrator

61-64	CORVAIR	3152309		1
65-67	CORVAIR	3155342		1

9.196 TUBE, Air Conditioning Refrigerant

65-67	CORVAIR	3792317	receiver dehydrator outlet	1
66-67	CORVAIR w/Air Cond.	3841356	receiver and dehydrator outlet	1

9.198 TEE , Air Conditioning, Evaporator By-Pass

Not required in this group.
See group 1.745, 3.278, 3.820, 4.931 3794176

9.202 SIGHT GLASS, Air Conditioning Freon Inspection

60-69	CORVAIR, F.C.	3149478	repair kit (Note 1)	1

NOTE 1 Consists of sight glass, retainer, "O" ring, washer and instructions.

9.210 CORE ASSY., Air Conditioning Evaporator

61-64	CORVAIR	3153067	w/pipe	1
65-66	CORVAIR w/Acc. Air Cond.	3000026	w/fittings	1
65-67	CORVAIR w/Prod. Air Cond.	3003829		1

9.211 BRACKET and PARTS, Air Conditioning Evaporator Core Housing

61-64	CORVAIR	3152306		R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-64	CORVAIR	3152307		L.H.
65-66	CORVAIR w/Acc. Air Cond.	3159639	tube support	1
65-66	CORVAIR w/Prod. Air Cond.	3003038	w/bolt, evap. (painted)	1
65-67	CORVAIR w/Prod. Air Cond.	3003252	evap. outlet tube supt. (painted)	1
65-67	CORVAIR w/Prod. Air Cond.	3004623	evap. core mtg. R.H. (painted)	1
61-64	CORVAIR	3154486	**CASE**	1
65-67	CORVAIR	3003033	**CASE,** evap. core	1
65-66	CORVAIR w/Acc. Air Cond.	3003511	**CASE,** evap. inlet	1
65	CORVAIR w/Acc. Air Cond.	3003512	**CASE,** evap. outlet	1
65-67	CORVAIR	3003031	**COVER,** evap. case	1
61-64	CORVAIR	3152155	**GASKET,** core	1
61-64	CORVAIR	8526398	**GASKET,** exp. valve inlet and outlet pipe	A.R.
65-66	CORVAIR w/Acc. Air Cond.	3159594	**GASKET,** evap. case	1
61-64	CORVAIR	3154485	**SHROUD** (Note 1)	1
	NOTE 1 It may be necessary to paint to match.			
61-65	CORVAIR (exc. STA. WAG.)	3875864	**SUPPORT,** shroud	1
61-65	CORVAIR	3864172	**SUPPORT,** condenser shroud	L.H.
61-65	CORVAIR	3798176	**SEAL,** shroud to engine, condenser	1
65-67	CORVAIR	3018180	**SEAL,** top evaporator core, evaporator core cover	1
65-67	CORVAIR	3003029	**SEAL,** evap. case	1
65-67	CORVAIR	3857099	**SEAL,** air inlet to blower	1
66-67	CORVAIR w/C.A.C.	3880750	**SEAL,** condenser	1
61-64	CORVAIR	3143794	**TUBE,** evap. drain	2
61-64	CORVAIR	3825969	**PIPE,** drain	L.H.
61-64	CORVAIR	3805210	**WASHER,** evap. attaching ($^{9}/_{32}$)	A.R.
ALL	ALL	3870336	**HOSE,** drain ($^{7}/_{16}$" I.D.) (10 ft. roll) (8.962)	A.R.
65-66	ALL (exc. F.C.)	3003160	**GROMMET,** evap. inlet and outlet tube	1
65-66	CORVAIR w/Acc. Air Cond.	3159635	**PLATE,** evap. mtg. w/studs, rear	2
65	CORVAIR w/Acc. Air Cond.	3159782	**PLATE,** evap. mtg. w/studs, front	1
65-66	CORVAIR (exc. F.C.)	3002690	**PLATE,** w/stud evap. mtg. rear	1
65-66	CORVAIR	3003039	**PLATE,** evap. core mtg.	1
65-67	CORVAIR	8530980	**CLAMP,** evap. outlet tube mtg.	1
64	CORVAIR w/Custom	3152239	**NUT,** shroud to evap. core (No. 10-20)	2

9.213 VALVE ASSY., Air Conditioning Evaporator Expansion

61-66	CORVAIR w/CUSTOM (exc. DELUXE)	6550121	thermostatic expansion	1
67	CORVAIR w/Acc. Air Cond.	5910637	therm. exp.	1

9.214 SCREEN ASSY.—CLAMP, Air Conditioning Evaporator Expansion Valve

61-62	CORVAIR	5914631	filter	1
61-67	CORVAIR	3017086	**CLAMP,** thermo	1
61-67	CORVAIR	3147034	**CLAMP,** valve capillary tube bulb	A.R.

9.215 MOTOR ASSY.—BLOWER ASSY.—CASE ASSY., Air Conditioning Evaporator Blower

61-64	CORVAIR	5044485		1
65	CORVAIR w/Acc. Air Cond.	5044576		1
65	CORVAIR w/Acc. Air Cond.	3859090	**BLOWER ASSY.,** air cond.	1
61-64	CORVAIR	3154281	**CASE ASSY.**	1
65	CORVAIR w/Acc. Air Cond.	3002615	**CASE ASSY.,** w/bracket	1
65-67	CORVAIR	3002573	**CASE ASSY.**	1

9.216 FAN ASSY.—PLATE—SEAL—GASKET—WASHER, Air Conditioning Evaporator Blower Motor

61-67	CORVAIR	3144684	(8.857)	1
65	CORVAIR w/Acc. Air Cond.	3152561		1
65-67	CORVAIR w/Custom Air Cond.	3144683		1
64	CORVAIR	3154460	**PLATE,** mtg. w/brackets	1
65-67	CORVAIR w/C.A.C.	3143562	**PLATE,** mtg.	1
65	CORVAIR w/Acc. Air Cond.	3157046	**PLATE,** mtg.	1
61-62 63-64	CORVAIR, CORVAIR w/Custom (exc. Deluxe)	3154457	**SEAL,** air inlet	1
65-67	CORVAIR	3857177	**SEAL,** air inlet to dash	1
65-67	CORVAIR w/Prod. Air Cond.	3857408	**SEAL,** air inlet to blower, lwr.	1
61-64	CORVAIR	3152149	**GASKET,** blower mtg.	1
65	CORVAIR w/Acc. Air Cond.	3150153	**GASKET**	1
61-67	CORVAIR w/C.A.C.	3157446	**GASKET,** blower motor	1
62	CORVAIR	3688003	**WASHER,** evap. mtg. ($^{5}/_{16}$" I.D. x 1 $^{1}/_{4}$" O.D. x $^{3}/_{32}$" thick)—(8.143)	A.R.

9.218 TUBE—SEAL—BAFFLE, Air Conditioning Air Inlet

65	CORVAIR w/Acc. Air Cond.	3159693	motor cooling	1
65-67	CORVAIR	3857176	**SEAL,** air inlet to plenum	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

65-67	CORVAIR	3003028	**SEAL,** evap. inlet tube	1
65-66	CORVAIR	3003034	**BAFFLE,** evap. inlet (painted black)	1

9.220 HOSE—CONNECTOR—PIPE ASSY.—SLEEVE—TUBE—CLAMP, Air Conditioning

65-67	CORVAIR	3858414	evap. drain	1
60-69	CORVAIR	3830948	comp. to condenser (1/2" I.D. x 1" O.D.) (Note 1)	A.R.
60-69	CORVAIR	3830952	evaporator to compressor (5/8" I.D.) (Note 1)	A.R.
60-69	CORVAIR	3830950	receiver and dehydrator to evap. (13/32" I.D.) (Note 1)	A.R.
	NOTE 1 Sold in 10" rolls.			
60-69	CORVAIR	3960197	**CONNECTOR ASSY.,** w/Schrader valve (Parker Hannifin 5-1568-1) (1/2" O.D.) (Note 2)	1
	NOTE 2 Used as refrigerant in-line Schrader valve connector.			
60-69	CORVAIR	3875829	**CONNECTOR** (3/4" O.D. x 3 1/4" O.L.) (Note 3)	1
60-69	CORVAIR	3875830	**CONNECTOR** (1/2" O.D. x 3 1/4" O.L.) (Note 3)	1
60-69	CORVAIR	3875831	**CONNECTOR** (5/8" O.D. x 3 1/4" O.L.) (Note 3)	1
	NOTE 3 To be used with 2-3909030 clamps.			
61-64	CORVAIR	3152162	**PIPE ASSY.,** evap. therm. exp. valve	1
61-64	CORVAIR	3814100	**PIPE ASSY.,** evap. to compressor, rear	1
61-64	CORVAIR	3798540	**PIPE ASSY.,** evap. to dehydrator	1
63-64	CORVAIR (exc. CONV.)	3841727	**PIPE ASSY.,** evap. to comp. frt.	1
63-64	CORVAIR (CONV.)	3850627	**PIPE ASSY.,** evap. to comp. frt.	1
65 67	CORVAIR, CORVAIR w/Prod. Air Cond. (exc. CONV.)	3859169	**PIPE ASSY.,** evap. to comp. frt. (developed length 76 1/4)	1
65	CORVAIR w/Prod. Air Cond. (exc. Conv.)	3859171	**PIPE ASSY.,** dehydrator to evap.	1
65	CORVAIR w/Acc. Air Cond.	3863823	**PIPE ASSY.,** dehydrator to evap. frt.	1
65	CORVAIR w/Acc. Air Cond.	3863824	**PIPE ASSY.,** dehydrator to evap. rear	1
65	CORVAIR (CONV.) w/Prod. Air Cond.	3868706	**PIPE ASSY.,** evaporator to compressor, rear (developed length 53 7/16)	1
65	CORVAIR w/Prod. Air Cond. (exc. CONV.)	3870207	**PIPE ASSY.,** evaporator to compressor, rear	1
65	CORVAIR (CONV.) w/Prod. Air Cond.	3868707	**PIPE ASSY.,** dehydrator to evaporator (developed length 118 27/32)	1
65-67	CORVAIR (CONV.) w/Prod. Air Cond., CORVAIR w/Acc. Air Cond.	3868705	**PIPE ASSY.,** evaporator to compressor, front (developed length 78 1/2)	1
66-67	CORVAIR w/Air Cond.	3895958	**SLEEVE,** evap. to compressor rear hose	1
65-66	CORVAIR w/Acc. Air Cond.	3000038	**TUBE,** w/nut, evaporator liquid	1
65-67	CORVAIR	3003032	**TUBE,** evap. liquid	1
60-69	CORVAIR	2494772	**CLAMP,** minature worm type (range 1/4" x 5/8")—(1.166)	A.R.

9.225 GROMMET—HOSE—CONNECTOR—SLEEVE, Air Conditioning Dehydrator

61-67	CORVAIR	3873954	dehydrator to evap. frt. and rear hose	A.R.
65	CORVAIR (exc. CORSA)	3834992	A/C freon hose	1
65-67	CORVAIR (exc. CONV.)	3863236	evap. to comp. frt. pipe	1
60-69	CORVAIR	3830948	**HOSE,** comp. to condenser (1/2" I.D. x 1" O.D.) (Note 1)	A.R.
60-69	CORVAIR	3830950	**HOSE,** receiver to dehyd. to evap. (13/32" I.D.) (Note 1)	A.R.
60-69	CORVAIR	3830952	**HOSE,** evap. to comp. (5/8" I.D.) (Note 1)	A.R.
	NOTE 1 Sold in 10 ft. rolls.			
60-69	CORVAIR	3875829	**CONNECTOR** (3/8" O.D. x 3 1/4" O.L.) (Note 2)—(9.220)	1
60-69	CORVAIR	3875830	**CONNECTOR** (1/2" O.D. x 3 1/4" O.L.) (Note 2)—(9.220)	1
60-69	CORVAIR	3875831	**CONNECTOR** (5/8" O.D. x 3 1/4" O.L.) (Note 2)—(9.220)	1
	NOTE 2 To be used with 2-3909030 clamps.			
61-64	CORVAIR	3798300	**SLEEVE,** dehydrator to evap. hose clip (frt. & rr.)	1

9.226 FITTING—MUFFLER UNIT—SEAL—WASHER, Air Conditioning Compressor

62-64	CORVAIR	3817714		1
65-66	CORVAIR	3855375		1
66	CORVAIR	3885120	w/muffler	1
67	CORVAIR w/Air Cond.	3906068	w/muffler	1
60-69	CORVAIR	3970533	**MUFFLER UNIT,** in line	1
61-69	CORVAIR	5887997	**SEAL,** "O" ring (51/64" x 9/64" thk.)—(9.240)	2
62-64	CORVAIR	3814101	**SEAL,** evap. to compressor rear pipe	1
65-67	CORVAIR	3003027	**SEAL,** evap. outlet tube	1
61-67	CORVAIR	3755763	**WASHER,** evap. to compressor—(8.133)	1

9.240 SEAL, Air Conditioning Compressor Suction Pipe

Not required in this group.
See group 9.226 ..... **5887997**

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

9.242 CLAMP—CLIP—BRACKET—SHIELD, Air Conditioning Hose

61-64	CORVAIR		evap. core to comp. freon (both ends and center),	
60-69	CORVAIR	3909030	dehyd. to evap., comp. to cond., cond. to dehyd.	A.R.
65-67	CORVAIR	3792895	**CLIP,** condenser inlet tube	1
65	CORVAIR w/Acc. Air Cond.	3792896	**CLIP,** condenser outlet tube, evap. inlet tube, ranco switch to blower switch	1
65-67	CORVAIR	3003249	**CLIP,** evap. to comp. tube	1
66	CORVAIR w/C.A.C.	3859742	**BRACKET,** fitting assy., upper	1
66	CORVAIR w/C.A.C.	3859744	**BRACKET,** fitting assy., lower	1
67	CORVAIR w/Prod. Air Cond.	3906065	**BRACKET,** comp. fitting and muffler, upper	1
67	CORVAIR w/Prod. Air Cond.	3906066	**BRACKET,** comp. fitting and muffler, lower	1
65	CORVAIR (CONV.)	3868739	**SHIELD,** dehyd. to evap. pipe	1

9.260 SEAL—HOSE, Heater Air Distributor

65-68	CORVAIR w/Air Cond.	3937189	evap. air outlet bezel seal	A.R.
65-67	CORVAIR w/Air Cond.	3895481	**HOSE,** evap. to outlet adapt.	1
	Not required in this group. See group 9.786	3758483	**HOSE**	

9.262 DEFLECTOR ASSY.—DEFLECTOR—CASE and PARTS, Air Conditioning

61-64	CORVAIR	3781360	evaporator	1
65-67	CORVAIR	3856472	**DEFLECTOR,** evaporator air outlet	2
61-64	CORVAIR	3154526	**CASE,** distributor upper	1
61-64	CORVAIR	3837975	**CASE,** distributor lower	1
61-66	CORVAIR	3011495	**OUTLET,** evap. air	1
65-67	CORVAIR	3857270	**OUTLET,** center	1
65-67	CORVAIR	3857095	**DUCT ASSY.,** evap. to ctr. outlet	1
65-67	CORVAIR	3906099	**ADAPTER ASSY.,** evap. air outlet	2
65-66	CORVAIR	3856467	**BEZEL,** evap. air outlet	2
67	CORVAIR	3906097	**BEZEL,** evap. air outlet	2
65-67	CORVAIR	3856468	**RETAINER,** evaporator air outlet bezel	2
61-62	CORVAIR	3771875	**VALVE,** car evaporator control bezel	1
65-67	CORVAIR	3873967	**STUD,** center outlet	L.H.
65-67	CORVAIR	3873968	**STUD,** center outlet	R.H.

9.264 GRILLE—RETAINER, Air Conditioning Evaporator Air Distributor Outlet

65-66	CORVAIR w/Acc. Air Cond.,			
67	CORVAIR	3004953	evap. side	1
65-66	CORVAIR w/Acc. Air Cond.,			
67	CORVAIR	3146637	**RETAINER,** side grille	2

9.269 PLUG, Air Duct Access Hole

60-69	CORVAIR	4410574	(12.981)	A.R.

9.275 SWITCH— —RESISTOR— —CLIP—LEVER— NUT, Heater and Air Conditioning

61-64	CORVAIR	3155265	distributor blower	1
65-67	CORVAIR	3003075	evap. (Ranco)	1
61-63	CORVAIR	3154127	**SWITCH ASSY.,** evap. temp. control	1
64	CORVAIR	3158730	**SWITCH ASSY.,** evap. control (Ranco)	1
65-66	CORVAIR w/Acc. Air Cond.	3003539	**SWITCH ASSY.,** evap. blower	1
65-66	CORVAIR w/Acc. Air Cond.	3003540	**SWITCH ASSY.,** evap. cont. (Ranco)	1
65-66	CORVAIR	3855028	**SWITCH ASSY.,** blower	1
65-67	CORVAIR	3870248	**SWITCH ASSY.,** blower and air selector	1
65-67	CORVAIR w/C.A.C.	3854799	**SWITCH ASSY.,** heater blower	1
66-67	CORVAIR w/Air Cond.	3880700	**SWITCH ASSY.,** A/C compressor	1
67	CORVAIR	3902291	**SWITCH ASSY.,** blower	1
61-63	CORVAIR	3153068	**RESISTOR,** blower motor	1
63-64	CORVAIR	3818904	**RESISTOR,** blower motor	1
65-67	CORVAIR w/Air Cond.	3866430	**RESISTOR ASSY.,** heater blower motor	1
60-63	CORVAIR	3138468	**CLIP,** to air distributor	2
61-63	CORVAIR	3154527	**LEVER,** temp. control pivot	1
65-66	CORVAIR w/Acc. Air Cond.	3000142	**NUT,** speed "U" shape (10—24)	A.R.

9.276 ADAPTER ASSY.—HARNESS ASSY.—WIRE ASSY.—CONNECTOR, Heater and Air Conditioning Electrical

61-64	CORVAIR	2979954	wiring harness	1
62-64	CORVAIR w/Prod. Air Cond.,			
63-64	CORVAIR w/Acc. Air Cond.	3154275	**HARNESS ASSY.,** distributor wiring	1
65	CORVAIR w/Acc. Air Cond.	3009722	**HARNESS ASSY.,** evap. wiring	1
65-67	CORVAIR w/Acc. Air Cond.	2989295	**HARNESS ASSY.,** air cond. wiring	1
65-68	CORVAIR	2988806	**WIRE ASSY.,** evap. to comp. and fast idle adapter	1
60	CORVAIR w/gas	3138080	**CONNECTOR**	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

9.277 RELAY ASSY., Air Conditioning Electrical

61-64	CORVAIR	1365166	blower motor cutout	1

9.278 KNOB, Air Conditioning Control

61-64	CORVAIR	3152174	blower switch	1

9.279 ESCUTCHEON—BEZEL, Air Conditioning Control

65-66	CORVAIR w/Acc. Air Cond.	3000550	evaporator	1
65-66	CORVAIR w/Acc. Air Cond.	3159536	**BEZEL**, evap.	1

9.281 CLAMP—HOSE, Air Conditioning Control

Not required in this group.
See group 8.857, 9.787 . 3134163

60-69	CORVAIR	3898980	**HOSE**, vacuum ($^{3}/_{32}$" I.D.)—(8.962)	A.R.

9.282 MAINTENANCE ITEMS, Air Conditioning

60-69	CORVAIR	1050121	**REFRIGERANT** (consists of 1-15 oz. can No. 12)—(8.800)	A.R.
60-69	CORVAIR	1050807	**REFRIGERANT** (consists of one 12 lb. throw-away)—(8.800)	A.R.
60-69	CORVAIR	5416939	**LUBRICATING OIL**, refrigerant system (1 qt. container—525 viscosity)	A.R.

9.645 ANTENNA UNIT, Radio

67-68	CORVAIR (exc. AM FM)	986925	front fender	R.H.
67-68	CORVAIR	986926	rear fender	1
67-68	CORVAIR w/AM-FM	986927	front fender	R.H.
69	CORVAIR	993631		1
69	CORVAIR	993683	rear	1

9.650 RADIO

67-68	CORVAIR	986923	manual w/rear fender antenna	1
67-68	CORVAIR	986924	push button w/rear fender antenna	1
67-69	CORVAIR	986860	manual w/front fender antenna	1
67-69	CORVAIR	986861	push button w/front fender antenna	1
67-69	CORVAIR	986862	AM-FM w/front fender antenna	1

9.665 SPEAKER—ADAPTER UNIT—PANEL UNIT, Rear or Auxiliary Speaker

Parts not shown in this group will be found in the Radio Catalog (P&A No. 5B).

67-69	CORVAIR	986972	auxiliary (Note 1)	1

NOTE 1 Housing Unit 987056 also required on convertible models.

67	CORVAIR	987051	stereo, front	1
67	CORVAIR	986976	**ADAPTER UNIT**, stereo multiplex	1
66-68	CORVAIR	986725	**PANEL UNIT**, rr. shelf	1

9.670 CARTRIDGE—KNOB ASSY.—HOUSING ASSY.—HOLDER UNIT, Stereo Tape

Parts not shown in this group will be found in the Radio Catalog (P&A No. 5B).

67-69	CORVAIR	7301181	**KNOB ASSY.**, player	A.R.
67-69	CORVAIR	7301634	**HOUSING ASSY.**	1
68-69	CORVAIR	993579	**HOLDER UNIT**, cartridge	1

9.709 HOUSING ASSY.—KNOB—ELEMENT—RETAINER—BEZEL—BRACKET, Cigarette Lighter

60-61	CORVAIR	3771762	(Casco)	1
60-66	CORVAIR, F.C.,			
69	CORVAIR	7027910	(Rochester)	1
62	CORVAIR, F.C.	3813732	(Casco)	1
63-68	CORVAIR, F.C.	3794298	(Casco)	1
60	CORVAIR,			
61-64	CORVAIR, F.C.,			
65	F.C.	7026520	**KNOB**, w/element (Rochester)	1
60	CORVAIR	3742400	**KNOB**, w/element (Casco)	1
61-62	CORVAIR, F.C.	3782619	**KNOB**, w/element (Casco)	1
63-64	CORVAIR, F.C.,			
65	F.C.	3860974	**KNOB**, w/element (Casco)	1
65-66	CORVAIR	3861472	**KNOB**, w/element (Casco)	1
65-66	CORVAIR	7028979	**KNOB**, w/element (Rochester)	1
65	F.C. w/Custom Equip.	7029493	**KNOB**, w/element (Rochester)	1
67	CORVAIR	7031884	**KNOB**, w/element (Roch.)	1*
68-69	CORVAIR	7035724	**KNOB**, w/element (Roch.)	1
60-62	CORVAIR, F.C.	3710581	**ELEMENT**, heating (Casco)	1
60-63	CORVAIR, F.C.,			
65	CORVAIR	7021055	**ELEMENT**, heating (Rochester)	1
63-64	CORVAIR,			

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-68	CORVAIR, F.C.	3794302	**ELEMENT,** heating (Casco)	1
67	CORVAIR	3897308	**ELEMENT,** heating w/knob (Casco)	1
60	CORVAIR	3745502	**RETAINER** (Casco)	1
61	CORVAIR	3710839	**RETAINER** (Casco)	1
61-68	CORVAIR	7002184	**RETAINER** (Rochester)	1
62	CORVAIR	3771763	**RETAINER** (Casco)	1
63-68	CORVAIR, F.C.	3794299	**RETAINER,** lighter	1
60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	6256767	**BEZEL,** lighter	1
62-63	CORVAIR w/Turbocharger	3791556	**BEZEL,** lighter	1
65-69	CORVAIR	3863020	**BEZEL,** lighter	1
62-64	CORVAIR w/Turbocharger (exc. elect. top)	3825691	**BRACKET,** lighter	1
62-64	CORVAIR w/Turbocharger, elect. top	3825692	**BRACKET,** lighter	1

9.735 STRAP, Cluster Ground

65-69	CORVAIR (exc. 4/1 BC, Turbo)	6455598		1
65-66	CORVAIR w/4/1 BC, Turbo	6455023		1

9.743 CASE—BEZEL—STUD—CLAMP—PLATE, Instrument Cluster

60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	1587483		1
60-64	CORVAIR (exc. Turbocharger),			
64-65	F.C.	5643031	gas gauge	1
65-66	CORVAIR w/4/1 BC, Turbo	6455666	cluster	1
65-69	CORVAIR (exc. 4/1BC, Turbo Speed Warning)	6455133		1
65-66	CORVAIR w/4/1 BC, Turbo	6455008	clock and thermo	1
65-66	CORVAIR w/4/1BC, Turbo	6455022	gas and vac.	1
67-69	CORVAIR w/speed warning	6458940		1
63	MONZA w/Turbocharger	6407115	**BEZEL,** inst. cluster	1
64	SPYDER	6408087	**BEZEL,** cluster	1
65-66	CORVAIR w/4/1 BC, Turo	6455001	**BEZEL,** cluster	1
65-69	CORVAIR (exc. 4/1 BC, Turbo)	6455141	**BEZEL,** cluster support	1
67-69	CORVAIR	6459170	**BEZEL,** cluster support	1
60-64	MONZA (exc. Turbocharger)	1589723	**BEZEL ASSY.**	1
60-64	CORVAIR (exc. MONZA)	1589709	**BEZEL ASSY.**	1
61-65	F.C.	1589105	**BEZEL ASSY.**	1
60-64	CORVAIR	3706596	**STUD,** radio cover assy. attaching (No. 10—24 x 1")—(8.133)	2
62-64	MONZA w/Turbocharger	6407211	**CLAMP,** gas, temp. and manif. press. gauge	5
65-66	CORVAIR (STD.) (exc. P.G.),			
66	CORVAIR (exc. 4/1BC, Turbo., P.G.),			
67	CORVAIR (exc. P.G.)	3899839	**PLATE,** trim	1
65	CORVAIR (exc. 4/1 BC, Turbo, P.G.)	3858372	**PLATE,** trim (brushed)	1
65	CORVAIR w/4/1BC, Turbo,			
66	CORSA	3886679	**PLATE,** trim (brushed)	1
65-66	CORVAIR (STD.) w/P.G.,			
65-66	CORVAIR w/P.G. (exc. 4/1/BC, Turbo),			
67	CORVAIR w/P.G.	3899844	**PLATE,** trim (Note 1)	1
68	CORVAIR (exc. P.G.)	3925409	**PLATE,** trim (Note 1)	1
68	CORVAIR w/P.G.	3925413	**PLATE,** trim (Note 1)	1
69	CORVAIR (exc. P.G.)	3945988	**PLATE,** trim (Note 1)	1
69	CORVAIR w/P.G.	3945990	**PLATE,** trim (Note 1)	1

NOTE 1 It may be necessary to paint to match.

9.744 PLATE—CLIP—NUT—SLEEVE, Instrument Cluster

65-66	CORVAIR (exc. 4/1 BC, Turbo)	6455143	gas gauge back	1
67-69	CORVAIR w/speed warning	6408978	**CLIP,** speedo head ground	1
65	CORVAIR	134530	**NUT,** cluster gas gauge—(8.915)	A.R.
65-66	CORVAIR w/4/1BC, Turbo	6455009	**SLEEVE,** cluster thermo gauge	3
65-69	CORVAIR (exc. 4/1 BC, Turbo)	6455135	**SLEEVE,** cluster Hi-beam tell-tale	1

9.746 PANEL—HOUSING—MEDALLION, Instrument

60-64	CORVAIR	3777965	center	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

62-64	CORVAIR w/Turbocharger	6405160	**HOUSING,** inst. cluster tell tale	A.R.
65-66	CORVAIR w/4/1 BC, Turbo	6455015	**HOUSING,** gen. fan tell tale	1
65-66	CORVAIR (exc. 4/1 BC, Turbo)	6455137	**HOUSING,** gen., fan, press. and temp. tell tale	1
67-69	CORVAIR	6459358	**HOUSING,** cluster, pan, gen. brake, press, and temp. tell tale	1
65-66	CORVAIR (exc. 4/1 BC, Turbo),			
67-69	CORVAIR (exc. clock)	6455142	**MEDALLION,** cluster, clock hole cover	1

9.747 RETAINER, Instrument Face Glass

60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	1587484	cluster	1
62-64	CORVAIR w/Turbocharger	6405931	face glass (speedometer)	1
62-64	CORVAIR w/Turbocharger	6407318	gas, manifold and temp.	1
65-66	CORVAIR w/4/1BC, Turbo	6455006	clock and thermo gauge	1
65-66	CORVAIR w/4/1 BC, Turbo	6455013	speedo. and tach.	1
65-66	CORVAIR w/4/1 BC, Turbo	6455020	gas and vac. gauge	1
65-66	CORVAIR (exc. 4/1 BC, Turbo)	6455132	cluster lens	1
67-69	CORVAIR	6459172	cluster lens	1

9.748 GLASS—WINDOW—LENS—SLEEVE, Instrument Cluster

60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	1587485		1
62-64	CORVAIR w/Turbocharger	845425		1
60-64	CORVAIR (exc. Turbocharger)	1587489	**WINDOW,** odometer	1
61-65	F.C.	1589015	**WINDOW,** odometer	1
62-64	CORVAIR w/Turbocharger	6405938	**WINDOW,** fan, oil and temp. tell tale	1
62-64	CORVAIR w/Turbocharger	6405940	**WINDOW,** high beam tell tale	1
61	CORVAIR,			
64-65	F.C.	1587486	**LENS,** generator and heat	1
60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	1587490	**LENS,** directional signal tell tale	2
60-64	CORVAIR, F.C. (exc. Turbocharger),			
65	F.C.	1589252	**LENS,** high beam, w/sleeve	1
62-64	CORVAIR w/Turbocharger	5656031	**LENS,** turn signal tell tale	2
65-69	CORVAIR	5656029	**LENS,** high beam tell-tale (red)	1
63-64	CORVAIR w/Turbocharger	6407212	**LENS,** manifold pressure gauge	1
63-64	CORVAIR w/Turbocharger	6407213	**LENS,** temp. gauge	1
63-64	CORVAIR w/Turbocharger	6407214	**LENS,** gas gauge	1
65-69	CORVAIR	6406640	**LENS,** dir. signal tell-tale (green)	1
65-66	CORVAIR w/4/1 BC, Turbo	6406639	**LENS,** hi-beam tell tale	1
65-66	CORVAIR w/4/1 BC, Turbo	6455005	**LENS,** clock and thermo gauge	1
65-66	CORVAIR w/4/1 BC, Turbo	6455010	**LENS,** speedo	1
65-66	CORVAIR w/4/1 BC, Turbo	6455016	**LENS,** gen. and fan tell tale	1
65-66	CORVAIR w/4/1 BC, Turbo	6455019	**LENS,** gas and vac. gauge	1
65-66	CORVAIR (exc. 4/1 BC, Turbo.)	6455130	**LENS,** speedo. comp.	1
65-66	CORVAIR (exc. 4/1 BC, Turbo.)	6455136	**LENS,** gen. and fan tell tale	1
65-66	CORVAIR (exc. 4/1 BC, Turbo.)	6455138	**LENS,** oil and temp. tell tale	1
65-66	CORVAIR (exc. 4/1 BC, Turbo.)	6455139	**LENS,** fan gen., temp., oil tell tale (frt.)	1
66	CORVAIR (exc. 4/1 BC Turbo)	6457976	**LENS,** hi beam tell tale (blue)	1
67-69	CORVAIR	6459171	**LENS,** cluster speedo miles	1
67-69	CORVAIR	6459355	**LENS,** cluster gen. and fan tell tale	1
67-69	CORVAIR	6459356	**LENS,** cluster, brake press. and temp. tell tale	1
67-69	CORVAIR	6459357	**LENS,** cluster, fan gen. brake, press. and temp. tell tale frt.	1
65-69	CORVAIR (exc. 4/1BC, Turbo)	6455134	**SLEEVE,** dir. signal tell tale	1

9.749 SEAL—GASKET—INSULATOR—SHIELD, Instrument Panel

60-69	CORVAIR, F.C. (exc. Turbocharger)	1568724	speedometer case dust	A.R.
ALL	ALL	3775180	speedometer housing	A.R.
62-64	CORVAIR w/Turbocharger	1564799	**GASKET,** instr. cluster face glass	3
65-68	CORVAIR (exc. F.C.)	1587911	**GASKET,** tell tale lens	5

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-68	CORVAIR	1582954	**GASKET,** cluster gauge and bezel	1
61-64	CORVAIR (exc. Turbocharger)	3786759	**INSULATOR,** instrument cluster	1
65-69	CORVAIR	6401495	**INSULATOR,** gas gauge	1
65-66	CORVAIR w/4/1 BC, Turbo	6401501	**INSULATOR,** thermo gauge	1
66-69	CORVAIR (exc. CORSA)	6455144	**SHIELD,** instr. cluster light	2

9.750 TACHOMETER ASSY.—LENS—SHAFT UNIT

62-64	CORVAIR w/Turbocharger	6411412		1
65-66	CORVAIR (Corsa)	6412203		1
65-66	CORVAIR (CORSA)	6455012	**LENS,** tach.	1
60-69	CORVAIR	6451067	**SHAFT UNIT,** includes cable & tip 81" long (Note 1)	1

NOTE 1 Cut to reqd. length.

9.755 GAUGE ASSY., Instrument Cluster

63-64	CORVAIR w/Turbocharger	5653242	manifold pressure	1
65-66	CORVAIR w/4/18C, Turbo	5654617	manifold pressure	1

9.761 HEAD ASSY.—SHAFT ASSY.—KNOB—NUT—SPACER—BUSHING, Speedometer

60-64	CORVAIR (exc. Turbocharger),			
61-64	F.C.,			
65	CORSA	1589536	complete (0-100)	1
63-64	CORVAIR w/Turbocharger	6406905	complete	1
65-66	CORSA	6455245		1
65-69	CORVAIR (exc. CORSA)	6455435		1
67-69	CORVAIR	6458892		1
62-64	CORVAIR w/Turbocharger,			
65-66	CORSA	1586301	**SHAFT ASSY.,** trip mileage reset	1
62-64	CORVAIR w/Turbo.,			
65	CORSA	1569776	**KNOB,** trip odometer reset flex shaft	1
62-64	CORVAIR w/Turbo.,			
65	CORSA	1564075	**NUT,** trip odometer reset flex shaft	1
64	F.C.	1566449	**SPACER,** mtg. screw	1
60-69	CORVAIR	1564429	**BUSHING,** speedo. head to back cover (rubber)	A.R.

9.762 BUZZER ASSY.—SCREW ASSY.—BRACKET—CABLE ASSY., Speed Indicator

67-69	CORVAIR	1386278		1
64	F.C.	1585155	**SCREW ASSY.,** speedo and case (8—32 x 7/32")—(9.744)	1
67-69	CORVAIR	3906101	**BRACKET,** control	1
67-69	CORVAIR	6454840	**CABLE ASSY.,** buzzer	1

9.772 CLOCK UNIT—CLOCK ASSY.—KNOB—NUT—BRACKET, Instrument Panel

62-64	CORVAIR, F.C.	3840439		1
65-66	CORSA	3863257	instr. cluster	1
65-69	CORVAIR	3863259	**CLOCK ASSY.,** instr. cluster	1
65-69	CORVAIR	3794017	**KNOB,** reset stem	1
65-69	CORVAIR	3794018	**NUT,** reset stem knob (No. 1—72 NF 2B Thd.)	1
62-64	CORVAIR	3840440	**BRACKET,** clock mtg.	1

9.773 LAMP UNIT—BRACKET ASSY.—MIRROR ASSY.—SWITCH—SEALED BEAM—GEAR—HANDLE ASSY., Safety Light

60-69	CORVAIR, F.C.	987112	portable	1
61-65	F.C.	3776947	**BRACKET ASSY.,** outside	1
61-65	F.C.	3789879	**MIRROR ASSY.,** safety light	1
61-64	F.C.	3735276	**SWITCH,** inside operated spot lamp	1
60-66	CORVAIR, F.C.	455242	**SEALED BEAM** (No. 4416) portable	1
61-64	F.C.,			
65	CORVAIR, F.C.	456720	**SEALED BEAM,** inside operated spot lamp (use w/988335, 985807)	1
61-64	F.C.	3738382	**GEAR,** spot lamp shaft drive	1
61-65	F.C.	3738381	**HANDLE ASSY.,** spot lamp	1

9.775 GROMMET

60-64	CORVAIR		instrument panel wiring harness,	
61-62	CORVAIR (STA. WAG.)	3768051	rear license lamp housing	1
60-64	CORVAIR,			
65-67	CORVAIR	2962568	front wiring harness assy. (1 1/4 I.D.), instr. panel wiring harness	1
60-69	CORVAIR, F.C.	3708179	rear extension wiring harness assy., dome lamp wire assy., direction signal lamp assy., engine temp. switch extension wire, air cond. evap. to comp. wire (1/8 I.D. x 1 01	

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

60-64	CORVAIR	6257504	gas feed pipe, heater pipe and brake pipe front ... 1
60-65	CORVAIR, F.C.	3711896	license lamp wire assy. thru body, heater gas pressure switch to heater pipe (1/2 I.D. x 1 O.D.) ... 1
60-64	CORVAIR	3787459	brake pipe and wire harness rear, gas feed pipe and heater pipe rear ... 1
60	CORVAIR	3696314	carburetor choke manifold heater tube ... 1
60-64	CORVAIR		brake main cylinder front pipe assy.,
65-66	CORVAIR	3873952	evap. to comp. rear eng. shield ... 1
61-66	CORVAIR, F.C. (1st design)	3877832	gas feed rear pipe assy., chassis wiring harness (ammeter lead) ... 1
61-65	F.C. w/air	3787262	main wiring harness, parking brake cable, speedo. flex. cable, auto. trans. cable ... 1
61-64	F.C. w/P.G.,		
65	F.C.	3780624	main wiring harness, parking brake cable, speedo. flex. cable, auto. trans. cable ... 1
61	F.C.	3702356	choke rod and tube assy. ... 1
60-64	CORVAIR, F.C.		main wiring harness assy.,
63-64	MONZA w/Turbocharger (2nd design)		fuel return pipe rear hose,
65	F.C.		body wiring harn. assy.,
65-69	CORVAIR	3786405	antenna lead-in cable ... 1
61	CORVAIR	3681088	evaporator drain hose ... 1
61-64	CORVAIR	3886908	evaporator drain pipe, gen. and forward lamp wiring harness (9/16" I.D. x 1 1/8" O.D.) ... 1
62-65	CORVAIR	3735341	battery cable to starting switch ... 1
62-67	CORVAIR	3824713	speedometer ... 1
64-65	F.C.	3838273	oil pressure gage pipe, wiper switch wire and rear wiring harness ... 1
64	CORVAIR w/Custom (exc. Deluxe)	3756034	air cond. evap. core shroud (1 1/4 O.D. x 3/8 I.D.) ... 1
60-69	CORVAIR, F.C.	3771184	oil press ga. pipe ... 1
65	CORVAIR	3874560	batt. vent hoses ... 1
65-68	CORVAIR	3866426	inst. panel wiring, wiper motor lead ... 1
65	CORVAIR	3864013	diff. carrier oil lvl. tube ... 1
65	CORVAIR	2962568	inst. panel wiring harn. assy. ... 1
65-69	CORVAIR, F.C. w/P.G.	3864259	trans. vac. mod. pipe ... 1
65-66	CORVAIR	3861296	body wiring harness and fuel return pipe rr. hose (at engine bulkhead) ... 1
65-69	CORVAIR	3861298	body wiring harness and fuel return pipe rr. hose (at tunnel) ... 1
65-68	CORVAIR	3861824	gas feed front pipe and brake main cyl. rr. pipe ... 1
65-67	CORVAIR	3873641	gas feed front pipe (5/16 hole w/45 degree angle one side) ... 1
65	CORVAIR w/Air Cond.	3873953	A/C dehyd. to evap. pipe to engine shield frt. ... 1
68-69	CORVAIR	2973161	inst. panel harn. assy. in dash panel ... 1
66-67	CORVAIR (2nd design) (exc. CORSA)	3905546	gas feed rear pipe ... 1
67-69	CORVAIR	3906112	body wiring harness at eng. bulk head ... 1
67-69	CORVAIR w/A.I.R.	3920978	fuel return pipe grommet ... 1
67-69	CORVAIR	3723225	underhood lamp wire, eng. compt. lid ... 1
68-69	CORVAIR	3931832	gas feed front pipe ... 1
60-69	CORVAIR, F.C.	3845783	vent. hose conn., at rocker cover (for 1" dia. hole—2 23/64" I.D. x 1 7/32" O.D.)—(1.745) ... 1
60-69	CORVAIR, F.C.	3884967	speedo. flex. shft. assy. ign. sw. to start. sol. wrg. harn. assy. start & eng. wrg. harn. assy. & oil press. ga. pipe, windshld. wpr. & wa. harn. assy. AC gen. wiring harn. assy., B/V center ext. wire (1" dia.) ... A.R.

9.778 KNOB ASSY. and Parts

69	CORVAIR (exc. CONV.)	3899716	blower switch ... 1
65-68	CORVAIR,		
69	CORVAIR (exc. CONV.)	3861697	**SWITCH ASSY.,** blower ... 1
68-69	CORVAIR (exc. CONV.)	3016769	**FAN UNIT** ... 1
68-69	CORVAIR (exc. CONV.)	3899736	**COVER,** defogging hole trim ... 1
68-69	CORVAIR	3015030	**GASKET,** motor mounting ... 1
68-69	CORVAIR (exc. CONV.)	3899746	(unpainted) ... 1
68-69	CORVAIR	3015031	**SPACER,** motor mounting ... 1
68	CORVAIR (exc. CONV.)	3015043	**CASE,** blower motor half ... 1
68-69	CORVAIR	3858818	**BRACKET,** defog. blower switch ... 1
68	CORVAIR (exc. CONV.)	4918684	**MOTOR** ... 1
68-69	CORVAIR (exc. CONV.)	3937157	**CAPACITOR ASSY.,** defog. blower motor ... 1
68-69	CORVAIR (SPT. CPE.)	7783150	**WIRE ASSY.** ... 1

9.779 DEFROSTER PARTS

61-65	F.C.	3788982	**INLET,** air (molded plastic w/two 7/16 dia. holes and three grille bars) ... 2
61-64	CORVAIR w/air	3789579	**INLET** ... L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60-61	CORVAIR w/gas		INLET, left or right,	
61-64	CORVAIR w/air	3829924	right	1
65-69	CORVAIR	3859772	DUCT ASSY., htr. def., front	1
65-69	CORVAIR	3859395	DUCT ASSY., htr. def., rear	1
60-65	CORVAIR, F.C. w/gas,			
65	F.C.	3125764	HOSE, defroster (2 x 36 O.L.)	1
61-64	CORVAIR w/air	3782128	HOSE, air distrib. (2 7/8 x 53 O.L.)	1
61-64	CORVAIR w/air		HOSE, left, defroster,	
60-69	CORVAIR, F.C.	3786766	defroster (2 1/2" x 25" O.L.) (Note 1)	1
	NOTE 1 Cut to desired length.			
61-64	CORVAIR w/air	3782221	HOSE, left and right, heater (2 x 6 O.L.)	A.R.
62-64	MONZA (CONV.)	3817734	HOSE, htr. duct to rocker inner panel	2
63-64	CORVAIR	3840636	HOSE, heater duct to connector	2
60-69	CORVAIR, F.C.	3870283	HOSE, heater, defroster (4 x 36" O.L.)—(9.786)	A.R.
61-64	F.C. w/gas,			
65	F.C.	3785988	COUPLING, defroster hose (2 to 2 1/2)	1
65-69	CORVAIR	3866874	BAFFLE, htr. defr. light	2
65-66	CORVAIR w/Air Cond.	3868700	COVER, htr. defr. air inlet	1
65-69	CORVAIR	3866847	GROMMET, htr. cooling air hose	1

9.782 GASKET—INLET ASSY.—CONNECTOR—SEAL—SLEEVE—STRAP—NUT, Heater Air Inlet

61-64	GREENBRIER w/air,			
65	F.C.	3782080	rear air deflector	1
61-65	F.C. w/air	3782081	air distributor	1
61-65	F.C. w/air	3782082	front, defroster duct	1
61-65	F.C. w/air	3782083	rear, defroster duct	1
61-65	F.C. w/air	3782084	rear, lower, heat duct	1
65-67	CORVAIR w/Air Cond.	3854280	INLET ASSY., air	1
61-64	CORVAIR, F.C. w/air,			
65-69	CORVAIR, F.C. (exc. Turbo)	3785550	CONNECTOR, hose	R.H.
61-67	CORVAIR, F.C. w/air,			
68-69	CORVAIR w/heater	3785549	CONNECTOR, hose	L.H.
61-64	CORVAIR, F.C. w/air,			
65	F.C.	3787375	CONNECTOR, cooling air hose at engine frt. upper shield	1
61-67	CORVAIR, F.C. w/air,			
68-69	CORVAIR w/heater	3787440	CONNECTOR, cooling air hose at engine upper shroud	1
61-65	CORVAIR, F.C.w/air	3151223	CONNECTOR (Neoprene—5 holes)	1
61-66	CORVAIR w/Turbocharger	3817560	CONNECTOR, hose	R.H.
65-67	CORVAIR (exc. 4/IBC)	3851897	CONNECTOR, upper shroud, upper shroud htr. cooling air hose	1
61-64	CORVAIR w/air	3781960	SEAL, air distributor	2
61-64	CORVAIR w/air,			
65	F.C.	3786129	SEAL, air inlet duct and blower assy.	1
61-64	GREENBRIER w/air,			
65	F.C.	3782077	SEAL, rear air deflector	1
61-65	F.C. w/air	3782074	SEAL, front distributor, air	1
63-66	CORVAIR w/Turbocharger	3817562	SEAL, hose	R.H.
64-65	F.C. (exc. gas htr.)	3856199	SEAL, air vent valve	1
62-65	CORVAIR w/air	3786539	SLEEVE, heater hose	1
61-65	F.C. w/air	3786366	SLEEVE, air distributor	1
63-65	CORVAIR, F.C. w/air	3151347	STRAP, blower connector	1
65-67	CORVAIR	3866846	NUT, w/L/washer, air inlet attaching, evap. to air inlet	1

9.786 DUCT ASSY.—DISTRIBUTOR—ADAPTER ASSY.—BRACKET—EXTENSION—PLUG—SEAL—CLAMP—NUT—HOSE—BUSHING—CONNECTOR—VALVE ASSY.—SUPPORT—CLIP, Heater Air Distributor

61-64	CORVAIR w/air	3786130	cross air	1
61-63	CORVAIR, F.C. w/air	3797599	air inlet w/blower	1
61-65	F.C. w/air	3781788	rear, upper	1
61-65	F.C. w/air	3781792	defroster	1
62-65	F.C. w/air	3814135	rear, lower	1
63-64	CORVAIR	3832605	(Note 1)	L.H.
63-64	CORVAIR	3832606	(Note 1)	R.H.
	NOTE 1 When using on 1961 thru early design 63 models, it will be necessary to (a) use connector 3832607 and hose 3840636 for the left duct assembly (b) use connector 3832608 and hose 3840636 for the right duct assembly.			
65-68	CORVAIR	3854277	htr. frt.	1
65-69	CORVAIR	3854278	htr. rear	1
69	CORVAIR	3949967	heater front	1
61-63	CORVAIR w/air,			
64	CORVAIR	3853505	DISTRIBUTOR, heater air	L.H.
61-63	CORVAIR w/air,			
64	CORVAIR	3853506	DISTRIBUTOR, heater air	R.H.
61-65	F.C. w/air	3786367	DISTRIBUTOR, air	1
61-64	F.C. w/air	3785473	DISTRIBUTOR, defroster	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts

62	65-69	CORVAIR	3883892
69	61-64	CORVAIR w/air	3786132
73	61-65	F.C. w/air	3838074
74	61-64	PICK-UP w/air	3786442
75	61-64	CORVAIR w/air	3786131
77	65	CORVAIR	3855177
71	65-69	CORVAIR	3883841
12	61-65	CORVAIR, F.C. w/air	3749810
13	65-68	CORVAIR	3863678
14	60-69	CORVAIR	9414942
15	61-64	CORVAIR, F.C. w/air	3713542
16	61-64	CORVAIR, F.C. w/air, F.C.	3758483
17	65		
19	65-67	CORVAIR	3863667
9	65-68	CORVAIR	3863860
91	60-69	CORVAIR, F.C.	3786766
92	60-69	CORVAIR, F.C.	3870283
93	62-64	CORVAIR, F.C. w/air	3154502
95	63	MONZA (CONV.)	4871816
96	63	MONZA (CONV.)	4871815
97	64	CORVAIR	3832607
91	64	CORVAIR	3832608
99	62-63	CORVAIR (exc. CONV.)	4867620
1	62-63	CORVAIR (exc. CONV.)	4867621
121	65-69	CORVAIR	3883840
122	65-69	CORVAIR	3899798
132	65-69	CORVAIR	3873979
133	67-69	CORVAIR w/C.A.C.	3013531
6		NOTE 1 Cut to required length.	

ADAPTER ASSY., htr. air dist. rear duct	1
BRACKET, cross air duct	2
EXTENSION, front duct (deluxe)	1
PLUG, rear, upper duct	1
SEAL, cross air duct	1
SEAL, air inlet to plenum	1
SEAL, htr. air dist. frt. valve	1
CLAMP, heater and blower hose—(1.166)	A.R.
CLAMP, htr. cooling air hose	1
CLAMP, htr. cooling air hose ($3^3/_{16}$" dia.)—(1.166)	A.R.
NUT, heater duct attaching (No. 14—10 "J" shape)—(1.269)	
HOSE (3 x 43 O.L.) (Note 1)—(9.260)	1
HOSE, htr. cooling air	1
HOSE, htr. to rear duct	1
HOSE ($2^{12}/_{32}$" x 25" O.L.)—(9.779) (Note 1)	1
HOSE (4 x 36" O.L.) (Note 1)	A.R.
BUSHING, air valve temp.	1
CONNECTOR, rear, rocker to pillar hose—(12.934)	L.H.
CONNECTOR, rear, rocker to pillar hose—(12.934)	R.H.
CONNECTOR, cross air duct to hose	L.H.
CONNECTOR, cross air duct to hose	R.H.
CONNECTOR ASSY., rocker to pillar hose—(12.934)	R.H.
CONNECTOR ASSY., rocker to pillar hose—(12.934)	L.H.
VALVE ASSY., htr. air distributor frt.	1
VALVE ASSY., htr. air distributor rear	1
SUPPORT, htr. rear duct	1
CLIP, temp. valve short retainer	1

9.787 CABLE ASSY.—CABLE UNIT—HOUSING—WIRE—KNOB—NUT—CLIP—CLAMP—RETAINER, Air Flow Control

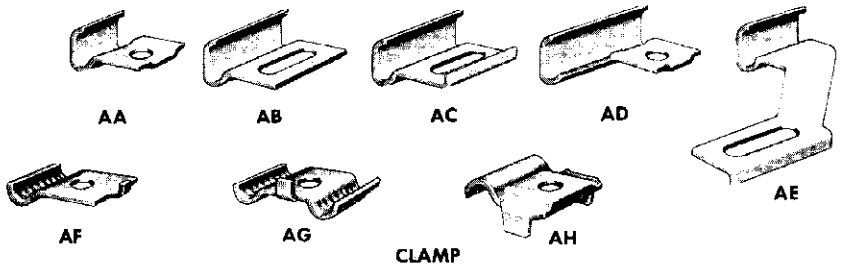









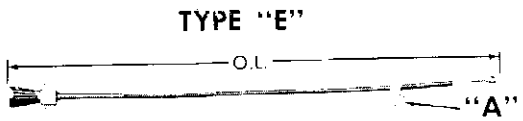

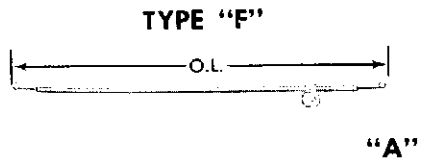

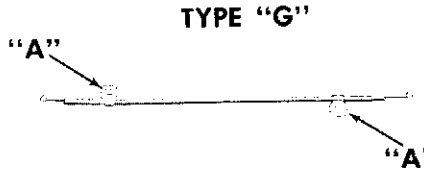

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60-61	CORVAIR w/gas—(A)	3785389	fan (20 3/4 O.L.)	1
60-61	CORVAIR w/gas—(B)	3785390	temperature (23 31/32 O.L.)	1
60-61	CORVAIR w/gas—(A)	3785391	defroster (13 1/2 O.L.)	1
60-64	CORVAIR,			
61-65	F.C. (exc. gas)—(E)	1990980	air vent (25 27/32 O.L.)	2
61-63	F.C. w/air—(C)	3820402	heater and defroster control (cut as required) (77 1/2 O.L.)	1
61-65	F.C. w/gas—(A)	3776980	fan (37 5/16 O.L.)	1
61-65	F.C. w/gas—(B)	3776981	heat (31 7/8 O.L.)	1
61-65	F.C. w/gas—(A)	3776982	defroster (27 O.L.)	1
61-65	F.C. w/gas—(E)	1990966	air vent (18 9/16 O.L.)	1
61-63	CORVAIR w/C.A.C.—(E)	3152169	distributor temp. control (front) (6 3/8 O.L.) (Note 1)	1
61-64	CORVAIR—(D)	3830855	shut off valve (139 3/4 O.L.) (Note 2)	1
61-64	CORVAIR—(D)	3830856	temp. control (134 15/16 O.L.) (Note 2)	1
61-65	F.C. w/air—(D)	3830857	temp. control (172 1/2 O.L.) (Note 2)	1
61-65	F.C. w/air—(D)	3830858	shut off valve (176 3/4 O.L.) (Note 2)	1
62-63	CORVAIR (exc. CONV.)—(C)	3821012	defroster (74 3/16 O.L.) (Note 3)	1
62-63	MONZA (CONV.)-(D)	3821049	defroster (51 3/16" O.L.) (NOTE 2)	R.H.
64	CORVAIR—(G)	3834290	defroster control w/clamp	1
64	F.C. w/Deluxe,			
65	F.C.	3834292	heater and defroster control	1
64	CORVAIR w/Custom (exc. SPYDER)—(E)	3837976	distributor temp. control	1
64	MONZA (CONV.)—(G)	3838332	defroster control	1
65-67	CORVAIR w/Custom Air Cond.—(D)	3873955	A/C air shut off control	1
65-69	CORVAIR—(G)	3859762	heat cont.	1
65-69	CORVAIR—(G)	3859764	htr. defr.	1
65-66	CORVAIR	4536716	cowl duct panel air (Note 6)	2
67	CORVAIR	7675644	w/knob (cowl duct panel air)	2
68-69	CORVAIR	7730093	w/knob (cowl duct panel air)	2
60-69	CORVAIR, F.C.	3862203	**CABLE UNIT,** vent., htr., air cond., defr. cables (Note 7)	1
	NOTE 7 Unit consists of tool, 13 ft. of housing, 60 ft. of wire and 36 clamps.			
60-69	CORVAIR, F.C.	3862201	**HOUSING,** cont. cables (13 ft.)	1
60-69	CORVAIR, F.C.	3862202	**WIRE,** vent., htr., air cond. cables (60 ft.)	1
61-64	CORVAIR w/C.A.C.	3783381	**KNOB,** distributor temp. control	1
60-69	CORVAIR, F.C.	381700	**NUT,** to attach shut-off, defroster and temperature control cable assy.	A.R.
60-61	CORVAIR (exc. MONZA, F.C.)	3908243	**CLIP,** heater fan control knob and cable assy. retaining—(4.054)	1
60	CORVAIR	554285	**CLIP,** heater defroster control knob and cable assy. retaining—(3.425)	1
61-65	F.C. w/air	3127960	**CLIP,** defroster control assy.	1
61-65	F.C.	3711115	**CLIP,** vent. control rod (1/2 x 1—grooved)	1
68-69	CORVAIR	7783546	**CLIP,** cowl panel air outlet cont.	2
60	CORVAIR—(AH)	3134163	**CLAMP,** fan, temp., and defroster cable to control, gas pipe burner to connector, defroster cable to air distributor—(9.281)	A.R.
61-62	CORVAIR, F.C. w/air (exc. CONV.)	3158728	**CLAMP,** heater and defroster control cable	1
64	F.C.—(AF)	3127015	**CLAMP,** air inlet control cable	1
62	CORVAIR (CONV.)—(AF)	3817618	**CLAMP,** htr. def. cbl. assy.	2
60-69	CORVAIR, F.C.—(AA)	3853554	**CLAMP** (5/8" O.L.)	A.R.
60-69	CORVAIR, F.C.—(AC)	3856539	**CLAMP** (1" O.L.)	A.R.
60-69	CORVAIR, F.C.—(AC)	3856541	**CLAMP** (1 1/4" O.L.)	A.R.
60-69	CORVAIR, F.C.—(AD)	3856543	**CLAMP** (1 1/4" O.L.)	A.R.
60-69	CORVAIR, F.C.—(AB)	3856545	**CLAMP** (1" O.L.)	A.R.
60-69	CORVAIR, F.C.—(AE)	3856547	**CLAMP** (2 1/16" O.L.)	A.R.
69	CORVAIR (exc. P.G.)	3929059	**RETAINER,** air inlet plenum valve link	1

NOTE 3 Clamp attaching hole 5/16" from end of cable.
NOTE 2. Clamp is used.
NOTE 1 Clamp "A" not used.
NOTE 5 Without knob.
NOTE 6 For companion parts see group 12.804.

9.789 GRILLE—DOOR—OUTLET ASSY.—LEVER ASSY.—ROD—SPRING—DEFLECTOR, Cowl Side and Heater Door (Valve—Compartment Air Inlet and Outlet)

60-64	CORVAIR	6256925		L.H.
60-64	CORVAIR	6256926		R.H.
65-66	CORVAIR (exc. STD.),			
67-69	CORVAIR	4527066	(black)	R.H.
65-66	CORVAIR (exc. STD.),			
67-69	CORVAIR	4527067	(black)	L.H.
65-66	CORVAIR (exc. STD.)	4527068	(red)	R.H.
65-66	CORVAIR (exc. STD.)	4527069	(red)	L.H.
65	CORVAIR (exc. STD.)	4527070	(blue)	R.H.
65	CORVAIR (exc. STD.)	4527071	(blue)	L.H.
65	CORVAIR (exc. STD.)	4527072	(slate)	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Information

65	CORVAIR (exc. STD.)	4527073	(slate)	L.H.
65	CORVAIR (exc. STD.)	4527074	(turquoise)	R.H.
65	CORVAIR (exc. STD.)	4527075	(turquoise)	L.H.
65	CORVAIR (exc. STD.)	4527076	(saddle)	R.H.
65	CORVAIR (exc. STD.)	4527077	(saddle)	L.H.
65	CORVAIR (exc. STD.)	4527078	(fawn)	R.H.
65	CORVAIR (exc. STD.)	4527079	(fawn)	L.H.
66	CORVAIR (STD.)	7591154	(blue)	R.H.
66	CORVAIR (STD.)	7591155	(blue)	L.H.
66	CORVAIR (exc. STD.)	7591156	(blue)	R.H.
66	CORVAIR (exc. STD.)	7591157	(blue)	L.H.
66	CORVAIR (exc. STD.)	7591158	(turquoise)	R.H.
66	CORVAIR (exc. STD.)	7591159	(turquoise)	L.H.
66	CORVAIR (STD.)	7591160	(fawn)	R.H.
66	CORVAIR (STD.)	7591161	(fawn)	L.H.
66	CORVAIR (exc. STD.)	7591162	(bronze)	R.H.
66	CORVAIR (exc. STD.)	7591163	(bronze)	L.H.
67	CORVAIR (exc. STD.)	7647536	(gold)	R.H.
67	CORVAIR (exc. STD.)	7647537	(gold)	L.H.
67	CORVAIR	7647538	(blue)	R.H.
67	CORVAIR	7647539	(blue)	L.H.
67	CORVAIR (STD.)	7647542	(fawn)	R.H.
67	CORVAIR (STD.)	7647543	(fawn)	L.H.
68	CORVAIR	7730442	cowl air outlet (blue)	R.H.
68	CORVAIR	7730443	cowl air outlet (blue)	L.H.
68	CORVAIR	7730444	cowl air outlet (gold)	R.H.
68	CORVAIR	7730445	cowl air outlet (gold)	L.H.
69	CORVAIR	8719658	duct air outlet (blue)	R.H.
69	CORVAIR	8719659	duct air outlet (blue)	L.H.
69	CORVAIR	8742222	side duct air outlet (med. green)	R.H.
69	CORVAIR	8742223	side duct air outlet (med. green)	L.H.
60-64	CORVAIR	6256841	**DOOR,** air vent	L.H.
60-64	CORVAIR	6256842	**DOOR,** air vent	R.H.
61-65	F.C.	3774869	**DOOR,** air vent	L.H.
64-65	F.C. (exc. gas)	3844988	**DOOR,** air vent	1
61-65	GREENBRIER w/air	3796164	**DOOR ASSY.,** rear deflector	1
65-69	CORVAIR	4481723	**DOOR ASSY.,** panel air outlet	L.H.
65-69	CORVAIR	4481722	**DOOR ASSY.,** panel air outlet	R.H.
60-64	CORVAIR	4887708	**OUTLET ASSY.,** duct air	L.H.
60-64	CORVAIR	4887707	**OUTLET ASSY.,** duct air	R.H.
65-69	CORVAIR (CONV.)	4527080	**OUTLET ASSY.,** duct air	R.H.
65-69	CORVAIR (CONV.)	4527081	**OUTLET ASSY.,** duct air	L.H.
64-65	F.C. (exc. gas)	3844989	**LEVER ASSY.,** air vent valve	1
64-65	F.C. (exc. gas)	3844993	**ROD,** air vent valve control	1
64-65	F.C. (exc. gas)	3844994	**SPRING,** air vent valve	1
61-64	CORVAIR w/air (exc. CONV.)	3815068	**DEFLECTOR,** front, air	R.H.
61-64	CORVAIR w/air (exc. CONV.)	3815067	**DEFLECTOR,** front, air	L.H.
62-64	MONZA (CONV.)	3841929	**DEFLECTOR,** front (air)	L.H.
61-65	GREENBRIER w/air	3782078	**DEFLECTOR,** air, rear	1
61-63	CORVAIR, w/air,			
64	CORVAIR	3841432	**DEFLECTOR,** air rear	2

NOTE 1. For integral grille type, see panels in group 14.630.

9.795 THERMOSTAT ASSY.—VALVE ASSY., Heater Air Distributor

60-64	CORVAIR, F.C., w/gas,			
65	F.C.	3149513	(Note 1)	1

NOTE 1 Not used with I.C.C. approved equipment on Greenbrier.

62-64	GREENBRIER w/gas	3152525	(Note 2)	1

NOTE 2 I.C.C. approved for Greenbrier use.

69	CORVAIR w/C.A.C.	3940250	**VALVE ASSY.,** heater vacuum water shut-off,	

9.988 LAMP UNIT, Luggage Compartment

69	CORVAIR	993551		1

9.990 FIRE EXTINGUISHER—RECHARGE KIT

62-69	CORVAIR, F.C.	985592	fire ($2\frac{3}{4}$ lb.)	1
60-69	CORVAIR, F.C.	3907132	fire (17 ounce dry chem.)	1
62-69	CORVAIR, F.C.	985593	**RECHARGE KIT** ($2\frac{3}{4}$ lb.) (Note 1)	1

NOTE 1 Use "As Required" for 5 lb. Extinguisher.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 10.000

WINDSHIELD—

DOORS—CONTROLS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

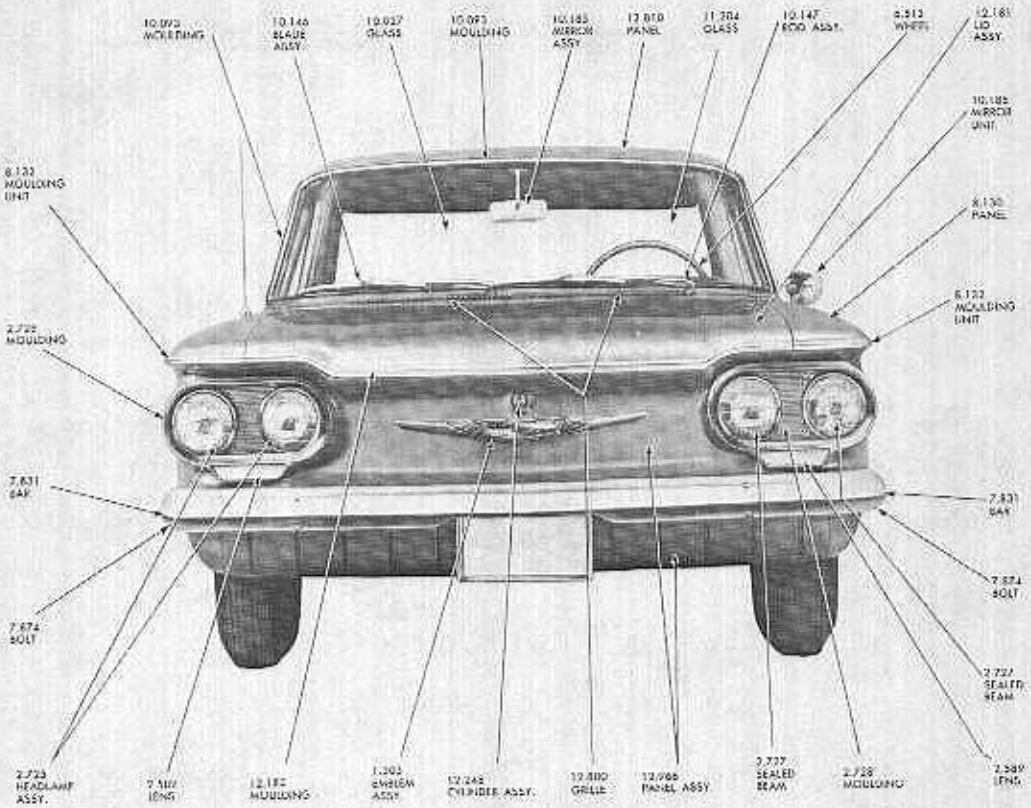

1960-64 CORVAIR FRONT END

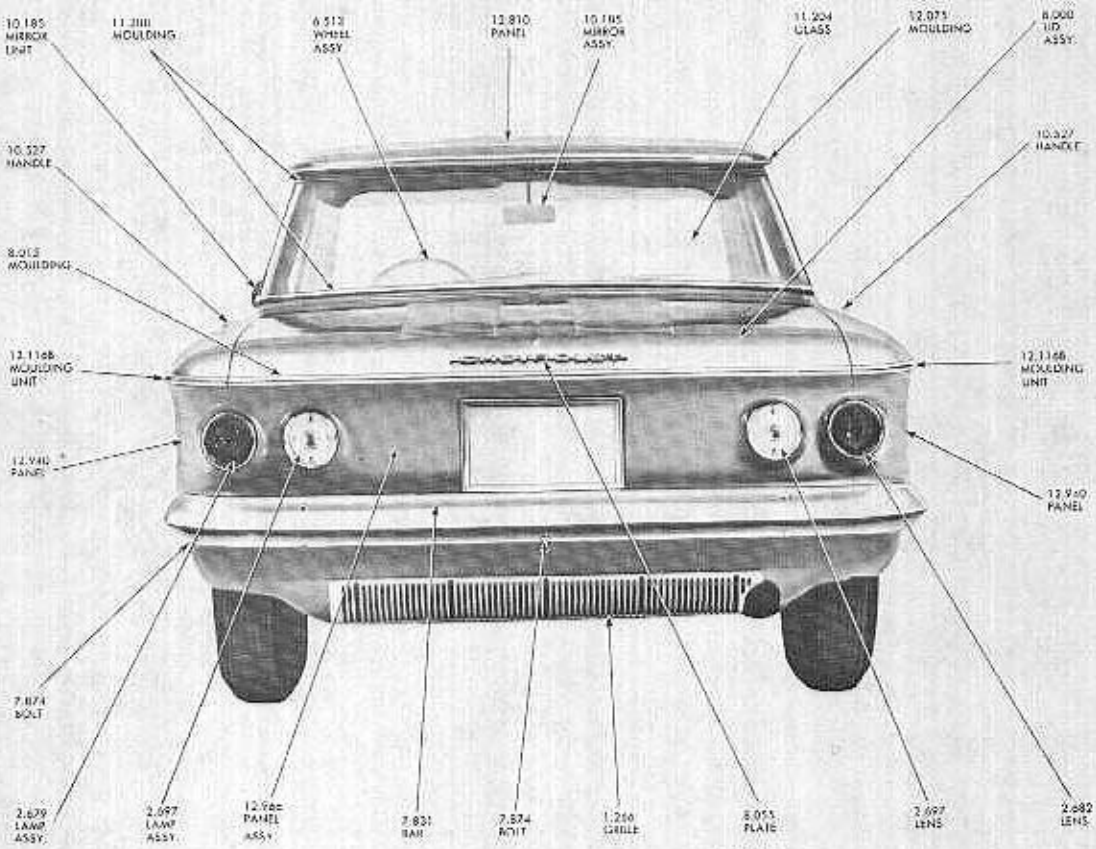

1960-64 CORVAIR REAR END

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

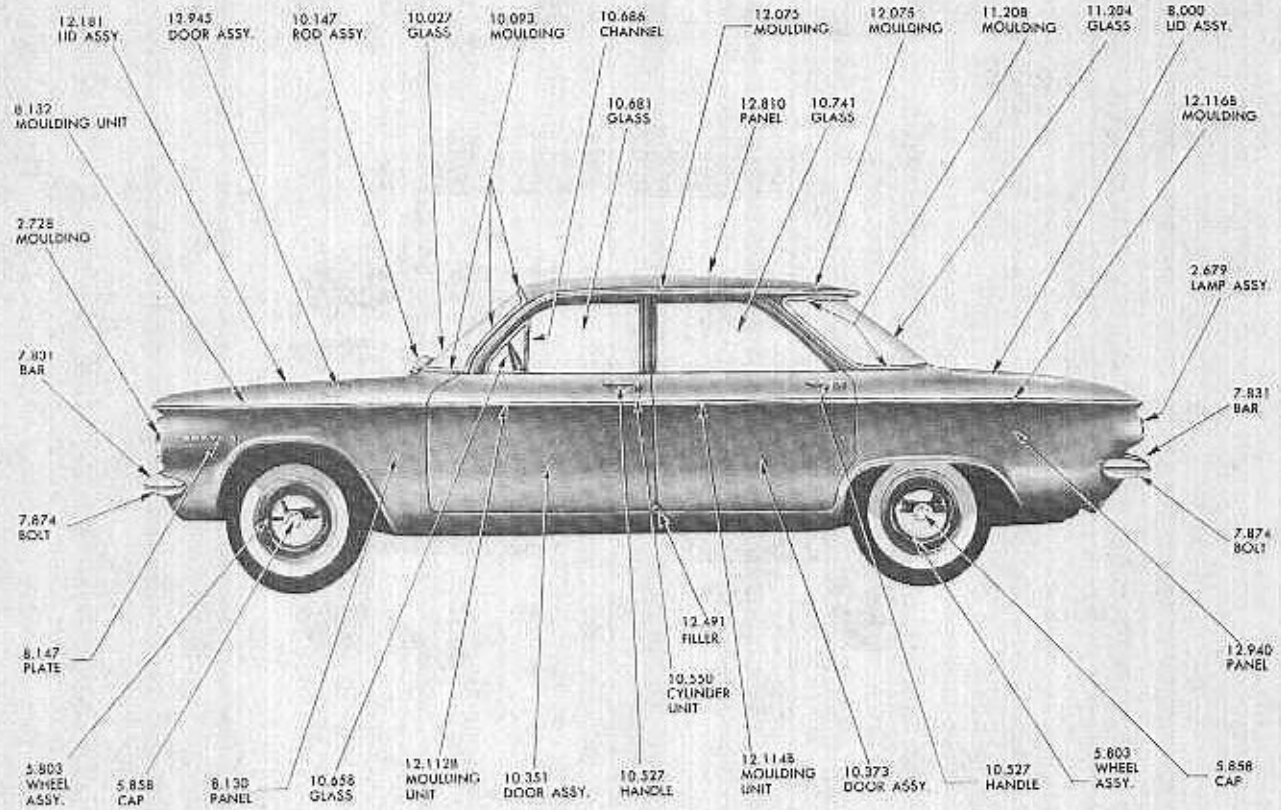

1960-61 CORVAIR DELUXE FOUR DOOR SEDAN

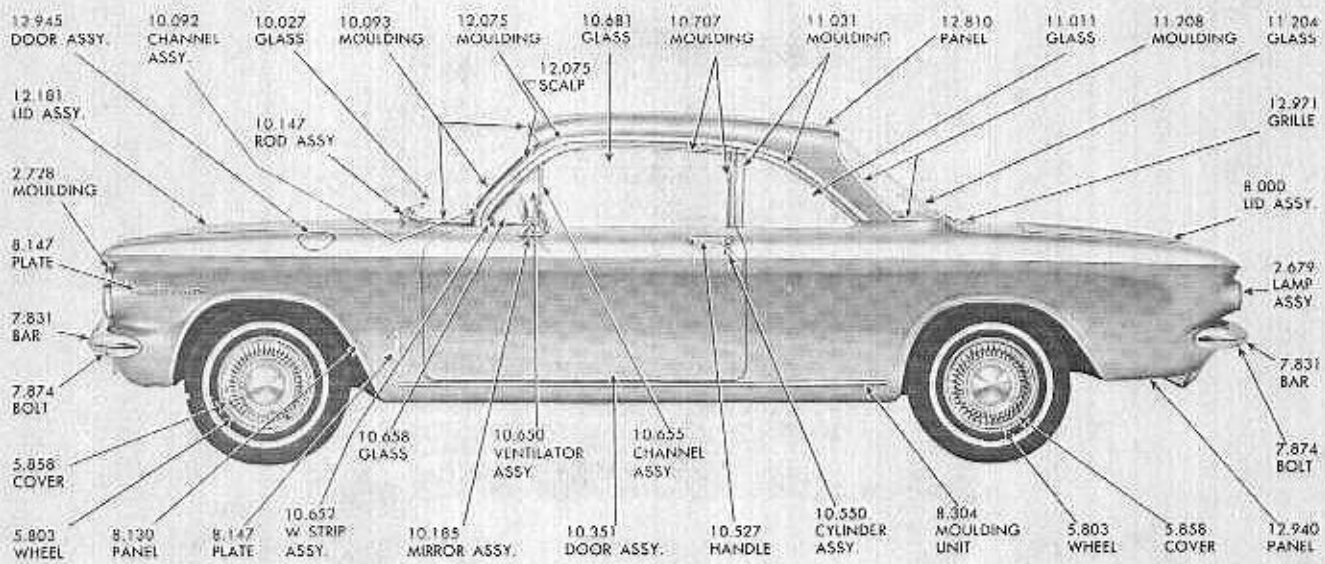

1960-61 CORVAIR MONZA CLUB COUPE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

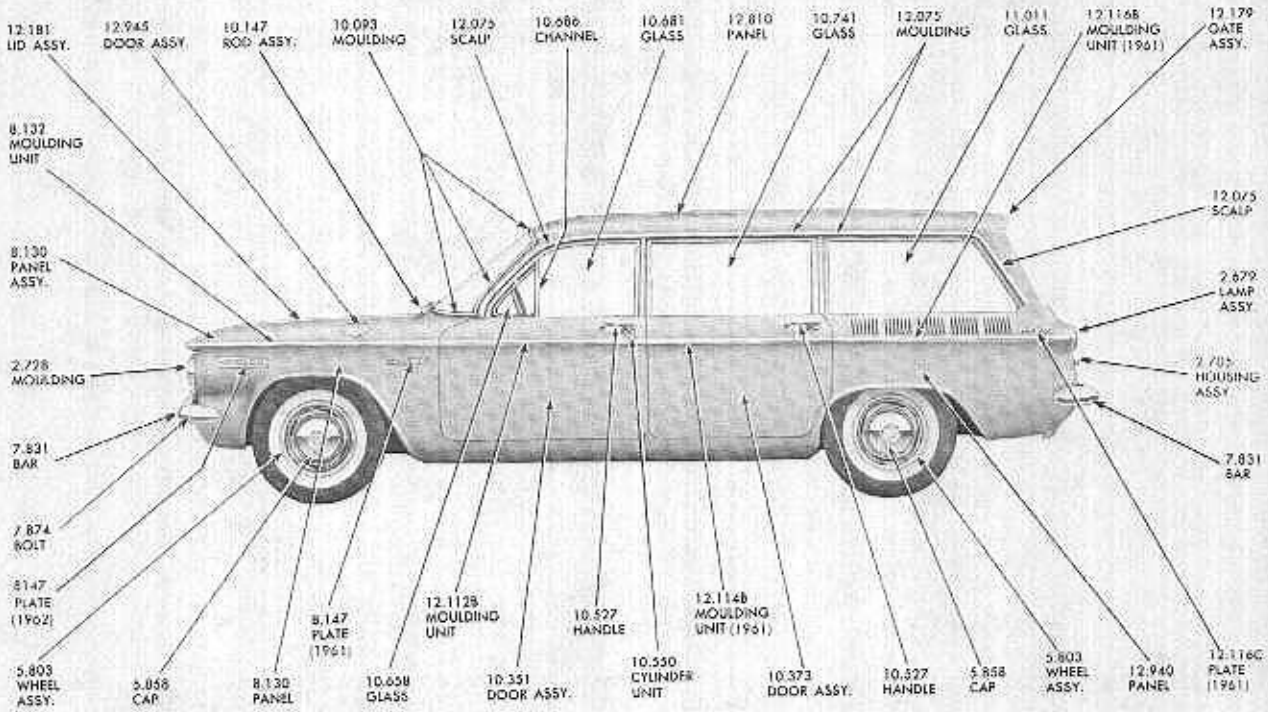

1961-62 CORVAIR STATION WAGON

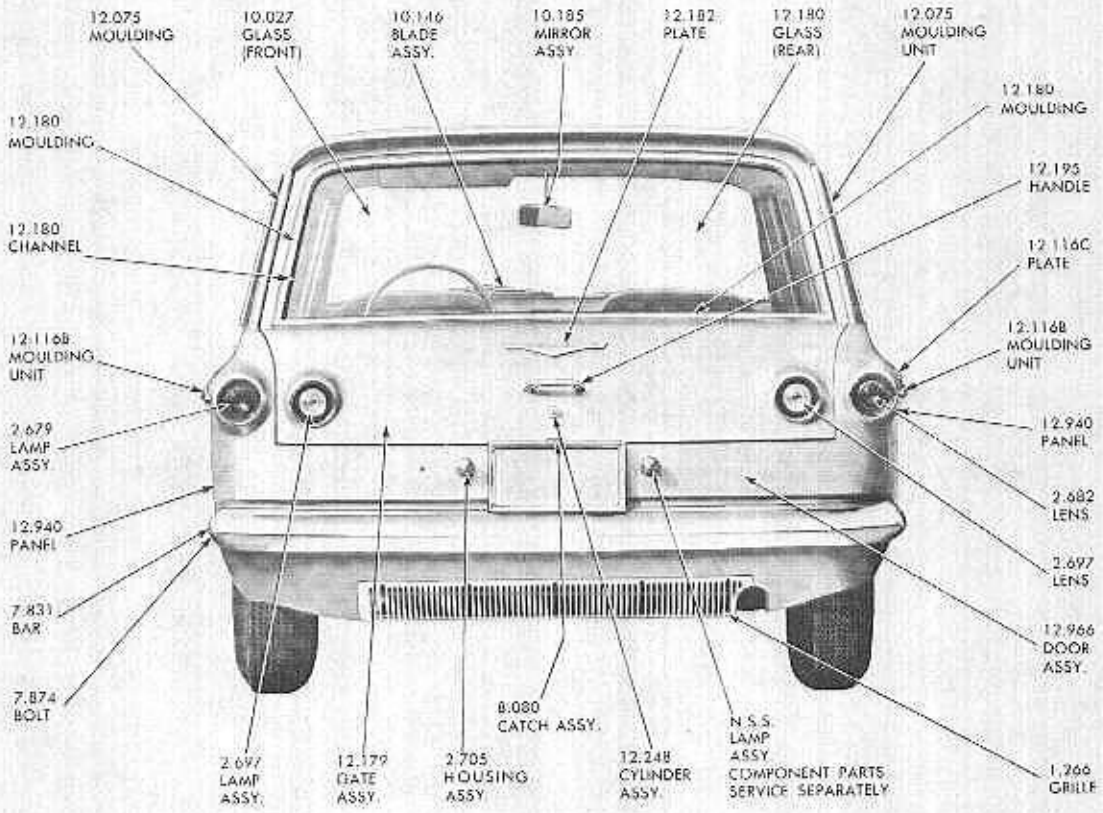

1961-62 CORVAIR STATION WAGON REAR END

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

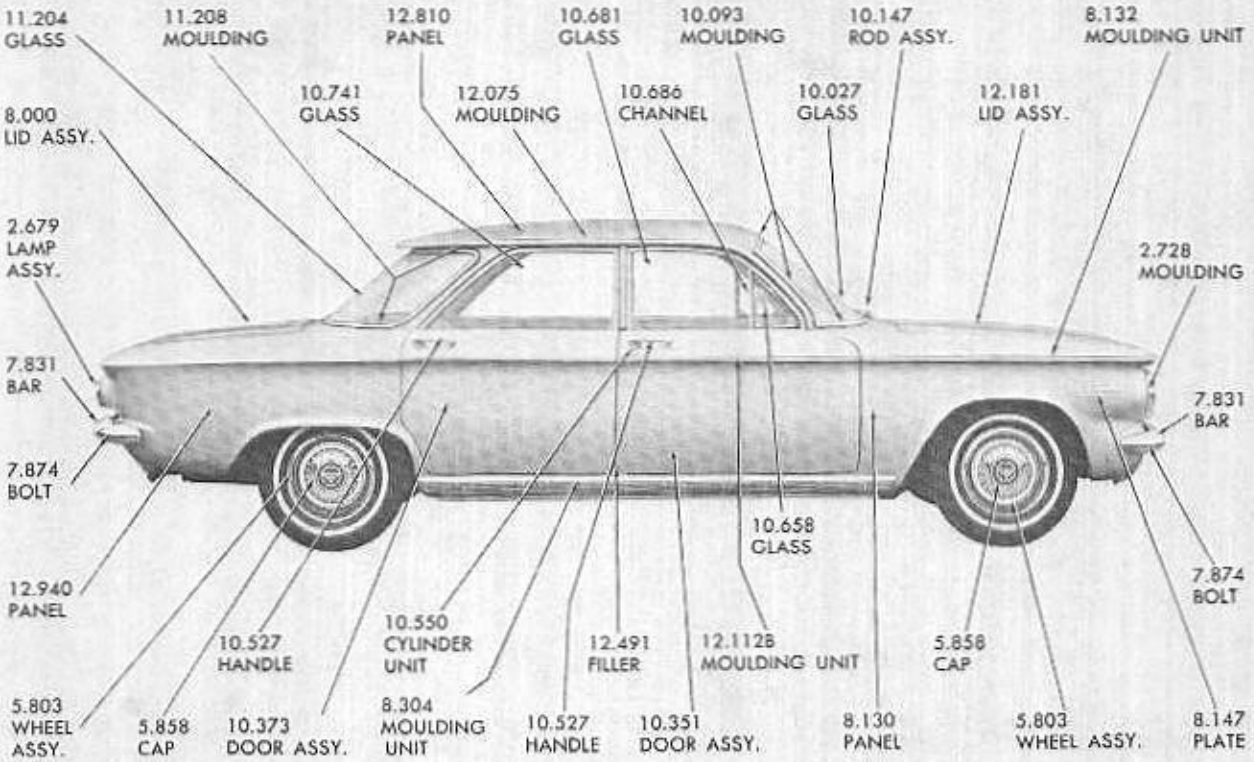

1962-64 CORVAIR DELUXE FOUR DOOR SEDAN

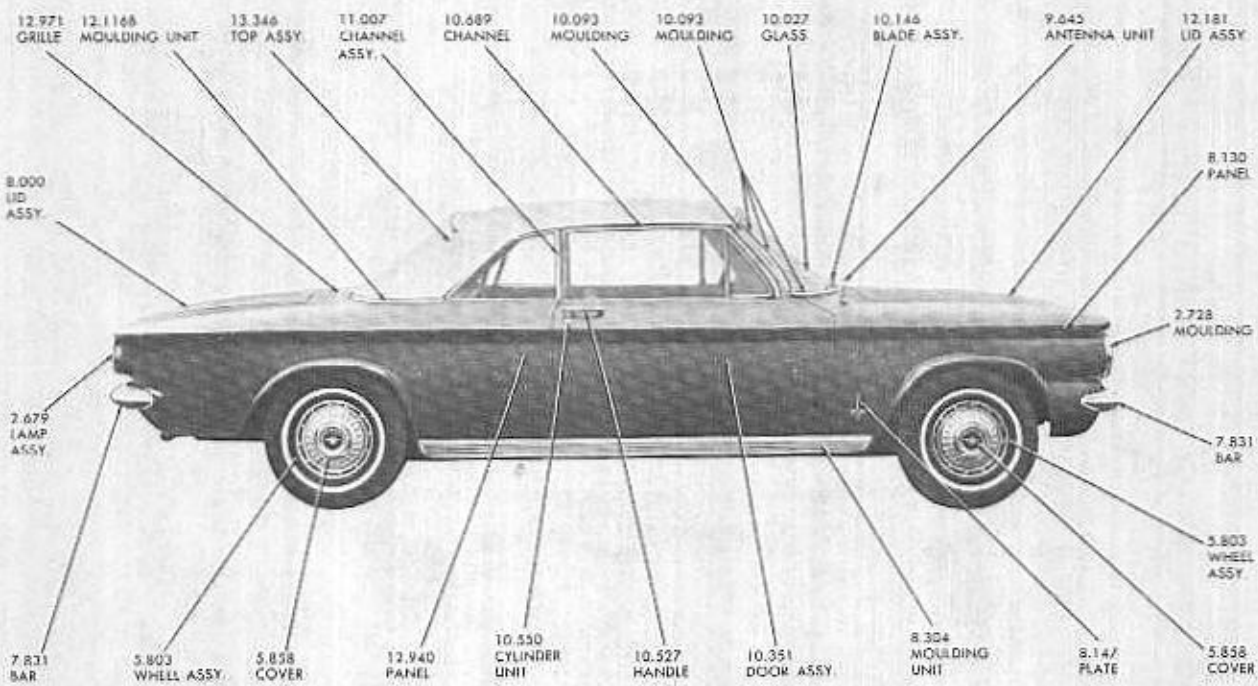

1962-64 CORVAIR CONVERTIBLE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

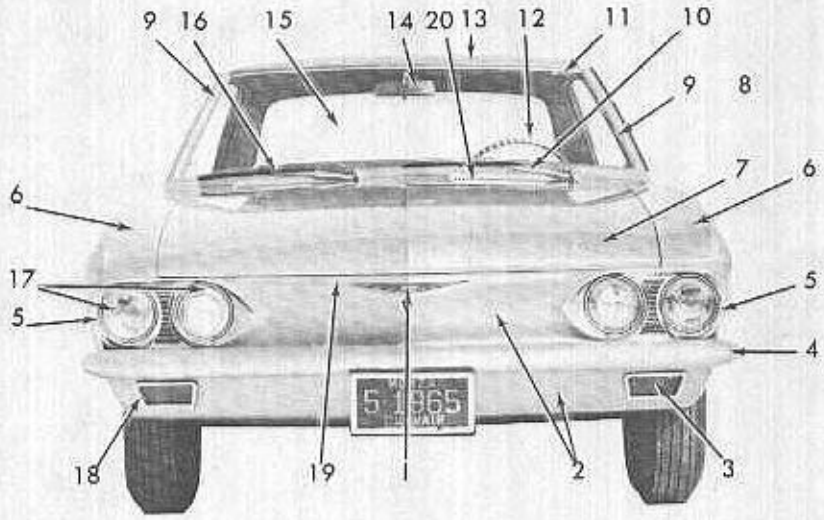

1965-69 CORVAIR FRONT END

1.	1.303	EMBLEM ASSEMBLY
2.	12.966	PANEL ASSEMBLY
3.	2.589	LENS
4.	7.831	BAR
5.	2.728	MOULDING
6.	8.130	PANEL
7.	8.055	EMBLEM
8.	12.181	LID
9.	10.093	MOULDING
10.	10.147	ARM ASSEMBLY
11.	10.093	MOULDING
12.	6.513	WHEEL
13.	12.810	PANEL
14.	10.185	MIRROR ASSEMBLY
15.	10.027	GLASS
16.	10.146	BLADE ASSEMBLY
17.	2.725	HEAD LAMP ASSEMBLY
18.	2.585	LAMP ASSEMBLY
19.	12.182	MOULDING
20.	12.800	GRILLE

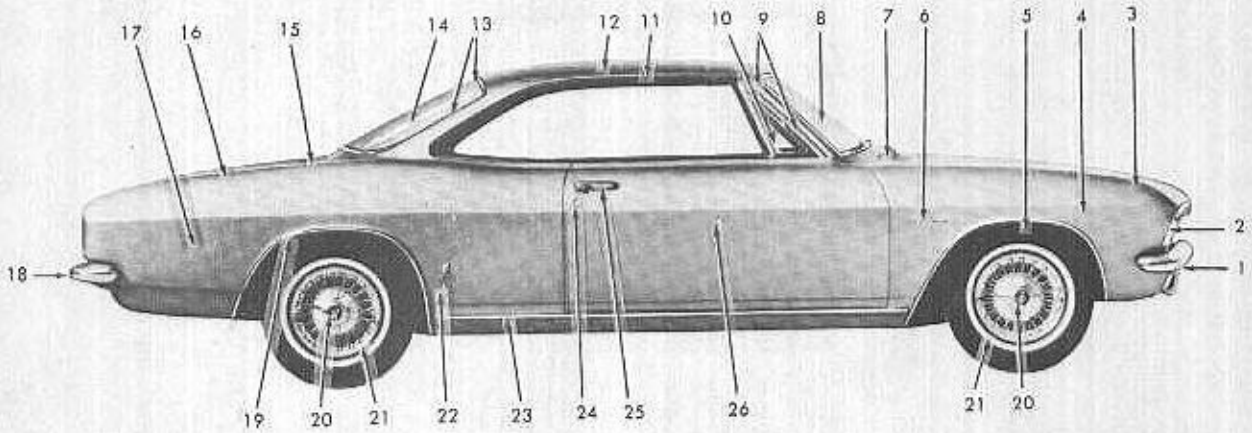

1965-69 CORVAIR CORSA SPORT COUPE

1.	7.831	BAR
2.	2.728	MOULDING
3.	12.181	LID ASSEMBLY
4.	8.130	PANEL
5.	8.132	MOULDING UNIT
6.	8.147	PLATE
7.	10.146	BLADE ASSEMBLY
8.	10.027	GLASS
9.	10.093	MOULDING
10.	10.658	GLASS
11.	12.075	MOULDING
12.	12.810	PANEL
13.	11.208	MOULDING
14.	11.204	GLASS
15.	12.971	GRILLE
16.	8.000	LID
17.	12.940	PANEL
18.	7.831	BAR
19.	12.116B	MOULDING UNIT
20.	5.813	NUT
21.	5.803	WHEEL
22.	12.116C	EMBLEM
23.	8.304	MOULDING UNIT
24.	10.550	CYLINDER UNIT
25.	10.527	HANDLE
26.	10.351	DOOR ASSEMBLY

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

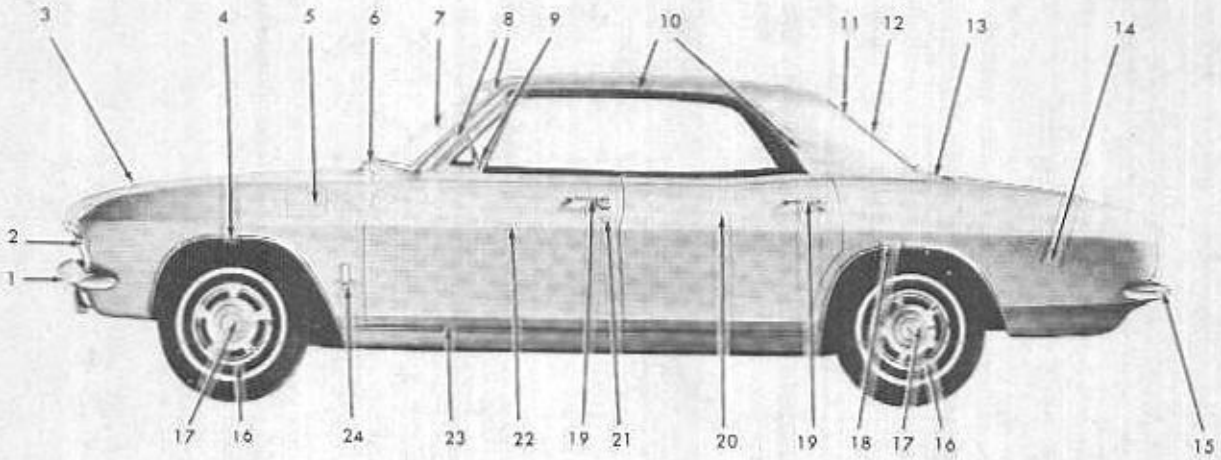

1965-69 CORVAIR MONZA SPORT SEDAN

1.	7.831	BAR
2.	2.728	MOULDING
3.	12.181	LID ASSEMBLY
4.	8.132	MOULDING UNIT
5.	12.945	DOOR ASSEMBLY
6.	12.147	ARM ASSEMBLY
7.	10.027	GLASS
8.	10.093	MOULDING
9.	10.658	GLASS
10.	12.075	MOULDING
11.	11.208	MOULDING
12.	11.204	GLASS
13.	12.971	GRILLE
14.	12.940	PANEL
15.	7.831	BAR
16.	5.803	WHEEL
17.	5.858	COVER
18.	12.116B	MOULDING UNIT
19.	10.527	HANDLE
20.	10.373	DOOR ASSEMBLY
21.	10.550	CYLINDER UNIT
22.	10.351	DOOR ASSEMBLY
23.	8.304	MOULDING UNIT
24.	8.147	PLATE

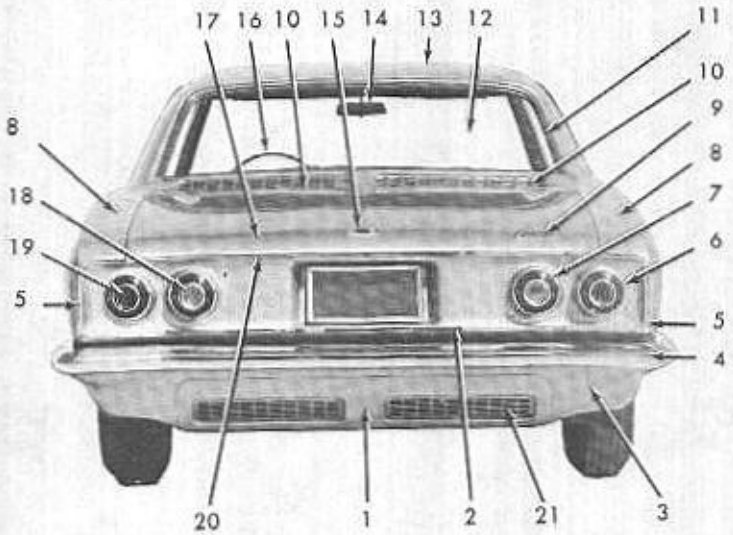

1965-69 CORVAIR REAR END

1.	1.266	GRILLE
2.	12.121	MOULDING
3.	12.966	PANEL ASSEMBLY
4.	7.831	BAR
5.	12.116	MOULDING
6.	2.679	LAMP ASSEMBLY
7.	2.697	LAMP ASSEMBLY
8.	12.940	PANEL
9.	8.055	PLATE
10.	12.971	GRILLE
11.	11.208	MOULDING
12.	11.204	GLASS
13.	12.810	PANEL
14.	10.185	MIRROR ASSEMBLY
15.	8.055	PLATE
16.	6.513	WHEEL
17.	8.000	LID
18.	2.697	LENS
19.	2.682	LENS
20.	12.182	MOULDING
21.	1.267	INSERT (Corsa Only)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

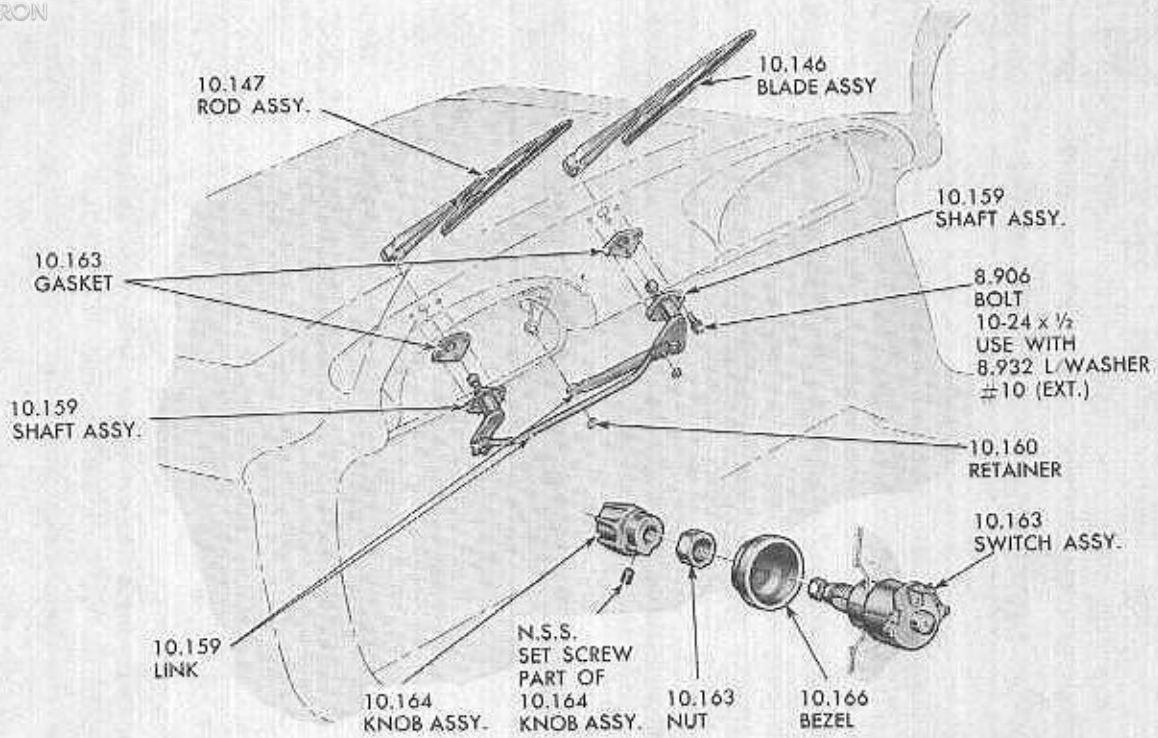

WINDSHIELD WIPER LINKAGE

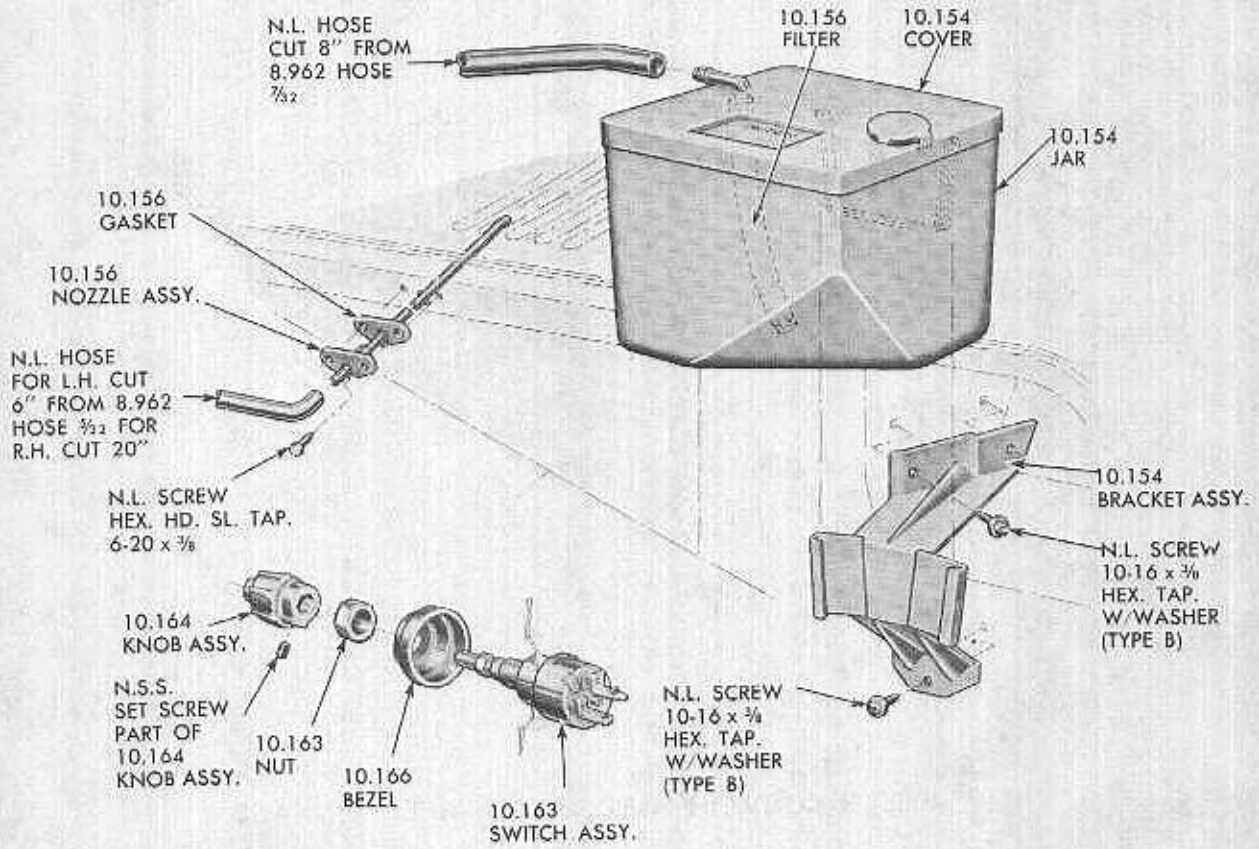

WINDSHIELD WASHER DETAILS

1960-64 CORVAIR W/S WIPER AND WASHER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

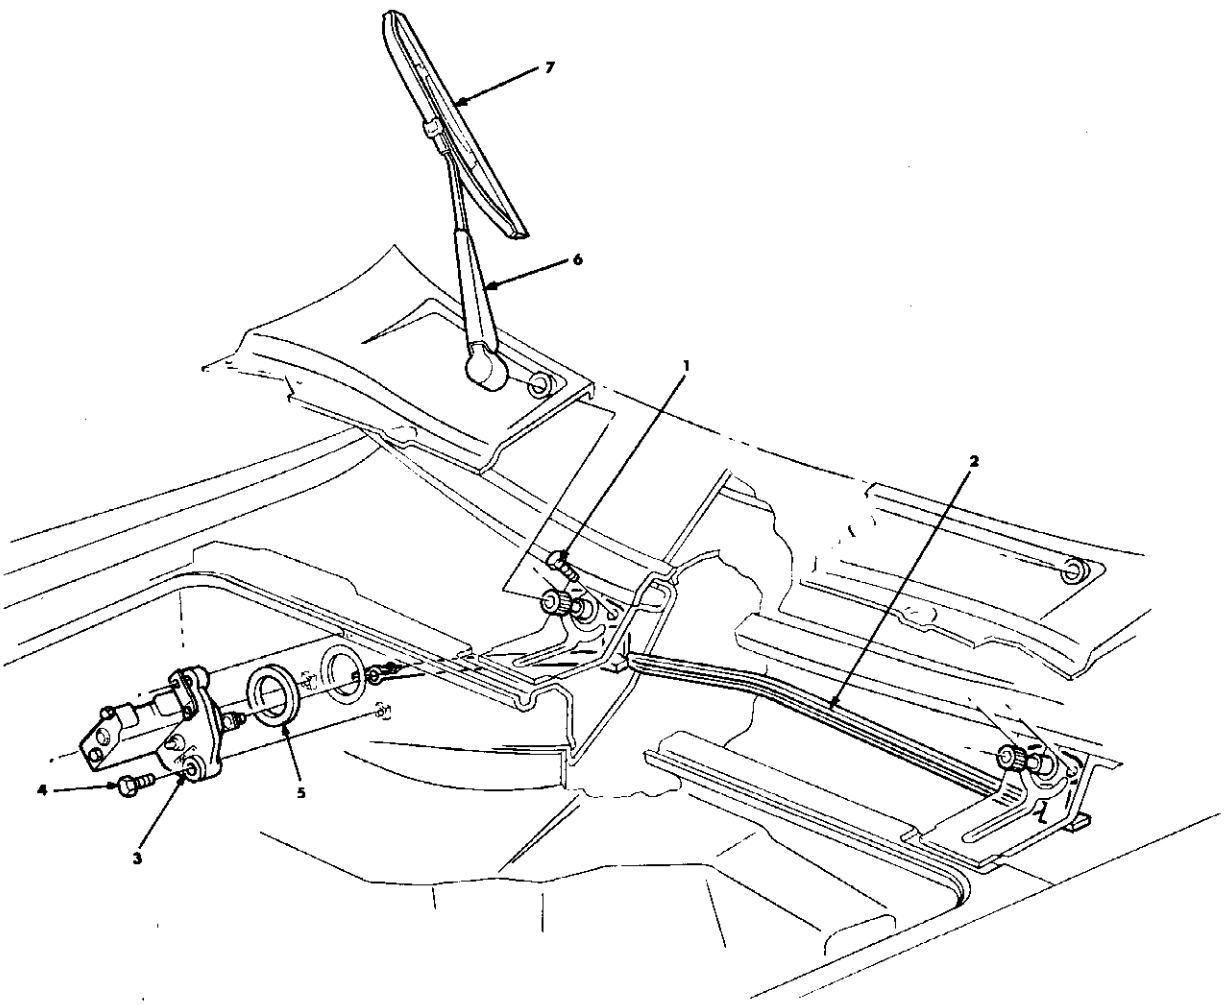

1965-69 CORVAIR WINDSHIELD WIPER LINKAGE

1.	8.900	SCREW (10–24 x 3/4)		5.	10.152	GASKET	3840795
2.	10.159	LINK ASSY.	4915410-11	6.	10.147	ROD ASSY.	3856568
3.	10.150	MOTOR ASSY.	4911945	7.	16.062	BLADE ASSY.	3779741
4.	8.908	SCREW (#10–24 x 1)					

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

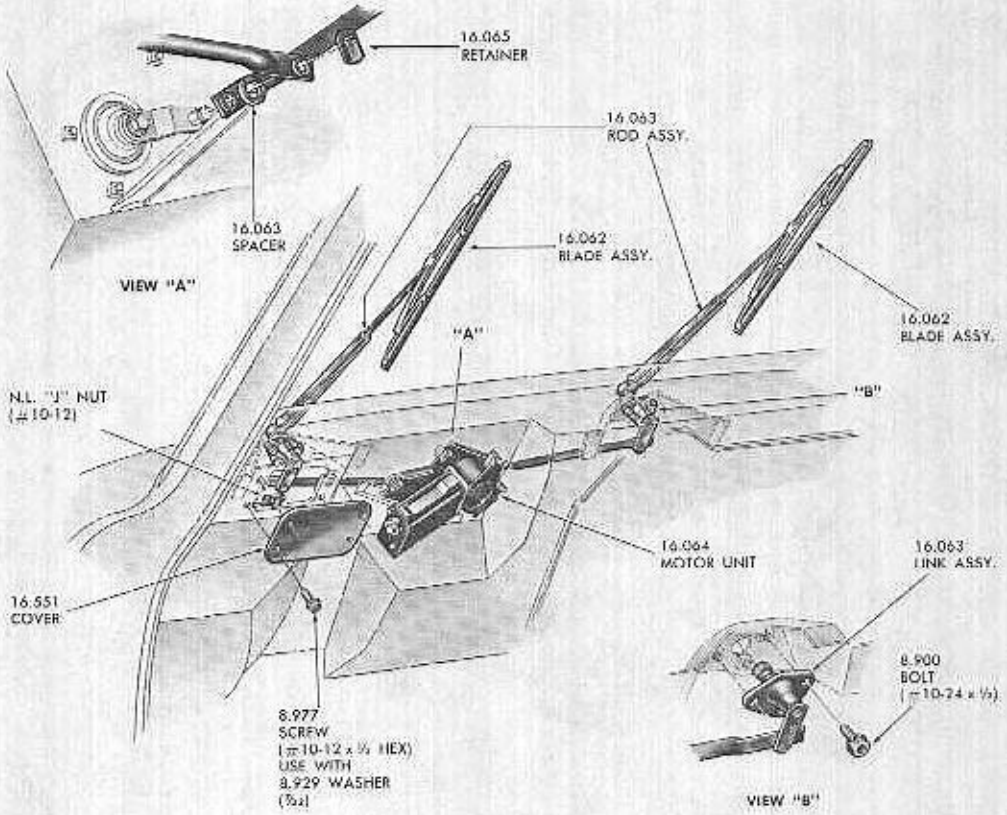

1961-65 CORVAIR F.C. WINDSHIELD WIPER LINKAGE

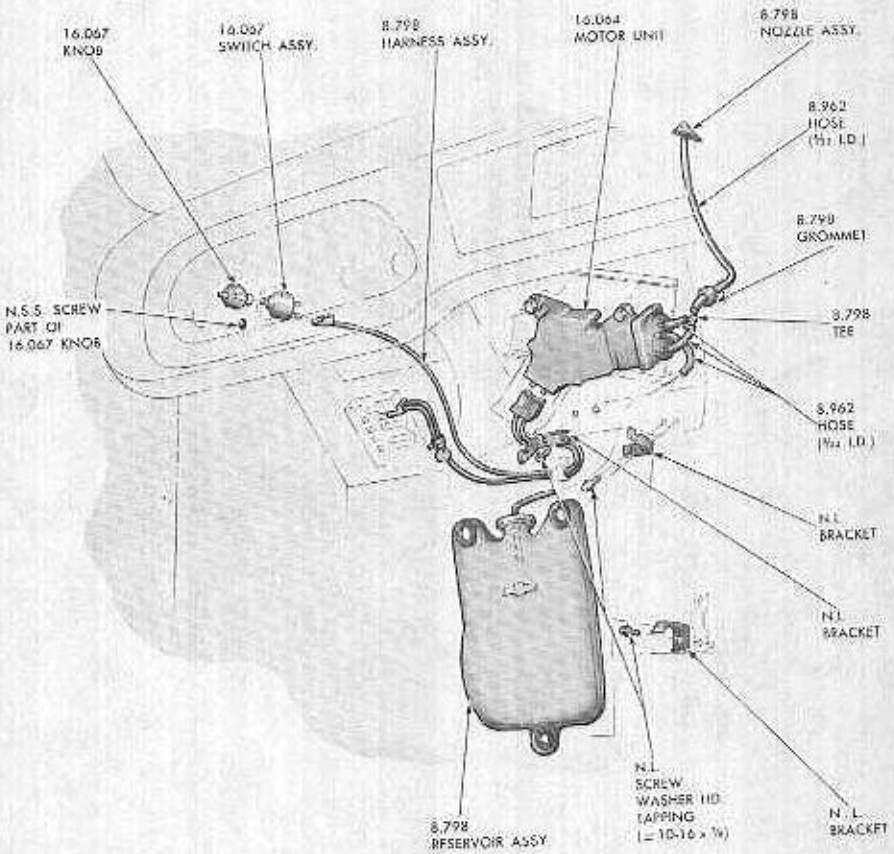

1961-65 CORVAIR F.C. WINDSHIELD WASHER DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

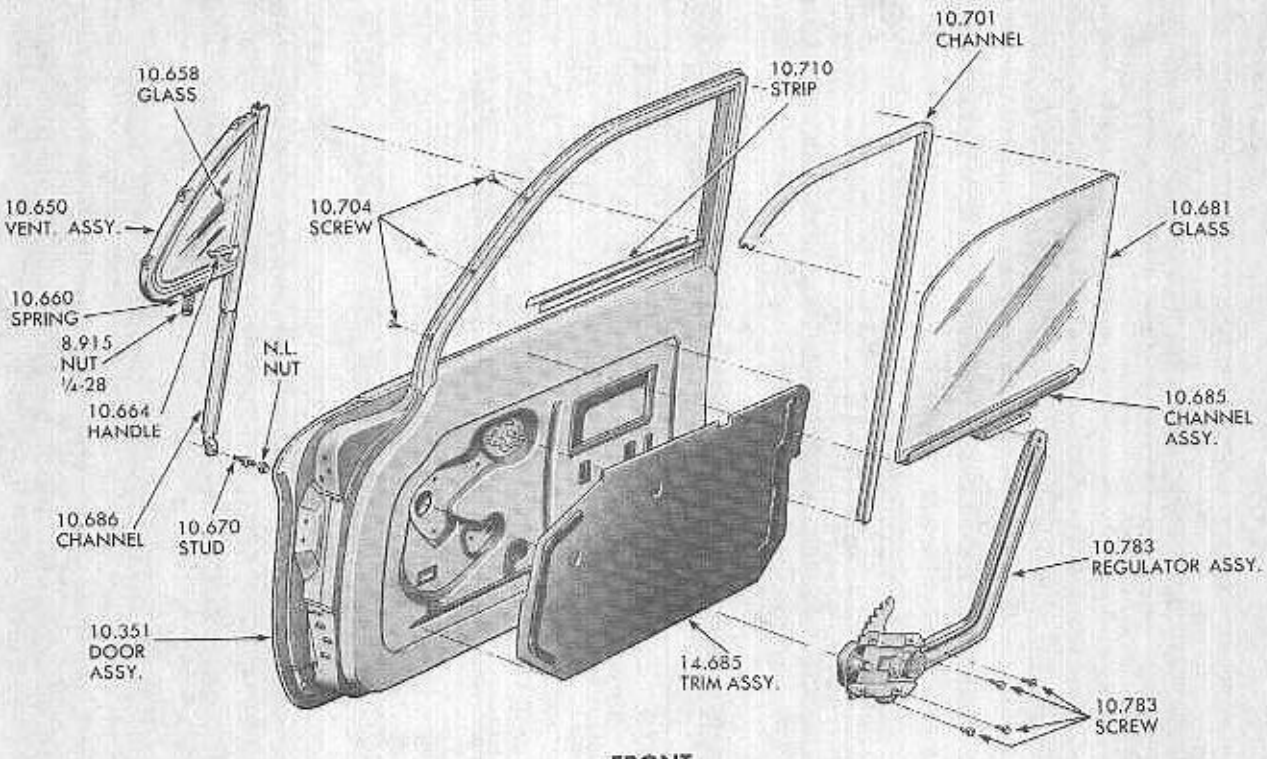

FRONT

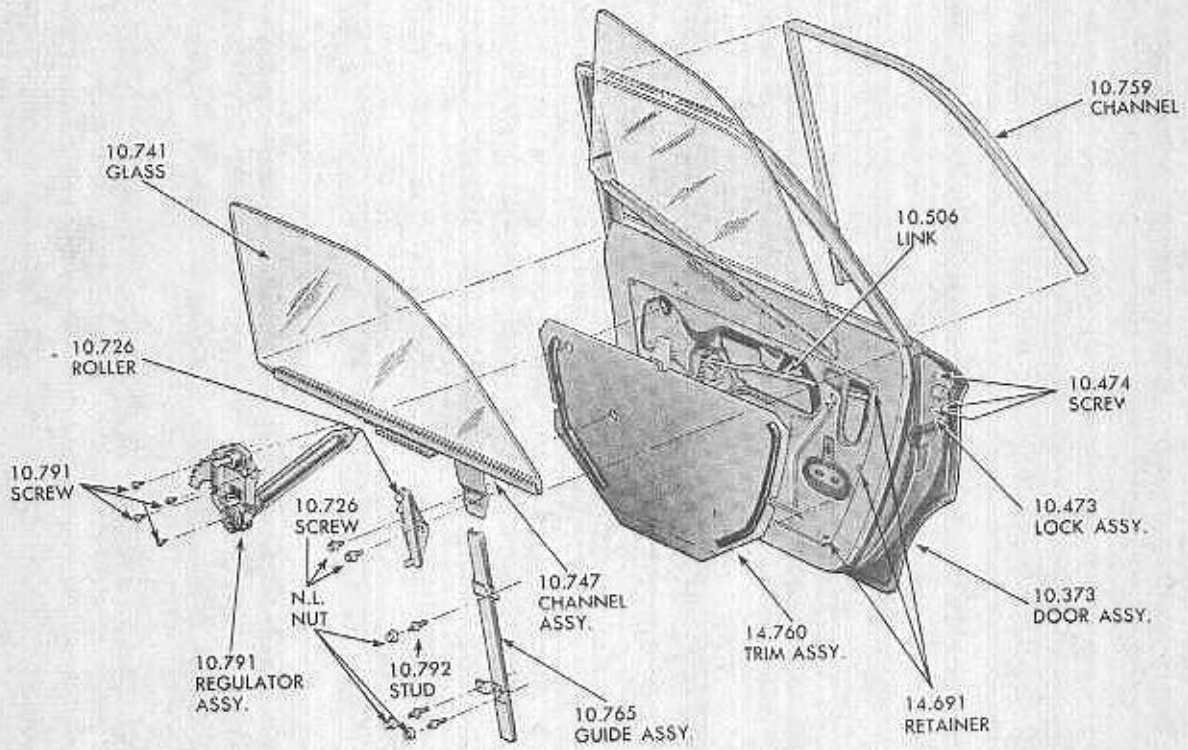

REAR

1960-64 CORVAIR FRONT AND REAR DOOR PARTS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

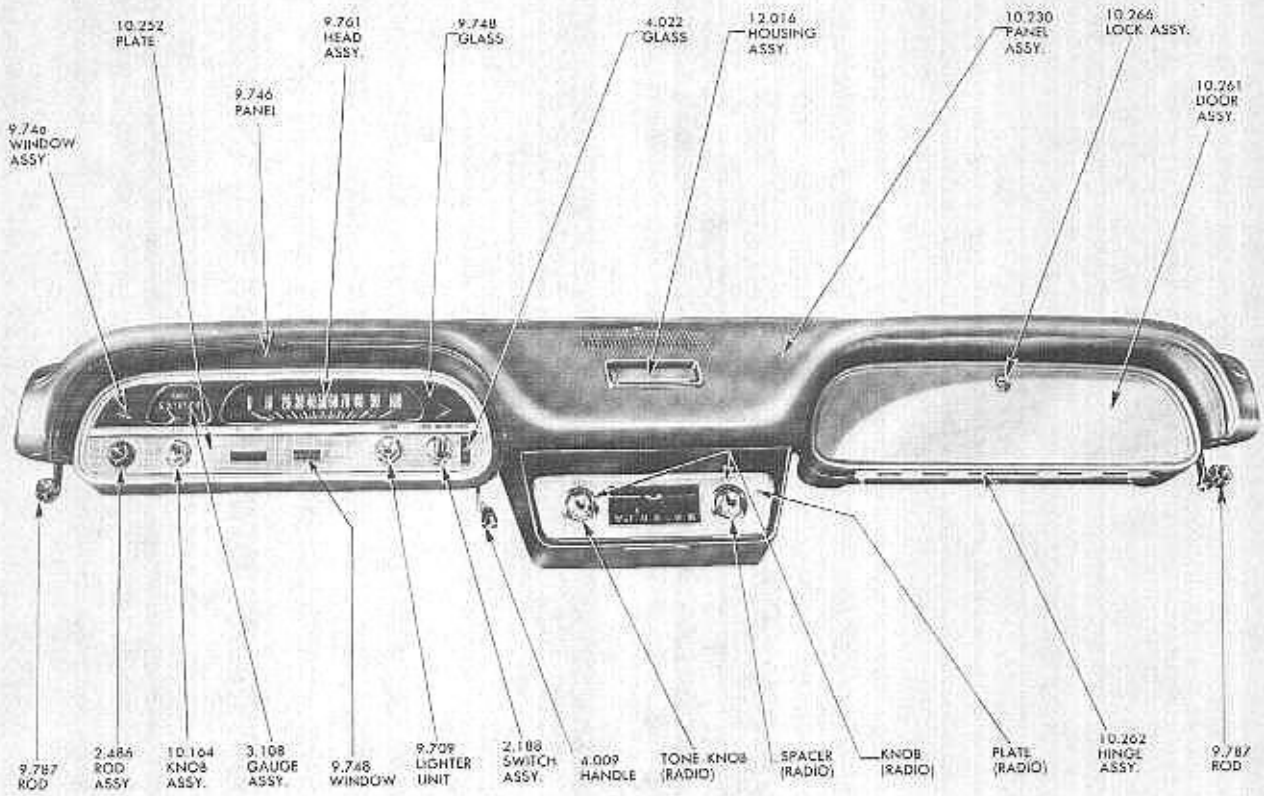

1960-64 CORVAIR INSTRUMENT PANEL

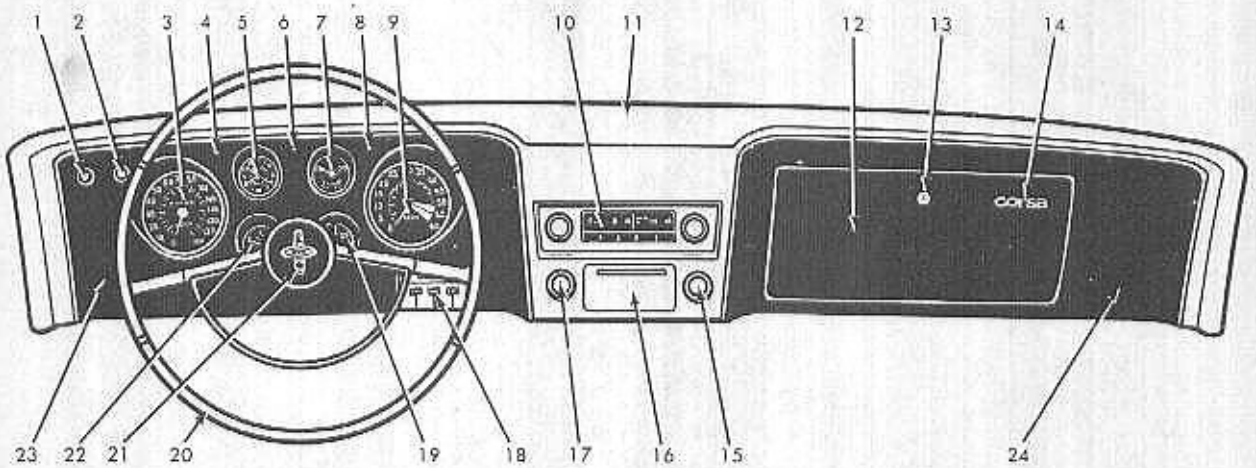

1965-69 CORVAIR INSTRUMENT PANEL

1.	2.485	SWITCH ASSY.
2.	10.164	KNOB
3.	4.330	HEAD ASSY.
4.	9.748	WINDOW
5.	9.772	CLOCK
6.	9.748	LENS
7.	1.148	GAUGE ASSY.
8.	9.748	WINDOW
9.	9.750	TACHOMETER
10.	9.650	RADIO
11.	10.230	PANEL ASSY.
12.	10.261	DOOR
13.	10.266	LOCK ASSY.
14.	10.261	EMBLEM
15.	9.709	LIGHTER UNIT
16.	12.009	TRAY ASSY.
17.	2.188	SWITCH ASSY.
18.	8.852	CONTROL ASSY.
19.	9.755	GAUGE ASSY.
20.	6.513	WHEEL
21.	2.820	CAP
22.	3.108	GAUGE ASSY.
23.	9.743	PLATE
24.	10.252	MOULDING

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

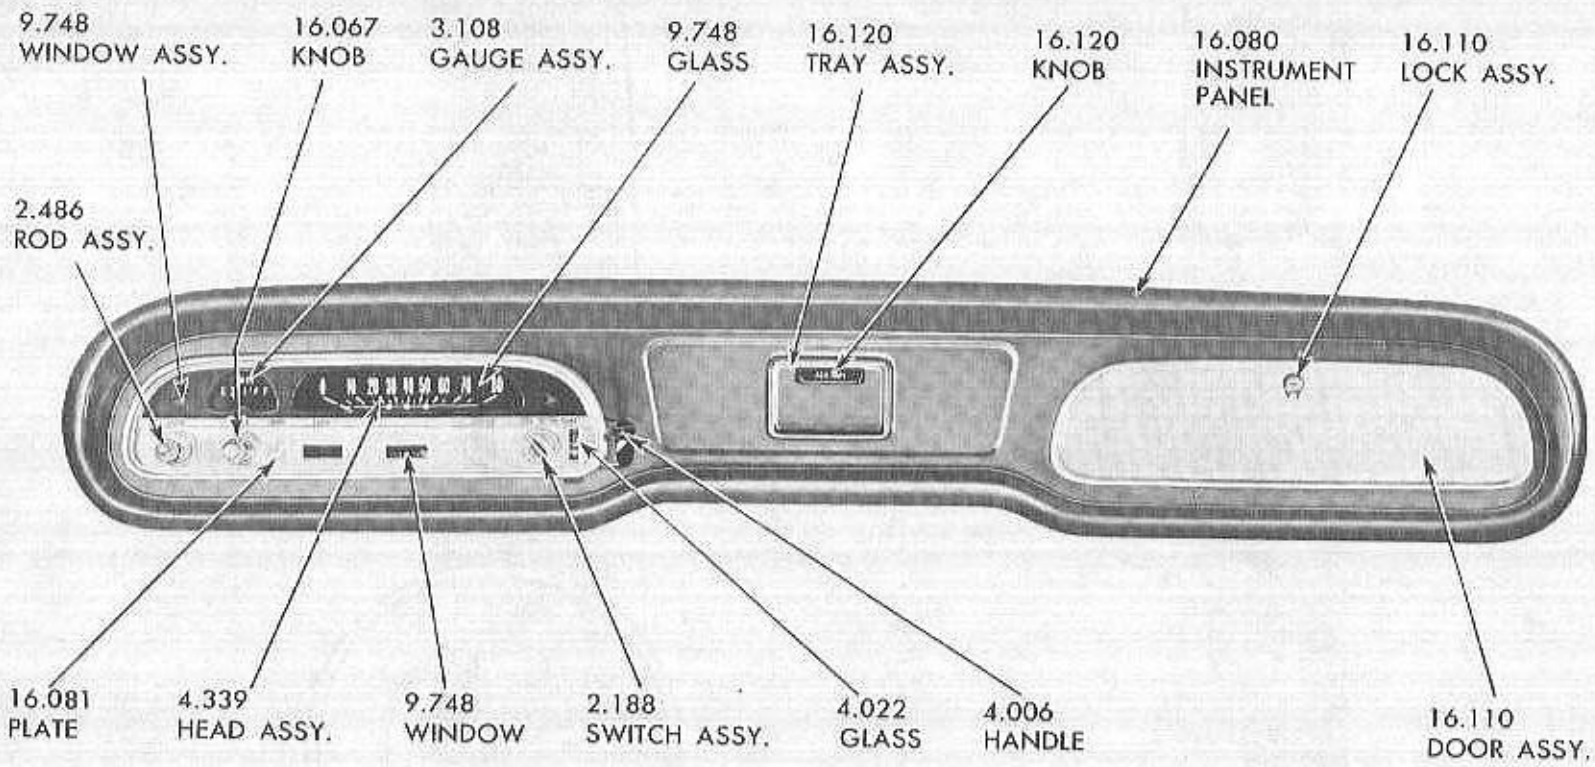

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

10.027 GLASS—KIT—PRIMER—SPACER, Windshield

60-64	CORVAIR (exc. STA. WAG.)	6275914	(clear)	1
60-64	CORVAIR (exc. STA. WAG.)	6279575	(tinted)	1
65	CORVAIR	4459578	(clear)	1
66-69	CORVAIR	7584393	(tinted)	1
66-69	CORVAIR	7584392	(clear)	1
ALL	CORVAIR	4226000	**KIT**, adhesive caulking (Note 1)	A.R.
All	CORVAIR	4226001	**PRIMER**, painted surface (1 pint cans) (Note 1)	A.R.

NOTE 1 For use in replacing windshield glass, back window glass (exc. Sta. Wagons) and rear quarter stationary window glass on Sta. Wagons.

65-66	CORVAIR	4410043	**SPACER**, adhesive caulked glass ($^{3}/_{16}$ x $^{15}/_{64}$ x $^{3}/_{4}$—rubber)	3
65-69	CORVAIR	4404196	**SPACER**, adhesive caulked glass ($^{19}/_{64}$" x $^{7}/_{16}$" x 1—rubber)	12
65-66	CORVAIR	4421823	**SPACER**, adhesive caulked glass (1/5 x $^{5}/_{8}$ x 1 plus rubber)	3
65-69	CORVAIR	4871330	**SPACER**, adhesive caulked glass ($^{11}/_{32}$" x $^{7}/_{16}$" x 1")	A.R.
67-69	CORVAIR	4459429	**SPACER** ($^{3}/_{16}$" x $^{1}/_{2}$" x 1)	A.R.
67-69	CORVAIR	4534314	**SPACER** ($^{3}/_{8}$" x $^{7}/_{16}$" x 1)	A.R.

10.051 MOULDING—TRIM ASSY., Windshield Garnish

60-64	CORVAIR	6277056	lower	R.H.
60-64	CORVAIR	6277057	lower	L.H.
60-64	CORVAIR	6277060	lower side	R.H.
60-64	CORVAIR	6277061	lower side	L.H.
60-61 62-64	ALL (exc. LAKEWOOD), CORVAIR (exc. STA. WAG. CONV.)	6276374	upper	R.H.
60-61 62-64	ALL (exc. LAKEWOOD), CORVAIR (exc. STA. WAG. CONV.)	6276375	upper	L.H.
65-67	MONZA (CONV.)	4493003	side (plastic)	R.H.
65-67	MONZA (CONV.)	4493004	side (plastic)	L.H.
65-67	CORVAIR (exc. CONV.)	4493001	side (plastic)	R.H.
65-67	CORVAIR (exc. CONV.)	4493002	side (plastic)	L.H.
68	CORVAIR (SPT. CPE.)	7729702	**MOULDING ASSY.**, side (black)	R.H.
68	CORVAIR (SPT. CPE.)	7729703	**MOULDING ASSY.**, side (black)	L.H.
68	CORVAIR (SPT. CPE.)	7729704	**MOULDING ASSY.**, side (blue)	R.H.
68	CORVAIR (SPT. CPE.)	7729705	**MOULDING ASSY.**, side (blue)	L.H.
68	CORVAIR (SPT. CPE.)	7729706	**MOULDING ASSY.**, side (gold)	R.H.
68	CORVAIR (SPT. CPE.)	8731213	**MOULDING ASSY.**, side (gold)	L.H.
69	CORVAIR (SPT. CPE.)	8731395	**MOULDING ASSY.**, (blue)	R.H.
69	CORVAIR (SPT. CPE.)	8731396	**MOULDING ASSY.**, (blue)	L.H.
69	CORVAIR (SPT. CPE.)	8742252	**MOULDING ASSY.**, (med. green)	R.H.
69	CORVAIR (SPT. CPE.)	8742253	**MOULDING ASSY.**, (med. green)	L.H.
68-69	MONZA (CONV.)	7766946	**TRIM ASSY.**, side (black)	R.H.
68-69	MONZA (CONV.)	7766947	**TRIM ASSY.**, side (black)	L.H.
68	MONZA (CONV.)	7766948	**TRIM ASSY.**, side (dk. blue)	R.H.
68	MONZA (CONV.)	7766949	**TRIM ASSY.**, side (dk. blue)	L.H.
68	MONZA (CONV.)	7766950	**TRIM ASSY.**, side (med. gold)	R.H.
68	MONZA (CONV.)	7766951	**TRIM ASSY.**, side (med. gold)	L.H.
69	CORVAIR (CONV.)	8743406	**TRIM ASSY.** (dk. blue)	R.H.
69	CORVAIR (CONV.)	8743407	**TRIM ASSY.** (dk blue)	L.H.
69	CORVAIR (CONV.)	8743408	**TRIM ASSY.** (med. green)	R.H.
69	CORVAIR (CONV.)	8743409	**TRIM ASSY.** (med. green)	L.H.

10.056 SCREW, Windshield Garnish Moulding

60.61	CORVAIR	9414754	lower side, center and upper (8—18 x $^{3}/_{4}$——(8.977)	A.R.
60-64	CORVAIR (STD.) (exc. STA. WAG.)	6276687		1
68-69	CORVAIR	7696194		A.R.
68	CORVAIR (SPT. CPE.)	7716099		2
	Not required in this group. See group 11.128	4760060		
	Not required in this group. See group 10.704, 10.791	4801263		

10.092 CHANNEL ASSEMBLY, Windshield Glass

60-64	CORVAIR (STD.) (exc. STA. WAG.)	6276687		1
60-64	CORVAIR (DELUXE) (exc. STA. WAG.)	6276688		1
61 62	LAKEWOOD (DELUXE), CORVAIR (STA. WAG.)	6279773		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

10.093 MOULDING—RETAINER, Windshield Reveal

60-64	CORVAIR (DELUXE) (exc. STA. WAG.)	6276438	side	R.H.
60-64	CORVAIR (DELUXE) (exc. STA. WAG.)	6276457	upper	1
60-64	CORVAIR (DELUXE)	6276458	lower	1
61-62	CORVAIR (DELUXE) (STA. WAG.)	6279489	upper	1
62-64	MONZA (CONV.)	4871752	pillar finishing	R.H.
62-64	MONZA (CONV.)	4871753	pillar finishing	L.H.
62-64	MONZA (CONV.)	4871268	w/s header side	R.H.
62-64	MONZA (CONV.)	4871269	w/s header side	L.H.
62-64	MONZA (CONV.)	4871270	w/s header center	1
65-69	CORVAIR	4469664	side	R.H.
65-69	CORVAIR	4469665	side	L.H.
65-69	CORVAIR	4489203	upper	R.H.
65-69	CORVAIR	4489204	upper	L.H.
65-69	CORVAIR	4489205	lower	1
65-69	CORVAIR (CONV.)	4471398	pillar finishing	R.H.
65-69	CORVAIR (CONV.)	4471399	pillar finishing	L.H.
65-67	MONZA (CONV.)	4467236	w/s header	R.H.
65-67	MONZA (CONV.)	4467237	w/s header	L.H.
65-68	MONZA (CONV.)	4467227	center, w/s header	1
68-69	MONZA (CONV.)	7753854	w/s head center	1
68-69	CORVAIR (CONV.)	7741656	w/s header	R.H.
68-69	CORVAIR (CONV.)	7741657	w/s header	L.H.

RETAINER, Hinge Pillar with Strip

62-64	MONZA (CONV.)	4868146		R.H.
62-64	MONZA (CONV.)	4868147		L.H.
65-69	CORVAIR	4474772		R.H.
65-69	CORVAIR	4474773		L.H.
65-69	CORVAIR (exc. CONV.)	4465109	upper corner	2

10.096 CLIP, Windshield Reveal Moulding

65-68	CORVAIR	4474354	upper, lower, side	A.R.
65-69	CORVAIR	4471409	(emergency use)	A.R.
68-69	CORVAIR w/vinyl roof	7639528		A.R.
67-69	CORVAIR	8736586		A.R.
	Not required in this group. See group 11.209	4876634		

10.146 BLADE ASSEMBLY—INSERT ASSY., Windshield Wiper

60-66	CORVAIR	3941969	(Trico) (14 7/8" long)	2
60-64	CORVAIR	3779741	(Anco) (15" long)	2
65	ALL	3871085	(Anco) (15" long)	2
66-68	ALL	3888296	(Anco) (15" long) (dull)	2
66-69	ALL	3899508	(Trico) (14 7/8" long) (Note 1)	2

NOTE 1 For insert assy. replacement use 3819074.

61-63	CORVAIR	3821753	**INSERT ASSY.** (Anco) (15 5/32" long)	2
65-68	CORVAIR	3819074	**INSERT ASSY.** (Trico) (14 7/8" long)	2

10.147 ROD ASSEMBLY, Windshield Wiper

60-64	CORVAIR	6256579	(Trico)	2
60-64	CORVAIR	6257153	(Anco)	2
65	CORVAIR	3856568	(Trico)	2
65	CORVAIR	3858926	(Anco)	2
66-68	CORVAIR	3916685	(Trico)	2
66	CORVAIR	3886674	(Anco)	2

10.150 MOTOR ASSY. and PARTS, Windshield Wiper

62	CORVAIR w/sgl. spd.	4910214		1
62	CORVAIR w/2-spd.	4910144		1
63-69	CORVAIR w/2-spd.	4911476		1
63-65	ALL w/sgl. spd.	4911945		1
68-69	All (exc. CORVAIR, spec. w/s/w)	4918442		1
60-61	CORVAIR w/sg. spd.	4907734	**MOTOR UNIT**	1
61	ALL w/2-spd.	4909108	**MOTOR UNIT**	1
60	All	4907870	**ARMATURE ASSY.**, motor	1
61	CORVAIR w/sgl. spd.	4908915	**ARMATURE ASSY.**, motor	1
62-66	ALL w/sgl. spd.	4909915	**ARMATURE ASSY.**, motor	1
62-69	CORVAIR w/2-Spd.	4910164	**ARMATURE ASSY.**, motor	1
61	CORVAIR w/sgl. spd.,			
61-68	ALL w/2-SPD.	4907157	**BOLT**, motor through (No. 10—32 x 4 21/32" O.L.)	2
60-65	ALL w/sgl. spd.	4903428	**BOLT**, motor through (No. 10—32 x 4 21/32" O.L.)	2
60-65	ALL	4904212	**BRACKET**, brush holder—(10.783)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

62-69	ALL	4910516	**BRUSH KIT,** replacement	1
60-61	CORVAIR w/sgl. spd.	4905189	**BRUSH ASSY.,** motor	2
62-69	ALL	4910424	**CAP ASSY.,** motor end	1
61	ALL w/2-spd.	4909112	**CASE ASSY.,** w/brush	1
61	ALL w/2-spd.	4908447	**COIL ASSY.,** motor field	1
62-64	ALL w/2-spd.,			
65-69	CORVAIR w/2-SPD.	4910291	**COIL ASSY.,** motor dield	1
62-66	ALL w/sgl. spd.	4910299	**COIL ASSY.,** motor field	1
62-69	All	4909925	**HOLDER ASSY.,** brush	1
60	ALL	4907000	**KIT,** brush holder and circuit breaker	1
61	CORVAIR	4907735	**KIT,** brush holder and circuit breaker	1
62-64	ALL w/sgl. spd.			
65-69	All	4909914	**PLUG,** armature shaft thrust	1
60-61	CORVAIR	4906744	**SCREW,** armature end play (1 1/4"—28 x 7/8")	1
60-68	ALL	4908709	**SPRING,** motor brush	1
65-69	ALL w/2-SPD.	4900364	**SPRING,** motor brush	2
60-61	CORVAIR	4905194	**WASHER,** bushing to housing	2

10.151 SCREW—WASHER, Windshield Wiper Motor

60-63	CORVAIR	110491	(No. 10—24 x 1)—(8.907)	3
60-63	CORVAIR	138479	**WASHER** (No. 10, ext. tooth)—(8.932)	3

10.152 GROMMET ASSY.—GASKET, Windshield Wiper Motor Mounting

61	ALL w/2-spd. motor	4904756	motor housing wire	1
62-68	ALL	4910180		3
60-62	ALL	542675	**GASKET,** to cowl upper (3/8" thk.), w/w motor gasket	1
62-67	ALL	3792579	**GASKET**	1
65-69	CORVAIR	3840795	**GASKET**	1

10.153 PUMP UNIT and PARTS, Windshield Washer

60-61	CORVAIR	4909111	(Note 1)	1

NOTE 1 Consists of Pump Assy., Cover, Gasket, (2) Screws, (2) L/Washers, (2) Nuts and an instruction sheet.

62	CORVAIR	4910610	**PUMP ASSY.**	1
68-69	CORVAIR	4919332	**PUMP ASSY.**	1
63-68	ALL	4912365	**PUMP PACKAGE**	1
60-68	ALL	4914074	**BELLOWS,** pump valve	1
62-64	ALL	4910775	**BOARD ASSY.,** pump terminal	1
60-62	CORVAIR	4905345	**BUMPER,** actuating arm	1
60-62	CORVAIR w/sgl. spd.	4906931	**CAM,** pump (4 lobe)	1
62	CORVAIR w/2-spd.	4910117	**CAM,** pump	1
67	CORVAIR	4918233	**CAM,** pump door	2
69	CORVAIR	4918982	**CAM,** pump door	1
60-62	CORVAIR	4904474	**CLIP,** relay terminal board	1
62-68	ALL	4916802	**COIL UNIT,** core w/pump	1
62-68	CORVAIR	4910431	**COVER,** pump	1
69	CORVAIR	4918976	**COVER,** pump	1
62-63	CORVAIR	4910888	**GEAR,** pump	1
62-64	ALL	4910110	**HOUSING,** pump bellows	1
62-68	ALL	4910123	**PAWL,** pump ratchet	1
60-62	CORVAIR	4914935	**PAWL UNIT,** pump ratchet	1
69	CORVAIR	4918790	**PISTON ASSY.**	1
69	CORVAIR	4918971	**PLUNGER ASSY.,** pump	1
69	CORVAIR	4918963	**RATCHET SPRING,** pump	1
69	CORVAIR	4918962	**RATCHET WHEEL.,** pump	1
60-62	CORVAIR w/sgl. spd	4906055	**RELAY ASSY.,** w/terminal board (straight term.)	1
61	ALL w/2-spd.	4909133	**RELAY ASSY.,** w/terminal board (angled term)	1
60-63	CORVAIR	9416094	**RING,** pump pawl retaining—(8.934)	1
ALL	ALL	274692	**RING,** pump retaining type text (1 1/4" I.D.)—(8.934)	1
61-62	CORVAIR w/o snap ring groove on shaft	4908486	**RING,** pump retaining	1
69	CORVAIR	4914358	**SCREW,** pump dog spring	1
65-68	ALL	4910635	**SCREW,** pump terminal board	4
60-62	CORVAIR	4905737	**SPRING,** pump ratchet lock	1
62-68	ALL	4910108	**SPRING,** pump cam follower (21/64 dia.)	1
62-68	ALL	4910124	**SPRING,** pump ratchet pawl	1
62-68	ALL	4913551	**SPRING,** pump dog	1
63-64	ALL	4911656	**SPRING,** pump extension	1
69	CORVAIR	4918974	**SPRING,** pump plunger	1
69	CORVAIR	4918975	**SPRING,** pump pawl dog	1
60-62	CORVAIR	4914356	**VALVE ASSY.,** pump (straight hose pipes)	1
62-69	ALL	4914357	**VALVE ASSY.,** pump (90" angle hose pipes)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

10.154 JAR—BRACKET ASSY.—CAP—COVER—FILTER—HOSE—SUPPORT, Windshield Washer Parts

60-61	ALL	6256921	washer	1
62-69	ALL	3840083	washer (white)	1
62-64	CORVAIR	3816157	**BRACKET ASSY.**, washer jar	1
65-69	CORVAIR	548935	**BRACKET ASSY.**, washer jar	1
62-69	ALL w/2-SPD	3798372	**CAP**, washer jar	1
60-61	ALL	3770567	**COVER**, washer jar	1
60-67	ALL	3760369	**FILTER**, washer jar hose	1
ALL	ALL	3830665	**HOSE**, R.H. and L.H. pump to nozzle ($^5/_{32}$" I.D.)—(8.962)	2
ALL	ALL	3830663	**HOSE**, jar to pump ($^7/_{32}$" I.S.)—(8.962)	1
65-67	CORVAIR w/Air Cond.	3906153	**SUPPORT**, washer jar bracket	1

10.155 TEE, Windshield Wiper Parts

Not required in this group.
See group 16.065 3760758

10.156 GASKET—CLIP—NOZZLE ASSY., Windshield Wiper Parts

60-66	CORVAIR	6257420	spray nozzle	2
63-69	CORVAIR	3820204	**CLIP**, washer pump to spray nozzle and clip washer jar to pump hoses	A.R.
60-64	CORVAIR	6256832	**NOZZLE ASSY.**, spray	1
65-69	CORVAIR	3858768	**NOZZLE ASSY.**, washer spray	2

10.157 ARM ASSY. and PARTS, Windshield Wiper Motor

62-64	CORVAIR w/sgl. spd.	4910008	w/pin	1
63-64	CORVAIR w/2-spd.	4910963	w/pin	1
65	CORVAIR w/sgl. spd.	4914371	crank w/pin	1
65-69	CORVAIR w/2-spd	4914372	crank w/pin	1
60-61	CORVAIR	4905259	**CAP**, drive shaft sealing	1
62-65	ALL w/sgl. spd.	4909948	**CAP**, drive shaft protector	1
65 68-69	CORVAIR, CORVAIR	4909968	**CAP**, drive shaft sealing	1
63-69	ALL w/2-SPD.	4912095	**COVER**, gear train, w/plate	1
63-65	ALL w/sgl. spd.	4912096	**COVER**, gear train, w/plate	1
61-62	CORVAIR w/2-spd.	4908747	**GASKET**, pump cover	1
62-65	ALL w/sgl. spd.	4910140	**GEAR**, intermediate w/pinion	1
62-69	ALL w/2-SPD.	4909941	**GEAR**, intermediate w/plate	1
61	CORVAIR	4904998	**RING**, drive shaft and gear retaining	1
62-69	ALL	4910142	**RING**, drive shaft retaining	1
61	ALL w/2-spd.	4908424	**SHAFT**, drive, w/gear	1
62-65	ALL w/sgl. spd.	4910139	**SHAFT**, drive, w/gear	1
60-61	CORVAIR w/sgl. spd.	4906716	**SHAFT ASSY.**, drive, w/gear	1
62-69	ALL w/2-Spd.	4898842	**SHAFT ASSY.**, drive w/gear	1

10.159 SHAFT ASSY.—LINK, Windshield Wiper

60-64	CORVAIR	4906319	drive, w/housing	R.H.
60-64	CORVAIR	4906330	drive, w/housing	L.H.
60-61	ALL	4906338	**LINK**, operating rod (short)	1
60-64	CORVAIR	4906336	**LINK**, operating rod (long)	1
62-64	CORVAIR	4910254	**LINK**, operating rod (short)	1
65-69	CORVAIR	4915410	**LINK**, w/housing	L.H.
65-69	CORVAIR	4915411	**LINK**, w/housing	R.H.

10.160 RETAINER—SOCKET UNIT, Windshield Wiper Transmission

60-64	ALL	4905636	link (to motor) ($^5/_{16}$" dia. stud)	1
64	CORVAIR	4906066	ring, motor trans.	1
	Not required in this group. See group 16,065	531848		
65-69	CORVAIR	4915364	**SOCKET UNIT**, w/s/w linkage	1

10.163 SWITCH ASSY. and PARTS, Windshield Wiper

60-64	CORVAIR w/sgl. spd. (exc. washer)	1993441		1
60-64	CORVAIR (sgl. spd. w/washer)	1993541		1
61-62	CORVAIR w/2-SPD.	1993527		1
63-64	CORVAIR (2-spd. w/washer)	1993584		1
65	ALL w/sgl. spd.	1993677		1
65	ALL (sgl. spd. w/washer)	1993680		1
65-66	CORVAIR w/2-SPD.	1993679		1
67-69	CORVAIR	1993395		1
60-61	ALL w/sgl. spd.	4906709	**BOARD ASSY.**, motor terminal	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

61	ALL w/2-spd.	4908473	**BOARD ASSY.**, motor terminal	1
62-65	ALL w/sgl. spd.	4910350	**BOARD ASSY.**, motor terminal	1
62-67	ALL w/2-spd.,			
68	CORVAIR	4910515	**BOARD ASSY.**, motor terminal	1
62-64	CORVAIR w/turbocharger (exc. elec. top)	3825691	**BRACKET**, washer switch—(9.709)	1
60	CORVAIR	2962965	**CONNECTOR**, terminal—(9.709)	A.R.
60-64	CORVAIR	6256578	**GASKET**, housing shaft operating lever	2
60-64	CORVAIR	3820531	**NUT**, control switch	1

10.164 KNOB ASSEMBLY, Windshield Wiper Control

60	CORVAIR (exc. washer)	1991001	(16.067)	1
60	CORVAIR w/washer	1990929		1
61-64	CORVAIR w/sgl. spd.	3780348		1
61-64	CORVAIR (2-SPD. w/washer)	1990992	wipe and washer (bright chrome)	1
65-66	ALL w/sgl. spd.	3859221		1
65-66	ALL 2-spd. w/washer,			
67	CORVAIR	3859222	wiper and washer	1
67-69	CORVAIR	3906147		1

10.166 BEZEL—NUT ASSY., Windshield Wiper Control

60-64	CORVAIR (exc. Turbocharger)	6256713	(aluminum)—(2.487)	1
63-64	CORVAIR w/Turbocharger	3791059	(aluminum)	1
65-69	CORVAIR	3862380	(2.487)	1
65-69	CORVAIR	3862680	**NUT ASSY.**, light switch rod—(2.487)	1

10.185 MIRROR UNIT—MIRROR ASSY.—BUSHING—PLATE—RETAINER—RING, Rear View

60-67	CORVAIR (exc. MONZA),			
69	CORVAIR	3633013	inside	1
64-66	ALL	3961371	outside (remote)	1
67	CORVAIR	3909100	outside (remote)	1
68	CORVAIR	3921816	outside (remote)	1
69	CORVAIR	993628	outside	R.H.
69	CORVAIR	993595	outside (Note 1)	R.H.
	NOTE 1 Must be used with rectangular remote control mirror equip.			
69	CORVAIR	3957203	outside (remote)	1
62-69	ALL	3909197	**MIRROR ASSY.**, outside (L.H.)	1
65	ALL	3912201	**MIRROR ASSY.**, outside	1
66-67	CORVAIR	3899857	**MIRROR ASSY.**, outside (remote)	1
60-67	MONZA,			
67-68	CORVAIR	916177	**MIRROR ASSY.**, inside (chrome)	1
60-65	CORVAIR	565801	**BUSHING**, rear view mirror stud (Note 2)	1
	NOTE 2 Used with 899769, 910453 mirror assy.			
64-66	ALL	5955685	**PLATE**, outside (remote) mirror pivot	1
67	CORVAIR	7695700	**RETAINER**, (remote) inner control	1
64-65	ALL	5955699	**RING**, outside (remote) mirror retaining	1

10.186 BRACKET—CABLE ASSY.—CABLE PACKAGE—CONTROL ASSY.—CONTROL PACKAGE—ESCUTCHEON—GASKET—NUT—PAD—PLATE—RETAINER—SCREW, Rear View Mirror, Outside

64-67	ALL	5955717	outside remote mounting	1
66-68	ALL	3874252	outside mirror mounting	1
67	ALL	3899859	outside (remote)	1
68-69	ALL	3949200	outside (remote)	1
68-69	ALL	3955500	clamp, outside remote	1
69	ALL	3953067	outside mounting	1
64-66	ALL w/C.C. equip.	5958231	**CABLE ASSY.**, outside remote control mirror (natural)	1
64-66	ALL w/C.C. equip	5958035	**CABLE ASSY.**, outside remote control mirror (black)	1
64-65	ALL	5956787	**CABLE PACKAGE**, outside remote mirror (white)	1
64-65	ALL	5956789	**CABLE PACKAGE**, outside remote mirror (black)	1
64-65	ALL	5956893	**CONTROL ASSY.**, outside (remote)	1
65-66	ALL w/C.C. equip.	5958039	**CONTROL ASSY.**, outside rear view mirror (remote)	1
64	ALL	5956792	**CONTROL PACKAGE**, outside remote mirror	1
66-67	ALL w/C.C. equip.	3891496	**ESCUTCHEON**, outside rear view remote mirror	1
69	CORVAIR	3945996	**ESCUTCHEON**, outside (remote)	1
66-69	ALL (exc. C.C. equip)	3874250	**GASKET**, outside mirror base	1
67	ALL	3899860	**GASKET**, outside bracket (remote)	1
68-69	ALL	3921835	**GASKET**, outside (remote)	1
69	ALL	3953066	**GASKET**, outside mirror	1
64-66	ALL	3849842	**NUT** ("J" shape) outside (remote)	2
64	CORVAIR	5956181	**PAD**, outside remote mounting	1
64-66	ALL	5956894	**PLATE**, outside remote control escutcheon	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66	ALL w/C.C. equip. (1st design)	5957967	**RETAINER,** outside remote mirror control cable	1
66-67	ALL w/C.C. equip. (2nd design)	4526624	**RETAINER,** outside rear view mirror (remote)	1
60	CORVAIR,			
63-64	CORVAIR,	3903176	**SCREW,** outside mirror to mounting bracket	1
60-68	ALL	566842	**SCREW** (oval hd. cr. recess—No. 10—32 x 9/16")	1
62-64	MONZA (CONV.)	9414768	**SCREW,** rr. view mirror support (No. 10—16 x 1 1/2")—(8.977)	3
64	CORVAIR (exc. CONV.)	9414754	**SCREW** (No. 8—19 x 3/8")—(8.977)	A.R.
68-69	ALL	9400827	**SCREW,** excut. to control (remote)—(8.975)	1
69	ALL	9796652	**SCREW,** trim (No. 8—32 x 9/16)	1

10.187 SUPPORT—CAP ASSY.—SCREW ASSY., Rear View Mirror, Inside

60-64	CORVAIR (exc. MONZA)	6276372		1
60-64	MONZA (exc. CONV.)	6280427		1
62-64	MONZA (CONV.)	4872899		1
65-66	MONZA (exc. CONV.)	4479213	(chrome)	1
65-66	CORVAIR (STD.)	4479214		1
65-66	CORVAIR (CONV.)	4480400		1
64	CORVAIR (exc. CONV.)	4440430		1
67	MONZA (CONV.)	7729477	**SUPPORT ASSY.,** L/cap	1
67	CORVAIR (exc. CONV.)	7729446	**SUPPORT ASSY.,** L/cap	1
68-69	MONZA (CONV.)	7740299	**SUPPORT ASSY.,** L/cap	1
68-69	CORVAIR (SPT. CPE.)	8711847	**SUPPORT ASSY.,** L/cap	1
67	MONZA (CONV.)	7729524	**CAP ASSY.** (gray)	1
67	CORVAIR (exc. CONV.)	9711958	**CAP ASSY.** (black)	1
67	MONZA (exc. CONV.)	7729510	**CAP ASSY.** (med. brt. blue)	1
67	MONZA (exc. CONV.)	9711961	**CAP ASSY.** (gold)	1
67	CORVAIR (STD.)	7729509	**CAP ASSY.** (med. blue)	1
67	CORVAIR (STD.)	9711960	**CAP ASSY.** (parchment)	1
68-69	MONZA (CONV.)	7765356	**CAP ASSY.** (black)	1
68	MONZA (CONV.)	7765357	**CAP ASSY.** (blue)	1
68	MONZA (CONV.)	7765358	**CAP ASSY.** (gold)	1
68-69	CORVAIR (STD.)	7767304	**CAP ASSY.** (black)	1
68	CORVAIR (STD.)	7767305	**CAP ASSY.** (blue)	1
68	CORVAIR (STD.)	7767306	**CAP ASSY.** (gold)	1
69	CORVAIR (SPT. CPE.)	8751949	**CAP ASSY.,** (dk. blue)	1
69	CORVAIR (SPT. CPE.)	8751950	**CAP ASSY.,** (green)	1
69	CORVAIR (CONV.)	8751952	**CAP ASSY.,** (dk. blue)	1
69	CORVAIR (CONV.)	8751953	**CAP ASSY.,** (green)	1
67	CORVAIR (exc. CONV.)	7717644	**SCREW ASSY.,** mirror supt. rear (8—18 x 3/4")	1

10.195 MIRROR UNIT—NUT, Vanity Visor

68	CORVAIR (exc. CONV.)	9872555		1
69	CORVAIR	993723		1
67	CORVAIR	125847	**NUT** (8-32 x 1/2")—(8.924)	2
69	CORVAIR	9785408	**NUT,** (8-32)	2

10.203 SUNSHADE ASSEMBLY

60-61	MONZA (1st type)	6281060	right or left, w/o adj. screw (fawn) (comb. 816, 820, 845, 846, 880, 881)	2
61	MONZA (1st type)	6281177	right or left (blue) (comb. 829, 848, 883)	2
60	DELUXE (exc. MONZA)	6277899	right or left (green)	A.R.
61	MONZA (2nd type)		right or left (ivory) (comb. 830, 844, 859, 869, 870, 871, 878, 879).	
61	MONZA (1st type)	4347621	right or left (ivory) (comb. 830, 844, 870, 871, 878, 879)	2
63-64	CORVAIR (exc. MONZA)	4436407	right or left (comb. 780, 783) (ivory)	2
63-64	CORVAIR (exc. MONZA)	4436406	right or left (comb. 720, 751) (aqua)	2
63-64	CORVAIR (exc. MONZA)	4436408	right or left (comb. 731) (blue)	2
63-64	MONZA (CONV.)	4436412	right or left (comb. 712) (black)	2
63-64	MONZA (CONV.)	4436415	right or left (comb. 755) (aqua)	2
63-64	MONZA (CONV.)	4436421	right or left (comb. 781) (red)	2
64	CORVAIR (exc. MONZA)	4397912	right or left (comb. 764, 757) (fawn)	2
64	MONZA (exc. CONV.)	4397728	right or left (comb. 705) (saddle)	2
64	MONZA (exc. CONV.)	4397729	right or left (comb. 712) (black)	2
64	MONZA (exc. CONV.)	4397730	right or left (comb. 727,781) (ivory)	2
64	MONZA (exc. CONV.)	4397731	right or left (comb. 732) (blue)	2
64	MONZA (exc. CONV.)	4397732	right or left (comb. 755) (aqua)	2
64	MONZA (exc. CONV.)	4397733	right or left (comb. 758) (fawn)	2
65	CORVAIR STD.	4475567	right or left (comb. 723) (turquoise)	2
65	CORVAIR STD.	4475568	right or left (comb. 701, 771) (fawn)	2
65	CORVAIR STD.	4475569	right or left (comb. 739,782) (ivory)	2
65	MONZA (exc. CONV.)	4475572	right or left (comb. 706, 767) (saddle)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

65	MONZA (exc. CONV.)	4475573	right or left (comb. 713, 758) (black)	2
65	MONZA (exc. CONV.)	4475574	right or left (comb. 733) (blue)	2
65	MONZA (exc. CONV.)	4475575	right or left (comb. 702, 773) (fawn)	2
65	MONZA (exc. CONV.)	4475576	right or left (comb. 785, 795, 797, 798) (ivory)	2
65	CORVAIR (CONV.)	4475579	right or left (comb. 706, 767) (saddle)	2
65	CORVAIR (CONV.)	4475580	right or left (comb. 713, 758) (black)	2
65	CORVAIR (CONV.)	4475581	right or left (comb. 702, 733) (blue)	2
65	CORVAIR (CONV.)	4475582	right or left (comb. 773) (fawn)	2
65	CORVAIR (CONV.)	4475583	right or left (comb. 740, 785) (red)	2
65	CORVAIR (CONV.)	4475585	right or left (comb. 795, 797, 798) (ivory)	2
66	CORVAIR (STD.)	7631442	right or left (comb. 701) (fawn)	2
66	CORVAIR (STD.)	7631443	right or left (comb. 721) (blue)	2
66	CORVAIR (STD.)	7631444	right or left (comb. 739) (ivory)	2
66	MONZA (exc. CONV.)	7631446	right or left (comb. 702) (fawn)	2
66	MONZA (exc. CONV.)	7631447	right or left (comb. 722) (brt. blue)	2
66	MONZA (exc. CONV.)	7631448	right or left (comb. 740) (red)	2
66	MONZA (exc. CONV.)	7631449	right or left (comb. 758) (black)	2
66	MONZA (exc. CONV.)	7631451	right or left (comb. 788) (bronze)	2
66	MONZA (exc. CONV.)	7631452	right or left (comb. 792) (turquoise)	2
66	MONZA (exc. CONV.)	7631453	right or left (comb. 795) (ivory)	2
66	MONZA (CONV.)	7631455	right or left (comb. 702) (fawn)	2
66-67	MONZA (CONV.)	7631456	right or left (comb. 722) (brt. blue)	2
66	MONZA (CONV.)	7631457	right or left (comb. 740) (red)	2
66-67	MONZA (CONV.)	7631458	right or left (comb. 758) (black)	2
66	MONZA (CONV.)	7631460	right or left (comb. 788) (bronze)	2
66	MONZA (CONV.)	7631461	right or left (comb. 792) (turquoise)	2
66	MONZA (CONV.)	7631462	right or left (comb. 795) (ivory)	2
67	MONZA	7650759	right or left (comb. 713) (gold)	2
67	MONZA	7650760	right or left (comb. 722) (brt. blue)	2
67	MONZA	7650762	right or left (comb. 758) (black)	2
67	MONZA (CONV.)	7650765	right or left (comb. 713) (gold)	2
67	CORVAIR (STD.)	7682904	right or left (comb. 703) (parchment)	2
67	CORVAIR (STD.)	7650757	right or left (comb. 721) (blue)	2
68	MONZA (SPT. CPE.)	7650758	(comb. 704) (black)	2
68	CORVAIR (exc. CONV.)	7744882	right or left (comb. 706, 707) (dk. blue)	2
68	CORVAIR (SPT. CPE.)	7744883	right or left (comb. 709, 710) (med. gold)	2
68	MONZA (CONV.)	7766023	right or left (comb. 704) (black)	2
68	MONZA (CONV.)	7766024	right or left (comb. 707) (drk. blue)	2
68	MONZA (CONV.)	7766025	right or left (comb. 710) (med. gold)	2

10.219 SUPPORT ASSY.—SLEEVE, Sunshade

61-64	CORVAIR (exc. CONV.)	4424610		R.H.
61-64	CORVAIR (exc. CONV.)	4424611		L.H.
62-64	MONZA (CONV.)	4424614		R.H.
62-64	MONZA (CONV.)	4424615		L.H.
65-67	CORVAIR (CONV.)	4523877	striker	R.H.
65-67	CORVAIR (CONV.)	4523878	striker	L.H.
68-69	CORVAIR (exc. CONV.)	7790753		2
69	CORVAIR (CONV.)	7758564	striker	R.H.
69	CORVAIR (CONV.)	7758565	striker	L.H.
64-69	CORVAIR	4424600	**SLEEVE** (plastic)	2

10.224 GROMMET, Sunshade Adjusting

65-67	CORVAIR (CONV.)	7742764	rod anti-rattle	2

10.225 SCREW, Sunshade Support

62	MONZA (CONV.)	4650353	support to body—(14.080)	6
62-63	CORVAIR (exc. CONV.)	4887070	(No. 12—11 x $^{5}/_{8}$) (ov. hd.) chrome	6
63-69	MONZA (CONV.)	9419834	support to body ($^{1}/_{4}$"—20 x $^{3}/_{4}$") (chrome)—(8.977)	A.R.
63	MONZA (CONV.)	4632833	support to body ($^{1}/_{4}$"—20 x 1)	6
64	CORVAIR (exc. CONV.)	9416208	support to body (No. 818 x $^{3}/_{4}$") (chrome)—(8.977)	A.R.

10.230 PANEL ASSY.—BRACE—BRACKET ASSY.—SCREW—SUPPORT, Instrument Panel

60-64	CORVAIR	6284345		1
65-66	CORVAIR	4468960	instrument (upper)	1
67	CORVAIR	7646784	instrument (upper)	1
68-69	CORVAIR	7726056	instrument (upper)	1
65	CORVAIR (exc. CORSA),			
66-67	CORVAIR	3870212	**BRACE,** lower reinforcement	1
65-67	CORVAIR w/Air Cond.	3863893	**BRACE ASSY.,** lower reinforcement	1
65-66	CORVAIR	3852897	**BRACKET ASSY.,** brake pedal—(4.648)	1
ALL	ALL	3785130	**SCREW,** instrument panel brace to cowl—(1.750)	1
65-69	CORVAIR	7711810	**SUPPORT,** instr. panel end	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-68	CORVAIR	4437723	**SUPPORT,** instr. panel end	L.H.

10.252 MOULDING—CAP—NUT—PLATE—RETAINER, Instrument Panel

60-64	CORVAIR	6277687	*speaker opening finish*	1
62-63	CORVAIR (exc. CONV.),			
64	CORVAIR	6279217	finishing	R.H.
65	MONZA	4535359	side trim	R.H.
65	CORSA,			
66	MONZA	4535360	side trim	R.H.
65	MONZA w/Air Cond. (exc. CORSA)	4535358	side trim	R.H.
66-67	MONZA w/Air Cond.	7638573	side trim	R.H.
68	MONZA w/C.A.C.	7730367	right side trim	1
68-69	MONZA (exc. C.A.C.)	7730365	right side trim	1
65-68	ALL	230018	**CAP,** front door outside lock case	A.R.
61	ALL	9411943	**NUT** ($1/8$" stud) (speaker opening mldg.)—(8.921)	4
60-61	ALL (exc. P.G.),			
62-63	CORVAIR (exc. P.G.),			
64	ALL (exc. P.G.)	3840659	**PLATE,** cluster trim	1
62-63	CORVAIR w/P.G.,			
60-61	ALL w/P.G.,			
64	ALL w/P.G.	3840660	**PLATE,** cluster trim	1
65-69	MONZA	4484874	**RETAINER ASSY.,** right trim applique mldg.	1

10.254 PLATE—EMBLEM, Instrument Panel

65-66	CORSA	4531580	door name	1
65	MONZA	4485535	**EMBLEM,** door	1
66-69	MONZA	7684610	**EMBLEM,** door	1

10.256 COVER—RETAINER, Radio Instrument Panel

65	CORVAIR	3859745	radio control hole	1
65-69	CORVAIR (exc. radio)	3857366	**COVER ASSY.,** radio control hole	1
65-69	CORVAIR (exc. radio)	3859219	**RETAINER,** radio control hole cover	1

10.260 BOX—COMPARTMENT ASSY., Instrument Panel Compartment

60-64	CORVAIR	3813891		1
65-69	CORVAIR	3852933	**COMPARTMENT ASSY.**	1

10.261 DOOR ASSY., Instrument Panel Compartment

60	DELUXE (exc. MONZA)	6280981	(two piece)	1
61-64	CORVAIR (STD.) (2nd type)	6283494	(one piece)	1
60-61	MONZA (1st type)	6280979	(two piece) includes name plate	1
62	MONZA	6284017		1
63	MONZA	4876077		1
64	CORVAIR (4-DR.) (exc. MONZA)	4409928		1
64	MONZA (exc. SPYDER)	4409929		1
64	SPYDER	4409927		1
65-69	CORVAIR (STD.)	4507021	(primed)	1
65	MONZA	4538448	(chrome)	1
65-66	CORSA	4535355	(black)	1
66-69	MONZA	7594108		1
68	CORVAIR (STD.)	4507021		1

10.262 HINGE ASSY.—GROMMET—SCREW—WASHER, Instrument Panel Compartment Door

65-69	CORVAIR	4507014		1
60-64	CORVAIR	6280978	**GROMMET**	1
60	CORVAIR	274852	**SCREW,** hinge to door (10—32 x $5/16$")—(8.913)	A.R.
60-61	CORVAIR	9414064	**WASHER,** *stop—(8.928)*	1

10.263 BUMPER, Instrument Panel Compartment Door

60-67	CORVAIR	3765243	seat separator compt. door bumper ($1\ 3/64$" long)	2
65-69	CORVAIR	4566397	door stop	1

10.266 LOCK ASSY.—CASE ASSY.—CYLINDER—KEY, Instrument Panel Compartment Door, Seat Separator Compt.

60-64	CORVAIR	3732065	w/lock bolt	1
60-64	CORVAIR	1380873	**CASE ASSY.,** w/lock bolt and spring, seat separator compartment door	1
65-69	CORVAIR	7658079	**CASE ASSY.,** instr. panel door lock cylinder	1
65-66	CORVAIR	4709555	**CYLINDER** (uncoded, less keys)	1
65-66	CORVAIR	3851706	**CYLINDER,** with case (coded w/2 keys)	1
67	CORVAIR	7645835	**CYLINDER,** compt. door lock (uncoded)	1
68	CORVAIR	7743438	**CYLINDER,** compt. door lock (uncoded)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Reproduction Parts Division

69	CORVAIR	8717641	**CYLINDER,** instr. panel compt. door	1
60-65	ALL	3694624	**KEY,** blank (octagon head)—(2.187)	1

10.267 RETAINER—BEZEL—SCREW, Instrument Panel Compartment Door Lock

60-63	CORVAIR	4131049	door knob	1
64	CORVAIR	4599106	door lock cyl. case	1
60	CORVAIR	3876536	**BEZEL,** door lock	1
63	CORVAIR	4777618	**SCREW,** door knob retainer (6—32 x 3/8)	1

10.268 STRIKER, Instrument Panel Compartment Lock

60-64	CORVAIR	3781854	(1 3/4 x 33/64w/2 holes)	1
65-69	CORVAIR	4412506		1

10.275 LAMP UNIT—SUPPORT—SWITCH ASSY.—SWITCH UNIT, Instr. Panel Compt., Seat Separator Compt. and Courtesy

68	CORVAIR (exc. CONV.)	987256	courtesy	1
69	CORVAIR	993607	courtesy	1
67	CORVAIR (exc. CONV.)		**SUPPORT,** courtesy lamp,	
68-69	CORVAIR (SPT. CPE.)	3935929	courtesy lamp, instr. panel courtesy lamp	2
65-66	CORVAIR (CONV.)	4442679	**SUPPORT,** courtesy lamp	2
60-63	CORVAIR,			
64	CORVAIR (exc. MONZA),			
65-69	CORVAIR	3859328	**SWITCH ASSY.,** panel light	2
67-68	CORVAIR (STD.)	987188	**SWITCH UNIT,** instr. panel compt. light	1

10.351 DOOR ASSY., Front (less paint, trim and hardware)

60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4408542	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4408543	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4408540	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4408541	L.H.
62-64	MONZA (CONV.)	4408544	R.H.
62-64	MONZA (CONV.)	4408545	L.H.
65-66	CORVAIR (4-DR.)	4444782	R.H.
65-66	CORVAIR (4-DR.)	4444783	L.H.
65-66	CORVAIR (2-DR.)	4479844	R.H.
65-66	CORVAIR (2-DR.)	4479845	L.H.
67	CORVAIR (4-DR.)	7642658	R.H.
67	CORVAIR (4-DR.)	7642659	L.H.
67	CORVAIR (2-DR.)	7642662	R.H.
67	CORVAIR (2-DR.)	7642663	L.H.
68-69	CORVAIR	7734661	R.H.
68-69	CORVAIR	7734662	L.H.

10.352 GUARD—CLIP, Door Edge

61-64	CORVAIR	6256853	front	L.H.
61-64	CORVAIR	6256854	front	R.H.
61-64	CORVAIR (4-DR.)	6256855	rear	L.H.
61-64	CORVAIR (4-DR.)	6256856	rear	R.H.
65-67	CORVAIR (4-DR.)	3857587	front	L.H.
65-67	CORVAIR (4-DR.)	3857588	front	R.H.
65-67	CORVAIR (4-DR.)	3857589	rear	L.H.
65-67	CORVAIR (4-DR.)	3857590	rear	R.H.
65-69	CORVAIR (2-DR.)	3921818		R.H.
65-69	CORVAIR (2-DR.)	3921817		L.H.
68	CORVAIR	987252	**GUARD UNIT**	1
61-67	CORVAIR	3916932	**CLIP**	A.R.

10.355 DEFLECTOR, Door Inner Panel

60-68	CORVAIR	4780514	water	A.R.
65-66	CORVAIR (Spt. Cpe.) (exc. STD.)	4491021	quarter water at ash tray	2

10.373 DOOR ASSEMBLY, Rear (less paint, trim and hardware)

61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4408546	R.H.
61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4408547	L.H.
65-66	CORVAIR (4-DR.)	4444786	R.H.
65-66	CORVAIR (4-DR.)	4444787	L.H.
67	CORVAIR (4-DR.)	7643388	R.H.
67	CORVAIR (4-DR.)	7643389	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

10.450 HINGE ASSY.—SCREW, Front Door Upper

60-64	CORVAIR	4848384		R.H.
60-64	CORVAIR	4848385		L.H.
65-66	CORVAIR	4470379		2
67-69	CORVAIR	7677805		R.H.
67-69	CORVAIR	7677806		L.H.
62-66	CORVAIR (4-DR.)	5713717	**SCREW,** stop adjusting (5/17—18 x 3/4 w/nylon insert)	1

10.454 HINGE ASSY., Front Door Lower

60-64	CORVAIR	4848386		R.H.
60-64	CORVAIR	4848387		L.H.
65-66	CORVAIR	4471512		R.H.
65-66	CORVAIR	4471513		L.H.
67	CORVAIR	7642780		R.H.
67	CORVAIR	7642781		L.H.
68-69	CORVAIR	7722198		R.H.
68-69	CORVAIR	7722199		L.H.

10.455 SPRING, Front Door Lower Hinge

65	CORVAIR	9704912		2
67-69	CORVAIR	9704190	front door upper	2

10.456 HINGE ASSY., Rear Door Upper

60-61	CORVAIR (4-DR.),			
62-64	CORVAIR DELUXE (4-DR.)	4848398		R.H.
60-61	CORVAIR (4-DR.),			
62-64	CORVAIR DELUXE (4-DR.)	4848399		L.H.
65-66	CORVAIR (4-DR.)	4470462		R.H.
65-66	CORVAIR (4-DR.)	4470463		L.H.
67	CORVAIR (4-DR.)	7642735		R.H.
67	CORVAIR (4-DR.)	7642736		L.H.

10.460 HINGE ASSY.—SCREW, Rear Door Lower

61-64	CORVAIR (4-DR.)	6282643		R.H.
61-64	CORVAIR (4-DR.)	6282644		L.H.
65-66	CORVAIR (4-DR.)	1465412		2
67	CORVAIR (4-DR.)	7642737		2
62-64	CORVAIR DELUXE (4-DR.)	5713718	**SCREW,** stop adjusting (5/16—18 x 1/2 w/nylon insert)	2

10.463 BOLT—SCREW, Door Hinge

60-61	CORVAIR	4715129	front door, upper and lower hinge to body (5/16—24 x 7/8) (w/washer)	A.R.
60-61	CORVAIR (4-DR.)	4689485	rear door, upper hinge to body	6
60-61	CORVAIR	4714801	front and rear door hinge to door bolt, rear door, lower hinge to body bolt (5/16—24 x 1 1/8) phillips hd.	A.R.
62-63	CORVAIR DELUXE (4-DR.)	4848782	upper, hinge to body	6
62-63	CORVAIR	4848765	hinge to door and body (5/16—18 x 1 1/8)	A.R.
62	CORVAIR	4849263	front door, upper and lower hinge (5/16—18 x 1) hex. hd.	A.R.
64-69	CORVAIR	4405445	front door lower and upper hinge to body (w/washer) (5/16" x 18 x 1")	A.R.
64	CORVAIR (4-DR.)	4405447	rear door upper hinge to body bolt (w/washer) (5/16—18 x 11/16)	6
64	CORVAIR		door hinge to door bolt,	
64-67	CORVAIR		rear door lower hinge to body bolt,	
65-67	CORVAIR (4-DR.)	4405446	front and rear door hinge to body and door bolt (w/washer) (5/16—18 x 1 1/8) prosphate	A.R.
64-69	CORVAIR	4405449	front door hinge to door w/conical washer (5/16"—18 x 1 1/8") (275-M steel)	A.R.
65-66	CORVAIR	4405450	**SCREW,** front door hinge to body screw (w/washer) (5/16—18 x 1 1/2)	12
67	CORVAIR	7704636	**SCREW,** front door upper hinge to door	6
67	CORVAIR	7704637	**SCREW,** front door lower hinge to door	6
67	CORVAIR	7707528	**SCREW,** front door hinge to body	12
68-69	CORVAIR	7679145	**SCREW,** front door upper hinge to door	6
68-69	CORVAIR	8750275	**SCREW,** upper or lower hinge to door and body	A.R.

10.464 BUSHING—INSERT, Door Hinge Pin

60-68	CORVAIR	4110660	side, upper, rear lower	A.R.
60-61	ALL	4803169	**INSERT,** bolt	A.R.

10.466 PIN, Door Hinge

60-67	CORVAIR	5716449	front and rear	A.R.
68-69	CORVAIR	9713173	front, lower hinge	2
68-69	CORVAIR	9715454	front, upper hinge	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

10.470 LOCK ASSY., Front Door

60	CORVAIR	6276442	R.H.
60	CORVAIR	6276443	L.H.
61-62	CORVAIR	6278512	R.H.
61-62	CORVAIR	6278513	L.H.
63-64	CORVAIR	4885698	R.H.
63-64	CORVAIR	4885699	L.H.
65-66	CORVAIR (2-DR.)	4474285	R.H.
65-66	CORVAIR (2-DR.)	4545371	L.H.
65	CORVAIR (4-DR.)	7635367	R.H.
65	CORVAIR (4-DR.)	7635368	L.H.
66	CORVAIR (4-DR.)	4541116	R.H.
66	CORVAIR (4-DR.)	4541117	L.H.
66	CORVAIR (2-DR.)	4545370	R.H.
67	CORVAIR (4-DR.)	7730536	R.H.
67	CORVAIR (4-DR.)	7730537	L.H.
67	CORVAIR (2-DR.)	7642078	R.H.
67	CORVAIR (2-DR.)	7730539	L.H.
68	CORVAIR (SPT. CPE.)	7740488	R.H.
68	CORVAIR (SPT. CPE.)	7740489	L.H.
69	CORVAIR (2-DR.)	8715827	L.H.
69	CORVAIR (2-DR.)	8715826	R.H.

10.473 LOCK ASSY., Rear Door

60	CORVAIR (4-DR.)	6276430	R.H.
63-64	CORVAIR (4-DR.)	4885714	R.H.
63-64	CORVAIR (4-DR.)	4885715	L.H.
66-67	CORVAIR	7730541	L.H.
66-67	CORVAIR (4-DR.)	7730540	R.H.

10.474 SPRING—CLIP—SCREW, Front and Rear Door Lock

60-64	CORVAIR	4305234	hook lever return R.H.
60-64	CORVAIR	4305235	hock lever return L.H.
60-64	CORVAIR	5714014	front, over center R.H.
60-64	CORVAIR	5714015	front, over center L.H.
60-64	CORVAIR	5716521	cam return A.R.
61-64	CORVAIR (4-DR.)	4307702	rear, over center R.H.
61-64	CORVAIR (4-DR.)	4307703	rear, over center L.H.
65-68	CORVAIR (2-DR.)	9712734	front lock push button return R.H.
65-68	CORVAIR (2-DR.)	9712735	front lock push button return L.H.
65-66	CORVAIR (4-DR.)	9703924	front lock push button return R.H.
65-66	CORVAIR (4-DR.)	9703925	front lock push button return L.H.
65-69	CORVAIR (SPT. CPE.)	9703769	front lock over center R.H.
65-67	CORVAIR (4-DR.)	9712745	rear lock push button return 2
65-67	CORVAIR (4-DR.)	9712750	rear lock over center R.H.
65-67	CORVAIR (4-DR.)	9712751	rear lock over center L.H.
66-69	CORVAIR (SPT. CPE., CONV.)		left, front door lock over center,
65-69	CORVAIR	9712742	right, front, over center 1
67	CORVAIR (4-DR.)	9712086	front push button return R.H.
67	CORVAIR (4-DR.)	9712087	front push button return L.H.
69	CORVAIR (2-DR.)	9720760	right, push button return R.H.
69	CORVAIR (2-DR.)	9720761	left, button return L.H.
	Not required in this group. See Group 16.330	4158734	
60	CORVAIR		
65-68	CORVAIR		**CLIP,** lock spring (front door),
60-64	CORVAIR (4-DR.),		
65-69	CORVAIR	5712678	lock spring (rear door) A.R.
61-64	CORVAIR	5711576	**CLIP,** lock spring (front door) 2
61-64	CORVAIR (4-DR.)	4309895	**CLIP,** locking rod spring (rear door) 2
60-68	CORVAIR	8714746	**SCREW,** door lock to inner panel A.R.

10.500 CONTROL ASSY., Door Lock Remote

60-64	CORVAIR	4404566	front (link arm up) R.H.
60-64	CORVAIR	4404567	front L.H.
61-64	CORVAIR (4-DR.)	6282146	rear L.H.
61-64	CORVAIR (4-DR.)	6282147	rear R.H.
65-67	CORVAIR	4410758	front R.H.
65-67	CORVAIR	4410759	front L.H.
65-67	CORVAIR (4-DR.)	7628199	rear L.H.
65-67	CORVAIR (4-DR.)	7628198	rear R.H.
68-69	CORVAIR	7743511	R.H.
68-69	CORVAIR	7743512	L.H.

10.506 LINK—BUMPER—ROD—SCREW, Door Lock Remote

61-64	CORVAIR (2-DR.)	6281377	front, to lock 2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-64	CORVAIR (4-DR.)	6281376	front, to lock	2
65-67	CORVAIR	4615576	**BUMPER**, inner panel dust-rubber—(12.934)	1
61-64	CORVAIR (4-DR.)	6282150	**ROD**, rear, to lock	2
65-66	CORVAIR (2-DR.)	4478757	**ROD**, front, door to lock	2
65-67	CORVAIR (4-DR.)	4474848	**ROD**, rear to lock	R.H.
65-67	CORVAIR (4-DR.)	4474849	**ROD**, rear to lock	L.H.
65-66	CORVAIR (4-DR.)	4477574	**ROD**, front, door to lock	2
67	CORVAIR (2-DR.)	7656840	**ROD**, front remote control to lock	R.H.
67	CORVAIR (2-DR.)	7656841	**ROD**, front, remote control to lock	L.H.
67	CORVAIR (SED.)	7656076	**ROD**, front, remote control to lock	R.H.
67	CORVAIR (SED.)	7656077	**ROD**, front, remote control to lock	L.H.
68	CORVAIR	7730082	**ROD**, front lock remote cont. to lock	R.H.
68	CORVAIR	7730083	**ROD**, front lock remote control to lock	L.H.
61-63	CORVAIR	4803018	**SCREW** ($1/4$"—20 x $1/2$" w/lockwasher)—(10.792)	A.R.
64-65	CORVAIR	4405526	**SCREW**, control to panel (w/canical washer) ($1/4$"—20 x $1/2$")—(12.180)	A.R.

10.512 HANDLE, Door Lock Inside

60-62	CORVAIR (exc. MONZA)	4631206	remote control	4
60-64	MONZA,			
64	SPYDER	4753532	remote control	2
63-64	CORVAIR (STD.)	3764017	remote control, front and rear doors	A.R.
65-67	CORVAIR	4468414	remote control	A.R.
68-69	CORVAIR	7743520	front, lock remote control	R.H.
68-69	CORVAIR	7743521	lock remote control	L.H.

10.513 RETAINER, Door Lock Inside Handle

60-69	CORVAIR	4168122	retaining spring (steel snap on type)	A.R.

10.515 PLATE, Door Window Regulator Handle Bearing

60-67	CORVAIR	4506696	remote control	A.R.
68-69	CORVAIR	7731353	front	2

10.517 WASHER—GASKET, Door Lock Inside Handle

60-61	CORVAIR (STD.),			
62	CORVAIR (4-DR.)	6281349	front door, handle sealing	2
60-65	CORVAIR (DELUXE),			
66-68	CORVAIR	7591000	handle sealing—(10.500)	A.R.
	Not required in this group. See Group 11.041	4460659	**GASKET**	

10.527 HANDLE—SCREW, Door Outside

60-61	CORVAIR	4305786	w/stud	R.H.
62-64	CORVAIR	5712742	front and rear	R.H.
60-64	CORVAIR	5712743	front and rear	L.H.
65-69	CORVAIR	9702888	(less button)	R.H.
65-69	CORVAIR	9702889	(less button)	L.H.
61-63	CORVAIR	4806007	*SCREW, rr. handle to door ($1/4$—20 x $1/2$—w/ext. tooth 1/washer)*	A.R.
64-69	CORVAIR	4430409	**SCREW**, handle to door (w/conical washer) ($1/4$—20 x $1/2$)	A.R.

10.529 PARTS, Door Handle Push Button

60-64	CORVAIR	4304968	**BUTTON**, w/shaft	A.R.
65-69	CORVAIR	5716883	**BUTTON**, w/shaft, front door	2
65-67	CORVAIR (4-DR.)	9703436	**BUTTON**, w/shaft, rear door	2
60-69	CORVAIR	4587931	**GASKET**, front door lock cylinder—(12.249)	2
	Not required in this group. *See group 16.353*	4168353	**RETAINER**	
60-64	CORVAIR	4304972	**RING**, sealing	A.R.
65-69	CORVAIR	4156548	**RING**, push button—front and rear door handles	A.R.
60-69	CORVAIR	4301742	**SPRING**, front door	A.R.
60-64	CORVAIR	4304973	**WASHER**, stop	A.R.
65-69	CORVAIR	5719092	**WASHER**, front door stop	A.R.

10.537 GASKET UNIT, Door Outside Handle

60-64	CORVAIR	6257097	**GASKET UNIT**, front and rear	1

10.540 SCREW, Outside Door Handle Retaining Front Door Lock Cylinder

Not required in this group. See group 16.350	3842459	

10.550 CYLINDER UNIT, Front Door Lock

60-66	CORVAIR	3888860	(uncoded)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

67	CORVAIR	3901066	(uncoded)	A.R.
68	CORVAIR	3929566	(uncoded)	2
69	CORVAIR	3961302	(uncoded)	2

10.551 PAWL—RETAINER, Door Outside Lock Handle

60-64	CORVAIR	7015682	front	R.H.
60-64	CORVAIR	7015685	front	L.H.
65-69	CORVAIR	7029380	front	R.H.
65-68	CORVAIR	7029381	front	L.H.
60-64	CORVAIR	7015683	**RETAINER,** front cyl. pawl	A.R.
60-69	CORVAIR		**RETAINER,** front door lock cyl.,	
61-62	CORVAIR (STA. WAG.)	4884405	rear door lock cylinder	A.R.
	Not required in this group. See group 12.249	4719376	**RETAINER**	
	Not required in this group. See group 16.353	4755272	**RETAINER**	

10.552 HOUSING—CAP, Front Door Lock Cylinder

60-69	CORVAIR	3924150		2
	Not required in this group. See group 16.370	7016371	**CAP**	

10.553 TUMBLER UNIT, Door Lock Cylinder

60-66	CORVAIR	601256	copper (unit contains 72 tumblers)	A.R.
60-66	CORVAIR	601257	nickel (unit contains 72 tumblers)	A.R.
60-66	CORVAIR	601258	black (unit contains 72 tumblers)	A.R.
60-66	CORVAIR	601259	yellow (unit contains 72 tumblers)	A.R.
67-68	CORVAIR	3901061	No. 1 (unit contains 100 pcs.)	A.R.
67-68	CORVAIR	3901062	No. 2 (unit contains 100 pcs.)	A.R.
67-68	CORVAIR	3901063	No. 3 (unit contains 100 pcs.)	A.R.
67-68	CORVAIR	3901064	No. 4 (unit contains 100 pcs.)	A.R.
67-68	CORVAIR	3901065	No. 5 (unit contains 100 pcs.)	A.R.

SPRING UNIT—RETAINER UNIT, Lock Tumbler

67-68	CORVAIR	3901067	(unit contains 100 pcs.)	A.R.
60-69	CORVAIR	601261	**RETAINER UNIT** (unit contains 12 retainers)	A.R.

10.556 SCREW—WASHER, Door Inner Locking

65-67	CORVAIR (4-DR.)	4405522	face washer) (1/4—20 x 9/16)	2
61-64	CORVAIR (4-DR.)	6284005	**WASHER,** to lock rod	2
65-67	CORVAIR (4-DR.)	4622521	**WASHER,** rear to lock rod	2

10.559 KNOB, Door Inside Locking Rod

61	CORVAIR (4-DR.)	4824977	medium gray	2
62	CORVAIR (4-DR.)	4824972	red	A.R.
62-64	CORVAIR (4-DR.)	4450634	blue	A.R.
62-64	MONZA (4-DR.),			
62-63	CORVAIR DELUXE (4-DR.),			
64	CORVAIR (4-DR.)	4450636	aqua	A.R.
62	CORVAIR DELUXE (4-DR.)	4860510	fawn	A.R.
62	MONZA (4-DR.)	4860504	gold	A.R.
63-64	CORVAIR (4-DR.)	4450637	red	A.R.
63	CORVAIR (4-DR.)	4402268	fawn	A.R.
63-64	MONZA (4-DR.)	7591127	ivory	A.R.
64	CORVAIR (4-DR.)	4450643	fawn	A.R.
65	MONZA	4503826	(turquoise)	A.R.
65	MONZA	7610450	(saddle)	A.R.
65	MONZA	4503814	(blue)	A.R.
65	MONZA	4503822	(slate)	A.R.
65-66	MONZA	7591126	black	A.R.
65	CORVAIR	7610459	(fawn)	A.R.
65	MONZA		rear door,	
66	CORVAIR (STD.)	7591129	blue	A.R.
65-66	MONZA	7591132	turquoise	A.R.
66	CORVAIR	7591133	red	A.R.
66	MONZA (SPT. CPE. CONV.)	7591144	blue	A.R.
66	CORVAIR	7591147	fawn	A.R.
66	MONZA (SPT. CPE. CONV.)	7591148	bronze	A.R.
67	CORVAIR	7665320	(black)	A.R.
67	MONZA (SPT. CPE., CONV.)	7665323	(brt. blue)	A.R.
67	MONZA	7665325	(gold)	A.R.
67	CORVAIR (STD., DELUXE)	7665326	(fawn)	A.R.
67	CORVAIR (STD.)	7665327	(med. blue)	A.R.
68	CORVAIR	7799353	(black)	A.R.
68	CORVAIR	7759036	(blue)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

68	CORVAIR	7799366	gold	A.R.
69	CORVAIR	8740200	front and rear door	A.R.

FERRULE—PLUNGER ASSY., Rear Door Safety

68	4-DR.	3929935	rear door lock	2
68	4-DR.	3929934	**PLUNGER ASSY.**, rear door lock guard	2

10.560 FERRULE, Rear Door Locking Rod Knob

61-64	CORVAIR	7619151		A.R.
65-67	CORVAIR	4474707		A.R.
68-69	CORVAIR	7740319	(9.262)	2

10.563 ROD, Door Inside Locking to Lock

61-64	CORVAIR (4-DR.)	6282152	rear	R.H.
61-64	CORVAIR (4-DR.)	6282153	rear	L.H.
66-67	CORVAIR (4-DR.)	4474206	rear	R.H.
65-67	CORVAIR (4-DR.)	4474207	rear	L.H.
65-67	CORVAIR (4-DR.)	4478729	front door	2
65-67	CORVAIR (2-DR.)	4479227		R.H.
65-67	CORVAIR (2-DR.)	4479228		L.H.
68-69	CORVAIR	7740792	front	R.H.
68-69	CORVAIR	7740793	front	L.H.

10.565 CLIP, Door Inside Locking Rod

61-67	CORVAIR (4-DR.)		rear door lock remote control to lock rod anti-rattle,	
66-67	CORVAIR	4755827	front door inner lock to lock rod, and lock remote control to lock rod anti-rattle	A.R.
61-66	CORVAIR,		rear door inner locking to lock rod,	
65-66	CORVAIR (4-DR.)		rear door remote control to lock rod,	
65-69	CORVAIR (2-DR.)	4711608	front door lock remote control rod	A.R.
68	ALL		front door remote control to lock rod,	
68	CORVAIR	7762203	front door inner locking to lock rod	A.R.

10.569 STRIKER ASSY., Door Lock

61-62	CORVAIR	6278510	front and rear	R.H.
61-62	CORVAIR	6278511	front and rear	L.H.
63-64	CORVAIR	4885742		R.H.
63-64	CORVAIR	4885743		L.H.
65-67	ALL,			
68	ALL	4472299		
65-69	CORVAIR	7660559	critical fastener	A.R.
	Not required in this group. See group 16.335	4664963		
	Not required in this group. See group 16.335.	4664964		

10.570 BOLT—SCREW, Door Lock Striker to Pillar

61-62	CORVAIR (STA. WAG.)	4676731	w/lockwasher ($^5/_{16}$—24 x $1^5/_{16}$)	A.R.
62-63	CORVAIR (CONV.)	4848779		6
62	CORVAIR (STA. WAG.)	4848760	**SCREW**, back door, ($^5/_{16}$"-18 x $1^3/_{16}$")	A.R.
64	CORVAIR (4-DR.)	4892563	**SCREW**, front	6
63-64	CORVAIR	4892564	**SCREW**, front, rear ($^5/_{16}$"-18 x $1^7/_{32}$")	A.R.

10.571 PLATE—SPACER—WASHER, Door Lock Striker

60-64	CORVAIR	6276235	adjuster upper	A.R.
61-62	CORVAIR (STA. WAG.)	4809717	back door adjusting, lower	1
62-64	CORVAIR DELUXE (4-DR.)	4867780	front anchor	R.H.
62-64	CORVAIR DELUXE (4-DR.)	4867781	front anchor	L.H.
62	CORVAIR (STA. WAG.)	4849938	rear door adjusting, upper	A.R.
65-69	CORVAIR	4465224	front, anchor	2
65-69	CORVAIR	4469685	front and rear door striker anchor	A.R.
	Not required in this group. See group 16.335	4649281		
63-64	CORVAIR	4885752	**SPACER** ($^3/_{64}$ thick)	A.R.
63-64	CORVAIR	4885754	**SPACER** ($^7/_{64}$ thick)	A.R.
65-69	CORVAIR	4469194	**WASHER** (1/4 thick)	A.R.
65-69	CORVAIR	4469195	**WASHER** (21/64 thick)	A.R.
65-69	CORVAIR	4469197	**WASHER** (5/32 thick)	A.R.
65-69	CORVAIR	4469196	**WASHER** (5/64 thick)	A.R.
65-67	CORVAIR	4491024	**WASHER** (plastic)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT USA

10.584 PLATE—SPACER, Door Wedge

62-64	MONZA (CONV.),			
65	CORVAIR (SPT. CPE., CONV.)	4843705	*door side*	R.H.
62-64	MONZA (CONV.),			
65	CORVAIR (SPT. CPE., CONV.)	4843706	door side	L.H.
64-67	CONV.		left, body side,	
68	MONZA (CONV.)	4426758	right, body side	1
64-67	CONV.		*right, body side,*	
68-69	MONZA (CONV.)	4426757	left, body side	1
62-64	MONZA (CONV.),			
65	CORVAIR (SPT. CPE.),			
65-67	CONV.,			
68-69	CORVAIR	4523880	*door side*	2
65	CORVAIR (SPT. CPE.)	4843709	**SPACER,** plate to door	A.R.
65-67	CONV.,			
68-69	CORVAIR	4523881	**SPACER,** plate to door	A.R.

10.587 BUMPER—PLUG, Door Side

60-64	CORVAIR (2-DR.)	4695632	door lock pillar	4
60-61	4-DR.	4565671	rear door lock pillar, lower	2
60-64	CORVAIR (4-DR.)	4701420	upper rear door lock pillar, and front door	A.R.
61-62	CORVAIR (STA. WAG.)	4652531	back door body side	A.R.
62	CORVAIR DELUXE (4-DR.),			
63-64	CORVAIR (4-DR.)	4565463	*rear door lock pillar lower—(8.024)*	2
65-66	CORVAIR (4-DR.)		rear door lock pillar upper on door,	
65-69	CORVAIR	4565591	*front door lock pillar body side*	A.R.
	Not required in this group. See group 16.400	4565415		
	Not required in this group. *See group 12.975*	4574349		
ALL	ALL	4751839	**PLUG,** rr. dr. lock pillar access hole (on door)	2

10.650 VENTILATOR ASSY., Front Door (less glass)

60-64	CORVAIR (exc. STA. WAG., CONV.)	6276434	R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	6276435	L.H.
62-64	MONZA (CONV.)	4871152	R.H.
65-67	CORVAIR	4470418	R.H.
65-67	CORVAIR	4470419	L.H.
68-69	CORVAIR	9713178	R.H.
68-69	CORVAIR	9713179	L.H.

10.652 WEATHERSTRIP ASSY.—WEATHERSTRIP, Front Door Ventilator

60-64	CORVAIR (exc. STA. WAG., CONV.)	4305282		R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305283		L.H.
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	4307312		R.H.
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	4307313		L.H.
65-69	CORVAIR	5719640		R.H.
65-69	CORVAIR	5719641		L.H.
65-69	CORVAIR	5719660	**WEATHERSTRIP,** vent. division channel	R.H.
65-69	CORVAIR	5719661	**WEATHERSTRIP,** vent. division channel	L.H.

10.655 CHANNEL ASSY.—FILLER, Front Door Ventilator

60-64	CORVAIR (exc. STA. WAG., CONV.)	4305302		R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305303		L.H.
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	4307734		R.H.
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	4307735		L.H.
65-67	CORVAIR	5719668		R.H.
65-67	CORVAIR	5719669		L.H.
68-69	CORVAIR	9713186		R.H.
68-69	CORVAIR	9713187		L.H.
ALL	ALL	3830213	**FILLER** ($^{3}/_{64}$" thick—40 ft. roll)—(10.696)	A.R.
ALL	ALL	3830214	**FILLER** ($^{1}/_{2}$" thick—60 ft. roll)—(10.696)	A.R.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

10.656 FRAME ASSEMBLY, Front Door Ventilator

62-64	MONZA (CONV.)	4871146		R.H.
62-64	MONZA (CONV.)	4871147		L.H.
65-69	CORVAIR	5719638		*R.H.*
65-69	CORVAIR	5719639		L.H.

10.658 GLASS, Front Door Ventilator

60-64	CORVAIR (exc. STA. WAG., CONV.)	6276436	(clear)	2
60-64	CORVAIR (exc. STA. WAG., CONV.)	6279583	(tinted)	2
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	6279236	(clear)	2
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	6280360	(tinted)	*2*
65-69	CORVAIR	4462575	(clear)	R.H.
65-69	CORVAIR	4462576	(clear)	L.H.
65-69	CORVAIR	4462577	(tinted)	R.H.
65-69	CORVAIR	4462578	(tinted)	L.H.

10.660 WASHER—SPRING—STOP, Front Door Ventilation Channel

60-67	ALL,			
68-69	CORVAIR	4305060	friction unit	4
60-67	ALL,			
68-69	CORVAIR	4305061	spring retaining	2
60-67	ALL,			
68-69	CORVAIR	4305062	friction tab unit	2
	Not required in this group. See group 16.176	4162192		
	Not required in this group. See group 16.176	4162193		
65-69	CORVAIR	9705003	**SPRING**, friction unit	2
60-69	CORVAIR	4305287	**STOP**, friction unit	2

10.664 HANDLE—PIN—SCREW—WASHER, Front Door Ventilator

60-64	ALL	4305052	*glass channel*	R.H.
60-64	ALL	4305053	glass channel	L.H.
65-67	CORVAIR	5719838	glass channel	R.H.
65-67	CORVAIR	5719839	glass channel	L.H.
68-69	CORVAIR	9712394	glass channel	R.H.
68-69	CORVAIR	9712395	glass channel	L.H.
61-65	ALL,			
67	CORVAIR	3697476	**PIN**, glass channel handle—(10.664)	2
68-69	CORVAIR	5717193	**SCREW**, lock handle support drive (No. 8—8 x $^{5}/_{16}$ drive screw)	4
60-65	ALL,			
66-67	CORVAIR	3696038	**WASHER**, glass channel handle special spring—(10.824)	*2*

10.666 SPRING, Front Door Ventilator Handle

Not required in this group.
See group 10.806 4078002

10.669 RIVET, Front Door Ventilator

60-65	CORVAIR	9704875	pivot hinge	2

10.670 STUD—BUMPER ASSY.—RIVET—SCREW, Front Door Ventilator

62-64	*MONZA (CONV.)*		*vent frame to support,*	
65-69	CORVAIR	4868577	vent to inner panel, front, lower	A.R.
60-62	CORVAIR (exc. CONV.),			
63-66	CORVAIR		division channel, lower	
65-69	CORVAIR	4405500	to inner panel, rear, lower	2
63-64	MONZA (CONV.)	5714268	**BUMPER ASSY.**, frame	R.H.
63-64	MONZA (CONV.)	5714269	**BUMPER ASSY.**, frame	L.H.
65-69	CORVAIR	5719684	**BUMPER ASSY.**, window glass on vent.	2
63-64	MONZA (CONV.)	5713137	**RIVET**, bumper frame	2
65-69	CORVAIR	9419372	**SCREW**, vent. to inner panel at belt (No. 10—16 x $2^{1}/_{2}$) chrome	2

10.681 GLASS, Front Door Window

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277645	(clear)	2
60-64	CORVAIR (2-DR.) (exc. CONV.)	6279576	(tinted)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts

60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276139	(clear)	2
62-64	MONZA (CONV.)	4873852	(tinted)	R.H.
62-64	MONZA (CONV.)	4873853	(tinted)	L.H.
62-64	MONZA (CONV.)	4873850	(clear)	R.H.
62-64	MONZA (CONV.)	4873851	(clear)	L.H.
65-69	CORVAIR (2-DR.)	4464428	(clear)	R.H.
65-69	CORVAIR (2-DR.)	4464429	(clear)	L.H.
65-69	CORVAIR (2-DR.)	4464430	(tinted)	R.H.
65-69	CORVAIR (2-DR.)	4464431	(tinted)	L.H.
65-67	CORVAIR (4-DR.)	4464432	(clear)	R.H.
65-67	CORVAIR (4 DR.)	4464433	(clear)	L.H.
65-67	CORVAIR (4-DR.)	4464434	(tinted)	R.H.
65-67	CORVAIR (4-DR.)	4464435	(tinted)	L.H.

10.685 CHANNEL ASSY.—FILLER—NUT, Front Door Window

60-64	CORVAIR (4-DR.)	6279478	lower sash	2
60	2-DR.	6277651	lower sash	R.H.
61-64	CORVAIR (2-DR.) (exc. CONV.)	4865489	lower, sash	2
62-64	MONZA (CONV.)	4871144	lower sash	R.H.
62-64	MONZA (CONV.)	4871145	lower sash	L.H.
65-69	CORVAIR (2-DR.)	4496294	lower sash	R.H.
65-69	CORVAIR (2-DR.)	4496295	lower sash	L.H.
65-67	CORVAIR (4-DR.)	4496296	lower sash	R.H.
65-67	CORVAIR (4-DR.)	4496297	lower sash	L.H.
67	CORVAIR (exc. CONV.),			
68-69	CORVAIR	7702606	**FILLER,** lower sash channel	2
ALL	ALL	3830213	**FILLER** ($^3/_{16}$" thick—40 ft. roll)—(10.696)	A.R.
ALL	ALL	3830214	**FILLER** ($^1/_2$" thick—60 ft. roll)—(10.696)	A.R.
64-67	CORVAIR (SPT. SED.)	4469109	**NUT,** to lower channel (Note 1)	6

10.686 CHANNEL—SCALP —WEATHERSTRIP, Front Door Glass Division

60-64	CORVAIR (exc. STA. WAG., CONV.)	4305036	upper front, glass run	2
60-64	CORVAIR (exc. CONV.)	4305027	lower front, glass run	2
60-64	CORVAIR (exc. CONV.)	4308098	ventilator division	R.H.
60-64	CORVAIR (exc. CONV.)	4308099	ventilator division	L.H.
62-64	MONZA (CONV.)	5714350	rubber retainer and division	R.H.
62-64	MONZA (CONV.)	5714351	rubber retainer and division	L.H.
62-64	MONZA (CONV.)	5714283	upper front glass run	1
62-64	MONZA (CONV.)	5714282	lwr. front glass run	1
65-69	CORVAIR	5719658	glass run front	2
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305038	**SCALP,** vent. division channel inner	R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305039	**SCALP,** vent. division channel inner	L.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305040	**SCALP,** vent divison channel	R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305041	**SCALP,**vent. divison channel	L.H.
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	5714286	**SCALP,** vent. divison channel, inner	R.H.
61-62	CORVAIR (STA. WAG.)		**SCALP,** vent. division channel,	
62-64	MONZA (CONV.)	5714287	inner	L.H.
62-64	MONZA (CONV.)	5714284	**SCALP,** vent. division channel outer	R.H.
62-64	MONZA (CONV.)	5714285	**SCALP,** vent. division channel outer	L.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305042	**WEATHERSTRIP,** vent. division channel	R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4305043	**WEATHERSTRIP,** vent. division channel	L.H.
61-62	CORVAIR (STA. WAG.),			
62-64	MONZA (CONV.)	4307323	**WEATHERSTRIP,** vent. division channel	L.H.

10.687 CAM—SUPPORT, Front Door Glass Lower Sash Channel

65-69	CORVAIR (2-DR.)	4478889		2
65-67	CORVAIR (4-DR.)	4478888		2
65-68	CORVAIR	4409392	**SCREW** (No. 10–24 x 9/16)	A.R.

10.688 CHANNEL ASSY., Front Door Vent

65-69	CORVAIR	5719650	vent division w/scalp	R.H.
65-69	CORVAIR	5719251	vent division w/scalp	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

10.694 WEATHERSTRIP ASSY.—Pillar

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277737	front door	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277738	front door	L.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276742	front	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276743	front	L.H.
61-62	CORVAIR (STA. WAG.)	6279827	front	L.H.
61-62	CORVAIR (STA. WAG.)	6279828	rear	R.H.
61-62	CORVAIR (STA. WAG.)	6279829	rear	L.H.
62-64	MONZA (CONV.)	4868685	door	R.H.
62-64	MONZA (CONV.)	4868686	door	R.H.
62-64	MONZA (CONV.)	4869045	windshield pillar	L.H.
62-64	MONZA (CONV.)	4869046	windshield pillar	L.H.
65-69	CORVAIR (2-DR.)	4455324	front door	R.H.
65-69	CORVAIR (2-DR.)	4455325	front door	L.H.
65-67	CORVAIR (4-DR.)	4455330	front door	R.H.
65-67	CORVAIR (4-DR.)	4455331	front door	L.H.
64-67	CORVAIR (4-DR.)	4455336	rear door	R.H.
65-67	CORVAIR (4-DR.)	4455337	rear door	L.H.
65-69	CORVAIR (CONV.)	4468518	windshield pillar	R.H.
65-69	CORVAIR (CONV.)	4468519	windshield pillar	L.H.
60-68	CORVAIR	4770719	**PLUG,** door wthrstrp. front body hinge pillar switch, body front emblem stud	A.R.
60	ALL	4779422	**STRIP,** door bottom drain hole seal	8
65-67	CORVAIR (4-DR.)	4468985	**STRIP,** rear door hinge pillar sealing	R.H.
65-67	CORVAIR (4-DR.)	4468986	**STRIP,** rear door hinge pillar sealing	L.H.

10.695 FASTENER—CLIP, Door Weatherstrip

60	ALL	4810116	door bottom drain hole	16
62-64	MONZA (CONV.)		windshield pillar and door w/strip,	
65	CORVAIR STD. (4-DR.),			
65	MONZA (exc. CONV.)		side roof rail w/strip,	
65	CORVAIR (4-DR.)	4841194	front and rear door w/strip	A.R.
65-68	CORVAIR		front and rear door weatherstrip,	
65-68	CONV.	4876498	front roof rail	A.R.
	Not required in this group. See group 8.010	4739890	**CLIP,** front door on lock pillar	

10.701 CHANNEL—SCREW—STUD—WASHER, Front Door Glass Run

60-63	CORVAIR (exc. CONV.),			
64	CORVAIR	7663050	front	A.R.
62-64	MONZA (CONV.)	4870192		R.H.
65-69	CORVAIR (2-DR.)	4474481		R.H.
65-69	CORVAIR (2-DR.)	4474482		L.H.
65-67	CORVAIR (4-DR.)	4472405		R.H.
65-67	CORVAIR (4-DR.)	4472406		L.H.
63-64	MONZA (CONV.)	4849928	**SCREW,** channel, lower ($1\frac{1}{4}$ x 20 x $\frac{5}{8}$—w/plate washer) (chrome)	2
65-68	CORVAIR	4405500	**STUD,** channel lower—(10.670)	4
66-68	CORVAIR	4808440	**WASHER,** channel	1

10.703 RETAINER, Rear Door Glass Run Channel

60-64	CORVAIR (4-DR.) w/double arm reg. (exc. STA. WAG.)	6279624	lower rear	2
64-65	2-DR. (STA. WAG.)	4410040	window, lower rear	R.H.
64-65	2-DR. (STA. WAG.)	4410041	window, lower rear	L.H.

10.704 SCREW, Door Window Division Channel Adjusting

60-62	CORVAIR (exc. CONV.)	4801263	front, vent. to window frame (8—18 x $\frac{3}{8}$")—(10.056)	A.R.

10.707 MOULDING, Front Door Window

60-64	MONZA (2-DR. SED.)	6279854	vertical	R.H.
60-64	MONZA(2-DR. SED.)	6279855	vertical	L.H.
60-64	MONZA (2-DR. SED.)	6279860	upper	R.H.
60-64	MONZA (2-DR. SED.)	6279861	upper	L.H.
61-64	MONZA (4-DR.)	6276342	upper	R.H.
61-64	MONZA (4-DR.)	6276343	upper	L.H.
61-64	MONZA (4-DR.)	6276334	rear ventilator scalp	R.H.
61-64	MONZA (4-DR.)	6276335	rear ventilator scalp	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

10.710 STRIP ASSY— Front Door Glass Run Channel

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277653	inner and outer	4
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276171	inner and outer	4
61-62	CORVAIR (STA. WAG.)	6279423	inner and outer	4
62-64	MONZA (CONV.)	4871157	glass run channel inner	2
62-64	MONZA (CONV.)	4871155	outer	R.H.
62-64	MONZA (CONV.)	4871156	outer	L.H.
65-69	CORVAIR (2-DR.)	4531587	outer, at belt	2
65-69	CORVAIR (2-DR.)	4531588	inner, at belt	2
65-67	CORVAIR (4-DR.)	4531589	outer, at belt	2
65-67	CORVAIR (4-DR.)	4531590	inner, at belt	2

10.716 BUMPER—STOP—SUPPORT, Door Window Strap

60-62	CORVAIR (exc. 2-DR.)	4131052		A.R.
62	MONZA (CONV.),			
64	CORVAIR (2-DR.)		front and rear,	
63-64	CORVAIR (4-DR.)		front door,	
65	CORVAIR	4881559		A.R.
63-64	CORVAIR (4-DR.)	4892763	rear	A.R.
66-67	ALL		front,	
68	CORVAIR	4542970		A.R.
	Not required in this group. See group 12.195	4767578		
65-69	CORVAIR	4838019	**STOP**, front and rear, front door	A.R.
62-64	MONZA (CONV.)	4871392	**STOP**, front dr. window frt.	2
62-64	MONZA (CONV.),			
62-64	MONZA (CONV.)	4871796	**STOP**, right, dr. window lower sash channel front	1
62-64	MONZA (CONV.)	4870197	**STOP**, dr. window lwr. sash channel rr.	2
65-67	CORVAIR (4-DR.)	4479039	**STOP**, rear	4
66-69	CORVAIR	7631347	**STOP**, front door window regulator upper	2
62-64	MONZA (CONV.)	4881556	**SUPPORT**, dr. window bumper	A.R.

10.721 WEATHERSTRIP—CLIP—RETAINER—STRIP, Side Roof Rail

65-67	CORVAIR (4-DR.)	7647776		R.H.
65-67	CORVAIR (4-DR.)	7647777		L.H.
65-69	CORVAIR (SPT. CPE.)	7725462		R.H.
65-69	CORVAIR (SPT. CPE.)	7725463		L.H.
66	CORVAIR (exc. CONV.)	7630769	**CLIP**, weatherstrip retainer	4
65-69	CORVAIR (SPT. CPE.)	7649379	**RETAINER**	L.H.
65-69	CORVAIR (SPT. CPE.)	7649378	**RETAINER ASSY.**, weatherstrip	R.H.
65-67	CORVAIR (4-DR.)	7649381	**RETAINER ASSY.**, weatherstrip	L.H.
65-67	CORVAIR (4-DR.)	7649380	**RETAINER ASSY.**, weatherstrip	R.H.
67	ALL (SPT. MDLS.) (exc. CONV.)	7647553	**STRIP**, roof rail retainer sealing	2
69	SPT. MDLS. (exc. CONV.)	4536042	**STRIP**, side roof rail retainer	2

10.726 SCREW, Rear Door Window Guide

60	ALL	839301	guide roller ($1\frac{1}{4}$—20 x $\frac{1}{2}$)	4

10.728 PLATE—STUD, Door Window Channel Guide

62-64	MONZA (CONV.)	4871099	lower sash	2
65-66	CORVAIR (4-DR.)	4405502	**STUD**, rear cam lower—(10.670)	4

10.741 GLASS, Rear Door Window

60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276117	(clear)	2 R.H.
65-67	CORVAIR (4-DR.)	4464950	(clear)	L.H.
65-67	CORVAIR (4-DR.)	4464951	(clear)	R.H.
65-67	CORVAIR (4-DR.)	4464952	(tinted)	L.H.
65-67	CORVAIR (4-DR.)	4464953	(tinted)	

10.747 CHANNEL ASSY.—BOLT—FILLER—NUT—SPACER—SUPPORT ASSY., Rear Door Window Lower Sash

60	ALL w/single arm reg.	6276116		L.H.
60-64	CORVAIR (4-DR.) w/double arm reg.	4873427	right and left	2
65-67	CORVAIR (4-DR.)	7632208	front sash	R.H.
65-67	CORVAIR (4-DR.)	7632209	front sash	L.H.
65-67	CORVAIR (4-DR.)	4536079	**BOLT**, to lower channel	6
65-67	CORVAIR (4-DR.)	4487769	**FILLER**, front support	2
65-67	CORVAIR (4-DR.)	4487774	**FILLER**, rear support	2
ALL	ALL	3830213	**FILLER**, ($\frac{3}{64}$ thick—40 ft. roll)—(10.696)	A.R.
ALL	ALL	3830214	**FILLER**, ($\frac{1}{2}$ thick—40 ft. roll)—(10.696)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66-67	CORVAIR (4-DR.)	4469109	**NUT,** to lower channel—(10.685)	6
65-66	CORVAIR (4-DR.)	4469108	**SPACER,** glass	6
67	CORVAIR (4-DR.)	7759546	**SPACER,** glass—(10.685)	A.R.
65-67	CORVAIR (4-DR.)	4496288	**SUPPORT ASSY.,** channel front	R.H.
65-67	CORVAIR (4-DR.)	4496289	**SUPPORT ASSY.,** channel front	L.H.
65-67	CORVAIR (4-DR.)	4496290	**SUPPORT ASSY.,** channel rear	R.H.
65-67	CORVAIR (4-DR.)	4496291	**SUPPORT ASSY.,** channel rear	L.H.

10.748 CAM ASSY., Rear Door Window

65-67	CORVAIR (4-DR.)	4478887	lower sash channel	2

10.759 CHANNEL—SCREW—WASHER, Rear Door Window Glass

60-63	CORVAIR (exc. STA. WAG.),			
64	CORVAIR	7663050	run—(10.701)	A.R.
61	CORVAIR (STA. WAG.)	4848818	run	2
61-62	CORVAIR (4-DR.)	4822427	**SCREW,** glass run channel rear retainer (1/4—20 x 1/2)	A.R.
65-66	4-DR. (exc. SPT. SED.)	4808440	**WASHER,** glass run channel front—(10.701)	4

10.764 WEATHERSTRIP, Rear Door Window Frame

65-67	CORVAIR (4-DR.)	4468990	vertical	R.H.
65-67	CORVAIR (4-DR.)	4468991	vertical	L.H.

10.772 MOULDING, Rear Door Window Scalp

61-64	MONZA (4-DR.)	6276310	upper	R.H.
61-64	MONZA (4-DR.)	6276311	upper	L.H.
61	MONZA (4-DR.)	6276334	front scalp—(10.707)	R.H.
61	MONZA (4-DR.)	6276335	front scalp—(10.707)	L.H.

10.774 STRIP ASSY., Rear Door Window

60-64	CORVAIR (4-DR.)	6276187	channel, inner and outer	4
65-67	CORVAIR (4-DR.)	4531593	inner at belt	R.H.
65-67	CORVAIR (4-DR.)	4531594	inner at belt	L.H.
65-67	CORVAIR (4-DR.)	4531591	outer at belt	R.H.
65-67	CORVAIR (4-DR.)	4531592	outer at belt	L.H.

10.783 REGULATOR ASSY. and PARTS, Front Door Window

60-64	CORVAIR (2-DR.) (exc. CONV.)	6283237		R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6283238		L.H.
60	4-DR.	6276240		R.H.
60	4-DR.	6276241		L.H.
61-64	CORVAIR (4-DR.)	6279841		R.H.
61-64	CORVAIR (4-DR.)	6279842		L.H.
62-64	MONZA (CONV.)	4871056		R.H.
62-64	MONZA (CONV.)	4871057		L.H.
65-69	CORVAIR (2-DR.)	4484844		R.H.
65-69	CORVAIR (2-DR.)	4484845		L.H.
65-66	CORVAIR (4-DR.)	7587760		R.H.
65-67	CORVAIR (4-DR.) (exc. electric window)	7587761		R.H.
67	CORVAIR (4-DR.)	7695764	manual	R.H.
67	CORVAIR (4-DR.)	7695765	manual	L.H.
61-63	CORVAIR	4807377	**SCREW,** to inner panel (1/4—20 x 7/16)	A.R.
61-62	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4803018	**SCREW,** to inner panel (1/4"—20 x 1/2")—(10.792)	A.R.
64-65	ALL	4405526	**SCREW,** to inner panel (1/4"—20 x 1/2")—(12.180)	A.R.
	Not required in this group. See group 16.783	4233229	**SPRING**	

10.791 REGULATOR ASSY. and PARTS, Rear Door Window

60	4-DR. w/single arm reg.	6276242		R.H.
61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6280388		R.H.
61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6280389		L.H.
65-66	CORVAIR (4-DR.)	4485533		R.H.
65-66	CORVAIR (4-DR.)	4485534		L.H.
67	CORVAIR (4-DR.)	7702303	manual	R.H.
67	CORVAIR (4-DR.)	7702304	manual	L.H.
61-63	CORVAIR	4807377	**SCREW,** to inner panel (1/4"—20 x 7/16")—(10.783)	A.R.
61-62	CORVAIR (STA. WAG.)	4801263	**SCREW,** rear quarter frame (8—18 x 3/8")—(10.056)	A.R.
64-65	ALL	4405526	**SCREW,** to inner panel (1/4"—20 x 1/2")—(12.180)	A.R.
65-67	CORVAIR (4-DR.)	4877342	**WASHER,** regulator seal—(10.664)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

10.792 CAM ASSY.—SCREW—STUD, Door Window Vertical Guide

60-64	CORVAIR (4-DR.)	6279352	rear door, inner panel	2
60-64	CORVAIR,			
65-67	CORVAIR (4-DR.)	4722599	front door inner panel	2
60-64	CORVAIR	4698278	front door inner panel	2
65-67	CORVAIR (4-DR.)	4497062	rear door window guide front	2
65-67	CORVAIR (4-DR.)	4497064	*rear door window guide rear*	*R.H.*
65-67	CORVAIR (4-DR.)	4497065	rear door window guide rear	L.H.
65-67	CORVAIR (4-DR.)	4667911	rear door inner panel	2
65-69	CORVAIR (2-DR.)		front door inner panel,	
61-63	CORVAIR (2-DR.) (SPT. CPE.)	4803018	**SCREW,** front door inner panel, (1/4—20 x 1/2)	A.R.
64-65	ALL	4405526	**SCREW,** dr. inner panel cam to panel (1/4"—20 x 1/2")—(12.180)	A.R.
62-63	MONZA (CONV.)	4786425	**STUD,** rr. qtr. window guide center or lower—(11.040)	A.R.

10.797 HANDLE ASSY.—WASHER, Door Window Regulator

56-67	CORVAIR	4472076		A.R.
60-62	CORVAIR (exc. MONZA)	6275958		A.R.
60-64	MONZA	4807923		2
63-64	CORVAIR (exc. MONZA)	4619388		A.R.
67	CORVAIR	7680653	(black)	A.R.
67	CORVAIR (STD.)	7689672	(fawn)	A.R.
67	CORVAIR	7689676	(blue)	A.R.
67	MONZA	7689673	(gold)	A.R.
67	CORVAIR	7689677	(med. blue)	A.R.
67	MONZA	7719273	(med. brt. blue)	4
68	ALL		(blue),	
68	CORVAIR	7767322	rear quarter window	A.R.
68	ALL	7767326	rear quarter window	A.R.
68	ALL	7752485	door and rear quarter window (black)	A.R.
69	ALL	8732961		A.R.
60-62	CORVAIR (4-DR.),			
65	CORVAIR	6278230	**WASHER,** *rear door spindle*	2
64	CORVAIR (4-DR.)	4865218	**WASHER,** rear, handle sealing washer—(10.517)	2

10.805 PLATE, Door Window Regulator

60	ALL,			
65-66	ALL	4506696	handle bearing—(10.515)	1

10.806 SPRING, Door Window Regulator Handle

60-64	CORVAIR	4566746	front door regulator handle	A.R.
60	*CORVAIR (4-DR.)*	4078002	*rear door lock handle*	*A.R.*

10.824 WASHER, Front Door Ventilator

Not required in this group.
See group 10.664 3696038

10.997 HOSE— Rear Seat Front Pan Drain

62-65	MONZA (CONV.)	4839439	(12.986)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 11.000

REAR GLASS—SEAT AND ADJUSTER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

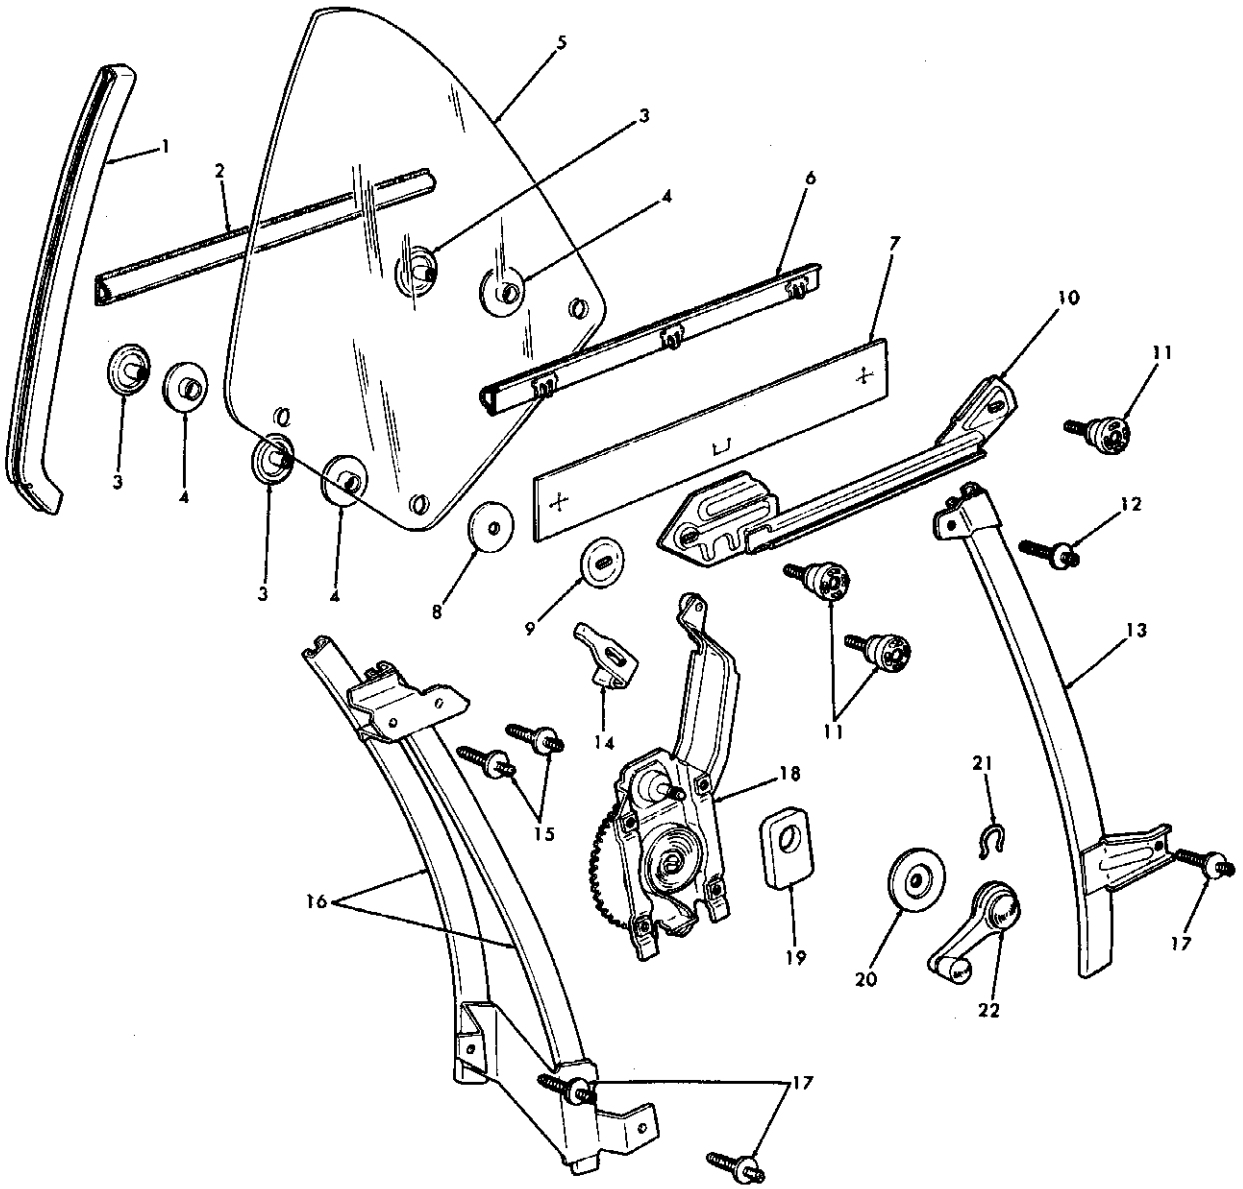

1965-69 CORVAIR QUARTER HARDWARE

1.	11.007	CHANNEL, Qtr. Wind. Front Sash
2.	11.015	STRIP ASSY., Qtr. Wind. Otr. at Belt
3.	11.007	NUT, Qtr. Wind. Guide Roller Tee
4.	11.007	BUSHING, Qtr. Wind. Guide Roller
5.	11.011	GLASS, Quarter Window
6.	11.015	STRIP ASSY., Qtr. Wind. Inner at Belt
7.	10.685	FILLER, Qtr. Wind. Lwr. Sash Chnl. Cam
8.	11.007	WASHER, Qtr. Wind. Guide Roller (Rubber)
9.	11.007	WASHER, Qtr. Wind. Guide Roller (Steel)
10.	11.007	CAM ASSY., Qtr. Wind. Lwr. Sash Chnl.
11.	11.007	ROLLER ASSY., Qtr. Wind. Guide
12.	11.040	STUD, Qtr. Wind. Rear Guide Upper
13.	11.040	GUIDE ASSY., Qtr. Wind. Rear
14.	11.012	STOP ASSY., Quarter Window
15.	11.040	STUD, Qtr. Wind. Front Guide Upr.
16.	11.040	GUIDE ASSY., Qtr. Wind. Front
17.	11.040	STUD, Qtr. Wind. Guide Lower
18.	11.041	REGULATOR ASSY., Qtr. Wind. Manual
19.	10.517	GASKET, Qtr. Wind. Reg. Spindle
20.	10.515	PLATE, Qtr. Wind. Reg. Hdle. Bearing
21.	10.513	SPRING, Qtr. Wind. Handle Retaining
22.	10.797	HANDLE ASSY., Qtr. Wind. Reg.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

11.007 CHANNEL ASSEMBLY—CAM ASSY.—ROLLER ASSY.—FILLER—BUSHING—WASHER—NUT, Quarter Window Lower Sash

62-64	MONZA (CONV.)	4458530	lower sash	R.H.
62-64	MONZA (CONV.)	4458531	lower sash	L.H.
62-64	MONZA (CONV.)	4873920	front sash	R.H.
62-64	MONZA (CONV.)	4873921	front sash	L.H.
63-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894084	right, lower sash	A.R.
63-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894091	front sash (stainless steel) (fastenens to glass)	2
65-69	CORVAIR (2-DR.)	7632220	rr. quarter window front sash (chrome) (fastens to glass)	R.H.
65-69	CORVAIR (2-DR.)	7632221	rr. quarter window front sash (chrome) (fastens to glass)	L.H.
65-69	CORVAIR (SPT. CPE.)	4496138	**CAM ASSY.**, lower sash channel	2
65-69	CORVAIR (CONV.)	4496142	**CAM ASSY.**, lower sash channel	R.H.
65-69	CORVAIR (CONV.)	4496143	**CAM ASSY.**, lower sash channel	L.H.
65-69	CORVAIR (2-DR.)	4491089	**ROLLER ASSY.**, guide	6
ALL	ALL	3830213	**FILLER**, body glass channel (.047" thick)—(10.696)	A.R.
ALL	ALL	3830214	**FILLER**, body glass channel (.032" thick)—(10.696)	A.R.
65-69	CORVAIR (CONV.)	4495192	**FILLER**, channel cam	2
65-69	CORVAIR (SPT. CPE.)	4493826	**FILLER**, channel cam	2
65-68	CORVAIR (2-DR.)	4491087	**BUSHING**, guide roller	6
65-69	CORVAIR (2-DR.)	7582188	**WASHER**, glass to reg. (Note 1)	2
	NOTE 1 On certain models it may be necessary to trim to size.			
65-69	CORVAIR (2-DR.)	4491086	**WASHER**, guide roller (steel—$1\frac{3}{8}$" O.D.)	2
65-68	CORVAIR (2-DR.)	4491088	**NUT**, guide roller tee, lower roller—(10.792)	2

11.011 GLASS—KIT—PRIMER—SPACER, Quarter Window

60-64	CORVAIR STD. (2-DR.)	6279363	(clear)	2
60-64	CORVAIR STD. (2-DR.)	6279580	(tinted)	2
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894087	(tinted)	2
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894086	(clear)	2
62-64	MONZA (CONV.)	4874038	(clear)	R.H.
62-64	MONZA (CONV.)	4874039	(clear)	L.H.
62-64	MONZA (CONV.)	4874040	(tinted)	R.H.
62-64	MONZA (CONV.)	4874041	(tinted)	L.H.
65-69	CORVAIR (2-DR.) (exc. CONV.)	4478866	(clear)	R.H.
65-69	CORVAIR (2-DR.) (exc. CONV.)	4478867	(clear)	L.H.
65-69	CORVAIR (2-DR.) (exc. CONV.)	4478868	(tinted)	R.H.
65-69	CORVAIR (2-DR.) (exc. CONV.)	4478869	(tinted)	L.H.
65-69	CORVAIR (CONV.)	4478870	(clear)	R.H.
65-69	CORVAIR (CONV.)	4478871	(clear)	L.H.
65-69	CORVAIR (CONV.)	4478872	(tinted)	R.H.
65-69	CORVAIR (CONV.)	4478873	(tinted)	L.H.
ALL	ALL	4226000	**KIT**, adhesive caulking—(10.027) (Note 1)	A.R.
ALL	ALL	4226001	**PRIMER**, painted surface—(10.027) (Note 1)	A.R.
	NOTE 1 For use in replacing windshield glass, back window glass (exc. Sta. Wagons) and rear quarter stationary window glass on Sta. Wagons.			
67-68	ALL	4534314	**SPACER** ($\frac{3}{8}$" x $\frac{7}{16}$" x 1)—(10.027)	A.R.

11.012 STOP , Quarter Window Glass

65-69	CORVAIR (CONV.)	4463725	upper	2
65-69	CORVAIR (SPT. CPE.)	4482848	upper	2
66-69	CORVAIR (SPT. CPE.)	7652012	rear quarter window guide	2
66	CORVAIR (SPT. CPE.)	7628215	lower nut to panel screw	2

11.015 CHANNEL—RETAINER—STRIP ASSY.—STRIP—WEATHERSTRIP, Quarter Window Glass

60-64	CORVAIR 2-DR. (exc. MONZA)	6279360	stationary glass	R.H.
60-64	CORVAIR 2-DR. (exc. MONZA)	6279361	stationary glass	L.H.
60-64	CORVAIR STD. (2-DR.)	6279403	**RETAINER**, stationary glass channel, stationary glass channel upper	6
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894883	**STRIP ASSY.**, glass run inner right—outer left	A.R.
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894884	**STRIP ASSY.**, glass run inner left—outer right	A.R.
62-64	MONZA (CONV.)	4874958	**STRIP ASSY.**, body back pillar upper corner	R.H.
62-64	MONZA (CONV.)	4873382	**STRIP ASSY.**, glass run channel outer	R.H.
62-64	MONZA (CONV.)	4873383	**STRIP ASSY.**, glass run channel outer	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts Service

65-69	CORVAIR (2-DR.)	4481614	**STRIP ASSY.,** body lock pillar uppper corner	R.H.
65-69	CORVAIR (2-DR.)	4481615	**STRIP ASSY.,** body lock pillar upper corner	L.H.
65-69	CORVAIR (SPT. CPE.)	4531595	**STRIP ASSY.,** window inner at belt	R.H.
65-69	CORVAIR (SPT. CPE.)	4531596	**STRIP ASSY.,** window inner at belt	L.H.
65-69	CORVAIR (SPT. CPE.)	7595878	**STRIP ASSY.,** window outer at belt	R.H.
65-69	CORVAIR (SPT. CPE.)	7595879	**STRIP ASSY.,** window outer at belt	L.H.
65-69	CORVAIR (CONV.)	4531597	**STRIP ASSY.,** window inner at belt	R.H.
65-69	CORVAIR (CONV.)	4531598	**STRIP ASSY.,** window inner at belt	L.H.
65-69	CORVAIR (CONV.)	4531602	**STRIP ASSY.,** window outer at belt	R.H.
65-69	CORVAIR (CONV.)	4531603	**STRIP ASSY.,** window outer at belt	L.H.
62-65	MONZA (CONV.)	5714359	**STRIP,** rear window inner glass run	1
62-64	MONZA (CONV.)	4873450	**WEATHERSTRIP,** window frame	R.H.
62-64	MONZA (CONV.)	4873451	**WEATHERSTRIP,** window frame	L.H.
65-69	CORVAIR (2-DR.)	4475886	**WEATHERSTRIP,** frame vertical	R.H.
65-69	CORVAIR (2-DR.)	4475887	***WEATHERSTRIP,** frame vertical*	*L.H.*

11.021 CHANNEL ASSEMBLY, Quarter Window Glass Run

60-62	CORVAIR DELUXE (2-DR.) (exc. CONV.)	6279077		2
63-64	CORVAIR (2-DR.) (exc. CONV.)	4894088	rear	R.H.
63-64	CORVAIR (2-DR.) (exc. CONV.)	4894089	rear	L.H.
63-64	CORVAIR (2-DR.) (exc. CONV.)	4894090	glass run front	1

11.031 MOULDING, Quarter Window

60-64	CORVAIR (2-DR.) (exc. MONZA)	6278151	reveal, upper	R.H.
60-64	CORVAIR (2-DR.) (exc. MONZA)	6278152	reveal, upper	L.H.
60-64	MONZA (2-DR.) (exc. CONV.)	6280417	reveal, upper	R.H.
60-64	MONZA (2-DR.) (exc. CONV.)	6280418	reveal, upper	L.H.
60-64	MONZA (2-DR.) (exc. CONV.)	4895674	*reveal, front*	R.H.
60-64	MONZA (2-DR.) (exc. CONV.)	4895675	reveal, front	L.H.
60-64	CORVAIR (2-DR.) (exc. MONZA)	4895672	reveal, front	R.H.
60-64	CORVAIR (2-DR.) (exc. MONZA)	4895673	reveal, front	L.H.
65-68	CORVAIR (SPT. SED.) w/two-tone paint	3870734	**MOULDING UNIT,** rear quarter belt reveal—(12.116)	*R.H.*
65-68	CORVAIR (SPT. SED.) w/two-tone paint	3870733	**MOULDING UNIT,** rear quarter belt reveal—(12.116)	L.H.

11.032 CLIP, Quarter Window

60-61 62	2-DR., LAKEWOOD, CORVAIR (exc. 4-DR. SEDAN)	6278594	*upper and rear*	*A.R.*
61-62	CORVAIR (STA. WAG.)		reveal upper and front,	
62	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4808501	reveal upper rear	6
65-68	CORVAIR (SPT. SED.)	4531005	**CLIP ASSY.,** rear qtr. belt reveal mldg. rr.—(12.118)	2

11.040 GUIDE ASSEMBLY—NUT—SCREW—STUD—SUPPORT, Quarter Window

65-69	CORVAIR (SPT. CPE.)	4496156	*front*	*R.H.*
65-69	CORVAIR (SPT. CPE.)	4496157	front	L.H.
65-69	CORVAIR (SPT. CPE.)	4496158	rear	R.H.
65-69	CORVAIR (SPT. CPE.)	4496159	rear	L.H.
65-69	MONZA (CONV.)	4496160	front	R.H.
65-69	MONZA (CONV.)	4496161	front	L.H.
65-69	MONZA (CONV.)	4496162	rear	R.H.
65-69	MONZA (CONV.)	4496163	rear	L.H.
61-66	DELUXE (2-DR.)	4803018	**SCREW,** guide to panel (1/4"-20 x 1/2")—(10.792)	*A.R.*
66-67	CORVAIR	4405527	**SCREW,** rear guide to panel	A.R.
65-69	MONZA (CONV.)	4406615	**SCREW,** rear guide upper	8
65-69	CORVAIR (CONV.)		**STUD,** front and rear guide upper,	
65-66	MONZA (CONV.)		guide lower,	
65-69	CORVAIR (SPT. CPE.)		front guide,	
69	CORVAIR (CONV.)	4868577	front guide to panel lower—(10.670)	A.R.
	Not required in this group. See group 10.792	4786425	**STUD**	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

11.041 REGULATOR ASSY. AND PARTS, Quarter Window

62-63	MONZA (CONV.)	4843712	manual	R.H.
62-63	MONZA (CONV.)	4843713	manual	L.H.
63-64	*CORVAIR DELUXE (2-DR.) (exc. CONV.)*	4894078	manual	R.H.
63-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894079	manual	L.H.
64-65	MONZA (CONV.)	4806794	manual	R.H.
64-65	MONZA (CONV.)	4806795	manual	L.H.
65-69	CORVAIR (SPT. CPE.)	4487982	manual	R.H.
65-69	CORVAIR (SPT. CPE.)	4487983	manual	L.H.
65-69	CORVAIR (CONV.)	4487832	manual	R.H.
65-69	CORVAIR (CONV.)	4487833	manual	L.H.
65-67	CORVAIR (CONV.)	4460659	**GASKET,** spindle—(10.517)	2
63-64	*CORVAIR DELUXE (2-DR.) (exc. CONV.)*	9418771	**RING,** regulator to channel retaining—(8.934)	1
61	DELUXE (2-DR.)	4803018	**SCREW,** regulator to inner panel ($1\frac{1}{4}$" plus 20 x $1\frac{1}{2}$")—(10.792)	A.R.
61-62	CORVAIR DELUXE (2-DR.)	9708619	**SCREW,** special vented—(10.783)	1
60-62	DELUXE (2-DR.)	4919192	**PACKAGE ASM.,** elect. wind. mtr. (service)—(10.783)	A.R.

11.044 HANDLE ASSY., Rear Quarter Window

60-62	CORVAIR (2-DR.) (exc. MONZA)	6275958	(10.797)	2
61-64	MONZA (2-DR.)	4807923	(10.797)	A.R.
63-64	*CORVAIR (exc. MONZA)*	*4619388*	*(10.797)*	*A.R.*
65-67	CORVAIR	4472076	(10.797)	A.R.
67	CORVAIR (SPT. CPE.) (STD.),			
67	CORVAIR	7680653	(black)—(10.797)	A.R.
67	CORVAIR (2-DR.)	7689676	(blue)	2
67	MONZA (2-DR.)	7689673	(gold)	2
67	CORVAIR (STD.)	7689677	(med. blue)	A.R.
67	MONZA (DELUXE)	7719273	(med. brt. blue)	A.R.

11.047 PLATE—SPRING—WASHER, Rear Quarter Window Regulator Handle

65	ALL	*4506696*	*bearing—(10.515)*	A.R.
68	ALL (exc. 4-DR.)	7731353	(10.515)	2
62-66	MONZA (CONV.)	4078002	**SPRING,** rear quarter window regulator handle—(10.666)	A.R.
63-64	CORVAIR (CPE.)	7591000	**WASHER,** regulator spindle—(10.500)	2

11.052 HINGE, Quarter Window

62-64	MONZA (CONV.)	4458536	female	R.H.
62-64	MONZA (CONV.)	4458537	female	L.H.

11.054 PLATE, Rear Quarter Window Hinge Adjusting

62-64	MONZA (CONV.)	4814607		*R.H.*

11.057 BOLT—STUD, Quarter Window Hinge Pivot

62-64	MONZA (CONV.)	4874960	female ($\frac{3}{8}$—16 x $2\frac{1}{2}$ x $\frac{5}{8}$ thread)	2
62-64	MONZA (CONV.)	4848447	**STUD,** female	4

11.113 SUPPORT, Rear Quarter Moulding

61-62	CORVAIR (STA. WAG.)	6284303	belt finish	4

11.119 MOULDING ASSEMBLY, Quarter Window Garnish and Quarter Belt Finishing

60-64	*CORVAIR (2-DR.)*	*6278000*	*upper, window garnish*	R.H.
60-64	CORVAIR (2-DR.)	6278001	upper, window garnish	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4895676	front, window garnish	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4895677	front, window garnish	L.H.
62-64	MONZA (CONV.)	4873695	belt finish (painted)	R.H.
62-64	MONZA (CONV.)	4873696	belt finish (painted)	L.H.

11.120 MOULDING, Back Window Garnish

60-64	CORVAIR (2-DR.)	6278228		R.H.
60-64	*CORVAIR (2-DR.)*	*6278229*		L.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276494	upper	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276495	upper	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

11.128 SCREW, Garnish Moulding

60	ALL	4760060	back window, upper (8—18 x 5/16")—(10.056)	10
61	ALL	9414754	back window, upper (8—18 x 3/4")—(8.977)	A.R.
62-63	MONZA (CONV.)	9415944	*front belt finishing (8—18 x 3/8")—(8.977)*	1

11.133 ESCUTCHEON, Garnish Moulding

60-64	CORVAIR (2-DR.) (exc. CONV.)	6278100	upper corner	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6278101	upper corner	L.H.

11.175 PLATE ASSEMBLY—EXTENSION—SCREW ASSY., Front Door Sill

61-64	CORVAIR (2-DR.)	6282417		R.H.
61-64	CORVAIR (2-DR.)	6282418		L.H.
61-64	CORVAIR (4-DR.)	6282415		R.H.
61-64	CORVAIR (4-DR.)	6282416		L.H.
62-64	MONZA (CONV.)	4871383		R.H.
62-64	MONZA (CONV.)	4871384		L.H.
65-69	CORVAIR (2-DR.)	4470394		R.H.
65-69	CORVAIR (2-DR.)	4470395		L.H.
65-67	CORVAIR (4-DR.)	4470392		2
60-64	CORVAIR (2-DR.) (exc. CONV.)	6279208	**EXTENSION,** sill plate	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6279209	**EXTENSION,** sill plate	L.H.
65-69	CORVAIR (SPT. CPE.)	4470634	***EXTENSION,** sill plate*	*R.H.*
65-69	CORVAIR (SPT. CPE.)	4470635	**EXTENSION,** sill plate	L.H.
61	ALL	4822318	**SCREW ASSY.** (No. 8—18 x 1/2)	2

11.179 PLATE, Rear Door Sill

60-64	CORVAIR (4-DR.) (2nd type)	6279144	(aluminum)	R.H.
60-64	CORVAIR (4-DR.) (2nd type)	6279145	(aluminum)	L.H.
65-67	CORVAIR (4-DR.)	4470390		R.H.
65-67	CORVAIR (4-DR.)	4470391		L.H.

11.204 GLASS—KIT—PRIMER—SPACER, Back Window

60-65	CORVAIR (2-DR.)	6277685	(clear)	1
60-64	CORVAIR (2-DR.)	6279582	(tinted)	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276151	(clear)	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6279581	(tinted)	1
65-69	CORVAIR (SPT. CPE.)	4452397	(clear)	1
65-69	CORVAIR (SPT. CPE.)	4452398	(tinted)	1
65-66	CORVAIR (4-DR.)	4459592	(clear)	1
65-66	CORVAIR (4-DR.)	4459593	(tinted)	1
ALL	ALL	4226000	**KIT,** adhesive caulking—(10.027) (Note 1)	A.R.
ALL	ALL	4226001	**PRIMER,** painted surface (1 pint cans)—(10.027) (Note 1)	A.R.

NOTE 1 For use in replacing windshield glass, back window glass (exc. Sta. Wagons) and rear quarter stationary window glass on Sta. Wagons.

65-68	CORVAIR	4871330	**SPACER,** adhesive caulked glass (11/32" x 7/16" x 1—rubber)—(10.027)	A.R.
67-68	ALL	4534314	**SPACER** (3/8 x 7/16 x 1)	A.R.
67-68	ALL	4459429	**SPACER** (13/64" x 1/2" x 1)—(10.027)	A.R.

11.207 CHANNEL ASSY., Back Window (rubber)

60-64	CORVAIR STD. (2-DR.)	6279091		1
60-64	CORVAIR DELUXE (2-DR.)	6278531		1
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	4867674		1

11.208 MOULDING—CAP, Back Window Reveal

60-64	CORVAIR DELUXE (2-DR.)	6281353	side	R.H.
60-64	CORVAIR DELUXE (2-DR.)	6281354	side	L.H.
60-64	CORVAIR DELUXE (2-DR.)	6278062	lower	R.H.
60-64	CORVAIR DELUXE (2-DR.)	6278063	lower	L.H.
60-64	CORVAIR DELUXE (2-DR.)	6281351	upper	R.H.
60-64	CORVAIR DELUXE (2-DR.)	6281352	upper	L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276425	*upper*	*R.H.*
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276426	upper	L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276427	lower	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276428	lower	L.H.
65-69	CORVAIR (SPT. CPE.)	4474480	upper	1
65-69	CORVAIR (SPT. CPE.)	4477400	lower	R.H.
65-69	CORVAIR (SPT. CPE.)	4477401	lower	L.H.
65-69	CORVAIR (SPT. CPE.)	4477148	side	R.H.
65-69	CORVAIR (2-DR.) (SPT. CPE.)	4477149	side	L.H.
65-67	CORVAIR (4-DR.)	4478899	upper	1
65-67	CORVAIR (4-DR.)	4537500	side	R.H.
65-67	CORVAIR (4-DR.)	4537501	side	L.H.
65-67	CORVAIR (4-DR.)	4478952	lower	R.H.
65-67	CORVAIR (4-DR.)	4478953	lower	L.H.
60-64	CORVAIR DELUXE (4-DR. SED.)	3818416	**CAP,** lower and upper	2

11.209 ESCUTCHEON—CLIP, Back Window Reveal Moulding

60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276471	upper, corner	2
60-61	CORVAIR DELUXE (2-DR.)	4845393	**CLIP,** side center and side upper	A.R.
61-63	CORVAIR DELUXE (2-DR.)	6284216	**CLIP,** side upper and lower	2
60-63	CORVAIR DELUXE (2-DR.)	4815949	**CLIP,** upper and lower	A.R.
64	CORVAIR DELUXE (2-DR.)	4411993	**CLIP,** side reveal mldg. lower	2
65-68	CORVAIR (exc. CONV.)	4474364	**CLIP,** upper corner—(10.056)	A.R.
65-66	CORVAIR (exc. CONV.)	4501000	**CLIP,** lower, emergency use	A.R.
66-68	CORVAIR (exc. CONV.)	4471409	**CLIP,** emergency use (screw-on type)—(10.096)	A.R.
65-67	CORVAIR (exc. CONV.)	7693140	**CLIP** (screw-on type) (emergency use)—(10.096)	A.R.
67-68	CORVAIR	7746628	**CLIP,** anode	4
69	CORVAIR (SPT. CPE.)	8736590	**CLIP,** emergency use—(10.096)	A.R.
69	CORVAIR	8736586	**CLIP** (10.096)	A.R.

11.358 COVER—PANEL, Front Seat Back

60-64	CORVAIR	6276087	side protector	R.H.
60-64	CORVAIR	6276088	side protector	L.H.
60-66	CORVAIR (2-DR.) (exc. MONZA),			
65-66	MONZA	4886772	driver and pass. seat back corner trim inner and outer panel	1
62-66	CORVAIR (2-DR.),			
62-66	MONZA	4886773	driver and pass. seat back corner trim inner and outer panel	1
67-69	CORVAIR (STD.) (SPT. CPE.)	7661303	**PANEL,** lower corner frame trim	R.H.
67-69	CORVAIR (STD.) (SPT. CPE.)	7661304	**PANEL,** lower corner frame trim	L.H.
67	MONZA (SPT. CPE., CONV.) (1st design)	7677680	**PANEL,** pass. seat back (Note 1)	1
67	MONZA (SPT. CPE., CONV.) (1st design)	7677681	**PANEL,** driver seat back (Note 1)	1
67	MONZA (SPT. SED.)	7664821	**PANEL,** driver and pass. (black)	2
67	MONZA (SPT. SED.)	7603370	**PANEL,** driver and pass. seat back (Note 1)	2
67	MONZA (2-DR.) (2nd design)	7677995	**PANEL,** pass. (black)	1
67	MONZA (2-DR.) (2nd design)	7677996	**PANEL,** driver (black)	1
67	MONZA (2-DR.) (2nd design)	7678000	**PANEL,** pass. (med. gold)	1
67	MONZA (2-DR.) (2nd design)	7678001	**PANEL,** driver (med. gold)	1
67	MONZA (2-DR.) (exc. STD.) (2nd design)	7677997	**PANEL,** pass. (brt. blue)	1
67	MONZA (2-DR.) (exc. STD.) (2nd design)	7677998	**PANEL,** driver (brt. blue)	1
69	MONZA	8730892	**PANEL,** pass. (dark blue) (plastic)	1
69	MONZA	8730893	**PANEL,** driver (dark blue) (plastic)	1
69	CORVAIR	8730894	**PANEL,** pass. (med. green) (plastic)	1
69	CORVAIR	8730895	**PANEL,** driver (med. green) (plastic)	1

11.368 SUPPORT, Front Seat Back, Side Panels

62-64	MONZA (CONV.)	4869903	rear	1
62-64	MONZA (CONV.)	4870132	front	1
67	MONZA (1st design)	7603378	trim panel (Note 1)	2
	NOTE 1 Use on models built prior to March 1, 1967.			
67	MONZA (2nd design)	7665209	trim panel	2
68-69	ALL w/Strato seats	7737868	driver and pass. panel upper	4
68-69	ALL w/Strato seats	7737871	driver inner and pass. outer panel rear	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

11.373 RING, Front Seat Back with Springs

ALL	ALL	4556605	trim	A.R.

CUSHION ASSY., Front Seat Back with Frame Spring and Padding (less trim cover)

61-64	MONZA	4460280	pass. and driver	2
65	CORVAIR (STD.) (2-DR.)	7596945		L.H.
65-66	CORVAIR (STD.) (2-DR.),			
67	CORVAIR, (2-DR.) (exc. MONZA)	7716358	front (Note 1)	R.H.
65	MONZA	4481075	pass and driver	2
66	CORVAIR STD. (2-DR.),			
67	CORVAIR (2-DR.) (exc. MONZA)	7716359	front seat (Note 1)	L.H.
67	CORVAIR (4-DR.) (exc. MONZA)	7716357	front seat (Note 1)	1
66	MONZA (exc. head rest)	7631823	driver seat	1
66	MONZA	7631822	driver seat (Note 1)	1
66	MONZA	7631821	pass. seat (Note 1)	1
66	MONZA	7631820	pass. seat (Note 1)	1
67	CORVAIR (2-DR.) (exc. STD.)	7716391	pass. seat (Note 1)	1
67	CORVAIR (2-DR.) (exc. STD.)	7716395	driver seat (Note 1)	1
67	MONZA (4-DR.)	7716392	pass. seat (Note 1)	1
67	MONZA (4-DR.)	7716396	driver seat (Note 1)	1
68	MONZA (CONV.)	7788481	pass. seat (Note 1)	1
68	MONZA	7788483	driver seat (Note 1)	1
68	CORVAIR (STD.)	7788462	pass. seat (Note 1)	1
68	CORVAIR (STD.)	7788463	driver seat (Note 1)	1
69	MONZA	8777123		L.H.
69	CORVAIR (STD.)	8777250		R.H.
69	CORVAIR (STD.)	8777251		L.H.
69	CORVAIR	8731979	driver	L.H.
69	CORVAIR	8731978	pass.	R.H.

NOTE 1: Contains built in provisions for head restraint.

11.375 COVER–MOULDING–RETAINER–FASTENER–WASHER–PLATE–BOLT, Front Seat Hinge Arm

61	MONZA w/bucket seats,			
63-64	MONZA w/bucket seats	6284225	inner arm (ivory)	R.H.
61	MONZA w/bucket seats,			
63-64	MONZA w/bucket seats	6284224	inner arm (ivory)	L.H.
61-64	MONZA w/bucket seats	6284222	inner arm (black)	L.H.
62-64	CORVAIR DELUXE (2-DR.),			
62-64	MONZA (4-DR.) w/bucket seats	4860632	inner and outer hinge arm (blue) (Note 1)	R.H.
62-64	CORVAIR DELUXE (2-DR.),			
62-64	MONZA (4-DR.) w/bucket seats	4860633	inner and outer hinge arm (blue) (Note 1)	L.H.
62-64	CORVAIR DELUXE (2-DR.),			
62-64	MONZA (4-DR.) w/bucket seats	4860634	inner and outer hinge arm (aqua) (Note 1)	R.H.
62-64	CORVAIR DELUXE (2-DR.),			
62-64	MONZA (4-DR.) w/bucket seats	4860635	inner and outer hinge arm (aqua) (Note 1)	L.H.

NOTE 1 Used as inner on bucket seats and outer on rest.

61-64	MONZA w/bucket seats	6284223	seat back inner arm (black)	R.H.
63-64	MONZA	4886674	inner and outer hinge arm (saddle)	R.H.
63-64	MONZA	4886675	inner and outer hinge arm (saddle)	L.H.
63-64	CORVAIR DELUXE (2-DR.) (exc. MONZA)		frt. back outer hinge arm,	
63-64	MONZA w/bucket seats	4886682	seat back inner arm (red)	R.H.
63-64	CORVAIR DELUXE (2-DR.) (exc. MONZA)		frt. back outer hinge arm,	
63-64	MONZA w/bucket seats	4886683	seat back inner arm (red)	L.H.
64	CORVAIR DELUXE (2-DR.)	4421901	inner and outer hinge arm (fawn)	R.H.
64	CORVAIR DELUXE (2-DR.)	4421902	inner and outer hinge arm (fawn)	L.H.
65-66	MONZA	4501734	driver seat back inner arm (white)	1
65-66	MONZA (exc. STD.)	4501735	pass. seat back inner arm (white)	1
65	CORVAIR (exc. STD.)	4501750	frt. back outer hinge arm	1
65	CORVAIR (exc. STD.)	4501751	pass. seat back inner arm (slate) frt. back outer hinge arm	1
65-66	MONZA	4501732	front seat back outer hinge arm cover (black)	R.H.
65	MONZA (exc. STD.)	4501733	front seat back outer hinge arm cover (black)	L.H.
65	CORVAIR (exc. STD.)	4501738	frt. back outer hinge arm (blue)	R.H.
65	CORVAIR (exc. STD.)	4501739	frt. back outer hinge arm (blue)	L.H.
65	CORVAIR (exc. STD.)	4501746	frt. back outer hinge arm (saddle)	R.H.
65-66	CORVAIR (exc. STD.)	4501736	frt. back outer hinge arm (lt. fawn)	R.H.
65-66	CORVAIR (exc. STD.)	4501737	frt. back outer hinge arm (fawn)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-66	CORVAIR (exc. STD.)	4501744	driver seat back inner arm (red) — R.H.
65-66	CORVAIR (exc. STD.)	4501745	pass. seat back inner arm (red) — L.H.
66	MONZA	7594245	driver seat back inner arm cover — R.H.
66	MONZA	7594246	driver seat back inner arm cover — L.H.
66	MONZA	7628268	driver seat back inner arm (bronze) — R.H.
66	MONZA	7628269	pass. seat back inner arm (bronze) — L.H.
66	MONZA	7617408	driver seat back inner arm (blue) — R.H.
66	MONZA	7617409	pass. seat back inner arm (blue) — L.H.
66	MONZA	7617412	driver seat back inner arm (saddle) — 1
66	MONZA	7617413	pass. seat back inner arm (saddle) — 1
67-69	MONZA	7684910	pass., seat back inner arm (black) driver, seat back outer arm — 2
67-69	MONZA	7684911	driver, seat back inner arm (black) pass., seat back outer arm — 2
67	MONZA (DELUXE)	7684912	pass., seat back inner arm (bright blue) driver, seat back outer arm — 2
67	MONZA (DELUXE)	7684913	driver, seat back inner arm (bright blue), pass., seat back outer arm — 2
67	MONZA	7684914	pass., seat back inner arm (gold), driver, seat back outer arm — 2
67	MONZA	7684915	driver, seat back inner arm (gold), pass., seat back outer arm — 2
68	MONZA	7731532	pass. inner, driver outer (blue) — 2
68	MONZA	7731533	driver inner, pass. outer (blue) — 2
68	MONZA	7731534	pass. inner, driver outer (gold) — 2
68	MONZA	7731535	driver inner, pass. outer (gold) — 2
69	MONZA	8721191	driver inner, pass. outer (green) — 2
60-65	MONZA w/bucket seats	6280363	**MOULDING,** pass. seat back side outer ("L" shape—chrome)—(14.818) — 1
60-65	MONZA w/bucket seats	6280364	**MOULDING,** driver seat back side outer ("L" shape—chrome)—(14.818) — 1
60-66	CORVAIR DELUXE		**RETAINER,** back frame to extension pin to inner and outer bar,
65-69	CORVAIR STD. (2-DR.),		
67-69	MONZA	4495047	(7/8" O.D.—6 prongs) — A.R.
60-66	MONZA		**RETAINER,** driver and pass. seat back quarter to extension pin,
65-67	CORVAIR (STD. 2-DR.),		
69	CORVAIR (STD.)	7622311	driver and pass. seat frame to hinge pin — 2
60-64	CORVAIR DELUXE (2-DR.)		**FASTENER,** seat back outer hinge arm cover,
60-64	MONZA (4-DR.) w/bucket seats	6281339	seat back inner hinge arm cover — 2
65-66	MONZA		**FASTENER,** pass. seat back inr. arm cover,
67-69	MONZA	7719698	**FASTENER,** inner and outer arm cover, outer air cover — A.R.
68	MONZA	7670169	**FASTENER,** outer hinge arm cover, driver and pass., inner and outer arm cover — A.R.
60	DULUXE (2-DR.),		
65	CORVAIR STD. (2-DR.),		
61-65	MONZA w/bucket seats	4840769	**WASHER,** back to extension — 2
60	CORVAIR (2-DR.),		
61-64	CORVAIR (2-DR.) (exc. MONZA)	6277303	**PLATE,** bottom inner hinge cover — 1
66	CORVAIR (STD.) (2-DR.)	7637007	**PLATE,** center (blue) — 1
66	CORVAIR (STD.)	7637010	**PLATE,** center (fawn) — 1
67	CORVAIR (SPT. CPE.) (exc. MONZA)	7656875	**PLATE,** center hinge arm (blue) — 1
67	CORVAIR (SPT. CPE.) (exc. MONZA)	7656874	**PLATE,** center hinge arm (fawn) — 1
67-69	CORVAIR (2-DR.) (exc. MONZA)	7637004	**PLATE,** center hinge arm (black) — 1
68	CORVAIR (2-DR.) (exc. MONZA)	7731519	**PLATE,** center (dk. blue) — 1
68	CORVAIR (2-DR.) (exc. MONZA)	7731520	**PLATE,** center (med. gold) — 1
69	CORVAIR (2-DR.) (exc. MONZA)	8732142	**PLATE,** center hinge arm (blue) — 1
69	CORVAIR (2-DR.) (exc. MONZA)	8732144	**PLATE,** center hinge arm (green) — 1
67	MONZA	7653650	**BOLT,** driver and pass. seat back frame stop — A.R.

11.376 ATTACHING PARTS, Front Seat Head Restraint

NOTE For HEADRESTRAINT ASSY., see group 14.924.

66-67	ALL (exc. Astro. bucket seats)	7642729	**ESCUTCHEON,** front seat back head restraint panel support — 2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

68-69	CORVAIR	7787349	**ESCUTCHEON,** driver and pass. head support	2
69	ALL (exc. MONZA)	8756591	**ESCUTCHEON,** pass and driver support	2
69	ALL w/strato bucket seats	8756593	**ESCUTCHEON,** pass and driver support	4
69	MONZA	8756596	**ESCUTCHEON,** pass and driver support	2
67	MONZA w/head restraint strato seat	7675651	**ESCUTCHEON ASSY.**	2
69	ALL	8732474	**FASTENER,** pass and driver H/rst (black)	4
69	CORVAIR (STANDARD)	8748950	**PAD ASSY.,** w/panel pass. and driver	2
69	CORVAIR	8769153	**PANEL,** pass. and driver (black)	2
69	CORVAIR	8769161	**PANEL,** pass. and driver (dark blue)	2
69	CORVAIR	8769162	**PANEL,** pass. and driver (med. green)	2
66	ALL *w/conventional* headrestraint	4547692	**PANEL ASSY.,** *front seat back headrestraint*	2
67	CORVAIR (STD.)	7699054	**PANEL ASSY.,** back headrestraint	2
68	CORVAIR w/conventional bench seat	7738379	**PANEL ASSY.,** driver and pass. seat back headrestraint	2
66	CORVAIR,			
67	MONZA	7645979	**SPRING,** front seat back headrestraint panel support	2
67	ALL	7717828	**SPRING,** front back headrestraint panel support	2
69	CORVAIR (STANDARD),			
69	MONZA	8736844	**TUBE,** pass. and driver support	2
66	CORVAIR (STD.)	7642569	**GUIDE ASSY.,** front seat back headrestraint	2
66	MONZA	7642570	**GUIDE ASSY.,** front seat back headrestraint support	2
68-69	CORVAIR w/conventional headrestraint	7723847	**GUIDE ASSY.,** driver and pass. seat back support	2
68-69	CORVAIR w/conventional *headrestraint*	7725792	**EXTENSION ASSY.,** support guide	2
68	CORVAIR w/conventional headrestraint	8732425	**PLATE,** driver and pass. support cover	2
69	ALL	8754431	**RETAINER,** pass. and driver panel	2
68	ALL *w/conventional* headrestraint	7739549	**RETAINER ASSY.,** *driver and pass. support escutcheon*	2
69	ALL w/Strato bucket seats	8767360	**RETAINER ASSY.,** pass outer and driver inner escutcheon	2
69	ALL w/Strato bucket *seats*	8767361	**RETAINER ASSY.,** pass. inner and driver outer *escutcheon*	2
69	ALL w/Strato bucket seats	8766603	**ROLLER,** pass and driver panel support guide	2

11.381 BUMPER ASSY.—BUMPER—SPACER—SPRING—WASHER—SCREW—CABLE, Seat Back Stop

64-68	CORVAIR (STD.)		front seat back frame center,	
65-68	MONZA		driver and pass. seat back frame,	
60-66	CORVAIR (2-DR.)	4406843	driver and pass. seat back frame inner *and outer*	A.R.
60-63	CORVAIR (2-DR.),			
61-63	MONZA (4-DR.) w/bucket seats	6279853	front seat back side	A.R.
67	MONZA (4-DR.)	7712564	pass. outer and driver insert, seat back frame	2
65-67	CORVAIR (exc. CONV.),			
67	CORVAIR	4500728	**BUMPER,** rear seat fldg. back	2
68-69	CORVAIR	7731448	**BUMPER,** rear folding seat	L.H.
67	MONZA	4862033	**SPACER,** *seat back stop cable*	1
67-69	MONZA	7674659	**SPACER,** pass., inner cable	1
68	MONZA (CONV.)	7648704	**SPRING,** pass. stop cable	1
60-61	2-DR.,			
61	MONZA (4-DR.) w/bucket seats	4728832	**WASHER,** center and side, frame	4
62-63	CORVAIR (2-DR.)	4868333	**WASHER,** front seat back stop	4
69	MONZA	8760228	**SCREW,** *pass. back stop* inner cable	2
67-69	MONZA (2-DR.)	7726498	**CABLE,** pass., inner, outer	1

11.390 PARTS, Front Seat Back Lock

67	MONZA (2-DR.) (1st design)	7677927	right, front (less handle) (Note 1)	1
	NOTE 1 Use on models built prior to March 1, 1967.			
67-68	MONZA (2-DR.) (2nd design)	7740370	front	R.H.
67-68	MONZA (2-DR.) (2nd design)	7740371	front	L.H.
67-69	2 DR. (exc. MONZA)	8761646	**LOCK ASSY.**	R.H.
68-69	MONZA	7743260	**LOCK ASSY.,** pass.	1
68-69	MONZA	7743261	**LOCK ASSY.,** *driver*	1
69	2 DR. (exc. MONZA)	8761647	**LOCK ASSY.,**	L.H.
67	MONZA (2-DR.)		**HANDLE,** left,	
67-69	2 DR. (exc. MONZA)	7724824	*right* (Note 2)	1
67	MONZA (2-DR.)		**HANDLE,** right,	
67-69	2-DR. (exc. MONZA)	7724825	left (Note 2)	1

NOTE 2 1st design part to be used on models built prior to Feb. 28, 1967.
Part 7740370 (right) 7740371 (left) to be used on models *built after this date.*

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

67-68	2-DR.,			
69	2-DR. (exc. MONZA)	7661259	**KNOB ASSY.,** handle	A.R.
67-69	CORVAIR (2-DR.) (exc. MONZA)	7661270	**ESCUTCHEON,** handle	2
67-69	CORVAIR (2-DR.) (exc. MONZA)	7666998	**STRIKER**	R.H.
67-69	CORVAIR (2-DR.) (exc. MONZA)	7666999	**STRIKER**	L.H.
67-69	MONZA	7702776	**STRIKER,** pass.	1
67-69	MONZA	7702777	**STRIKER,** driver	1
67-69	CORVAIR (exc. MONZA)	9710444	**SPRING,** lock bolt	R.H.
67-69	CORVAIR (exc. MONZA)	9710445	**SPRING,** lock bolt	L.H.
67-69	CORVAIR (exc. MONZA)	9710448	**SPRING,** lock detent	R.H.
67-69	CORVAIR (exc. MONZA)	9710449	**SPRING,** lock detent	L.H.
67	MONZA	9710882	**SPRING,** lock bolt	R.H.
67-69	MONZA	9714559	**SPRING,** lock bolt	L.H.
67-69	MONZA	9710884	**SPRING,** lock detent	R.H.
67-69	MONZA	9710885	**SPRING,** lock detent	L.H.
68-69	MONZA	9714558	**SPRING,** lock bolt	R.H.

11.419 CUSHION ASSY., Front Seat Bottom with Frame, Springs and Padding (less trim cover)

61-63	MONZA w/bucket seats (exc. CONV.),			
62-63	MONZA (CONV.),			
64	MONZA	4460277	pass. and driver	2
60-61	4-DR.,			
62-64	CORVAIR (4-DR.) (exc. MONZA)	4460284		1
65-67	CORVAIR (STD.) (2-DR.)	7716354		1
65-66	MONZA	7631819	pass. and driver	2
67-68	MONZA, (exc. STD.)	7788479	driver	2
67	CORVAIR (4-DR.)	7716352		1
67	MONZA (4-DR.)	7716384	pass.	1
67	MONZA (4-DR.)	7716388	driver	1
68	CORVAIR (STD.)	7788459		1
68	MONZA	7788477	pass.	1
69	MONZA	8777277	pass	1
69	CORVAIR (STD.)	8777171		1
69	MONZA	8777207	driver	1

11.561 ADJUSTER ASSY. AND PARTS, Front Seat

60-61	CORVAIR (exc. MONZA 2-DR.)	6276275		R.H.
60-61	MONZA w/bucket seats	4804788	driver	L.H.
61	MONZA w/bucket seats	6283134	pass.	R.H.
62	CORVAIR w/bucket seats (exc. MONZA CONV.)			
63-64	MONZA (exc. CONV.)	4452395	pass.	R.H.
62-64	MONZA (CONV.)	4402333	pass.	R.H.
62-66	MONZA w/bucket seats	4854316	driver, pass., inner	A.R.
62-64	MONZA (CONV.)	4402334	driver	L.H.
62-63	CORVAIR (exc. bucket seats),			
62-63	MONZA w/bucket seats (exc. CONV.)	4866771	driver, outer	A.R.
64	CORVAIR (exc. bucket seats),			
64	MONZA (exc. CONV.)	4452394	driver	L.H.
62-63	CORVAIR (exc. bucket seats)	4866770		R.H.
64	CORVAIR (exc. MONZA),			
65-66	CORVAIR (STD.)	4844640		R.H.
65-66	CORVAIR (STD.)	4474279		L.H.
65-66	MONZA	4526876	driver	L.H.
65-66	MONZA	4526877	pass.	R.H.
65	MONZA	4474496	driver	R.H.
67-69	CORVAIR (STD.)	7659747	(manual)	R.H.
67	CORVAIR (STD.)	7659748	(manual)	L.H.
67	MONZA	7659749	driver, outer (manual)	1
67	MONZA	7659751	pass., outer (manual)	1
67-69	MONZA	7659750	driver and pass., inner (manual)	2
68-69	CORVAIR (STD.)	7779421	(manual)	L.H.
68-69	MONZA	8727191	driver, outer (manual)	1
68-69	MONZA	8727192	pass. outer (manual)	1
64-69	CORVAIR	4405445	**BOLT,** driver and pass. adjuster	A.R.
64-69	ALL		**BOLT,** adjuster to side bar,	

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

64-68	ALL w/bucket seats	4409391	adjuster to frame and inner and outer and side bar ($^5/_{16}$"-18 x $^5/_8$" washer)	A.R.
60-61	ALL	4589817	**RETAINER,** adjuster to floor pan, right and left	2
67	MONZA	4630023	**RETAINER,** driver and pass. seat frame hinge pin—(11.375)	2

11.581 SPRING, Front Seat Adjuster

60-61	ALL	4305350	right or left, lock bar	A.R.
62-69	ALL	4854893	right or left, assist	A.R.
62-67	CORVAIR (exc. bucket seats)		lock bar,	
64-66	MONZA (exc. bucket seats)		pass. outer, lock bar,	
62-66	CORVAIR w/bucket seats (exc. MONZA CONV.)	9703151	driver left, lock bar	A.R.
62-65	ALL w/bucket seats		lockbar, pass.,	
62-64	MONZA (CONV.) w/bucket seats,			
65-67	CORVAIR (STD.)		right or left lock bar,	
66	MONZA	5714724	driver outer lock bar	A.R.
67-69	CORVAIR (STD.)	9711041	lock bar	A.R.
67-69	MONZA	9711040	driver and pass., outer lock bar	A.R.

11.588 KNOB ASSY.—KNOB, Front Seat Adjuster

63-64	MONZA (CONV.)	4591925	pass. and driver ("T" type)	2
64-66	CORVAIR (STD.)	4413115		1
67	CORVAIR	7665300	driver and pass.	A.R.
68-69	ALL w/strato bucket	7778975	**KNOB,** driver and pass.	1

11.589 WIRE ASSY.—ESCUTCHEON—RETAINER, Front Seat Adjusting Lock

64-66	CORVAIR (exc. bucket seats)	4416729	auxiliary locking	1
67-69	CORVAIR (STD.)	7689748	auxiliary locking	1
62-64	MONZA (CONV.)	4757035	**ESCUTCHEON,** seat adjuster knob (pass. and driver)	A.R.
69	CORVAIR	4415868	**RETAINER,** auxiliary locking wire	1

11.610 CUSHION ASSY., Rear Seat Bottom, with Spring, Frame and Padding (less trim cover)

60-63	CORVAIR (4-DR.) (exc. STA. WAG.)	4460291		1
62-64	MONZA (CONV.)	4460290		1
65	CORVAIR (2-DR.) (exc. CONV.),			
66	CORVAIR (SPT. CPE.)	4549420		1
67	MONZA (CONV.)	7716404		1
67	CORVAIR (SPT. CPE.)	7716398		1
65-66	CORVAIR (4-DR.),			
67	CORVAIR (SPT. SED.)	7716400		1
68	CORVAIR (SPT. CPE.)	7788484		1
68	CORVAIR (CONV.)	7788489		1
69	CORVAIR (SPT. CPE.)	8777337		1
69	CORVAIR (CONV.)	8777338		1

11.620 ATTACHING PARTS, Folding Seat, For Load Floor Parts (See Group 12.977)

61-64	CORVAIR (4-DR.) w/folding seat (exc. STA. WAG.)	6283228	**HINGE ASSY.,** rr. floor filler panel (37 long)	1
60-64	CORVAIR (2-DR.)	6278500	**HINGE ASSY.,** panel (Note 1)	R.H.
60-64	CORVAIR (2-DR.)	6278501	**HINGE ASSY.,** panel (Note 1)	L.H.
65-67	CORVAIR (4-DR.) w/folding seat	4474889	**HINGE ASSY.,** rear floor filler panel	1
68-69	CORVAIR	7783384	**LINK,** rear seat fldg. panel	R.H.
68-69	CORVAIR	7783385	**LINK,** rear seat fldg. panel	L.H.
60	4-DR.	6277249	**LINK ASSY.,** rr. seat back support	L.H.
61-64	CORVAIR (4-DR.) w/folding seat (exc. STA. WAG.)	6282282	**LINK ASSY.,** rr. seat back mtg. support	R.H.
61-64	CORVAIR (4-DR.) w/folding seat (exc. STA. WAG.)	6282283	**LINK ASSY.,** rr. seat back mtg. support	L.H.
65-66	CORVAIR (SPT. CPE.)	4493773	**LINK ASSY.,** rr. seat folding panel	R.H.
65-66	CORVAIR (SPT. CPE.)	4493774	**LINK ASSY.,** rr. seat folding panel	L.H.
65-66	CORVAIR (4-DR.)	4506894	**LINK ASSY.,** rear seat folding back mtg. support	R.H.
65-66	CORVAIR (4-DR.)	4506895	**LINK ASSY.,** seat folding back mtg. support	L.H.
67	CORVAIR (2-DR.)	7647704	**LINK ASSY.,** rear panel	R.H.
67	CORVAIR (2-DR.)	7647705	**LINK ASSY.,** rear panel	L.H.
67	CORVAIR (4-DR.)	7647718	**LINK ASSY.,** rear mounting support	R.H.
67	CORVAIR (4-DR.)	7647719	**LINK ASSY.,** rear mounting support	L.H.
62-64	MONZA w/bucket seats	6284339	**PLATE,** pass. adjuster anchor inner front	1
62-64	MONZA w/bucket seats	6284340	**PLATE,** driver, adjuster anchor inner front	1
62-64	CORVAIR (4-DR.) w/folding seat	4864607	**PLATE,** rear seat folding back finish on wheelhouse	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-69	CORVAIR w/folding seat	4508477	**PLATE,** rear seat folding back finish on wheelhouse	A.R.
62-64	MONZA (4-DR.)	4864634	**RETAINER,** rear folding seat back (black)	2
63-64	CORVAIR (4-DR.)	4864635	**RETAINER,** rear seat folding back (red)	2
63-64	MONZA (4-DR.)	4888094	**RETAINER,** rear seat folding back (saddle)	2
63-64	CORVAIR (4-DR.) w/folding seat	4888095	**RETAINER,** rear seat folding back (blue)	2
63-64	CORVAIR (4-DR.) w/folding seat	4888097	**RETAINER,** rear seat folding back (aqua)	2
64	CORVAIR (4-DR.),			
65	CORVAIR STD. w/folding seat,			
66	MONZA	4508658	**RETAINER,** rear seat folding back (med. turquoise)	2
65-66	CORVAIR w/folding seat	4508659	**RETAINER,** rear seat folding back (red)	2
65	CORVAIR w/folding seat	4508663	**RETAINER,** rear seat folding back (fawn)	2
65-67	CORVAIR	4508656	**RETAINER,** rear seat folding back (black)	2
65	CORVAIR (exc. STD.)	4508657	**RETAINER,** rear seat folding back (blue)	2
65	MONZA (exc. CONV.)	4508662	**RETAINER,** rear seat folding back (saddle)	2
65	CORVAIR (exc. STD.)	4508660	**RETAINER,** rear seat folding back (slate)	2
65	CORVAIR (exc. STD.)	4508661	**RETAINER,** rear seat folding back (dk. turquoise)	2
66-67	MONZA	4542145	**RETAINER,** rear seat folding back (blue)	2
66	MONZA w/folding seat (exc. CONV.)	4542147	**RETAINER,** rear seat folding back (fawn)	2
66	MONZA (exc. CONV.)	4542148	**RETAINER,** rear seat folding back (bronze)	2
67	MONZA	7647659	**RETAINER,** rear seat folding back (gold)	2
67	CORVAIR w/folding seat	7647661	**RETAINER,** rear seat folding back (med. blue)	2
67	CORVAIR (STD.)	7647660	**RETAINER,** rear seat folding back (fawn)	2
65-67	CORVAIR (4-DR.) w/folding seat	4438089	**SUPPORT,** rear floor panel down position	1
60-62	CORVAIR (2-DR.) (exc. MONZA)	4721222	**BUMPER,** folding seat back—(12.212)	A.R.
60-64	CORVAIR,			
68-69	ALL w/folding rear seat	4767527	**BUMPER,** rear seat back	1
63-64	CORVAIR (2-DR.)	4868380	rr. seat folding back frame center	A.R.
64-69	CORVAIR (STD.)		**BUMPER,** front seat back frame center,	
65-69	MONZA,			
60-66	CORVAIR (2-DR.)	4406843	drive and pass. seat back frame, inner and outer	A.R.
62	MONZA,			
63-67	CORVAIR w/folding seat	4421950	**STRIKER,** rear seat folding back retainer (chrome)	2
68	MONZA (SPT. CPE.),			
68	CORVAIR w/folding rear seat	7773917	**STRIKER,** rear seat back lock	1
69	CORVAIR	8745525	**STRIKER ASSY.,** fldg. rear seat back lock	1
68-69	CORVAIR w/folding rear seat	7779669	**LOCK ASSY.,** rear seat back	R.H.

NOTE 1: See Link Assy. for comparable 4-DR usage.

11.628 FRAME ASSY., Rear Seat Back with Springs

65-67	CORVAIR (4-DR.) w/folding seat	4465600		1
65-67	CORVAIR (SPT. CPE.) w/fldg. seat	4465601		1

CUSHION ASSY., Rear Seat Back with Frame Springs cover

65	CORVAIR STD. (4-DR.) (exc. folding seat)	4480840		1
65-67	MONZA (CONV.)	7716411		1
66	CORVAIR (4-DR.),			
67	CORVAIR (STD.) (4-DR.)	7716410		1
68	CORVAIR (SPT. CPE.) w/folding rear seat	7788497		1
67-68	CORVAIR (SPT. CPE.)	7788496		1
68	CORVAIR (CONV.)	7788498		1
69	CORVAIR (STD.)	8777291		1
69	CORVAIR (CONV.)	8777292		1
69	CORVAIR (SPT. CPE.) w/folding rear seat	8777333		1

11.925 BULB, Dome

60-62	CORVAIR	9414045	**BULB** (8.991)	1

11.927 REFLECTOR, Dome Lamp

62-69	CORVAIR (exc. MONZA)	4868649		1
60-64	CORVAIR,			
65-69	MONZA (exc. CONV.)	4866918		1

11.928 LENS, Dome Lamp

60-69	ALL	6279669		1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

11.950 SWITCH ASSY., Door Jam—Dome Lamp

60-62	CORVAIR STD.	4826444	front door	2
60-62	CORVAIR DELUXE	6276718		2
63-69	ALL	4891633	front and rear door, right	
67	CORVAIR	4889278	front and rear door	2
68-69	CORVAIR	391307	front	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 12.000

METAL TRIM

AND CLIPS—PANELS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

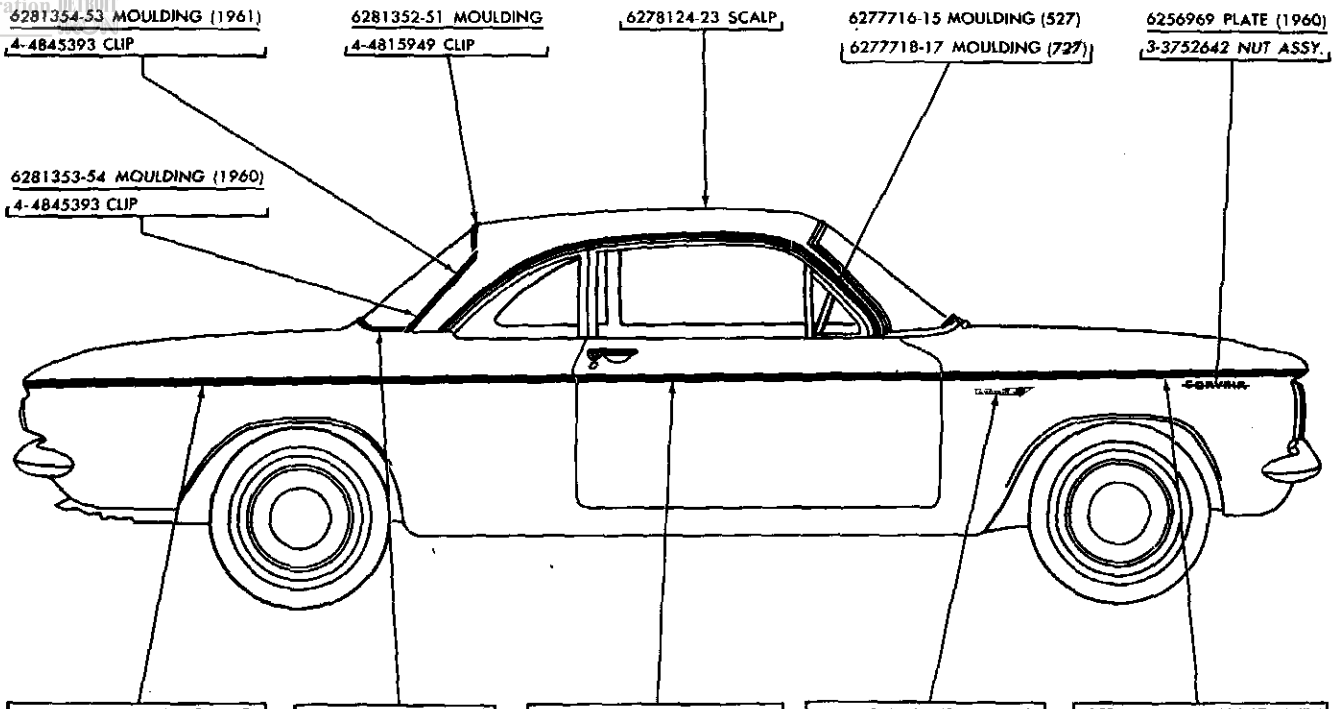

1960-61 CORVAIR 2 DR. SEDAN (MODEL 527-727)

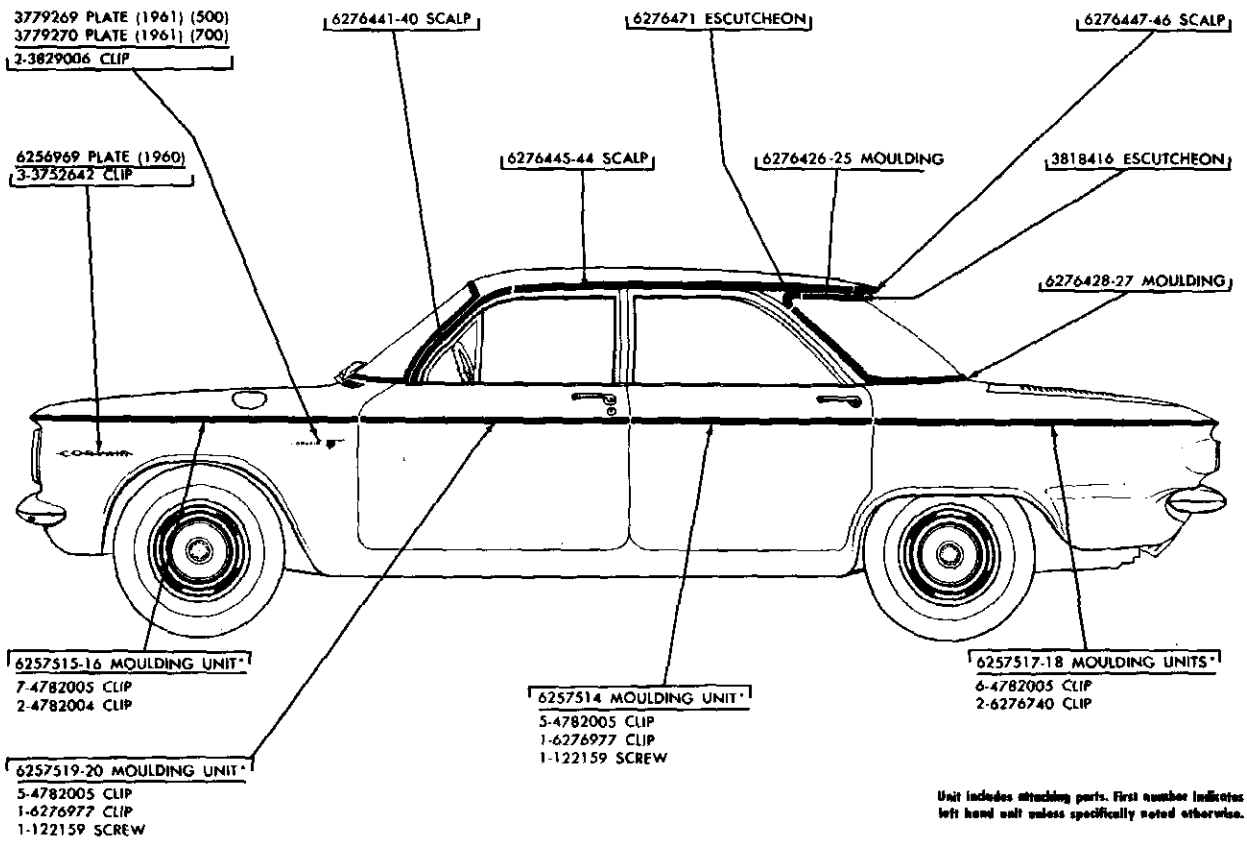

1960-61 CORVAIR 4 DR. DEDAN (MODEL 569-769)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

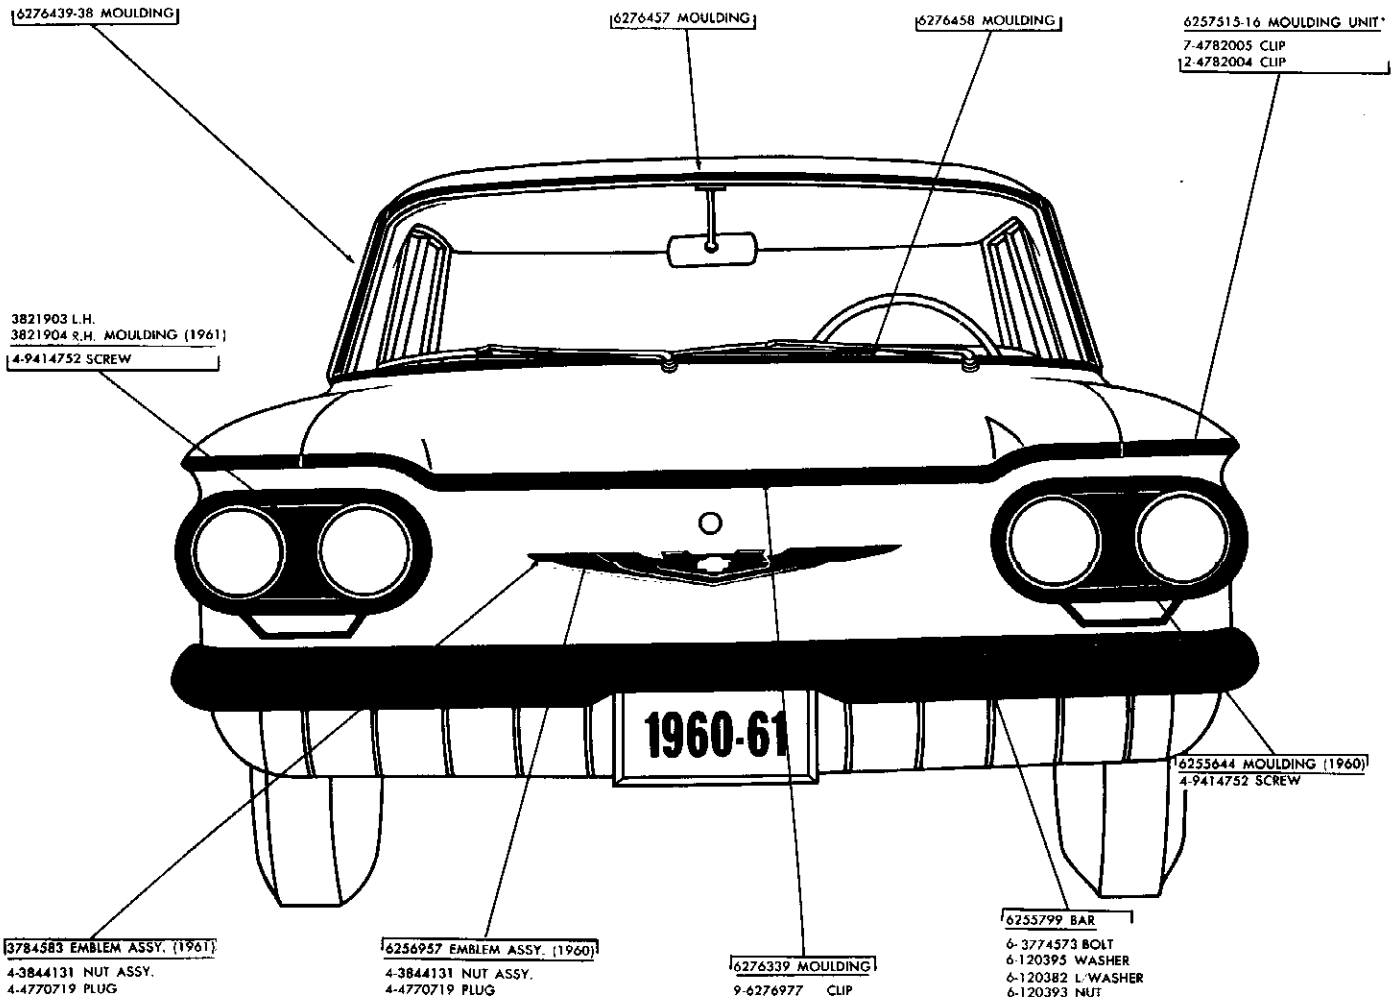

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1960-61 CORVAIR—FRONT

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1960-61 CORVAIR—REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

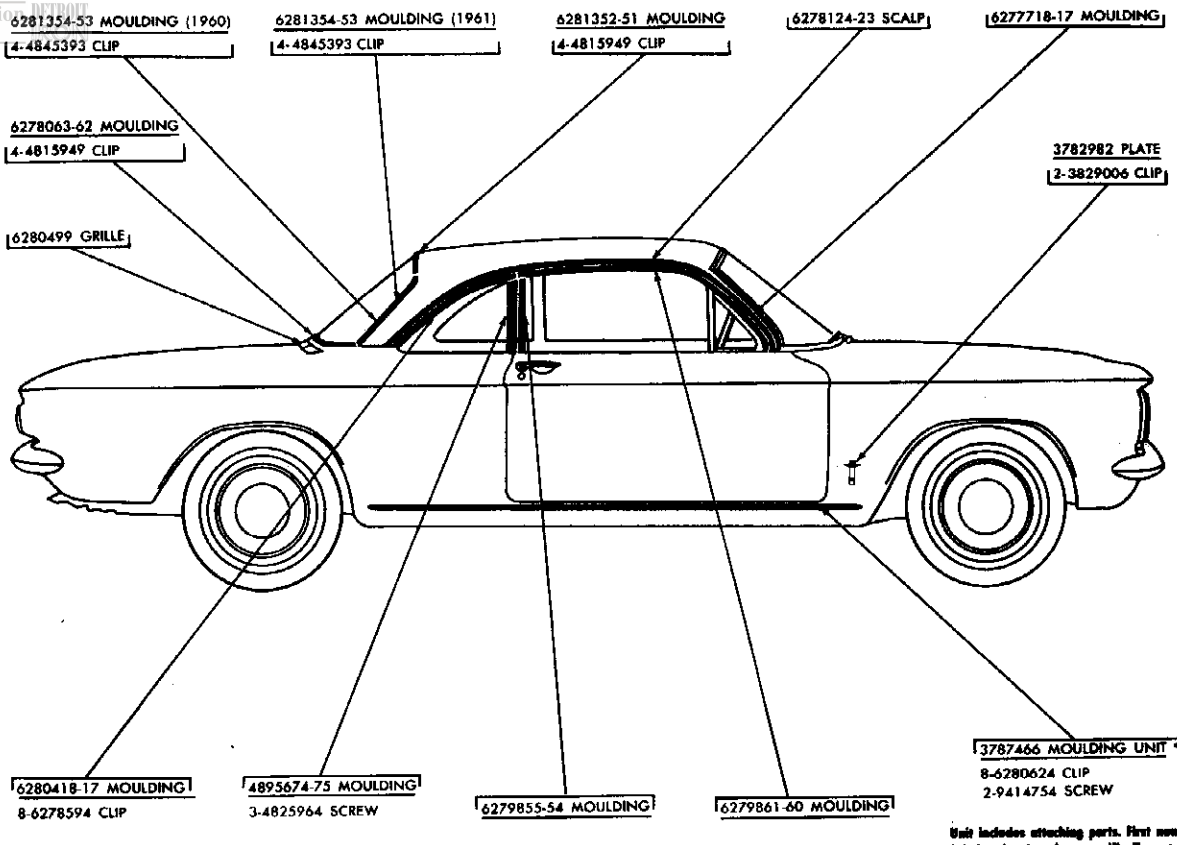

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1960-61 CORVAIR 2 DR. MONZA (MODEL 927)

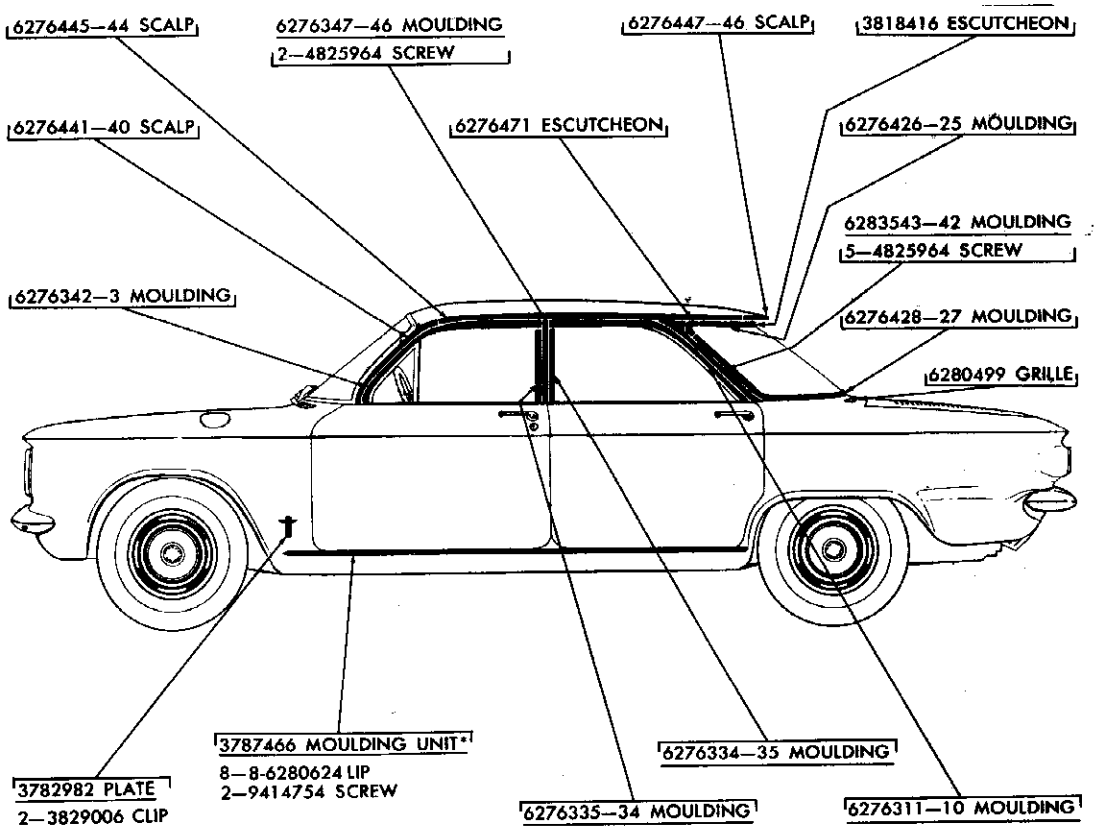

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1961 CORVAIR—4 DR. MONZA (MODEL 969)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

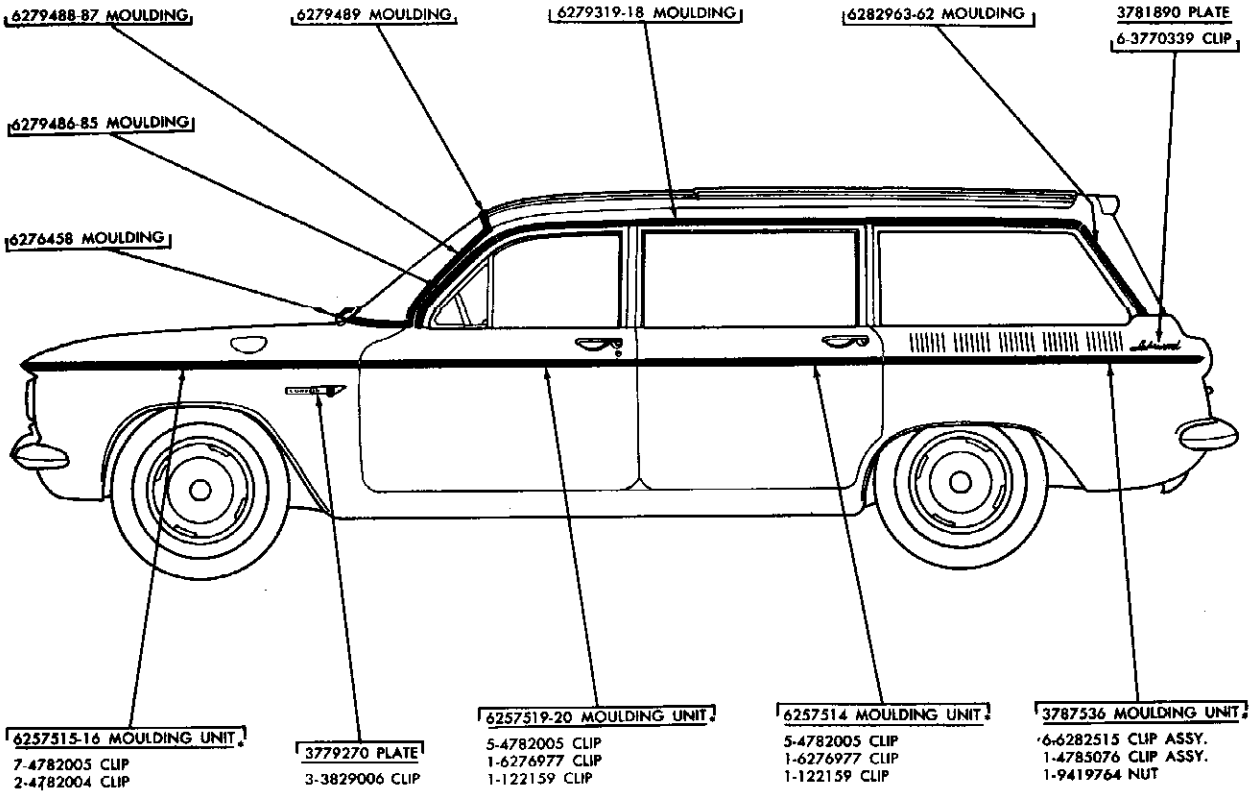

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1961 CORVAIR STATION WAGON (MODEL 735)

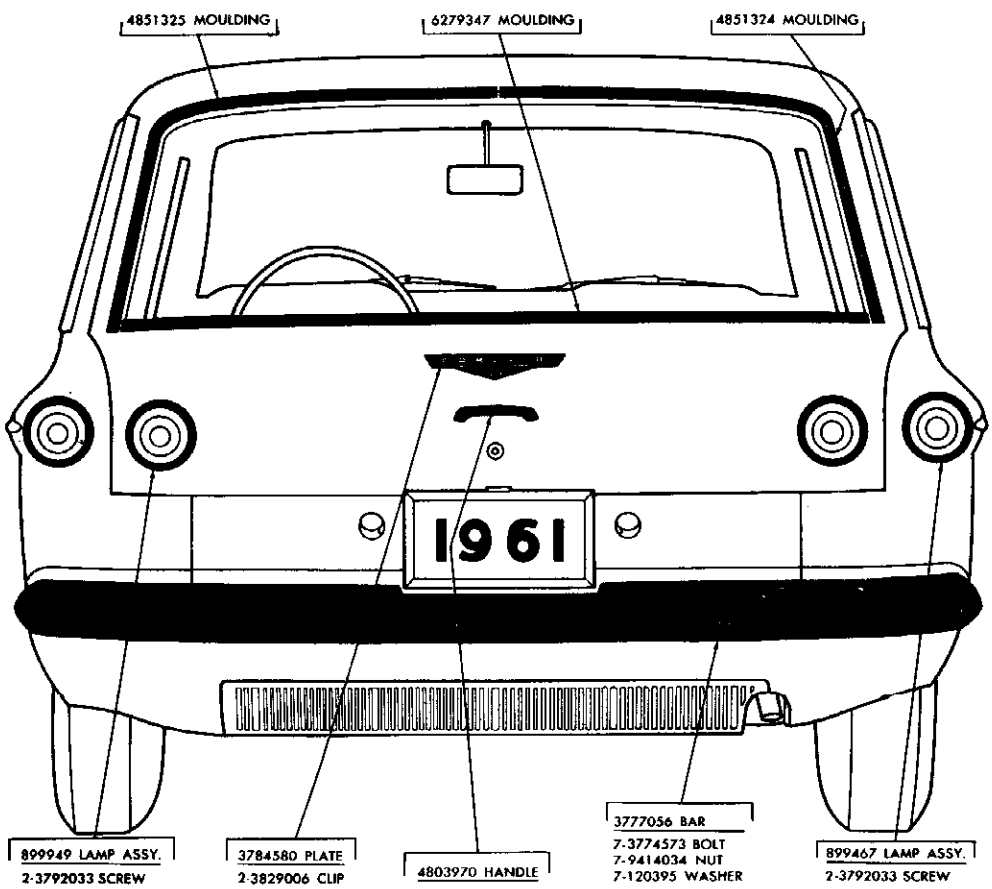

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1961 CORVAIR STATION WAGON REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

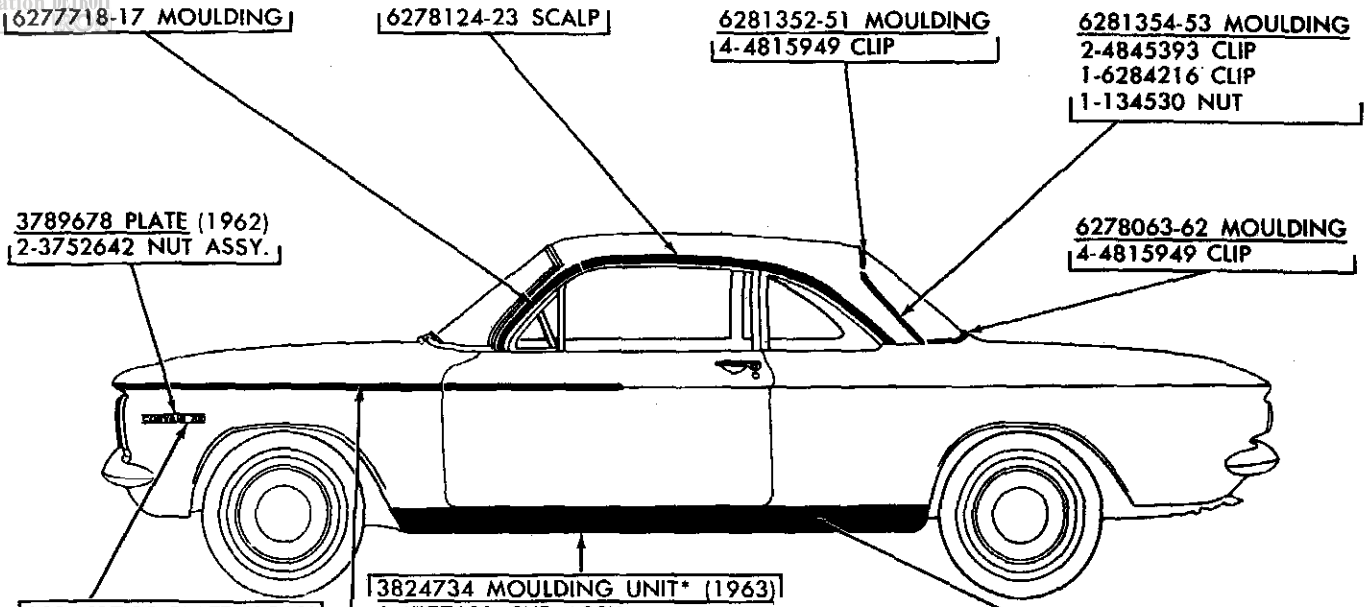

▲Removed from service not available

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1962-63 CORVAIR 2 DR. SEDAN (MODEL 727)

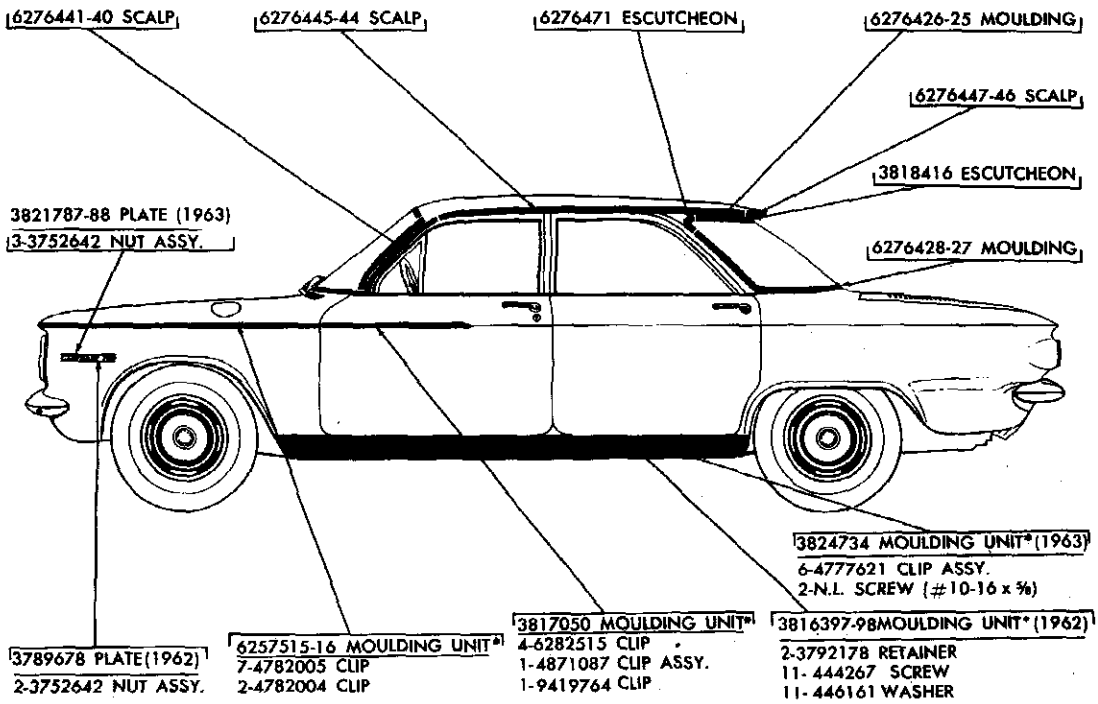

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1962-63 CORVAIR 4 DR. SEDAN (MODEL 769)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

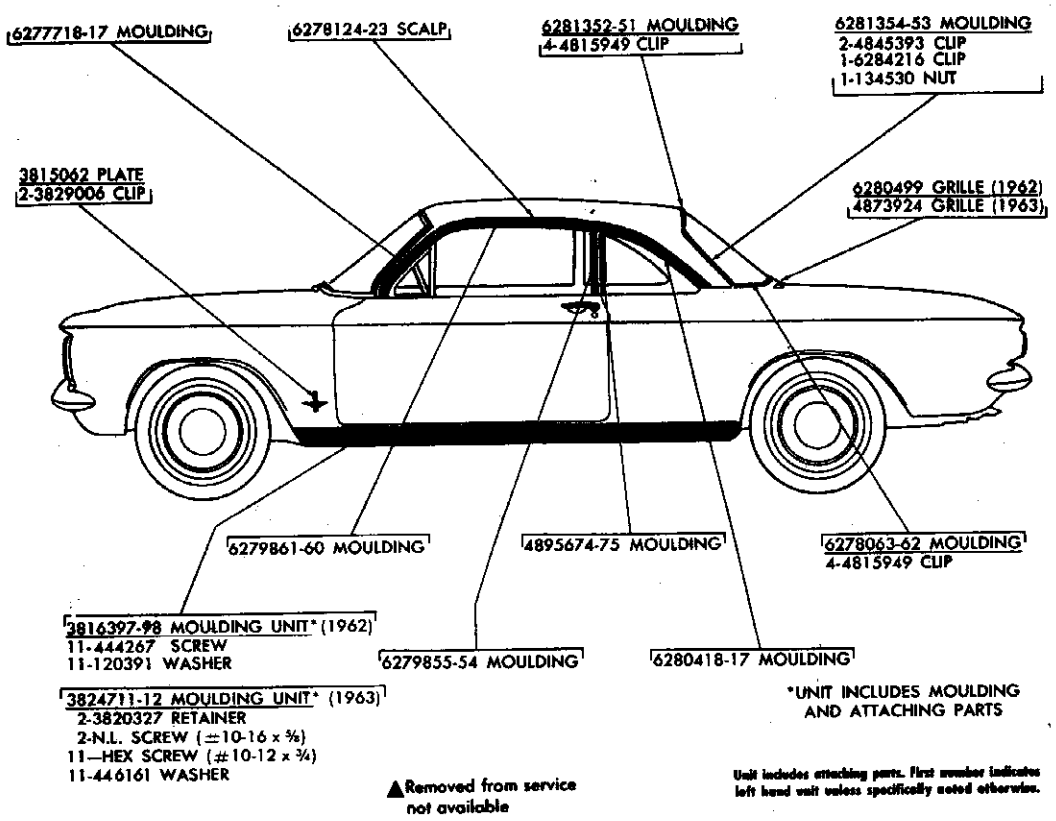

1962-63 CORVAIR 2 DR. MONZA (MODEL 927)

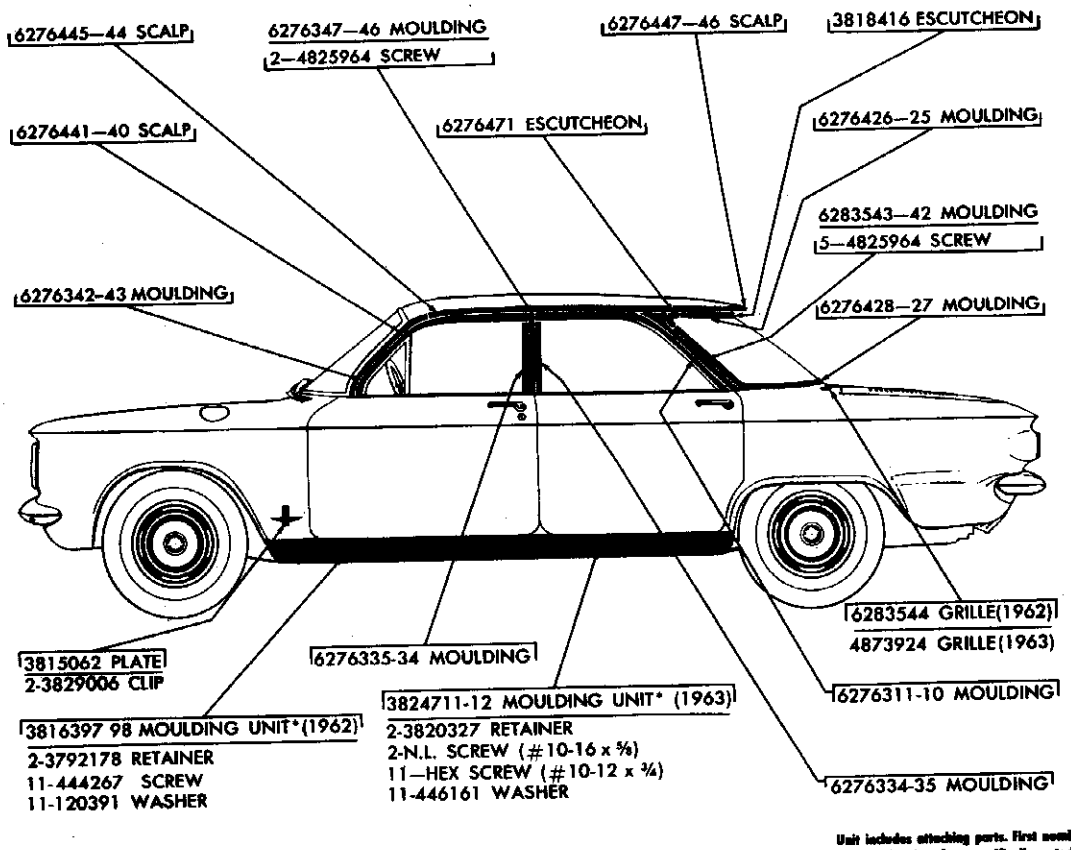

1962-63 CORVAIR 4 DR. MONZA (MODEL 969)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

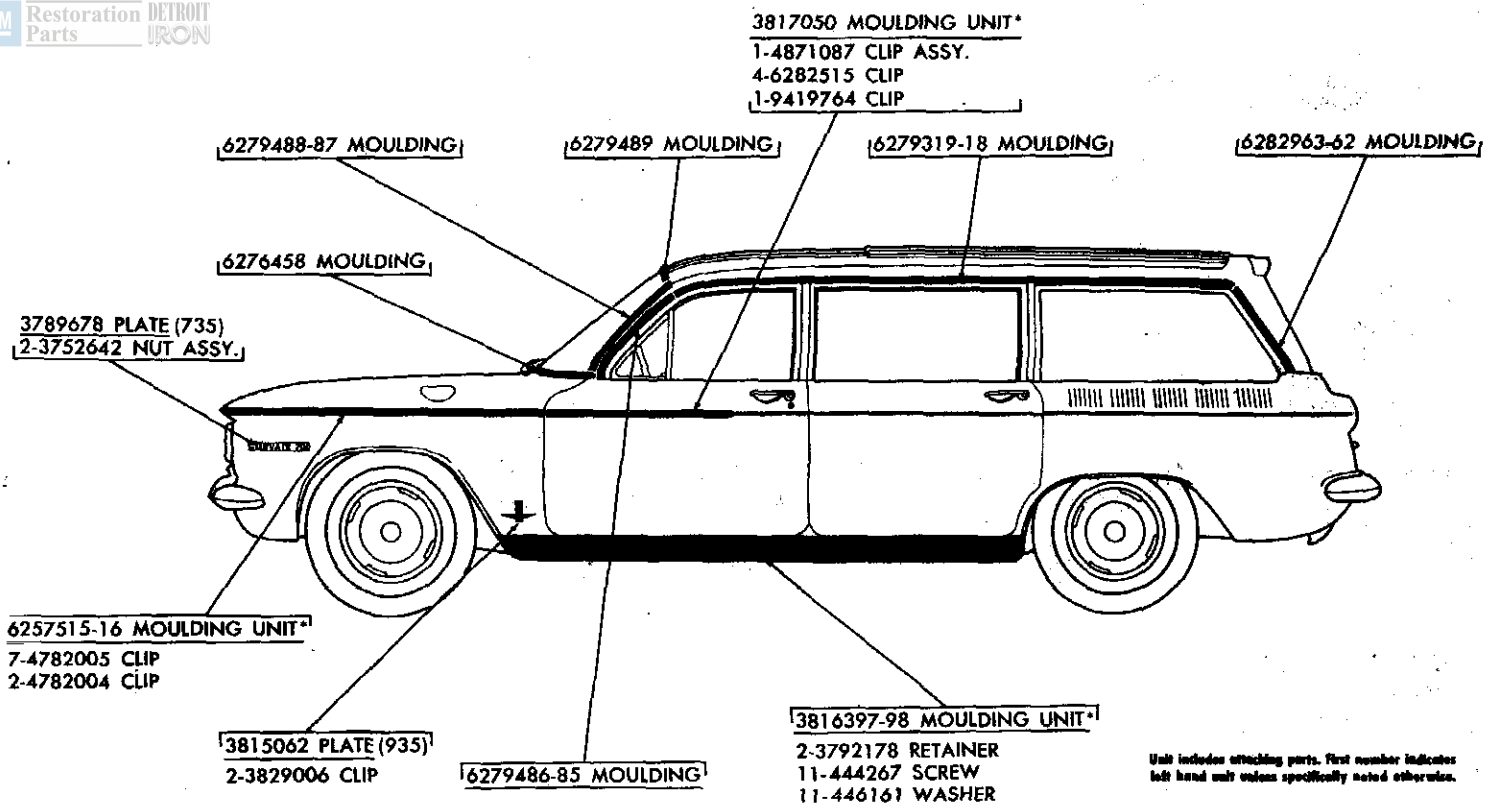

1962 CORVAIR STATION WAGON (MODEL 735-935)

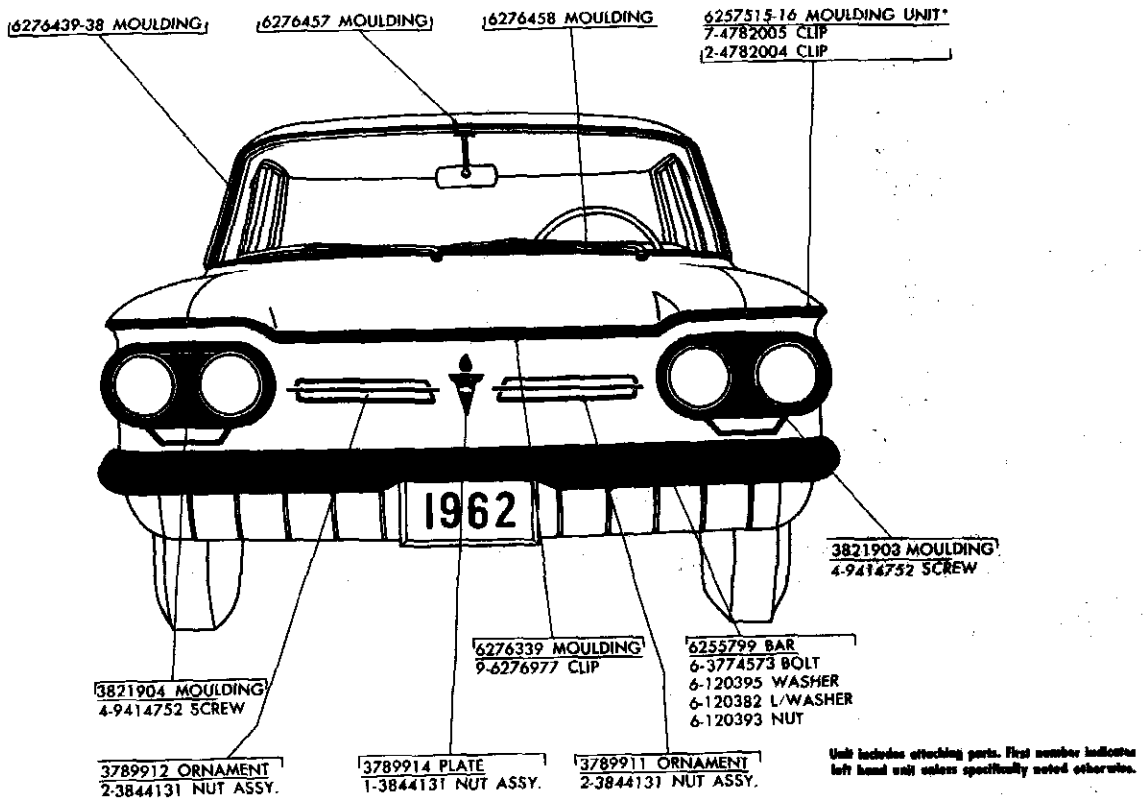

1962 CORVAIR—FRONT

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

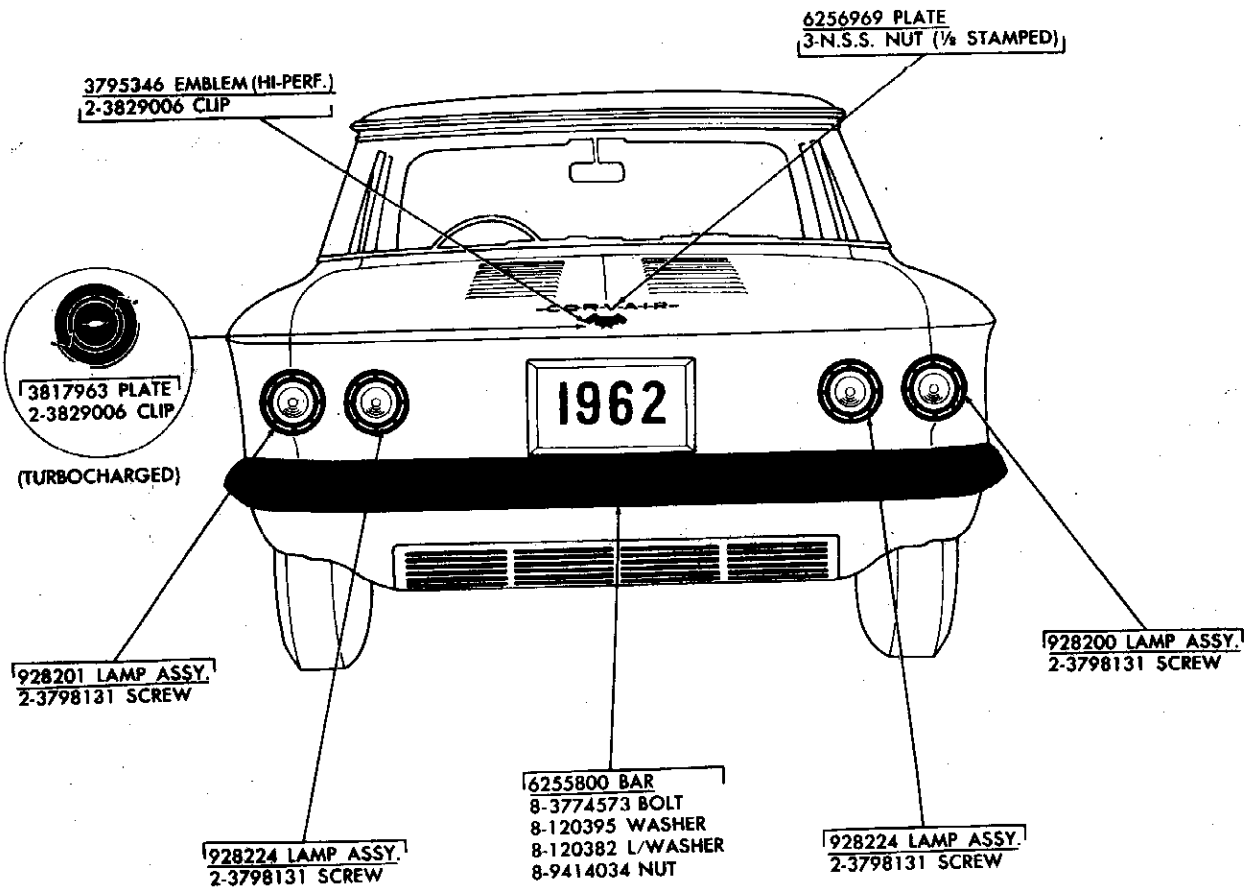

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1962 CORVAIR—REAR

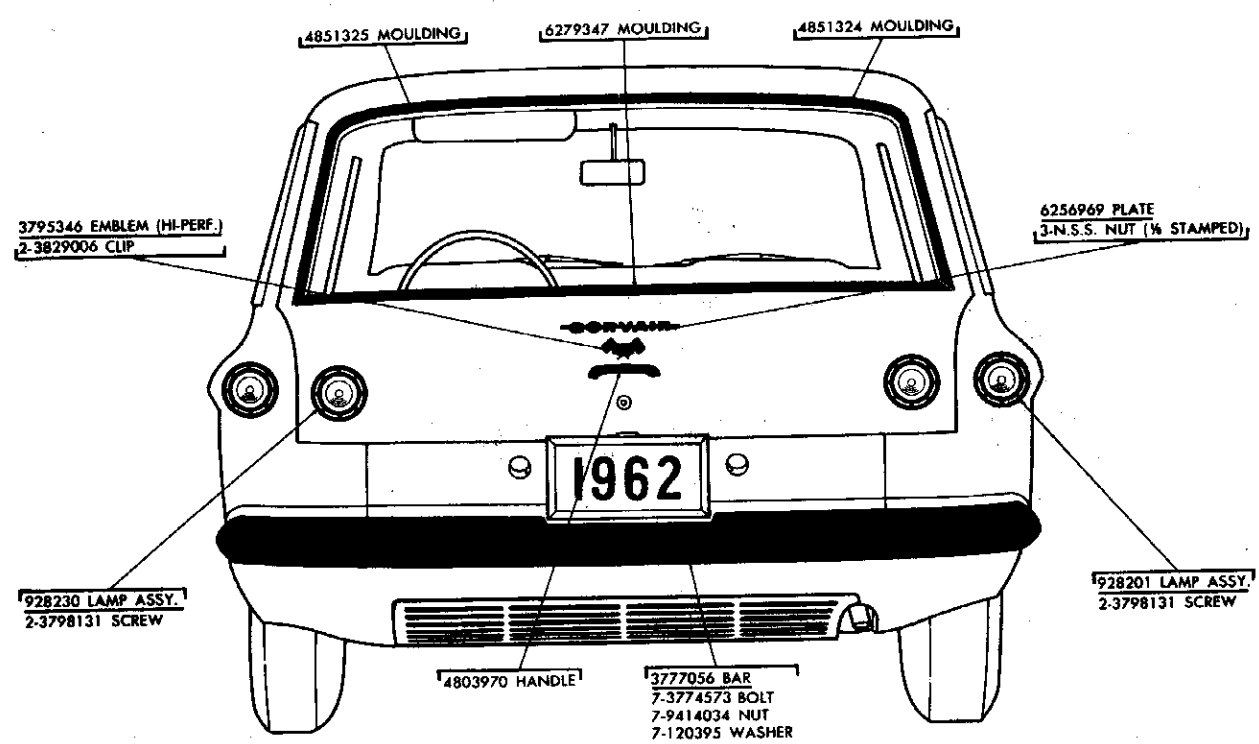

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1962 CORVAIR STATION WAGON—REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

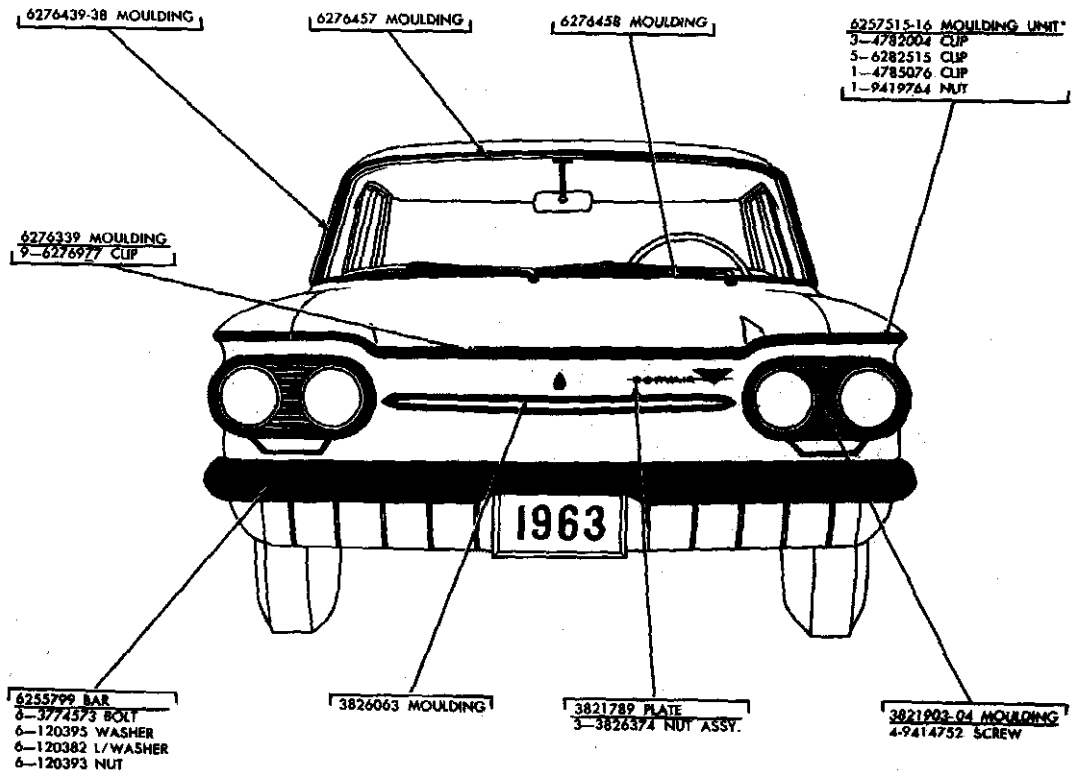

*Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1963 CORVAIR—FRONT

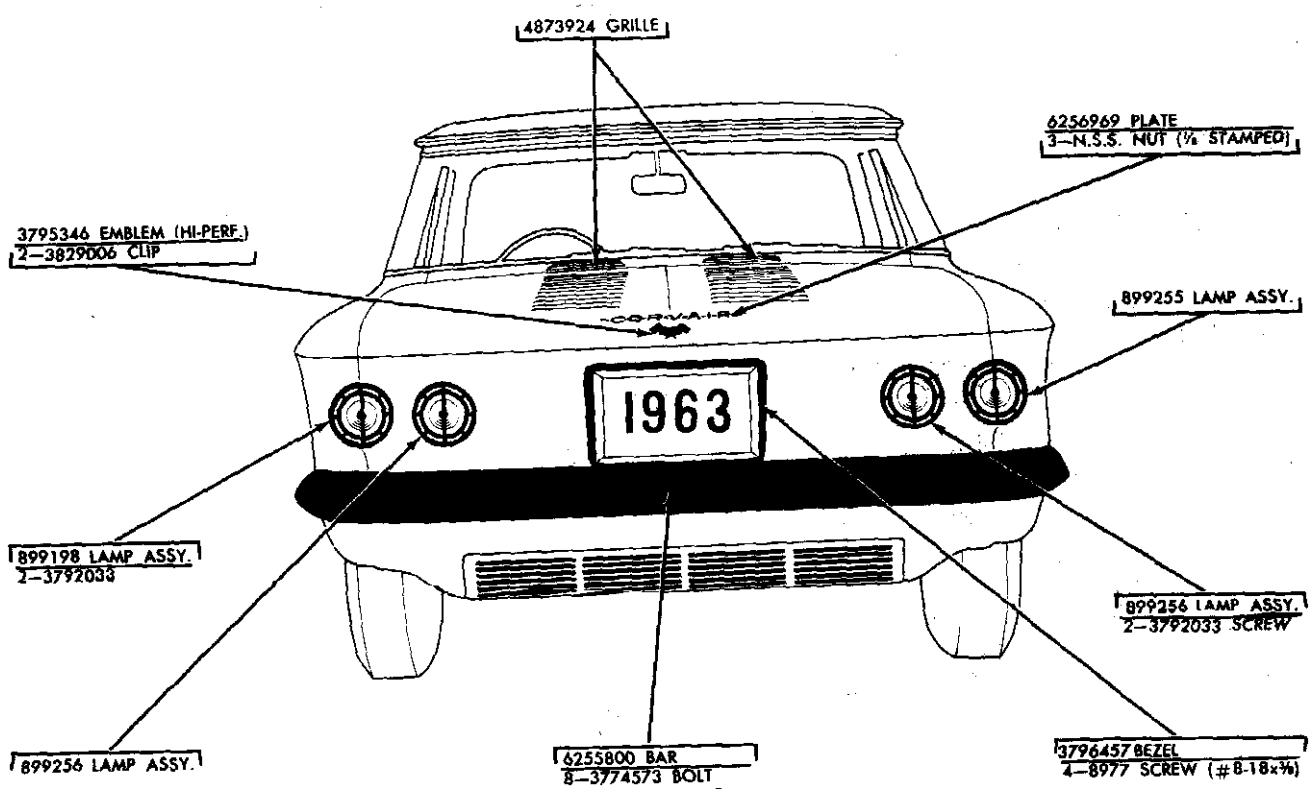

*Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1963 CORVAIR—REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

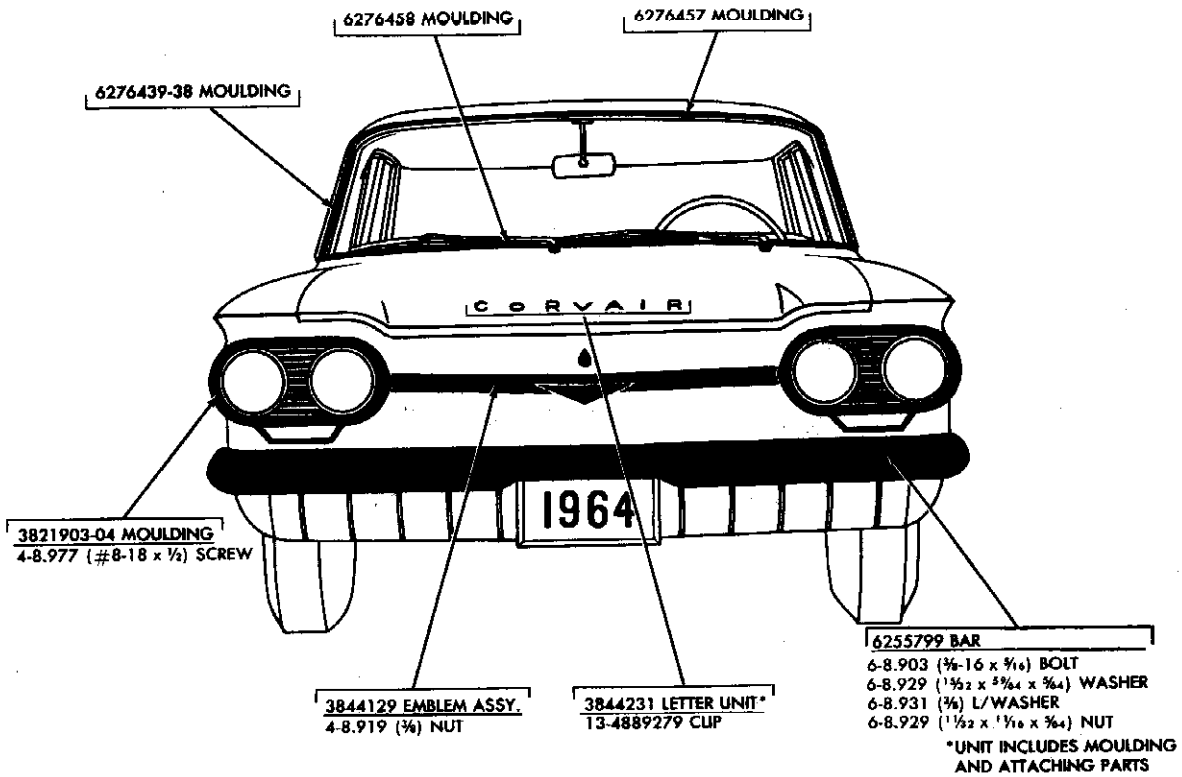

1964 CORVAIR—FRONT

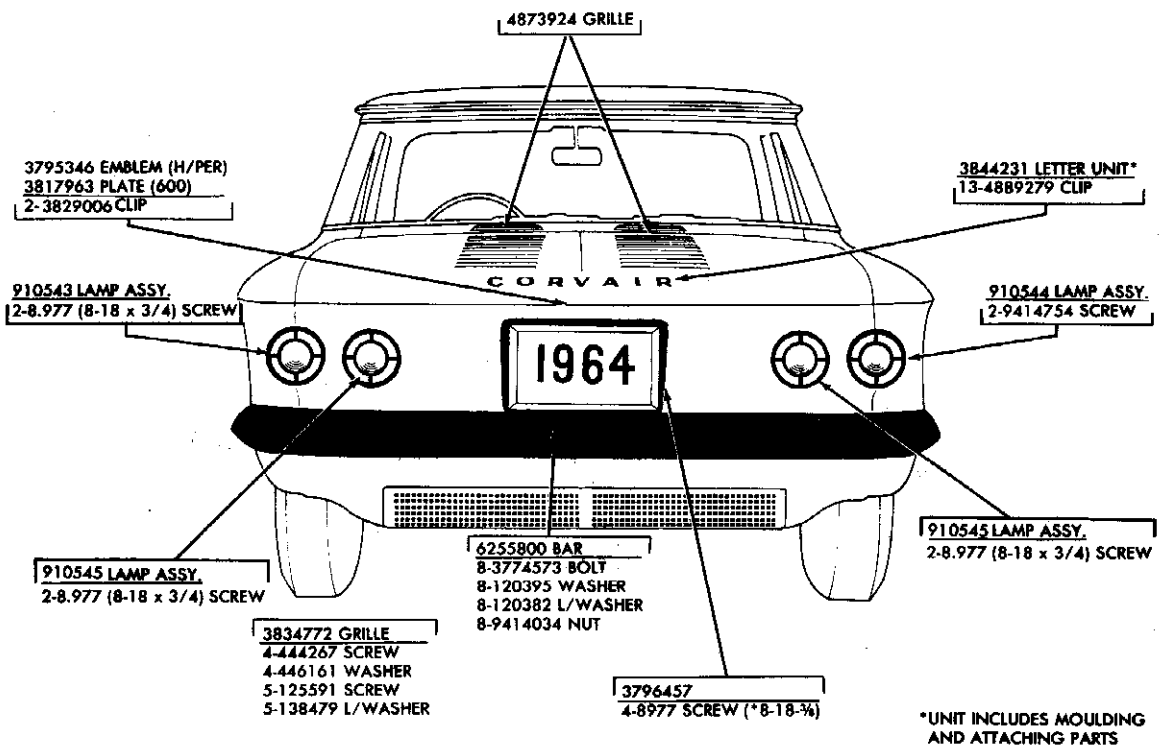

1964 CORVAIR—REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

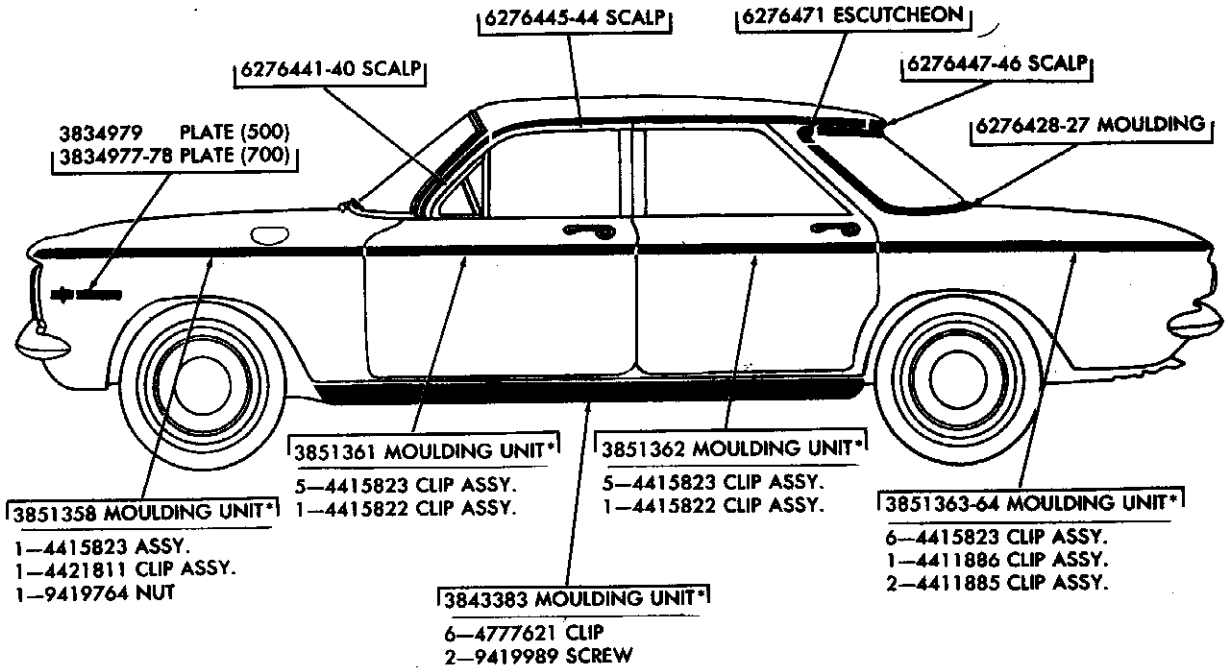

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1964 CORVAIR STD. 4 DOOR (MODEL 769)

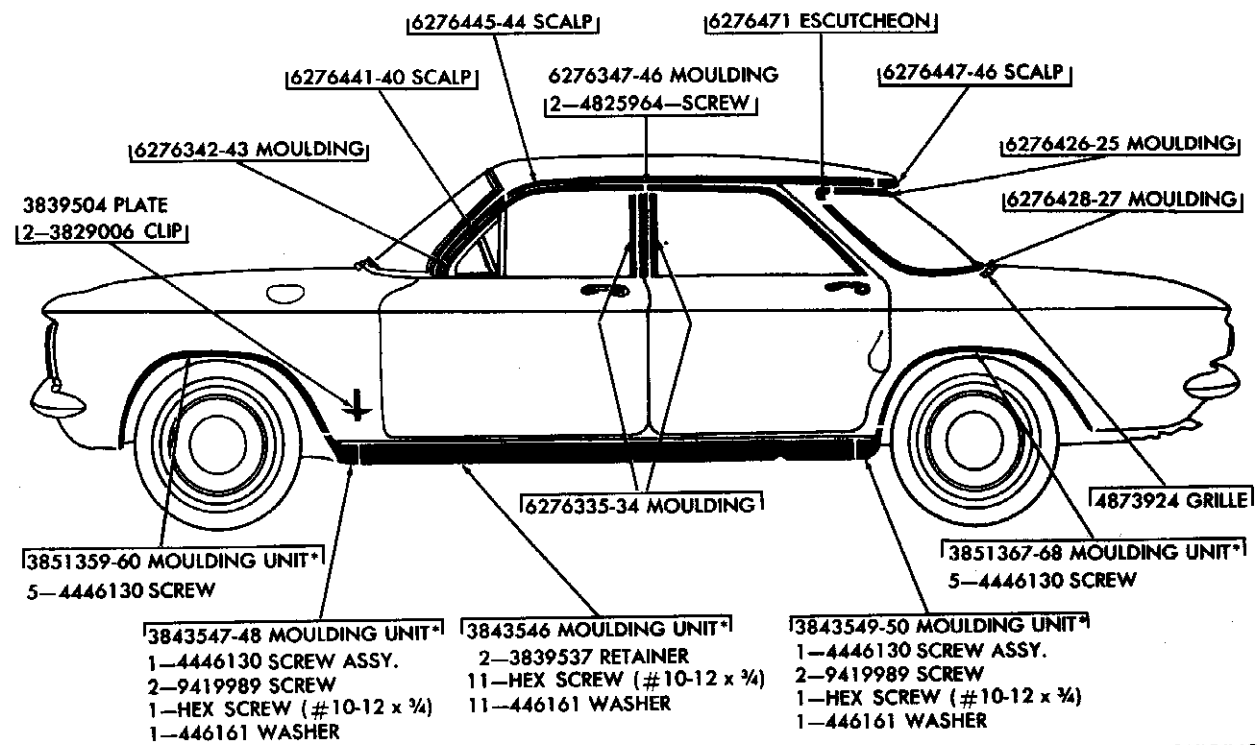

*UNIT INCLUDES MOULDING AND ATTACHING PARTS

1964 CORVAIR MONZA 4 DOOR (MODEL 969)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

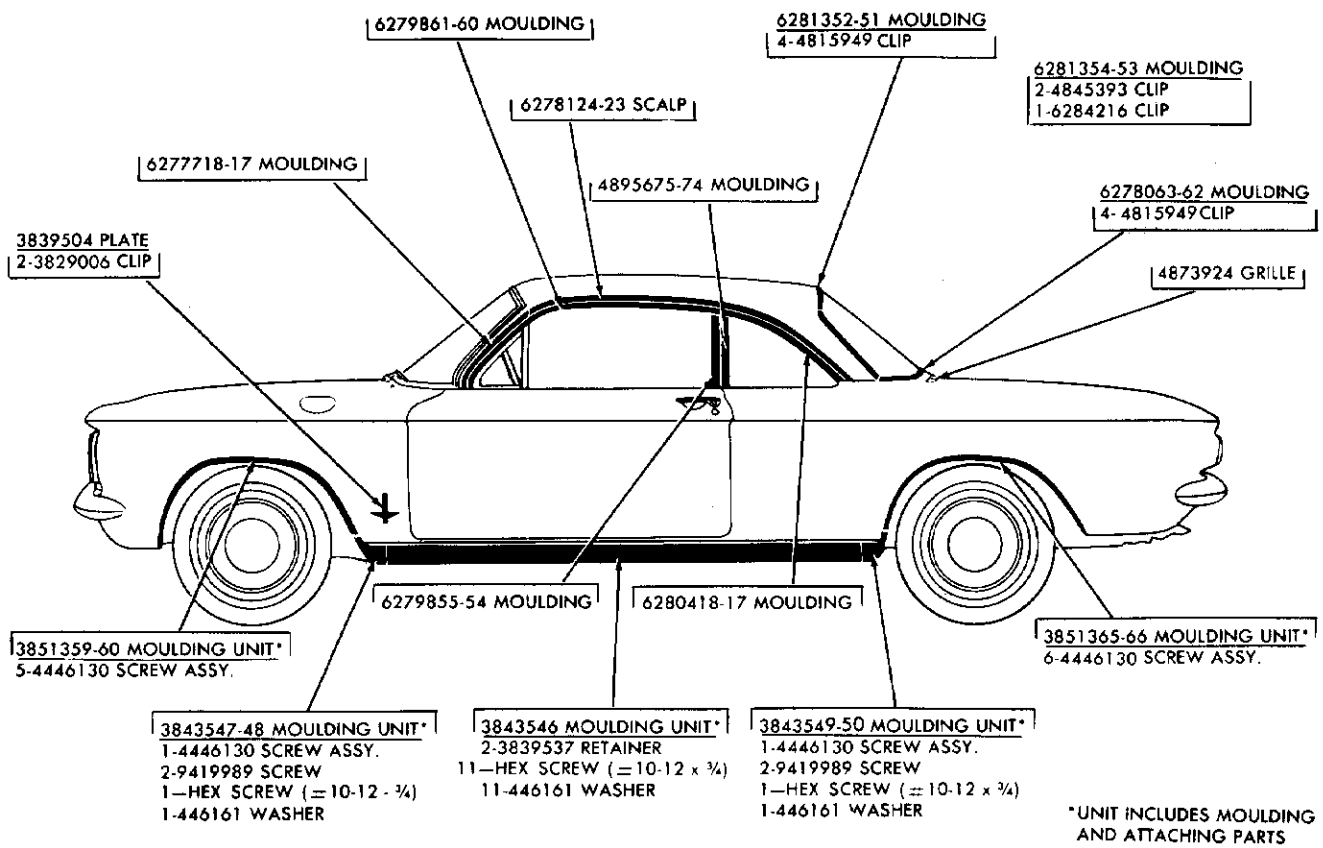

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

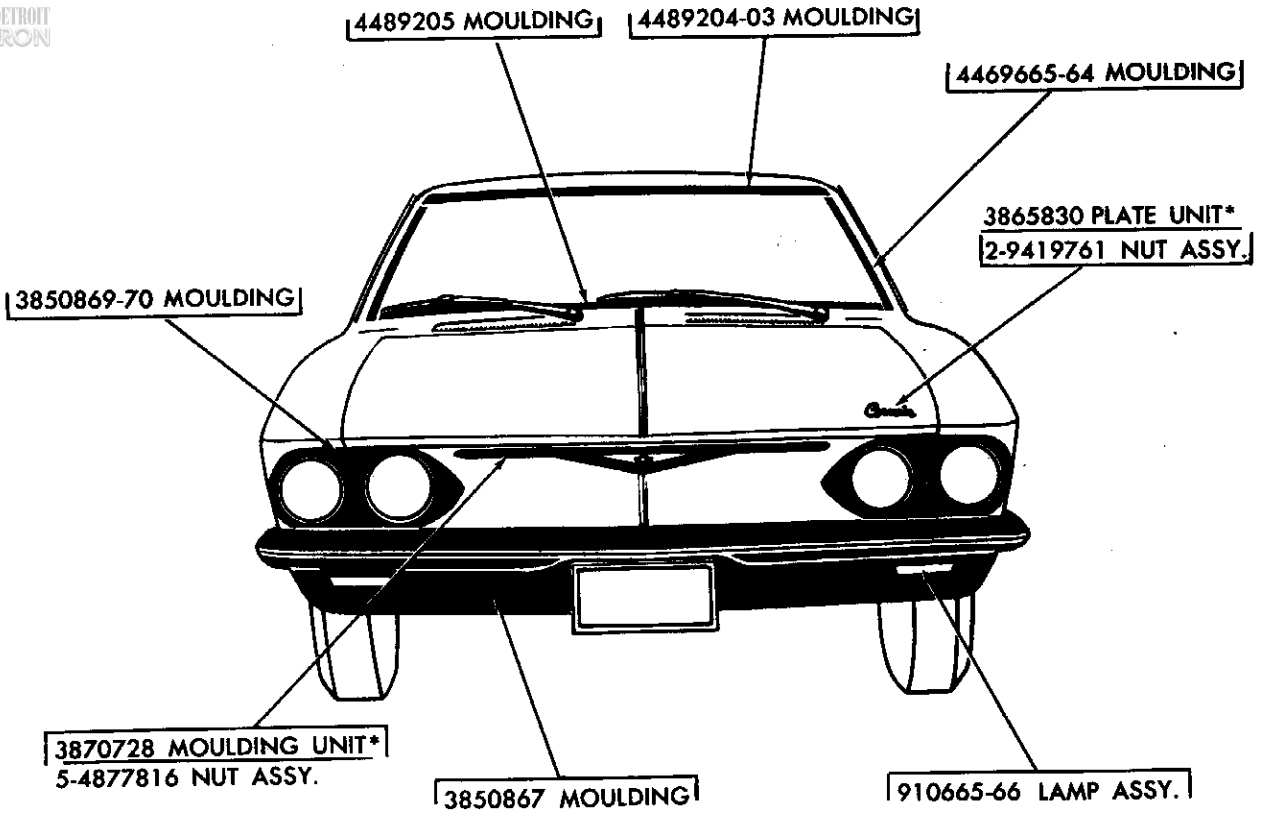

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1965 CORVAIR—FRONT

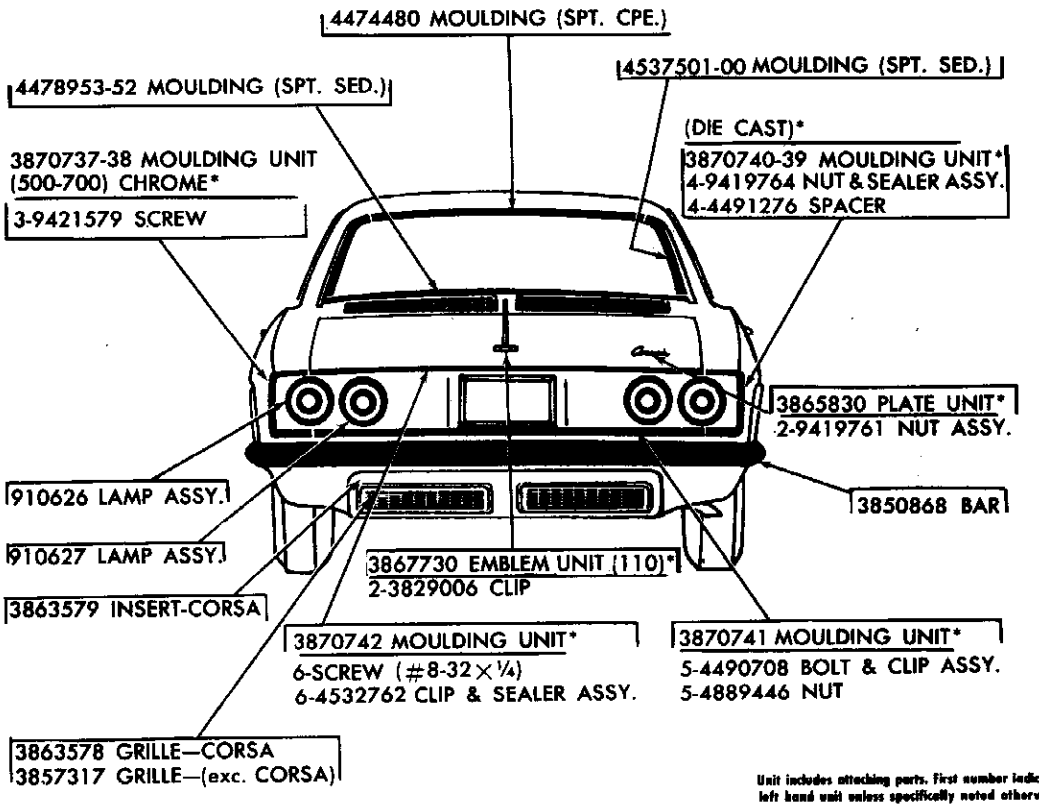

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1965 CORVAIR—REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

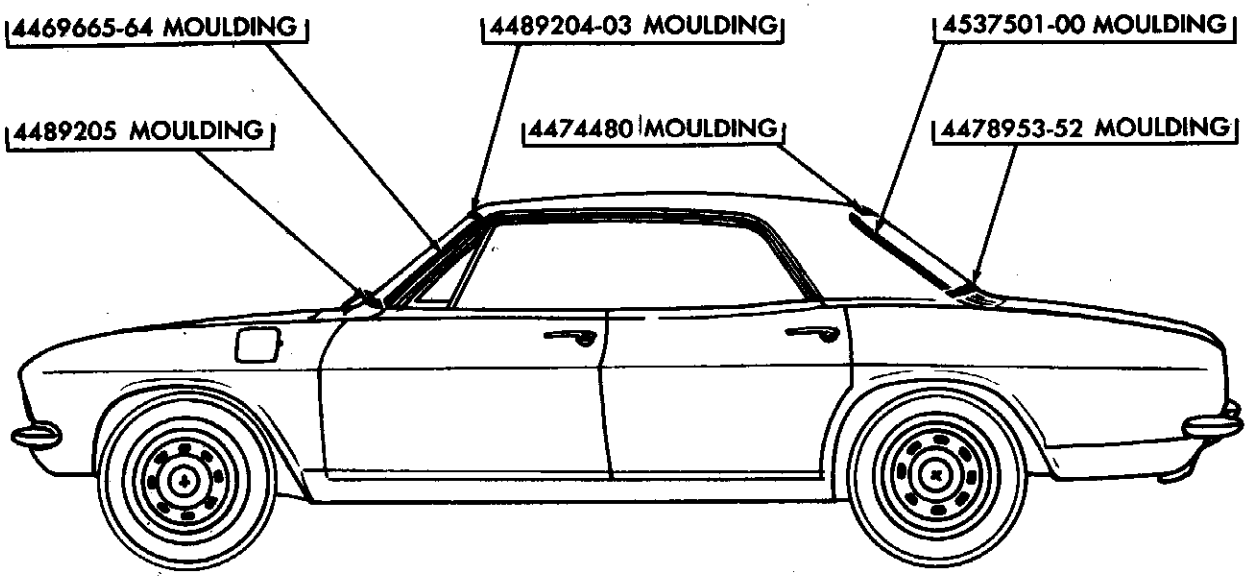

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1965 CORVAIR STD. SPORT SEDAN (MODEL 10139)

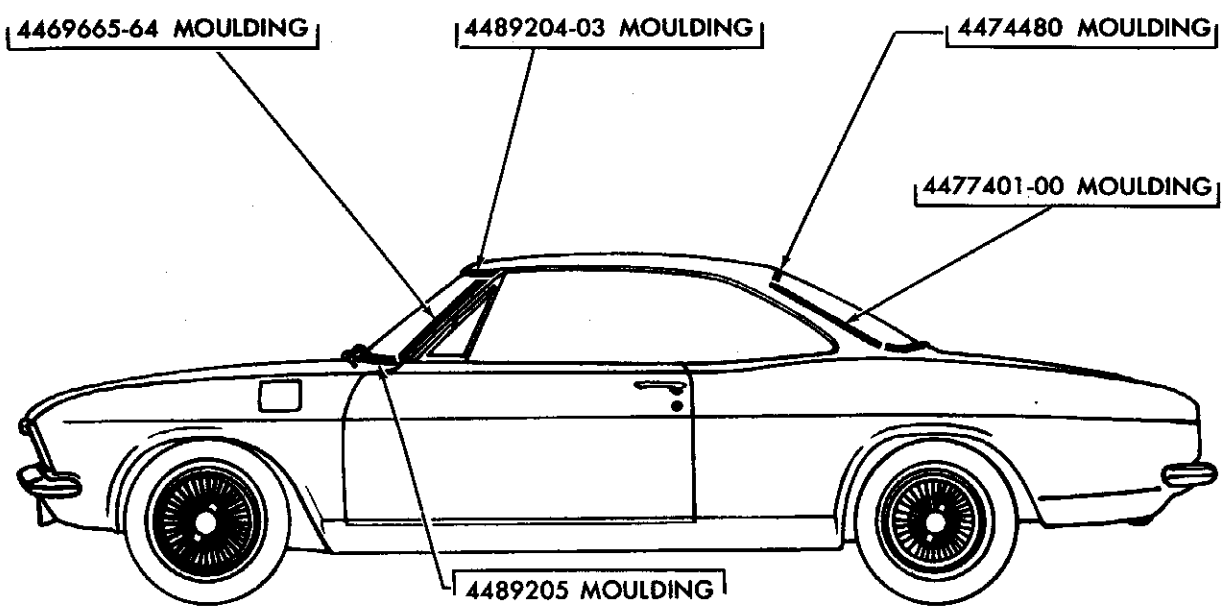

Unit includes attaching parts. First number indicates left hand unit unless specifically noted otherwise.

1965 CORVAIR STD. SPORT COUPE (MODEL 10137)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

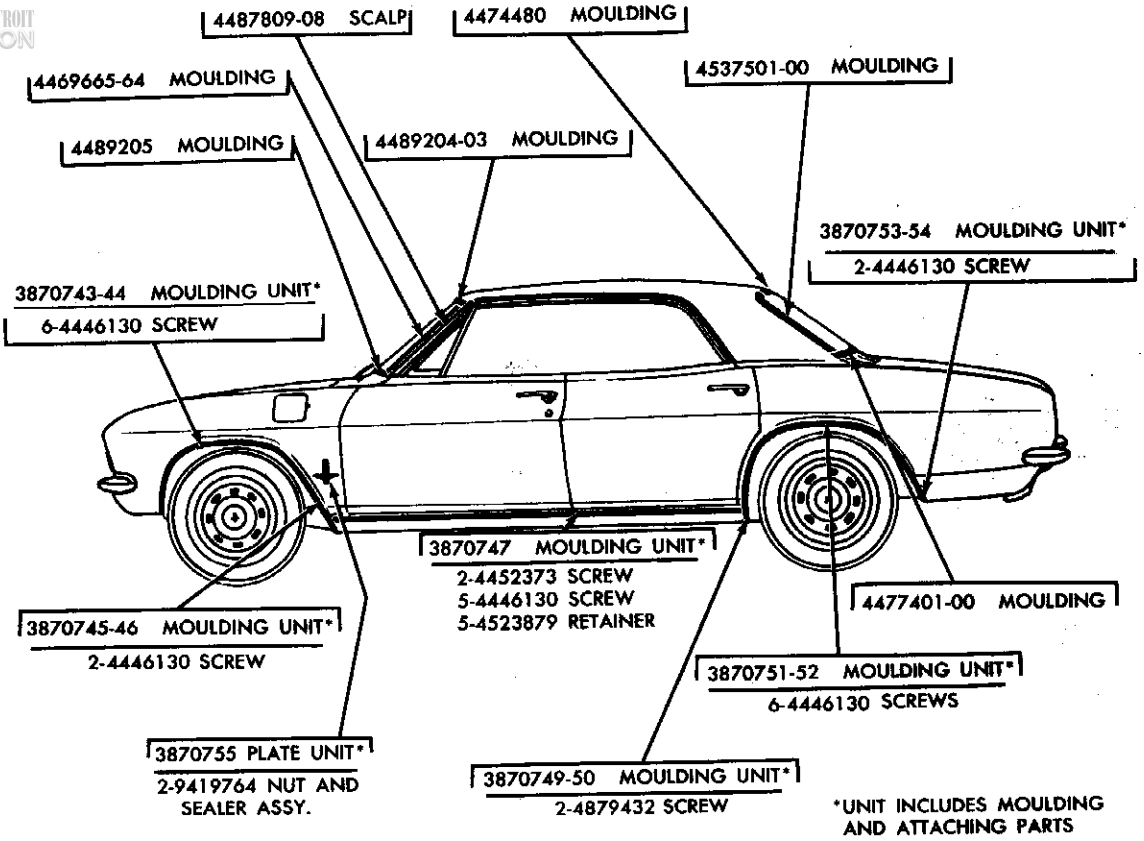

1965 CORVAIR MONZA SPORT SEDAN (MODEL 10539)

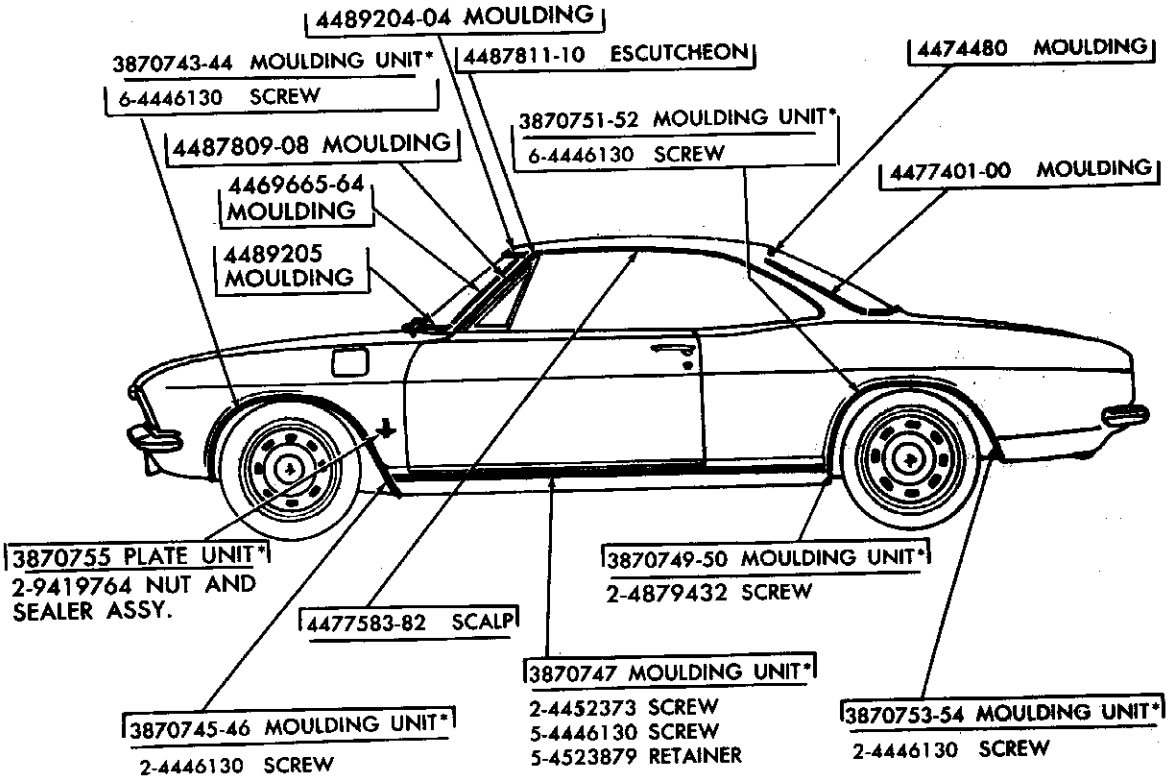

1965 CORVAIR MONZA SPORT COUPE (MODEL 10537)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

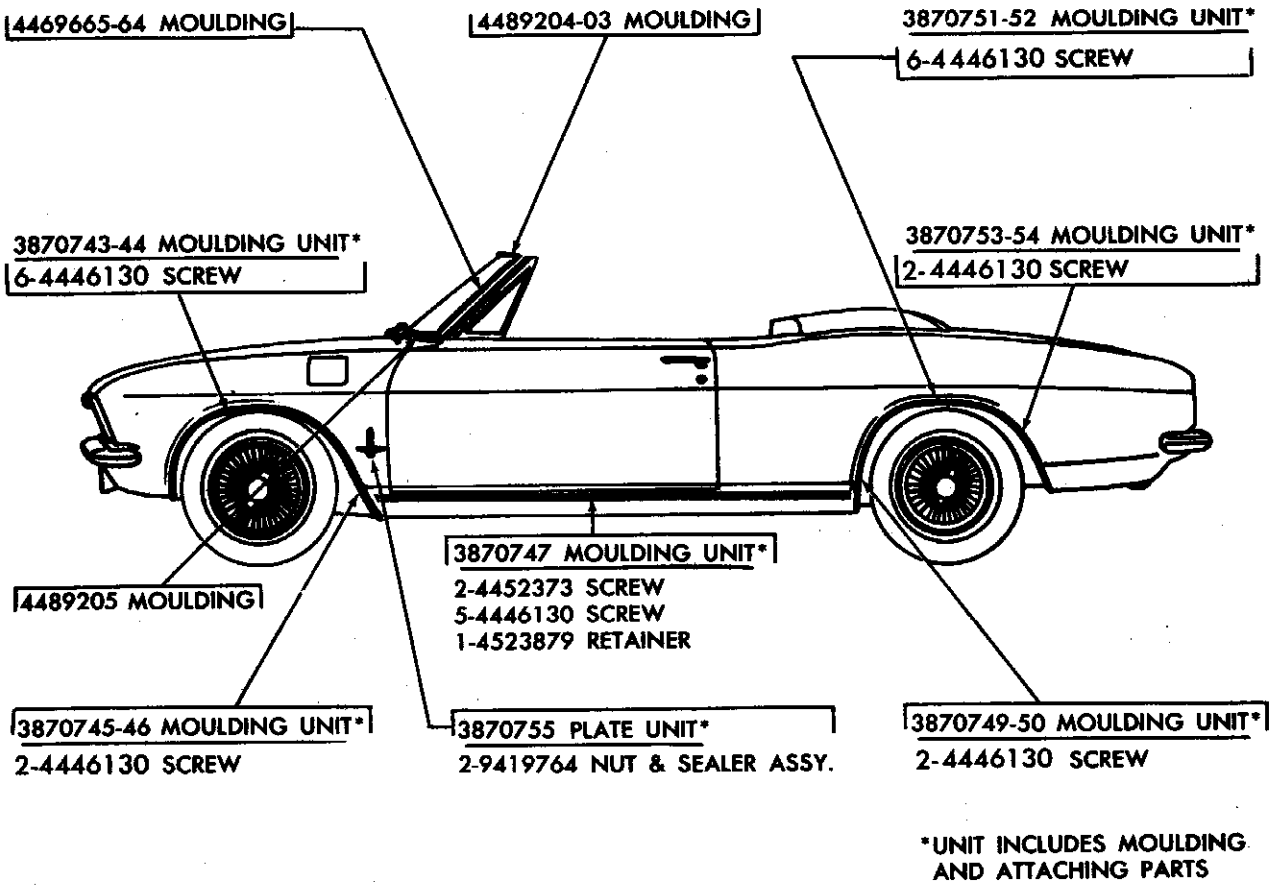

1965 CORVAIR MONZA CONVERTIBLE (MODEL 10567)

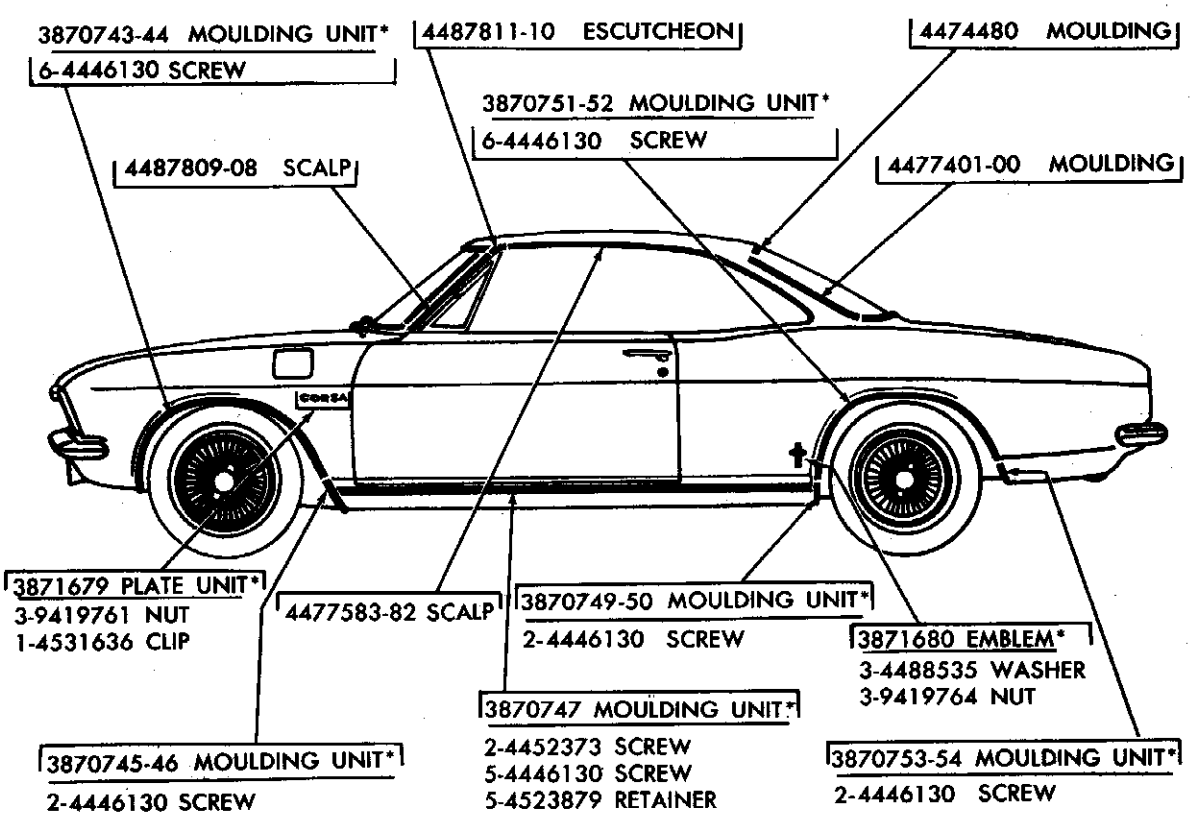

1965 CORVAIR CORSA SPORT COUPE (10737)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

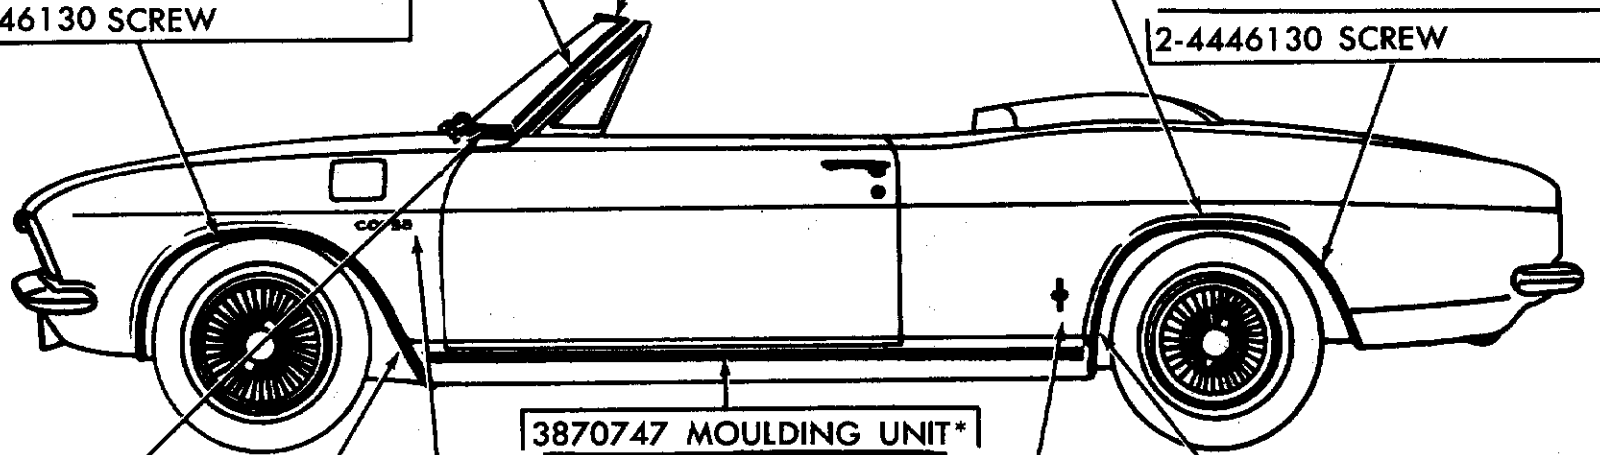

4469665-64 MOULDING

4489204-03 MOULDING

3870751-52 MOULDING UNIT*
6-4446130 SCREW

3870743-44 MOULDING UNIT*
6-4446130 SCREW

3870753-54 MOULDING UNIT*
2-4446130 SCREW

4489205 MOULDING

3870747 MOULDING UNIT*
2-4452373 SCREW
5-4446130 SCREW
1-4523879 RETAINER

3870745-46 MOULDING UNIT*
2-4446130 SCREW

3870749-50 MOULDING UNIT*
2-4446130 SCREW

3871679 PLATE UNIT*
3-9419761 NUT
1-4531636 CLIP

3871680 EMBLEM*
3-4488535 WASHER
3-9419764 NUT

*UNIT INCLUDES MOULDING AND ATTACHING PARTS

1965 CORVAIR CORSA CONVERTIBLE (10767)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

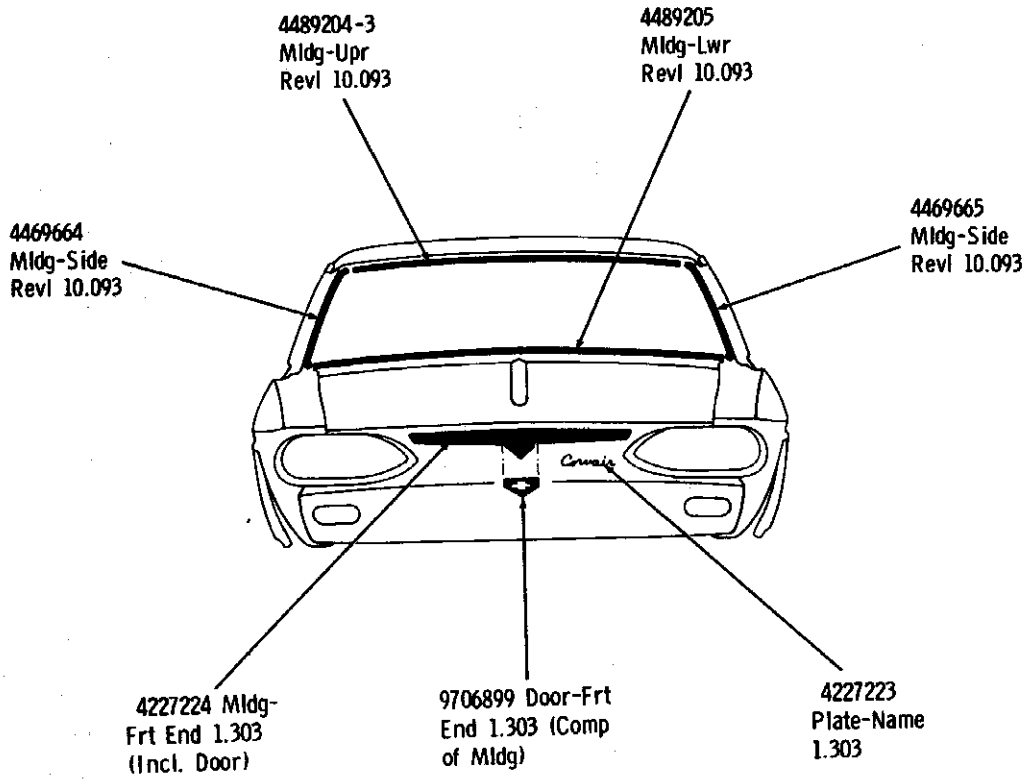

1966-69 CORVAIR—FRONT

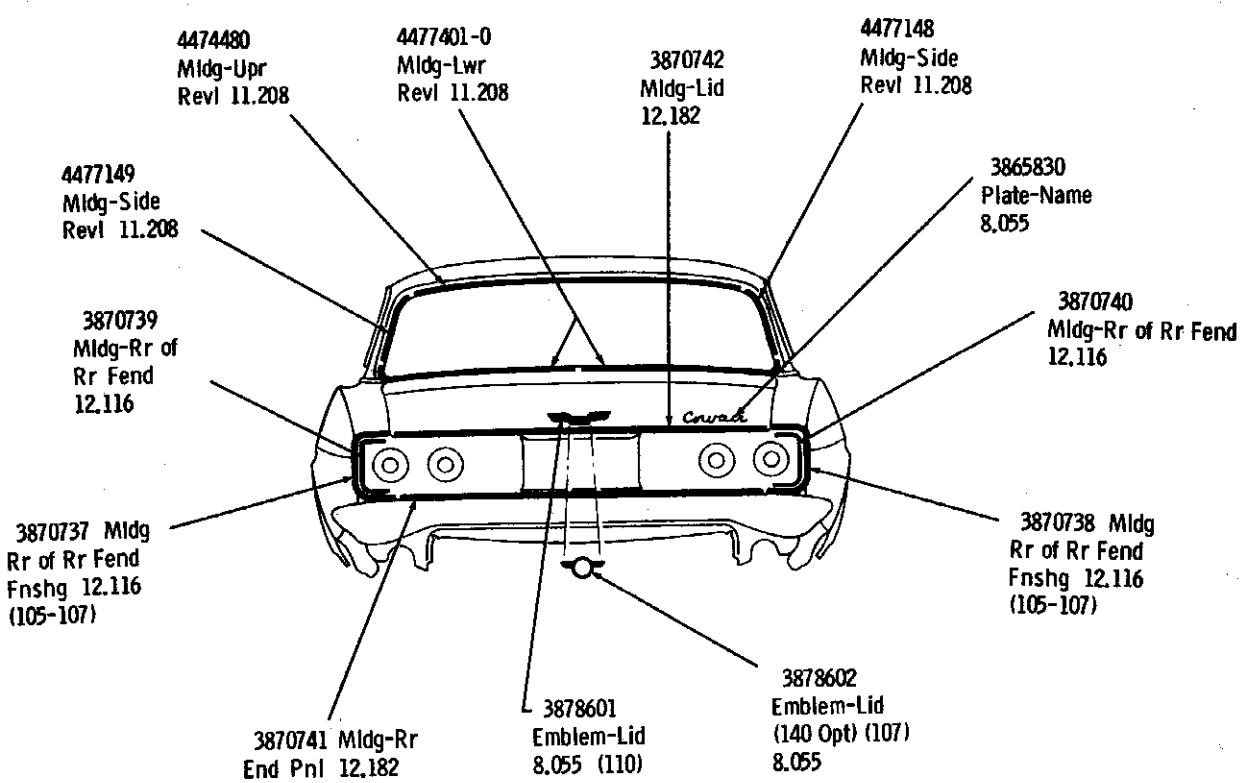

NOTE: First number indicates left hand side.

1966-69 CORVAIR—REAR

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron JS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

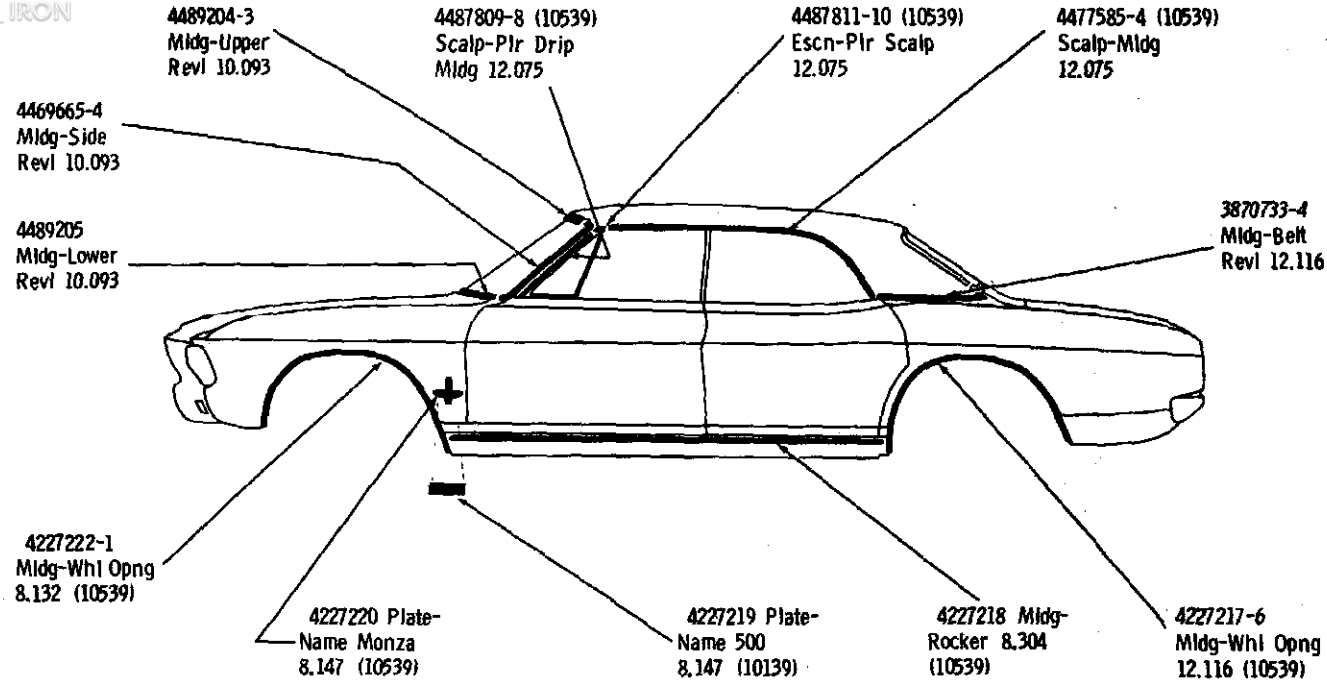

1966-69 CORVAIR FOUR DOOR
(10139–10539)

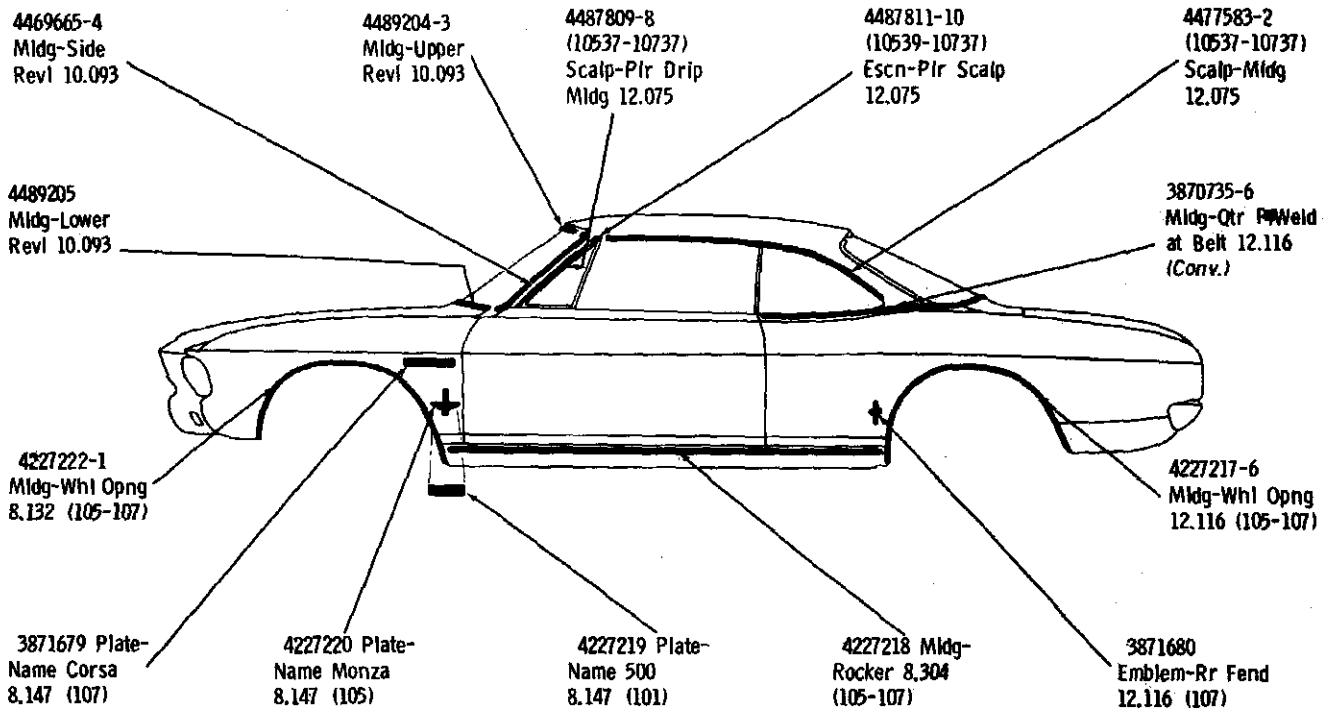

1966-69 CORVAIR TWO DOOR
(10137-10537-10737)

NOTE: First number indicates left hand side.

(10567-10767 BELOW BELT)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

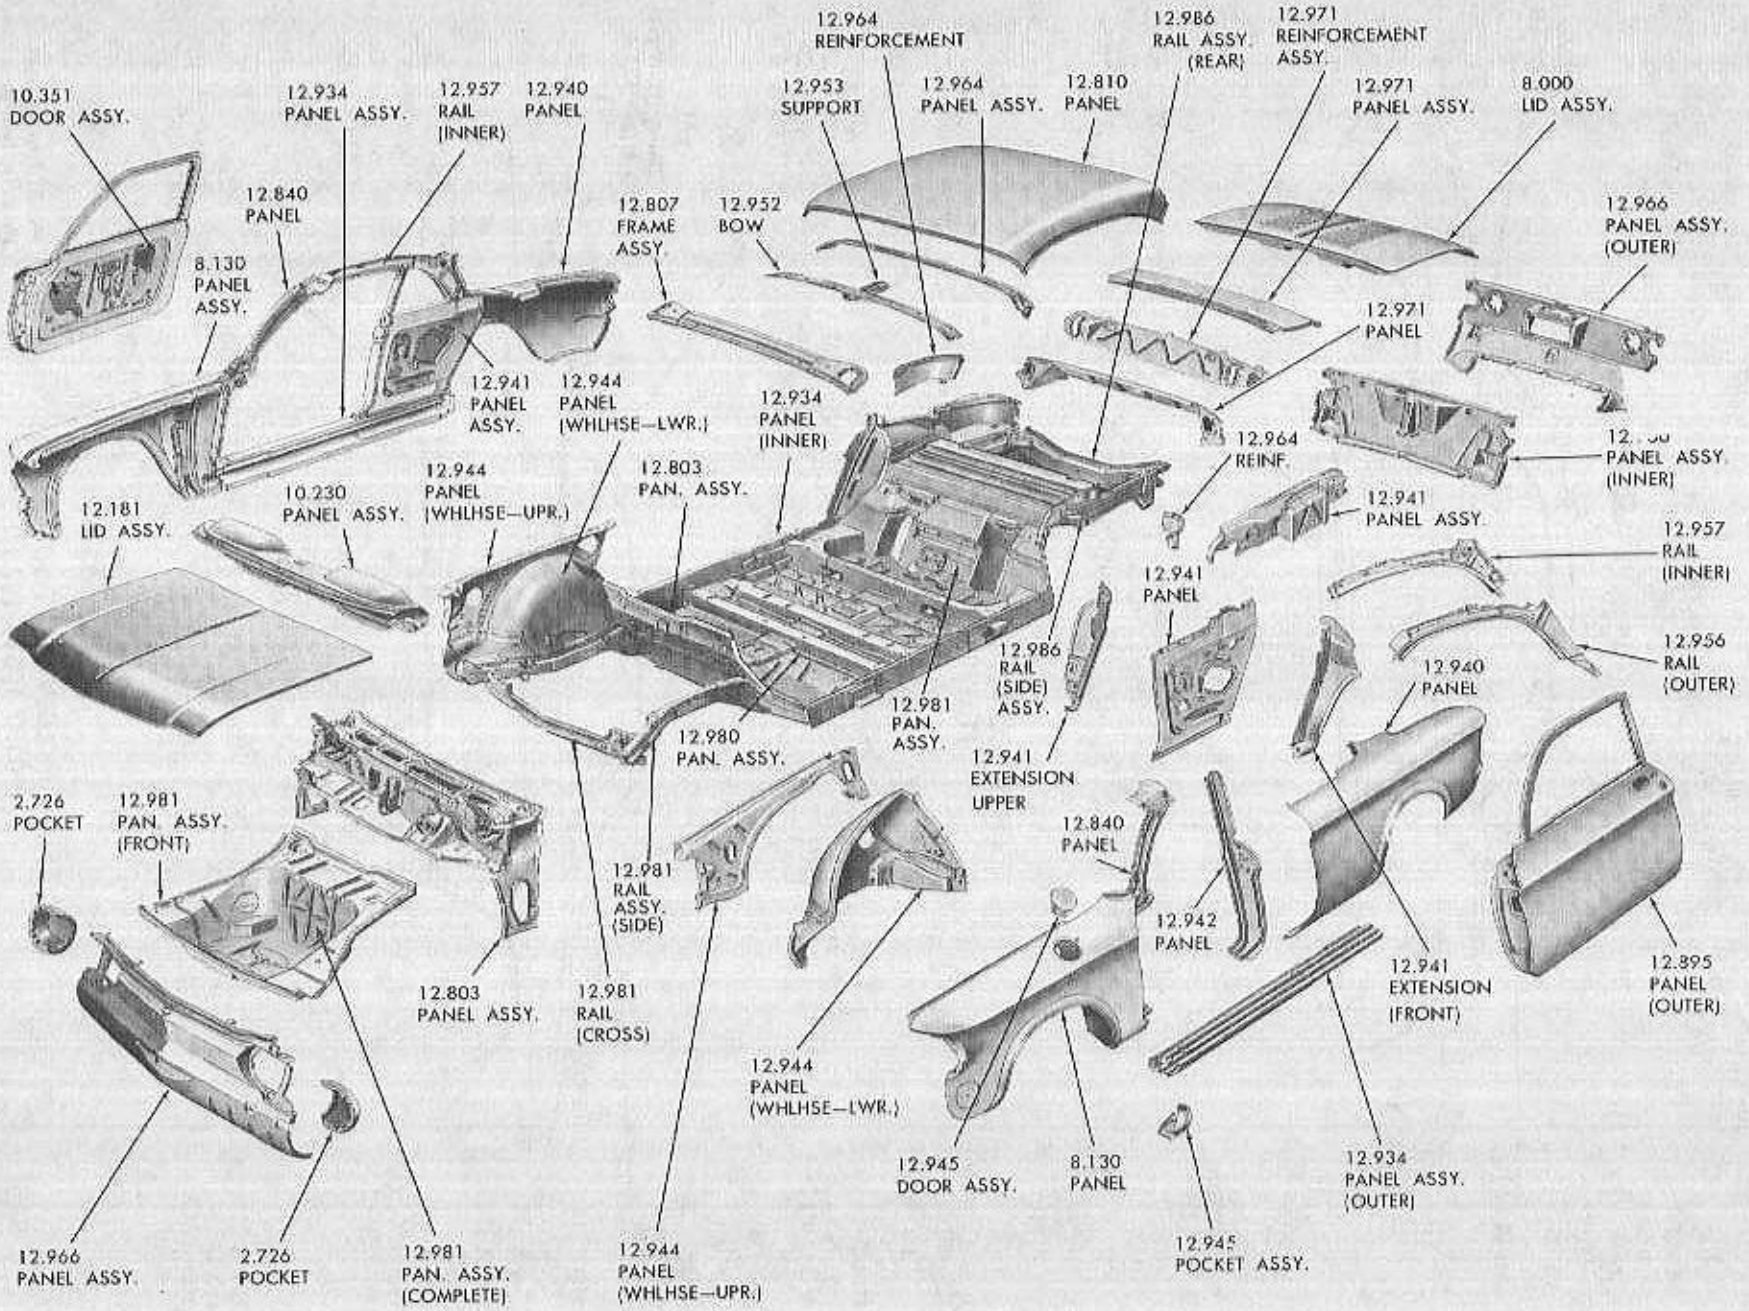

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

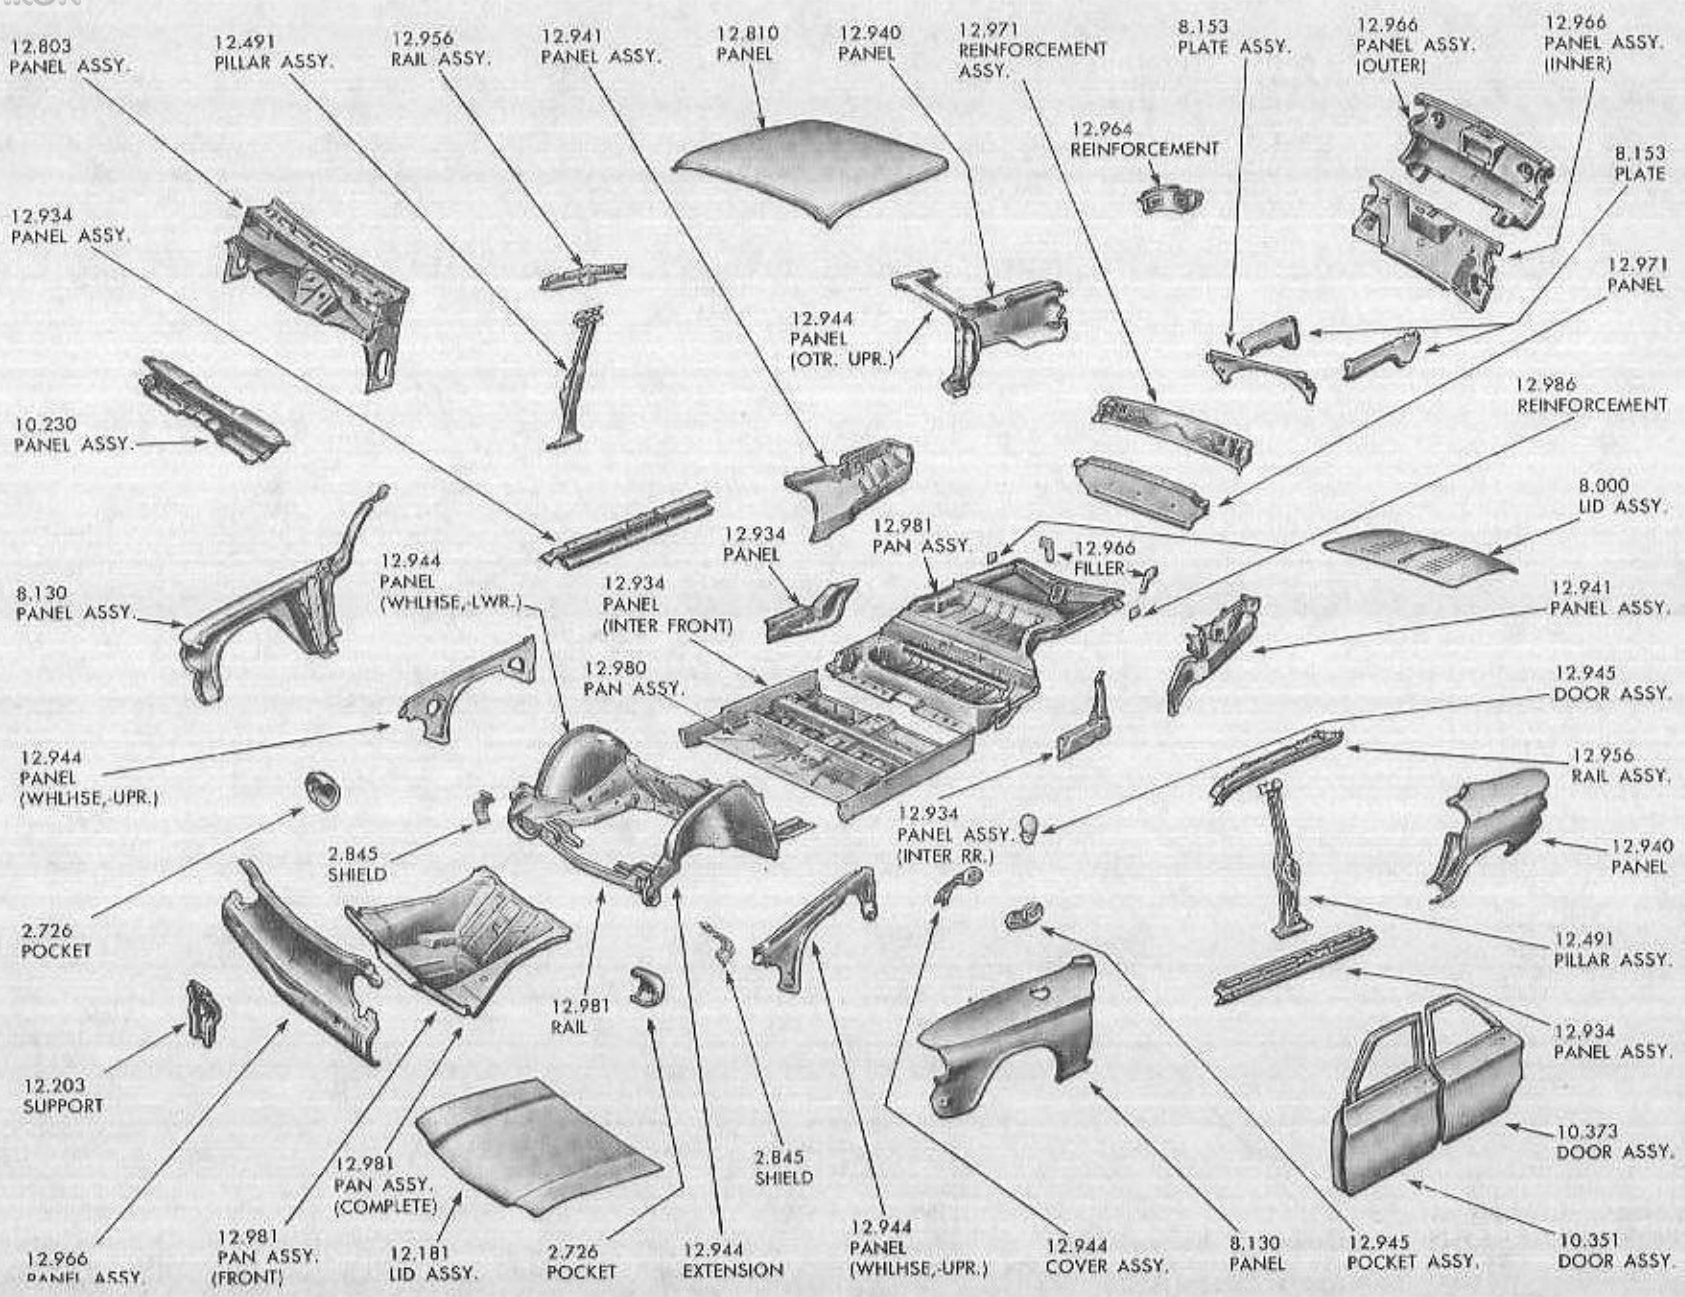

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

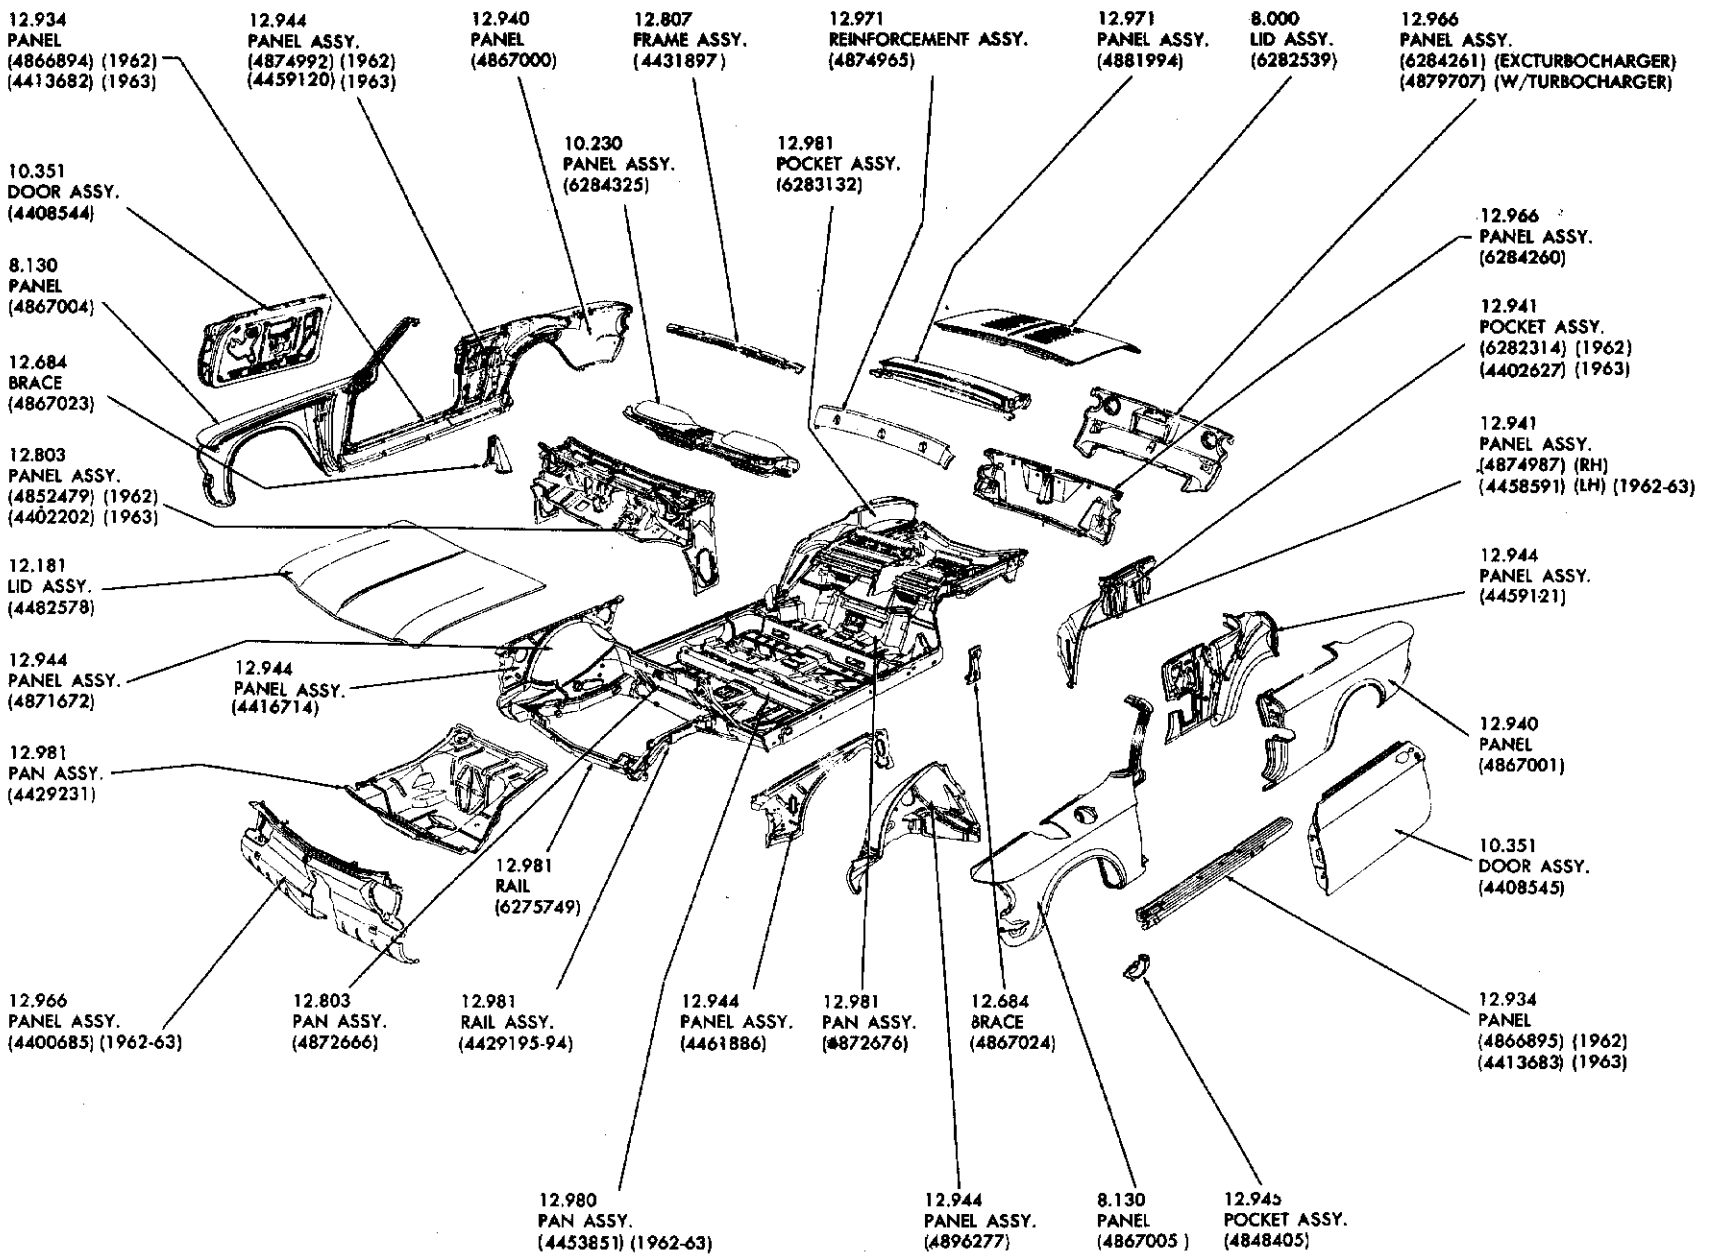

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

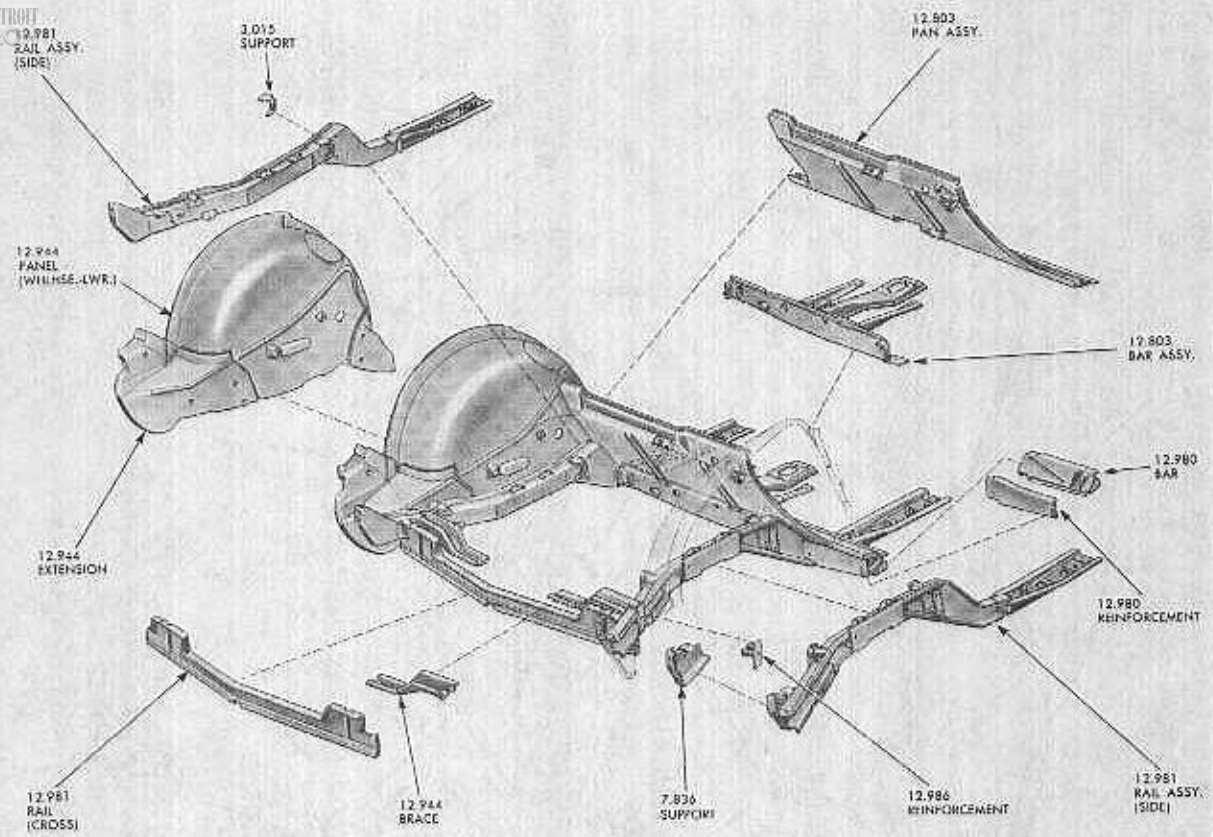

1960-64 CORVAIR FRONT COMPARTMENT PAN RAIL ASSEMBLY

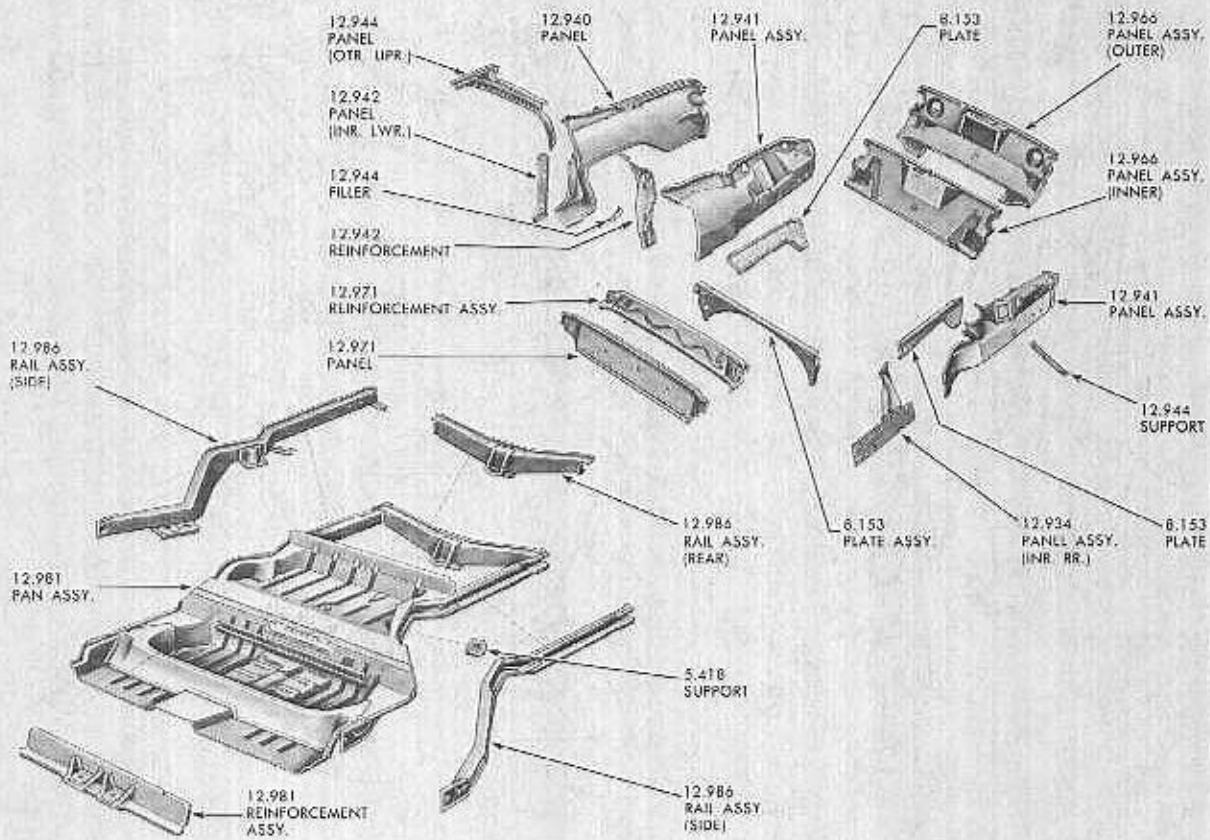

1960-64 CORVAIR REAR END SHEET METAL COMPONENTS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

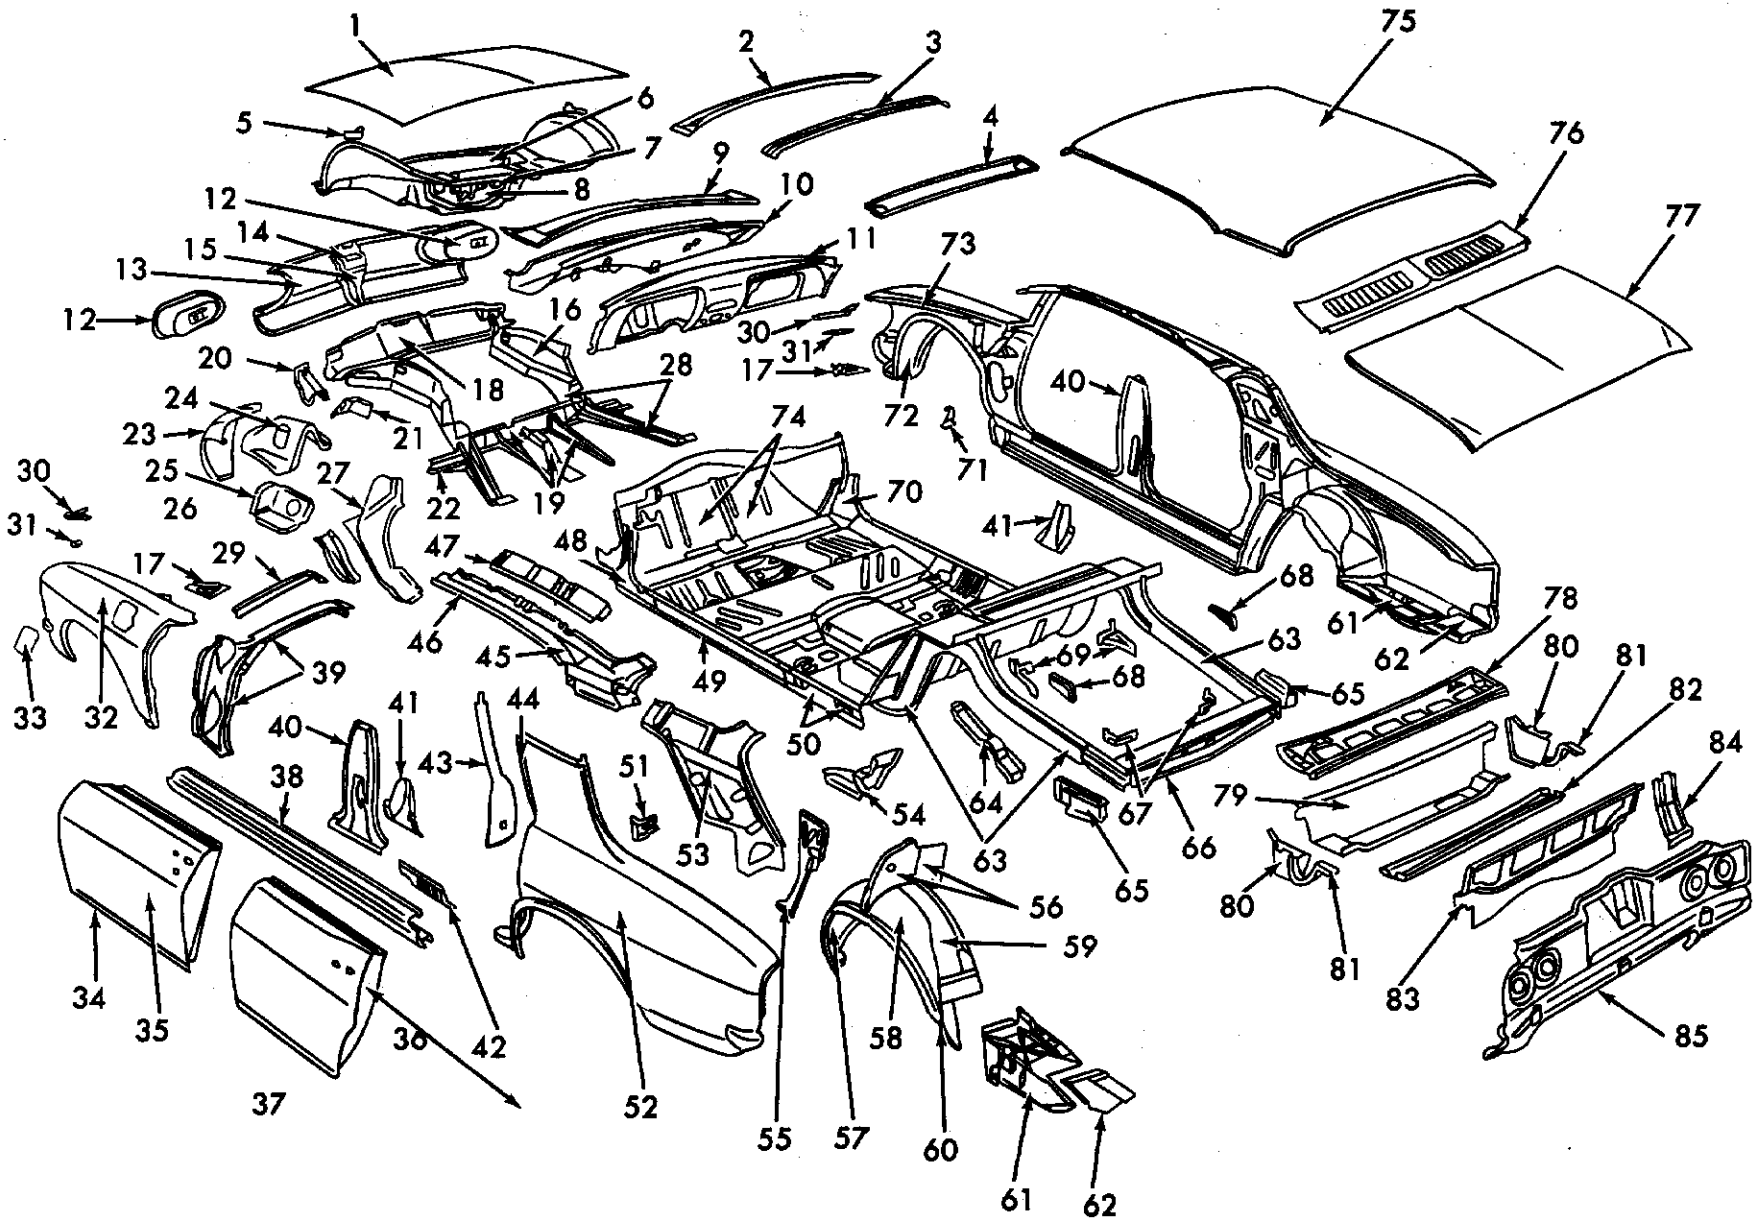

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1965-69 CORVAIR SHEET METAL—SPT. SEDAN

1.	12.181	LID ASSY., Front Compt.
2.	12.807	FRAME, w/Shield Inner Upper
3.	12.952	BOW, Roof
4.	12.964	PANEL, Back Window Inner Upper
5.	12.944	BRACE, Frt. Compt. Side Gutter to w/hse.
6.	12.944	PANEL, Front Compt. and w/hse. Inner
7.	12.931	PAN ASSY., Front Compt. (Incl. Items 6, 8, 16, 18, 19, 20, 21, 22, 28, 31, 74)
8.	12.981	PAN, Front Compt.
9.	12.800	GRILLE, Shroud Top Vent
10.	12.804	PANEL ASSY., Dash Upper & Ctr. Duct
11.	10.230	PANEL ASSY., Instrument
12.	2.726	POCKET ASSY., Headlamp
13.	12.966	PANEL ASSY., Front End
14.	12.203	SUPPORT, Frt. Compt. Lid Lock Upper
15.	12.203	SUPPORT, Frt. Compt. Lid Lock Lower
16.	12.944	FILLER ASSY., Frt. Comp & w/hse. Inr. Pnl. to Rail
17.	12.981	FILLER, Frt. Compt. Lid Rear Corner Gutter
18.	12.981	RAIL, Front Compt. Cross
19.	12.803	BAR ASSY., Toe Pan Cross
20.	12.981	EXTENSION, Frt. Compt. Side Rail
21.	7.836	SUPPORT, Front Bumper
22.	12.980	BAR, No. 1 Floor Pan
23.	12.944	PANEL, Frt. w/hse. Outer Frt. L.H. Side
24.	12.944	PANEL, Frt. w/hse. Outer Ctr. L.H. Side
25.	12.945	POCKET, Gas Tank Filler Neck
26.	12.945	DEFLECTOR, Gas Tank Pocket Overflow
27.	12.944	PANEL, Frt. w/hse. Outer Rear L.H. Side
28.	12.981	RAIL ASSY., Frt. Compt. Pan (Incl. Items 20, 21, 31)
29.	12.075	MOLDING, w/Shield Pillar Drip
30.	12.981	FILLER, Frt. Compt. Lid Frt. Corner Gutter
31.	12.996	REINF., Frt. Compt. Frt. Corner Gutter
32.	8.130	PANEL, Front Fender
33.	12.945	DOOR ASSY., Gas Tank Filler
34.	10.351	DOOR ASSY., Front (Incl. Item "AK")
35.	12.895	PANEL ASSY., Front Door Outer
36.	10.373	DOOR ASSY., Rear (Incl. Item "AM")
37.	12.913	PANEL ASSY., Rear Door Outer
38.	12.934	PANEL ASSY., Rocker Outer
39.	12.840	PANEL ASSY., Frt. Body Hinge Pillar
40.	12.491	PILLAR ASSY., Center
41.	12.491	BRACE, Center Pillar to Floor Pan
42.	12.934	REINF., Rocker Inner Panel at Ctr. Pillar
43.	12.942	REINF., Body Lock Pillar Outer Panel
44.	12.075	MOLDING, Roof Drip Rear
45.	12.956	RAIL ASSY., Side Roof (Incl. Item 46)
46.	12.075	MOLDING, Roof Drip Front
47.	N.L.	RAIL, Side Roof Inner Front
48.	12.804	PANEL, Shroud Side Duct
49.	12.934	PANEL ASSY., Rocker Inner Front
50.	12.934	PANEL, Rocker Inner Rear
51.	12.964	FILLER, Back Wind. Lower Corner
52.	12.940	PANEL, Quarter Outer
53.	12.941	PANEL ASSY., Quarter Inner Upper
54.	12.986	BRACE ASSY., Motor Compt. Side Rail to Rckr.
55.	12.941	PANEL, Quarter Inner Lower
56.	12.944	PLATE ASSY., w/hse. to Qtr. Pnl. Baffle Upr.
57.	12.944	PANEL, Rear W/house Front
58.	12.941	PANEL ASSY., Qtr. Inr. & Whse. (Incl. Items 55, 56, 57, 59, 60)
59.	12.944	PANEL, Rear W/house Rear
60.	12.944	EXTENSION, Rear W/house Pnl. Lwr. Rear
61.	12.940	FILLER, Qtr. Otr. Pnl. to Side Rail
62.	12.940	EXTENSION, Qtr. Otr. Pnl. to Side Rail Filler
63.	7.006	RAIL ASSY., Motor Compt. Side (Incl. Items 54, 64, 69)
64.	12.940	FILLER, Rear w/hse. Pnl. to Side Rail
65.	7.006	EXT. ASSY., Motor Compt. Side Otr. Rail
66.	7.006	RAIL ASSY., Motor Compt. Rear Cross
67.	12.996	SUPPORT, Motor Compt. Rr. Corner Seal Ret.
68.	12.971	FILLER ASSY., Compt. Div. Pnl. to Side Rail
69.	N.L.	SUPPORT, Motor Compt. Frt. Corner Seal Ret.
70.	12.934	EXTENSION, Rocker Inner Pnl. Front
71.	10.230	SUPPORT, Inst. Panel End
72.	12.944	PANEL, Frt. w/hse. Outer Rt. Side
73.	12.996	GUTTER, Frt. Compt. Lid Side
74.	12.804	PANEL ASSY., Dash Lower
75.	12.810	PANEL, Roof
76.	12.971	GRILLE, Motor Compt. Vent
77.	8.000	LID ASSY., Motor Compt.
78.	12.971	REINF., Motor Compt. Vent Grille
79.	12.971	PANEL ASSY., Rear Compt. Division
80.	8.015	SUPPORT, Motor Compt. Lid Hinge
81.	8.015	STRAP, Motor Compt. Lid Hinge
82.	12.971	DEFLECTOR, Motor Compt. Air Duct Water
83.	12.971	PANEL, Motor Compt. Vent Duct
84.	8.083	PLATE ASSY., Motor Compt. Lid Latch Arch.
85.	12.966	PANEL ASSY., Rear End

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

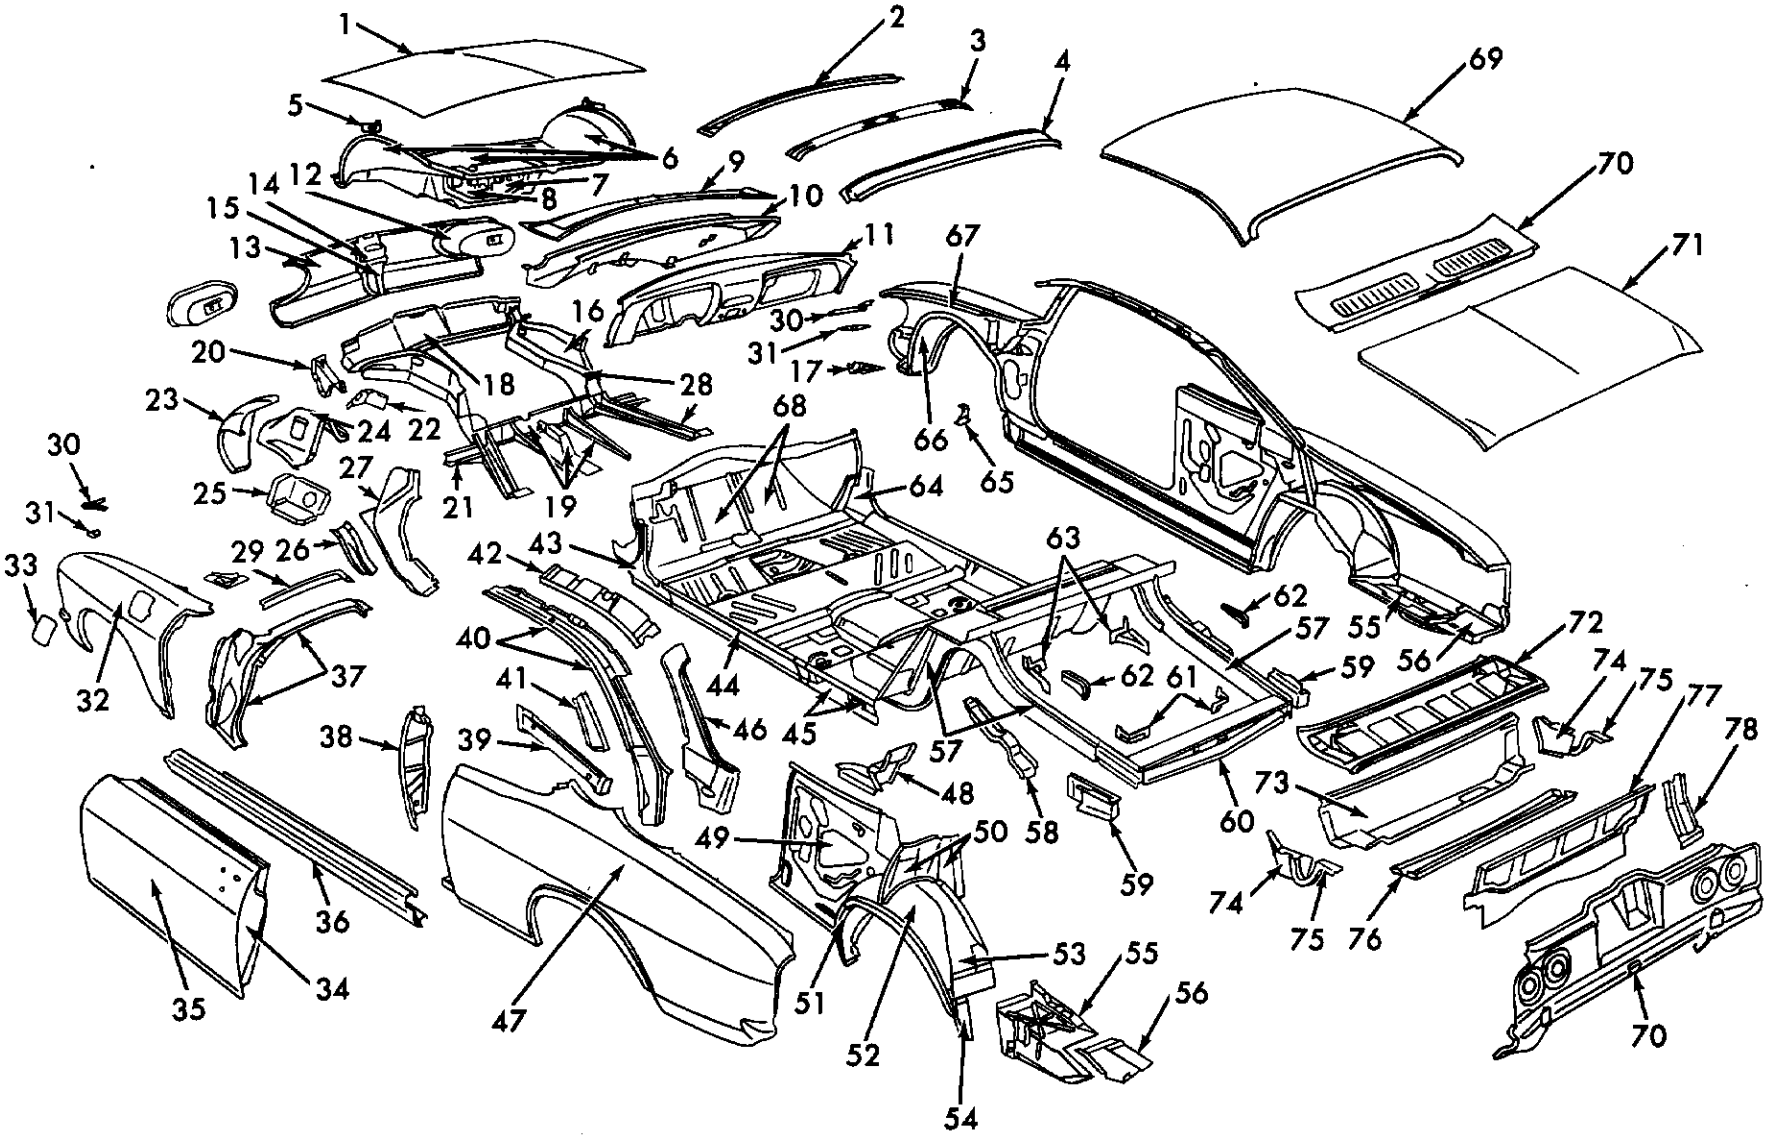

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1965–69 CORVAIR SHEET METAL–SPT. SEDAN

1. 12.181 LID ASSY., *Front Compt.*
2. 12.807 FRAME, w/Shield Inner Upper
3. 12.952 BOW, Roof
4. 12.964 PANEL, Back Window Inner Upper
5. 12.944 BRACE, Frt. Compt. Side Gutter to Whse.
6. 12.944 PANEL, Front Compt. and Whse. Inner
7. 12.931 PAN ASSY., Front Compt. (Incl. Items 6, 8, 16, 18, 19, 20, 21, 22, 28, 31, 74)
8. 12.981 PAN, Front Compt.
9. 12.800 GRILLE, Shroud Top Vent
10. 12.804 PANEL ASSY., Dash Upper & Ctr. Duct
11. 10.230 PANEL ASSY., Instrument
12. 2.726 POCKET ASSY., Headlamp
13. 12.966 PANEL ASSY., Front End
14. 12.203 SUPPORT, Frt. Compt. Lid Lock Upper
15. 12.203 SUPPORT, Frt. Compt. Lid Lock Lower
16. 12.944 FILLER ASSY., Frt. Comp & Whse. Inr. Pnl. to Rail
17. 12.981 FILLER, Frt. Compt. Lid Rear Corner Gutter
18. 12.981 RAIL, Front Compt. Cross
19. 12.803 BAR ASSY., Toe Pan Cross
20. 12.981 EXTENSION, Frt. Compt. Side Rail
21. 7.836 SUPPORT, *Front Bumper*
22. 12.980 BAR, No. 1 Floor Pan
23. 12.944 PANEL, Frt. Whse. Outer Frt. Lt. Side
24. 12.944 PANEL, Frt. Whse. Outer Ctr. Lt. Side
25. 12.945 POCKET, Gas Tank Filler Neck
26. 12.945 DEFLECTOR, Gas Tank Pocket Overflow
27. 12.944 PANEL, Frt. Whse. Outer Rear Lt. Side
28. 12.981 RAIL ASSY., Frt. Compt. Pan (Incl. Items 20, 21, 31)
29. 12.075 MOLDING, w/Shield Pillar Drip
30. 12.981 FILLER, Frt. Compt. Lid Frt. Corner Gutter
31. 12.996 REINF, Frt. Compt. Frt. Corner Gutter
32. 8.130 PANEL, Front Fender
33. 12.945 DOOR ASSY., Gas Tank Filler
34. 10.351 DOOR ASSY., Front (Incl. Item "AK")
35. 12.895 PANEL ASSY., Front Door Outer
36. 10.373 DOOR ASSY., Rear (Incl. Item "AM")
37. 12.913 PANEL ASSY., Rear Door Outer
38. 12.934 PANEL ASSY., Rocker Outer
39. 12.840 PANEL ASSY., Frt. Body Hinge Pillar
40. 12.491 PILLAR ASSY., Center
41. 12.491 BRACE, Center Pillar to Floor Pan
42. 12.934 REINF, *Rocker Inner Panel at Ctr. Pillar*
43. 12.942 REINF, Body Lock Pillar Outer Panel
44. 12.075 MOLDING, Roof Drip Rear
45. 12.956 RAIL ASSY., Side Roof (Incl. Item 46)
46. 12.075 MOLDING, Roof Drip Front
47. N.L. *RAIL, Side Roof Inner Front*
48. 12.804 PANEL, Shroud Side Duct
49. 12.934 PANEL ASSY., Rocker Inner Front
50. 12.934 PANEL, Rocker Inner Rear
51. 12.964 FILLER, Back Wind Lower Corner
52. 12.940 PANEL, Quarter Outer
53. 12.941 PANEL ASSY., Quarter Inner Upper
54. 12.986 BRACE ASSY., Motor Compt. Side Rail to Rckr.
55. 12.941 PANEL, Quarter Inner Lower
56. 12.944 PLATE ASSY., Whse. to Qtr. Pnl. *Baffle Upr.*
57. 12.944 PANEL, Rear W/house Front
58. 12.941 PANEL ASSY., Qtr. Inr. & Whse. (Incl. Items 55, 56, 57, 59, 60)
59. 12.944 PANEL, Rear Whouse Rear
60. 12.944 EXTENSION, Rear Whouse Pnl. Lwr. Rear
61. 12.940 FILLER, Otr. Otr. Pnl. to Side Rail
62. 12.940 EXTENSION. Qtr. Otr. Pnl. to Side Rail Filler
63. 7.006 RAIL ASSY., Motor Compt. Side (Incl. Items 54, 64, 69)
64. 12.940 *FILLER, Rear Whse. Pnl. to Side Rail*
65. 7.006 EXT. ASSY., Motor Compt. Side Otr. Rail
66. 7.006 RAIL ASSY., Motor Compt. Rear Cross
67. 12.996 SUPPORT, Motor Compt. Rr. Corner Seal Ret.
68. 12.971 FILLER ASSY., Compt. Div. Pnl. to Side Rail
69. N.L. SUPPORT, Motor Compt. Frt. Corner Seal Ret.
70. 12.934 EXTENSION, Rocker Inner Pnl. Front
71. 10.230 SUPPORT, Inst. Panel End
72. 12.944 PANEL, Frt. Whse. Outer Rt. Side
73. 12.996 GUTTER, Frt. Compt. Lid Side
74. 12.804 PANEL ASSY., Dash Lower
75. 12.810 PANEL, Roof
76. 12.971 GRILLE, Motor Compt. Vent
77. 8.000 LID ASSY., Motor Compt.
78. 12.971 *REINF, Motor Compt. Vent Grille*
79. 12.971 PANEL ASSY., Rear Compt. Division
80. 8.015 SUPPORT, Motor Compt. Lid Hinge
81. 8.015 STRAP, Motor Compt. Lid Hinge
82. 12.971 DEFLECTOR, Motor Compt. Air Duct Water
83. 12.971 PANEL, Motor Compt. Vent Duct
84. 8.083 PLATE ASSY., Motor Compt. Lid Latch Anch.
85. 12.966 PANEL ASSY., Rear End

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

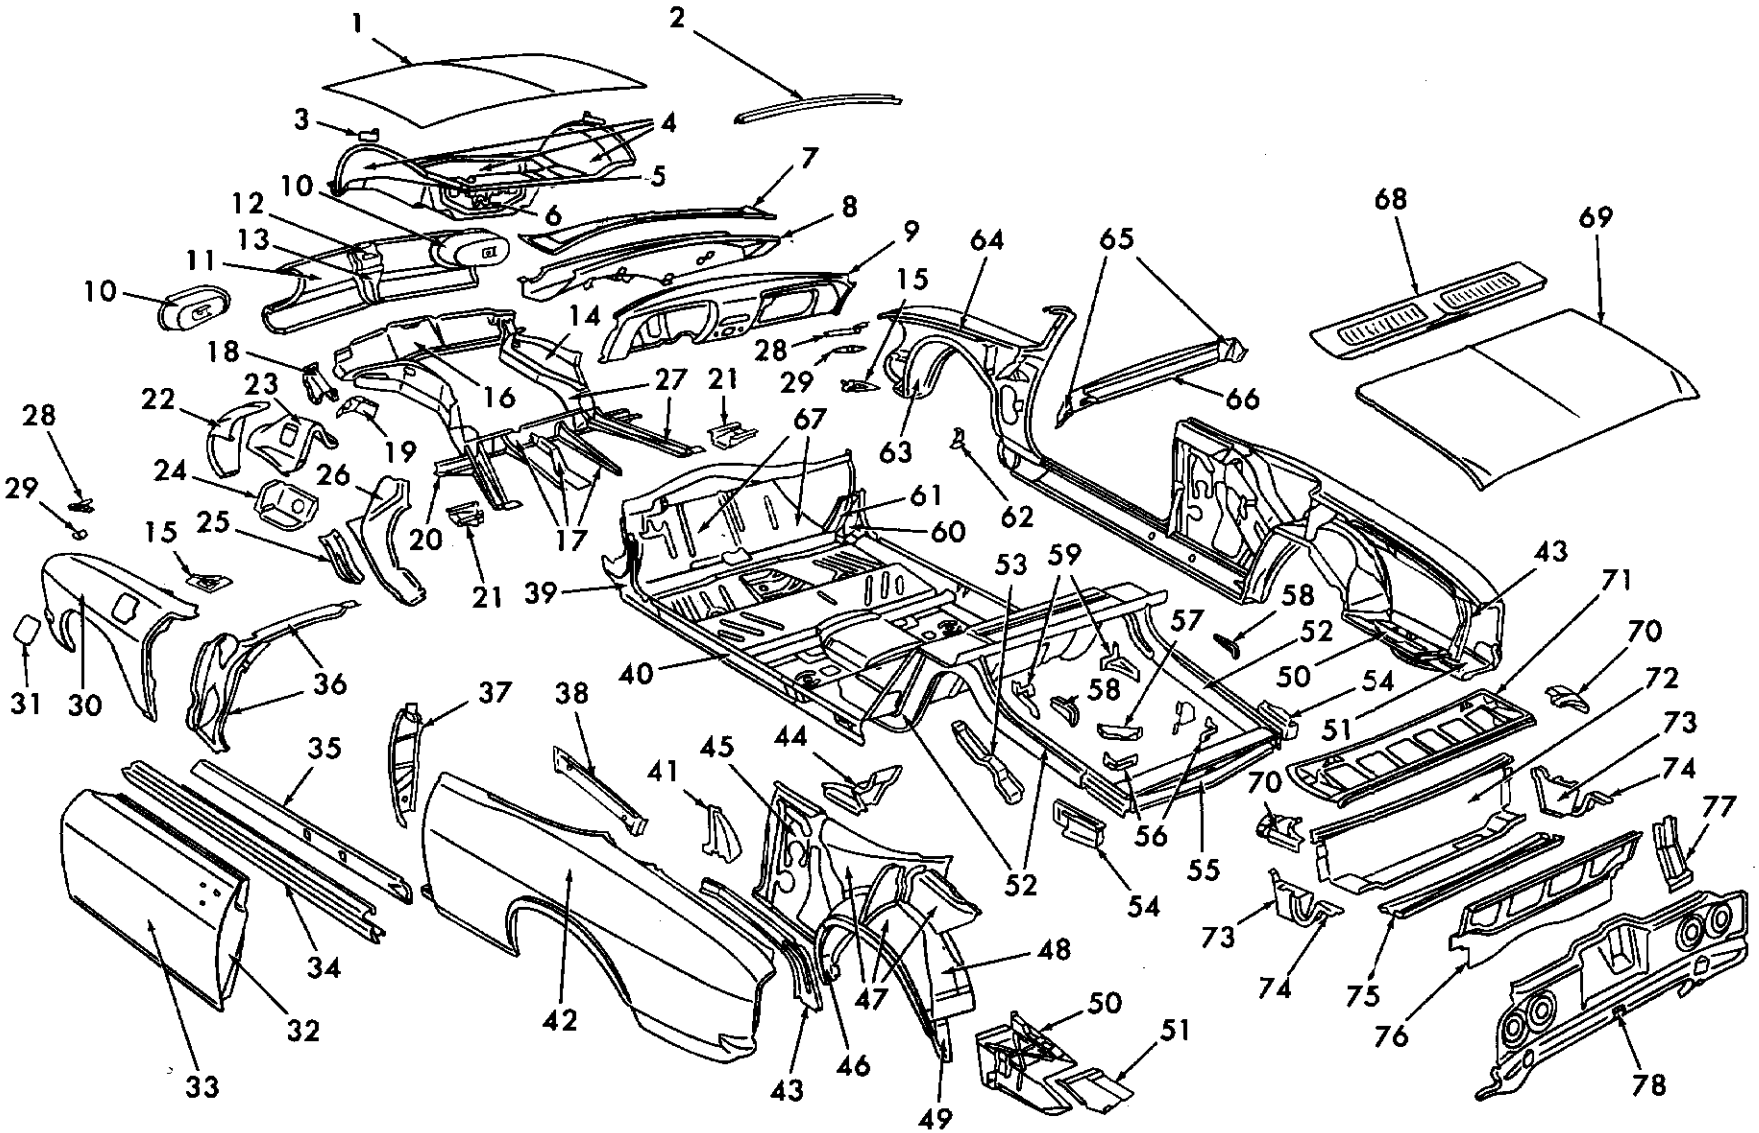

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1965-69 CORVAIR SHEET METAL – CONVERTIBLE

1. 12.181 LID ASSY., Front Compt.
2. 12.807 FRAME, w/Shield Inner Upper
3. 12.944 BRACE, Frt. Compt. Side Gutter to Whse.
4. 12.944 PANEL, Front Compt. and Whse. Inner
5. 12.931 PAN ASSY., Front Compt. (Incl. Items 6, 8, 16, 18, 19, 20, 21, 22, 28, 29, 67)
6. 12.981 PAN, Front Compt.
7. 12.800 GRILLE, Shroud Top Vent
8. 12.804 PANEL ASSY., Dash Upper & Ctr. Duct
9. 10.230 PANEL ASSY., Instrument
10. 2.726 POCKET ASSY., Headlamp
11. 12.966 PANEL ASSY., Front End
12. 12.203 SUPPORT, Frt. Compt. Lid Lock Upper
13. 12.203 SUPPORT, Frt. Compt. Lid Lock Lower
14. 12.944 FILLER ASSY., Frt. Comp & Whse. Inr. Pnl. to Rail
15. 12.981 FILLER, Frt. Compt. Lid Rear Corner Gutter
16. 12.981 RAIL, Front Compt. Cross
17. 12.803 BAR ASSY., Toe Pan Cross
18. 12.981 EXTENSION, Frt. Compt. Side Rail
19. 7.836 SUPPORT, Front Bumper
20. 12.980 BAR, No. 1 Floor Pan Front
21. 12.980 BAR, No. 1 Floor Pan Rear
22. 12.944 PANEL, Frt. Whse. Outer Frt. Lt. Side
23. 12.944 PANEL, Frt. Whse. Outer Ctr. Lt. Side
24. 12.945 POCKET, Gas Tank Filler Neck
25. 12.945 DEFLECTOR, Gas Tank Pocket Overflow
26. 12.944 PANEL, Frt. Whse. Outer Rear Lt. Side
27. 12.981 RAIL ASSY., Frt. Compt. Pan (Incl. Items 20, 21, 31)
28. 12.981 FILLER, Frt. Compt. Lid Frt. Corner Gutter
29. 12.996 REINF, Frt. Compt. Frt. Corner Gutter
30. 8.130 PANEL, Front Fender
31. 12.945 DOOR ASSY., Gas Tank Filler
32. 10.351 DOOR ASSY., Front (Incl. Item "AK")
33. 12.895 PANEL ASSY., Front Door Outer
34. 12.934 PANEL ASSY., Rocker Outer
35. 12.934 REINF, Rocker Outer Panel
36. 12.840 PANEL ASSY., Frt. Body Hinge Pillar
37. 12.942 REINF, Body Lock Pillar Outer Panel
38. 12.684 BRACE, Body Lock Pillar to Whse.
39. 12.804 PANEL, Shroud Side Duct
40. 12.934 PANEL ASSY., Rocker Inner
41. 12.684 BRACE, Body Lock Plr. to Floor Pan
42. 12.940 PANEL, Quarter Outer
43. 12.986 REINF, Motor Compt. Gutter Side
44. 12.986 BRACE ASSY., Motor Compt. Side Rail to Rckr.
45. 12.941 PANEL ASSY., Quarter Inner Front
46. 12.944 PANEL, Rear Whouse Front
47. 12.941 PANEL ASSY., Qtr. Inr. & Whse. (Incl. Items 45, 46, 48, 49)
48. 12.944 PANEL, Rear Whse. Rear
49. 12.944 EXTENSION, Rear Whouse Pnl. Lwr. Rear
50. 12.940 FILLER, Qtr. Qtr. Pnl. to Side Rail
51. 12.940 EXTENSION, Qtr. Otr. Pnl. to Side Rail Filler
52. 7.006 RAIL ASSY., Motor Compt. Side (Incl. Items 44, 53, 59)
53. 12.940 FILLER, Rear Whse. Pnl. to Side Rail
54. 7.006 EXT. ASSY., Motor Compt. Side Otr. Rail
55. 7.006 RAIL ASSY., Motor Compt. Rear Cross
56. 12.996 SUPPORT, Motor Compt. Rr. Corner Seal Ret.
57. 12.986 BRACE, Motor Compt. Side Rail to Rr. Cross Rail
58. 12.971 FILLER ASSY., Compt. Div. Pnl. to Side Rail
59. N.L. SUPPORT, Motor Compt. Frt. Corner Seal Ret.
60. 12.934 EXTENSION, Rocker Inner Pnl. Front
61. 12.934 REINF, Rocker Inner Ext. to Rckr. Pnl.
62. 10.230 SUPPORT, Inst. Panel End
63. 12.944 PANEL, Frt. Whse. Outer Rt. Side
64. 12.996 GUTTER, Frt. Compt. Lid Side
65. 12.768 BRACE ASSY., Rear Seat Back
66. 12.768 REINF, Rear Seat Back Brace
67. 12.804 PANEL ASSY., Dash Lower
68. 12.971 GRILLE, Motor Compt. Vent
69. 8.000 LID ASSY., Motor Compt.
70. 12.996 REINF, Motor Compt. Front Corner
71. 12.971 REINF, Motor Compt. Vent Grille
72. 12.971 PANEL ASSY., Rear Compt. Division
73. 8.015 SUPPORT, Motor Compt. Lid Hinge
74. 8.015 STRAP, Motor Compt. Lid Hinge
75. 12.971 DEFLECTOR, Motor Compt. Air Duct Water
76. 12.971 PANEL, Motor Compt. Vent Duct
77. 8.083 PLATE ASSY., Motor Compt. Lid Latch Anch.
78. 12.966 PANEL ASSY., Rear End

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

12.009 TRAY ASSY.—LAMP UNIT—PAD ASSY., Ash Receiver

60-64	CORVAIR	6256643	instrument panel	1
65-67	CORVAIR	3886352	complete	1
68-69	CORVAIR	3919080		1
67	ALL	986877	**LAMP UNIT**	1
67-69	CORVAIR	3900506	**LAMP ASSY.**, ash tray	1
68-69	CORVAIR	3919118	**PAD ASSY.**, ash tray (black)	1
68	CORVAIR	3919119	**PAD ASSY.**, ash tray (comb. 706, 707) (blue)	1
68	CORVAIR	3919120	**PAD ASSY.**, ash tray (comb. 709, 710) (gold)	1
69	CORVAIR	3948577	**PAD ASSY.**, ash tray (comb. 703, 704) (dk. blue)	1
69	CORVAIR	3948579	**PAD ASSY.**, ash tray (comb. 707, 708) (dk. green)	1

12.016 HOUSING ASSY.—HANDLE—MOULDING—RETAINER, Ash Tray

60-64	CORVAIR	6257698	w/bezel (part of 6257782)	1
60-64	ALL	6257782	w/face plate (Note 1)	1

NOTE 1 Includes housing assy. w/bezel, face plate and retainer.

65-67	CORVAIR	3883562	**HANDLE**	1
60-64	CORVAIR	6257581	**RETAINER** (part of 6257782)	2
65-69	CORVAIR	3899866	**RETAINER**	1

12.045 TRAY—TRAY ASSY., Arm Rest Ash

62-67	MONZA (2-DR.) (exc. CONV.)	4869049	quarter	2
62-67	CORVAIR (CONV.)	4725854	rr. quarter	2
62	CORVAIR DELUXE (4-DR.) (exc. MONZA)	3940479	rear quarter	2
61-64	MONZA (4-DR.),			
63-64	CORVAIR (4-DR.)	4790111	rear door	R.H.
61-64	MONZA (4-DR.),			
63-64	CORVAIR (4-DR.)	4790112	rear door	L.H.
65-67	CORVAIR (4-DR.)	4467468	rear door	R.H.
65-67	CORVAIR (4-DR.)	4467469	rear door	L.H.
68-69	CORVAIR (CONV.)	7743702	**TRAY ASSY.**, rear door arm rest (Note 1)	2

NOTE 1. Ash tray cut out 2.44 x 1.52.

12.050 SPRING—RETAINER, Ash Tray

65-67	CORVAIR (4-DR.),			
68-69	CORVAIR (CONV.)		rear qtr. tray cover,	
61-64	MONZA (4-DR.)	4783275	rr. dr. tray cover	2
62-67	MONZA	4088916	rear qtr. tray cover	2
68	MONZA (CONV.)	7770843	**RETAINER**, rear qtr.	2
69	MONZA (CONV.)	8767367	**RETAINER**, qtr.	2

12.075 MOULDING—SCALP—ESCUTCHEON—SCREW, Roof Drip

60-64	CORVAIR (2-DR.) (exc. CONV.)	6278002		R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6278003		L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6278457	front	R.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6278458	front	L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6278460	rear	1
60-64	CORVAIR STD. (2-DR.)	6277715	windshield pillar drip	R.H.
60-64	CORVAIR STD. (2-DR.)	6277716	windshield pillar drip	L.H.
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	6277717	windshield pillar drip	R.H.
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	6277718	windshield pillar drip	L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276440	windshield pillar drip	R.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276441	windshield pillar drip	L.H.
65-69	CORVAIR (exc. CONV.)	4487806	windshield pillar drip	R.H.
65-69	CORVAIR (exc. CONV.)	4487807	windshield pillar drip	L.H.
65-67	CORVAIR (4-DR.)	4467724	front	R.H.
65-67	CORVAIR (4-DR.)	4467725	front	L.H.
65-67	CORVAIR (4-DR.)	4467722	rear	R.H.
65-67	CORVAIR (4-DR.)	4467723	rear	L.H.
65-69	CORVAIR (SPT. CPE.)	4467677		R.H.
65-69	CORVAIR (SPT. CPE.)	4467678		L.H.
60-64	CORVAIR DELUXE (2-DR.)	6278123	**SCALP**	R.H.
60-64	CORVAIR DELUXE (2-DR.)	6278124	**SCALP**	L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276444	**SCALP**, front	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT

60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276445	**SCALP,** front	L.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276446	**SCALP,** rear	R.H.
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6276447	**SCALP,** rear	L.H.
65-68	MONZA (exc. CONV.)	4487808	**SCALP,** w/s pillar drip mldg.	R.H.
65-68	MONZA (exc. CONV.)	4487809	**SCALP,** w/s pillar drip mldg.	L.H.
65-67	MONZA (4-DR.)	4477584	**SCALP**	R.H.
65-67	MONZA (4-DR.)	4477585	**SCALP**	L.H.
65-68	MONZA (SPT. CPE.)	4477582	**SCALP**	R.H.
65-68	MONZA (SPT. CPE.)	4477583	**SCALP**	L.H.
65-67	CORVAIR (exc. STA. WAG.),			
67	CORVAIR (SPT. SED.)		rr. drip moulding,	
68-69	CORVAIR (STD.)	7636829	w/s pillar drip	A.R.
65-69	MONZA (exc. CONV.)	4487810	**ESCUTCHEON,** w/s pillar drip mldg. scalp	R.H.
65-69	MONZA (exc. CONV.)	4487811	**ESCUTCHEON,** w/s pillar drip mldg. scalp	L.H.
60-68	CORVAIR,			
61-62	MONZA (4-DR.)	4825964	**SCREW,** windshield pillar drip, pillar scalp mldg.	A.R.

12.110 NUT, Cowl Belt

Not required in this group.
See group 12.118 4644959

12.112 MOULDING UNIT, Front Door Outer Panel

60-61	DELUXE (2-DR.) (exc. MONZA)	6257944	lower	R.H.
60-61	DELUXE (2-DR.) (exc. MONZA)	6257943	lower	L.H.
60-61	DELUXE (4-DR.) (exc. MONZA)	6257520	lower	R.H.
60-61	DELUXE (4-DR.) (exc. MONZA)	6257519	lower	L.H.
62	MONZA (STA. WAG.)	3817050		2
64	CORVAIR DELUXE (exc. MONZA)	3851361	lower	2

12.113 MOULDING, Center Pillar Scalp

61-64	MONZA (4-DR. SED.)	6276346		R.H.
61-64	MONZA (4-DR. SED.)	6276347		L.H.

12.114 MOULDING UNIT, Rear Door Outer Panel

60-61	DELUXE (4-DR.)	6257514	lower	2
64	CORVAIR DELUXE (exc. MONZA)	3851362	lower	2

12.116 MOULDING UNIT—WASHER, Rear Fender

60-61	DELUXE (2-DR.) (exc. MONZA)	6257942	lower	R.H.
60-61	DELUXE (2-DR.) (exc. MONZA)	6257941	lower	L.H.
60-61	DELUXE (4-DR.) (exc. MONZA, LAKEWOOD)	6257518	lower	R.H.
60-61	DELUXE (4-DR.) (exc. MONZA, LAKEWOOD)	6257517	lower	L.H.
61	LAKEWOOD (DELUXE)	3787536	lower	2
62-64	MONZA (CONV.)	3825801	rr. qtr. pinchweld finishing	L.H.
62-64	MONZA (CONV.)	3825802	rr. qtr. pinchweld finishing	R.H.
64	MONZA (SPT. CPE., CONV.)	3851365	rr. wheel opening	L.H.
64	MONZA (SPT. CPE., CONV.)	3851366	rr. wheel opening	R.H.
64	CORVAIR DELUXE (exc. MONZA)	3851363	rr. fndr. lwr.	L.H.
64	CORVAIR DELUXE (exc. MONZA)	3851364	rr. fndr. lwr.	R.H.
64	MONZA (4-DR.)	3851367	rr. wheel opening	L.H.
64	MONZA (4-DR.)	3851368	rr. wheel opening	R.H.
65-68	CORVAIR (4-DR.) w/2-tone paint	3870733	rr. qtr. belt reveal	L.H.
65-68	CORVAIR (4-DR.) w/2-tone paint	3870734	rr. qtr. belt reveal	R.H.
65-69	CORVAIR (CONV.)	3870735	rr. qtr. pinchweld finishing at belt	L.H.
65-69	CORVAIR (CONV.)	3870736	rr. qtr. pinchweld finishing at belt	R.H.
65-69	CORVAIR (exc. STD.)	3870737	rr. of rr. fender outer panel finishing	L.H.
65-69	CORVAIR (exc. STD.)	3870738	rr. of rr. fender outer panel finishing	R.H.
65-69	CORVAIR	3870739	rr. of rr. fender	L.H.
65-69	CORVAIR	3870740	rr. of rr. fender	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65	CORVAIR (exc. STD.)	3870749	rr. wheel opening, front	L.H.
65	CORVAIR (exc. STD.)	3870750	rr. wheel opening, front	R.H.
65	CORVAIR (exc. STD.)	3870751	rr. wheel opening, center	L.H.
65	CORVAIR (exc. STD.)	3870752	rr. wheel opening, center	R.H.
65	CORVAIR (exc. STD.)	3870753	rr. wheel opening, rear	L.H.
65	CORVAIR (exc. STD.)	3870754	rr. wheel opening, rear	R.H.
66-69	CORVAIR (exc. STD.)	4227216	rr. wheel opening	R.H.
66-69	CORVAIR (exc. STD.)	4227217	rr. wheel opening	L.H.
65-68	CORVAIR	4445612	**WASHER,** rr. of rr. fen. mldg.	8

MOULDING, Rear Body Lock Pillar Scalp

61-64	MONZA (4-DR. SED.)	6283542		R.H.
61-64	MONZA (4-DR. SED.)	6283543		L.H.

12.116APLATE—EMBLEM UNIT, Name

65-66	CORSA	3871680	**EMBLEM UNIT,** rr. fender	2

12.118 ATTACHING PARTS, Door and Quarter Mouldings

60-62	CORVAIR DELUXE,			
63	CORVAIR DELUXE (exc. MONZA)	4782004	**CLIP,** frt. fndr. and frt. dr. lwr. mldg.	4
60-61	DELUXE (exc. LAKEWOOD)	6276740	**CLIP,** rr. fender lwr. mldg. rr.—(12.180)	4
60	CORVAIR DELUXE	4782005	**CLIP,** rr. dr. blister bead frt., frt. and rr. dr. lwr. frt., frt. fndr. lwr. frt. and ctr. rear, rr. fndr. lwr. frt.	A.R.
61-63	CORVAIR DELUXE (exc. MONZA),			
62	MONZA (STA. WAG.)		**CLIP,** frt. fndr. ctr. rr.,	
61	LAKEWOOD (DELUXE)	4785076	rr. fndr. lwr. mldg. rr	A.R.
61	DELUXE (exc. MONZA)		**CLIP,** frt. dr. and rr. fndr. lwr. mldg. frt.,	
61	DELUXE (4-DR.) (exc. MONZA)		rr. dr. lwr. mldg. frt.,	
62	MONZA (STA. WAG.)		frt. fndr. lwr. mldg. frt. and rr.,	
61-62	CORVAIR DELUXE (exc. MONZA)		frt. fndr. mldg. ctr. frt.,	
63	CORVAIR DELUXE (exc. MONZA)	6282515	frt. door lwr. mldg. frt. fndr. lwr. mldg. frt., frt. fndr. mldg. ctr. frt.	A.R.
60-61	DELUXE (exc. MONZA)	6276977	**CLIP,** frt. and rr. dr. lwr. mldg. rr.—(12.183)	A.R.
61	LAKEWOOD	3770339	**CLIP,** name plate (special tubular—1/8)—(8.147)	6
62-64	MONZA (CONV.)	4848925	**CLIP,** qtr. pinchweld finish mldg. frt.	4
62-64	MONZA (CONV.)	4848926	**CLIP,** qtr. pinchweld finish mldg. rr.	12
62-63	CORVAIR DELUXE (exc. MONZA),			
62	MONZA (STA. WAG.)	4871087	**CLIP,** frt. dr. outer lwr. rr.	2
64	CORVAIR (DELUXE) (exc. MONZA)	4415822	**CLIP,** frt. dr. outer pnl. lwr. mldg. rr., rr. dr. outer pnl. lwr. mldg. rr.	2
64	CORVAIR DELUXE (exc. MONZA)	4415823	**CLIP,** frt. fndr. lwr. mldg., frt. dr. outer lwr. mldg. frt., rr. fndr. lwr. mldg. frt., rr. dr. outer lwr. mldg. frt.	A.R.
65-66	CORVAIR (4-DR.) w/two tone	4540459	**CLIP,** center rr. qtr. belt reveal mldg. rr. fndr. lwr. mldg. rr.	2
65-69	MONZA (CONV.)	4545127	**CLIP,** qtr. pinchweld finish mldg. rr.	9
65-69	MONZA (CONV.)	4489427	**CLIP,** qtr. pinchweld finish mldg. frt.	10
	Not required in this group. See Group 8.309	4777621	**CLIP**	
64	CORVAIR DELUXE (exc. MONZA)	4411885	**CLIP ASSY.,** rr. fndr. lwr. mldg. rr.	4
64	CORVAIR DELUXE (exc. MONZA)	4411886	**CLIP ASSY.,** rr. fndr. lwr. mldg. center	2
65-66	CORVAIR (4-DR.) w/2-tone paint	4817162	rr. qtr. belt reveal mldg. frt.	A.R.
65-66	CORSA	4531636	**CLIP ASSY.,** left, frt. fndr. name plate	1
65-67	CORVAIR (SPT. SED.)	4531005	**CLIP ASSY.,** rr. qtr. belt reveal mldg. rr.	2
	Not required in this group. See group 12.183	7636662	**CLIP ASSY.**	
60-63	CORVAIR DELUXE (exc. MONZA)	9419764	**NUT,** rr. fndr. lwr. mldg. clip, frt. door outer lwr. mldg. rr. (rust proof)—(8.921)	A.R.
64-66	MONZA		**NUT,** rr. fndr. upper peak mldg.,	
67-68	MONZA	4889446	rear end outer panel mldg. clip	2
61	MONZA (4-DR.)	4825964	**SCREW,** rr. body lock pillar scalp—(12.075)	8
65-69	ALL	4446130	**SCREW,** frt. fndr. whlse. opening mldg. and cap., rr. wheel opening mldg., rr. of rr. wheel opening cover, (No. 8—18 x 3/8")	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65-66	CORVAIR	4445612	WASHER, rr. of rr. fender mldg.	8
65-69	CORVAIR	4491276	SPACER, rr. of rr. fndr. mldg.	8

12.121 MOULDING UNIT—CLIP ASSY., Body Rear Panel

65-69	CORVAIR (exc. STD.)	3870741	rr. end outer panel	1
65-69	MONZA	4490708	CLIP ASSY., rr. end outer pnl. mldg.	5

12.180 PLATE—NUT—CLIP—CAM ASSY., Tail Gate

61	CORVAIR (STA. WAG.)	3784580	tail gate	1
62	CORVAIR (STA. WAG.)	6256969	tail gate—(8.147)	1
68	CORVAIR	4877816	NUT, front end outer panel mldg.	A.R.
	Not required in this group. See group 12.118	6276740	CLIP	
65-69	CORVAIR (exc. SPT. SED.)	4459521	CAM ASSY., front door inner panel	2

12.181 LID ASSEMBLY, Luggage Compartment

NOTE. See group 8.000 for Corvair Rear Engine Compartment Lid Assy.

60-63	CORVAIR	4482578		1
64	CORVAIR	4472619		1
65-68	CORVAIR	4548309		1
69	CORVAIR	8713175		1

12.182 MOULDING—PLATE UNIT, Luggage Compartment Lid

60-63	CORVAIR DELUXE (exc. MONZA).			
62	MONZA (STA. WAG.)	6276339	outer panel	1
65-69	CORVAIR (exc. STD.)	3870742	MOULDING UNIT, eng. compt. lid outer panel	1
65	CORVAIR	3865830	PLATE UNIT, lid name—(8.055)	1

12.183 CLIP, Luggage Compartment Lid Panel Moulding

60-63	CORVAIR DELUXE	6276977	outer	A.R.
60	DELUXE	6284309		7
63-64	MONZA	4888347	rr. compt. frt. panel ornament grille	A.R.
65-66	MONZA	4490709	CLIP ASSY., rr. compt. lid outer pnl. mldg.—(8.016)	6

12.184 HINGE—BOX ASSY.—SLEEVE—SCREW ASSY.—BOLT—SUPPORT—FILLER, Luggage Compartment Lid

65-69	CORVAIR	4508588		R.H.
65-69	CORVAIR	4508589		L.H.
60-64	CORVAIR	4304871	BOX ASSY., hinge	2
60-61	ALL	4803169	SLEEVE, frt. and rr. bolt insert—(10.464)	A.R.
65-69	CORVAIR	4514240	SCREW ASSY., hinge to lid (5/16—18 x 1) w/7/8" washer	4
65-69	CORVAIR	4514241	SCREW ASSY., hinge to body (1/4—20 x 1 w/3/4" washer	A.R.
64-68	CORVAIR	4405445	BOLT, hinge to lid (5/16"—18 x 1.0)—(10.463)	A.R.
65-69	CORVAIR	4511913	SUPPORT, hinge	R.H.
65-69	CORVAIR	4511915	SUPPORT, hinge	L.H.
ALL	ALL	3830213	FILLER (3/64" thick—40 ft. roll)—(10.696) (Note 1)	A.R.
ALL	ALL	3830214	FILLER (1/2" thick—60 ft. roll)—(10.696) (Note 1)	A.R.

NOTE 1 Cut as required.

HINGE—BOLT, Tail Gate

61-62	CORVAIR (STA. WAG.)	4836786		R.H.
61-62	CORVAIR (STA. WAG.)	4836787		L.H.
61	LAKEWOOD	4803388	BOLT, hinge to body	A.R.

12.186 PIN, Luggage Compartment Lid Hinge

60-64	CORVAIR	4305345		2

12.187 STRAP ASSY.—STRAP AND LINK ASSY.—ROD, Luggage Compartment Lid or Tail Gate Hinge

60-64	CORVAIR	4304868		R.H.
60-64	CORVAIR	4304869		L.H.
68-69	CONV.	9714076	STRAP AND LINK ASSY., rear compt. lid hinge	2
60-64	CORVAIR	6276176	ROD, torque	R.H.
60-63	CORVAIR	4856385	ROD, torque	L.H.
65-69	CORVAIR	4508590	ROD, frt. compt. lid hinge torque	R.H.
65-69	CORVAIR	4508591	ROD, frt. compt. lid hinge torque	L.H.

12.195 PARTS, Tail Gate

61-62	CORVAIR (STA. WAG.)	4803970	HANDLE, outside	1
61-62	CORVAIR (STA. WAG.)	4803962	STRIKER, lock	1
68	CORVAIR		CLIP, frt. dr. lk. rem. cont. to panel,	

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

69	CORVAIR (SPT. CPE.)	4711608	frt. dr. lk. rem. cont. to pnl. clip	A.R.
62	CORVAIR (STA. WAG.)	4806236	GASKET, outside handle	2
	Not required in this group. See group 16.353	4168356	RING	
65-67	ALL	4780514	DEFLECTOR, inner panel water—(10.355)	A.R.

12.203 SUPPORT ASSY., Luggage Compartment Lid Lock

61-64	CORVAIR	6284003		1
65-69	CORVAIR	4501801	upr.	1
65-69	CORVAIR	4528488	lower	1

12.212 BUMPER, Luggage or Engine Compartment Lid

60-65	CORVAIR	4721222	stop on lid	2
65-68	CORVAIR	4872948	frt. compt.	2
65-69	CORVAIR	4493010	eng. compt. lid (on lid)	2
	Not required in this group. See group 12.195	4749999		

12.237 STRIKER—PLATE—SCREW—BOLT—SPACER, Luggage Compartment Lid Lock

60-69	CORVAIR	4784253		1
	Not required in this group. See Group 8.080	4452596		
	Not required in this group. See group 8.080	4479247		
60-69	CORVAIR	4753882	PLATE, striker retainer	1
64	CORVAIR	4406866	SCREW, motor compt. lid hinge to mfct. lid lock striker and lid hinge to body	A.R.
	Not required in this group. See group 16.335	3778601	SPACER	

BUMPER, End Gate Lock

	Not required in this group. See group 17.204	4762474		

12.242 LOCK ASSY.—SPRING—SCREW, Luggage Compartment Lid

60-69	CORVAIR	4459542		1
60-69	CORVAIR	9711809	SPRING, lock	1
	Not required in this group. See group 16.350	4577250	SCREW	

LOCK ASSY. and PARTS, Tail Gate

61-62	CORVAIR (STA. WAG.)	4804069		1
61	LAKEWOOD	4676731	SCREW ASSY., lock striker—(10.570)	A.R.

12.246 CLIP, Engine Compartment Lid

65-68	CORVAIR w/Hi Perf.	3829006	emblem—(8.147)	1

12.247 GASKET, Luggage Compartment Lid Lock Cylinder

60-64	CORVAIR	6278529		1
65-69	CORVAIR	4484911		1

12.248 CYLINDER ASSY.—CYLINDER UNIT—REPAIR UNIT, Luggage Compartment Lid Lock

60-64	CORVAIR	1097868	uncoded	1
67	CORVAIR	3910570	CYLINDER UNIT, uncoded	1
68	CORVAIR	3931615	CYLINDER UNIT, frt. compt. lock, rear compt. lock (uncoded)	1
69	ALL	3961303	CYLINDER UNIT, compartment lock uncoded	1
66	ALL	3888861	REPAIR UNIT, uncoded (Note 1)	1

NOTE 1 Includes lock cyl. (uncoded), lock case cap, shutter assy. and cap springs.

CYLINDER ASSY.—REPAIR UNIT, Tail Gate Lock

61-62	CORVAIR (STA. WAG.)	3888860	(10.550)	1
65	CORVAIR	3870975	REPAIR UNIT, front compartment	1

12.249 CYLINDER PARTS, Luggage Compartment Lid Lock

60-64	CORVAIR	3775432	HOUSING	1
62-69	ALL (exc. STA. WAG.)	7015899	HOUSING	1
65	CORVAIR	7029301	HOUSING	1
65	CORVAIR	7029300	CAP, case	1
60-62	CORVAIR,			
67-69	ALL (exc. STA. WAG.)	7001087	SPRING, cyl. coil	1
60-66	ALL	601260	SPRING UNIT (contains 144 pcs.)—(10.553)	A.R.
67-68	ALL	3901067	SPRING UNIT (contains 100 pcs.)—(10.553)	A.R.

"Reproduced by Detroit Iron.IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts

60	ALL	4719376	**RETAINER**, cylinder—(10.551)	1
61-64	CORVAIR	6282094	**RETAINER**, cylinder	1
65	CORVAIR	4495375	**RETAINER**, cylinder	1
66-69	CORVAIR	4547210	**RETAINER**, cylinder	1
60-68	ALL	601261	**RETAINER UNIT** (contains 12 retainers)—(10.553)	A.R.
67-68	ALL	3901061	**TUMBLER UNIT**, No. 1 (contains 100 pcs.)—(10.553)	A.R.
67-68	ALL	3901062	**TUMBLER UNIT**, No. 2 (contains 100 pcs.)—(10.553)	A.R.
67-68	ALL	3901063	**TUMBLER UNIT**, No. 3 (contains 100 pcs.)—(10.553)	A.R.
67-68	ALL	3901064	**TUMBLER UNIT**, No. 4 (contains 100 pcs.)—(10.553)	A.R.
67-68	ALL	3901065	**TUMBLER UNIT**, No. 5 (contains 100 pcs.)—(10.553)	A.R.

CYLINDER PARTS, Tail Gate

61	LAKEWOOD	3924150	**HOUSING** (10.552)	1
61-62	CORVAIR (STA. WAG.)	4587931	**GASKET**	1

12.252 SHAFT, Luggage Compartment Lid Locking Cylinder

60-64	CORVAIR	3788294	(3 7/8" long) (Note 1)	1
	NOTE 1 Cut to required length.			
65-69	CORVAIR	9703354		1

12.269 WEATHERSTRIP, Luggage and Engine Compartment Lid Gutter

60-64	CORVAIR	6276108		1
65	CORVAIR	4474883	luggage compt. lid	1
65	CORVAIR	4484836	eng. compt. lid	1
66	CORVAIR		eng. compt. lid,	
66-69	CORVAIR	7583485	luggage compt. lid	1
67	CORVAIR	7583477	rr. compt. lid	1
68	CORVAIR	7726266	eng. compt. lid	1

12.491 PILLAR ASSY.—BRACE—FILLER—PLUG, Center Body

60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4890790		R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4890791		L.H.
65-67	CORVAIR (4-DR.)	4468954	center	R.H.
65-67	CORVAIR (4-DR.)	4468955	center	L.H.
65-67	CORVAIR (4-DR.)	4499283	**BRACE**, ctr. pillar to flr. pan	2
60-64	CORVAIR (4-DR.)	4413674	**FILLER**, ctr. pillar outer pnl. lwr.	2
60-64	CORVAIR (4-DR.)	4744981	**PLUG**, pillar access hole (7/8)	2
	Not required in this group. See group 12.980	4804861	**PLUG**	

12.584 INSULATOR ASSY.—FOUNDATION, Rear Compartment

NOTE See illustration showing 1960-61 rear seat compartment.

65-67	CORVAIR (4-DR.)	4526622	compt. frt.	1
65-67	CORVAIR (4-DR.)	7629836	floor and div. pnl.	1
65-69	CORVAIR (SPT. CPE.)	4526621	compt. frt.	1
65-67	CORVAIR (SPT. CPE.)	7629835	floor and div. pnl.	1
65-68	MONZA (CONV.)	4504273	floor at conv. top well	1
65-68	MONZA (CONV.)	4504274	compt. frt. at kick-up	1

INSULATOR—FASTENER, Engine Compartment

61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6282794	division panel rear (Note 1)	1
61-62	CORVAIR (STA. WAG.)	6281379	cover panel (Note 1)	1
68-69	CORVAIR (SPT. CPE.)	7775652	floor and division panel	1
65-67	ALL	7583370	**FASTENER**, front insulator—(15.280)	A.R.

NOTE Made of 1 felt with black polyethylene covering on one side.

12.659 REINFORCEMENT ASSY., Hinge Pillar

65-66	CORVAIR	4528411	front body hinge pillar to duct	R.H.
65-66	CORVAIR	4528412	body hinge pillar to duct	L.H.

12.684 BRACE, Lock Pillar

62-64	MONZA (CONV.)	4867024	to pan	L.H.
65-69	MONZA (CONV.)	4437852	to pan	R.H.
65-69	MONZA (CONV.)	4437853	to pan	L.H.
65-68	CORVAIR (2-DR.)	4519555	to wheel	R.H.
65-68	CORVAIR (2-DR.)	4519556	to wheel	L.H.

12.768 SUPPORT—BRACE ASSY.—REINFORCEMENT, Rear Seat Back

65-69	CORVAIR STD. (SPT. CPE.)	4518792	frame lwr. center	R.H.
65-67	CORVAIR STD.	4468391	**SUPPORT ASSY.**	1
68-69	CORVAIR	7734368	**SUPPORT ASSY.**	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

68-69	CORVAIR (SPT. CPE.) (exc. MONZA)	7779451	**SUPPORT ASSY.**	1
65-69	MONZA (CONV.)	7787509	**BRACE ASSY.**	1
65-69	MONZA (CONV.)	4461785	**REINFORCEMENT,** brace	1

12.800 GRILLE, Cowl Top Ventilator

60-64	CORVAIR	6275604		1
65-69	CORVAIR	4437696		1

12.801 SEAL, Hood Ledge (cowl)

69	CORVAIR w/C.A.C.	3940279	upper C.A.C.	1

12.803 PAN ASSY.—BAR ASSY.—FRAME, Cowl and Dash

64	CORVAIR (exc. CONV.)	4459117	toe	1
60-64	CORVAIR (exc. CONV.)	6277552	**BAR ASSY.,** toe pan cross lower	1
62-64	MONZA (CONV.)	4877785	**BAR ASSY.,** toe pan cross lower	1
65-68	CORVAIR	7594966	**BAR ASSY.,** toe pan cross	1
68	CORVAIR	7796981	**BAR ASSY.,** toe pan cross	1
69	CORVAIR	8768359	**BAR ASSY.,** toe pan cross	1
65-69	CORVAIR	4534014	**FRAME,** windshield lower	1

12.804 PANEL—DEFLECTOR—PLUG—STRIP—SEAL, Cowl Side

60-64	CORVAIR	4432017	vent duct	R.H.
60-62	CORVAIR	6275892	vent duct	L.H.
63-64	CORVAIR	4432018	top vent. duct side	L.H.
65-69	CORVAIR	4437703	duct	R.H.
65-69	CORVAIR	4437702	duct	L.H.
60-64	CORVAIR	4878326	**PANEL ASSY.,** lower	R.H.
63-64	CORVAIR	4878327	**PANEL ASSY.,** lower	L.H.
65-66	CORVAIR	4543279	**PANEL ASSY.,** dash lower	1
65-69	CORVAIR (exc. CONV.)	7657771	**PANEL ASSY.,** dash upr. and center duct	1
65-66	MONZA (CONV.)	4472413	**PANEL ASSY.,** dash upr. and center duct	1
67	CORVAIR	7653238	**PANEL ASSY.,** dash lwr.	1
67-69	CORVAIR (CONV.)	7657772	**PANEL ASSY.,** dash upr. and ctr. duct	1
68	CORVAIR	7748058	**PANEL ASSY.,** lower dash	1
69	CORVAIR	8768146	**PANEL ASSY.,** dash lower	1
65-69	CORVAIR	4530958	**DEFLECTOR,** duct panel water	R.H.
65-69	CORVAIR	4530959	**DEFLECTOR,** duct panel water	L.H.
64-67	CORVAIR		**PLUG,** lwr. panel access hole,	
68-69	CORVAIR	4859119	steering gear access hole	A.R.
64	CORVAIR	6282592	**PLUG,** rr. qtr. inner access. hole rr.—(12.941)	L.H.
65-69	CORVAIR	4802102	**PLUG,** floor pan hole (1")	A.R.
62-64	CORVAIR	4870545	**STRIP,** lower panel sealing, cowl lower to fender sealing	4
60-64	CORVAIR	6257294	**SEAL,** toe panel tunnel	1
65-69	CORVAIR	3858772	**SEAL,** toe pan tunnel	1

12.807 FRAME ASSY., Windshield Upper

61-64	CORVAIR (exc. LAKEWOOD, CONV.)	4431876	inner upper	1
62-64	MONZA (CONV.)	4431897	upper	1
65-67	CORVAIR (exc. CONV.)	4437663	inner upper	1
65-67	MONZA (CONV.)	4534103	inner upper	1
68-69	CORVAIR (SPT. CPE.)	7748162	inner upper	1
68-69	CORVAIR (CONV.)	7727048	inner upper	1

12.810 PANEL, Roof

60-64	CORVAIR (2-DR.)	6277313	extension	R.H.
60-64	CORVAIR (2-DR.)	6277314	extension	L.H.
60-64	CORVAIR (2-DR.)	6277312	(less drip moulding)	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6275641	(less drip mouldings)	1
65	CORVAIR (4-DR.)	4437725		1
65-69	CORVAIR (SPT. CPE.)	7596400	(less drip mouldings)	1
65-68	CORVAIR (SPT. CPE.)	4541021	extension	R.H.
65-68	CORVAIR (SPT. CPE.)	4541022	extension	L.H.
66-67	CORVAIR (SED.)	7596480	(less drip mouldings)	1

12.815 SUPPORT—STRAP—INSULATOR—NUT—SCREW, Roof Luggage

61-64	CORVAIR (4-DR.)	3784108		R.H.
63-64	CORVAIR (STA. WAG.)	3834283	**STRAP,** longitudinal	6
ALL	ALL	3788017	**INSULATOR,** cross, strap. center (6 long) (Note 4)	8
	NOTE 4 Cut as required.			
ALL	ALL	3866577	**INSULATOR,** strap (25 foot roll) (curved surface)	A.R.
ALL	ALL	3866578	**INSULATOR,** strap (25 foot roll) (flat surface)	A.R.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

ALL	ALL	528846	**NUT,** carrier to roof, deck lid carrier mounting (1 1/4—20, special sealing)	A.R.
ALL	ALL	9419728	**SCREW,** luggage carrier support to base	A.R.
ALL	ALL	3892100	**SCREW,** cross strap (8—32 x 1 1/8)	4
66-68	ALL (exc. STA. WAG.),			
69	CORVAIR	3895152	**SCREW** (1 1/4—20 x 3/4)	4

RACK UNIT AND PARTS, Roof Ski

66-68	ALL	3900396	ski	2
69	ALL	993782	demountable ski	1

CARRIER UNIT AND PARTS, Luggage Rear Compartment Deck Lid

69	CORVAIR	993737		1
65	ALL	3874262	**FRAME ASSY.**	1
65	ALL	3874284	**RAIL ASSY.**	6
65	ALL	3874264	**SUPPORT,** frt. (1 1/4 long)	2
65	ALL	3874283	**SUPPORT ASSY.,** rr.	1
65	ALL	3874285	**HANGER**	6
65-66	ALL	3874282	**PLATE,** mounting	4
66-69	CORVAIR	3895152	**SCREW** (1 1/4"—20 x 3/4")	4
67-68	ALL	3900397	**SLEEVE**	2
66-68	ALL	3900398	**PIN,** ski rack lk.	2
67	ALL	3931559	**CAP,** tube closer (Note 1)	A.R.

NOTE 1 Must be used with carrier unit 986469.

12.840 PANEL, Front Body Hinge

60	2-DR. (exc. MONZA),			
60	4-DR. (2nd type),			
61-64	CORVAIR (exc. CONV.)	4431664	pillar front	L.H.
60-63	CORVAIR	6282472	pillar inner rear	R.H.
60-63	CORVAIR	6282473	pillar inner rear	L.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4891952	pillar outer rear	R.H.
60-64	CORVAIR (exc. STA. WAG., CONV.)	4891953	pillar outer rear	L.H.
62-64	MONZA (CONV.)	4431666	pillar front	L.H.
62-64	MONZA (CONV.)	4891956	pillar outer rear	R.H.
62-63	MONZA (CONV.)	4435585	pillar outer rear	L.H.
60	2-DR. (exc. MONZA),			
60	4-DR. (2nd type),			
62-64	CORVAIR (exc. CONV.)	4431660	pillar front	R.H.
63-64	MONZA (CONV.)	4431662	pillar front	R.H.
64	CORVAIR	4431672	**PANEL ASSY.,** pillar inner rear	R.H.
64	CORVAIR	4431673	**PANEL ASSY.,** pillar inner rr.	L.H.
64	MONZA (CONV.)	4435584	**PANEL ASSY.,** pillar outer rr.	R.H.
65-66	CORVAIR (exc. CONV.)	7595274	**PANEL ASSY.,** pillar	R.H.
65-66	CORVAIR (exc. CONV.)	7642649	**PANEL ASSY.,** pillar	L.H.
65-66	MONZA (CONV.)	4534142	**PANEL ASSY.,** pillar	R.H.
65-66	MONZA (CONV.)	7642651	**PANEL ASSY.,** pillar	L.H.
67	CORVAIR (exc. CONV.)	7689120	**PANEL ASSY.,** pillar	R.H.
67	CORVAIR (exc. CONV.)	7689121	**PANEL ASSY.,** pillar	L.H.
67-68	MONZA (CONV.)	7689122	**PANEL ASSY.,** pillar	R.H.
67-68	MONZA (CONV.)	7689123	**PANEL ASSY.,** pillar	L.H.
68-69	CORVAIR (SPT. CPE.)	7727051	**PANEL ASSY.,** pillar	R.H.
68-69	CORVAIR (SPT. CPE.)	7727052	**PANEL ASSY.,** pillar	L.H.
69	CORVAIR (CONV.)	7785167	**PANEL ASSY.,** pillar	R.H.
69	CORVAIR (CONV.)	7785168	**PANEL ASSY.,** pillar	L.H.

12.895 PANEL ASSY., Front Door Outer

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277992		R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4897357		L.H.
60-64	CORVAIR (4-DR.)	6279458		R.H.
60-64	CORVAIR (4-DR.)	4897359		L.H.
62-64	MONZA (CONV.)	4872220		R.H.
62-64	MONZA (CONV.)	4898375		L.H.
65-69	CORVAIR (2-DR.)	4479847		L.H.
65-69	CORVAIR (2-DR.)	4479846		R.H.
65-67	CORVAIR (4-DR.)	4468499		L.H.
65-67	CORVAIR (4-DR.)	4437600		R.H.

12.913 PANEL ASSY., Rear Door Outer

60-64	CORVAIR (4-DR.)	6282073		L.H.
60-64	CORVAIR (4-DR.)	6282072		R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-67	CORVAIR (4-DR.)	4468952		R.H.
65-67	CORVAIR (4-DR.)	4468953		L.H.

12.934 PANEL AND PARTS, Door Rocker

60-64	CORVAIR (4-DR.)	4862082	opening outer	R.H.
60-64	CORVAIR (4-DR.)	4862083	opening outer	L.H.
62-64	MONZA (CONV.)	4866880	inner	R.H.
62-64	MONZA (CONV.)	4866881	inner	L.H.
62	MONZA (CONV.)	4413682	opening outer	R.H.
62-64	MONZA (CONV.)	4413683	opening outer	L.H.
65-69	CORVAIR (exc. CONV.)	7787345	inner rear	R.H.
65-67	CORVAIR (exc. CONV.)	4437965	inner rear	L.H.
65-68	MONZA (CONV.)	4451170	dr. opg. outer	R.H.
65-68	MONZA (CONV.)	4451171	dr. opg. outer	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4862086	**PANEL ASSY.**, opening outer	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4862087	**PANEL ASSY.**, opening outer	L.H.
61-64	CORVAIR (exc. CONV.)	4888456	**PANEL ASSY.**, inner front	R.H.
61-64	CORVAIR (exc. CONV.)	4888457	**PANEL ASSY.**, inner front	L.H.
61-64	CORVAIR (exc. CONV.)	4862132	**PANEL ASSY.**, inner rear	R.H.
61-64	CORVAIR (exc. CONV., LAKEWOOD)	4862133	**PANEL ASSY.**, inner rear	L.H.
65-66	CORVAIR (exc. CONV.)	4465257	**PANEL ASSY.**, inner frt.	R.H.
65-66	CORVAIR (exc. CONV.)	4465258	**PANEL ASSY.**, inner frt.	L.H.
65-66	MONZA (CONV.)	4467640	**PANEL ASSY.**, inner	R.H.
65-66	MONZA (CONV.)	4467641	**PANEL ASSY.**, inner	L.H.
65-69	CORVAIR (exc. CONV.)	4472425	**PANEL ASSY.**, dr. opg. our	R.H.
65-69	CORVAIR (exc. CONV.)	4472426	**PANEL ASSY.**, dr. opg. outer	L.H.
67-69	MONZA (CONV.)	7668642	**PANEL ASSY.**, inner	R.H.
67-69	MONZA (CONV.)	7668643	**PANEL ASSY.**, inner	L.H.
67-69	CORVAIR (exc. CONV.)	7668646	**PANEL ASSY.**, inner frt.	R.H.
67-69	CORVAIR (exc. CONV.)	7668647	**PANEL ASSY.**, inner frt.	L.H.
60	ALL,			
61-64	CORVAIR (2-DR.)	6278450	**COVER**, inner dust	1
61-62	CORVAIR (STA. WAG.),			
65-69	CORVAIR	4615576	**COVER**, rocker inner panel dust (rubber)	A.R.
62-64	MONZA (2-DR. SED.)	4894238	**FILLER**, rr. seat supt. to rocker inner panel	L.H.
62-64	MONZA (CONV.)	4866888	**REINFORCEMENT**, inner lower front	R.H.
62-64	MONZA (CONV.)	4866889	**REINFORCEMENT**, inner lower front	L.H.
62-64	MONZA (CONV.)	4866890	**REINFORCEMENT**, inner lower rear	R.H.
62-64	MONZA (CONV.)	4866892	**REINFORCEMENT**, inner upper rear	R.H.
62-64	MONZA (CONV.)	4866893	**REINFORCEMENT**, inner upper rear	L.H.
64	MONZA (CONV.)	4411312	**REINFORCEMENT**, inner upr. frt.	R.H.
64	MONZA (CONV.)	4411313	**REINFORCEMENT**, inner upr. frt.	L.H.
65-67	CORVAIR (4-DR.)	7674896	**REINFORCEMENT**, inner pnl. at ctr. pillar	R.H.
65-67	CORVAIR (4-DR.)	7674897	**REINFORCEMENT**, inner pnl. at ctr. pillar	L.H.
65-69	MONZA (CONV.)	4451172	**REINFORCEMENT**, outer pnl.	R.H.
65-69	MONZA (CONV.)	4451173	**REINFORCEMENT**, outer pnl	L.H.
65-69	CORVAIR (CONV.)	4526874	**REINFORCEMENT**, inner ext. to rocker panel	R.H.
65-69	CORVAIR (CONV.)	4526875	**REINFORCEMENT**, inner ext. to rocker panel	L.H.
65-69	CORVAIR (exc. CONV.)	4437698	**EXTENSION**, inner frt.	R.H.
65-69	CORVAIR (exc. CONV.)	4437699	**EXTENSION**, inner frt.	L.H.
65-69	MONZA (CONV.)	8715236	**EXTENSION**, inner frt.	R.H.
65-68	MONZA (CONV.)	4437701	**EXTENSION**, inner frt.	L.H.
69	CORVAIR (CONV.)	8715237	**EXTENSION**, inner front	L.H.
62-64	CORVAIR (exc CONV.)	4867620	**CONNECTOR**, rocker to pillar hose	R.H.
62-64	CORVAIR (exc. CONV.)	4867621	**CONNECTOR**, rocker to pillar hose	L.H.
62-64	MONZA (CONV.)	4871815	**CONNECTOR**, rocker to pillar hose rr. R.H.	
62-64	MONZA (CONV.)	4871816	**CONNECTOR**, rocker to pillar hose rr.	L.H.
62-64	MONZA (CONV.)	4875403	**DEFLECTOR ASSY.**, inner to hinge pillar air	R.H.
62-64	MONZA (CONV.)	4875404	**DEFLECTOR ASSY.**, inner to hinge pillar air	L.H.

12.940 PANEL, Rear Quarter Side Outer

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277315	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277316	L.H.
60-64	CORVAIR (4-DR. SEDAN)	4889426	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4889427	L.H.
62-64	MONZA (CONV.)	4867000	R.H.
62-64	MONZA (CONV.)	4867001	L.H.
65-67	CORVAIR (4-DR.)	4533823	R.H.
65-67	CORVAIR (4-DR.)	4533824	L.H.
65-67	CORVAIR (SPT. CPE.)	7595876	R.H.
65-67	CORVAIR (SPT. CPE.)	7595877	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit Iron

65-67	MONZA (CONV.)	4437742		R.H.
65-67	MONZA (CONV.)	4437743		L.H.
68-69	CORVAIR (SPT. CPE.)	7742784		R.H.
68-69	CORVAIR (SPT. CPE.)	7742785		L.H.
68-69	CORVAIR (CONV.)	7742788		R.H.
68-69	CORVAIR (CONV.)	7742789		L.H.

PANEL—FILLER—EXTENSION, Rear Quarter Side Outer Extension

65-69	CORVAIR	4447522	**FILLER**, qtr. pnl. to rail	R.H.
65-69	CORVAIR	7631090	**FILLER**, qtr. pnl. to rail	L.H.
65-69	CORVAIR (exc. CONV.)	4464900	**EXTENSION**, qtr. pnl. to rail floor	R.H.
65-69	CORVAIR (exc. CONV.)	4464901	**EXTENSION**, qtr. pnl. to rail floor	L.H.
65-69	CORVAIR (CONV.)	4533790	**EXTENSION**, qtr. pnl. to rail filler	R.H.
65-69	CORVAIR (CONV.)	4533791	**EXTENSION**, qtr. pnl. to rail filler	L.H.

12.941 PANEL ASSY. PANEL—COVER—PLUG—EXTENSION—POCKET ASSY.—DEFELCTOR, Rear Quarter Side Inner

60-64	CORVAIR STD. (2-DR.)	4894891		L.H.
60-64	CORVAIR STD. (2-DR.)	4894890		R.H.
61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4865536	w/wheelhouse	R.H.
61-64	CORVAIR (2-DR.) (exc. CONV.)	4865534	w/wheelhouse	R.H.
61-64	CORVAIR (2-DR.) (exc. CONV.)	4458590	w/wheelhouse	L.H.
62-64	MONZA (CONV.)	4874987	right, w/wheelhouse	1
62-64	MONZA (CONV.)	4458591	w/wheelhouse	L.H.
63-64	CORVAIR (4-DR.)	4458593	w/wheelhouse	L.H.
65-66	CORVAIR (4-DR.)	7648812	upr	R.H.
65-67	CORVAIR (4-DR.)	7681977	upr.	L.H.
65-69	CORVAIR (SPT. CPE.)	7631195	side inner and whlhse	R.H.
65-69	CORVAIR (SPT. CPE.)	7631196	side inner and whlhse	L.H.
65-69	MONZA (CONV.)	4464151	frt	R.H.
65-69	MONZA (CONV.)	4464152	frt	L.H.
65-69	MONZA (CONV.)	4480468	side inner and whlhse	R.H.
65-69	MONZA (CONV.)	4480469	side inner and whlhse	L.H.
67	CORVAIR (4-DR.)	7681976	inner	R.H.
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894887	**PANEL**	R.H.
60-64	CORVAIR DELUXE (2-DR.) (exc. CONV.)	4894888	**PANEL**	L.H.
62-64	MONZA (CONV.)	4458532	**PANEL**, inner front	R.H.
62-64	MONZA (CONV.)	4458533	**PANEL**, inner front	L.H.
65-67	CORVAIR (4-DR.)	4437762	**PANEL**, lwr	R.H.
65-67	CORVAIR (4-DR.)	4437763	**PANEL** lwr	L.H.
65-67	CORVAIR (4-DR.)	4480464	**PANEL**, side inner and whlhse	R.H.
65-67	CORVAIR (4-DR.)	4480465	**PANEL**, side inner and whlhse	L.H.
65-69	CORVAIR (SPT. CPE.)	7628247	**PANEL**	R.H.
65-69	CORVAIR (SPT. CPE.)	7628248	**PANEL**	L.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.),			
62-64	CORVAIR (2-DR.)	7645222	**COVER**, access hole front, rear compt. panel rnfct. access hole (4" square—rubber)	2
62-64	MONZA (CONV.)	4876085	**COVER**, access hole front	R.H.
62-64	MONZA (CONV.)	4876086	**COVER**, access hole front	L.H.
65-69	MONZA (CONV.)	4518793	**COVER ASSY.**, access hole front	R.H.
65-69	MONZA (CONV.)	4518794	**COVER ASSY.**, access hole front	L.H.
61-64	CORVAIR (exc. STA. WAG.)	6282592	**PLUG**, access hole rear	L.H.
63	MONZA (CONV.)	4871373	**PLUG**, rr. qtr. inner and whlhse. pnl. ext.	2
65-67	CORVAIR (CONV.)	4771203	**PLUG**, access hole frt.—(12.980)	A.R.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6279210	**EXTENSION**, panel rear	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6279211	**EXTENSION**, panel rear	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6280365	**EXTENSION**, wheelhouse panel upper	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV)	6280366	**EXTENSION**, wheelhouse panel upper	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4406404	**EXTENSION**, wheelhouse panel frt. outer	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4406405	**EXTENSION**, wheelhouse panel frt. outer	L.H.
62-64	MONZA (CONV.)	4872546	**EXTENSION**, panel to pan brace	R.H.
62-64	MONZA (CONV.)	4872547	**EXTENSION**, panel to pan brace	L.H.
61-62	CORVAIR (exc. STA. WAG.),			
63-64	CORVAIR	4402627	**POCKET ASSY.**, battery	L.H.
60-68	ALL	4780514	**DEFLECTOR**, water—(10.355)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

12.942 PANEL—REINFORCEMENT, Rear Body Lock Pillar

60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6275674	inner lower	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6275675	inner lower	L.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6278240	**PANEL ASSY.**, inner upper	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6278241	**PANEL ASSY.**, inner upper	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4418602	**PANEL ASSY.**, outer	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4418603	**PANEL ASSY.**, outer	L.H.
60-64	CORVAIR (4-DR.)	4418604	**PANEL ASSY.**, outer upper	R.H.
60-64	CORVAIR (4-DR.)	4418605	**PANEL ASSY.**, outer upper	L.H.
63-64	MONZA (CONV.)	4886646	**PANEL ASSY.**, outer upper	R.H.
63-64	MONZA (CONV.)	4886647	**PANEL ASSY.**, outer upper	L.H.
65-69	CORVAIR (2-DR.)	4437823	**REINFORCEMENT**, outer pnl.	R.H.
65-69	CORVAIR (2-DR.)	4437824	**REINFORCEMENT**, outer pnl.	L.H.
65-67	CORVAIR (4-DR.)	4437790	**REINFORCEMENT**, outer pnl.	R.H.
65-67	CORVAIR (4-DR.)	4437791	**REINFORCEMENT**, outer pnl.	L.H.
62-64	CORVAIR (4-DR. SED.) (exc. MONZA, folding seat)	4865157	**REINFORCEMENT ASSY.**, outer panel lower	R.H.
61	4-DR. SED.,			
62-64	CORVAIR (4-DR. SED.) (exc. MONZA, folding seat)	4865158	**REINFORCEMENT ASSY.**, outer panel lower	L.H.
62	CORVAIR (4-DR. SED.) w/folding seat (exc. MONZA),			
62	MONZA (4-DR. SED.)	4897154	**REINFORCEMENT ASSY.**, outer panel lower	R.H.
62-64	MONZA (CONV.)	4418608	**REINFORCEMENT ASSY.**, outer panel	R.H.
62-64	MONZA (CONV.)	4418609	**REINFORCEMENT ASSY.**, outer panel	L.H.
63-64	CORVAIR (4-DR.) w/folding seat	4897154	**REINFORCEMENT ASSY.**, outer panel lwr.	R.H.
63-64	CORVAIR (4-DR.) w/folding seat	4897155	**REINFORCEMENT ASSY.**, outer panel lwr.	L.H.

12.944 PANEL ASSY.—PANEL AND PARTS, Wheelhouse

60-64	CORVAIR	4429235	frt. upper	R.H.
60-64	CORVAIR	4461886	frt. upper	L.H.
61-64	CORVAIR	4871672	frt. lower	R.H.
62-64	MONZA (CONV.)	4459121	outer	L.H.
61-64	CORVAIR	4896277	front lower	L.H.
63-64	MONZA (CONV.)	4459120	outer	R.H.
65-68	CORVAIR	4527105	rr. wheelhouse rr.	L.H.
62-64	MONZA (CONV.)	4406240	**PANEL**, rr. outer	R.H.
65-68	CORVAIR	7648770	**PANEL**, frt. outer center	L.H.
65-69	CORVAIR	8715189	**PANEL**, frt. outer rear	L.H.
65-68	CORVAIR	7649181	**PANEL**, frt. compt. whlhse. inner	1
65-69	CORVAIR	8715100	**PANEL**, frt. outer	R.H.
65-68	CORVAIR	7616532	**PANEL**, frt. outer frt.	L.H.
65-68	CORVAIR	4437772	**PANEL**, rr. whlhse. frt.	R.H.
65-68	CORVAIR	4437773	**PANEL**, rr. whlhse. frt.	L.H.
65-68	CORVAIR	4437776	**PANEL**, rr. whlhse. frt.	R.H.
65-67	CORVAIR (4-DR.)	4490097	**PLATE ASSY.**, whlhse. to qtr. baffle upper	L.H.
65-67	CORVAIR (4-DR.)	4490096	**PLATE ASSY.**, whlhse. to qtr. baffle upper	R.H.
65-69	CORVAIR (SPT. CPE.)	4490098	**PLATE ASSY.**, whlhse. to qtr. baffle upper	R.H.
65-69	CORVAIR (SPT. CPE.)	4490099	**PLATE ASSY.**, whlhse. to qtr. baffle upper	L.H.
65-69	CORVAIR (CONV.)	4493108	**PLATE ASSY.**, whlhse. to qtr. baffle upper	R.H.
65-69	CORVAIR (CONV.)	4493109	**PLATE ASSY.**, whlhse. to qtr. baffle upper	L.H.
60-64	CORVAIR (exc. STA. WAG.)	6282510	**SUPPORT**, panel to wheelhouse	2
60-64	CORVAIR	6280524	**COVER**, frt. upr. pnl. frame access, left	1
65-69	CORVAIR	4503859	**BRACE**, frt. compt. side gutter to whlhse.	2
60-64	CORVAIR	6279560	**EXTENSION**, frt. wheelhouse panel right front w/o headlight pocket	1
60-64	CORVAIR	4874145	**EXTENSION**, frt. wheelhouse upper panel front	L.H.
65-69	CORVAIR	4458410	**EXTENSION**, rr. whlhse. pnl. lwr. rr.	R.H.
65-69	CORVAIR	4458411	**EXTENSION**, rr. whlhse. pnl. lwr. rr.	L.H.
65-68	CORVAIR	4447524	**FILLER**, rr. whlhse. pnl. to side rail	R.H.
65-68	CORVAIR	4447525	**FILLER**, rr. whlhse. pnl. to side rail	L.H.
65-69	CORVAIR	4472417	**FILLER ASSY.**, frt. whlhse. inner pnl. to rail	R.H.
65-69	CORVAIR	7636559	**FILLER ASSY.**, frt. whlhse. inner pnl. to rail	L.H.
65-69	CORVAIR (SPT. CPE., CONV.)	4529686	**REINFORCEMENT**, rr. whlhse. otr. pnl.	R.H.
65-69	CORVAIR (SPT. CPE., CONV.)	4529687	**REINFORCEMENT**, rr. whlhse. otr. pnl.	L.H.
65-69	CORVAIR (CONV.)	4536083	**SUPPORT ASSY.**, frt. whlhse. dampener	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts IRON

65-69	CORVAIR (CONV.)	4536084	**SUPPORT ASSY.,** frt. whlhse. dampener	L.H.

12.945 DOOR ASSY. and PARTS, Gas Tank Filler Neck Compartment

60-64	CORVAIR	6282339		1
65-69	CORVAIR	4532723		1
65-69	CORVAIR	4438020	**POCKET,** neck	1
61-64	CORVAIR	4848405	**POCKET ASSY.**	1
65-69	CORVAIR	4468589	**DEFLECTOR,** filler pocket overflow	1
60-64	CORVAIR	6276140	**SPRING,** door hinge	1
65-68	CORVAIR,			
65-69	CORVAIR	986078	**GUARD UNIT,** door	1
60-62	CORVAIR	4826780	**BUMPER,** door—(12.212)	A.R.
65-67	CORVAIR,			
69	CORVAIR	4818451	**BUMPER,** door	1

12.946 STICK, Trim

65-69	CORVAIR (CONV.)	4487824	rear belt rail front	2
65-69	CORVAIR (CONV.)	4487677	rear belt rail rear	2

12.952 BOW, Roof

60-64	CORVAIR (exc. CONV., STA. WAG.)	6282989	No. 1	1
65-67	CORVAIR (exc. CONV.)	4437754		1
65-67	CORVAIR (4-DR.)	4536837	longitudinal	1
68-69	CORVAIR (SPT. CPE.)	7728831		1

12.953 SUPPORT, Dome Lamp

60-64	CORVAIR (2-DR.) (exc. CONV.)	6279241		1

12.954 CLIP—SUPPORT, Headlining Wire

60-62	CORVAIR	4765880	support	A.R.
65-67	CORVAIR (SED.)		right, No. 1, 2, 4,	
65-69	CORVAIR (SPT. CPE.)	4412285	right, No. 1, 2	A.R.
61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4769973	**SUPPORT,** wire	1

12.955 WIRE, Headlining Listing Support

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277912	No. 1	1
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277913	No. 2	1
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277914	No. 4	1
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277915	No. 5	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6277817	No. 1	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6277818	No. 2	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	4889709	No. 4	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6277820	No. 5	1
65-67	CORVAIR (SED.)		No. 1, 2, 4,	
65-69	CORVAIR (SPT. CPE.)	4483171	No. 1	A.R.
65-69	CORVAIR (SPT. CPE.)	4489670	No. 2	1
65-69	CORVAIR (SED. SPT. CPE.)	4483173	No. 3	1
65-68	CORVAIR (SPT. CPE.)		No. 4,	
67	CORVAIR (SED.)	4489671	No. 5	1
65-66	CORVAIR (SED.)	4483172	No. 5	1
67	CORVAIR (SPT. SED.)	7695818	No. 5	1

12.956 RAIL ASSY., Side Roof Outer

60-64	CORVAIR (2-DR.)	6277722		R.H.
60-64	CORVAIR (2-DR.)	6277723		L.H.
65-68	CORVAIR (4-DR.)	4463284		R.H.
65-67	CORVAIR (4-DR.)	4463285		L.H.
65-69	CORVAIR (SPT. CPE.)	7681994		R.H.
65-66	CORVAIR (SPT. CPE.)	7644725		L.H.
67-69	CORVAIR (SPT. CPE.)	7681995		L.H.

12.957 RAIL, Side Roof-Inner

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277336	front	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

60-64	CORVAIR (2-DR.) (exc. CONV.)	6277337	front	L.H.
61-63	CORVAIR (4-DR.) (2nd design) (exc. STA. WAG.),			
64	CORVAIR (2-DR. SED.)	4411396	rear	R.H.
64	CORVAIR (2-DR. SED.)	4411397	rear	L.H.
65-67	CORVAIR (SPT. CPE.)	7752293	rear (Note 1)	R.H.
65-67	CORVAIR (SPT. CPE.)	7652697	rear (Note 1)	L.H.
68-69	CORVAIR (SPT. CPE.)	7752293	inner rear	R.H.
68-69	CORVAIR (SPT. CPE.)	7752294	inner rear	L.H.

NOTE 1. Includes provisions for frt. seat shldr. strap assy. attachment.

12.964 PANEL ASSY.—REINFORCEMENT—FILLER, Back Window

60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6278478	inner side	R.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6278479	inner side	L.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	4405624	inner	1
60-64	CORVAIR DELUXE (4-DR.) (exc. STA. WAG.)	6278452	center	1
65-67	CORVAIR (4-DR.)	4437780	inner upper	1
65-69	CORVAIR (SPT. CPE.)	4437796	inner	1
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277385	**REINFORCEMENT,** lower corner	R.H.
60-64	CORVAIR (2-DR.) (exc. CONV.)	6277386	**REINFORCEMENT,** lower corner	L.H.
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6278250	**FILLER,** upper corner	R.H.
65-67	CORVAIR (4-DR.)	4468444	**FILLER,** lower corner	R.H.
65-67	CORVAIR (4-DR.)	4468445	**FILLER,** lower corner	L.H.

12.966 PANEL ASSY.—HINGE ASSY.—REINFORCEMENT, Rear End

60-64	CORVAIR (exc. STA. WAG., Turbocharger)	4411723	outer	1
62-64	CORVAIR w/Turbocharger	4411724	outer	1
61-64	CORVAIR (exc. STA. WAG.)	4411718	inner	1
65-69	CORVAIR	7582508		1
65-66	CORVAIR w/Turbo.	7582510		1

PANEL ASSY., Front End

60	ALL	6279709		1
61-64	CORVAIR	4400685		1
65-69	CORVAIR	7623110		1

12.971 PANEL—FILLER—REINFORCEMENT—GRILLE—DEFLECTOR, Engine and Luggage Compartment

61	CORVAIR (2-DR.),			
62-64	CORVAIR (exc. STA. WAG.)	4872260	division lower	1
65-69	CORVAIR	7695766	mtr. compt. vent duct	1
60-64	CORVAIR (4-DR. SEDAN)	4880574	**PANEL ASSY.,** front	1
63-64	CORVAIR (2-DR.) (exc. CONV.)	4880573	**PANEL ASSY.,** rr. compt. frt.	1
65-67	CORVAIR (4-DR.)	7589130	**PANEL ASSY.,** rr. compt. division	1
65-69	CORVAIR (SPT. CPE.)	7589129	**PANEL ASSY.,** rr. compt. division	1
65-69	CORVAIR (CONV.)	7589131	**PANEL ASSY.,** rr. compt. division	1
60-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6276072	**FILLER,** front panel end	L.H.
65-69	CORVAIR	4474560	**FILLER,** compt. division pnl. to side rail	R.H.
65-69	CORVAIR	4474561	**FILLER,** compt. division pnl. to side rail	L.H.
66-69	CORVAIR	7602266	**FILLER,** vent duct end	R.H.
66-69	CORVAIR	7602267	**FILLER,** vent duct end	L.H.
66-67	CORVAIR (4-DR.)	7639142	**REINFORCEMENT,** mtr. compt. vent. grille	1
65-69	CORVAIR (SPT. CPE.)	4437812	**REINFORCEMENT,** mtr. compt. vent. grille	1
65-69	CORVAIR (CONV.)	4437826	**REINFORCEMENT,** mtr. compt. vent. grille	1
66-67	CORVAIR (4-DR.)	7639142	**REINFORCEMENT,** mtr. compt. vent. grille	1
61-64	CORVAIR (4-DR.) (exc. STA. WAG.)	6283976	**REINFORCEMENT ASSY.,** front panel	1
60-64	CORVAIR (2-DR.) (exc. CONV.)	4871805	**REINFORCEMENT ASSY.,** rr. compt. frt. panel	1
60-62	MONZA (2-DR.)	6280499	**GRILLE,** front panel ornament	2
63-64	MONZA (CONV.)	4875046	**GRILLE,** front panel ornament	2
63-64	MONZA (exc. CONV.)	4873924	**GRILLE,** front panel ornament	2
65-69	CORVAIR (SPT. CPE.)	7719325	**GRILLE,** mtr. compt. vent.	1
65-67	CORVAIR (4-DR.)	4534029	**GRILLE,** mtr. compt. vent.	1
65-69	CORVAIR (CONV.)	4437757	**GRILLE,** mtr. compt. vent.	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

65-69	CORVAIR	7614735	**DEFLECTOR,** mtr. compt. air duct water	1

12.975 COVER—BUMPER, Load Floor (STA. WAG.)

65-69	CORVAIR (exc. heater)	4500657	rr. seat heater opening	1
61-62	CORVAIR (STA. WAG.)	4574349	**BUMPER,** filler panel—(10.587)	2

PANEL ASSY.—FOUNDATION—BUMPER, Load Floor (Sedans)

62-64	CORVAIR DELUXE (4-DR.) w/folding seat	4864536	rr. floor filler (blue)	1
65	CORVAIR STD. (4-DR.) w/fldg. seat,			
66	MONZA (4-DR.)	4484948	rr. floor filler (med. turquoise)	1
65-66	CORVAIR (4-DR.) w/fldg. seat	4484949	rr. floor filler (red)	1
65-66	MONZA (4-DR.)	4484961	rr. floor filler (blue)	1
65-67	MONZA (4-DR.),			
67	CORVAIR (STD.) (SPT. SED.) w/fldg. rr. seat	4484963	rr. floor filler (black)	1
65	MONZA (4-DR.)	4484964	rr. floor filler (dark turquoise)	1
66	CORVAIR (4-DR.) w/fldg. seat	7592483	rr. floor filler (fawn)	1
66-67	MONZA (4-DR.)	7592484	rr. floor filler (blue)	1
67	MONZA (SED.)	7643540	rr. floor filler (gold)	1
67	CORVAIR (STD.) (SED.) w/fldg. rr. seat	7643542	rr. floor filler (fawn)	1
67	CORVAIR (STD.) (SED.) w/fldg. rr. seat	7643543	rr. floor filler (blue)	1
61-64	MONZA (2-DR. SED.)	4404113	**FOUNDATION,** rr. seat folding back trim (black)	1
63-64	CORVAIR (2-DR.) w/folding seat	4404114	**FOUNDATION,** rr. seat folding back trim (red)	1
63-64	CORVAIR (2-DR. SED.)	4404115	**FOUNDATION,** rr. seat fldg. back trim (saddle)	1
65	CORVAIR STD. (4-DR.) w/fldg. seat,			
66	MONZA (SPT. CPE.)	4532331	**FOUNDATION,** rr. seat fldg. back trim (turquoise)	1
65	MONZA (4-DR.)	4532333	**FOUNDATION,** rr. seat fldg. back trim (silver)	1
65-66	CORVAIR (4-DR.) w/fldg. seat	4532334	**FOUNDATION,** rr. seat fldg. back trim (blue)	1
65-67	MONZA (4-DR.),			
67	CORVAIR (STD.) (SPT. SED.)	4532336	**FOUNDATION,** rr. seat fldg. back trim (black)	1
65	MONZA (4-DR.)	4532337	**FOUNDATION,** rr. seat fldg. back trim (turquoise)	1
65-67	MONZA (SPT. CPE.),			
67	CORVAIR (STD.) (SPT. CPE.)	4506588	**FOUNDATION,** rr. seat fldg. back trim (black)	1
65-66	MONZA (SPT. CPE.)	4506589	**FOUNDATION,** rr. seat fldg. back trim (blue)	1
65	CORVAIR STD. (SPT. CPE.),			
66	MONZA, CORSA (SPT. CPE.)	4517173	**FOUNDATION,** rr. seat folding back trim (turquoise)	1
65-66	CORVAIR (SPT. CPE.)	4506591	**FOUNDATION,** rr. seat fldg. back trim (red)	1
66-67	MONZA (SPT. CPE.)	4545661	**FOUNDATION,** rr. seat fldg. back trim (br. blue)	1
66	MONZA (SPT. CPE.)	4545662	**FOUNDATION,** rr. seat fldg. back trim (bronze)	1
66	CORVAIR (4-DR.) w/fldg. seat	4545670	**FOUNDATION,** rr. seat fldg. back trim (fawn)	1
66-67	MONZA (4-DR.)	4545671	**FOUNDATION,** rr. seat fldg. back trim (br. blue)	1
67	MONZA (SPT. CPE.)	7642984	**FOUNDATION,** rr. seat fldg. back trim (gold)	1
67	CORVAIR (STD.) (SPT. CPE.) w/fldg. rr. seat	7642986	**FOUNDATION,** rr. seat fldg. back trim (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.) w/fldg. rr. seat	7642987	**FOUNDATION,** rr. seat fldg. back trim (blue)	1
67	MONZA (SED.)	7642990	**FOUNDATION,** rr. seat fldg. back trim (gold)	1
67	CORVAIR (STD.) (SED.)	7642992	**FOUNDATION,** rr. seat fldg. back trim (fawn)	1
67	CORVAIR (STD.) (SED.)	7642993	**FOUNDATION,** rr. seat fldg. back trim (blue)	1
68-69	CORVAIR (SPT. CPE.)	7771206	**FOUNDATION,** rr. seat folding back trim (black)	1
68	CORVAIR (SPT. CPE.)	7771207	**FOUNDATION,** rr. seat folding back trim (blue)	1
68	CORVAIR (SPT. CPE.)	7771208	**FOUNDATION,** rr. seat folding back trim (gold)	1
69	CORVAIR (SPT. CPE.) w/fldg. seat	8733274	**FOUNDATION,** seat back trim (blue)	1
69	CORVAIR (SPT. CPE.) w/fldg. seat	8742195	**FOUNDATION,** seat back trim (med. green)	1
61	LAKEWOOD,			
62-64	CORVAIR (4-DR.) w/folding seat	6282464	**BUMPER,** rr. floor filler panel	3

12.980 BAR—TUNNEL—PLUG, Floor

65-69	CORVAIR (CONV.)	4526695	pan front (No. 1)	R.H.
65-69	CORVAIR (CONV.)	4526696	pan front (No. 1)	L.H.
65	CORVAIR (CONV.)	4526697	pan rear (No. 1)	R.H.
65-69	CORVAIR (CONV.)	4526698	pan rear (No. 1)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-69	CORVAIR (exc. CONV.)	7704473	pan (No. 1)	R.H.
65-69	CORVAIR (exc. CONV.)	7704474	pan (No.1)	L.H.
60-64	CORVAIR	3786963	**TUNNEL,** toe pan	1
65-69	CORVAIR w/heater	3857221	**TUNNEL,** toe pan	1
65-69	CORVAIR (exc. heater)	3857844	**TUNNEL,** toe pan	1
65-68	CORVAIR	4725594	**PLUG,** luggage compt. pan car heater gas pipe hole spare tire pocket, center pillar access hole 3/4	A.R.
61-66	CORVAIR (exc. STA. WAG.),			
65-69	MONZA (CONV.)	4771203	**PLUG,** rear qtr. inner panel access hole	A.R.

12.981 POCKET ASSY.—COVER, Engine Compartment Floor

61-64	CORVAIR (exc. STA. WAG.)	6283132	spare tire	1
63-69	ALL	4808179	**COVER,** filler and compt. pan drain hole	A.R.

PAN—RAIL—EXTENSION—FILLER—PANEL—PLUG, Luggage Compartment

60-64	CORVAIR	4429231	front	1
69	CORVAIR	8768234	frt. compt.	1
61-63	CORVAIR (exc. STA. WAG., C.A.C.),			
64	CORVAIR	4429232	**PAN ASSY.**	1
65	CORVAIR (CONV.)	4519544	**PAN ASSY.**	1
66-67	CORVAIR (CONV.)	7649185	**PAN ASSY.,** frt. compt.	1
68	CORVAIR (exc. CONV.)	7748059	**PAN ASSY.,** front compartment	1
68	CORVAIR (CONV.)	7748060	**PAN ASSY.,** front compartment	1
69	MONZA (SPT. CPE.)	8768362	**PAN ASSY.,** frt. compt.	1
69	MONZA (CONV.)	8768363	**PAN ASSY.,** frt. compt.	1
60-64	CORVAIR	4429230	**RAIL,** frt. compt. cross	1
65-68	CORVAIR	7616530	**RAIL,** cross	1
60-64	CORVAIR (exc. CONV.)	4429196	**RAIL ASSY.,** front compt. pan	1
61-64	CORVAIR	4429194	**RAIL ASSY.,** pan side	R.H.
61-64	CORVAIR	4429195	**RAIL ASSY.,** pan side	L.H.
62-64	MONZA (CONV.)	4429197	**RAIL ASSY.,** frt. compt. pan	1
65-66	CORVAIR	4548318	**RAIL ASSY.,** pan	R.H.
65-66	CORVAIR	7649183	**RAIL ASSY.,** pan	L.H.
67	CORVAIR	7674150	**RAIL ASSY.,** frt. pan	R.H.
67	CORVAIR	7677933	**RAIL ASSY.,** frt. pan	L.H.
68-69	CORVAIR	7785163	**RAIL ASSY.,** frt. compt. pan	R.H.
68-69	CORVAIR	7785164	**RAIL ASSY.,** frt. compt. pan	L.H.
65-68	CORVAIR	4458526	**EXTENSION,** side rail	R.H.
65-69	CORVAIR	4458527	**EXTENSION,** side rail	L.H.
60-64	CORVAIR	4417584	**FILLER,** lid front gutter	R.H.
60-64	CORVAIR	4417585	**FILLER,** lid front gutter	L.H.
60-64	CORVAIR	6277377	**FILLER,** lid upper corner gutter outer	2
60-64	CORVAIR	6277392	**FILLER,** lid upper corner gutter inner	2
65-69	CORVAIR	7623106	**FILLER,** lid frt. corner gutter	R.H.
65-69	CORVAIR	7623107	**FILLER,** lid frt. corner gutter	L.H.
65-68	CORVAIR	4511917	**FILLER,** lid rear corner gutter	R.H.
65-68	CORVAIR	4511918	**FILLER,** lid rear corner gutter	L.H.
65-69	CORVAIR	3863992	**PANEL,** flr. filler	R.H.
65-69	CORVAIR	3898177	**PANEL,** flr. filler	L.H.
60-62	CORVAIR,			
63-64	CORVAIR (STD.)	4805844	**PLUG,** (3/4") floor pan hole	A.R.
60-66	CORVAIR	1178365	**PLUG,** pnl. frt. bumper, pnl. strg. gear adj. access. hole	A.R.
60-64	CORVAIR		**PLUG** (1/2"), floor pan, motor compt. side rail,	
ALL	ALL	4410574	**PLUG,** floor pan (1")	A.R.
65-68	CORVAIR	4802102	**PLUG,** rear compt. pan	A.R.

GUIDE, Rear Seat

60-64	CORVAIR	6277710	pan brake cable	1

12.986 RAIL ASSY.—EXTENSION ASSY.—BRACE—REINFORCEMENT—HOSE, Rear

60	ALL	6278223	side	L.H.
61-64	CORVAIR (exc. STA. WAG., CONV.)	4869487	side	R.H.
61-64	CORVAIR (exc. STA. WAG.)	4459293	rear cross	1
61-64	CORVAIR (exc. STA. WAG., CONV.)	4869488	left engine compt. side (use w/"welded on" type heat cover)	1
65-69	CORVAIR	8768518	engine compt. rr. cross	1
65	CORVAIR (exc. CONV.)	4472430	engine compt. side	R.H.
65-67	CORVAIR (exc. CONV.)	7682109	engine compt. side	L.H.
67	CORVAIR (exc. CONV.)	7678854	mtr. compt. side	R.H.
67-68	CORVAIR (exc. CONV.)	7678855	mtr. compt. side	L.H.
67	MONZA (CONV.)	7678856	mtr. compt. side	R.H.
67	MONZA (CONV.)	7678857	mtr. compt. side	L.H.
68	CORVAIR (SPT. CPE.)	7783782	motor compt. side	R.H.
68	CORVAIR (CONV.)	7783784	motor compt. side	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

68	CORVAIR (CONV.)	**7782974**	motor compt. side	L.H.
68	CORVAIR (SPT. CPE.)	**7782975**	motor compt. side	L.H.
65-69	CORVAIR (exc. CONV.)	**4472414**	**EXTENSION ASSY.,** engine compt. side outer rail)	R.H.
65-69	CORVAIR (exc. CONV.)	**4472415**	**EXTENSION ASSY.,** engine compt. side outer rail)	L.H.
65-69	CORVAIR (CONV.)	**4519596**	**EXTENSION ASSY.,** engine compt. side outer rail	R.H.
65-69	CORVAIR (CONV.)	**4519597**	**EXTENSION ASSY.,** engine compt. side outer rail	L.H.
62-64	MONZA (CONV.)	**4866876**	**BRACE,** side rail to rear rail	R.H.
62-64	MONZA (CONV.)	**4866877**	**BRACE,** side rail to rear rail	L.H.
65-66	CORVAIR	**7582102**	**BRACE,** engine compt. rail to rocker	R.H.
65-69	CORVAIR (CONV.)	**4465014**	**BRACE,** engine compt. rail to rr. rail	R.H.
65-69	CORVAIR (CONV.)	**4465015**	**BRACE,** engine compt. rail to rr. rail	L.H.
65-69	CORVAIR (CONV.)	**4518920**	**BRACE,** rr. seat pan to rail	R.H.
65-69	CORVAIR (CONV.)	**4518921**	**BRACE,** rr. seat pan to rail	L.H.
67	CORVAIR	**7678848**	**BRACE ASSY.,** mtr. compt. rail to rkr.	R.H.
67	CORVAIR	**7678849**	**BRACE ASSY.,** mtr. compt. rail to rkr.	L.H.
68	CORVAIR	**7765832**	**BRACE ASSY.,** motor compt. rail to rocker	R.H.
68	CORVAIR	**7765833**	**BRACE ASSY.,** motor compt. rail to rocker	L.H.
60-64	CORVAIR (exc. STA. WAG.)	**6276331**	**REINFORCEMENT,** motor compt. side rail at bumper	L.H.
60-64	CORVAIR (exc. STA. WAG.)	**6282507**	**REINFORCEMENT,** motor compt. side rail at bumper	R.H.
61	LAKEWOOD,			
65-69	CORVAIR (CONV.)	**4518922**	**REINFORCEMENT,** rr. seat pan to rail brace	R.H.
65-69	CORVAIR (CONV.)	**4518923**	**REINFORCEMENT,** rr. seat pan to rail brace	L.H.
65-69	CORVAIR (CONV.)	**4519551**	**REINFORCEMENT,** eng. compt. gutter side	R.H.
65-69	CORVAIR (CONV.)	**4519552**	**REINFORCEMENT,** eng. compt. gutter side	L.H.
65-69	CORVAIR	**4477679**	**HOSE,** engine compt. division pnl. drain	1
	Not required in this group. See Group 12.981	**4839439**	**HOSE**	

12.989 PANEL ASSY.—COVER, Folding Top Compartment (See Group 15.100 for TRIM ASSY.)

65-67	CORVAIR (CONV.)	**4482016**	side trim upper	L.H.
65-67	CORVAIR (CONV.)	**4470380**	side trim lower	R.H.
65-68	CORVAIR (CONV.)	**4470381**	side trim lower	L.H.
65-69	CORVAIR (CONV.)	**7738548**	side upper trim	R.H.
68-69	CORVAIR (CONV.)	**7738549**	side upper trim	L.H.
68-69	CORVAIR (CONV.)	**7738554**	side lower trim	R.H.
68-69	CORVAIR (CONV.)	**7738555**	side lower trim	L.H.
65-69	CORVAIR (CONV.)	**4437892**	**COVER,** side trim pnl. upper	R.H.
65-69	CORVAIR (CONV.)	**4437893**	**COVER,** side trim pnl. upper	L.H.

12.996 REINFORCEMENT—SUPPORT—GUTTER, Rear Compartment Lid

65-69	CORVAIR	**4503910**	frt. compt. frt. corner gutter	R.H.
65-69	CORVAIR	**4503911**	frt. compt. frt. corner gutter	L.H.
65-69	CORVAIR (CONV.)	**4519538**	eng. compt. frt. corner	R.H.
65-69	CORVAIR (CONV.)	**4519539**	eng. compt. frt. corner	L.H.
65-69	CORVAIR	**4465000**	**SUPPORT,** motor compt. rear corner seal ret.	R.H.
65-69	CORVAIR	**4465001**	**SUPPORT,** motor compt. rear corner seal ret.	L.H.
65-69	CORVAIR	**4467696**	**GUTTER,** frt. compt. lid side	R.H.
65-69	CORVAIR	**4467697**	**GUTTER,** frt. compt. lid side	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 13.000

BODY WIRING—

FOLDING TOP TRIM

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

13.090 HARNESS ASSY.—WIRE ASSY.—RETAINER. Body Wiring (Also see group 2.480 for additional body harnesses)

60-64	CORVAIR (exc. CONV.)	6276979	dome lamp	1
60-64	CORVAIR DELUXE (exc. CONV.)	6276980	door jamb, switch jumper	1
62-64	MONZA (CONV.) (exc. Turbo.)	2981796		
62-64	MONZA (CONV.) w/Turbo.	2981836		1
65-69	CORVAIR (exc. CONV.)	4466396	dome lamp wiring	1
65-69	CORVAIR (CONV.) w/folding top power lift	4501939	folding top motor relay wire	1
66-67	CORVAIR (exc. P.G.)	6287071		1
67-69	CORVAIR	6292089	body wiring (Note 1)	1

NOTE. When using 6292089 on models with powerglide transmission, cut off back-up light switch connector and splice the two 20 gauge wires together.

65-66	MONZA (CONV.)	6287996	**WIRE ASSY.**, switch	1
65-69	CORVAIR (exc. CONV.)	6293171	**WIRE ASSY.**, courtesy lamp	1
All	All	3816659	**RETAINER**, high tension wire to vacuum advance on dist.	2

HARNESS ASSY., Windshield Wiper Control

62-63	CORVAIR w/sgl. spd.,			
62	CORVAIR w/2-spd.	2980772	motor	1
63-66	CORVAIR w/2-spd.	2988066		1
64	CORVAIR, w/sgl. spd.	2980773	motor	1
65	CORVAIR w/washer	2987905	wiper and washer pump	1

13.095 CIRCUIT BREAKER

64-65	MONZA (CONV.),			
67	MONZA (CONV.)	4849850	fldg. top control	1
68	MONZA (CONV.)	4850166	elect. seat, t/gate, wind., and hyd. top	1
65-69	CORVAIR (CONV.) w/elect. top	5717528	top lift and motor assy.	fldg. 1

13.342 CLIP, Folding Top Bow Binding End

65-69	ALL	7614749	rear bow	2

13.346 TOP ASSEMBLY, Folding

62-64	MONZA (CONV.)	4389604	white (less compt. bag)	1
65	MONZA (CONV.)	4481425	black (less compt. bag)	1
65	MONZA (CONV.)	4481426	white (less compt. bag)	1
66	MONZA (CONV.)	7630079	black (complete)	1
66	MONZA (CONV.)	7630080	white (complete)	1
66	MONZA (CONV.)	7630081	beige (complete)	1
66	MONZA (CONV.) w/elect. top	7630083	black (complete)	1
66	MONZA (CONV.) w/elect. top	7630084	white (complete)	1
67	MONZA (CONV.)	7716808	black (complete)	1
67	MONZA (CONV.)	7716809	white (complete)	1
67	MONZA (CONV.)	7716810	blue (complete)	1
67	MONZA (CONV.) w/elect. top	7716802	black (complete)	1
67	MONZA (CONV.) w/elect. top	7716803	white (complete)	1
67	MONZA (CONV.) w/elect top	7716804	(complete)	blue 1
68-69	MONZA (CONV.)	7784834	black (complete)	1
68-69	MONZA (CONV.) w/power top	7784838	black (complete)	1
68-69	MONZA (CONV.)	7784835	white (complete)	1
68	MONZA (CONV.)	7784836	blue (complete)	1
68-69	MONZA (CONV.) w/power top	7784839	white(complete)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

68	MONZA (CONV.)	7784840	blue (complete)	1

13.347 TRIM ASSEMBLY, Folding Top Roof (less back curtain)

62-64	MONZA (CONV.)	4373024	black	1
62-64	MONZA (CONV.)	4373025	white	1
65-69	MONZA (CONV.)	4475594	black	1
65	MONZA (CONV.)	4475595	white	1
65	MONZA (CONV.)	4475596	beige	1
66	MONZA (CONV.)	4544444	beige	1
66-69	MONZA (CONV.)	4544442	white	1
67	MONZA (CONV.)	7680373	blue	1
68	CORVAIR (CONV.)	7766006	blue	1

13.349 LINING ASSY., Top Side Pad

62-64	MONZA (CONV.)	4373002	(black)	R.H.
62-64	MONZA (CONV.)	4373003	(black)	L.H.
65-67	MONZA (CONV.)	4486902	(black)	R.H.
65-67	MONZA (CONV.)	4486903	(black)	L.H.
65	MONZA (CONV.)	4486904	(beige)	R.H.
65	MONZA (CONV.)	4486905	(beige)	L.H.
66	MONZA (CONV.)	4544440	(beige)	R.H.
66	MONZA (CONV.)	4544441	(beige)	L.H.
67	MONZA (CONV.)	7680378	(blue)	R.H.
67	MONZA (CONV.)	7680379	(blue)	L.H.
68	CORVAIR (CONV.)	7766201	blue	2
68-69	CORVAIR (CONV.)	7766125	black	2

13.352 WEATHERSTRIP, Folding Top Compartment

62-64	MONZA (CONV.)	4874456	side panel	R.H.
62-64	MONZA (CONV.)	4874457	side panel	L.H.
65-69	MONZA (CONV.)	4478922	side panel	R.H.
65-69	MONZA (CONV.)	4478923	side panel	L.H.

13.384 FASTENER—RETAINER, Folding Top and Dust Boot

62-69	CONV.	4749582	dust boot cover	A.R.
62	MONZA (CONV.)	4801268	fldg. top compt. bag to body—(12.269)	A.R.
62-63	MONZA (CONV.)	4841194	compt. bag. to body—(10.695)	A.R.
62-69	CORVAIR (CONV.)	7595709	dust boot (on belt) at qtr., back of rr. back	A.R.
62-64	MONZA (CONV.),			
65-66	CONV.	9418731	dust boot body inner qtr. (machine screw type)	4
67-69	CONV.	455520	dust boot inner qtr. (mach. screw type)	4
62-69	MONZA (CONV.)	4868822	RETAINER, boot at rr. back	1

13.389 CURTAIN ASSY., Back (with window)

62-64	MONZA (CONV.)	4469430	black	1
62-64	MONZA (CONV.)	4469431	white	1
65-66	MONZA (CONV.)	4475535	black	1
66	MONZA (CONV.)	7605326	white	1
66	MONZA (CONV.)	7605327	beige	1
67-69	MONZA (CONV.)	7713918	black	1
67-69	MONZA (CONV.)	7713919	white	1
67	MONZA (CONV.)	7713920	blue	1
68	CORVAIR (CONV.)	7765982	blue	1

13.392 ZIPPER, Back Curtain

62-64	MONZA (CONV.)	4469342	black	1
63-64	MONZA (CONV.)	4469343	fawn	1
65-66	MONZA (CONV.)	4475543	black	1
65	MONZA (CONV.)	4475544	beige	1
66	CORVAIR (CONV.)	7624409	fawn	1

13.450 BOOT ASSEMBLY—LACE, Top Dust

62-64	MONZA (CONV.)	4372991	black (comb. 712)	1
62-64	MONZA (CONV.)	4372992	blue (comb. 732)	1
63-64	MONZA (CONV.)	4375548	red (comb. 781)	1
63-64	MONZA (CONV.)	4393919	ivory (comb. 727)	1
65	MONZA (CONV.)	4475518	saddle (comb. 706)	1
65-69	MONZA (CONV.)	4475519	black (comb. 701, 704, 713, 758)	1
65	MONZA (CONV.)	4475520	blue (comb. 733)	1
65-66	MONZA (CONV.)	4475521	fawn (comb. 702, 773)	1
65-66	MONZA (CONV.)	4475522	red (comb. 740, 785)	1
65-66	MONZA (CONV.)	4475524	ivory (comb. 795, 797, 798)	1
66-67	MONZA (CONV.)	7698050	med. bright blue (comb. 722)	1
66	MONZA (CONV.)	7603681	turquoise (comb. 792)	1
66	MONZA (CONV.)	7605251	bronze (comb. 788)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

67	MONZA (CONV.)	7646596	gold (comb. 713)	1
68	CORVAIR (CONV.)	7757267	dk. blue (comb. 707)	1
68	CORVAIR (CONV.)	7757268	med. gold (comb. 710)	1
69	CORVAIR (CONV.)	8725449	blue	1
69	CORVAIR (CONV.)	8725577	green (comb. 707)	1
68-69	CORVAIR (CONV.)	7785346	**LACE,** dust boot retainer	1

BAG ASSEMBLY, Boot Retainer

62-69	CONV.	4485356	(polyethylene film) (black)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 14.000

FOLDING TOP PARTS—

INTERIOR TRIM

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

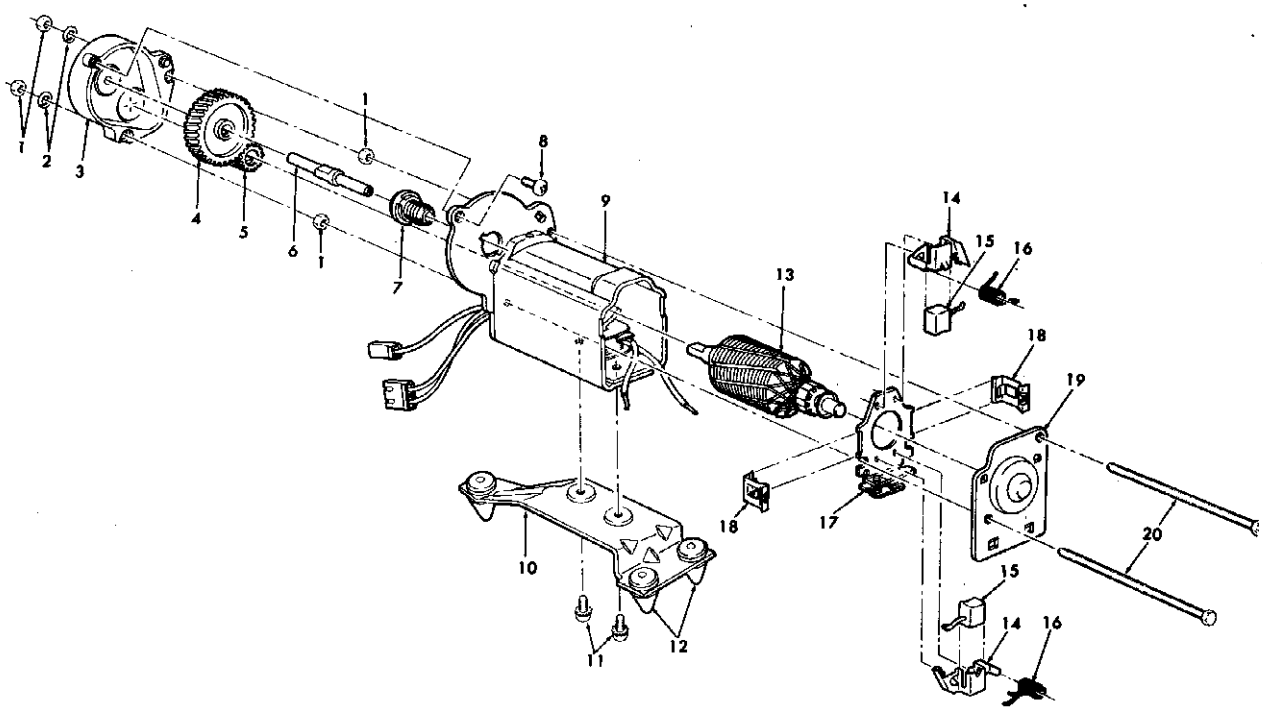

1965-69 CORVAIR CONV. TOP MOTOR

1.	N.L.	NUT, Folding Top Motor Tie Bolt
2.	N.L.	WASHER, Folding Top Motor Tie Bolt
3.	14.482	COVER, Top Lift Motor Gear Housing
4.	14.482	GEAR, Fldg. Top Lift Motor Driven
5.	14.482	GEAR, Fldg. Top Motor Driving
6.	14.482	SHAFT, Fldg. Top Lift Motor
7.	14.482	BUSHING, Fldg. Top Motor
8.	N.L.	SCREW, Motor to Gear Housing Cover
9.	14.481	MOTOR ASSY., Folding Top (Incl. Items 13, 14, 15, 16, 17, 18, 19, 20)
10.	14.482	SUPPORT, Fldg. Top Motor
11.	N.L.	SCREW, Support to Motor
12.	14.482	GROMMET, Fldg. Top Motor Rubber
13.	14.482	ARMATURE ASSY., Fldg. Top Motor
14.	14.482	HOLDER ASSY., Fldg. Top Motor Brush
15.	14.482	BRUSH, Fldg. Top Motor
16.	14.482	SPRING, Fldg. Top Motor Brush
17.	14.482	BRACKET, Top Motor Brush Holder
18.	N.L.	RETAINER, Brush Holder Bracket
19.	N.L.	PLATE, Motor End
20.	14.482	BOLT, Folding Top Motor Tie

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

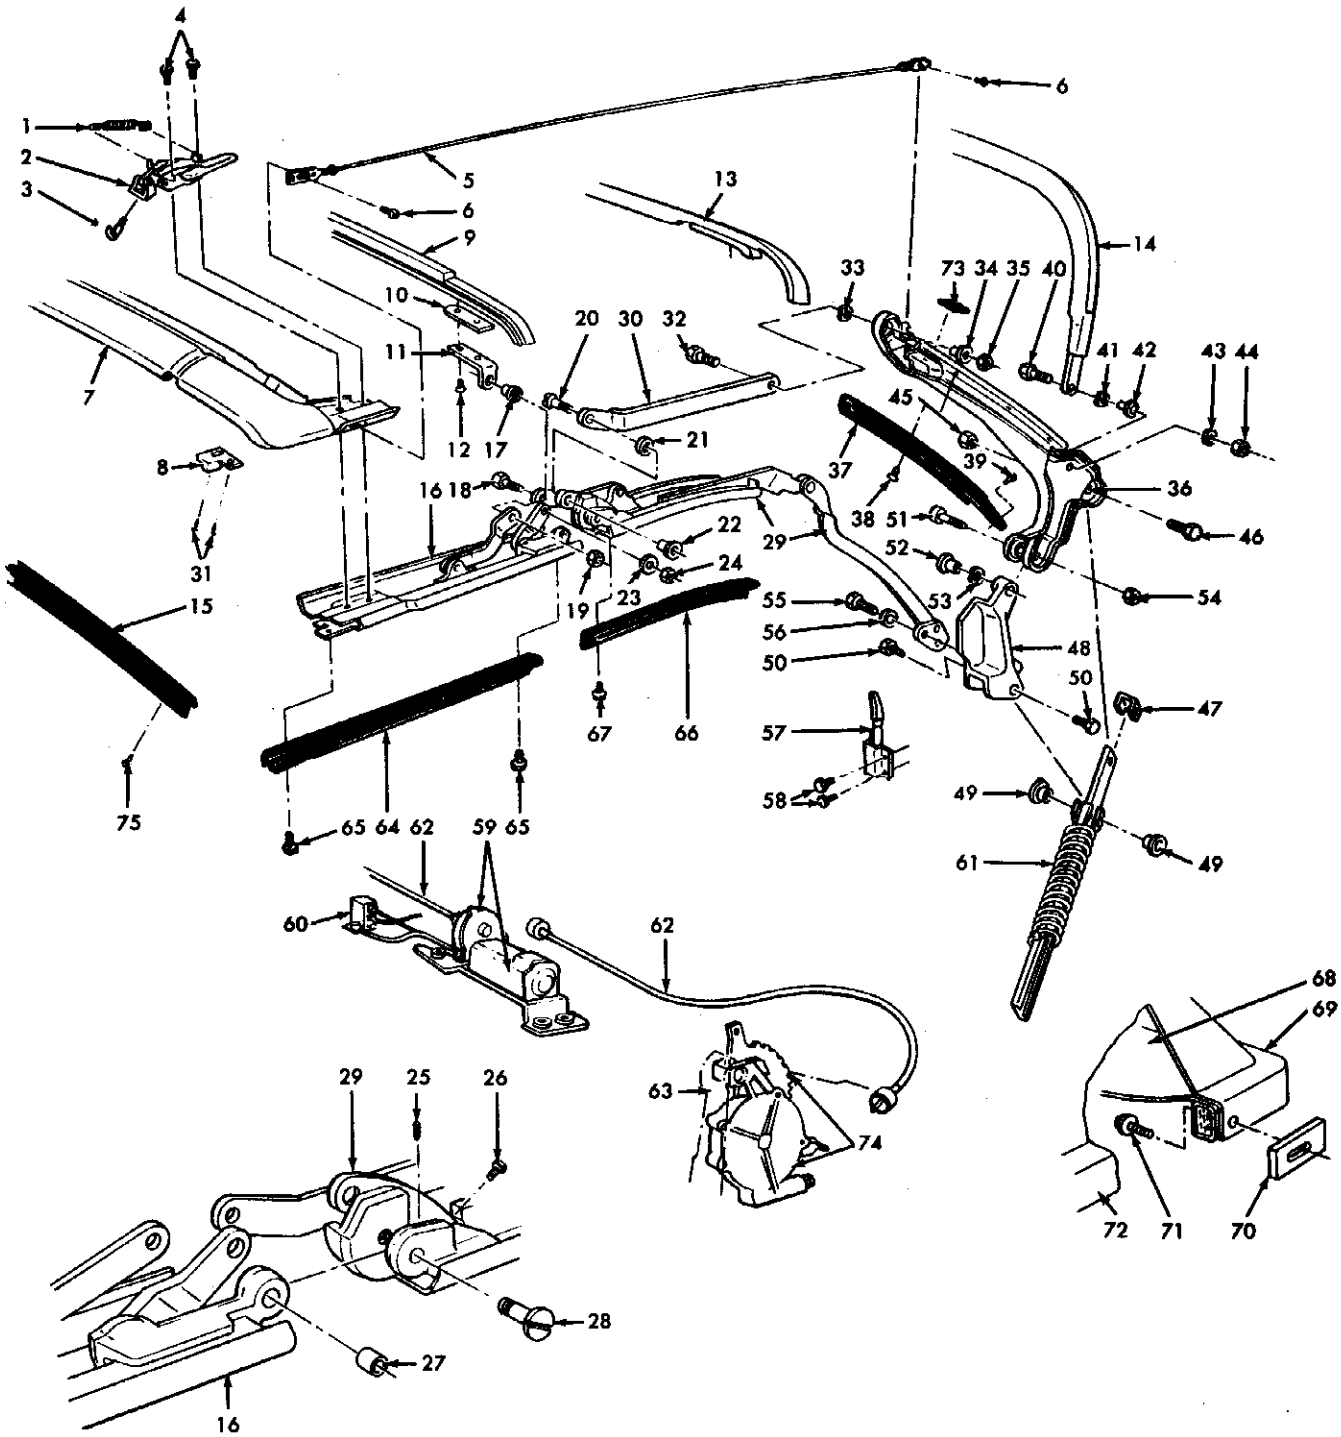

1965-69 CORVAIR CONVERTIBLE TOP FRAME DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1965-69 CORVAIR CONVERTIBLE TOP FRAME DETAILS

1.	14.080	SPRING, Frt. Roof Rail Lock Hdle. Return (Component of 2)
2.	14.080	LOCK & HDLE ASSY., Fldg. Top Frt. Roof Rail
3.	14.080	HOOK, Frt. Roof Rail Lock Hdle. (Component of 2)
4.	14.080	SCREW, Fldg. Top Frt. Roof Rail Hdle. & Lock
5.	14.102	CABLE, Fldg. Top Trim Hold Down
6.	N.L.	SCREW, Fldg. Top Trim Hold Down Cable
7.	14.050	RAIL ASSY., Front Roof
8.	14.090	PLATE, Fldg. Top Frt. Roof Rail Wedge
9.	14.130	BOW ASSY., Folding Top Front
10.	14.130	SPACER, Fldg. Top Front Bow
11.	14.130	HINGE ASSY., Fldg. Top Frt. Bow Supt.
12.	14.155	SCREW, Fldg. Top Frt. Bow to Hinge
13.	14.215	BOW, Folding Top Center
14.	14.340	BOW ASSY., Folding Top Rear
15.	14.060	WEATHERSTRIP, Front Roof Rail
16.	14.100	RAIL ASSY., Fldg. Top Side Roof Front
17.	14.160	BUSHING, Fldg. Top Frt. Bow Supt. Hge.
18.	14.155	BOLT, Fldg. Top Frt. Bow Supt. Hge.
19.	N.L.	NUT, Fldg. Top Frt. Bow Supt. Hge.
20.	14.155	BOLT, Side Roof Rail Control Link to Frt. Rail Link
21.	14.162	WASHER, Side Roof Rail Control Link to Frt. Rail Link Spring
22.	14.160	BUSHING, Side Roof Rail Control Link to Frt. Rail Link
23.	N.L.	WASHER, Side Roof Rail Control Link to Frt. Rail Link Lock
24.	N.L.	NUT, Side Roof Rail Control Link to Frt. Rail Link
25.	14.155	SCREW, Side Roof Center Rail Bolt Set
26.	14.155	SCREW, Side Roof Rail Stop Set
27.	14.160	BUSHING, Side Roof Frt. to Ctr. Rail
28.	14.155	BOLT, Side Roof Frt. to Ctr. Rail
29.	14.170	RAIL ASSY., Side Roof Ctr. & Adj. Plate
30.	14.140	LINK ASSY., Fldg. Top Side Roof Rail Control
31.	N.L.	SCREW, Frt. Roof Rail Wedge Plate to Rail
32.	14.155	BOLT, Control Link to Rear Rail
33.	14.162	WASHER, Control Link to Rear Rail Spring
34.	14.160	BUSHING, Control Link to Rear Rail
35.	N.L.	NUT, Control Link to Rear Rail
36.	14.170	RAIL ASSY., Fldg. Top Side Roof Rear
37.	14.260	W. STRP. ASSY., Side Roof Rear Rail
38.	N.L.	SCREW, Rear Rail w/Strip to Rail
39.	14.260	FASTENER, Side Roof Rear Rail w/Strip
40.	14.155	BOLT, Rear Bow to Rear Rail
41.	14.162	WASHER, Rear Bow to Rear Rail Spring
42.	14.160	BUSHING, Rear Bow to Rear Rail
43.	N.L.	WASHER, Rear Bow to Rear Rail Lock
44.	14.157	NUT, Rear Bow to Rear Rail
45.	14.157	NUT, Fldg. Top Lift to Rear Rail
46.	14.478	BOLT, Fldg. Top Lift to Rear Rail
47.	14.475	SPACER, Fldg. Top Lift Guide
48.	14.310	HINGE, Folding Top Female
49.	14.160	BUSHING, Fldg. Top Female Hinge to Lift
50.	14.155	BOLT, Fldg. Top Female Hinge to Lift
51.	14.155	BOLT, Fldg. Top Female Hge. to Rear Rail
52.	14.160	BUSHING, Fldg. Top Female Hge. to Rear Rail
53.	14.162	WASHER, Fldg. Top Female Hge. to Rear Rail
54.	14.157	NUT, Fldg. Top Female Hge. to Rear Rail
55.	14.155	BOLT, Fldg. Top Center Rail to Female Hinge
56.	N.L.	WASHER, Fldg. Top Center Rail to Female Hinge
57.	14.310	CATCH ASSY., Fldg. Top Center Rail
58.	N.L.	SCREW, Fldg. Top Center Rail Catch
59.	14.481	MOTOR ASSY., Folding Top
60.	13.095	RELAY ASSY., Folding Top
61.	14.475	LIFT ASSY., Fldg. Top Counter Balanced
62.	14.472	CABLE ASSY., Fldg. Top Actuator Drive
63.	REF.	SUPPORT, Fldg. Top Mounting
64.	14.120	WEATHERSTRIP ASSY., Side Roof Front Rail
65.	N.L.	SCREW, Side Roof Frt. Rail w/Strip to Rail
66.	14.190	WEATHERSTRIP ASSY., Side Roof Center Rail
67.	N.L.	SCREW, Side Roof Ctr. Rail w/Strip to Rail
68.	13.450	BAG, Folding Top Compt.
69.	12.946	TRIM STICK, Qtr. Belt Rail Rear
70.	N.L.	FILLER, Trimstick to Panel
71.	N.L.	SCREW, Trimstick
72.	12.946	TRIM STICK, Qtr. Belt Rail Front
73.	14.260	STRIP, Fldg. Top Side Roof Rear Rail Filler
74.	14.475	ACTUATOR ASSY., Folding Top
75.	14.475	FASTENER, Frt. Roof Rail w/Strip

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

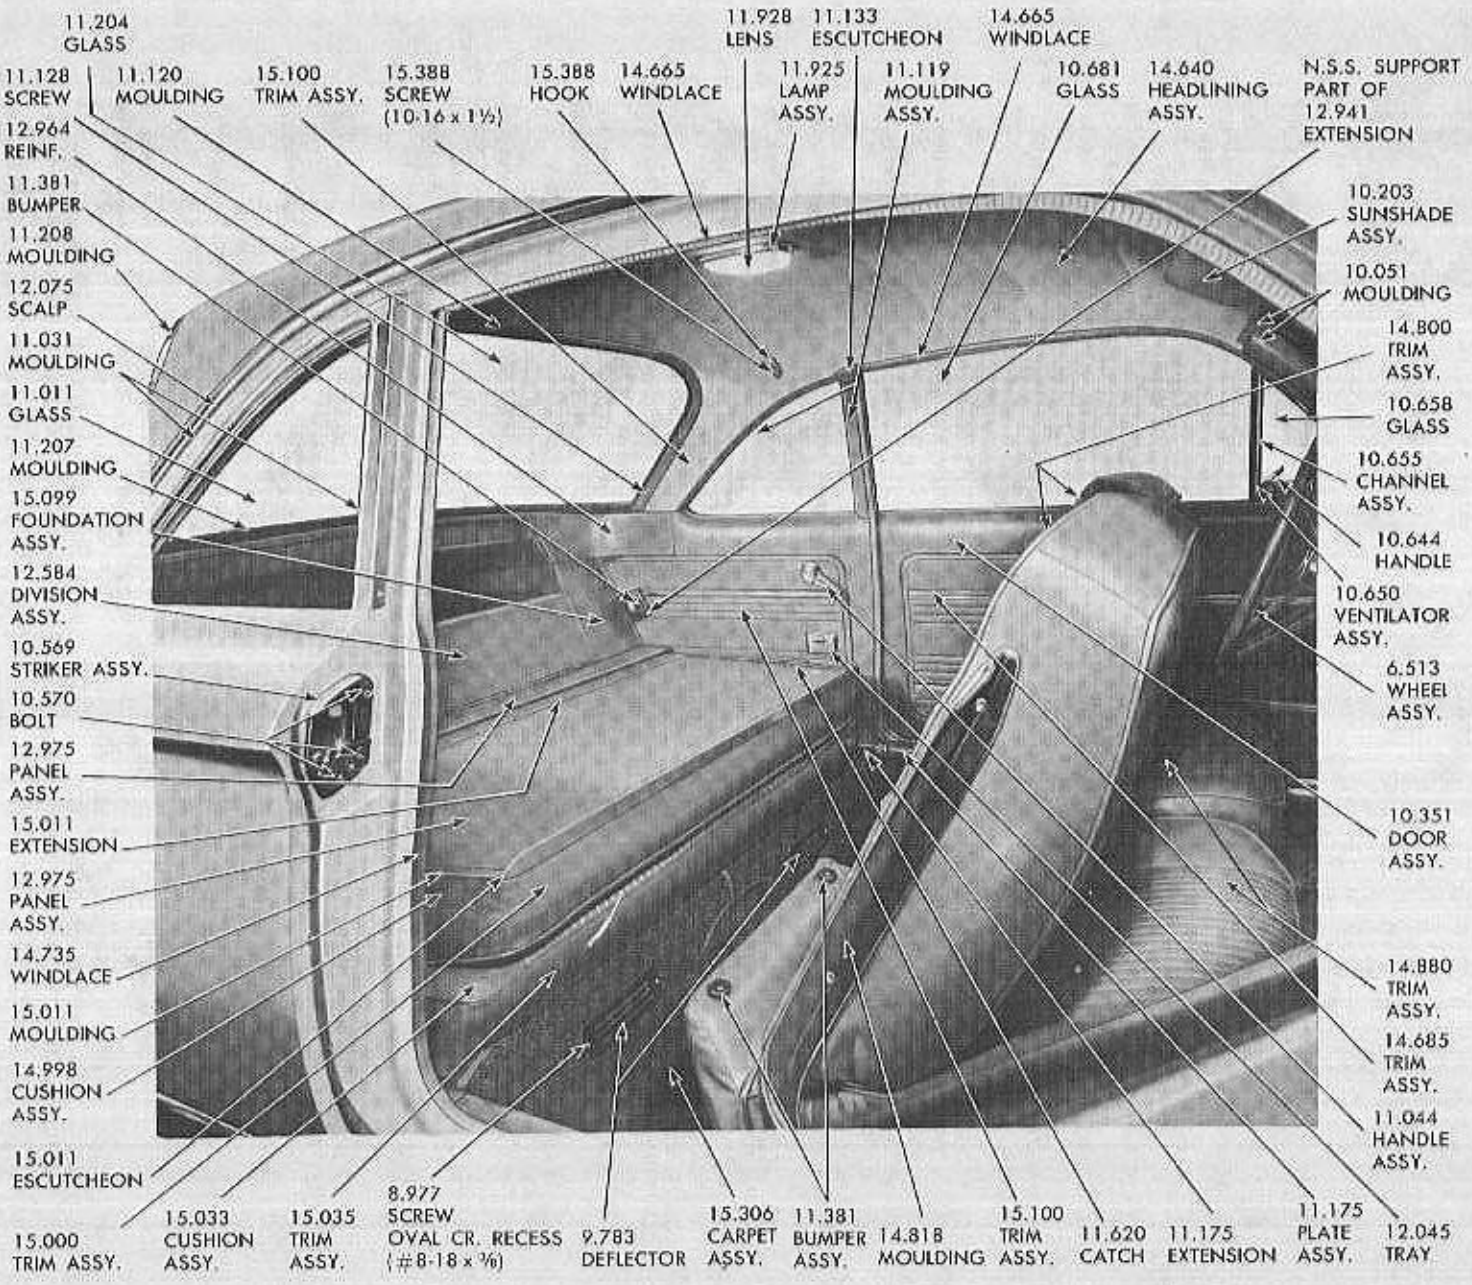

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

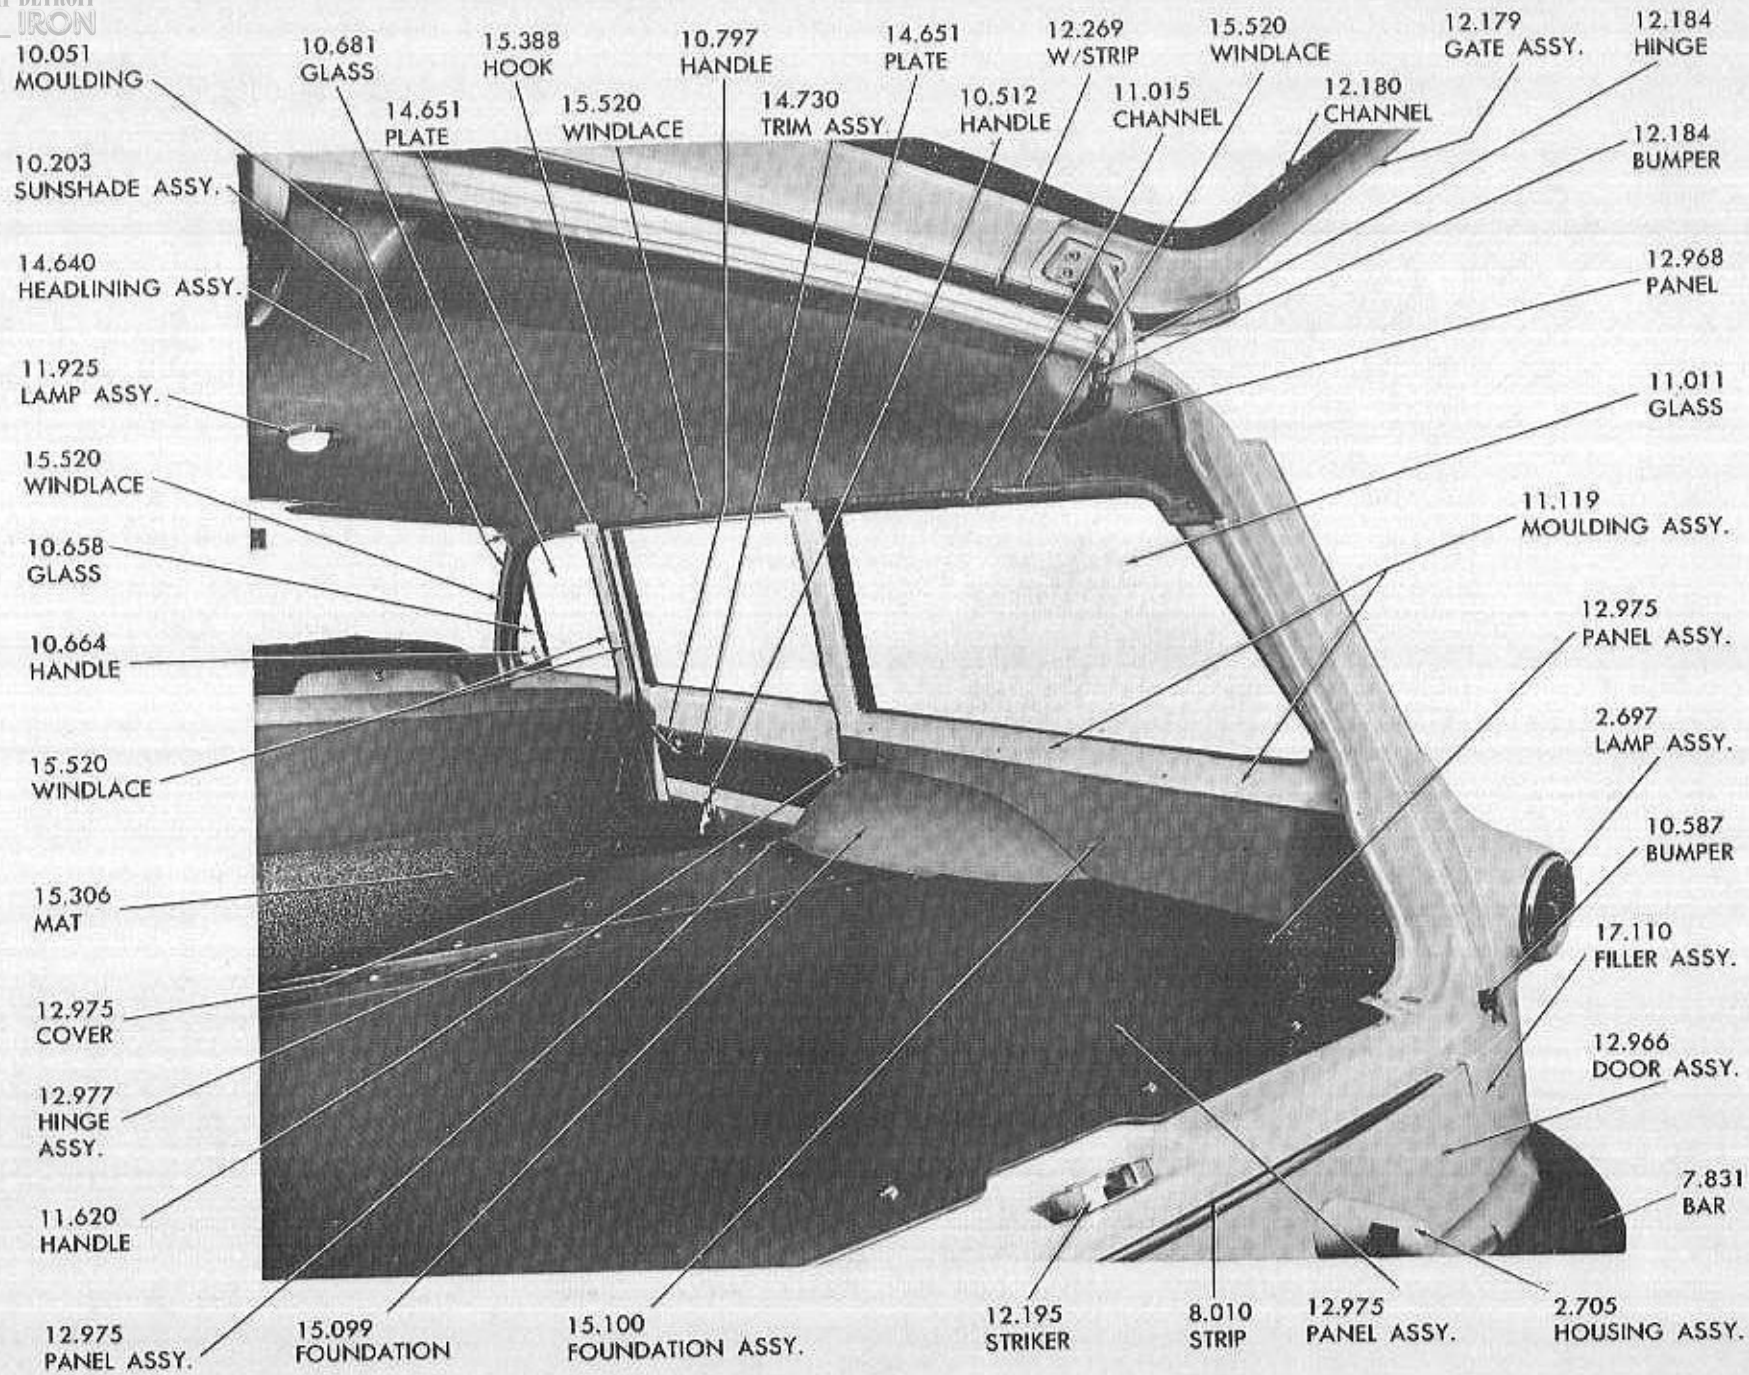

1961-62 CORVAIR STATION WAGON—INTERIOR (REAR VIEW)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

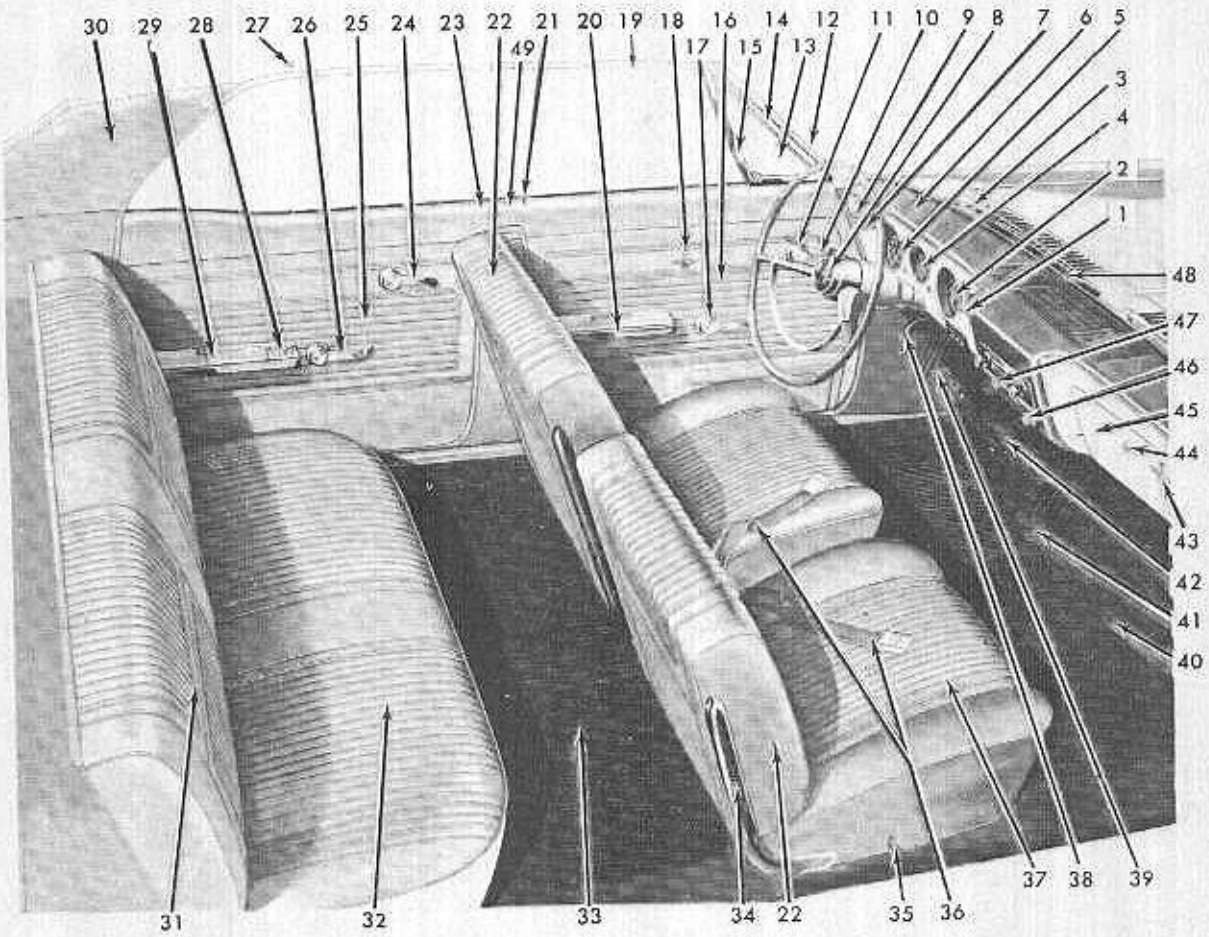

1965-69 CORVAIR MONZA SPORT SEDAN INTERIOR

1.	4.009	HANDLE
2.	3.108	GAUGE ASSY.
3.	10.147	ARM ASSY.
4.	9.772	CLOCK
5.	4.339	HEAD ASSY.
6.	10.230	PANEL ASSY.
7.	10.164	KNOB ASSY.
8.	2.820	CAP
9.	2.486	ROD ASSY.
10.	10.512	HANDLE
11.	2.897	LEVER
12.	10.051	MOULDING
13.	10.658	GLASS
14.	10.650	VENTILATOR ASSY.
15.	10.686	CHANNEL
16.	14.685	TRIM ASSY.
17.	10.512	HANDLE
18.	14.691	EMBLEM
19.	14.665	WINDLACE
20.	14.686	REST ASSY.
21.	10.559	KNOB
22.	14.799	CUSHION ASSY.
23.	10.559	KNOB
24.	10.797	HANDLE
25.	14.760	TRIM ASSY.
26.	10.512	HANDLE
27.	15.388	HOOK
28.	12.045	TRAY ASSY.
29.	14.762	REST ASSY.
30.	14.640	HEADLINING ASSY.
31.	15.000	TRIM ASSY.
32.	15.035	TRIM ASSY.
33.	15.306	CARPET
34.	14.818	MOULDING
35.	11.588	HANDLE
36.	14.875	SEAT BELT UNIT
37.	14.880	TRIM ASSY.
38.	9.783	GRILLE
39.	12.804	OUTLET ASSY.
40.	15.286	CARPET
41.	3.451	PEDAL
42.	4.625	PEDAL ASSY.
43.	10.261	EMBLEM
44.	10.266	LOCK ASSY.
45.	10.261	DOOR
46.	9.709	LIGHTER UNIT
47.	9.650	RADIO
48.	10.146	BLADE
49.	14.731	CAP

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

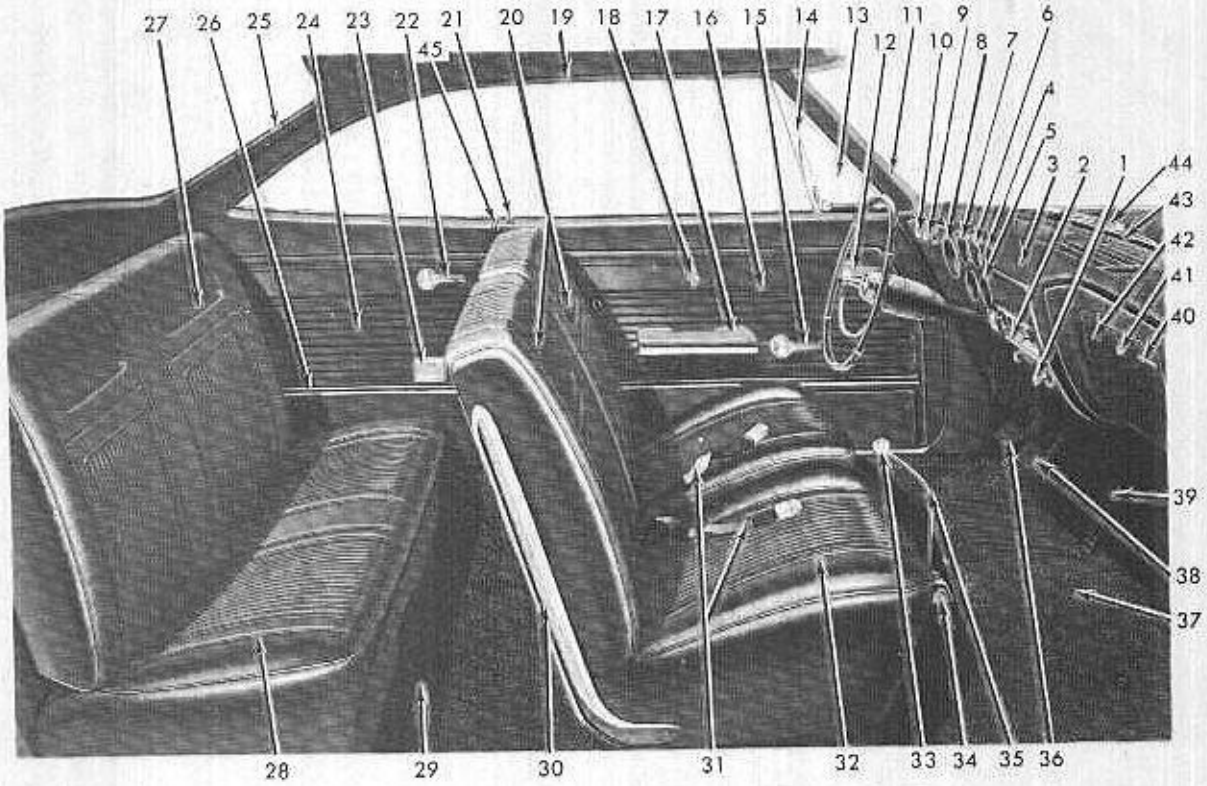

1965-66 CORVAIR CORSA COUPE INTERIOR

1.	9.709	LIGHTER UNIT
2.	9.650	RADIO
3.	10.230	PANEL ASSY.
4.	9.750	TACHOMETER ASSY.
5.	9.775	GAUGE ASSY.
6.	1.148	GAUGE ASSY.
7.	9.772	CLOCK
8.	4.339	HEAD ASSY.
9.	10.164	KNOB
10.	2.486	ROD ASSY.
11.	10.051	MOULDING
12.	10.512	HANDLE
13.	10.658	GLASS
14.	10.686	CHANNEL
15.	10.512	HANDLE
16.	14.685	TRIM ASSY.
17.	14.686	REST ASSY.
18.	14.691	EMBLEM
19.	14.665	WINDLACE
20.	14.799	CUSHION ASSY.
21.	10.559	KNOB
22.	11.044	HANDLE
23.	12.045	TRAY
24.	15.100	TRIM ASSY.
25.	14.650	LACE
26.	14.691	MOULDING
27.	15.000	TRIM ASSY.
28.	15.035	TRIM ASSY.
29.	15.306	CARPET
30.	14.818	MOULDING
31.	14.875	SEAT BELT UNIT
32.	14.878	CUSHION ASSY.
33.	4.006	KNOB
34.	4.010	HOUSING
35.	4.006	LEVER
36.	0.830	PEDAL ASSY.
37.	15.286	CARPET
38.	4.625	PEDAL ASSY.
39.	3.451	PEDAL
40.	10.261	EMBLEM
41.	10.266	LOCK ASSY.
42.	10.261	DOOR
43.	10.146	BLADE
44.	10.147	ARM ASSY.
45.	14.731	CAP

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

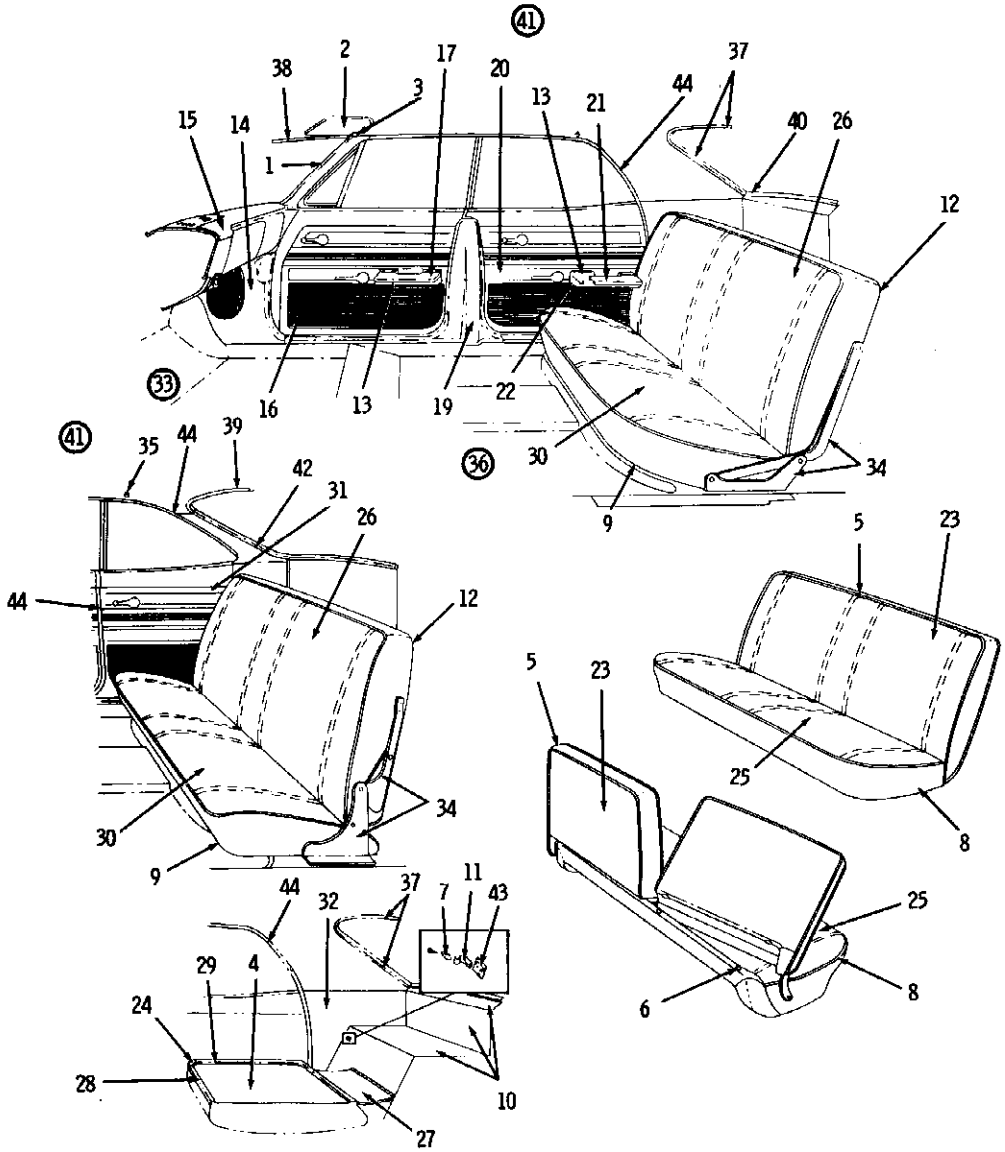

1966-67 CORVAIR 500 INTERIOR TRIM (10100)

1.	10.051	MOLDING, Windshield side garnish plastic
2.	10.203	SUNSHADE, Trimmed
3.	10.219	SUPPORT, Sunshade
4.	11.360	FOUNDATION, Rear seat folding back trim
5.	11.373	BACK, Front seat less trim cover
6.	11.381	BUMPER, Front seat back frame
7.	11.381	BUMPER, Rear seat folding back
8.	11.419	CUSHION, Front seat less trim cover
9.	11.610	CUSHION, Rear seat less trim cover
10.	11.620	FOUNDATION, Rear seat compartment front and shelf
11.	11.620	STRIKER, Rear seat folding back panel
12.	11.628	BACK, Rear seat less trim cover
13.	12.045	TRAY, Rear door arm rest ash
14.	14.630	PANEL, Shroud plastic
15.	14.655	COVER, Instrument panel upper
16.	14.685	TRIM, Front door
17.	14.686	COVER, Front door arm rest
18.	14.686	BASE, Front door arm rest
19.	14.730	COVER, Center pillar
20.	14.760	TRIM, Rear door
21.	14.762	COVER, Rear door arm rest
22.	14.762	BASE, Rear door arm rest
23.	14.800	COVER, Front seat back
24.	14.818	ESCUTCHEON, Rear seat back corner finish molding
25.	14.880	COVER, Front seat cushion
26.	15.000	COVER, Rear seat back
27.	15.011	EXTENSION, Rear seat folding back panel
28.	15.011	MOLDING, Rear seat folding back trim finish upper
29.	15.011	MOLDING, Rear seat folding back trim finish side
30.	15.035	COVER, Rear seat cushion
31.	15.100	TRIM, Rear quarter
32.	15.100	FOUNDATION, Rear quarter lower
33.	15.286	MAT, Front floor rubber
34.	11.620	LINK, Rear seat folding back mounting support
35.	15.388	HOOK, Coat
36.	15.306	MAT, Rear floor rubber
37.	14.650	LACE, Back window finish upper and side
38.	14.650	LACE, Windshield header trim finish
39.	14.650	LACE, Back window trim finish upper
40.	14.650	LACE, Back window finishing excutcheon
41.	14.640	HEADLINING, Less listing wires
42.	14.650	LACE, Back window finish lower and side
43.	11.620	PLATE, Rear seat folding back on wheelhouse
44.	15.520	LACE, Pinchweld 25 yard roll

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

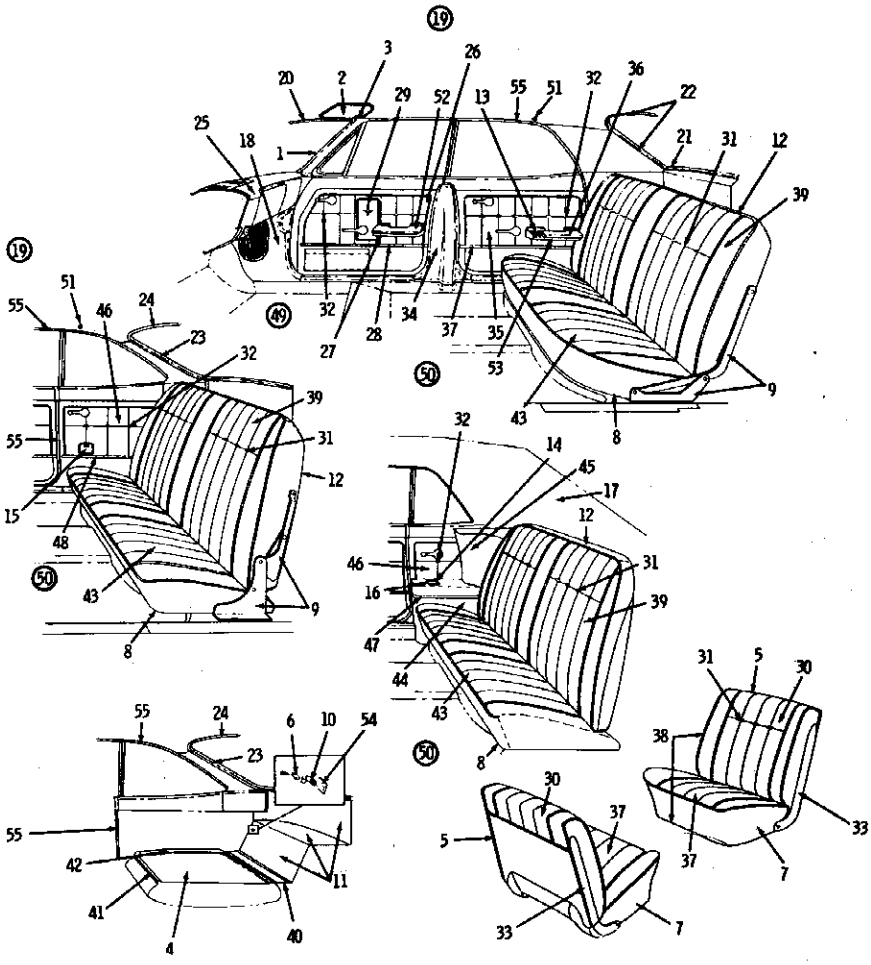

1966 CORVAIR MONZA–CORSA INTERIOR TRIM
(10500-10700)

1.	10.051	MOLDING, Windshield side garnish plastic
2.	10.203	SUNSHADE, Trimmed
3.	10.219	SUPPORT, Sunshade
4.	11.360	FOUNDATION, Rear seat fldg. back trim
5.	11.373	BACK, Passenger seat less trim cover
7.	11.419	CUSHION, Passenger seat less trim cover
8.	11.610	CUSHION, Rear seat less trim cover
9.	11.620	LINK, Rear seat folding panel
10.	11.620	STRIKER, Rear Seat Folding Back Panel
11.	11.620	FOUNDATION, Rear seat compartment front and shelf
12.	11.628	BACK, Rear seat less trim cover
13.	12.045	TRAY, Rear door arm rest ash
14.	12.045	TRAY, Rear quarter arm rest ash
15.	12.045	TRAY, Rear quarter ash
16.	12.048	ESCUTCHEON, Rear quarter arm rest ash tray
17.	13.347	TRIM, Folding top roof
18.	14.630	PANEL, Shroud plastic
19.	14.640	HEADLINING, Less listing wires
20.	14.650	LACE, Windshield header trim finish
21.	14.650	LACE, Back window finishing escutcheon
22.	14.650	LACE, Back window finish upper and side
23.	14.650	LACE, Back window finish lower and side
24.	14.650	LACE, Back window trim finish upper
25.	14.655	COVER, Instrument panel upper
26.	14.685	TRIM, Front door
27.	14.686	BASE, Front door arm rest
28.	14.691	MOLDING, Front door trim pad lower
29.	14.691	EMBLEM, Front door trim pad
30.	14.800	COVER, Driver and passenger seat back
31.	14.804	BUTTON, Seat back
32.	14.804	BUTTON, Door and quarter trim pad
33.	14.818	MOLDING, Passenger seat back outer
34.	14.730	COVER, Center pillar
35.	14.760	TRIM, Rear door
37.	14.880	COVER, Driver seat cushion
38.	N.S.	SEAT, Passenger complete
39.	15.000	COVER, Rear seat back
40.	15.011	EXTENSION, Rear seat folding back panel
41.	15.011	MOLDING, Rear seat folding back trim finish upper
42.	15.011	MOLDING, rear seat folding back trim finish side
43.	15.035	COVER, Rear seat cushion
44.	15.100	TRIM, Top compartment side trim panel lower
45.	15.100	TRIM, Top compartment side trim panel upper
46.	15.100	TRIM, Rear quarter
47.	15.101	MOLDING, Top compartment side lower trim finish
48.	15.101	MOLDING, Rear quarter trim pad
49.	15.286	CARPET, Front floor
50.	15.306	CARPET, Rear floor
51.	15.388	HOOK, Coat
52.	14.686	COVER, Front door arm rest
53.	14.762	BASE, Rear door arm rest
54.	11.620	PLATE, Rear seat folding back finish
55.	15.520	LACE, Pinchweld 25 yard roll

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

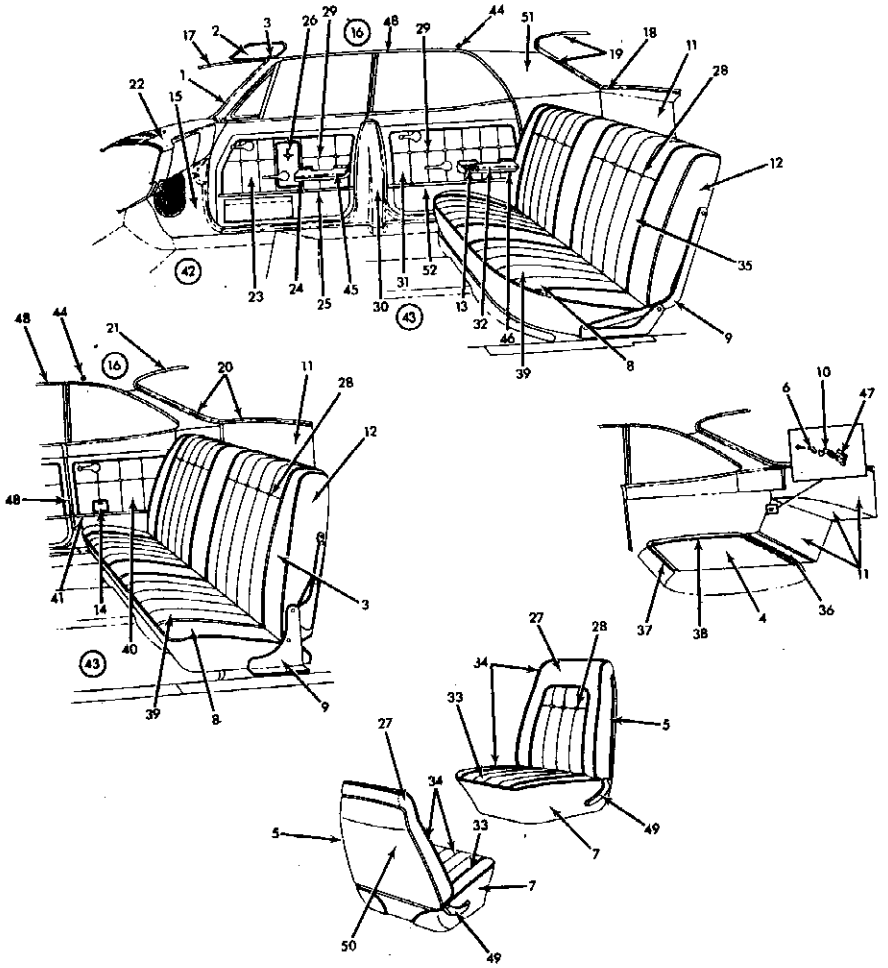

1967-68 CORVAIR MONZA INTERIOR TRIM (10500)

1.	10.051	MOLDING, Windshield Side Garnish Plastic
2.	10.203	SUNSHADE, Trimmed
3.	10.219	SUPPORT, Sunshade
4.	11.360	FOUNDATION, Rear Seat Folding Back Trim
5.	11.373	BACK, Passenger Seat Less Trim Cover
6.	11.381	BUMPER, Rear Seat Folding Back
7.	11.419	CUSHION, Passenger Seat Less Trim Cover
8.	11.610	CUSHION, Rear Seat Less Trim Cover
9.	11.620	LINK, Rear Seat Folding Panel
10.	11.620	STRIKER, Rear Seat Folding Back Panel
11.	11.620	FOUNDATION, Rear Seat Compartment Front and Shelf
12.	11.628	BACK, Rear Seat Less Trim Cover
13.	12.045	TRAY, Rear Door Arm Rest Ash
14.	12.045	TRAY, Rear Quarter Ash
15.	14.630	PANEL, Shroud Plastic
16.	14.640	HEADLINING, Less Listing Wires
17.	14.650	LACE, Windshield Header Trim Finish
18.	14.650	LACE, Back Window Finishing Excutcheon
19.	14.650	LACE, Back Window Finish Upper and Side
20.	14.650	LACE, Back Window Finish Lower and Side
21.	14.650	LACE, Back Window Trim Finish Upper
22.	14.655	COVER, Instrument Panel Upper
23.	14.685	TRIM, Front Door
24.	14.686	BASE, Front Door Arm Rest
25.	14.691	MOLDING, Front Door Trim Pad
26.	14.691	EMBLEM, Front Door Trim Pad
27.	14.800	COVER, Driver and Passenger Seat Back
28.	14.804	BUTTON, Seat Back
29.	14.804	BUTTON, Door and Quarter Trim Pad
30.	14.730	COVER, Center Pillar
31.	14.760	TRIM, Rear Door
32.	14.762	COVER, Rear Door Arm Rest
33.	14.880	COVER, Driver Seat Cushion
34.	N.S.	SEAT, Passenger Complete
35.	15.000	COVER, Rear Seat Back
36.	15.011	EXTENSION, Rear Seat Folding Back Panel
37.	15.011	MOLDING, Rear Seat Folding Back Trim Finish Upper
38.	15.011	MOLDING, Rear Seat Folding Back Trim Finish Side
39.	15.035	COVER, Rear Seat Cushion
40.	15.100	TRIM, Rear Quarter
41.	15.101	MOLDING, Rear Quarter Trim Pad
42.	15.286	CARPET, Front Floor
43.	15.306	CARPET, Rear Floor
44.	15.388	HOOK, Coat
45.	14.686	COVER, Front Door Arm Rest
46.	14.762	BASE, Rear Door Arm Rest
47.	11.620	PLATE, Rear Seat Folding Back Finish
48.	15.520	LACE, Pinchweld 25 Yard Roll
49.	11.375	COVER, Front Back Outer Hinge Arm
50.	11.358	PANEL, Seat Back
51.	14.645	TRIM, Rear Quarter Above Belt
52.	14.764	MOLDING, Rear Door Trim Pad

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron JS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

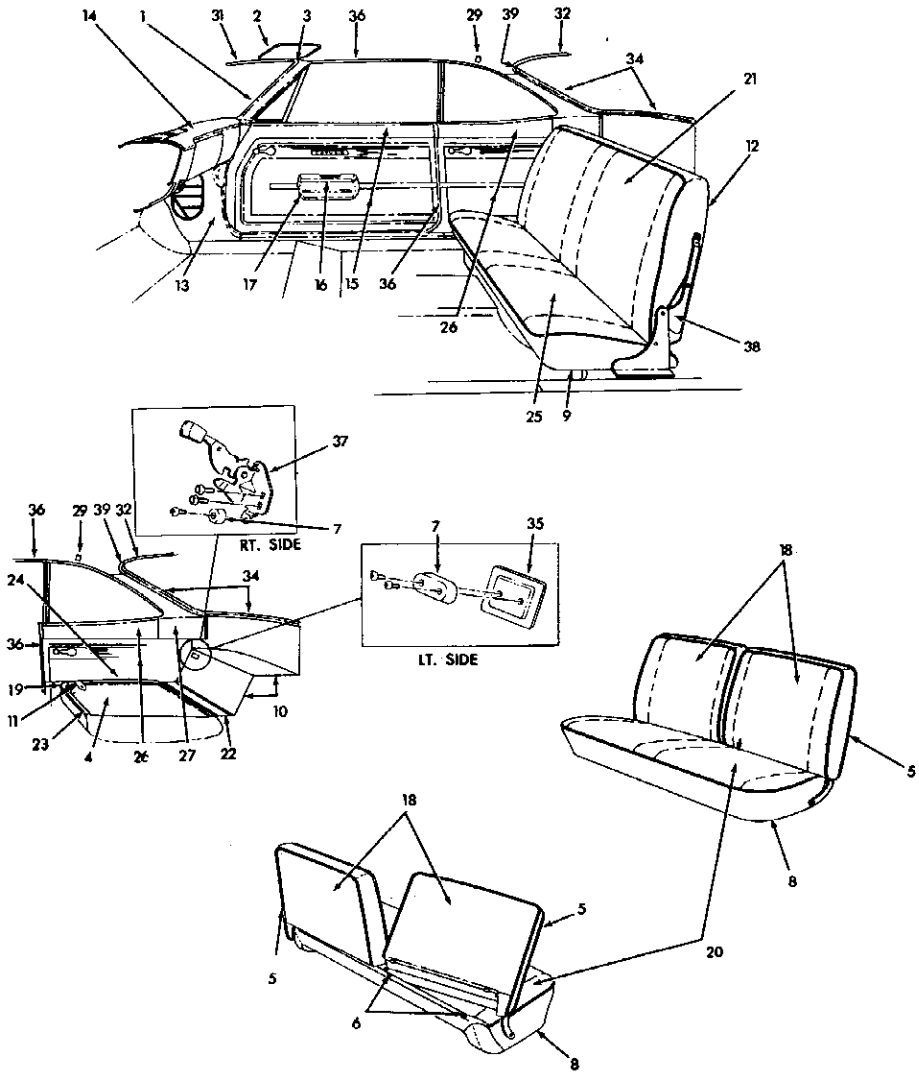

1969 CORVAIR 500 INTERIOR TRIM (10137)

1.	10.051	MOLDING, Windshield Side Garnish Plastic
2.	10.203	SUNSHADE, Trimmed
3.	10.219	SUPPORT, Sunshade
4.	11.360	FOUNDATION, Rear Seat Folding Back Trim
5.	11.373	BACK, Front Seat Less Trim Cover
6.	11.381	BUMPER, Front Seat Back Frame
7.	11.381	BUMPER, Rear Seat Folding Back
8.	11.419	CUSHION, Front Seat Less Trim Cover
9.	11.610	CUSHION, Rear Seat Less Trim Cover
10.	11.620	FOUNDATION, Rear Seat Compartment Front and Shelf
11.	11.620	STRIKER, Rear Seat Folding Back Panel
12.	11.628	BACK, Rear Seat Less Trim Cover
13.	14.630	PANEL, Shroud Plastic
14.	14.655	COVER, Instrument Panel Upper
15.	14.685	TRIM, Front Door
16.	14.686	COVER, Front Door Arm Rest
17.	14.686	BASE, Front Door Arm Rest
18.	14.800	COVER, Front Seat Back
19.	14.818	ESCUTCHEON, Rear Seat Back Cover Finish Molding
20.	14.880	COVER, Front Seat Cushion
21.	15.000	COVER, Rear Seat Back
22.	15.011	EXTENSION, Rear Seat Folding Back Panel
23.	15.011	MOLDING, Rear Seat Folding Back Trim Finish Upper
24.	15.011	MOLDING, Rear Seat Folding Back Trim Finish Side
25.	15.035	COVER, Rear Seat Cushion
26.	15.100	TRIM, Rear Quarter
27.	15.100	FOUNDATION, Rear Quarter Lower
28.	15.286	MAT, Front Floor Rubber
29.	15.388	HOOK, Coat
30.	15.306	MAT, Rear Floor Rubber
31.	14.650	LACE, Windshield Upper Trim Finish
32.	14.650	LACE, Back Window Trim Finish Upper
33.	14.640	HEADLINING, Less Listing Wires
34.	14.650	LACE, Back Window Finish Lower and Side
35.	11.620	PLATE, Rear Seat Folding Back on Wheelhouse
36.	15.520	LACE, Pinchweld 25 Yard Roll
37.	11.620	LOCK, Folding Rear Seat Back
38.	11.620	LINK, Rear Seat Folding Back
39.	14.650	ESCUTCHEON, Back Window Trim Finish Lace Upper Corner

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

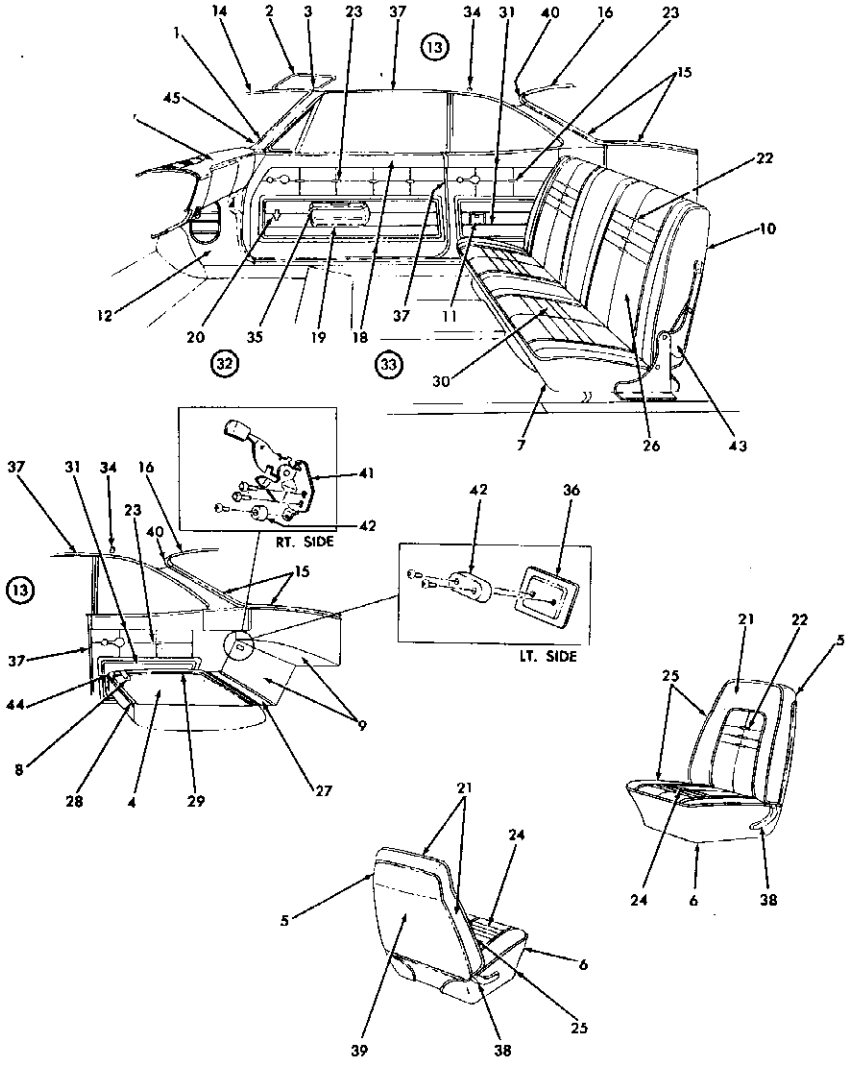

1969 CORVAIR MONZA INTERIOR TRIM (10537–67)

1.	10.051	MOLDING, Windshield Side Garnish Plastic (37 Style)
2.	10.203	SUNSHADE, Trimmed
3.	10.219	SUPPORT, Sunshade
4.	11.360	FOUNDATION, Rear Seat Folding Back Trim
5.	11.373	BACK, Passenger Seat Less Trim Cover
6.	11.419	CUSHION, Passenger Seat Less Trim Cover
7.	11.610	CUSHION, Rear Seat Less Trim Cover
8.	11.620	STRIKER, Rear Seat Folding Back Panel
9.	11.620	FOUNDATION, Rear Seat Compartment Front and Shelf
10.	11.628	BACK, Rear Seat Less Trim Cover
11.	12.045	TRAY, Rear Quarter Ash
12.	14.630	PANEL, Shroud Plastic
13.	14.640	HEADLINING, Less Listing Wires
14.	14.650	LACE, Windshield Header Trim Finish
15.	14.650	LACE, Back Window Finish Lower and Side
16.	14.650	LACE, Back Window Trim Finish Upper
17.	14.655	COVER, Instrument Panel Upper
18.	14.685	TRIM, Front Door
19.	14.686	BASE, Front Door Arm Rest
20.	14.691	EMBLEM, Front Door Trim Pad
21.	14.800	COVER, Driver & Passenger Seat Back
22.	14.804	BUTTON, Seat Back
23.	14.804	BUTTON, Door and Quarter Trim Pad
24.	14.880	COVER, Driver & Passenger Seat Cushion
25.	14.896	SEAT, Driver & Passenger Complete
26.	15.000	COVER, Rear Seat Back
27.	15.011	EXTENSION, Rear Seat Folding Back Panel
28.	15.011	MOLDING, Rear Seat Folding Trim Finish Upper
29.	15.011	MOLDING, Rear Seat Folding Back Trim Finish Side
30.	15.035	COVER, Rear Seat Cushion
31.	15.100	TRIM, Rear Quarter
32.	15.286	CARPET, Front Floor
33.	15.306	CARPET, Rear Floor
34.	15.388	HOOK, Coat
35.	14.686	COVER, Front Door Arm Rest
36.	11.620	PLATE, Rear Seat Folding Back Finish
37.	15.520	LACE, Pinchweld 25 Yard Roll
38.	11.375	COVER, Front Back Hinge Arm
39.	11.358	PANEL, Seat Back
40.	14.650	ESCUTCHEON, Back Window Trim Finish Lace Upper Corner
41.	11.620	LOCK ASSY, Folding Rear Seat Back
42.	11.381	BUMPER, Rear Seat Folding Back
43.	11.620	LINK, Rear Seat Folding Back
44.	14.818	ESCUTCHEON, Rear Seat Back Finish Molding
45.	10.051	TRIM ASSY, Garnish Molding (67 Style)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

14.050 RAIL ASSY., Folding Top Front Roof

62-64	MONZA (CONV.)	4887023		1
65-69	MONZA (CONV.)	4470559		1

14.060 WEATHERSTRIP—FASTENER, Folding Top Front Roof Rail

65-69	CORVAIR (CONV.)	4536299	header corner sealing	2
62-64	MONZA (CONV.)	4889378	**WEATHERSTRIP ASSY.**, center	1
62-64	MONZA (CONV.)	4875638	**WEATHERSTRIP ASSY.**, front (black)	1
62-64	MONZA (CONV.)	4875639	**WEATHERSTRIP ASSY.**, front (ivory)	1
64	MONZA (CONV.)	4445756	**WEATHERSTRIP ASSY.**, front (beige)	1
65-69	CORVAIR (CONV.)	4468505	**WEATHERSTRIP ASSY.**, front (complete) (no color)	1
65-68	CORVAIR (CONV.)	4501462	**WEATHERSTRIP ASSY.**, front (black)	1
65	CORVAIR (CONV.)	4501463	**WEATHERSTRIP ASSY.**, front (ivory)	1
65-66	CORVAIR (CONV.)	4501464	**WEATHERSTRIP ASSY.**, front (fawn)	1
66-68	MONZA (CONV.)	7593889	**WEATHERSTRIP ASSY.**, front (white)	1
67	MONZA (CONV.)	7663954	**WEATHERSTRIP ASSY.**, front (blue)	1
68	CORVAIR (CONV.)	7773065	**WEATHERSTRIP ASSY.**, front (blue)	1
65-69	CONV.	4876498	**FASTENER**, front roof rail w/strip—(10.695)	A.R.

14.080 LOCK ASSY.—HOOK—SCREW—SPRING, Folding Top Front Roof Rail

62-64	MONZA (CONV.)	4873201	(black) (paint as reqd.)	R.H.
62-64	MONZA (CONV.)	4873202	(black) (paint as reqd.)	L.H.
65-67	MONZA (CONV.)	4484803	(painted)	R.H.
65-67	MONZA (CONV.)	4484804	(painted)	L.H.
68-69	CORVAIR (CONV.)	7762270	(painted)	R.H.
68-69	CORVAIR (CONV.)	7762271	(painted)	L.H.
62-69	MONZA (CONV.)	5716613	**HOOK**, lock handle	2
65-69	MONZA (CONV.)	4412843	**SCREW**, handle and lock ($^{5}/_{16}$—18 x $^{5}/_{8}$ w/nylon pellet)	4
64-69	MONZA (CONV.)	5714492	**SPRING**, lock handle return	2

14.090 GUIDE—PLATE, Folding Top Front Roof Rail

62-64	MONZA (CONV.)	4869490		2
65	MONZA (CONV.)	4410878		A.R.
62-64	MONZA (CONV.)	4869402	**PLATE**, guide	2
65-69	CORVAIR (CONV.)	4523858	**PLATE**, wedge	R.H.
65-69	CORVAIR (CONV.)	4523859	**PLATE**, wedge	L.H.

14.100 RAIL ASSY., Folding Top Side Roof—Front

62-64	MONZA (CONV.)	4403098		R.H.
62-64	MONZA (CONV.)	4403099		L.H.
65	MONZA (CONV.),			
66-69	MONZA (CONV.) w/elect. top	4470687		R.H.
65	MONZA (CONV.),			
66-69	MONZA (CONV.) w/elect. top	7595495		L.H.
66-69	MONZA (CONV.) (exc. elect. top)	7601361		L.H.
66-69	MONZA (CONV.) (exc. elect. top)	7601360		R.H.

14.102 CABLE ASSY.—CABLE—LINK, Folding Top Trim Hold Down

62-64	MONZA (CONV.)	4403086		2
65	CORVAIR (CONV.) (exc. power top)	4470724		2
66-69	MONZA (CONV.)	7595483		2
65	CORVAIR (CONV.) w/power top	4528847	**CABLE**	2
65	CORVAIR (CONV.) w/power top	4536215	**LINK**, fldg. top material cable to rail	R.H.

14.120 WEATHERSTRIP ASSY., Folding Top Side Roof Rail—Front

62-64	MONZA (CONV.)	4889374		R.H.
62-64	MONZA (CONV.)	4889375		L.H.
65-69	MONZA (CONV.)	7622474		R.H.
65-69	MONZA (CONV.)	7622475		L.H.

14.130 BOW ASSY.—RETAINER—SPACER—SUPPORT, Fldg. Top

62-64	MONZA (CONV.)	4872991	frt.	1
65-67	MONZA (CONV.)	4470717	frt.	1
68-69	MONZA (CONV.)	7762137	front	1
65-69	MONZA (CONV.)	4496321	**RETAINER**, frt. bow material	1
62-69	CONV.	4877298	**SPACER**, frt. bow	4
65-69	MONZA (CONV.)	4541724	**SUPPORT**, frt. bow	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

14.140 LINK ASSEMBLY—LINK, Folding Top Side Roof Rail Control

62-64	MONZA (CONV.)	4873007		L.H.
65-69	MONZA (CONV.)	4470675	**LINK**	R.H.
65-69	MONZA (CONV.)	4470676	**LINK**	L.H.

14.155 BOLT—SCREW, Folding Top Side Roof Rail Control Link

62-69	CONV.	4799863	rr. rail to hinge (3/8"—16 x 1 3/8")	2
62-65	MONZA (CONV.)	4867563	rr. rail to hinge	2
63	MONZA (CONV.)	4848777	folding top male hinge to brace (3/8"—16 x 5/8" w/1 1/4" conical washer)	6
65-69	MONZA (CONV.)	4865924	top link to frt. hinge	2
65-69	MONZA (CONV.)		top upper rear control link lower,	
65-69	MONZA (CONV.)	4865925	side roof rail frt. link to supt., top	A.R.
65	MONZA (CONV.)	4849335	lift to rear rail	2
64	MONZA (CONV.)		side roof rail rr. link side roof center to rr. rail, top upper rr. control link lwr.,	
65-69	MONZA (CONV.)	4872649	top rr. bow to rr. rail	A.R.
64	MONZA (CONV.)	4410943	male hinge to brace	A.R.
65-69	MONZA (CONV.)	4410659	side roof frt. to ctr. rail (3/8—16 x 7/32")	2
65-69	MONZA (CONV.)	4412920	top lift to male hinge (1/2"—20 x 9/16" w/nylon insert)	4
65-69	MONZA (CONV.)	4474722	female hinge to rr. rail	2
65-69	MONZA (CONV.)	4402351	female hinge to supt., roof rail to female hinge	A.R.
65-69	MONZA (CONV.)	4474248	side roof center to rr. rail	2
65-69	MONZA (CONV.)	4799863	lift to rear rail	2
66-69	MONZA (CONV.)	7601368	frt. bow link to control link	2
69	CORVAIR (CONV.)	8768114	f/top adj. plt., shldr. strp, f/top fem. hge to mtg. support	A.R.
62-69	MONZA (CONV.)	4412619	**SCREW,** frt. bow to supt., frt. bow to rail (1/4"—28 x 3/4")	4
65-69	MONZA (CONV.)	4873985	**SCREW,** top center bow to rr. rail	4
65-67	CONV. (1st design)	4459123	**SCREW,** side roof rail stop (1/4—20 x 1 1/8) w/nylon insert	2
67-69	CORVAIR (CONV.) (2nd design)	7699335	**SCREW,** side roof rail stop set (5/16"—18 x 1 1/4") w/nylon insert	2
63-64	MONZA (CONV.)	4872589	**SCREW,** side roof rail stop set (5/16—18 x 1 1/8)	2
65-69	CORVAIR (CONV.)	4526694	**SCREW,** side roof rail to actuator (3/8—16 x 5/8)	6

14.157 NUT, Roof Rail

ALL	CONV.	9422297	rr. rail to lift (8.917)	A.R.

14.160 BUSHING, Folding Top Side Roof Rail—Front

62-67	CONV.,			
68-69	CORVAIR (CONV.)	4614589	front to center rail	2
62-63	MONZA (CONV.)	4613553	lift to rr. rail	2
62-64	CONV.	4613555	rr. rail to hinge	2
62-65	CONV.	4865922	center to rear rail	2
64-66	MONZA (CONV.)		rear bow and lift to rear rail,	
65-69	CORVAIR (CONV.)	4865916	control link to rr. rail, rr. bow to rr. rail bushing	A.R.
62-67	MONZA (CONV.)	4865920	side rail control link	A.R.
62-65	MONZA (CONV.)	4613551	rr. bow to rr. rail	A.R.
62-64	MONZA (CONV.)	4637185	upper rr. control link lower	2
65-69	MONZA (CONV.)	4408326	top link to frt. rail hinge bushing	2
65-69	MONZA (CONV.)	4408329	side roof rail frt. link to supt.	2
65-69	MONZA (CONV.)	4474249	side roof center to rr. rail	2
65-69	MONZA (CONV.)	4474723	female hinge to rr. rail	2

14.162 WASHER, Folding Top Side Roof Rail Control Link

62-67	CONV.	4574152	center to rr. rail spring	2
65-67	MONZA (CONV.)	4414102	frt. link to support	2
65-69	MONZA (CONV.)	4497001	female hinge to rr. rail	2
ALL	ALL	3782158	top link to frt. rail hinge, top compt. link to rr. rail, top rr. bow to rr. rail—(4.037)	A.R.
68-69	MONZA (CONV.)	4574150	side roof center to rear rail	2

14.170 RAIL ASSY., Folding Top Side Roof

62-64	MONZA (CONV.)	4873014	center	R.H.
62-64	MONZA (CONV.)	4873015	center	L.H.
62-64	MONZA (CONV.)	4403122	rear	R.H.
62-64	MONZA (CONV.)	4403123	rear	L.H.
65-66	MONZA (CONV.)	7598973	center and adj. plate	R.H.
65	MONZA (CONV.)	4470701	center and adj. plate	L.H.
65-68	MONZA (CONV.)	4470707	rr	R.H.
65-68	MONZA (CONV.)	4470708	rr	L.H.
66	MONZA (CONV.)	7601364	center and adj. plt.	R.H.
66	MONZA (CONV.)	7601365	center and adj. plt.	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit

67-69	MONZA (CONV.)	7726564	center and adj. plate	R.H.
67-69	MONZA (CONV.)	7726565	center and adj. plate	L.H.
67-69	MONZA (CONV.) w/power top	7726560	center and adj. plate	R.H.
67-69	MONZA (CONV.) w/power top	7726561	center and adj. plate	L.H.

14.190 WEATHERSTRIP—STRIP, Folding Top Side Roof Rail—Center

62-64	MONZA (CONV.)	4892664		R.H.
62-64	MONZA (CONV.)	4892665		L.H.
65-69	MONZA (CONV.)	7622476		R.H.
65-69	MONZA (CONV.)	7622477		L.H.
62-64	MONZA (CONV.)	4873434	**STRIP,** center roof rail rubber filler	2

14.215 BOW ASSY., Folding Top—Center

62-64	MONZA (CONV.)	4872996		1
65-67	MONZA (CONV.)	4470720		1
68-69	MONZA (CONV.)	7762151		1

14.260 WEATHERSTRIP—FASTENER, Folding Top Side Roof Rail—Rear

65-69	MONZA (CONV.)	4810238	rubber filler	1
62-64	MONZA (CONV.)	4873040		R.H.
62-64	MONZA (CONV.)	4873041		L.H.
65-69	MONZA (CONV.)	4468514		R.H.
65-69	MONZA (CONV.)	4468515		L.H.
62-69	CONV.	4866841	**FASTENER,** weatherstrip, side roof rail rear	2

14.310 HINGE ASSY.—CATCH ASSY., Folding Top

62-64	MONZA (CONV.)	4872962	male	R.H.
62-64	MONZA (CONV.)	4872963	male	L.H.
65-69	MONZA (CONV.)	4470703	female	R.H.
65-69	MONZA (CONV.)	4470704	female	L.H.
62-64	MONZA (CONV.)	4873827	**CATCH ASSY.,** center rail	2
65-69	MONZA (CONV.)	4470697	**CATCH ASSY.,** center rail	2

14.340 BOW ASSY., Folding Top, Rear

62-64	MONZA (CONV.)	4873001		1
65-67	MONZA (CONV.)	4470723		1
68-69	CORVAIR	7762165		1

14.472 HOSE ASSY.—CABLE ASSY., Folding Top Hydraulic Pump

62-64	MONZA (CONV.) w/power top	4881370	to top of lift	1
62-64	MONZA (CONV.) w/power top	4881372	to bottom of lift, to lift cyl. lower	1
65-69	CORVAIR (CONV.) w/power top	4484755	**CABLE ASSY.,** fldg. top actuator drive	2

14.475 LIFT ASSEMBLY—ACTUATOR ASSY.—SPACER, Folding Top

62-64	MONZA (CONV.)	4874872	manual (counterbalanced)	2
62-64	MONZA (CONV.) w/power top	4881373	hydraulic	2
65-69	MONZA (CONV.)	4481677	manual (counterbalanced)	2
65-69	CORVAIR (CONV.) w/power top	4484753	**ACTUATOR ASSY.,**	R.H.
65-69	CORVAIR (CONV.) w/power top	4484754	**ACTUATOR ASSY.,**	L.H.
62-64	MONZA (CONV.)	4877964	**SPACER,** hinge, lift to rr. rail, lift guide	2
65-67	MONZA (CONV.)	4411025	**SPACER,** lift guide counterbalance	2
68-69	MONZA (CONV.)	7725564	**SPACER,** lift to counterbalance	2

14.478 BOLT, Folding Top Lift

62-64	MONZA (CONV.)	4874012	to support ($^{3}/_{8}$—16 x 2—1/6)	2
62-64	MONZA (CONV.)	4892590	to rear rail ($^{3}/_{8}$—16 x $1^{3}/_{8}$)	2

14.481 MOTOR ASSY.—ARMATURE—BRUSH—FIELD ASSY.—HOLDER, Folding Top Hydraulic

62-64	MONZA (CONV.)	4881471	w/pump	1
62-64	MONZA (CONV.)	5044529	hydraulic pump	1
65-69	CORVAIR (CONV.)	5045514	electric	1
62-64	CONV.	4910507	**ARMATURE,** pump motor	1
65-69	CORVAIR (CONV.)	4907022	**BRUSH,** top motor	2
62-64	MONZA (CONV.)	4912446	**FIELD ASSY.,** pump motor	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-65	MONZA (CONV.)	4910916	HOLDER, w/case, pump motor brush (inc. circuit breaker)	1

14.482 PARTS, Folding Top Motor and Pump

62-65	MONZA (CONV.)	4666390	BALL, hydraulic pump (steel)	4
62-69	CONV.	3698109	GROMMET, hydraulic pump mtg. (rubber—1/2)	4
	Not required in this group. See group 9.220	3733380	GROMMET	
62-64	MONZA (CONV.)	4868619	PLATE ASSY., hydraulic pump cover	1
62-65	CONV.	4868622	ROTOR, hydraulic pump motor inner	1
62-65	CONV.	4868623	ROTOR, hydraulic pump motor outer	1
62-65	CONV.	4666766	SEAL, hydraulic motor hose to motor	2
62-67	CONV.	4868618	SEAL, hydraulic pump motor shaft	1
65-69	CORVAIR (CONV.)	5077933	BOLT, top motor tie	2
65-69	CORVAIR (CONV.)	9703046	BUSHING, top motor	1
65-69	CORVAIR (CONV.)	9703047	GEAR, top motor drive	1
65-69	CORVAIR (CONV.)	9703048	GEAR, top motor driven	1
65-69	CORVAIR (CONV.)	9703049	SHAFT, top motor	1
65-69	CORVAIR (CONV.)	9703050	COVER, motor gear housing	1
65-69	CORVAIR (CONV.)	9703051	SUPPORT, top motor	1
65	CORVAIR (CONV.)	4908709	SPRING, top motor—(10.150)	2
65-69	CORVAIR (CONV.)	4911192	HOLDER, motor brush	1
65-69	CORVAIR (CONV.)	4915548	ARMATURE, top motor	1

14.483 SWITCH ASSY.—KNOB—CLIP—HOUSING—ESCUTCHEON—BRACKET, Folding Top

62-64	MONZA (CONV.) (exc. Tubocharger)	3814719		1
62-64	MONZA w/Turbocharger	4634122	(10.777)	1
65-68	MONZA (CONV.)	3840095	(12.195)	1
67	CONV.	3906118	(12.195)	1
62-66	MONZA (CONV.)	3782579	KNOB, switch—(12.195)	1
62-68	MONZA (CONV.)	4154886	CLIP, switch—(10.777)	1
65-69	MONZA (CONV.)	3921418	HOUSING, switch—(12.195)	1
65-68	MONZA (CONV.)	3840096	ESCUTCHEON, switch—(12.195)	1
65-68	CORVAIR (CONV.),			
68-69	CORVAIR (SPT. CPE.) w/rear defroster	3858818	BRACKET, switch	1

14.486 RESERVOIR AND PARTS, Folding Top Hydraulic Pump

62-64	MONZA (CONV.)	4868620		1
62-69	CONV.	4666395	SEAL, reservoir	1
62-64	CONV.	4666393	PLUG, reservoir filler	1
62-64	MONZA (CONV.)	4868621	BOLT ASSY., reservoir	1

14.490 BREAKER ASSEMBLY, Folding Top Circuit

62-64	MONZA (CONV.)	4849850	40 amp.—(13.095)	1

14.494 HARNESS ASSY., Folding Top Switch

67-69	MONZA (CONV.) w/elect. top	6291927		1

14.630 PAD—PANEL, Cowl Trim

For CORVAIR Grilles See Group 9.789.

PANEL

65-66	CORVAIR (exc. CONV.)	4484976	(red) (plastic)	R.H.
65-66	CORVAIR (exc. CONV.)	4484977	(red) (plastic)	L.H.
65-66	MONZA (exc. CONV.),			
67-69	CORVAIR (exc. CONV.)	4484966	(black) (plastic)	R.H.
65-66	MONZA (exc. CONV.),			
67-69	CORVAIR (exc. CONV.)	4484967	(black) (plastic)	L.H.
65	MONZA (exc. CONV.)	4484968	(blue) (plastic)	R.H.
65-69	CORVAIR (CONV.)	4527053	(black) (plastic)	L.H.
65-69	CORVAIR (CONV.)	4527052	(black) (plastic)	R.H.
65	MONZA (exc. CONV.)	4484970	(slate) (plastic)	R.H.
65-66	CORVAIR (CONV.)	4527054	(red) (plastic)	R.H.
65-66	CORVAIR (CONV.)	4527055	(red) (plastic)	L.H.
66	CORVAIR (STD.)	7591166	(blue) (plastic)	R.H.
66	CORVAIR (STD.)	7591167	(blue) (plastic)	L.H.
66	CORVAIR (exc. CONV.)	7591172	(fawn) (plastic)	R.H.
66	CORVAIR (exc. CONV.)	7591173	(fawn) (plastic)	L.H.
66	MONZA (exc. CONV.)	7591168	(blue) (plastic)	R.H.
66	MONZA (exc. CONV.)	7591169	(blue) (plastic)	L.H.
66	MONZA (exc. CONV.)	7591170	(turquoise) (plastic)	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

66	MONZA (exc. CONV.)	7591171	(turquoise) (plastic)	L.H.
66	MONZA (exc. CONV.)	7591174	(bronze) (plastic)	R.H.
66	MONZA (exc. CONV.)	7591175	(bronze) (plastic)	L.H.
66	CORVAIR (CONV.)	7592428	(blue) (plastic)	R.H.
66	CORVAIR (CONV.)	7592429	(blue) (plastic)	L.H.
66	CORVAIR (CONV.)	7592433	(fawn) (plastic)	L.H.
66	CORVAIR (CONV.)	7592434	(bronze) (plastic)	R.H.
66	CORVAIR (CONV.)	7592435	(bronze) (plastic)	L.H.
67	MONZA (CONV.)	7647586	(gold) (plastic)	R.H.
67	MONZA (CONV.)	7647587	(gold) (plastic)	L.H.
67	MONZA (CONV.)	7712003	(blue) (plastic)	R.H.
67	MONZA (CONV.)	7712004	(blue) (plastic)	L.H.
67	MONZA	7647576	(gold) (plastic)	R.H.
67	MONZA	7647577	(gold) (plastic)	L.H.
68	CORVAIR (exc. CONV.)	7647578	(blue) (plastic)	R.H.
67	CORVAIR (exc. CONV.)	7647579	(blue) (plastic)	L.H.
67	CORVAIR (STD.)	7647582	(fawn) (plastic)	R.H.
67	CORVAIR (STD.)	7647583	(fawn) (plastic)	L.H.
68	CORVAIR (SPT. CPE.)	7730447	(blue)	R.H.
68	CORVAIR (SPT. CPE.)	7730448	(blue)	L.H.
68	CORVAIR (SPT. CPE.)	7730450	(gold)	R.H.
68	CORVAIR (SPT. CPE.)	7730451	(gold)	L.H.
68	MONZA (CONV.)	7730694	(blue)	R.H.
68	MONZA (CONV.)	7730695	(blue)	L.H.
68	MONZA (CONV.)	7730696	(gold)	R.H.
68	MONZA (CONV.)	7730697	(gold)	L.H.
69	MONZA (CONV.)	8729222	side finish (blue)	R.H.
69	MONZA (CONV.)	8729223	side finish (blue)	L.H.
69	CORVAIR (SPT. CPE.)	8729346	side finish (blue)	R.H.
69	CORVAIR (SPT. CPE.)	8729347	side finish (blue)	L.H.
69	CORVAIR (SPT. CPE.)	8742254	side finish (med. green)	R.H.
69	CORVAIR (SPT. CPE.)	8742255	side finish (med. green)	L.H.
69	CORVAIR (CONV.)	8742264	side finish (comb. 707) (med. green)	R.H.
69	CORVAIR (CONV.)	8742265	side finnish (comb. 707) (med. green)	L.H.

14.640 HEADLINING ASSEMBLY

64	CORVAIR (4-DR.) (exc. MONZA)	4397143	(comb. 731) (blue)	1
64	CORVAIR (4-DR.) (exc. MONZA)	4397143	(comb. 731) (blue)	1
65-66	CORVAIR STD. (4-DR.)	4475550	(comb. 701, 771) (fawn)	1
65-66	CORVAIR STD. (4-DR.)	4475551	(comb. 739, 782) (ivory)	1
65	CORVAIR STD. (2-DR.)	4527625	(comb. 723) (turquoise)	1
65-66	CORVAIR STD. (2-DR.)	4527626	(comb. 701, 771) (fawn)	1
65-66	CORVAIR STD. (2-DR.)	4527627	(comb. 739, 782) (ivory)	1
65-66	MONZA (4-DR.)	4475554	(comb. 713, 758) (black)	1
65-66	MONZA (4-DR.)	4475556	(comb. 773, 702) (fawn)	1
65-66	MONZA (2-DR.)	4475561	(comb. 713, 758) (black)	1
65-66	MONZA (2-DR.)	4475563	(comb. 702, 773) (fawn)	1
65-66	MONZA (SPT. CPE.)	4475564	(comb. 785, 795, 797, 798) (ivory)	1
66	CORVAIR (STD.) (2-DR.)	7605359	(comb. 721) (blue)	1
66	CORVAIR (STD.) (4-DR.)	4475552	(comb. 721) (blue)	1
66	MONZA (SPT. SED.)	7605367	(comb. 792) (turquoise)	1
66	MONZA (SPT. SED.)	7605366	(comb. 788) (bronze)	1
66	MONZA (SPT. SED.)	7605364	(comb. 722) (blue)	1
66	MONZA (SPT. CPE.)	7605361	(comb. 740) (red)	1
66	MONZA (SPT. CPE.)	7605360	(comb. 722) (blue)	1
66	MONZA (SPT. CPE.)	7605363	(comb. 792) (turq.)	1
66	MONZA (SPT. CPE.)	7605362	(comb. 788) (bronze)	1
67	CORVAIR (STD.) (SPT. CPE.)	7682903	(comb. 703) (parchment)	1
67	CORVAIR (SPT. CPE.)	7650735	(comb. 721) (blue)	1
67-69	CORVAIR (SPT. CPE.)	7650736	(comb. 700, 701, 703, 704, 751) (black)	1
67	MONZA (SPT. CPE.)	7650737	(comb. 713) (gold)	1
67	MONZA (SPT. CPE.)	7650738	(comb. 722) (brt. blue)	1
67	MONZA (SPT. CPE.)	7650740	(comb. 758) (black)	1
67	MONZA (SPT. SED.)	7695107	(comb. 758) (black)	1
67	MONZA (SPT. SED.)	7695106	(comb. 722) (brt. blue)	1
67	MONZA (SPT. SED.)	7695105	(comb. 713) (gold)	1
67	CORVAIR (STD.) (SPT. SED.)	7695104	(comb. 751) (black)	1
67	CORVAIR (STD.) (SPT. SED.)	7695103	(comb. 721) (blue)	1
67	CORVAIR (STD.) (SPT. SED.)	7695102	(comb. 746) (parchment)	1
68	CORVAIR (SPT. CPE.)	7743945	(comb. 706, 707) (dk. blue)	1
68	CORVAIR (SPT. CPE.)	7744435	(comb. 709, 710) (med. gold)	1
69	CORVAIR (SPT. CPE.)	8718841	(comb. 703, 704) (blue)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

69	CORVAIR (SPT. CPE.)	8742763	(med. green)	1

14.645 TRIM ASSY.—FASTENER, Rear Quarter Upper—Above Belt

64	MONZA (2-DR. SED.)	4397292	(comb. 712) (black)	R.H.
64	MONZA (2-DR. SED.)	4397293	(comb. 712) (black)	L.H.
64	MONZA (2-DR. SED.)	4397294	(comb. 727, 781) (ivory)	R.H.
64	MONZA (2-DR. SED.)	4397295	(comb. 727, 781) (ivory)	L.H.
64	MONZA (2-DR. SED.)	4397300	(comb. 758) (fawn)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7695140	(comb. 703) (parchment)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7695141	(comb. 703) (parchment)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7695150	(comb. 721) (blue)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7695151	(comb. 721) (blue)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7695152	(comb. 751) (black)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7695153	(comb. 751) (black)	L.H.
67	MONZA (SPT. SED.)	7695154	(comb. 713) (gold)	R.H.
67	MONZA (SPT. SED.)	7695155	(comb. 713) (gold)	L.H.
67	MONZA (SPT. SED.)	7695156	(comb. 722) (brt. blue)	R.H.
67	MONZA (SPT. SED.)	7695157	(comb. 722) (brt. blue)	L.H.
67	MONZA (SPT. SED.)	7695158	(comb. 758) (black)	R.H.
67	MONZA (SPT. SED.)	7695159	(comb. 758) (black)	L.H.
65-69	ALL	4500027	**FASTENER,** trim pad	A.R.

14.650 LACE—LACE ASSY., Headlining and Back Window Finishing

65 66	CORVAIR (STD.) (2-DR.), MONZA (SPT. CPE.)	4531326	back wind. finish lwr. and side (turquoise)	R.H.
65 66	CORVAIR (STD.) (2-DR.) MONZA (SPT. CPE.)	4531327	back wind. finish lwr. and side, (turquoise)	L.H.
65 66	CORVAIR STD. (2-DR.), MONZA (SPT. CPE.)	4531297	back wind. finish upper (turquoise)	1
65 66	CORVAIR STD., MONZA (exc. CONV.)	4495500	w/s header trim finish (med. turquoise)	1
65 66	CORVAIR STD. (4-DR.), MONZA (SPT. SED.)	4495508	back wind. finish esch. (med. turquoise)	1
65	CORVAIR (4-DR.)	4528643	back wind. finish upr. and side (fawn)	R.H.
65	CORVAIR (4-DR.)	4528644	back wind. finish upr. and side (fawn)	L.H.
65-66	CORVAIR (4-DR.)	4495510	back wind. finish esch. (red)	1
65-66	CORVAIR (4-DR.)	4495520	back wind. finish upr. and side (red)	R.H.
65-66	CORVAIR (4-DR.)	4495521	back wind. finish upr. and side (red)	L.H.
65	CORVAIR (SPT. CPE.)	4529246	back wind. finish and side (fawn)	R.H.
65	CORVAIR (SPT. CPE.)	4529247	back wind. finish and side (fawn)	L.H.
65-67	MONZA (4-DR.)	4495513	back wind. finish esch. (black)	1
65-69	MONZA (CONV.)	4495638	frt. roof rail pinchweld (black)	1
65	MONZA (4-DR.)	4495524	back wind. finish upr. and side (saddle)	R.H.
65 66	MONZA (4-DR.), CORVAIR STD. (4-DR.)	4495511	back wind. finish esch. (blue)	1
65 66	MONZA (4-DR.), CORVAIR STD. (4-DR.)	4495522	back wind. finish upr. and side (blue)	R.H.
65 66	MONZA (4-DR.), CORVAIR STD. (4-DR.)	4495523	back wind. finish upr. and side (blue)	L.H.
65-66 67	MONZA (4-DR.), CORVAIR (SPT. SED.)	4495526	back wind. finish upr. and side (black)	R.H.
65-66 67	MONZA (4-DR.), CORVAIR (SPT. SED.)	4495527	back wind. finish upr. and side (black)	L.H.
65-66	CORVAIR (exc. CONV.)	4495502	w/s header trim finish (red)	1
65	CORVAIR (exc. CONV.)	4528641	w/s header trim finish (fawn)	1
65-67	MONZA (exc. CONV.)	4495505	w/s header trim finish (black)	1
65	MONZA (exc. CONV.)	4495504	w/s header trim finish (saddle)	1
65-66	MONZA (exc. CONV.)	4495503	w/s header trim finish (blue)	1
65-66	MONZA (SPT. CPE.)	4495546	back wind. finish upr. (saddle)	1
65-66 67-69	MONZA (SPT. CPE.), CORVAIR (SPT. CPE.)	4495647	back wind. finish upr. (black)	1
65 66	MONZA (SPT. CPE.), CORVAIR STD. (SPT. CPE.)	4495548	back wind. finish upr. (blue)	1
65-66	CORVAIR (SPT. CPE.)	4495550	back wind. finish upr. (red)	1
65	MONZA (SPT. CPE.)	4495552	back wind. finish upr. (turquoise)	1
65-66	MONZA (SPT. CPE.)	4495532	back wind. finish lwr. and side (saddle)	R.H.
65	MONZA (SPT. CPE.)	4495533	back wind. finish lwr. and side (saddle)	L.H.
65-66 67-69	MONZA (SPT. CPE.), CORVAIR (SPT. CPE.)	4495534	back wind. finish lwr. and side (black)	R.H.
65-66 67-69	MONZA (SPT. CPE.), CORVAIR (SPT. CPE.)	4495535	back wind. finish lwr. and side (black)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65	MONZA (SPT. CPE.),			
66	CORVAIR STD. (SPT. CPE.)	4495536	back wind. finish lwr. and side (blue)	R.H.
65	MONZA (SPT. CPE.),			
66	CORVAIR STD. (SPT. CPE.)	4495537	back wind. finish lwr. and side (blue)	L.H.
65-66	CORVAIR (SPT. CPE.)	4495540	back wind. finish lwr. and side (red)	R.H.
65-66	CORVAIR (SPT. CPE.)	4495541	back wind. finish lwr. and side (red)	L.H.
66	CORVAIR (4-DR.)	4545693	back wind. escut. (fawn)	1
66	CORVAIR (4-DR.)	4545704	back wind. upper and side (fawn)	R.H.
66	CORVAIR (4-DR.)	4545705	back wind. upper and side (fawn)	L.H.
66	MONZA (4-DR.)	4545694	back wind. escut. (bronze)	1
66-67	MONZA (4-DR.)	4545689	back wind. escut. (blue)	1
66-68	MONZA (4-DR.)	4545700	back wind. (blue)	R.H.
66-68	MONZA (4-DR.)	4545701	back wind. (blue)	L.H.
66	MONZA (4-DR.)	4545706	back wind. upper and side (bronze)	R.H.
66	MONZA (4-DR.)	4545707	back wind. upper and side (bronze)	L.H.
66	CORVAIR (SPT. CPE.)	4545697	back wind. trim upper (fawn)	1
66	CORVAIR (SPT. CPE.)	4545687	back wind. lwr. and side (fawn)	R.H.
66	CORVAIR (SPT. CPE.)	4545688	back wind. lwr. and side (fawn)	L.H.
66-67	MONZA (SPT. CPE.)	4545683	back wind. lwr. and side (blue)	R.H.
66-67	MONZA (SPT. CPE.)	4545684	back wind. lwr. and side (blue)	L.H.
66	MONZA (SPT. CPE.)	4545690	back wind. lwr. and side (bronze)	R.H.
66	MONZA (SPT. CPE.)	4545691	back wind. lwr. and side (bronze)	L.H.
66-67	MONZA (SPT. CPE.)	4545695	back wind. upper (blue)	1
66	MONZA (SPT. CPE.)	4545698	back wind. upper (bronze)	1
66	CORVAIR (exc. CONV.)	4545713	windshield trim (fawn)	1
66-67	MONZA (exc. CONV.)	4545709	windshield trim (blue)	1
67	MONZA	7647621	windshield hdr. trim (gold)	1
67	MONZA (CONV.)	7669008	frt. roof rail pinchweld (blue)	1
67	CORVAIR (STD.)	7647622	windshield hdr. trim (fawn)	1
67	CORVAIR (STD.)	7647623	windshield hdr. trim (blue)	1
67	MONZA (SPT. SED.)	7647632	back wind. escut. (gold)	1
67	CORVAIR (STD.) (SPT. SED.)	7647633	back wind. escut. (fawn)	1
67	CORVAIR (STD.) (SPT. SED.)	7647634	back wind. escut. (blue)	1
67	MONZA (SPT. CPE.)	7647649	back wind. trim upper (gold)	1
67	CORVAIR (STD.) (SPT. CPE.)	7647650	back wind. trim upper (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.)	7647651	back wind. trim upper (blue)	1
67	MONZA (SPT. SED.)	7647638	back wind. upper and side (gold)	R.H.
67	MONZA (SPT. SED.)	7647639	back wind. upper and side (gold)	L.H.
67	MONZA (SPT. SED.)	7647642	back wind. upper and side (blue)	R.H.
67	MONZA (SPT. SED.)	7647643	back wind. upper and side (blue)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7647640	back wind. upper and side (fawn)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7647641	back wind. upper and side (fawn)	L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7647670	back wind. lwr. and side (blue)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7647671	back wind. lwr. and side (blue)	L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7647668	back wind. lwr. and d side (fawn)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7647669	back wind. lwr. and side (fawn)	L.H.
67	MONZA (SPT. CPE.)	7647666	back wind. lwr. and side (gold)	R.H.
67	MONZA (SPT. CPE.)	7647667	back wind. lwr. and side (gold)	L.H.
68	CORVAIR (STP. CPE.)	7730452	back wind. fin. lower and side (blue)	R.H.
68	CORVAIR (SPT. CPE.)	7730453	back wind. fin. lower and side (blue)	L.H.
68	CORVAIR (SPT. CPE.)	7730454	back wind. fin. lower and side (gold)	R.H.
68	CORVAIR (SPT. CPE.)	7730455	back wind. fin. lower and side (gold)	L.H.
68	CORVAIR (SPT. CPE.)	7730833	back wind. trim finish upper (blue)	1
68	CORVAIR (SPT. CPE.)	7730834	back wind. trim finish upper (gold)	1
68-69	CORVAIR (SPT. CPE.)	7787569	winshdield upper trim finish (black)	1
68	CORVAIR (SPT. CPE.)	7787570	windshield upper trim finish (blue)	1
68	CORVAIR (SPT. CPE.)	7787571	windshield upper trim finish (gold)	1
69	CORVAIR (SPT. CPE.)	8738816	trim fin. bk. window upper (dk. blue)	1
69	CORVAIR (SPT. CPE.)	8738817	trim fin. bk. window upper (med. green)	1
69	CORVAIR (SPT. CPE.)	8738818	trim fin. bk. window lower and side (dk. blue)	R.H.
69	CORVAIR (SPT. CPE.)	8738819	trim fin. bk. window lower and side (dk. blue)	L.H.
69	CORVAIR (SPT. CPE.)	8738820	trim fin. bk. window lower and side (med. green)	R.H.
69	CORVAIR (SPT. CPE.)	8738821	trim fin. bk. window lower andside (med. green)	L.H.
69	CORVAIR (SPT. CPE.)	8748310	trim fin. w/s upr. (comb. 703, 704) (dk. blue)	1
69	CORVAIR (SPT. CPE.)	8748311	trim fin. w/s upr. (comb. 707, 708) (med. green)	1
68	MONZA (CONV.)	7773752	**LACE ASSY.**, front roof rail pinchweld (blue)	1

14.651 RETAINER—ESCUTCHEON—PLATE—CLIP, Roof Inner Trim

65-67	CORVAIR (4-DR.)	7696305	back wind. side trim	R.H.
65-67	CORVAIR (4-DR.)	7696306	back wind. side trim	L.H.
65	CORVAIR (4-DR.)	4432019	back wind. side and upr. trim	A.R.
65-69	CORVAIR (SPT. CPE.)	4474316	back trim upr. trim	R.H.
65-69	CORVAIR (SPT. CPE.)	4474317	back trim upr. trim	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

67	CORVAIR (exc. CONV.)	4437706	windshield upper trim	1
68-69	CORVAIR (SPT. CPE.)	7745222	windshield upper trim	R.H.
68-69	CORVAIR (SPT. CPE.)	7745223	windshield upper trim	L.H.
65-66	CORVAIR (4-DR.)	4483514	**ESCUTCHEON,** back wind. lwr. corner finish, lace	R.H.
65-66	CORVAIR (4-DR.)	4483515	**ESCUTCHEON,** back wind. lwr. corner finish, lace	L.H.
65-69	CORVAIR (SPT. CPE.)	4487678	**ESCUTCHEON,** back wind. upr. corner finish lace	R.H.
65-69	CORVAIR (SPT. CPE.)	4487679	**ESCUTCHEON,** back wind. upr. corner finish lace	L.H.
65-69	CORVAIR (SPT. CPE.)	4488550	**ESCUTCHEON,** back wind. lace lwr. finish	1
60-64	CORVAIR (4-DR.)	6275916	**PLATE,** center, pillar to roof rail finish	2
65-66	CORVAIR (4-DR.)	4479087	**CLIP,** back wind. side and upper trim	A.R.

14.655 PAD UNIT—PAD ASSY., Instrument Panel

61	ALL	3788560	red	1
65-66	CORVAIR	3869370	red	1
65-66	CORVAIR (exc. STD.)	3869365	black	1
66	CORVAIR	7592462	**PAD ASSY.,** (fawn)	1
66	CORVAIR STD.	7592459	**PAD ASSY.,** (blue)	1
66	MONZA	7592460	**PAD ASSY.,** (blue)	1
66	MONZA	7592461	**PAD ASSY.,** (turquoise)	1
66	MONZA	7592463	**PAD ASSY.,** (bronze)	1
67	CORVAIR	7647451	**PAD ASSY.,** (black)	1
67	MONZA	7647452	**PAD ASSY.,** (blue)	1
67	MONZA	7647455	**PAD ASSY.,** (gold)	1
67	CORVAIR (STD.)	7647456	**PAD ASSY.,** (fawn)	1
67	CORVAIR (STD.)	7647457	**PAD ASSY.,** (blue)	1
68	CORVAIR	8725879	**PAD ASSY.,** (black)	1
68	CORVAIR	8725880	**PAD ASSY.,** (blue)	1
68	CORVAIR	8725881	**PAD ASSY.,** (gold)	1
68-69	CORVAIR	3929986	**PAD ASSY.,** ctr. (black)	1
68	CORVAIR	3929987	**PAD ASSY.,** ctr. (blue)	1
68	CORVAIR	3929988	**PAD ASSY.,** ctr. (gold)	1
69	CORVAIR	3948573	**PAD ASSY.,** ctr. (dk. blue)	1
69	CORVAIR	3948575	**PAD ASSY.,** ctr. (dk. green)	1
69	CORVAIR	8748610	**PAD ASSY.,** (black)	1
69	CORVAIR	8748611	**PAD ASSY.,** (dk. blue)	1
69	CORVAIR	8748612	**PAD ASSY.,** (med. green)	1

14.665 WINDLACE, Door Opening Pinchweld Finish

60	DELUXE (exc. MONZA)	6277919	(comb. 887) (cloth covered) (green)	A.R.
60	CORVAIR (exc. MONZA)	4878139	(comb. 885, 886, 894)—(15.520) (Note 1)	A.R.
	NOTE 1 Cut as required.			
69	CORVAIR	3957081	**WINDLACE ASSY.,** inst. pnl. pad (black)	1
69	CORVAIR	3957082	**WINDLACE ASSY.,** inst. pnl. pad (dark blue)	1
69	CORVAIR	3957083	**WINDLACE ASSY.,** inst. pnl. pad (dark green)	1

14.683 CLIP—RETAINER—PLUG, Door Trim Bind Strip Replacement

60-61	ALL	6277199	w/one nail emergency tab	A.R.
62-64	CORVAIR	6284051		A.R.
60-64	CORVAIR	6280765	**RETAINER,** dr. binding strip to inner panel—(14.685)	A.R.
65-69	ALL	4853962	**PLUG,** door trim pad sealing	A.R.

14.685 TRIM ASSY.—BUTTON ASSY.—RETAINER, Front Door Trim (less arm rest)

64	CORVAIR (STD.)	4397166	(comb. 720) (aqua)	R.H.
64	CORVAIR (STD.)	4397167	(comb. 720) (aqua)	L.H.
64	CORVAIR (STD.)	4397170	(comb. 783) (red)	R.H.
64	CORVAIR (STD.	4397171	(comb. 783) (red)	L.H.
64	CORVAIR (DELUXE) (4-DR.) (exc. MONZA)	4397199	(comb. 751) (aqua)	L.H.
64	CORVAIR (DELUXE) (4-DR.) (exc. MONZA)	4397200	(comb. 757) (fawn)	R.H.
64	CORVAIR (DELUXE) (4-DR.) (exc. MONZA)	4397201	(comb. 757) (fawn)	L.H.
64	CORVAIR (DELUXE) (4-DR.) (exc. MONZA)	4397202	(comb. 780) (red)	R.H.
64	CORVAIR (DELUXE) (4-DR.) (exc. MONZA)	4397203	(comb. 780) (red)	L.H.
64	MONZA (4-DR.)	4397212	(comb. 755) (aqua)	R.H.
64	MONZA (4-DR.)	4397213	(comb. 755) (aqua)	L.H.
64	MONZA (4-DR.)	4397214	(comb. 758) (fawn)	R.H.
64	MONZA (4-DR.)	4397215	(comb. 758) (fawn)	L.H.
64	MONZA (4-DR.)	4397216	(comb. 781) (red)	R.H.
64	MONZA (4-DR.)	4397217	(comb. 781) (red)	L.H.
64	MONZA (2-DR.)	4397172	(comb. 705) (saddle)	R.H.
64	MONZA (2-DR.)	4397173	(comb. 705) (saddle)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

64	MONZA (2-DR.)	4397174	(comb. 712) (black) R.H.
64	MONZA (2-DR.)	4397175	(comb. 712) (black) L.H.
64	MONZA (2-DR.)	4397176	(comb. 727) (ivory) R.H.
64	MONZA (2-DR.)	4397177	(comb. 727) (ivory) L.H.
64	MONZA (2-DR.)	4397178	(comb. 732) (blue) R.H.
64	MONZA (2-DR.)	4397179	(comb. 732) (blue) L.H.
64	MONZA (2-DR.)	4397181	(comb. 755) (aqua) L.H.
64	MONZA (2-DR.)	4397182	(comb. 758) (fawn) R.H.
64	MONZA (2-DR.)	4397183	(comb. 758) (fawn) L.H.
64	MONZA (2-DR.)	4397184	(comb. 781) (red) R.H.
64	MONZA (2-DR.)	4397185	(comb. 781) (red) L.H.
64	CORVAIR STD. (SPT. CPE.)	4527630	(comb. 771) (fawn) R.H.
65	CORVAIR STD. (SPT. CPE.)	4527631	(comb. 771) (fawn) L.H.
65	CORVAIR STD. (SPT. CPE.)	4527632	(comb. 782) (red) R.H.
65	CORVAIR STD. (SPT. CPE.)	4527633	(comb. 782) (red) L.H.
65	CORVAIR STD. (SPT. CPE.)	4527628	(comb. 723) (turquoise) R.H.
65	CORVAIR STD. (SPT. CPE.)	4527629	(comb. 723) (turquoise) L.H.
65	CORVAIR (exc. 4-DR.)	4534736	(comb. 706) (saddle) R.H.
65	CORVAIR (exc. 4-DR.)	4534737	(comb. 706) (saddle) L.H.
65	CORVAIR (exc. 4-DR.)	4534738	(comb. 713) (black) R.H.
65	CORVAIR (exc. 4-DR.)	4534739	(comb. 713) (black) L.H.
65	CORVAIR (exc. 4-DR.)	4534740	(comb. 733) (blue) R.H.
65	CORVAIR (exc. 4-DR.)	4534741	(comb. 733) (blue) L.H.
65	CORVAIR (exc. 4-DR.)	4534742	(comb. 773) (fawn) R.H.
65	CORVAIR (exc. 4-DR.)	4534743	(comb. 773) (fawn) L.H.
65	CORVAIR (exc. 4-DR.)	4534744	(comb. 785) (red) R.H.
65	CORVAIR (exc. 4-DR.)	4534745	(comb. 785) (red) L.H.
65	CORVAIR (exc. 4-DR.)	4534746	(comb. 795) (slate) R.H.
65	CORVAIR (exc. 4-DR.)	4534747	(comb. 795) (slate) L.H.
65	CORVAIR (exc. 4-DR.)	4534748	(comb. 797, 798) (ivory) R.H.
65	CORVAIR (exc. 4-DR.)	4534749	(comb. 797, 798) (ivory) L.H.
65	CORVAIR STD. (4-DR.)	4475136	(comb. 723) (turquoise) R.H.
65	CORVAIR STD. (4-DR.)	4475137	(comb. 723) (turquoise) L.H.
65	CORVAIR STD. (4-DR.)	4475138	(comb. 771) (fawn) R.H.
65	CORVAIR STD. (4-DR.)	4475139	(comb. 771) (fawn) L.H.
65	CORVAIR STD. (4-DR.)	4475140	(comb. 782) (red) R.H.
65	MONZA (4-DR.)	4475167	(comb. 706) (saddle) L.H.
65	MONZA (4-DR.)	4475168	(comb. 713) (black) R.H.
65	MONZA (4-DR.)	4475169	(comb. 713) (black) L.H.
65	MONZA (4-DR.)	4475170	(comb. 733) (blue) R.H.
65	MONZA (4-DR.)	4475171	(comb. 733) (blue) L.H.
65	MONZA (4-DR.)	4475172	(comb. 773) (fawn) R.H.
65	MONZA (4-DR.)	4475173	(comb. 773) (fawn) L.H.
65	MONZA (4-DR.)	4475175	(comb. 785) (red) L.H.
65	MONZA (4-DR.)	4530644	(comb. 795) (slate) R.H.
65	MONZA (4-DR.)	4475178	(comb. 797) (ivory) R.H.
65	MONZA (4-DR.)	4475179	(comb. 797) (ivory) L.H.
65	CORVAIR STD. (SPT. SED.)	4539280	(comb. 701) (fawn) R.H.
66	CORVAIR STD. (SPT. SED.)	4539281	(comb. 701) (fawn) L.H.
66	CORVAIR STD. (SPT. SED.)	4539282	(comb. 721) (blue) R.H.
66	CORVAIR STD. (SPT. SED.)	4539283	(comb. 721) (blue) L.H.
66	CORVAIR STD. (SPT. SED.)	4539284	(comb. 739) (red) R.H.
66	CORVAIR STD. (SPT. SED.)	4539285	(comb. 739) (red) L.H.
66	CORVAIR STD. (SPT. CPE.)	4539274	(comb. 701) (fawn) R.H.
66	CORVAIR STD. (SPT. CPE.)	4539275	(comb. 701) (fawn) L.H.
66	CORVAIR STD. (SPT. CPE.)	4539276	(comb. 721) (blue) R.H.
66	CORVAIR STD. (SPT. CPE.)	4539277	(comb. 721) (blue) L.H.
66	CORVAIR STD. (SPT. CPE.)	4539278	(comb. 739) (red) R.H.
66	CORVAIR STD. (SPT. CPE.)	4539279	(comb. 739) (red) L.H.
66	MONZA (SPT. SED.)	4544341	(comb. 740) (red) L.H.
66-67	MONZA (SPT. SED.)	7706004	(comb. 758) (black) R.H.
66-67	MONZA (SPT. SED.)	7706005	(comb. 758) (black) L.H.
66	MONZA (SPT. SED.)	4544346	(comb. 792) (turquoise) R.H.
66	MONZA (SPT. SED.)	4544347	(comb. 792) (turquoise) L.H.
66	MONZA (SPT. SED.)	4544446	(comb. 702) (fawn) R.H.
66	MONZA (SPT. SED.)	4544447	(comb. 702) (fawn) L.H.
66	MONZA (SPT. SED.)	4544448	(comb. 772) (blue) L.H.
66	MONZA (SPT. SED.)	4544449	(comb. 772) (blue) L.H.
66	MONZA (SPT. SED.)	4545948	(comb. 788) (bronze) R.H.
66	MONZA (SPT. SED.)	4545949	(comb. 788) (bronze) L.H.
66	MONZA (exc. 4-DR.)	4546118	(comb. 702) (fawn) less emblem R.H.
66	MONZA (exc. 4-DR.)	4546119	(comb. 702) (fawn) less emblem L.H.
66-67	MONZA (exc. 4-DR.)	4546120	(comb. 722) (blue) less emblem R.H.
66-67	MONZA (exc. 4-DR.)	4546121	(comb. 722) (blue) less L.H.
66	MONZA (exc. 4-DR.)	4546123	(comb. 740) (red) less emblem L.H.
66-67	MONZA (exc. 4-DR.)	4546124	(comb. 758) (black) less emblem R.H.
66-67	MONZA (exc. 4-DR.)	4546125	(comb. 758) (black) less emblem L.H.

©1969 CHEVROLET MOTOR DIVISION. GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

66	MONZA (exc. 4-DR.)	4546128	(comb. 788) (bronze) less emblem R.H.
66	MONZA (exc. 4-DR.)	4546129	(comb. 788) (bronze) less emblem L.H.
66	MONZA (exc. 4-DR.)	4546130	(comb. 792) (turquoise) less emblem L.H.
66	MONZA (exc. 4-DR.)	4546131	(comb. 792) (turquoise) less emblem L.H.
66	MONZA (exc. 4-DR.)	4546132	(comb. 795) (ivory) less emblem R.H.
66	MONZA (exc. 4-DR.)	4546133	(comb. 795) (ivory) less emblem L.H.
67	MONZA (SPT. CPE., CONV.)	7654892	(comb. 713) (gold) R.H.
67	MONZA (SPT. CPE., CONV.)	7654893	(comb. 713) (gold) L.H.
67	MONZA (SPT. SED.)	7706002	(comb. 722) (brt. blue) R.H.
67	MONZA (SPT. SED.)	7706003	(comb. 722) (brt. blue) L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646440	(comb. 703) (fawn) R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646441	(comb. 703) (fawn) L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646442	(comb. 721) (blue) R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646443	(comb. 721) (blue) L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646444	(comb. 751) (black) R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646445	(comb. 751) (black) L.H.
67	CORVAIR (STD.) (SPT. SED.)	7646446	(comb. 703) (fawn) R.H.
67	CORVAIR (STD.) (SPT. SED.)	7646447	(comb. 703) (fawn) L.H.
67	CORVAIR (STD.) (SPT. SED.)	7646448	(comb. 721) (blue) R.H.
67	CORVAIR (STD.) (SPT. SED.)	7646449	(comb. 721) (blue) L.H.
67	CORVAIR (STD.) (SPT. SED.)	7646450	(comb. 751) (black) R.H.
67	CORVAIR (STD.) (SPT. SED.)	7646451	(comb. 751) (black) L.H.
67	MONZA (SPT. SED.)	7646460	(comb. 713) (gold) R.H.
67	MONZA (SPT. SED.)	7646461	(comb. 713) (gold) L.H.
68	CORVAIR (STD.)	7751252	(comb. 703) R.H.
68	CORVAIR (STD.)	7751253	(comb. 703) L.H.
68	CORVAIR (STD.)	7751254	(comb. 706) R.H.
68	CORVAIR (STD.)	7751255	(comb. 706) L.H.
68	CORVAIR (STD.)	7751256	(comb. 709) R.H.
68	CORVAIR (STD.)	7751257	(comb. 709) L.H.
68-69	MONZA	7751264	(comb. 701, 704) R.H.
68-69	MONZA	7751265	(comb. 701, 704) L.H.
68	MONZA	7751266	(comb. 707) R.H.
68	MONZA	7751267	(comb. 707) L.H.
68	MONZA	7751268	(comb. 710) R.H.
68	MONZA	7751269	(comb. 710) L.H.
69	CORVAIR (STD.)	8718864	(comb. 700) (black) R.H.
69	CORVAIR (STD.)	8718865	(comb. 700) (black) L.H.
69	CORVAIR (STD.)	8718866	(comb. 703) (blue) R.H.
69	CORVAIR (STD.)	8718867	(comb. 703) (blue) L.H.
69	MONZA	8718870	(comb. 704) (blue) R.H.
69	MONZA	8718871	(comb. 704) (blue) L.H.
69	MONZA	8718872	(comb. 707) (fawn) R.H.
69	MONZA	8718873	(comb. 707) (fawn) L.H.
69	CORVAIR (STD.)	8742766	(comb. 708) (med. green) R.H.
69	CORVAIR (STD.)	8742767	(comb. 708) (med. green) L.H.
62	MONZA w/bucket seats	6283717	**BUTTON ASSY.**—(14.804) A.R.
60-64	CORVAIR	6280765	**RETAINER,** dr. binding strip to inner panel A.R.

14.686 REST ASSY.—TRIM ASSY.—COVER ASSY.—BASE—NUT—SCREW, Front Door Arm, Trimmed

60	STD.		(comb. 885) (gray),
60	DELUXE (4-DR) (1st type)	6276546	(comb. 886) (dark gray) 2
60	DELUXE (exc. MONZA)	4287846	(comb. 887) (green) 2
60-62	MONZA	4332259	(comb. 772, 774, 775, 778, 781, 782, 785, 786, 820, 846, 856, 881) (red) 2
61	ALL (exc. MONZA)	6280055	(comb. 831, 832, 887, 897) (green) 2
61	ALL (exc. MONZA)	6280056	(comb. 836, 837, 888, 898) (blue) 2
61	DELUXE (exc. MONZA)	6281653	(comb. 889, 899) (red) 2
61-64	MONZA (exc. STA. WAG.),		
62-64	MONZA,		
63-64	CORVAIR DELUXE	6284798	(comb. 731, 732, 733, 734, 735, 736, 738, 739, 740, 741, 742) (blue) 2
62-64	MONZA,		
63-64	CORVAIR DELUXE	6284799	(comb. 719, 721, 722, 723, 724, 745, 748, 749, 750, 751, 753, 755) (aqua) 2
62-63	MONZA	6284800	(comb. 758, 759, 762, 763, 766, 767, 769, 770) (fawn) 2
62-63	CORVAIR (exc. MONZA)	6285220	(comb. 745, 751, 752, 754) (aqua) 2
62-63	CORVAIR (exc. MONZA)	6285221	(comb. 756, 757, 760, 761) (fawn) 2
62-64	CORVAIR	4359611	(comb. 776, 777, 783) (red) 2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit

63-64	CORVAIR	4359504	(comb. 726, 772, 773, 774, 775, 778, 780, 781, 786, 791, 793, 794) (red) 2
63-64	MONZA	4373717	(comb. 701, 702, 705, 707, 708, 709, 710) (saddle) 2
63-64	MONZA	4393918	(comb. 727, 729) (ivory) 2
64	CORVAIR STD.	4397910	(comb. 760, 761, 764) (fawn) 2
64	CORVAIR (exc. STD.)	4396914	(comb. 757, 758) (fawn) 2
64	MONZA	4226707	**TRIM ASSY.** (comb. 757, 758) 2
65	CORVAIR STD. (4-DR.)	4475728	**COVER ASSY.** (comb. 723) (turquoise) 2
65	MONZA	4475428	**COVER ASSY.** (comb. 701, 702, 706, 767) (saddle) 2
65-66 MONZA, 67	CORVAIR	4475429	**COVER ASSY.** (comb. 712, 713, 751, 756, 758, 760, 765, 780, 785) (black) 2
65 CORVAIR, 66	MONZA	4475431	**COVER ASSY.** (comb. 702, 716, 718, 771, 773) (fawn) 2
65	MONZA	4475430	**COVER ASSY.** (comb. 733, 735) (blue) 1
65-66	MONZA	4475432	**COVER ASSY.** (comb. 739, 740, 754, 756, 782, 785, 787, 791) (red) 2
65	MONZA	4530626	**COVER ASSY.** (comb. 795) (slate) 2
65-66	MONZA	4475434	**COVER ASSY.** (comb. 795, 797, 798) (ivory) 2
66	CORVAIR STD.	7603874	**COVER ASSY.** (comb. 703) (fawn) 2
66	CORVAIR STD.	7603875	**COVER ASSY.** (comb. 721) (blue) 2
66	MONZA	7603823	**COVER ASSY.** (comb. 788) (bronze) 2
66	MONZA	7604524	**COVER ASSY.** (comb. 779, 781, 792) (turquoise) 2
66-67	MONZA	7604525	**COVER ASSY.** (comb. 722, 737) (br. blue) 2
67	CORVAIR (STD.)	7654346	**COVER ASSY.** (comb. 703, 773) (fawn) 2
67	CORVAIR	7654347	**COVER ASSY.** (comb. 717, 721, 735, 739) (blue) 2
67	MONZA	7654348	**COVER ASSY.** (comb. 709, 713, 781, 796) (gold) 2
68-69	CORVAIR	7769168	**COVER ASSY.** (comb. 700, 701, 703, 704, 731, 732, 733, 734, 735) (black) R.H.
68-69	CORVAIR	7769169	**COVER ASSY.** (comb. 700, 701, 703, 704, 731, 732, 733, 734, 735) (black) L.H.
68	CORVAIR	7769170	**COVER ASSY.** (comb. 706, 707, 737, 739, 740) (dk. blue) R.H.
68	CORVAIR	7769171	**COVER ASSY.** (comb. 706, 707, 737, 739, 740) (dark blue) L.H.
68	CORVAIR	7769172	**COVER ASSY.,** (comb. 709, 710, 741, 742, 743, 745) (gold) R.H.
68	CORVAIR	7769173	**COVER ASSY.** (comb. 709, 710, 741, 742, 743, 745) (gold) L.H.
69	CORVAIR	8718940	**COVER ASSY.** (comb. 764) (blue) R.H.
69	CORVAIR	8718941	**COVER ASSY.** (comb. 764) (blue) L.H.
69	CORVAIR	8718944	**COVER ASSY.** (green) R.H.
69	CORVAIR	8718945	**COVER ASSY.** (green) L.H.
65	CORVAIR (STD.)	4493309	**BASE,** arm rest (fawn) 2
65	CORVAIR (STD.)	4493310	**BASE,** arm rest (turquoise) 2
65-66	CORVAIR (STD.)	4493311	**BASE,** arm rest (red) 2
65-67	CORVAIR (exc. STD.)	4493308	**BASE,** arm rest 2
66	CORVAIR (STD.)	4545659	**BASE,** arm rest (fawn) 2
66	CORVAIR (STD.)	4545750	**BASE,** arm rest (blue) 2
67	CORVAIR (STD.)	7647501	**BASE,** arm rest (black) 2
67	CORVAIR (STD.)	7647502	**BASE,** arm rest (fawn) 2
67	CORVAIR (STD.)	7647503	**BASE,** arm rest (blue) 2
68	CORVAIR (STD.)	7770262	**BASE** (std. trim) (Note 1) R.H.
68	CORVAIR (STD.)	7770263	**BASE** (std. trim) (Note 1) L.H.
68	MONZA	7770427	**BASE** (custom trim) (Note 1) L.H.
68	MONZA	7770428	**BASE** (custom trim) (Note 1) R.H.
68	MONZA	7755978	**BASE** (painted) R.H.
69	CORVAIR	8769968	**BASE** (comb. 703, 704) (dk. blue) R.H.
69	CORVAIR	8769969	**BASE** (comb. 703, 704) (dk. blue) L.H.
69	CORVAIR	8769970	**BASE** (comb. 707, 708) (med. green) R.H.
69	CORVAIR	8769971	**BASE** (comb. 707, 708) (med. green) L.H.
69	CORVAIR	8769956	**BASE** (black) R.H.
69	CORVAIR	8969957	**BASE** (black) L.H.
60-63	CORVAIR	4819356	**NUT,** base panel and anchor A.R.
68	CORVAIR	7768478	**SCREW,** rest to inner panel 6

NOTE 1 Paint as required.

14.688 MOULDING, Door Arm Rest

68	ALL	7745078	frt. door arm rest A.R.

14.691 MOULDING—EMBLEM—NUT—RETAINER, Door Trim

63	MONZA (4-DR.)	4874662	frt. finish 2
65 66-67	CORVAIR (4-DR.), MONZA (4-DR.)	4467532	frt. pad lwr. 2
65 66-67	CORVAIR (2-DR.), MONZA (2-DR.)	4467508	frt. pad lwr. 2
65	MONZA (exc. CORSA)	4468945	**EMBLEM,** frt. dr. trim pad 2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

65-66	CORSA	4531492	**EMBLEM,** frt. dr. trim pad	2
66	MONZA (exc. CORSA)	7584609	**EMBLEM,** frt. dr. trim pad	2
67-68	MONZA	7656370	**EMBLEM,** frt. dr. trim pad	2
65-68	MONZA	4450956	**NUT,** frt. dr. trim pad emblem, nameplate, rear door, pad emblem	A.R.
63-64	CORVAIR	6280765	**RETAINER,** dr. binding strip to inner panel—(14.685)	A.R.

14.730 WINDLACE—COVER—SCREW, Body Center Pillar, Pinchweld Finish

NOTE See group 15.520 for Pinchweld and Windlace yardage.

60	DELUXE (exc. MONZA)	6277919	(comb. 887) (cloth covered) (green)—(14.665)	A.R.
60	CORVAIR (exc. MONZA)	4878139	(comb. 885, 894) (Note 1)—(15.520)	A.R.
	NOTE 1 Cut as required.			
65	CORVAIR (4-DR.),			
66	MONZA (4-DR.)	4476470	**COVER,** center pillar (fawn)	R.H.
65	CORVAIR (4-DR.),			
66	MONZA (4-DR.)	4476471	**COVER,** center pillar (fawn)	L.H.
65-66	CORVAIR (4-DR.)	4476476	**COVER,** center pillar (red)	R.H.
65-66	CORVAIR (4-DR.)	4476477	**COVER,** center pillar (red)	L.H.
65	CORVAIR STD. (4-DR.)	4476474	**COVER,** center pillar (turquoise)	R.H.
65	CORVAIR STD. (4-DR.)	4476475	**COVER,** center pillar (turquoise)	L.H.
65-66	MONZA (4-DR.),			
67	CORVAIR (SPT. SED.)	4476465	**COVER,** center pillar (black)	R.H.
65-66	MONZA (4-DR.),			
67	CORVAIR (SPT. SED.)	4476466	**COVER,** center pillar (black)	L.H.
65	MONZA (4-DR.)	4476467	**COVER,** center pillar (ivory)	R.H.
65	MONZA (4-DR.)	4476468	**COVER,** center pillar (ivory)	L.H.
65	MONZA (4-DR.)	4476472	**COVER,** center pillar (blue)	R.H.
65	MONZA (4-DR.)	4476473	**COVER,** center pillar (blue)	L.H.
65	MONZA (4-DR.)	4476478	**COVER,** center pillar (slate)	R.H.
65	MONZA (4-DR.)	4476479	**COVER,** center pillar (slate)	L.H.
65	MONZA (4-DR.)	4476480	**COVER,** center pillar (saddle)	R.H.
65	MONZA (4-DR.)	4476481	**COVER,** center pillar (saddle)	L.H.
66	CORVAIR STD. (4-DR.)	7591116	**COVER,** center pillar (med. blue)	R.H.
66	CORVAIR STD. (4-DR.)	7591117	**COVER,** center pillar (med. blue)	L.H.
66	CORVAIR STD. (4-DR.)	7591122	**COVER,** center pillar (med. fawn)	R.H.
66	CORVAIR STD. (4-DR.)	7591123	**COVER,** center pillar (med. fawn)	L.H.
66	MONZA (4-DR.)	7591118	**COVER,** center pillar (turquoise)	R.H.
66	MONZA (4-DR.)	7591119	**COVER,** center pillar (turquoise)	L.H.
66-67	MONZA (4-DR.)	7591120	**COVER,** center pillar (brt. blue)	R.H.
66-67	MONZA (4-DR.)	7591121	**COVER,** center pillar (brt. blue)	L.H.
66	MONZA (4-DR.)	7591124	**COVER,** center pillar (bronze)	R.H.
66	MONZA (4-DR.)	7591125	**COVER,** center pillar (bronze)	L.H.
67	MONZA (4-DR.)	7647604	**COVER,** center pillar (gold)	R.H.
67	MONZA (4-DR.)	7647605	**COVER,** center pillar (gold)	L.H.
67	MONZA (4-DR.)	7647606	**COVER,** center pillar (fawn)	R.H.
67	MONZA (4-DR.)	7647607	**COVER,** center pillar (fawn)	L.H.
67	MONZA (4-DR.)	7647608	**COVER,** center pillar (blue)	R.H.
67	MONZA (4-DR.)	7647609	**COVER,** center pillar (blue)	L.H.
61	MONZA (4-DR.)	4799768	**SCREW,** scalp mldg.—(10.708)	4

14.731 CAP, Lock Pillar Finishing

65	CORVAIR STD. (2-DR.),			
66	MONZA (2-DR.)	4518703	(turquoise)	R.H.
65-66	CORVAIR STD. (2-DR.),			
66	MONZA (2-DR.)	4518704	(turquoise)	L.H.
65-69	MONZA (2-DR.)	4484813	(paint as reqd.)	R.H.
65-69	MONZA (2-DR.)	4484814	(paint as reqd.)	L.H.
65	MONZA (2-DR.),			
66	CORVAIR STD. (2-DR.)	4484815	(blue)	R.H.
65	MONZA (2-DR.),			
66	CORVAIR STD. (2-DR.)	4484816	(blue)	L.H.
65-66	CORVAIR (2-DR.)	4484817	(red)	R.H.
65-66	CORVAIR (2-DR.)	4484818	(red)	L.H.
66-67	MONZA (2-DR.)	4542093	(blue)	L.H.
68	CORVAIR	7730122	(blue)	R.H.
68	CORVAIR	7730123	(blue)	L.H.
68	CORVAIR	7730124	(gold)	R.H.
68	CORVAIR	7730125	(gold)	L.H.

14.735 WINDLACE—LACE ASSY.—CLIP, Body Lock Pillar, Pinchweld Finish

NOTE See group 15.520 for Pinchweld and Windlace yardage.

60	CORVAIR (exc. MONZA)	4878139	(comb. 885, 886, 894)—(15.520) (Note 1)	A.R.
	NOTE 1 Cut as required.			
60	DELUXE (exc. MONZA)	6277919	(comb. 887) (cloth covered) (green)—(14.665)	A.R.
69	CORVAIR (SPT. CPE.)	8738774	**LACE ASSY.** (dk. blue)	R.H.
69	CORVAIR (SPT. CPE.)	8738775	**LACE ASSY.** (dk. blue)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

69	CORVAIR (SPT. CPE.)	4495627	**LACE ASSY.** (black)	2
60	2-DR.	6277924	**CLIP,** finish windlace at top—(14.730)	A.R.

14.760 TRIM ASSEMBLY, Rear Door

64	CORVAIR DELUXE (4-DR.) (exc. MONZA)	4397220	(comb. 731) (blue)	R.H.
64	CORVAIR DELUXE (4-DR.) (exc. MONZA)	4397221	(comb. 731) (blue)	L.H.
64	CORVAIR DELUXE (4-DR.) (exc. MONZA)	4397226	(comb. 780) (red)	R.H.
64	CORVAIR DELUXE (4-DR.) (exc. MONZA)	4397227	(comb. 780) (red)	L.H.
64	MONZA (4-DR.)	4397230	(comb. 712) (black)	R.H.
64	MONZA (4-DR.)	4397231	(comb. 712) (black)	L.H.
65	CORVAIR STD. (4-DR.)	4475214	(comb. 723) (turquoise)	R.H.
65	CORVAIR STD. (4-DR.)	4475215	(comb. 723) (turquoise)	L.H.
65	CORVAIR STD. (4-DR.)	4475216	(comb. 771) (fawn)	R.H.
65	CORVAIR STD. (4-DR.)	4475219	(comb. 782) (red)	L.H.
65	MONZA (4-DR.)	4475229	(comb. 706) (saddle)	L.H.
65	MONZA (4-DR.)	4475230	(comb. 713) (black)	R.H.
65	MONZA (4-DR.)	4475231	(comb. 713) (black)	L.H.
65	MONZA (4-DR.)	4475233	(comb. 733) (blue)	L.H.
65	MONZA (4-DR.)	4475236	(comb. 785) (red)	R.H.
65	MONZA (4-DR.)	4475237	(comb. 785) (red)	L.H.
65	MONZA (4-DR.)	4475239	(comb. 795) (slate)	L.H.
65	MONZA (4-DR.)	4475240	(comb. 797) (ivory)	R.H.
65	MONZA (4-DR.)	4475241	(comb. 797) (ivory)	L.H.
66	CORVAIR STD. (4-DR.)	4539304	(comb. 701) (fawn)	R.H.
66	CORVAIR STD. (4-DR.)	4539306	(comb. 721) (blue)	R.H.
66	CORVAIR STD. (4-DR.)	4539307	(comb. 721) (blue)	L.H.
66	CORVAIR STD. (4-DR.)	4539308	(comb. 739) (red)	R.H.
66	CORVAIR STD. (4-DR.)	4539309	(comb. 739) (red)	L.H.
66	MONZA (4-DR.)	4544376	(comb. 702) (fawn)	R.H.
66	MONZA (4-DR.)	4544377	(comb. 702) (fawn)	L.H.
66-67	MONZA (4-DR.)	4544378	(comb. 722) (blue)	R.H.
66-67	MONZA (4-DR.)	4544379	(comb. 722) (blue)	L.H.
66	MONZA (4-DR.)	4544380	(comb. 740) (red)	R.H.
66-67	MONZA (4-DR.)	4544502	(comb. 758) (black)	R.H.
66-67	MONZA (4-DR.)	4544503	(comb. 758) (black)	L.H.
66	MONZA (4-DR.)	4544506	(comb. 792) (turquoise)	R.H.
66	MONZA (4-DR.)	4544507	(comb. 792) (turquoise)	L.H.
66	MONZA (4-DR.)	4545950	(comb. 788) (bronze)	R.H.
66	MONZA (4-DR.)	4545951	(comb. 788) (bronze)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7646490	(comb. 703) (fawn)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7646491	(comb. 703) (fawn)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7646492	(comb. 721) (blue)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7646493	(comb. 721) (blue)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7646494	(comb. 751) (black)	R.H.
67	CORVAIR (STD.) (SPT. SED.)	7646495	(comb. 751) (black)	L.H.
67	MONZA (SPT. SED.)	7646496	(comb. 713) (gold)	R.H.
67	MONZA (SPT. SED.)	7646497	(comb. 713) (gold)	L.H.

14.762 REST ASSEMBLY—COVER—BASE—NUT—SCREW, Rear Door Arm, Trimmed

61	MONZA	4335666	(comb. 829, 848, 858) (blue) (less tray)	R.H.
61-64	MONZA (4-DR. SED.)	6281816	(comb. 712, 715, 830, 869, 870) (gray-black) (less tray)	R.H.
61-64	MONZA (4-DR. SED.)	6281817	(comb. 712, 715, 830, 869, 870) (gray-black) (less tray)	L.H.
61	CORVAIR (exc. MONZA)	6280069	(comb. 836, 837, 888, 898) (blue) (less tray)	L.H.
62	CORVAIR DELUXE (exc. MONZA)	6285246	(comb. 751, 752, 754) (med. aqua)	R.H.
62	CORVAIR DELUXE (exc. MONZA)	6285247	(comb. 751, 752, 754) (med. aqua)	L.H.
62-64	CORVAIR DELUXE	6284810	(comb. 731, 732, 734, 735, 736, 738, 739, 742) (blue) (less tray)	R.H.
62-64	MONZA	6284811	(comb. 731, 732, 734, 735, 736, 738, 739, 742) (blue) (less tray)	L.H.
62-64	MONZA	6284812	(comb. 719, 745, 748, 749, 750, 751, 753, 755) (aqua) (less tray)	R.H.
62-64	MONZA	6284813	(comb. 719, 745, 748, 749, 750, 751, 753, 755) (aqua) (less tray)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62	CORVAIR DELUXE (exc. MONZA),			
62-63	MONZA (4-DR.)	6284814	(comb. 757, 758, 759, 762, 763, 766, 769) (fawn) (less tray)	R.H.
62-63	MONZA (4-DR.)	6284815	(comb. 757, 758, 759, 762, 763, 766, 769) (fawn) (less tray)	L.H.
63-64	CORVAIR (4-DR.)	4361544	(comb. 772, 774, 778, 780, 781) (red)	R.H.
63-64	CORVAIR (4-DR.)	4361545	(comb. 772, 774, 778, 780, 781) (red)	L.H.
63-64	MONZA (4-DR.)	4373846	(comb. 705, 707, 709) (saddle)	R.H.
63-64	MONZA (4-DR.)	4373847	(comb. 705, 707, 709) (saddle)	L.H.
63-64	MONZA (4-DR.)	4393922	(comb. 727) (ivory)	R.H.
63-64	MONZA (4-DR.)	4393923	(comb. 727) (ivory)	L.H.
64	CORVAIR (4-DR.)	4396918	(comb. 757, 758, 762, 763, 766) (fawn)	R.H.
64	CORVAIR (4-DR.)	4396919	(comb. 757, 758, 762, 763, 766) (fawn)	L.H.
65	CORVAIR STD.	4475752	**COVER** (comb. 723) (turquoise) (less tray)	R.H.
65	CORVAIR STD.	4475753	**COVER** (comb. 723) (turquoise) (less tray)	L.H.
65	CORVAIR STD.,			
65-66	MONZA	4475487	**COVER** (comb. 701, 702, 773) (fawn) (less tray)	L.H.
65-66	CORVAIR STD. (4-DR.),			
65-66	MONZA (4-DR.)	4475488	**COVER** (comb. 739, 740, 782, 785) (red) (less tray)	R.H.
65-66	CORVAIR (4-DR.)	4475489	**COVER** (comb. 739, 740, 782, 785) (red) (less tray)	L.H.
65	MONZA (4-DR. SPT. SED.)	4475480	**COVER** (comb. 706) (saddle) (less tray)	R.H.
65	MONZA (4-DR. SPT. SED.)	4475481	**COVER** (comb. 706) (saddle) (less tray)	L.H.
65-67	MONZA	4475482	**COVER** (comb. 713, 758) (black) (less tray)	R.H.
65-67	MONZA	4475483	**COVER** (comb. 713, 758) (black) (less tray)	L.H.
65-66	MONZA	4475484	**COVER** (comb. 733, 735) (blue) (less tray)	R.H.
65-66	MONZA	4475485	**COVER** (comb. 733, 735) (blue) (less tray)	L.H.
65	CORVAIR (STD.),			
65-66	MONZA	4475486	**COVER** (comb. 702, 771, 773) (fawn) (less tray)	R.H.
65	MONZA	4530633	**COVER** (comb. 795) (slate) (less tray)	L.H.
65	MONZA	4475492	**COVER** (comb. 797) (ivory) (less tray)	R.H.
65	MONZA	4475493	**COVER** (comb. 797) (ivory) (less tray)	L.H.
66	CORVAIR STD. (4-DR.)	7605262	**COVER,** arm rest (comb. 701) (fawn)	R.H.
66	CORVAIR STD. (4-DR.)	7605263	**COVER,** arm rest (comb. 701) (fawn)	L.H.
66	CORVAIR STD. (4-DR.)	7605264	**COVER,** arm rest (comb. 721) (blue)	R.H.
66	CORVAIR STD. (4-DR.)	7605265	**COVER,** arm rest (comb. 721) (blue)	L.H.
66-67	MONZA (4-DR.)	7605266	**COVER,** arm rest (comb. 722) (brt. blue)	R.H.
66-67	MONZA (4-DR.)	7605267	**COVER,** arm rest (comb. 722) (brt. blue)	L.H.
66	MONZA (4-DR.)	7605268	**COVER,** arm rest (comb. 788) (bronze)	R.H.
66	MONZA (4-DR.)	7605269	**COVER,** arm rest (comb. 788) (bronze)	L.H.
66	MONZA (4-DR.)	4475758	**COVER,** arm rest (comb. 792) (turquoise)	R.H.
66	MONZA (4-DR.)	4475759	**COVER,** arm rest (comb. 792) (turquoise)	L.H.
67	MONZA (4-DR.)	7654374	**COVER,** arm rest (comb. 713) (gold)	R.H.
67	MONZA (4-DR.)	7654375	**COVER,** arm rest (comb. 713) (gold)	L.H.
65	CORVAIR STD. (4-DR.)	4493314	**BASE,** arm rest (fawn)	R.H.
65	CORVAIR STD. (4-DR.)	4493315	**BASE,** arm rest (fawn)	L.H.
65	CORVAIR STD. (4-DR.)	4493316	**BASE,** arm rest (turquoise)	R.H.
65	CORVAIR STD. (4-DR.)	4493317	**BASE,** arm rest (turquoise)	L.H.
65-66	CORVAIR STD. (4-DR.)	4493318	**BASE,** arm rest (red)	R.H.
65-66	CORVAIR STD. (4-DR.)	4493319	**BASE,** arm rest (red)	L.H.
65-67	MONZA (4-DR.)	4493312	**BASE,** arm rest	R.H.
65-67	MONZA (4-DR.)	4493313	**BASE,** arm rest	L.H.
66	CORVAIR STD. (4-DR.)	7591060	**BASE,** arm rest (fawn)	R.H.
66	CORVAIR STD. (4-DR.)	7591061	**BASE,** arm rest (fawn)	L.H.
66	CORVAIR STD. (4-DR.)	7591058	**BASE,** arm rest (blue)	R.H.
66	CORVAIR STD. (4-DR.)	7591059	**BASE,** arm rest (blue)	L.H.
60-63	CORVAIR	4819356	**NUT,** anchor—(14.686)	A.R.
64	CORVAIR (4-DR. SED.)	4455879	**SCREW,** arm rest to panel frt. (No. 8—18 x 1)	2
65	All	9417479	**SCREW,** arm rest to pnl. frt. (No. 8—18 x 1)	2

14.764 MOULDING, Rear Door Trim Finish

63-64	MONZA (4-DR.)	4881646		2
65-67	MONZA (4-DR.)	4467533	lower	2

14.800 TRIM ASSY., Front Seat Back Cover

60-61	MONZA w/bucket seats	6281019	(comb. 856, 881) (red) (vinyl)	2
63	MONZA w/bucket seats	4371286	(comb. 732) (blue) (driver and passenger)	2
64	MONZA w/bucket seats	4442051	(comb. 705) (saddle) (driver and passenger)	2
65	CORVAIR (STD.) (2-DR.)	4527648	(comb. 771) (fawn)	R.H.
65	MONZA	4473603	driver and pass. (comb. 713) (black)	2
65	MONZA	4473604	driver and pass. (comb. 733) (blue)	2
66	CORVAIR STD. (4-DR.)	4543342	(comb. 701) (fawn)	1
66	CORVAIR STD. (4-DR.)	4543343	(comb. 721) (blue)	1
66	CORVAIR STD. (4-DR.)	4543344	(comb. 739) (red)	1
66	CORVAIR STD. (2 DR.)	4543352	(comb. 701) (fawn)	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

66	CORVAIR STD. (2-DR.)	4543353	(comb. 701) (fawn)	L.H.
66	CORVAIR STD. (2-DR.)	4543354	(comb. 721) (blue)	R.H.
66	CORVAIR STD. (2-DR.)	4543355	(comb. 721) (blue)	L.H.
66	CORVAIR STD. (2-DR.)	4543356	(comb. 739) (red)	R.H.
66	CORVAIR STD. (2-DR.)	4543357	(comb. 739) (red)	L.H.
66	MONZA	7621910	(comb. 702) (fawn)	1
66	MONZA	7621911	(comb. 722) (blue)	1
66	MONZA	7621912	(comb. 740) (red)	1
66	MONZA	7621913	(comb. 758) (black)	1
66	MONZA	7621915	(comb. 788) (bronze)	1
66	MONZA	7621916	(comb. 792) (turquoise)	1
66	MONZA	7621917	(comb. 795) (ivory)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650474	(comb. 703) (fawn)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7650475	(comb. 702) (fawn)	L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7650476	(comb. 721) (blue)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7650477	(comb. 721) (blue)	L.H.
67	CORVAIR (STD.) (SPT. SED.)	7650481	(comb. 703) (fawn)	1
67	CORVAIR (STD.) (SPT. SED.)	7650482	(comb. 721) (blue)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650452	(comb. 751, 791) (black)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7650453	(comb. 751, 791) (black)	L.H.
67	MONZA (4-DR. SED.)	7713270	pass. (comb. 713) (gold)	1
67	MONZA (4-DR. SED.)	7713272	pass. (comb. 722) (brt. blue)	1
67	MONZA (4-DR. SED.)	7713274	pass. (comb. 758) (black)	1
67	MONZA (4-DR. SED.)	7713271	driver (comb. 713) (gold)	1
67	MONZA (4-DR. SED.)	7713273	driver (comb. 722) (brt. blue)	1
67	MONZA (4-DR. SED.)	7713275	driver (comb. 758) (black)	1
67	MONZA (SPT. CPE., CONV.)	7680308	pass. (comb. 713) (gold)	1
67	MONZA (SPT. CPE., CONV.)	7680310	pass. (comb. 722) (brt. blue)	1
67	MONZA (SPT. CPE., CONV.)	7680314	pass. (comb. 758) (black)	1
67	MONZA (SPT. CPE., CONV.)	7680315	driver (comb. 758) (black)	1
67	MONZA (SPT. CPE., CONV.)	7680309	driver (comb. 713) (gold)	1
67	MONZA (SPT. CPE., CONV.)	7680311	driver (comb. 722) (brt. blue)	1
68	CORVAIR (STD.)	7751452	(comb. 703)	R.H.
68	CORVAIR (STD.)	7751453	(comb. 703)	L.H.
68	CORVAIR (STD.)	7751454	(comb. 706)	R.H.
68	CORVAIR (STD.)	7751455	(comb. 706)	L.H.
68	CORVAIR (STD.)	7751456	(comb. 709)	R.H.
68	CORVAIR (STD.)	7751457	(comb. 709)	L.H.
68	MONZA	7751464	(comb. 704)	R.H.
68	MONZA	7751485	(comb. 704)	L.H.
68	MONZA	7751466	(comb. 707)	R.H.
68	MONZA	7751467	(comb. 707)	L.H.
68	MONZA	7751468	(comb. 710)	R.H.
68	MONZA	7751469	(comb. 710)	L.H.
69	CORVAIR (2-DR.)	8718730	pass. (comb. 701, 731) (black)	1
69	CORVAIR (2-DR.)	8718731	driver (comb. 701, 731) (black)	1
69	CORVAIR (STD.)	8740092	pass. (med. green)	1
69	CORVAIR (STD.)	8740093	driver (med. green)	1
69	CORVAIR (STD.)	8718732	pass. (comb. 703) (blue)	1
69	CORVAIR (STD.)	8718733	driver (comb. 703) (blue)	1
69	MONZA	8718738	pass. (comb. 701) (black)	1
69	MONZA	8718739	driver (comb 701) (black)	1
69	MONZA	8718740	pass. (comb. 704) (blue)	1
69	MONZA	8718741	driver (comb. 704) (blue)	1
69	MONZA	8718742	pass. (comb. 707) (fawn)	1
69	MONZA	8718743	driver (comb. 707) (fawn)	1

14.802 PAD—PAD ASSY., Front Seat Back

64	MONZA w/bucket seats	4852649	driver and pass. seat back (foam rubber)	2
65-66	MONZA	4426721	**PAD ASSY.**, driver and pass. seat back	2
67	MONZA	7637429	**PAD ASSY.**, driver and pass. seat back (foam rubber)	2

14.804 BUTTON ASSY.—RETAINER—NUT, Seat Back and Door Trim Pad

62	MONZA w/bucket seats	6283717		A.R.
63	MONZA,			
66-67	MONZA	4874809		A.R.
68-69	MONZA	7723322	door trim, rr. qtr. trim pad	A.R.
68	MONZA	7783589	seat back trim	14
63	MONZA,			
66-67	MONZA	4869558	**RETAINER**, seat back button	A.R.
68	MONZA	4541393	**RETAINER**, seat back button	14
62	MONZA w/bucket seats	7660713	**NUT**, button retaining	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

14.810 PAD, Seat Back Upper Panel

68-69	CORVAIR (STD.)	7723722	frt. seat back rr.	R.H.
68-69	CORVAIR (STD.)	7723723	front seat back rr.	L.H.
69	CORVAIR (STD.)	8748663	rear, upper panel (pass.)	1
69	CORVAIR (STD.)	8748664	rear, upper panel (driver)	1

14.818 MOULDING, Front Seat Side Trim (See Group 12.976 for ESCUTCHEON—CAP, 2nd and 3rd seats)

62-65	MONZA w/bucket seats,			
66	MONZA	6280390	pass. and driver seat back side inner (painted—17 5/8 long)	2

14.870 SEAT UNIT—STRAP ASSY.—PIN—FASTENER—HAND RAIL ASSY.—PAD ASSY.—SCREW—WASHER, Child Safety

68-69	ALL	987499	deluxe	1
68-69	ALL	993502	standard	1
68	ALL	7785152	**STRAP ASSY.**, seat back (black)	1
68	ALL	9716540	**PIN**, seat back to cush.	2
68	ALL	9716541	**FASTENER**, seat back to cush. pin	2
68	ALL	9716545	**HAND RAIL ASSY.**, seat (parchment)	1
68	ALL	9716550	**PAD ASSY.**, seat back (parchment)	1
68	ALL	9716557	**PAD ASSY.**, seat cush. (parchment)	1
68	ALL	9716564	**SCREW**, child st. hand rl. to st. back	2
ALL	ALL	446205	**WASHER**, flat	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

14.875 BELT ASSY.—STRAP UNIT and PARTS, Seat and Shoulder

Many designs of metal inserts and buckles may look alike, may false-latch one into the other without the specified strain.

BELT ASSY. STRAP UNIT and PARTS, Seat and Shoulder

NOTE: Components of Seat Belt Assemblies are not available separately. To comply with specified safety standards, it is not recommended that *integral retractors, buckles and inserts* which are sewn into the belt be removed and replaced.
Both right and left hand seat belt sections should be replaced as a unit. Many designs of metal inserts and buckles may look alike, may "false-latch" one into the other without the specified strain.

NOTE: *See Dealer Price Schedule* (P&A 26) for applicable prices.

1964

	BLACK	RED	BLUE	FAWN	AQUA	GREEN	SADDLE	WHITE
STANDARD								
Front Seat								
ALL	3955366	3955367	3955368	3955369				
Rear Seat & Front Ctr. Seat								
ALL	3957858	3957890	3957857	3957866				
DELUXE								
Front Seat								
ALL	3957807	3957839	3957839	3957843			3957844	4521568‡
Rear Seat & Front Ctr. Seat								
ALL	3957864	3957846	3957847	3841308	3957869	3957884		

‡White & Aqua (used on S.S. models).

1965

	BLACK	RED	BLUE	FAWN	SLATE	AQUA	SADDLE
STANDARD							
Front Seat & Folding Seats							
ALL	3955366	3955367	3955368	3955369			
Rear Seat & Front Ctr. Seat							
ALL	3957858	3957870	3957857	3957866			
DELUXE							
Front Seat							
ALL	3957807	3957839	3957840	3957843	3957841	3957842	3957844
Rear Seat & Folding Seats							
ALL	3955358	3955359	3955360	3955363	3955361		
Front Ctr. Seat & Rear Ctr, Seat							
ALL	3957856	3957851	3957853	3957849		3957850	3957854

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

	BLACK	RED	BLUE	FAWN	TURQ.	GREEN	BRONZE
STANDARD							
Front Seat							
ALL	3955366	3955367	3955368	3955369			
Rear Seat, Front & Rear Ctr. Seat & Folding Seats							
ALL	3955378	3955379	3955389	3955381			
DELUXE							
Front Seat							
ALL	3955370	3955372	3955373 3955371≠	3955374	3955375		3955377
Rear Seat, Rear Ctr. Seat & Folding Seats							
ALL	3955382	3955384	3955385 3955383≠	3955386	3955387	3955388	3955389
Front Ctr. Seat							
ALL	3955391	3955393	3955394 3955392≠	3955395	3955396	3955397	3955398

≠Brt. Blue, used on SPT. CPE. and CONV. models

1967 1st Design

	BLACK	BLUE	GOLD	TURQ.	RED	MAROON	FAWN	PLUM
STANDARD								
Front Seat								
CORVAIR	8700603	8700604	8700605					
Rear Seat, Rear Ctr. Seats & Folding Seats								
ALL	8700461	8700462	8700463	8700464				
Front Ctr. Seat								
ALL	8700457▲	8700458▲	8700459▲	8700460				
DELUXE								
Front Seat								
CORVAIR	8700676	8700601	8700600				8700602	
Rear Seat, Rear Ctr. Seat & Folding Seats								
ALL	8700510	8700516‡	8700518	8700517	8700512	8700514	8700522	8700511
Front Ctr. Seat								
ALL	8700523	8700529‡	8700531	8700530	8700525	8700527	8700532	8700524

‡ Used on STD. models

▲ Used as Front Seat Belts (less retractors) on some early CORVAIR models.

1967 2nd Design

	BLACK	BLUE	BRT. BLUE	GOLD	TURQ.	RED	MAROON	FAWN	PLUM
STANDARD									
Front Seat:									
CORVAIR	8700644	8700645	–	8700646	–	–	–	–	–
Front Ctr. Seat:									
CORVAIR	– 8700651	8700652	–	8700653	–	–	–	–	–
Front Seat:									
ALL	8700647	8700648	–	8700649	–	–	–	–	–

2nd Design—MARK OF EXCELLENCE EMBLEM

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1968

	BLACK	BLUE	GOLD	TEAL	RED	TURQ.	SADDLE	GREEN
STANDARD								
Front Seat:								
CORVAIR (L. or R.) . .	8700679	8700680	8700681					
Front Seat Center:								
ALL	8700702	8700703	8700704	8700705				
Rear Seat:								
ALL	8700706	8700707	8700708	8700709				
DELUXE								
Front Seat:								
CORVAIR (L. or R.) . .	8700676	8700677	8700678					
Front Seat Center:								
ALL	8700710	8700713	8700716	8700714	8700711	8700715	8700717	8700718
Rear SEat:								
ALL	8700746	8700749	8700752	8700750	8700747	8700751	8700753	8700754

1969

	BLACK	DARK BLUE	DARK GREEN	RED	TURQ.	SADDLE	GREEN
STANDARD							
Front Seat							
CORVAIR	8701664	8701665	8701666				
Front Seat Center							
ALL.	8701669	8701670	8701672				
Rear Seat							
. . . . .	8701644	8701645	8701647				

1969

	BLACK	DARK BLUE	DARK GREEN	DARK RED	MED. GREEN	SADDLE	DARK TURQ.
DELUXE							
Front Seat							
CORVAIR	8701588	8701589	8701590				
Front Seat Center							
ALL.	8701480	8701486	8701488	8701489	8701491	8701485	8701490
Rear Seat							
. . . . .	8701501	8701503	8701505	8701506	8701508		8701507

STRAP UNIT, Shoulder

1966

	BLACK	RED	BLUE	FAWN	TURQ.	BRONZE
STANDARD						
(exc. CONV.)	4228421	4228422	4228423	4228424		
CONV.	4228425	4228426	4228427	4428428		
DELUXE						
(exc. CONV.)	4228365	4228369	4228370 4228368*	4228372	4228373	4228376
CONV.	4228380	4228382	4228383 4228381*	4228385	4228386	4228388

*Brt. Blue (used on MONZA models)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

1967

	BLACK	DARK BLUE	DARK GOLD	DARK TURQ.	MED. RED	MAROON	DARK FAWN	PLUM
STANDARD								
CONV.	7792108	7792109	7792110	779211				
DELUXE								
(exc. CONV.)	7792095	7792096	7792097	7792098				
(exc. CONV.)	7792076	7792081 7792085*	7792083	7792082	7792077	7792079	7792084	7792088
CONV.	7792099	7792104 7792107*	7792106	7792105	7792100			

*Dk. Brt. Blue (used on MONZA)

1968

	BLACK	BLUE	GOLD	TEAL	RED	TURQ.	SADDLE	GREEN
STANDARD								
Front Seat:								
Rear Seat:								
CORVAIR	7794934	8700296	8700297	7794937				
Front and Rear Seat:								
CORVAIR (CONV.)	8700271	7794963	8700273					
DELUXE								
Front Seat:								
Rear Seat:								
CORVAIR	8700283	7794950	7794953	7794951	7794948	7794952		7794954
Front and Rear Seat:								
CORVAIR (CONV.)	8700264	7794977	8700269		7794976	8700268		

1969

	BLACK	DARK BLUE	DARK GREEN
STANDARD			
Front Seat			
CORVAIR	8701690	8701691	8701693
Front and Rear Seat			
CORVAIR (CONV.)	8701677	8701678	8701680
Rear Seat			
CORVAIR	8701695	8701697	8701701

	BLACK	DARK BLUE	DARK GREEN	DARK RED	DARK TURQ.	MID. GREEN	DARK SADDLE
DELUXE							
Front Seat							
CORVAIR	8701599	8701605	8701607	8701608	8701609	8701610	8701604
Front or Rear Seat							
CORVAIR (CONV.)	8701526	8701527	8701529	8701531	–	8701530	–
Rear Seat							
CORVAIR	8701552	8701552	8701561	8701563	8701565	8701566	–

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

64	ALL	1352806	**PROTECTOR,** frt. seat standard (black)	2
64	ALL	3841298	**PROTECTOR,** frt. seat, custom (black)	2
64	ALL	3841299	**PROTECTOR,** frt. seat, custom (aqua)	2
64	ALL	3841300	**PROTECTOR,** frt. seat, custom (fawn)	2
64	ALL	3841301	**PROTECTOR,** frt. seat, custom (green)	2
64	ALL	3841302	**PROTECTOR,** frt. seat, custom (saddle)	2
64	ALL	3841303	**PROTECTOR,** frt. seat, custom (red)	2
64	ALL	3841304	**PROTECTOR,** frt. seat, custon (blue)	2
65	ALL,			
67-69	CORVAIR (STD.)	4519465	**PROTECTOR,** frt. seat, standard (black)	2
65	ALL	4519470	**PROTECTOR,** frt. seat, standard (fawn)	2
65	ALL	4519472	**PROTECTOR,** frt. seat, standard (blue)	2
65	ALL	4519476	**PROTECTOR,** frt. seat, standard (med. red)	2
65	ALL	4519468	**PROTECTOR,** frt. seat, custom (med. aqua)	1
65	ALL	4519475	**PROTECTOR,** frt. seat, custom (dark green)	1
65	ALL	7583156	**PROTECTOR,** frt. seat, custom (saddle)	2
66	ALL (exc. MONZA)	7596254	**PROTECTOR,** frt. seat deluxe (med. red)	2
66	ALL (exc. MONZA)	7596255	**PROTECTOR,** frt. seat deluxe (drk. blue)	2
66	CORVAIR (STD.)	7596265	**PROTECTOR,** frt. seat deluxe (dk. fawn)	2
66	CONV. w/shoulder harness	7660977	**PROTECTOR,** shldr. strap (black)	2
66	CONV. w/shoulder harness	7660978	**PROTECTOR,** shldr. strap (turq.)	2
66	CONV. w/shoulder harness	7660979	**PROTECTOR,** shldr. strap (red)	2
66	CONV. w/shoulder harness	7660983	**PROTECTOR,** shldr. strap (brt. blue)	2
66	CONV. w/shoulder harness	7660985	**PROTECTOR,** shldr. strap (fawn)	2
66	CONV. w/shoulder harness	7660986	**PROTECTOR,** shldr. strap (bronze)	2
67	CORVAIR (STD.)	7667993	**PROTECTOR,** frt. seat (fawn)	2
67	CORVAIR (STD.)	7667988	**PROTECTOR,** frt. seat (blue)	2
67-69	CORVAIR (CONV.) w/shld. harness	7698556	**PROTECTOR,** shld. strap (clear)	2
68	CORVAIR (STD.) (SPT. CPE.)	7771339	**PROTECTOR,** frt. seat belt trim (gold)	2
69	CORVAIR (STD.)	8748604	**PROTECTOR,** frt. seat belt trim (dk. blue)	2
69	CORVAIR (STD.)	8748607	**PROTECTOR,** frt. seat belt trim (midnight green)	2
64-69	ALL	986068	**RETRACTOR UNIT**	1
65	ALL	4532409	**RETAINER,** seat belt, outboard	1
66	ALL w/shoulder harness (exc. CONV.)	7648066	**RETAINER,** shldr. strap buckle stowage deluxe)	2
66-67	MONZA	7639364	**RETAINER,** frt. seat belt lwr. otr. (Note 1)	2
	NOTE 1 Not to be used on belts w/floor mounted type retractors.			
66	ALL w/shoulder harness	7686802	**RETAINER,** shldr. strap buckle stowage (std.)	2
67	ALL w/shldr. harness	7710803	**RETAINER,** shldr. strap stowage (std.) (dk. blue)	2
67	ALL w/shldr. harness	7717918	**RETAINER,** shldr. strap stowage (std.) (med. blue)	2
67	ALL w/shldr. harness	7720252	**RETAINER,** shldr. strap stowage (std.) (brt. blue)	2
67	ALL w/shldr. harness	7710801	**RETAINER,** shldr. strap stowage (std.) (yellow)	2
67	ALL w/shldr. harness	7710802	**RETAINER,** shldr. strap stowage (std.) (red)	2
67	ALL w/shldr. harness	7710804	**RETAINER,** shldr. strap stowage (std.) (parchment)	2
67	ALL w/shldr. harness	7710805	**RETAINER,** shldr. strap stowage (std.) (turq.)	2
67	ALL w/shldr. harness	7710806	**RETAINER,** shldr. strap stowage (std.) (fawn)	2
67	ALL w/shldr. harness	7710807	**RETAINER,** shldr. strap stowage (std.) (gold)	2
67	ALL w/shldr. harness	7710810	**RETAINER,** shldr. strap stowage (std.) (maroon)	2
67	ALL w/shldr. harness	7710811	**RETAINER,** shldr. strap stowage (std.) (plum)	2
67	ALL w/shldr. harness	7710776	**RETAINER,** shldr. strap stowage (deluxe) (black)	2
67	ALL w/shldr. harness	7710779	**RETAINER,** shldr. strap stowage (deluxe) (yellow)	2
67	ALL w/shldr. harness	7710781	**RETAINER,** shldr. strap stowage (deluxe) (dk. blue)	2
67	ALL w/shldr. harness	7710788	**RETAINER,** shldr. strap stowage (deluxe) (med. blue)	2
67	ALL w/shldr. harness	7720239	**RETAINER,** shldr. strap stowage (deluxe) (brt. blue)	2
67	ALL w/shldr. harness	7710780	**RETAINER,** shldr. strap stowage (deluxe) (red)	2
67	ALL w/shldr. harness	7710782	**RETAINER,** shldr. strap stowage (deluxe) (parchment)	2
67	ALL w/shldr. harness	7710783	**RETAINER,** shldr. strap stowage (deluxe) (turq.)	2
67	ALL w/shldr. harness	7710784	**RETAINER,** shldr. strap stowage (deluxe) (fawn)	2
67	ALL w/shldr. harness	7710785	**RETAINER,** shldr. strap stowage (deluxe) (gold)	2
67	ALL w/shldr. harness	7710796	**RETAINER,** shldr. strap stowage (deluxe) (maroon)	2
67	ALL w/shldr. harness	7710797	**RETAINER,** shldr. strap stowage (deluxe) (plum)	2
67-69	CORVAIR (STD.) (SPT. CPE.)	7755838	**RETAINER,** frt. seat belt outer	2
68	ALL w/std. shldr. harness (exc. STA. WAG., SED.)	7779094	**RETAINER,** shldr. strap stowage (teal)	A.R.
68	ALL w/front seat shldr. harn. (deluxe)	7779076	**RETAINER,** shldr. strap stowage (blue)	2
68	ALL w/std. shldr. strap	7780003	**RETAINER,** strap stowage (gold) (Note 2)	2
68	ALL w/deluxe shldr. harness,			
69	CORVAIR (CONV.)	7780007	**RETAINER,** strap stowage (black) (Note 2)	2
68	ALL w/deluxe shldr. harn.	7780012	**RETAINER,** strap stowage (blue) (Note 2)	2
68	ALL w/deluxe shldr. harn.	7780016	**RETAINER,** strap stowage (gold) (Note 2)	2
	NOTE 2 Use with 1st design shoulder harn.			
68-69	CORVAIR (SPT. CPE.)	8717381	**RETAINER,** frt. seat shldr. strap stowage	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

69	CONV. w/deluxe shldr. harn.	7780024	**RETAINER,** strap buckle stowage	2
68	ALL w/shldr. harness (exc. CONV.)	7756411	**HOOK** (blue)—(15.388)	2
68	ALL w/shldr. harness (exc. CONV.)	7756414	**HOOK** (gold)—(15.388)	2
62-63	CORVAIR,			
65	CORVAIR	4858968	**PLATE ASSY.,** seat belt anchor on floor (outer)	A.R.
64	CORVAIR	4496146	**PLATE ASSY.,** seat belt anchor on floor—(16.714)	A.R.
68	2-DR. CPE.	7696420	**PLATE,** shldr. strap hook supt. (Note 3)	2
	NOTE 3 Use with 1st design shldr. strap.			
62-63	CORVAIR	3814733	**BOLT,** seat belt to floor ($^{7}/_{16}$"—20 x $^{27}/_{32}$")	2
64-66	ALL	3828745	**BOLT,** seat belt to floor ($^{6}/_{16}$"—20 x $1^{3}/_{8}$")	A.R.
64-65	ALL	3841314	**BOLT,** seat belt to floor ($^{7}/_{16}$"—20 x $1^{1}/_{4}$")	A.R.
64-66	ALL	4501201	**BOLT,** frt. seat belt outer anchor ($^{7}/_{16}$"—20 x $1^{11}/_{64}$") (chrome)	2
65-66	ALL	3866230	**BOLT,** rear seat belt ($^{7}/_{16}$"—20 x 1")	2
65-66	ALL	4529264	**BOLT,** rear seat belt inr. and otr. anchor	A.R.
65-66	CORVAIR	7583220	**BOLT,** frt. and rr. seat belt, inr. and otr. anchor ($^{7}/_{16}$"—20 x $1^{11}/_{64}$") (zinc)	2
65	ALL		**BOLT,** frt. seat belt inner anchor,	
66	CORVAIR	7583221	frt. and rear seat belt, outer anchor	2
67-69	CORVAIR,			
67-69	CORVAIR (STD.) (SPT. CPE.)	7668784	frt. seat belt otr. anchor	A.R.
67	CORVAIR	7700982	**BOLT,** ctr. frt. seat belt inner anchor	2
67-69	CORVAIR		**BOLT,** frt. seat belt outer anchor,	
68	MONZA		frt. seat belt inner and outer anchor,	
68	CORVAIR (CONV.)	7700984	rr. seat shoulder strap to brace	1
68-69	CORVAIR (STD.) (SPT. CPE.)	7765672	**BOLT,** frt. seat belt and shldr. strap inner	2
68-69	MONZA,			
68	CORVAIR w/rr. seat shldr. harn.	7700986	**BOLT,** rr. seat belt, shldr. strap, 2nd seat belt, shldr. harn.	2
66-68	ALL	3938886	**PLUG,** shoulder belt hole (plastic) ($^{3}/_{4}$" O.D. x $^{5}/_{8}$" long) (Note 5)	A.R.
	NOTE 5 Used in place of 3898723-8724-8725 and 8737.			
68-69	CORVAIR (SPT. CPE.)	7774267	**PLUG,** roof shldr. strap hole (comb. 703, 704)	4
68	CORVAIR (SPT. CPE.)	7774268	**PLUG,** roof shldr. strap hole (comb. 706, 707)	4
68	CORVAIR (SPT. CPE.)	7774269	**PLUG,** roof shldr. strap hole (comb. 709, 710)	4
68	ALL	7799407	**COVER,** frt. st. shldr. strap and L/strap cutout (black)	2
68	ALL	7799411	**COVER,** frt. st. shldr. strap and L/strap cutout (dk. blue)	2
68	ALL	7799412	**COVER,** frt. st. shldr. strap and L/strap cutout (dk. teal)	2
68	ALL	7799413	**COVER,** frt. st. shldr. strap and L/strap cutout (dk. turq.)	2
68	ALL	7799414	**COVER,** frt. st. shldr. strap and L/strap cutout (med. saddle)	2
68	ALL	7799415	**COVER,** frt. st. shldr. strap and L/strap cutout (med. gold)	2
68	ALL	7799416	**COVER,** frt. st. shldr. strap and L/strap cutout (med. red)	2
68	ALL	7799417	**COVER,** frt. st. shldr. strap and L/strap cutout (dk. green)	2
68	CORVAIR (SPT. CPE.)	8717382	**COVER,** frt. seat shldr. strap stowage ret	A.R.
ALL	ALL	3841316	**WASHER,** seat belt	A.R.
66	ALL	3893662	**PARTS UNIT,** seat belt installation (Note 6)	1
	NOTE 6 Used for third front and third rear seat belt installation. Consists of 2 Reinf., 4 Bolts, 4 Washers, 2 Seals and 2 Nuts.			
68	ALL (exc. CONV.)	7796712	**FASTENER,** frt. seat shldr. strap ret.	2
68	ALL (2-DR.)	7777215	**BOOT,** frt. seat belt anc. inner (red)	2
68	ALL (exc. CONV.)	7777223	**BOOT,** frt. seat belt anc. inner (blue)	2
68	ALL	8712916	**BOOT,** frt. seat belt anc. inner (turq.)	2
68	ALL	7777218	**BOOT,** frt. seat belt anc. inner (gold)	2
68	ALL (exc. CONV.)	7777221	**BOOT,** frt. seat belt anc. inner (green)	2
68	ALL (CONV.)	7775619	**BOOT,** frt. seat belt anchor inner (comb. 710, 721, 722, 756) (gold)	2
68-69	ALL (CONV.)	8770234	**BOOT,** frt. seat belt anchor inner (comb. 704, 712, 714, 725, 726, 730, 766, 794, 796) (black)	2
68	ALL (CONV.)	7775621	**BOOT,** frt. seat belt anc. (comb. 707, 717, 719, 726, 774) (blue)	2
69	CORVAIR (CONV.) (exc. shoulder harness)	8770190	**BOOT,** frt. seat belt anc. inner (comb. 707) (green)	2
69	CORVAIR	8770236	**BOOT,** frt. seat belt anc. inner (comb. 704) (blue)	2
69	CORVAIR w/shldr. harn.	8770238	**BOOT,** frt. seat belt anc. inner (comb. 707, 708)	2

14.880 TRIM ASSEMBLY, Front Seat Cushion Cover

64	MONZA (exc. CONV.)	4397320	(comb. 712) (black) driver and pass.	2
64	MONZA (exc. CONV.)	4397322	(comb. 732) (blue) driver and pass.	2
65	CORVAIR (STD.) (2-DR.)	4527641	(comb. 723) (turquoise)	1
65	MONZA	4473541	(comb. 713) (black) driver and pass.	2
65	MONZA	4473542	(comb. 733) (blue) driver and pass.	2
66	CORVAIR (STD.) (4-DR.)	4539357	(comb. 701) (fawn)	1
66	CORVAIR (STD.) (4-DR.)	4539358	(comb. 721) (blue)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit Iron

66	CORVAIR (STD.) (4-DR.)	4539359	(comb. 739) (red)	1
66	CORVAIR (STD.) (2-DR.)	4539353	(comb. 701) (fawn)	1
66	CORVAIR (STD.) (2-DR.)	4539354	(comb. 721) (blue)	1
66	CORVAIR (STD.) (2-DR.)	4539355	(comb. 739) (red)	1
66	MONZA	7621900	(comb. 702) (fawn) driver and pass.	2
66	MONZA	7621901	(comb. 722) (blue) driver and pass.	2
66	MONZA	7621902	(comb. 740) (red) driver and pass.	2
66	MONZA	7621903	(comb. 758) (black) driver and pass.	2
66	MONZA	7621905	(comb. 788) (bronze) driver and pass.	2
66	MONZA	7621906	(comb. 792) (turquoise) driver and pass.	2
66	MONZA	7621907	(comb. 795) (ivory) driver and pass.	2
67	CORVAIR (STD.) (SPT. CPE.)	7650420	(comb. 703) (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650421	(comb. 721) (blue)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650422	(comb. 751) (black)	1
67	CORVAIR (SPT. SED.)	7650423	(comb. 703) (fawn)	1
67	CORVAIR (SPT. SED.)	7650424	(comb. 721) (blue)	1
67	CORVAIR (SPT. SED.)	7650425	(comb. 751) (black)	1
67	MONZA	7680302	driver and pass. (comb. 713) (gold)	2
67	MONZA	7680303	driver and pass. (comb. 722) (brt. blue)	2
67	MONZA	7680306	driver and pass. (comb. 758) (black)	2
68	CORVAIR (STD.)	7751392	(comb. 703)	1
68	CORVAIR (STD.)	7751393	(comb. 706)	1
68	CORVAIR (STD.)	7751394	(comb. 709)	1
68	MONZA	7751400	(comb. 704)	1
68	MONZA	7751401	(comb. 707)	1
68	MONZA	7751402	(comb. 710)	1
68	CORVAIR (CONV.)	8755358	(comb. 731D) (black)	1
68	CORVAIR (CONV.)	8755358	(comb. 731D) (black)	1
69	CORVAIR (STD.)	8718682	(comb. 700) (black)	1
69	CORVAIR (STD.)	8718683	(comb. 703) (blue)	1
69	MONZA	8718686	pass. and driver (comb. 701) (black)	2
69	MONZA	8718687	pass. and driver (comb. 704) (blue)	2
69	MONZA	8718688	pass. and driver (comb. 707) (fawn)	2
69	CORVAIR (STD.)	8742501	(comb. 708) (med. green)	1

14.890 PAD, Front Seat Cushion and Back

60-66	CORVAIR (STD.)	6276599	cushion (foam rubber) (plain type)	1
64	MONZA w/bucket seats	4436864	**PAD ASSY.**, driver and passenger seat cushion	2
65-66	MONZA	4407013	**PAD ASSY.**, driver and pass. seat cushion	2
67-68	MONZA (4-DR.)	7707806	**PAD ASSY.**, driver and pass. seat cushion (foam rubber)	2
67	MONZA (2-DR.)	7702949	**PAD ASSY.**, driver and pass. seat cushion (foam rubber)	2
67-68	CORVAIR (STD.)	7715397	**PAD ASSY.**, driver and pass. (foam rubber)	2
68	MONZA	7746276	**PAD ASSY.**, driver and pass. (foam rubber)	2
69	CORVAIR (exc. MONZA)	8783583	**PAD ASSY.**, cushion (foam rubber)	1
69	MONZA	8717006	**PAD ASSY.**, pass. and driver seat cush. (foam rummer)	1
69	MONZA	8738437	**PAD ASSY.**, pass. and driver st. bk. spring	2

14.896 SEAT ASSY., Front

"Bench type" seat assemblies are available from production for current production year only.

Orders for these seat assemblies are to be submitted direct to Chevrolet Central Office, P/A Mdsg. Department, NPN desk and should include the following information.

1. Model
2. Trim Combination
3. Manual or Electric Seat Adjuster
4. With or without head restraint

Past model "bench type" seats are not available and must be assembled from components listed in the Parts Catalog.

Bucket Seat Assemblies are available for both current and past model passenger cars.

Orders for these assemblies should include year and model, trim combination and RPO information and are to be submitted to dealers normal shipping warehouse for forwarding to Flint, Michigan.

Components for front seats can be found in groups 11.373, 11.419, 14.800 and 14.880.

14.924 HEAD RESTRAINT ASSY.—PAD—COVER ASSY.—TRIM ASSY., Front Seat Back

NOTE For head restraint attaching parts, see Group 11.376.

66	MONZA	7630312	(comb. 722, 732) (br. blue) (Note 4)	2
66	MONZA	7630324	(comb. 795, 798) (ivory) (Note 4)	2
66	MONZA	7630318	(comb. 787, 788) (bronze) (Note 4)	2
66	CORVAIR	7610678	(blue) (Note 4)	2
66	MONZA	7610680	(black) (Note 4)	2
66	MONZA	7610684	(turquoise) (Note 4)	2
66	CORVAIR	7616347	(red) (Note 4)	2
66	CORVAIR	7629426	(fawn) (Note 4)	2
66	MONZA	7617821	(fawn) (Note 4)	2
67	MONZA	7677884	(black) (Note 3)	2
67	MONZA	7677885	(blue) (Note 3)	2
67	MONZA	7677889	(gold) (Note 3)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

67	CORVAIR	7709416	(black) (Note 4) 2
67	CORVAIR	7713256	(blue) (Note 4) 2
67	CORVAIR	7716724	(fawn) (Note 4) 2
68	MONZA	7759726	(comb. 704, 712, 713, 714, 715, 749) (black) 2
68	MONZA	7759728	(comb. 707, 717, 718, 719, 720) (blue) 2
68	MONZA	7759729	(comb. 710, 721, 722, 723) (gold) 2
68	CORVAIR (STD.) (SPT. CPE.) w/conventional seat	7776767	(comb. 703, 731, 733, 734) (black) 2
68	CORVAIR (STD., SPT. CPE.) w/conventional seat	7776769	(comb. 706, 737, 739) (dk. blue) 2
69	MONZA (1st design)	8737460	pass. and driver (comb. 704, 715, 716) (dk. blue) (Note 5) 2
69	MONZA (2nd design)	8787558	pass. and driver (dk. blue) (Note 6) 2
69	MONZA (2nd design)	8787560	pass. and driver (med. green) (Note 6) 2
69	MONZA (2nd design)	8787553	pass. and driver (black) (Note 6) 2
69	MONZA (1st design)	8737455	pass. and driver (comb. 701, 711, 712, 713) (black) (Note 5) 2
69	MONZA	8737461	pass. and driver (comb. 707, 721, 722) (med. green) 2
66	CORVAIR	7583801	**PAD,** front seat back head restraint 2
67	CORVAIR (STD.)	7704369	**PAD,** front seat back head restraint 2
68	CORVAIR	7739350	**PAD,** seat back head restraint 2
69	CORVAIR (STD.)	8748950	**PAD ASSY.,** w/panel, frt. seat back head restraint 2
66-67	CORVAIR (STD.)	7610726	**COVER ASSY.,** head restraint (comb. 701, 704, 706, 707, 714, 715) (fawn) (Note 4) 2
66	MONZA	7621919	**COVER ASSY.,** head restraint (comb. 722, 732) (br. blue) (Note 4) 2
66	MONZA	7621920	**COVER ASSY.,** head restraint (comb. 788) (bronze) (Note 4) 2
66	MONZA (exc. 4-DR.)	7621921	**COVER ASSY.,** head restraint (comb. 795) (ivory) (Note 4) 2
66	CORVAIR (STD.)	7607876	**COVER ASSY.,** head restraint (comb. 721, 724, 726, 727, 728, 729, 730, 733, 734, 735, 736) (blue) (Note 4) 2
66	MONZA	7607882	**COVER ASSY.,** head restraint (comb. 775, 776, 779, 780, 792) (turquoise) (Note 4) 2
66	MONZA	7607878	**COVER ASSY.,** head restraint (comb. 758, 761) (black) (Note 4) 2
66	CORVAIR	7610727	**COVER ASSY.,** head restraint (comb. 739, 740, 742, 744, 745, 747, 748, 752, 753, 754, 755) (red) (Note 4) 2
66	MONZA	7610728	**COVER ASSY.,** head restraint (comb. 702, 708, 709, 710, 716, 717) (fawn) (Note 4) 2
67	CORVAIR (STD.)	7701766	**COVER ASSY.,** head restraint (comb. 721, 724, 726, 727, 728, 729, 733, 734, 735, 736) (blue) (Note 4) 2
67	CORVAIR (STD.)	7701767	**COVER ASSY.,** head restraint (comb. 703, 719, 720, 768, 769, 770, 771, 772, 773, 774) (fawn) (Note 4) 2
67	CORVAIR (STD.)	7701768	**COVER ASSY.,** head restraint (comb. 751, 757, 759, 761, 762, 764, 769, 785, 786, 791) (black) (Note 4) 2
69	CORVAIR (STD.)	8771017	**COVER ASSY.,** head restraint (med. green) 2
69	CORVAIR (STD.)	8771007	**COVER ASSY.,** pass. and driver (black) 2
69	CORVAIR	8771014	**COVER ASSY.,** head restraint (dk. blue) 2
66	CORVAIR	7766459	**TRIM ASSY.** (comb. 703, 731, 733, 734, 760, 761, 762, 763, 764, 765, 768) (black),
68	CORVAIR	7766460	**TRIM ASSY.,** (comb. 706, 737, 759, 770, 771, 772, 773, 777) (dk. blue) 2
68	CORVAIR	7766461	**TRIM ASSY.,** (comb. 709, 741, 742, 752, 754, 778, 779, 780) (med. gold) 2

NOTE 4 Used on conventional type seat.
NOTE 5 Straight Post.
NOTE 6 Curved Post.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 15.000

REAR TRIM—MATS—

YARDAGE

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

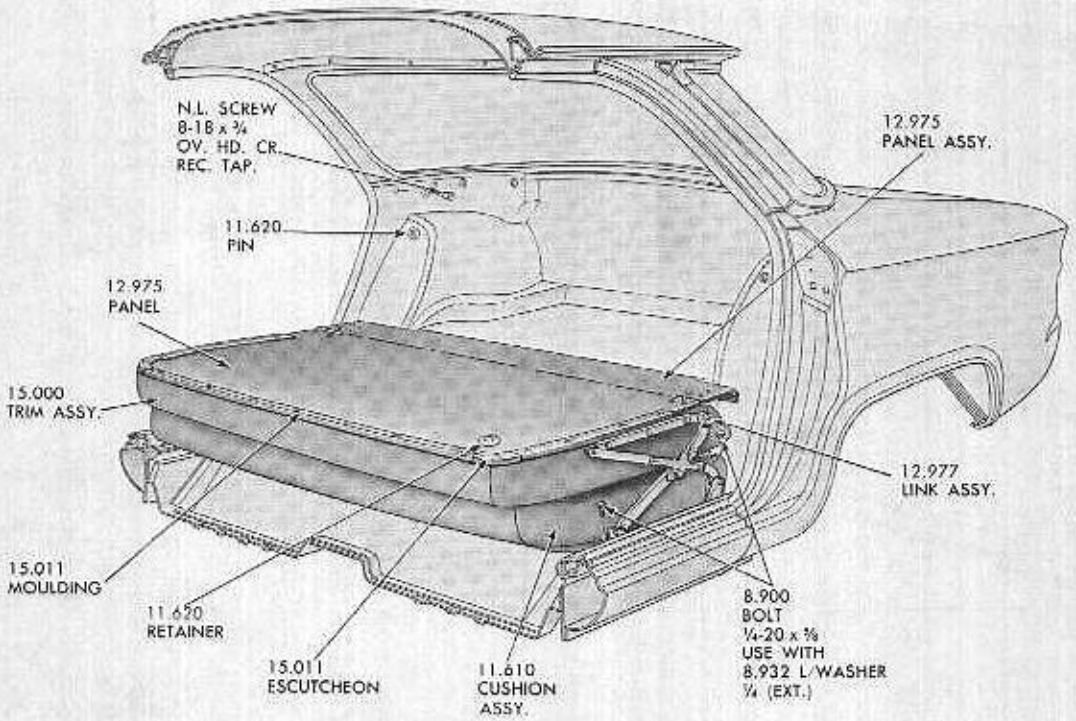

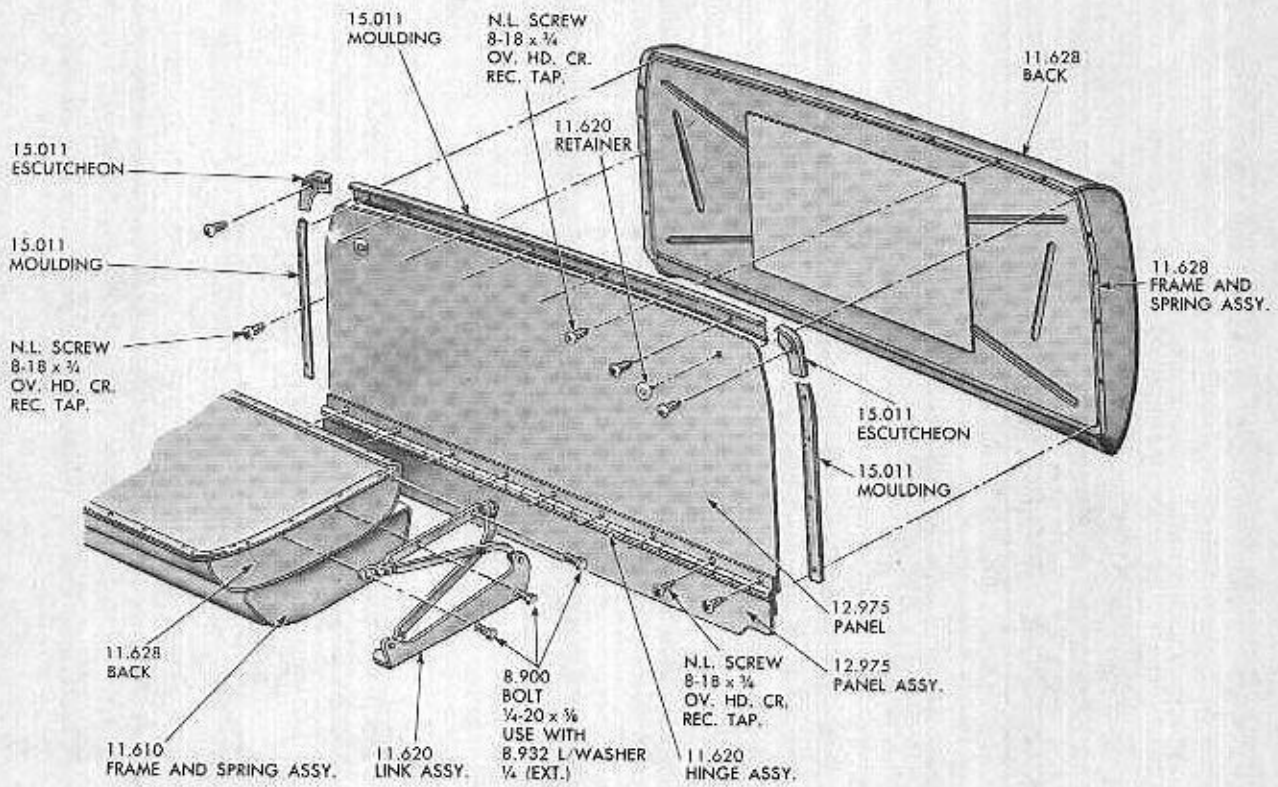

1960-64 CORVAIR FOLDING SEAT DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

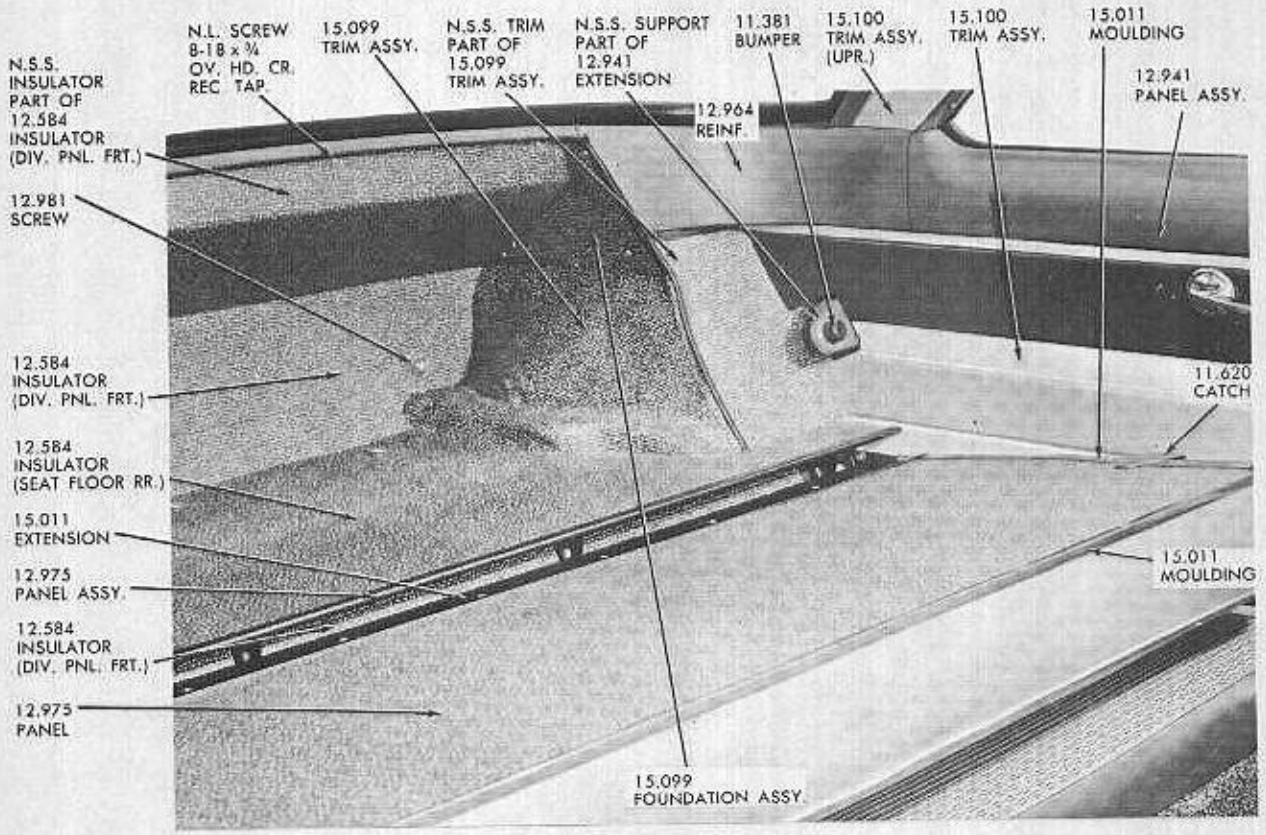

TWO DOOR

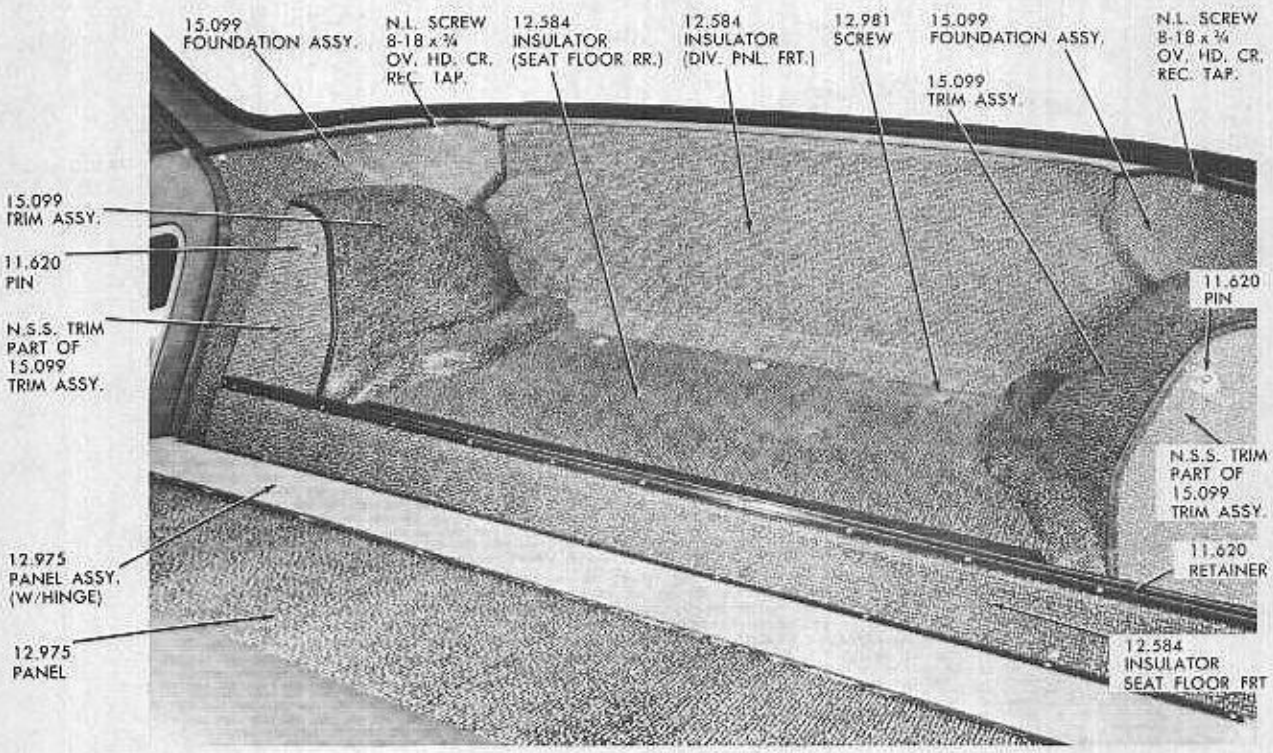

FOUR DOOR

1960-64 CORVAIR REAR SEAT COMPARTMENT

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

15.000 TRIM ASSY., Rear Seat Back Cover

65	CORVAIR (SPT. CPE.)	4475014	(comb. 713) (black)	1
65	MONZA (CONV.)	4475031	(comb. 713) (black)	1
66	CORVAIR STD.	4543393	(comb. 701) (fawn)	1
66	CORVAIR STD.	4543394	(comb. 721) (blue)	1
66	CORVAIR STD.	4543395	(comb. 739) (red)	1
66	CORVAIR STD. (4-DR.) w/fldg. seat	4543401	(comb. 701) (fawn)	1
66	CORVAIR STD. (4-DR.) w/fldg. seat	4543402	(comb. 721) (blue)	1
66	CORVAIR STD. (4-DR.) w/fldg. seat	4543403	(comb. 739) (red)	1
66	CORVAIR STD. (2-DR.) w/fldg. seat	4543397	(comb. 701) (fawn)	1
66	CORVAIR STD. (2-DR.) w/fldg. seat	4543398	(comb. 721) (blue)	1
66	CORVAIR STD. (2-DR.) w/fldg. seat	4543399	(comb. 739) (red)	1
66	MONZA (4-DR.)	7621932	(comb. 702) (fawn)	1
66-67	MONZA (4-DR.)	7621933	(comb. 722) (blue)	1
66	MONZA (4-DR.)	7621934	(comb. 740) (red)	1
66-67	MONZA (4-DR.)	7621935	(comb. 758) (black)	1
66	MONZA (4-DR.)	7621937	(comb. 788) (bronze)	1
66	MONZA (4-DR.)	7621938	(comb. 792) (turquoise)	1
66	MONZA (SPT. CPE.)	7621923	(comb. 702) (fawn)	1
66	MONZA (SPT. CPE.)	7621924	(comb. 722) (blue)	1
66	MONZA (SPT. CPE.)	7621925	(comb. 740) (red)	1
66	MONZA (SPT. CPE.)	7621926	(comb. 758) (black)	1
66	MONZA (SPT. CPE.)	7621928	(comb. 788) (bronze)	1
66	MONZA (SPT. CPE.)	7621929	(comb. 792) (turquoise)	1
66	MONZA (SPT. CPE.)	7621930	(comb. 795) (ivory)	1
66	MONZA (CONV.)	7621940	(comb. 702) (fawn)	1
66-67	MONZA (CONV.)	7621941	(comb. 722) (blue)	1
66	MONZA (CONV.)	7621942	(comb. 740) (red)	1
66-67	MONZA (CONV.)	7621943	(comb. 758) (black)	1
66	MONZA (CONV.)	7621945	(comb. 788) (bronze)	1
66	MONZA (CONV.)	7621946	(comb. 792) (turquoise)	1
66	MONZA (CONV.)	7621947	(comb. 795) (ivory)	1
66	MONZA (CONV.)	7605477	back of rr. back cover (comb. 702) (fawn)	1
66-67	MONZA (CONV.)	7605478	back of rr. back cover (comb. 722) (br. blue)	1
66	MONZA (CONV.)	7605479	back of rr. back cover (comb. 740) (red)	1
66-69	MONZA (CONV.)	7605480	back of rr. back cover (comb. 701, 704, 758) (black)	1
66	MONZA (CONV.)	7605482	back of rr. back cover (comb. 788) (bronze)	1
66	MONZA (CONV.)	7605483	back of rr. back cover (comb. 792) (turquoise)	1
66	MONZA (CONV.)	7605484	back of rr. back cover (comb. 795) (ivory)	1
67	CORVAIR (STD.)	7650662	(comb. 703) (fawn)	1
67	CORVAIR (STD.)	7650663	(comb. 721) (blue)	1
67	CORVAIR (STD.)	7650664	(comb. 751) (black)	1
67	CORVAIR (SPT. CPE.) w/fldg. rr. seat	7650665	(comb. 703) (fawn)	1
67	CORVAIR (SPT. CPE.) w/fldg. rr. seat	7650666	(comb. 721) (blue)	1
67	CORVAIR (SPT. CPE.) w/fldg. rr. seat	7650667	(comb. 751) (black)	1
67	MONZA (SPT. CPE.)	7650671	(comb. 713) (gold)	1
67	CORVAIR (SPT. SED.) w/fldg. rr. seat	7650668	(comb. 703) (fawn)	1
67	CORVAIR (SPT. SED.) w/fldg. rr. seat	7650669	(comb. 721) (blue)	1
67	CORVAIR (SPT. SED.) w/fldg. rr. seat	7650670	(comb. 751) (black)	1
67	MONZA (SPT. SED.)	7650675	(comb. 713) (gold)	1
67	MONZA (CONV.)	7650679	(comb. 713) (gold)	1
67	MONZA (CONV.)	7650691	back of rear back cover (comb. 713) (gold)	1
68	CORVAIR (STD.) (exc. fldg. rr. seat)	7751606	(comb. 703)	1
68	CORVAIR (STD.) (exc. fldg. rear seat)	7751607	(comb. 706)	1
68	CORVAIR (STD. (exc. folding rear seat)	7751608	(comb. 709)	1
68	CORVAIR (STD.) w/fldg. rear seat	7751609	(comb. 703)	1
68	CORVAIR (STD.) w/fldg. rear seat	7751610	(comb. 706)	1
68	CORVAIR (STD.) w/fldg. rear seat	7751611	(comb. 709)	1
68	MONZA (SPT. CPE.)	7751616	(comb. 704)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

68	MONZA (SPT. CPE.)	7751617	(comb. 707)	1
68	MONZA (SPT. CPE.)	7751618	(comb. 710)	1
68	MONZA (CONV.)	7751631	(comb. 704)	1
68	MONZA (CONV.)	7751632	(comb. 707)	1
68	MONZA (CONV.)	7751633	(comb. 710)	1
68	MONZA (CONV.)	7751694	back of rear back cover (comb. 707)	1
68	MONZA (CONV.)	7751695	back of rear back cover (comb. 710)	1
69	CORVAIR (STD.)	8718801	(comb. 700) (black)	1
69	CORVAIR (STD.)	8718802	(comb. 703) (blue)	1
69	CORVAIR (STD.) w/folding rear seat	8718804	rr. seat fldg. (comb. 700) (black)	1
69	CORVAIR (STD.) w/folding rear seat	8718805	rr. seat fldg. (comb. 703) (blue)	1
69	CORVAIR (STD.)	8742756	(comb. 708) (med. green)	1
69	CORVAIR (STD.) w/folding rear seat	8742757	rr. seat fldg. (comb. 708) (med. green)	1
69	CORVAIR (CONV.)	8718839	back of rr. back (comb. 70[illegible]) (blue)	1
69	CORVAIR (CONV.)	8718840	back of rr. back (comb. 707) (fawn)	1
69	CORVAIR (CONV.)	8718893	(comb. 701) (black)	1
69	CORVAIR (CONV.)	8718894	(comb. 704) (blue)	1
69	CORVAIR (CONV.)	8718895	(comb. 707) (fawn)	1
69	MONZA (SPT. CPE.)	8718808	rr. seat fldg. (comb. 701) (black)	1
69	MONZA (SPT. CPE.)	8718809	rr. seat fldg. (comb. 704) (blue)	1
69	MONZA (SPT. CPE.)	8718810	rr. seat fldg. (comb. 707) (fawn)	1

15.011 MOULDING—ESCUTCHEON—EXTENSION, Rear Seat Back

62-67	CORVAIR w/folding seat (exc. STA. WAG.)	6281322	trim finish upper	1
62-69	CORVAIR (2-DR.) w/folding seat	6282080	trim finish side	R.H.
62-69	CORVAIR (2-DR.) w/folding seat	6282081	trim finish side	L.H.
62-67	CORVAIR (4-DR.) w/folding seat (exc. STA. WAG.)	6282285	trim finish side	R.H.
62-68	CORVAIR (4-DR.) w/folding seat (exc. STA. WAG.)	6282286	trim finish side	L.H.
68-69	CORVAIR w/folding seat	6281313	trim finish upper	1
62-64 65-69	CORVAIR w/folding seat (exc. STA. WAG.), CORVAIR w/fldg. rear seat (exc. CONV.)	6281331	**ESCUTCHEON,** corner finishing mldg.	R.H.
62-64 65-69	CORVAIR w/folding seat (exc. STA. WAG.), CORVAIR w/fldg. rear seat (exc. CONV.)	6281332	**ESCUTCHEON,** corner finishing mldg.	L.H.
62-65 66-69	CORVAIR (2-DR.) w/folding seat, CORVAIR (SPT. CPE.)	6277754	**EXTENSION,** folding back panel	1

15.024 FOUNDATION—LACE—WINDLACE—CLIP, Rear Seat Back Compartment Shelf

62-64	CORVAIR (2-DR. SED.) (exc. folding seat)	4434508	rr. seat compt. front and shelf (aqua)	1
62-64	CORVAIR (2-DR.) w/folding seat	4434502	rr. seat compt. front and shelf (aqua)	1
62-64	CORVAIR DELUXE (2-DR.) w/folding seat	4434501	rr. seat compt. front and shelf (blue)	1
62	MONZA (2-DR.)	4868092	rr. seat compt. front and shelf (black)	1
62	MONZA (4-DR. SED.)	4870348	rr. seat compt. front and shelf (red)	1
63-64	CORVAIR (4-DR.) w/folding seat	4434513	rr. seat compt. front and shelf (blue)	1
63-64	CORVAIR (2-DR.) (exc. MONZA) (exc. folding seat)	4434510	rr. seat compt. front and shelf (red)	1
63	CORVAIR (2-DR.) w/folding seat	4434504	rr. seat compt. front and shelf (red)	1
63-64	CORVAIR (4-DR. SED.) (exc.			
63-64	CORVAIR (4-DR. SED.) (exc. MONZA) (exc. folding seat)	4434522	rr. seat compt. front and shelf (red)	1
63-64	MONZA (2-DR. SED.)	4434503	rr. seat compt. front and shelf (black)	1
63-64	CORVAIR (4-DR.) w/folding seat	4434516	rr. seat compt. front and shelf (red)	1
62	MONZA (4-DR. SED.)			
63-64	CORVAIR (4-DR.) w/folding seat	4434514	rr. seat compt. front and shelf (aqua)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

64	CORVAIR (4-DR.) (exc. MONZA)	**4434523**	rr. seat compt. front and shelf (fawn)	1
64	CORVAIR (4.-DR.) w/folding seat	**4434518**	rr. seat compt. front and shelf (fawn)	1
63-64	MONZA (4-DR.)	**4434517**	rr. seat compt. front and shelf (saddle)	1
65	CORVAIR STD. (4-DR.) (exc. split seat)	**4499546**	rr. seat compt. frt. and shelf (turquoise)	1
65-66	CORVAIR STD. (4-DR.)	**4499547**	rr. seat compt. frt. and shelf (red)	1
65	CORVAIR STD. (4-DR.)	**4499549**	rr. seat compt. frt. and shelf (fawn)	1
65	CORVAIR STD. (4-DR.) w/fldg. seat			
66	MONZA (4-DR.)	**4499550**	rr. seat compt. frt. and shelf (turquoise)	1
65-66	CORVAIR (4-DR.) w/fldg. seat	**4499551**	rr. seat compt. frt. and shelf (red)	1
65	CORVAIR (4-DR.) w/fldg. seat	**4499552**	rr. seat compt. frt. and shelf (fawn)	1
65	MONZA (4-DR.),			
66	CORVAIR STD. (4-DR.) w/fldg. seat	**4499553**	rr. seat compt. frt. and shelf (blue)	1
65	MONZA (4-DR.)	**4499554**	rr. seat compt. frt. and shelf (saddle)	1
65-67	MONZA (4-DR.)	**4499555**	rr. seat compt. frt. and shelf (black)	1
65	MONZA (4-DR.)	**4499556**	rr. seat compt. frt. and shelf (silver)	1
65	CORVAIR STD. (2-DR.) w/fldg. seat			
66	MONZA (SPT. CPE.)	**4515402**	rr. seat compt. frt. and shelf (turquoise)	1
65	CORVAIR STD. (2-DR.)	**4515403**	rr. seat compt. frt. and shelf (fawn)	1
65	CORVAIR STD. (2-DR.)	**4515404**	rr. seat compt. frt. and shelf (turquoise)	1
65-66	CORVAIR STD. (2-DR.)	**4515405**	rr. seat compt. frt. and shelf (red)	1
65	MONZA (SPT. CPE.)	**4506594**	(saddle)	1
65	MONZA (SPT. CPE.),			
66	CORVAIR STD. (2-DR.) w/fldg. seat	**4506596**	(blue)	1
65	MONZA (SPT. CPE.)	**4506597**	(fawn)	1
65-66	MONZA (SPT. CPE.),			
66	CORVAIR STD. (2-DR.) w/fldg. seat	**4506598**	(red)	1
65	MONZA (SPT. CPE.)	**4506599**	(slate)	1
65	MONZA (SPT. CPE.)	**4506600**	(turquoise)	1
66	CORVAIR (SPT. CPE.) w/fldg. seat	**4545664**	rr. seat compt. frt. and shelf (fawn)	1
66-67	MONZA (SPT. CPE.)	**4545665**	rr. seat compt. frt. and shelf (br. blue)	1
66	MONZA (SPT. CPE.)	**7647443**	rr. seat compt. frt. and shelf (bronze)	1
66	CORVAIR STD. (SPT. CPE.)	**4545668**	rr. seat compt. frt. and shelf (blue)	1
66	CORVAIR STD. (SPT. CPE.)	**4545669**	rr. seat compt. frt. and shelf (fawn)	1
66	CORVAIR STD. (4-DR.)	**4499548**	rr. seat compt. frt. and shelf (blue)	1
66	CORVAIR (4-DR.) (exc. CORSA) w/fldg. seat	**4545674**	rr. seat compt. frt. and shelf (fawn)	1
66-67	MONZA (4-DR.) (exc. CORSA)	**4545675**	rr. seat compt. frt. and shelf (br. blue)	1
66	MONZA (4-DR.) (exc. CORSA)	**7647444**	rr. seat compt. frt. and shelf (bronze)	1
66	CORVAIR STD. (4-DR.)	**4545678**	rr. seat compt. frt. and shelf (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.) w/fldg. rear seat	**7643179**	frt. and shelf (blue)	1
67	CORVAIR (STD.) (SPT. CPE.) w/fldg. rear seat	**7643183**	frt. and shelf (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.) (exc. fldg. seat)	**7643177**	frt. and shelf (blue)	1
67	CORVAIR (STD.) (SPT. CPE.)	**7643178**	frt. and shelf (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.)	**7643176**	frt. and shelf (black)	1
67	MONZA (SPT. CPE.)	**7643181**	frt. and shelf (gold)	1
67	CORVAIR (STD.) (SPT. SED.) w/fldg. rear seat	**7643193**	frt. and shelf (fawn)	1
67	CORVAIR (STD.) (SPT. SED.) w/fldg. rear seat	**7643189**	frt. and shelf (blue)	1
67	CORVAIR (STD.) (SPT. SED.) (exc. fldg. rear seat)	**7643187**	frt. and shelf (blue)	1
67	CORVAIR (STD.) (SPT. SED.) (exc. fldg. rear seat)	**7643188**	frt. and shelf (fawn)	1
67	MONZA (SPT. SED.)	**7643191**	frt. and shelf (gold)	1
67	CORVAIR (STD.) (SPT. SED.)	**7643186**	frt. and shelf (black)	1
68-69	CORVAIR (STD.) (exc. fldg. rear seat)	**7775659**	rr. compt. frt. and shelf (black)	1
68	CORVAIR (STD.) (exc. fldg. rear seat)	**7775660**	rr. compt. frt. and shelf (blue)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

68	CORVAIR (STD.) (exc. fldg. rear seat)	7775661	rr. compt. frt. and shelf (gold)	1
68-69	CORVAIR w/fldg. rear seat	7775662	rr. compt. frt. and shelf (black)	1
68	CORVAIR w/fldg. rear seat	7775663	rr. compt. frt. and shelf (blue)	1
68	CORVAIR w/fldg. rear seat	7775664	rr. compt. frt. and shelf (gold)	1
69	CORVAIR (STD.)	8733276	rr. compt. frt. and shelf (comb. 703) (blue)	1
69	CORVAIR (STD.)	8742197	rr. compt. frt. and shelf (comb. 708) (med. green)	1
69	CORVAIR w/fldg. rear seat	8733278	rr. compt. and shelf (comb. 703, 704) (blue)	1
69	CORVAIR w/fldg. rear seat	8742196	rr. compt. and shelf (comb. 707, 708) (med. green)	1
65	CORVAIR STD. (2-DR.),			
66	MONZA (SPT. CPE.)	4541419	**LACE**, side (turquoise)	2
66	CORVAIR STD. (2-DR.)	4545681	**LACE**, side (fawn)	2
66-67	MONZA (SPT. CPE.)	4545679	**LACE**, side (blue)	2
66	MONZA (SPT. CPE.)	4545682	**LACE**, side (bronze)	2
67	MONZA (SPT. CPE.)	7647627	**LACE**, side (gold)	2
67	CORVAIR (STD.) (SPT. CPE.)	7647628	**LACE**, side (fawn)	2
67	CORVAIR (STD.) (SPT. CPE.)	7647629	**LACE**, side (blue)	2
68	CORVAIR (SPT. CPE.)	7730435	**LACE**, side (blue)	1
68	CORVAIR (SPT. CPE.)	7730436	**LACE**, side (gold)	1
69	CORVAIR (SPT. CPE.)	8738772	**LACE**, side (comb. 703, 704) (dk. blue)	1
69	CORVAIR (SPT. CPE.)	8738773	**LACE**, side (comb. 707, 708) (dk. blue)	1
65-69	CORVAIR (SPT. CPE.)	4517362	**WINDLACE**, side (black)	2
65	CORVAIR (SPT. CPE.) (exc. STD.),			
66	CORVAIR STD. (2-DR.)	4517353	**WINDLACE**, side (blue)	2
65	CORVAIR (SPT. CPE.)	4517354	**WINDLACE**, side (fawn)	2
65-66	CORVAIR (SPT. CPE.)	4517355	**WINDLACE**, side (red)	2
65-69	CORVAIR (SPT. CPE.)	4500117	**CLIP**, foundation	1

15.035 TRIM ASSY., Rear and Center Seat Cushion Cover

NOTE For passenger models TRIM ASSY. is rear. For station wagons TRIM ASSY. is center.

65	CORVAIR (SPT. CPE.)	4474951	(comb. 797, 798) (ivory)	1
65	MONZA (4-DR.)	4474956	(comb. 733) (blue)	1
65	MONZA (4-DR.)	4474957	(comb. 773) (fawn)	1
65	MONZA (4-DR.)	4474958	(comb. 785) (red)	1
65	MONZA (4-DR.)	4474959	(comb. 795) (slate)	1
65	MONZA (4-DR.)	4474960	(comb. 797) (ivory)	1
66	CORVAIR STD. (2-DR.)	4543369	(comb. 701) (fawn)	1
66	CORVAIR STD. (2-DR.)	4543370	(comb. 721) (blue)	1
66	CORVAIR STD. (2-DR.)	4543371	(comb. 739) (red)	1
66	CORVAIR STD. (4-DR.)	4543379	(comb. 701) (fawn)	1
66	CORVAIR STD. (4-DR.)	4543380	(comb. 721) (blue)	1
66	CORVAIR STD. (4-DR.)	4543381	(comb. 739) (red)	1
66	MONZA (4-DR.)	4545915	(comb. 702) (fawn)	1
66-67	MONZA (4-DR.)	4545916	(comb. 722) (blue)	1
66	MONZA (4-DR.)	4545917	(comb. 740) (red)	1
66-67	MONZA (4-DR.)	4545918	(comb. 758) (black)	1
66	MONZA (4-DR.)	4545920	(comb. 788) (bronze)	1
66	MONZA (4-DR.)	4545921	(comb. 792) (turquoise)	1
66	MONZA (CONV.)	4545906	(comb. 702) (fawn)	1
66-67	MONZA (CONV.)	4545907	(comb. 722) (blue)	1
66	MONZA (CONV.)	4545908	(comb. 740) (red)	1
66-67	MONZA (CONV.)	4545909	(comb. 758) (black)	1
66	MONZA (CONV.)	4545911	(comb. 788) (bronze)	1
66	MONZA (CONV.)	4545912	(comb. 792) (turquoise)	1
66	MONZA (CONV.)	4545913	(comb. 795) (ivory)	1
66	MONZA (SPT. CPE.)	4545897	(comb. 702) (fawn)	1
66-67	MONZA (SPT. CPE.)	4545898	(comb. 722) (blue)	1
66	MONZA (SPT. CPE.)	4545899	(comb. 740) (red)	1
66-67	MONZA (SPT. CPE.)	4545900	(comb. 758) (black)	1
66	MONZA (SPT. CPE.)	4545902	(comb. 788) (bronze)	1
66	MONZA (SPT. CPE.)	4545903	(comb. 792) (turquoise)	1
66	MONZA (SPT. CPE.)	4545904	(comb. 795) (ivory)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650571	(comb. 703) (fawn)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650572	(comb. 721) (blue)	1
67	CORVAIR (STD.) (SPT. CPE.)	7650573	(comb. 751) (black)	1
67	MONZA (SPT. CPE.)	7650577	(comb. 713) (gold)	1
67	MONZA (SPT. SED.)	7650581	(comb. 713) (gold)	1
67	MONZA (CONV.)	7650585	(comb. 713) (gold)	1
67	CORVAIR (STD.) (SPT. SED.)	7650574	(comb. 703) (fawn)	1
67	CORVAIR (STD.) (SPT. SED.)	7650575	(comb. 721) (blue)	1
67	CORVAIR (STD.) (SPT. SED.)	7650576	(comb. 751) (black)	1
68	CORVAIR (STD.)	7751532	(comb. 703)	1
68	CORVAIR (STD.)	7751533	(comb. 706)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

68	CORVAIR (STD.)	7751534	(comb. 709)	1
68	MONZA (SPT. CPE.)	7751540	(comb. 704)	1
68	MONZA (SPT. CPE.)	7751541	(comb. 707)	1
68	MONZA (SPT. CPE.)	7751542	(comb. 710)	1
68	MONZA (CONV.)	7751557	(comb. 704)	1
68	MONZA (CONV.)	7751558	(comb. 707)	1
68	MONZA (CONV.)	7751559	(comb. 710)	1
69	CORVAIR (STD.)	8740099	(comb. 708) (med. green)	1
69	CORVAIR (STD.)	8718765	(comb. 700) (black)	1
69	CORVAIR (STD.)	8718766	(comb. 703) (blue)	1
69	MONZA (SPT. CPE.)	8718769	(comb. 701) (black)	1
69	MONZA (SPT. CPE.)	8718770	(comb. 704) (blue)	1
69	MONZA (SPT. CPE.)	8718771	(comb. 707) (fawn)	1
69	MONZA (CONV.)	8718773	(comb. 701) (black)	1
69	MONZA (CONV.)	8718774	(comb. 704) (blue)	1
69	MONZA (CONV.)	8718775	(comb. 707) (fawn)	1

15.036 PAD, Rear Cushion, Foam Rubber

62-67	MONZA (4-DR.)	4841713		1

15.099 TRIM ASSY.—LINING, Wheelhouse

62-64	MONZA (2-DR. SED.)	4372230	side (comb. 719, 748, 755) (aqua) (Note 2)	R.H.
	NOTE 2 Use with 2nd type rear seat compartment and shelf.			
63-64	MONZA (4-DR.)	4393928	side (comb. 727) (ivory)	R.H.
62-63	CORVAIR	4222828	**LINING** (comb. 731, 732, 735, 736, 738, 739, 740, 741, 742) (blue)	A.R.
62-63	CORVAIR	4222829	**LINING** (comb. 719, 720, 721, 722, 745, 748, 749, 750, 751, 752, 753, 754, 755) (aqua)	A.R.
63	CORVAIR	4223395	**LINING**, wheelhouse cover (comb. 772, 774, 775, 776, 777, 778, 780, 781, 783) (med. red)—(15.506)	A.R.
63	MONZA	4224011	**LINING**, wheelhouse cover (comb. 705, 707, 708, 709, 710) (med. saddle)—(15.506)	A.R.

15.100 TRIM ASSY.—FOUNDATION—RETAINER, Rear Quarter

64	CORVAIR STD.	4397243	(comb. 720) (aqua)	L.H.
64	CORVAIR STD.	4397244	(comb. 764) (fawn)	R.H.
64	CORVAIR STD.	4397247	(comb. 783) (red)	L.H.
64	MONZA (2-DR. SED.)	4397249	(comb. 705) (saddle)	L.H.
64	MONZA (2-DR. SED.)	4397250	(comb. 712) (black)	R.H.
64	MONZA (2-DR. SED.)	4397251	(comb. 712) (black)	L.H.
64	MONZA (2-DR. SED.)	4397253	(comb. 727) (ivory)	L.H.
64	MONZA (2-DR. SED.)	4397254	(comb. 732) (blue)	R.H.
64	MONZA (2-DR. SED.)	4397255	(comb. 732) (blue)	L.H.
64	MONZA (2-DR. SED.)	4397256	(comb. 755) (aqua)	R.H.
64	MONZA (2-DR. SED.)	4397257	(comb. 755) (aqua)	L.H.
64	MONZA (2-DR. SED.)	4397258	(comb. 758) (fawn)	R.H.
64	MONZA (2-DR. SED.)	4397259	(comb. 758) (fawn)	L.H.
64	MONZA (2-DR. SED.)	4397260	(comb. 781) (red)	R.H.
64	MONZA (2-DR. SED.)	4397261	(comb. 781) (red)	L.H.
64	MONZA (CONV.)	4397267	(comb. 727) (ivory)	L.H.
64	MONZA (CONV.)	4397268	(comb. 732) (blue)	R.H.
64	MONZA (CONV.)	4397274	(comb. 781) (red)	R.H.
64	MONZA (CONV.)	4397275	(comb. 781) (red)	L.H.
65	CORVAIR (SPT. CPE.)	4475258	(comb. 706) (saddle)	R.H.
65	CORVAIR (SPT. CPE.)	4475259	(comb. 706) (saddle)	L.H.
65	CORVAIR (SPT. CPE.)	4475260	(comb. 713) (black)	R.H.
65	CORVAIR (SPT. CPE.)	4475261	(comb. 713) (black)	L.H.
65	CORVAIR (SPT. CPE.)	4475262	(comb. 733) (blue)	R.H.
65	CORVAIR (SPT. CPE.)	4475263	(comb. 733) (blue)	L.H.
65	CORVAIR (SPT. CPE.)	4475264	(comb. 773) (fawn)	R.H.
65	CORVAIR (SPT. CPE.)	4475265	(comb. 773) (fawn)	L.H.
65	CORVAIR (SPT. CPE.)	4475266	(comb. 785) (red)	R.H.
65	CORVAIR (SPT. CPE.)	4475267	(comb. 785) (red)	L.H.
65	CORVAIR (SPT. CPE.)	4530648	(comb. 795) (slate)	R.H.
65	CORVAIR (SPT. CPE.) (exc. STD.)	4530649	(comb. 795) (slate)	L.H.
65	CORVAIR (SPT. CPE.)	4475270	(comb. 797, 798) (ivory)	R.H.
65	CORVAIR (SPT. CPE.)	4475271	(comb. 797, 798) (ivory)	L.H.
65	CORVAIR STD. (2-DR.)	4527634	(comb. 723) (turquoise)	R.H.
65	CORVAIR STD. (2-DR.)	4527635	(comb. 723) (turquoise)	L.H.
65	CORVAIR STD. (2-DR.)	4527636	(comb. 771) (fawn)	R.H.
65	CORVAIR STD. (2-DR.)	4527637	(comb. 771) (fawn)	L.H.
65	CORVAIR STD. (2-DR.)	4527638	(comb. 782) (red)	R.H.
65	CORVAIR STD. (2-DR.)	4527639	(comb. 782) (red)	L.H.
65	MONZA (CONV.)	4475273	(comb. 706) (saddle)	L.H.
65	MONZA (CONV.)	4475275	(comb. 713) (black)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65	MONZA (CONV.)	4475276	(comb. 733) (blue)	R.H.
65	MONZA (CONV.)	4475277	(comb. 733) (blue)	L.H.
65	MONZA (CONV.)	4475278	(comb. 773) (fawn)	R.H.
65	MONZA (CONV.)	4475279	(comb. 773) (fawn)	L.H.
65	MONZA (CONV.)	4475281	(comb. 785) (red)	L.H.
65	MONZA (CONV.)	4530650	(comb. 795) (slate)	R.H.
65	MONZA (CONV.)	4475285	(comb. 797, 798) (ivory)	L.H.
65	CORVAIR STD. (SPT. CPE.)	4539316	(comb. 701) (fawn)	R.H.
66	CORVAIR STD. (SPT. CPE.)	4539317	(comb. 701) (fawn)	L.H.
66	CORVAIR STD. (SPT. CPE.)	4539318	(comb. 721) (blue)	R.H.
66	CORVAIR STD. (SPT. CPE.)	4539319	(comb. 721) (blue)	L.H.
66	CORVAIR STD. (SPT. CPE.)	4539320	(comb. 739) (red)	R.H.
66	CORVAIR STD. (SPT. CPE.)	4539321	(comb. 739) (red)	L.H.
66	MONZA (SPT. CPE.)	4544508	(comb. 702) (fawn)	R.H.
66	MONZA (SPT. CPE.)	4544509	(comb. 702) (fawn)	L.H.
66-67	MONZA (SPT. CPE.)	4544510	(comb. 722) (blue)	R.H.
66-67	MONZA (SPT. CPE.)	4544511	(comb. 722) (blue)	L.H.
66	MONZA (SPT. CPE.)	4544512	(comb. 740) (red)	R.H.
66	MONZA (SPT. CPE.)	4544513	(comb. 740) (red)	L.H.
66-67	MONZA (SPT. CPE.)	4544514	(comb. 758) (black)	R.H.
66-67	MONZA (SPT. CPE.)	4544515	(comb. 758) (black)	L.H.
66	MONZA (SPT. CPE.)	4544518	(comb. 792) (turquoise)	R.H.
66	MONZA (SPT. CPE.)	4544519	(comb. 792) (turquoise)	L.H.
66	MONZA (SPT. CPE.)	4545958	(comb. 795) (ivory)	R.H.
66	MONZA (SPT. CPE.)	4545959	(comb. 795) (ivory)	L.H.
66	MONZA (SPT. CPE.)	4545952	(comb. 788) (bronze)	R.H.
66	MONZA (SPT. CPE.)	4545953	(comb. 788) (bronze)	L.H.
66	MONZA (CONV.)	4544520	(comb. 702) (fawn)	R.H.
66	MONZA (CONV.)	4544521	(comb. 702) (fawn)	L.H.
66-67	MONZA (CONV.)	4544522	(comb. 722) (blue)	R.H.
66-67	MONZA (CONV.)	4544523	(comb. 722) (blue)	L.H.
66	MONZA (CONV.)	4544524	(comb. 740) (red)	R.H.
66	MONZA (CONV.)	4544525	(comb. 740) (red)	L.H.
66-67	MONZA (CONV.)	4544526	(comb. 758) (black)	R.H.
66-67	MONZA (CONV.)	4544527	(comb. 758) (black)	L.H.
66	MONZA (CONV.)	4544530	(comb. 792) (turquoise)	R.H.
66	MONZA (CONV.)	4544531	(comb. 792) (turquoise)	L.H.
66	MONZA (CONV.)	4545954	(comb. 788) (bronze)	R.H.
66	MONZA (CONV.)	4545955	(comb. 788) (bronze)	L.H.
66	MONZA (CONV.)	4545956	(comb. 795) (ivory)	R.H.
66	MONZA (CONV.)	4545957	(comb. 795) (ivory)	L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646530	(comb. 703) (fawn)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646531	(comb. 703) (fawn)	L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646532	(comb. 721) (blue)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646533	(comb. 721) (blue)	L.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646534	(comb. 751) (black)	R.H.
67	CORVAIR (STD.) (SPT. CPE.)	7646535	(comb. 751) (black)	L.H.
67	MONZA (SPT. CPE.)	7646536	(comb. 713) (gold)	R.H.
67	MONZA (SPT. CPE.)	7646537	(comb. 713) (gold)	L.H.
66	MONZA (CONV.)	7646544	(comb. 713) (gold)	R.H.
67	MONZA (CONV.)	7646545	(comb. 713) (gold)	L.H.
68	CORVAIR (STD.)	7751344	(comb. 703)	R.H.
68	CORVAIR (STD.)	7751345	(comb. 703)	L.H.
68	CORVAIR (STD.)	7751346	(comb. 706)	R.H.
68	CORVAIR (STD.)	7751347	(comb. 706)	L.H.
68	CORVAIR (STD.)	7751348	(comb. 709)	R.H.
68	CORVAIR (STD.)	7751349	(comb. 709)	L.H.
68-69	MONZA (SPT. CPE.)	7751350	(comb. 701, 704)	R.H.
68-69	MONZA (SPT. CPE.)	7751351	(comb. 701, 704)	L.H.
68	MONZA (SPT. CPE.)	7751352	(comb. 707)	R.H.
68	MONZA (SPT. CPE.)	7751353	(comb. 707)	L.H.
68	MONZA (SPT. CPE.)	7751354	(comb. 710)	R.H.
68	MONZA (SPT. CPE.)	7751355	(comb. 710)	L.H.
68-69	MONZA (CONV.)	7751356	(comb. 701, 704)	R.H.
68-69	MONZA (CONV.)	7751357	(comb. 701, 704)	L.H.
68	MONZA (CONV.)	7751358	(comb. 707)	R.H.
68	MONZA (CONV.)	7751359	(comb. 707)	L.H.
68	MONZA (CONV.)	7751360	(comb. 710)	R.H.
68	MONZA (CONV.)	7751361	(comb. 710)	L.H.
69	CORVAIR (STD.)	8718874	(comb. 700) (black)	R.H.
69	CORVAIR (STD.)	8718875	(comb. 700) (black)	L.H.
69	CORVAIR (STD.)	8718876	(comb. 703) (blue)	R.H.
69	CORVAIR (STD.)	8718877	(comb. 703) (blue)	L.H.
69	CORVAIR (STD.)	8742806	(comb. 708) (med. green)	R.H.
69	CORVAIR (STD.)	8742807	(comb. 708) (med. green)	L.H.
69	MONZA (SPT. CPE.)	8718880	(comb. 704) (blue)	R.H.
69	MONZA (SPT. CPE.)	8718881	(comb. 704) (blue)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

69	MONZA (SPT. CPE.)	8718882	(comb. 707) (fawn) R.H.
69	MONZA (SPT. CPE.)	8718883	(comb. 707) (fawn) L.H.
69	MONZA (CONV.)	8718896	(comb. 704) (blue) R.H.
69	MONZA (CONV.)	8718897	(comb. 704) (blue) L.H.
69	MONZA (CONV.)	8718898	(comb. 707) (green) R.H.
69	MONZA (CONV.)	8718899	(comb. 707) (green) L.H.
61	LAKEWOOD (DELUXE)	4455458	**FOUNDATION,** qtr. panel rear (comb. 777) (red) L.H.
65	CORVAIR (STD.) (4-DR.)		
66	MONZA (4-DR.)	4506602	**FOUNDATION,** rr. qtr. lwr. (turq.) R.H.
65	CORVAIR (STD.) (4-DR.)		
66	MONZA (4-DR.)	4506603	**FOUNDATION,** rr. qtr. lwr. (turq.) L.H.
65	CORVAIR (4-DR.)	4506604	**FOUNDATION,** rr. qtr. lwr. (fawn) R.H.
65	CORVAIR (4-DR.)	4506605	**FOUNDATION,** rr. qtr. lwr. (fawn) L.H.
65-66	CORVAIR (4-DR.)	4506606	**FOUNDATION,** rr. qtr. lwr. (red) R.H.
65-66	CORVAIR (4-DR.)	4506607	**FOUNDATION,** rr. qtr. lwr. (red) L.H.
65	MONZA (4-DR.)	4506609	**FOUNDATION,** rr. qtr. lwr. (saddle) L.H.
65-67	MONZA (4-DR.)		
67	CORVAIR (STD.) (4-DR.)	4506610	**FOUNDATION,** rr. qtr. lwr. (black) R.H.
65-67	MONZA (4-DR.)		
67	CORVAIR (STD.) (4-DR.)	4506611	**FOUNDATION,** rr. qtr. lwr. (black) L.H.
65	MONZA (4-DR.)		
66	CORVAIR STD. (4-DR.)	4506612	**FOUNDATION,** rr. qtr. lwr. (blue) R.H.
65	MONZA (4-DR.)		
66	CORVAIR STD. (4-DR.)	4506613	**FOUNDATION,** rr. qtr. lwr. (blue) L.H.
65	MONZA (4-DR.)	4506616	**FOUNDATION,** rr. qtr. lwr. (turquoise) R.H.
65	MONZA (4-DR.)	4506617	**FOUNDATION,** rr. qtr. lwr. (turquoise) L.H.
66	CORVAIR (SPT. SED.)	4545728	**FOUNDATION,** rr. qtr. lwr. (fawn) R.H.
66	CORVAIR (SPT. SED.)	4545729	**FOUNDATION,** rr. qtr. lwr. (fawn) L.H.
66-67	MONZA (SPT. SED.)	4545730	**FOUNDATION,** qtr. lwr. med. (br. blue) R.H.
66-67	MONZA (SPT. SED.)	4545731	**FOUNDATION,** qtr. lwr. med. (br. blue) L.H.
66	MONZA (SPT. SED.)	4545732	**FOUNDATION,** rr. qtr. lwr. (bronze) R.H.
66	MONZA (SPT. SED.)	4545733	**FOUNDATION,** rr. qtr. lwr. (bronze) L.H.
67	CORVAIR (STD. (SPT. SED.)	7643194	**FOUNDATION,** qtr. lwr. (blue) R.H.
67	CORVAIR (STD.) (SPT. SED.)	7643195	**FOUNDATION,** qtr. lwr. (blue) L.H.
67	CORVAIR (STD.) (SPT. SED.)	7643202	**FOUNDATION,** qtr. lwr. (fawn) R.H.
67	CORVAIR (STD.) (SPT. SED.)	7643203	**FOUNDATION,** qtr. lwr. (fawn) L.H.
67	MONZA (SPT. SED.)	7643198	**FOUNDATION,** qtr. lwr. (gold) R.H.
67	MONZA (SPT. SED.)	7643199	**FOUNDATION,** qtr. lwr. (gold) L.H.
60-63	CORVAIR (2-DR.)	6280765	**RETAINER,** qtr. binding strip to inner panel—(14.685) A.R.
65-67	CORVAIR (4-DR.)	4518727	**RETAINER,** belt trim R.H.
65-67	CORVAIR (4-DR.)	4518728	**RETAINER,** belt trim L.H.
65-66	CORVAIR (SPT. MDLS.)		
65-67	CORVAIR (4-DR.)	4500027	qtr. upr. foundation to roof rail, qtr. foundation to inner pnl. rr. L.H.

TRIM ASSEMBLY, Top Compartment Side Trim Panel

(See Group 12.989 for PANEL)

62-64	MONZA (CONV.)	4373030	upper (comb. 712) (black) R.H.
62-64	MONZA (CONV.)	4373031	upper (comb. 712) (black) L.H.
62-64	MONZA (CONV.)	4373033	upper (comb. 732) (blue) L.H.
62-64	MONZA (CONV.)	4373035	upper (comb. 755) (aqua) L.H.
62-64	MONZA (CONV.)	4373044	lower (comb. 712) (black)—(15.108) R.H.
62-64	MONZA (CONV.)	4373045	lower (comb. 712) (black)—(15.108) L.H.
62-64	MONZA (CONV.)	4373046	lower (comb. 732) (blue)—(15.108) R.H.
63-64	MONZA (CONV.)	4373725	upper (comb. 781) (red) L.H.
63-64	MONZA (CONV.)	4373728	lower (comb. 781) (red)—(15.108) R.H.
63-64	MONZA (CONV.)	4373729	lower (comb. 781) (red)—(15.108) L.H.
63-64	MONZA (CONV.)	4393933	lower (comb. 727) (ivory)—(15.108) L.H.
65	MONZA (CONV.)	4475107	lwr. (comb. 706) (saddle)—(15.108) L.H.
65-66	MONZA (CONV.)	4475108	lwr. (comb. 713, 758) (black)—(15.108) R.H.
65-66	MONZA (CONV.)	4475109	lwr. (comb. 713, 758) (black)—(15.108) L.H.
65	MONZA (CONV.)	4475110	lwr. (comb. 733) (blue)—(15.108) R.H.
65	MONZA (CONV.)	4475111	lwr. (comb. 733) (blue)—(15.108) L.H.
65-66	MONZA (CONV.)	4475112	lwr. (comb. 702, 773) (fawn)—(15.108) R.H.
65-66	MONZA (CONV.)	4475113	lwr. (comb. 702, 773) (fawn)—(15.108) L.H.
65-66	MONZA (CONV.)	4475114	lwr. (comb. 740, 785) (red)—(15.108) R.H.
65-66	MONZA (CONV.)	4475115	lwr. (comb. 740, 785) (red)—(15.108) L.H.
65-66	MONZA (CONV.)	4475118	lwr. (comb. 795, 797, 798) (ivory)—(15.108) R.H.
65-66	MONZA (CONV.)	4475119	lwr. (comb. 795, 797, 798) (ivory)—(15.108) L.H.
65-67	MONZA (CONV.)	4475124	upr. (comb. 713, 758) (black) R.H.
65-67	MONZA (CONV.)	4475125	upr. (comb. 713, 758) (black) L.H.
65	MONZA (CONV.)	4475126	upr. (comb. 733) (blue) R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65	MONZA (CONV.)	4475127	upr. (comb. 733) (blue)	L.H.
65-66	MONZA (CONV.)	4475128	upr. (comb. 702, 773) (fawn)—(15.108)	R.H.
65-66	MONZA (CONV.)	4475129	upr. (comb. 702, 773) (fawn)—(15.108)	L.H.
65-66	MONZA (CONV.)	4475130	upr. (comb. 740, 785) (red)—(15.108)	R.H.
65-66	MONZA (CONV.)	4475131	upr. (comb. 740, 785) (red)—(15.108)	L.H.
65-66	MONZA (CONV.)	4475134	upr. (comb. 795, 797, 798) (ivory)—(15.108)	R.H.
65-66	MONZA (CONV.)	4475135	upr. (comb. 795, 797, 798) (ivory)—(15.108)	L.H.
66	CORVAIR (CONV.)	7605462	upper (comb. 788) (bronze)	R.H.
66	CORVAIR (CONV.)	7605463	upper (comb. 788) (bronze)	L.H.
66	CORVAIR (CONV.)	7605464	upper (comb. 792) (turquoise)	R.H.
66	CORVAIR (CONV.)	7605465	upper (comb. 792) (turquoise)	L.H.
66-67	CORVAIR (CONV.)	7605442	lower (comb. 722) (brt. blue)—(15.108)	R.H.
66-67	CORVAIR (CONV.)	7605443	lower (comb. 722) (brt. blue)—(15.108)	L.H.
66	CORVAIR (CONV.)	7605444	lower (comb. 788) (bronze)—(15.108)	R.H.
66	CORVAIR (CONV.)	7605445	lower (comb. 788) (bronze)—(15.108)	L.H.
66	CORVAIR (CONV.)	7605446	lower (comb. 792) (turquoise)—(15.108)	R.H.
66	CORVAIR (CONV.)	7605447	lower (comb. 792) (turquoise)—(15.108)	L.H.
66-67	CORVAIR (CONV.)	7605460	upper (comb. 722) (brt. blue)	R.H.
66-67	CORVAIR (CONV.)	7605461	upper (comb. 722) (brt. blue)	L.H.
67	MONZA (CONV.)	7650784	upr. (comb. 713) (gold)	R.H.
67	MONZA (CONV.)	7650785	upr. (comb. 713) (gold)	L.H.
67	MONZA (CONV.)	7650776	lwr. (comb. 713) (gold)—(15.108)	R.H.
67	MONZA (CONV.)	7650777	lwr. (comb. 713) (gold)—(15.108)	L.H.
68-69	CORVAIR (CONV.)	7765986	upr. (comb. 701, 704)	R.H.
68-69	CORVAIR (CONV.)	7765987	upr. (comb. 701, 704)	L.H.
68	CORVAIR (CONV.)	7765988	upr. (comb. 707)	R.H.
68	CORVAIR (CONV.)	7765989	upr. (comb. 707)	L.H.
68	CORVAIR (CONV.)	7765990	upr. (comb. 710)	R.H.
68	CORVAIR (CONV.)	7765991	upr. (comb. 710)	L.H.
69	MONZA (CONV.)	8747982	upper (dk. blue)	R.H.
69	MONZA (CONV.)	8747983	upper (dk. blue)	L.H.
69	MONZA (CONV.)	8747984	upper (med. green)	R.H.
69	MONZA (CONV.)	8747985	upper (med. green)	L.H.

15.101 MOULDING—BUTTON ASSY., Rear Quarter Trim Finishing

64	MONZA (4-DR. SED.)	4837777	lower	2
65-67	MONZA (SPT. CPE.),			
67	MONZA (CONV.)	4843049	lower—(14.764)	1
65-67	CORVAIR (CONV.)	4471274	top compt. side lwr. trim finishing	2
62	MONZA (2-DR.)—(14.804)	6283717	**BUTTON ASSY.**, qtr. trim pad	A.R.

15.108 REST ASSEMBLY—TRIM ASSY., Rear Quarter Arm

64	MONZA (4-DR.)	4393922	(comb. 727, 729) (ivory)—(14.762)	R.H.
64	MONZA (4-DR.)	4393923	(comb. 727, 729) (ivory)—(14.762)	L.H.
62-64	MONZA (CONV.)	4373044	**TRIM ASSY.** (comb. 712) (black)	R.H.
62-64	MONZA (CONV.)	4373045	**TRIM ASSY.** (comb. 712) (black)	L.H.
62-64	MONZA (CONV.)	4373046	**TRIM ASSY.** (comb. 732) (blue)	R.H.
62-63	MONZA (CONV.)	4373050	**TRIM ASSY.** (comb. 758) (fawn)	R.H.
62-63	MONZA (CONV.)	4373051	**TRIM ASSY.** (comb. 758) (fawn)	L.H.
62	MONZA (CONV.)	4373052	**TRIM ASSY.** (comb. 781) (red)	R.H.
62	MONZA (CONV.)	4373053	**TRIM ASSY.** (comb. 781) (red)	L.H.
63-64	MONZA (CONV.)	4373728	**TRIM ASSY.** (comb. 781) (red)	R.H.
63-64	MONZA (CONV.)	4373729	**TRIM ASSY.** (comb. 781) (red)	L.H.
63-64	MONZA (CONV.)	4393933	**TRIM ASSY.** (comb. 727) (ivory)	L.H.
64	MONZA (CONV.)	4397162	**TRIM ASSY.** (comb. 758) (fawn)	R.H.
64	MONZA (CONV.)	4397163	**TRIM ASSY.** (comb. 758) (fawn)	L.H.
65	MONZA (CONV.)	4475107	**TRIM ASSY.** (comb. 706) (saddle)	L.H.
65-66	MONZA (CONV.)	4475108	**TRIM ASSY.** (comb. 713, 758) (black)	R.H.
65-66	MONZA (CONV.)	4475109	**TRIM ASSY.** (comb. 713, 758) (black)	L.H.
65	MONZA (CONV.)	4475110	**TRIM ASSY.** (comb. 733) (blue)	R.H.
65	MONZA (CONV.)	4475111	**TRIM ASSY.** (comb. 733) (blue)	L.H.
65-66	MONZA (CONV.)	4475112	**TRIM ASSY.** (comb. 702, 773) (fawn)	R.H.
65-66	MONZA (CONV.)	4475113	**TRIM ASSY.** (comb. 702, 773) (fawn)	L.H.
65-66	MONZA (CONV.)	4475114	**TRIM ASSY.** (comb. 740, 785) (red)	R.H.
65-66	MONZA (CONV.)	4475115	**TRIM ASSY.** (comb. 740, 785) (red)	L.H.
65-66	MONZA (CONV.)	4475118	**TRIM ASSY.** (comb. 795, 797, 798) (ivory)	R.H.
65-66	MONZA (CONV.)	4475119	**TRIM ASSY.** (comb. 795, 797, 798) (ivory)	L.H.
66-67	CORVAIR (CONV.)	7605442	**TRIM ASSY.** (comb. 722) (brt. blue)	R.H.
66-67	CORVAIR (CONV.)	7605443	**TRIM ASSY.** (comb. 722) (brt. blue)	L.H.
66	CORVAIR (CONV.)	7605444	**TRIM ASSY.** (comb. 788) (bronze)	R.H.
66	CORVAIR (CONV.)	7605445	**TRIM ASSY.** (comb. 788) (bronze)	L.H.
66	CORVAIR (CONV.)	7605446	**TRIM ASSY.** (comb. 792) (turquoise)	R.H.
66	CORVAIR (CONV.)	7605447	**TRIM ASSY.** (comb. 792) (turquoise)	L.H.
67	MONZA (CONV.)	7650776	**TRIM ASSY.** (comb. 713) (gold)	R.H.
67	MONZA (CONV.)	7650777	**TRIM ASSY.** (comb. 713) (gold)	L.H.
68-69	CORVAIR (CONV.)	7764848	**TRIM ASSY.** (comb. 701, 704) (black)	R.H.
68-69	CORVAIR (CONV.)	7764849	**TRIM ASSY.** (comb. 701, 704) (black)	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

68	CORVAIR (CONV.)	7765956	**TRIM ASSY.** (comb. 707) (blue)	R.H.
68	CORVAIR (CONV.)	7765957	**TRIM ASSY.** (comb. 707) (blue)	L.H.
68	CORVAIR (CONV.)	7765958	**TRIM ASSY.** (comb. 710) (gold)	R.H.
68	CORVAIR (CONV.)	7765959	**TRIM ASSY.** (comb. 710) (gold)	L.H.
69	CORVAIR (CONV.)	8747992	**TRIM ASSY.** (comb. 704) (dk. blue)	R.H.
69	CORVAIR (CONV.)	8747993	**TRIM ASSY.** (comb. 704) (dk. blue)	L.H.
69	CORVAIR (CONV.)	8747994	**TRIM ASSY.** (comb. 707) (med. green)	R.H.
69	CORVAIR (CONV.)	8747995	**TRIM ASSY.** (comb. 707) (med. green)	L.H.

15.222 LINING—MAT, Rear Compartment

62-63	CORVAIR (DELUXE)	4228050	trunk (foam coated cotton) (gray)	A.R.
60	DELUXE	6278938	**MAT,** luggage compt. floor	1
65	MONZA	7707811	**MAT,** frt. (gray)	1

15.280 FASTENER, Dash Panel

ALL	ALL	3764424	(6.758)	A.R.

15.286 CARPET ASSY.—CARPET—CARPET UNIT—MAT—MAT UNIT, Front Floor

63-64	MONZA (CONV.)	4882827	rocker panel (black)	L.H.
65-66	MONZA (exc. CONV.)	4485482	(comb. 713, 758, 795, 798) (black)	1
65-66	MONZA (exc. CONV.)	4485483	(comb. 740, 785) (red)	1
65	MONZA (exc. CONV.)	4485484	(comb. 733) (blue)	1
65	MONZA (exc. CONV.)	4485485	(comb. 797) (turquoise)	1
65	MONZA (exc. CONV.)	4485487	(comb. 706) (saddle)	1
65-66	MONZA (CONV.)	4485489	(comb. 713, 758, 795, 798) (black)	1
65-66	MONZA (CONV.)	4485490	(comb. 740, 785) (red)	1
65	MONZA (CONV.)	4485491	(comb. 733) (blue)	1
66	MONZA (exc. CONV.)	7614942	(comb. 722) (blue)	1
66	MONZA (exc. CONV.)	7614943	(comb. 792) (turquoise)	1
66	MONZA (exc. CONV.)	7614944	(comb. 702) (fawn)	1
66	MONZA (exc. CONV.)	7614945	(comb. 788) (bronze)	1
66	MONZA (CONV.)	7614947	(comb. 722) (blue)	1
66	MONZA (CONV.)	7614948	(comb. 792) (turquoise)	1
66	MONZA (CONV.)	7614949	(comb. 702) (fawn)	1
66	MONZA (CONV.)	7614950	(comb. 788) (bronze)	1
67-69	MONZA (exc. CONV.)	7666895	(comb. 701, 704, 758) (black)	1
67	MONZA (exc. CONV.)	7666896	(comb. 722) (brt. blue)	1
67	MONZA (exc. CONV.)	7666898	(comb. 713) (gold)	1
67-69	MONZA (CONV.)	7666891	(comb. 701, 704, 758) (black)	1
67	MONZA (CONV.)	7724702	(comb. 722) (blue)	1
67	MONZA (CONV.)	7666894	(comb. 713) (gold)	1
68	MONZA (SPT. CPE.)	7728935	(comb. 707) (blue)	1
68	MONZA (SPT. CPE.)	7728936	(comb. 710) (gold)	1
68	MONZA (CONV.)	7728932	(comb. 707) (blue)	1
68	MONZA (CONV.)	7728933	(comb. 710) (gold)	1
69	MONZA (SPT. CPE.)	8721372	(comb. 704) (blue)	1
69	MONZA (SPT. CPE.)	8742288	(comb. 707) (dark green)	1
69	CORVAIR (CONV.)	8721377	(comb. 704) (blue)	1
69	CORVAIR (CONV.)	8742289	(comb. 707) (dark green)	1
55-64	ALL	3927513	**CARPET,** frt. floor (loop texture) (Note 1)	1
55-64	ALL	3927516	**CARPET,** frt. floor (tuxedo texture) (Note 1)	1
55-65	ALL	3927519	**CARPET,** frt. floor (frosty texture) (Note 1)	1

NOTE 1 When ordering use special order form for ordering direct from source.

55-64	ALL	3927515	**CARPET UNIT** (loop texture) (Note 2)	1
55-65	ALL	3927518	**CARPET UNIT,** (tuxedo texture) (Note 2)	1
55-65	ALL	3927521	**CARPET UNIT** (frosty texture) (Note 2)	1

NOTE 2 Consist of front and rear carpet. When ordering use special order form for ordering direct from source.

61-64	CORVAIR (STD.) (exc. TAXI)	6281902	**MAT** (black)	1
61-64	CORVAIR (DELUXE) (exc. MONZA)	6281904	**MAT** (blue)	1
61-64	CORVAIR (DELUXE) (exc. MONZA)	6283112	**MAT** (red)	1
62-64	CORVAIR (DELUXE) (exc. MONZA)	6285064	**MAT** (aqua)	1
65-69	CORVAIR (STD.)	4496854	**MAT** (black)	1
68-69	CORVAIR	987381	**MAT UNIT,** full width rubber (black)	1
68-69	CORVAIR	987366	**MAT UNIT,** contour twin rubber (black)	1
69	CORVAIR	993673	**MAT UNIT,** contour twin rubber (dark blue)	1
69	CORVAIR	993674	**MAT UNIT,** contour twin rubber (dark green)	1
69	CORVAIR	993684	**MAT UNIT,** full width rubber (dark blue)	1
69	CORVAIR	993685	**MAT UNIT,** full width rubber (dark green)	1

15.300 GROMMET, Front Floor

60-69	ALL	4591473	at dimmer switch (1" I.D.)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

15.306 MAT—MAT UNIT—CARPET—CARPET ASSY., Rear Floor

63	CORVAIR (STD.)	4895786	rubber (black)	1
65-67	CORVAIR (STD.)	7696139	rubber (black)	1
68-69	CORVAIR (STD.)	7762488	rubber (black)	1
68	ALL	987363	**MAT UNIT,** contour twin (red)	1
69	ALL	993615	**MAT UNIT,** contour twin, rubber (black)	1
69	ALL	993616	**MAT UNIT,** contour twin, rubber (dark blue)	1
69	ALL	993671	**MAT UNIT,** contour twin, rubber (dark green)	1
60-65	ALL	3927514	**CARPET** (loop texture) (Note 1)	1
60-65	ALL	3927517	**CARPET** (tuxedo texture) (Note 1)	1
60-65	ALL	3927520	**CARPET** (frosty texture) (Note 1)	1
	NOTE 1 When ordering use special order form for ordering direct from source.			
64	MONZA (2-DR. SED.)	4417397	**CARPET ASSY.** (comb. 712) (black)	1
65-66	MONZA (4-DR.)	4488007	**CARPET ASSY.** (comb. 713, 758) (black)	1
65-66	MONZA (4-DR.)	4488008	**CARPET ASSY.** (comb. 740, 785) (red)	1
65-66	MONZA (SPT. CPE.)	7635648	**CARPET ASSY.** (comb. 713, 758, 795, 798) (black)	1
65-66	MONZA (CONV.)	7635662	**CARPET ASSY.** (comb. 713, 758, 795, 798) (black)	1
66	MONZA (SPT. SED.)	7635660	**CARPET ASSY.** (comb. 788) (bronze)	1
66	MONZA (SPT. SED.)	7635659	**CARPET ASSY.** (comb. 702) (fawn)	1
66	MONZA (SPT. SED.)	7614958	**CARPET ASSY.** (comb. 792) (turquoise)	1
66	MONZA (SPT. SED.)	7635657	**CARPET ASSY.** (comb. 722) (blue)	1
66	MONZA (SPT. CPE.)	7635650	**CARPET ASSY.** (comb. 722) (blue)	1
66	MONZA (SPT. CPE.)	7635651	**CARPET ASSY.** (comb. 792) (turquoise)	1
66	MONZA (SPT. CPE.)	7635652	**CARPET ASSY.** (comb. 702) (fawn)	1
66	MONZA (SPT. CPE.)	7614955	**CARPET ASSY.** (comb. 788) (bronze)	1
66	MONZA (CONV.)	7635664	**CARPET ASSY.** (comb. 722) (blue)	1
66	MONZA (CONV.)	7635665	**CARPET ASSY.** (comb. 792) (turquoise)	1
66	MONZA (CONV.)	7614964	**CARPET ASSY.** (comb. 702) (fawn)	1
66	MONZA (CONV.)	7635667	**CARPET ASSY.** (comb. 788) (bronze)	1
66-67	MONZA (CONV.)	7724703	**CARPET ASSY.** (comb. 722) (blue)	1
67	MONZA (SPT. CPE.)	7666939	**CARPET ASSY.** (comb. 713) (gold)	1
67	MONZA (SPT. CPE.)	7666936	**CARPET ASSY.** (comb. 758) (black)	1
67	MONZA (SPT. CPE.)	7666937	**CARPET ASSY.** (comb. 722) (brt. blue)	1
67	MONZA (SPT. SED.)	7666943	**CARPET ASSY.** (comb. 713) (gold)	1
67	MONZA (SPT. SED.)	7666940	**CARPET ASSY.** (comb. 758) (black)	1
67	MONZA (SPT. SED.)	7666941	**CARPET ASSY.** (comb. 722) (brt. blue)	1
67	MONZA (CONV.)	7666944	**CARPET ASSY.** (comb. 758) (black)	1
67	MONZA (CONV.)	7666947	**CARPET ASSY.** (comb. 713) (gold)	1
68	MONZA (SPT. CPE.)	7767462	**CARPET ASSY.** (comb. 704) (black)	1
68	MONZA (SPT. CPE.)	7767463	**CARPET ASSY.** (comb. 707) (blue)	1
68	MONZA (SPT. CPE.)	7767464	**CARPET ASSY.** (comb. 710) (gold)	1
68-69	MONZA (CONV.)	7767467	**CARPET ASSY.** (comb. 701, 704) (black)	1
68	MONZA (CONV.)	7767468	**CARPET ASSY.** (comb. 707) (blue)	1
68	MONZA (CONV.)	7767469	**CARPET ASSY.** (comb. 710) (gold)	1
69	MONZA (CONV.)	8742293	**CARPET ASSY.** (dark green)	1
69	MONZA (SPT. CPE.)	8721380	**CARPET ASSY.** (comb. 704) (blue)	1

15.388 HOOK—HOOK ASSY.—SCREW, Coat and Seat Belt

60-66	ALL	4840719	coat and seat belt	2
68	ALL	7756411	coat and shoulder strap (blue)	1
68	ALL	7756411	coat and shoulder strap (gold)	1
68	ALL	7756415	coat and shoulder strap (parchment)	1
68	ALL	7775164	coat and shoulder strap (turquoise)	1
67-68	ALL (exc. SPT. CPE.)	7700926	**HOOK ASSY.** (black)	2
67	ALL	7700929	**HOOK ASSY.** (lt. yellow)	2
67	ALL,			
67	ALL,			
67	ALL	7700932	**HOOK ASSY.** (dk. turq.)	2
67	ALL	7700933	**HOOK ASSY.** (med. fawn)	2
67	ALL	7700934	**HOOK ASSY.** (dk. fawn)	2
67	ALL	7700937	**HOOK ASSY.** (dk. blue)	2
67	CORVAIR	7700938	**HOOK ASSY.** (med. blue)	2
67	MONZA	7717855	**HOOK ASSY.** (med. brt. blue)	2
67	ALL	7700946	**HOOK ASSY.** (dk. maroon)	2
67	ALL	7700947	**HOOK ASSY.** (plum)	2
69	ALL	8752966	**HOOK ASSY.** (blue)	2
69	ALL	8752968	**HOOK ASSY.** (med. green)	2
60-61	DELUXE	9414768	**SCREW,** coat hook (10—16 x 1-1/2" chrome)—(8.977)	2

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

15.390 NUT, Assist Strap

Not required in this group.
See group 11.561 ..... **4860755**

15.490 MATERIAL, Top Covering

62-65	CONV.	**4222562**	white ..... A.R.
62-68	CONV.	**4296133**	black ..... A.R.
67-68	ALL w/vinyl top	**4224270**	black ..... A.R.
66-68	CONV.	**4228048**	white ..... A.R.
66	CONV.	**4228047**	beige ..... A.R.
67	CORVAIR, (CONV.)	**4228785**	med. blue ..... A.R.
67	ALL w/vinyl top	**4228797**	lt. fawn ..... A.R.
68	CONV.	**7792275**	blue ..... A.R.
68	ALL w/vinyl top	**7792278**	parchment ..... A.R.

15.492 FELT, Body Lining Deadener

ALL	ALL	**3829935**	(35" wide) ..... A.R.

15.506 COATED FABRIC

60	STD.		door binding (comb. 885),
60	DELUXE (4-DR.)	**4273778**	door binding (comb. 886) ..... A.R.
62	MONZA (4-DR.) (1st type)	**4870455**	doors, center pillars and lock pillars (comb. 759, 769) (med. fawn) (25 yd. roll) (vinyl coated) ..... A.R.
62-64	CORVAIR	**4222828**	rr. qtr. seat facing and spare tire, (comb. 731, 732, 734, 735, 736, 738, 739, 740, 741, 742) (blue)—(15.099) A.R.
62-64	CORVAIR	**4222829**	rr. qtr. seat facing, and spare tire, (comb. 719, 720, 721, 722, 745, 748, 749, 750, 751, 752, 754, 755) (aqua)—(15.099) ..... A.R.
62-63	CORVAIR	**4225287**	rr. qtr., seat facing, and spare tire (comb. 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 769, 770) (fawn)—(15.099) ..... A.R.
64	CORVAIR (exc. MONZA)		facings (comb. 757, 764),
64-66	CORVAIR (exc. MONZA)	**4224913**	headlining (comb. 739, 780, 782, 783) (ivory) ..... A.R.
64	CORVAIR (exc. MONZA)	**4225039**	facings, cushions and backs, back of frt. back lwr. extension (comb. 726, 772, 774, 776, 777, 778, 780, 783, 786, 791, 793, 794) (med. red) ..... A.R.
65	MONZA	**4225752**	cushion and back inserts (comb. 713) (black) ..... A.R.
65-66	CORVAIR	**4225597**	headlining (comb. 701, 704, 706, 707, 708, 709, 714, 715, 717, 719, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 771) (lt. fawn) ..... A.R.
65	CORVAIR	**4225598**	headlining (comb. 723, 724, 748, 749, 750, 751, 752, 753, 754, 755, 775, 776) (lt. turquoise) ..... A.R.
66	CORVAIR	**4225604**	headlining (comb. 721, 733, 734) (lt. blue) ..... A.R.
65-66	MONZA	**4226257**	headlining (comb. 702, 703, 709, 712, 716, 717, 718, 768, 769, 770, 773) (lt. fawn) ..... A.R.
65	MONZA		
66	MONZA (SPT. CPE.)	**4226261**	headlining (comb. 754, 755, 785, 786, 787, 791, 792, 793, 795, 797, 798) (ivory) ..... A.R.
65	MONZA (exc. CONV.),		
66	MONZA, S.S.	**4226372**	headlining (comb. 712, 713, 714, 758, 761, 762, 763, 765) (black) ..... A.R.
65-66	CORVAIR	**4226380**	spare tire cover, w/h and rr. qtr. seat facings (comb. 726, 739, 740, 742, 744, 745, 746, 747, 748, 749, 750, 752, 753, 754, 755, 756, 772, 774, 776, 777, 778, 780, 782, 785, 786, 787, 789, 791, 793, 794 (med. red) ..... A.R.
65	MONZA		seat facings (comb. 706, 707, 712, 713, 714),
66	MONZA	**4226164**	facings (comb. 761, 762, 763, 765, 758) (black) ..... A.R.
65-66	MONZA	**4226312**	seat facings (comb. 711, 716, 792, 795, 796, 797, 798) (ivory) ..... A.R.
65-67	MONZA	**4225623**	cushions and backs, ends, facings (comb. 713, 758, 765) (black) ..... A.R.
65	MONZA, NOVA (S.S.)		frt. back bottom facing (comb. 712, 713),
66-67	MONZA		back of frt. back (comb. 751, 758),
67	MONZA (exc. SPT. SED.)		rr. seat back bottom facing (comb. 758),
67	CORVAIR (STD.)	**4225626**	bk. of frt. bk. (comb. 751, 757, 764, 766, 785, 786, 791) (black) ..... A.R.
65-68	MONZA	**4225609**	doors (comb. 704, 713, 758, 764, 766) (black) ..... A.R.
65-68	CONV.	**4225632**	dust boot (comb. 704, 712, 713, 714, 758, 760, 761, 763, 765, 766, 767) (black) ..... A.R.
65	CONV.	**4225620**	dust boot (comb. 728, 729, 733, 742) (med. blue) ..... A.R.
65	CONV.		dust boot (comb. 792, 796, 797, 798),
66	MONZA	**4225618**	dust boot (comb. 795, 797, 798) (ivory) ..... A.R.
65-66	CONV.	**4225617**	dust boot (comb. 702, 709, 712, 757, 766, 770, 773) (lt. fawn) ..... A.R.
66	CONV.	**4225680**	dust boot (comb. 743, 753, 776, 792, (med. turquoise) . A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

65-66	CORVAIR	4225961	fldg. top pad covers (black) — A.R.
65	CORVAIR STD.		facings (comb. 771),
65-66	MONZA	4225582	facings, cushions and backs, end caps (comb. 773) (lt. fawn) — A.R.
65	CORVAIR,		
66	MONZA	4226742	door arm rests (comb. 702, 716, 718, 771, 773) (lt. fawn) — A.R.
65	CORVAIR (STD.),		
66	MONZA	4226743	door arm rests (comb. 723, 765, 779, 781, 792) (med. turquoise) — A.R.
65-66	CORVAIR	4226744	door arm rest (comb. 730, 740, 754, 756, 782, 785, 787, 791) (med. red) — A.R.
65	CORVAIR (exc. STD.),		
66	MONZA (exc. SPT. SED.)	4226745	door arm rests (comb. 795, 797, 798) (ivory) — A.R.
65-67	MONZA,		
67	CORVAIR		door arm rests (comb. 712, 713, 751, 758, 760, 780),
68	ALL	4226747	(comb. 703, 704, 712, 713, 731, 733, 734, 735, 760, 761, 762, 763, 764, 765, 766, 768) (black) — A.R.
65-66	MONZA	4225613	doors (comb. 702, 773) (lt. fawn) — A.R.
65	MONZA	4225616	doors, embossing (comb. 733) (med. blue) — A.R.
65-68	MONZA	4225629	doors (comb. 713, 758, 795, 797, 798, 804) (black) (fabric coated) — A.R.
65	CORVAIR		facings (comb. 723, 751, 752, 754, 755),
66	MONZA	4225583	cushions & backs (comb. 745, 747, 792) (med. turq.) — A.R.
65-67	ALL		facings (comb. 712, 713, 714, 751, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 780, 785, 786, 791),
68	CORVAIR (STD.)	4226164	back of rear seat back (comb. 703) (black) — A.R.
65	CORVAIR (STD.)		back of front back (comb. 771),
65-66	MONZA	4225585	frt. back bottom facing (comb. 702, 773) (lt. fawn) — A.R.
65	CORVAIR (STD.)		back of frt. back (comb. 723),
66	MONZA	4225586	back of frt. back (comb. 792) (med. turq.) — A.R.
65-66	CORVAIR (STD.)		back of frt. back (comb. 739, 782),
65-66	MONZA	4225587	frt. back bottom facing (comb. 739, 785) (med. red) — A.R.
65	MONZA,		
66	MONZA (exc. SED.)	4225610	cushions and backs, end caps, facings (comb. 797, 798) (ivory) — A.R.
65	MONZA,		
66	CORVAIR (STD.)	4225599	cushions and backs, end caps, facings (comb. 721, 733) (med. blue) — A.R.
66	CORVAIR (STD.)	4228818	doors (comb. 721, 724, 726, 727, 729, 733, 734, 735, 736) (med. blue) — A.R.
65	MONZA,		
66	MONZA (exc. SED.)	4225611	frt. back bottom facing (comb. 795, 797, 798) (ivory) — A.R.
66	MONZA	4227640	seat facings (comb. 787, 788, 790) (med. bronze) — A.R.
66	CONV.	4227405	fldg. top pad cover (fawn) — A.R.
66	MONZA	4227639	seat facings (comb. 722) (med. brt. blue) — A.R.
67	CORVAIR	4227652	seat facings (comb. 716, 722, 723, 731, 732, 737) (vinyl coated rayon) (med. brt. blue) — A.R.
66	CORVAIR (STD.)	4227638	rr. of rr. seat back (comb. 701) (dk. fawn) — A.R.
66	CORVAIR STD.	4226640	cushion and back covers (comb. 701) (lt. med. fawn) — A.R.
66	CORVAIR STD.	4226641	cushion and back covers (comb. 721) (med. blue) — A.R.
66	CORVAIR STD.	4226642	cushion and back covers (comb. 739) (med. red) — A.R.
66	MONZA	4226648	headlining (comb. 776, 779, 780, 781, 792) (med. turquoise) — A.R.
66	MONZA (exc. CONV.)	4226649	headlining (comb. 740, 747, 748, 749, 750, 756) (med. red) — A.R.
66	MONZA (exc. CONV.)	4226650	headlining (comb. 722, 731, 732, 737) (brt. blue) — A.R.
66	MONZA	4226655	dust boot (comb. 787, 788, 790) (med. bronze) — A.R.
66	CORVAIR	4226638	door arm rests (comb. 701) (lt. med. fawn) — A.R.
66	CORVAIR	4227637	seat facings, spare tire cover (comb. 701, 704, 706, 707, 714, 715, 719, 720) (lt. med. fawn) (vinyl coated) — A.R.
66-67	MONZA	4226643	cushions and backs (comb. 722, 737) (med. brt. blue) — A.R.
66-67	MONZA	4226644	doors (comb. 722) (med. brt. blue) — A.R.
66-67	MONZA	4226645	rr. st. bk. btm. facing bk. of frt. bk. (comb. 722), qtr. arm rests side upr. (comb. 731) (med. brt. blue) — A.R.
66	MONZA	4226646	arm rests (comb. 722, 737) (med. brt. blue) — A.R.
66-67	CONV.	4226647	dust boots (comb. 716, 722, 723, 731, 732) (med. brt. blue) — A.R.
66	MONZA	4226651	cushions and backs (comb. 788) (med. bronze) — A.R.
66	CORVAIR	4226636	facings (comb. 701, 704, 714, 715, 719, 720) (lt. med. fawn) — A.R.
66	CORVAIR	4226637	bk. of frt. bk. (comb. 701, 704, 714, 715, 719, 720) (lt. med. fawn) — A.R.
66	MONZA	4226652	doors (comb. 788) — A.R.
66	MONZA	4226653	bk. of frt. bk. (comb. 788) (med. bronze) — A.R.
66	MONZA	4226654	arm rests (comb. 788) (med. bronze) — A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

67	CORVAIR (STD.)	4228807	cush. and bk. cvrs. (comb. 751, 757, 791) (black) A.R.
67	CORVAIR (STD.)	4228808	cush. and bk. cvrs. (comb. 721, 734) (med. blue) A.R.
67	CORVAIR (STD.)	4228806	cush. and bk. cvrs. (comb. 730, 772) (med. fawn) A.R.
67	CORVAIR	4228524	headlining (comb. 721, 724, 726, 727, 733, 734, 735, 736) (med. blue) A.R.
67	CORVAIR		headlining (comb. 751, 757, 764, 766, 785, 786, 791),
68	CORVAIR	4228533	(comb. 704, 731, 733, 734, 735, 760, 761, 763) A.R.
67	CORVAIR	4228809	headlining (comb. 703, 768, 769, 770, 771, 772, 773, 774) (parchment) A.R.
67	MONZA	4228814	headlining (comb. 756, 758, 759, 760, 761, 762, 763, 765, 767, 797) (black) A.R.
67	MONZA	4228815	headlining (comb. 709, 711, 712, 713, 781, 782, 783, 784, 794, 796) (med. gold) A.R.
67	MONZA	4228816	headlining (comb. 716, 722, 723, 731, 732, 737) (med. brt. blue) A.R.
67	CORVAIR	4228794	fldg. top pad cover (med. blue) A.R.
67	CORVAIR	4225961	fldg. top pad cover (black) A.R.
67	CORVAIR	4228798	facings (comb. 703, 719, 720, 768, 771, 772) (med. fawn) A.R.
67	CORVAIR	4228799	facings (comb. 721, 724, 733, 734) (med. blue) A.R.
67	CORVAIR	4228800	bk. of frt. bk. (comb. 703, 719, 720, 768, 769, 770, 771, 772) (med. fawn) A.R.
67	CORVAIR	4228801	bk. of frt. bk. (comb. 721, 724, 726, 727, 733, 734) (med. blue) A.R.
67	CORVAIR (STD.)	4228804	doors (comb. 703) (med. fawn) A.R.
67	CORVAIR	4228805	doors (comb. 717, 721, 728) A.R.
67	MONZA	4228811	doors (comb. 713) (med. gold) A.R.
67	MONZA (exc. SED.)	4228812	rear seat back bottom facing (comb. 713) (med. gold) A.R.
67	CORVAIR (STD.)		facings and bk. of rr. seat bk. (comb. 721),
67	CORVAIR (STD.)	4228899	facings and bk. of rr. seat bk. (comb. 703) (vinyl coated rayon) (med. fawn) A.R.
67	MONZA	4228901	seat facings (comb. 707, 709, 711, 712, 713, 781, 782, 783, 784, 794, 796) (vinyl coated rayon) (med. gold) A.R.
67	MONZA (CONV.)	4228845	dust boot (comb. 709, 711, 713, 783, 784) (med. gold) A.R.
68	CORVAIR	4225623	facings (comb. 703, 704) (black) A.R.
68	CORVAIR	4225626	back of frt. back, rr. seat bottom facing, qtr. a/rest side (comb. 703, 704) (black) A.R.
68	CORVAIR (STD.)		seat facing (comb. 706, 717, 718, 719, 720, 737, 739, 740, 759, 770, 771, 772, 773, 774, 776, 777),
68	CORVAIR (STD.)	7792222	back of rear seat back (comb. 706) (vinyl-coated rayon) (dk. blue) A.R.
68	CORVAIR (STD.)		seat facing (comb. 709, 721, 741, 742, 743, 745, 752, 754, 756, 778, 779, 780),
68	CORVAIR (STD.)	7792223	back of rear seat back (comb. 709) (vinyl-coated rayon) (med. gold) A.R.
68	CORVAIR (STD.)		back of frt. back (comb. 706, 737, 759, 770, 771, 777),
68	MONZA	7792578	rr. seat back bottom facing end, qtr. a/rest side (comb. 707) (dk. blue) A.R.
68	MONZA	7792579	doors (comb. 707, 772, 773, 774, 776) (dk. blue) A.R.
68	CORVAIR		cush. and back facings, facings (comb. 706, 717, 718, 719, 720, 737, 739, 740),
68	MONZA	7792583	cush. and back perimeter and facings (comb. 707) (dk. blue) A.R.
68	CONV.	7792576	dust boot (comb. 707, 717, 719, 774) (dk. blue) A.R.
68	CORVAIR (STD.)	7792794	cush. and bk. covers (comb. 703, 733, 761) (black) A.R.
68	CORVAIR (STD.)		back of front back (comb. 709, 741, 752, 778, 784),
68	MONZA		qtr. a/rest side (comb. 710, 721, 722),
68	MONZA	7792588	rr. seat back button facing ends (comb. 710) (med. gold) A.R.
68	MONZA	7792589	doors (comb. 710, 754, 756, 779, 780) (med. gold) A.R.
68	MONZA (CONV.)	7792580	windshield pillar cover (comb. 707) (dk. blue) A.R.
68	MONZA	7792586	dust boot, (comb. 710, 721, 722, 754, 756) (med. gold) A.R.
68	CORVAIR		facings (comb. 709, 721, 752),
68	MONZA		cush. and back perimeters end facings (comb. 710),
68	CORVAIR	7792593	cush. and back facings (comb. 722, 723, 741, 742, 743, 745) (med. gold) A.R.
68	CORVAIR	7792653	suhshade covers (comb. 710, 721, 722, 754, 756) (dk. gold) A.R.
68	MONZA (CONV.)	7792654	w/s plr. cover (comb. 710) (dk. gold) A.R.
68	CORVAIR (SPT. CPE.)	7792772	headlining (comb. 706, 707) (dk. blue) A.R.
68	CORVAIR (SPT. CPE.)	7792773	headlining (comb. 709, 710) (med. gold) A.R.
68	CORVAIR	7792795	cush. and back covers (comb. 706, 777) (dk. blue) A.R.
68	CORVAIR	7792796	cush. and back covers (comb. 709, 752) (med. gold) A.R.
69	CORVAIR (STD.)	8701752	(comb. 703, 715, 716) (dk. blue) A.R.
69	CORVAIR (STD.)	8701755	st. facing (comb. 708, 721, 722, 742, 743) (med. green) A.R.
69	CORVAIR (STD.)	8702070	driver overlays (comb. 703) A.R.
69	CONV.	8702073	dust boot (comb. 704, 715, 716, 764, 765) A.R.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

69	CORVAIR (STD.)	8702074	doors overlay, lower (comb. 703, 715, 736, 737) (dk. blue) A.R.
69	CORVAIR	8702077	back of frt. back, rr. st. bk. button facing ends, otr. a/rest and buttons A.R.
69	CORVAIR	8702344	cushion and back covers (comb. 708) (med. green) A.R.

15.520 WINDLACE—LACE, Pinchweld Finishing

60	CORVAIR (exc. MONZA)	4878139	doors, center pillars and lock pillars (comb. 885, 886, 894) (gray) A.R.
60	CORVAIR DELUXE,		
62	CORVAIR DELUXE (1st type) (exc. MONZA),		
62	MONZA (2-DR. SED.) (1st type)	4870463	doors, center pillars and lock pillars (comb. 731, 732, 738, 739, 740, 741, 742) (med. blue) (vinyl coated w/metal insert) (smooth type) A.R.
61	MONZA (4-DR. SED.)		doors (comb. 816, 845),
62-63	CORVAIR (2nd type)	4874821	doors, center pillars and lock pillars (comb. 756, 758, 759, 760, 761, 762, 763, 765, 766, 767, 769, 770) (med. fawn) (grained vinyl coated) (simulated type) A.R.
62-64	CORVAIR (2nd type)	4874820	doors, center pillars and lock pillars (comb. 719, 721, 722, 745, 748, 749, 750, 751, 752, 753, 754, 755) (aqua) (grained vinyl coated) (simulated type) A.R.
62-64	CORVAIR DELUXE (2nd type)	4874823	doors, center pillars (comb. 731, 732, 735, 736, 738, 739, 740, 741, 742) (med. blue) (grained vinyl coated) (simulated type) A.R.
61-64	MONZA (2nd type) (exc. STA. WAG.)	4461397	doors, center pillars and lock pillars (comb. 712, 715, 830, 869, 870, 878) (black) (grained vinyl coated) (simulated type) A.R.
63-64	CORVAIR	4878136	doors, center pillars and lock pillars (med. red) (grained vinyl coated) A.R.
63-64	MONZA	4878137	doors, center pillars and lock pillars (med. saddle) (grained vinyl coated) A.R.
64	CORVAIR	4461401	(light fawn) A.R.
63-64	MONZA (CONV.)	4461400	doors, center pillars, lock pillars (ivory) (grained vinyl coated) A.R.
65	CORVAIR (exc. 4-DR. SPT. CPE.),		
66	MONZA (SPT. CPE., CONV.)	4531275	doors, center pillars, and lock pillars (fawn) (grained vinyl coated) A.R.
65	CORVAIR STD.,		
66	CORVAIR (exc. STD.)	4531276	doors, center pillars, and lock pillars (turquoise) (grained vinyl coated) A.R.
65-66	ALL	4531277	doors, center pillars, and lock pillars (red) (grained vinyl coated) A.R.
65	CORVAIR (exc. STD.),		
66	CORVAIR (STD.)	4531278	doors, center pillars, and lock pillars (blue) (grained vinyl coated) A.R.
65	CORVAIR (exc. STD.)	4531279	doors, center pillars, and lock pillars (saddle) (grained vinyl coated) A.R.
65	CORVAIR (exc. CONV.)	4531287	doors, center pillars, and lock pillars (fawn) (grained vinyl coated) A.R.
65-66	CORVAIR (exc. STD.),		
67-68	CORVAIR	4531284	doors, center pillars, and lock pillars (black) (grained vinyl coated) A.R.
65	CORVAIR (exc. STD., CONV.)	4531283	doors, center pillars, and lock pillars (turquoise) (grained vinyl coated) A.R.
65	CORVAIR (exc. STD.)	4531281	doors, center pillars, and lock pillars (slate) (grained vinyl coated) A.R.
65-66	CORVAIR (exc. STD.)	4531285	doors, center pillars, and lock pillars (ivory) (grained vinyl coated) A.R.
66	CORVAIR (exc. CONV.)	7620481	**LACE,** pinchweld (dk. fawn) A.R.
66	MONZA,		
67	CORVAIR	7620485	**LACE,** pinchweld (med. blue) A.R.
66	MONZA	7620487	**LACE,** pinchweld (bronze) A.R.
66	CORVAIR STD. (SPT. CPE.)	7620489	**LACE,** pinchweld (med. fawn) A.R.
67	ALL	7696212	**LACE,** pinchweld (med. gold) A.R.
67	ALL	7696208	**LACE,** pinchweld (med. fawn) A.R.
67	ALL	7696209	**LACE,** pinchweld (med. blue) A.R.
67	ALL	7696210	**LACE,** pinchweld (med. red) A.R.
68	CORVAIR	7791692	**LACE,** pinchweld (dk. blue) A.R.
68	CORVAIR	7791693	**LACE,** pinchweld (med. gold) A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

15.530 LINING—FABRIC, Top and Wall

62-68	CONV.	4164686	top (black) (56" wide)	A.R.
64	MONZA (CONV.)	4222582	top (fawn)	A.R.
66	CORVAIR (CONV.)	4228049	top (fawn)	A.R.
66	CORVAIR (CONV.)	4227404	well (fawn)	A.R.
67	CONV.	4228788	top (med. blue)	A.R.
68	CONV.	7792276	top (blue)	A.R.
68	MONZA (CONV.)	7792277	well (blue)	A.R.
62-66	CORVAIR (CONV.),			
68	MONZA (CONV.)	4241739	**FABRIC**, well (black) (54 wide)	A.R.
64	MONZA (CONV.)	4222583	**FABRIC**, well (fawn)	A.R.
65	CONV.	4225758	**FABRIC**, top lining (fawn)	A.R.
65	CONV.	4225759	**FABRIC**, well (fawn)	A.R.

15.534 BINDING ASSY., Folding Top Bow

62-64	MONZA	4863606	black	A.R.
62-64	MONZA	4863607	ivory	A.R.
64	MONZA	4445747	beige	1
65-69	CORVAIR	4501453	black	1
65	CORVAIR	4501454	ivory	1
65-66	CORVAIR	4501455	fawn	1
66-69	CORVAIR	7594331	white	1
67	MONZA	7663960	blue	1
68	CORVAIR	7768769	blue	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

GROUP 16.000

INTERIOR AND

PANELS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

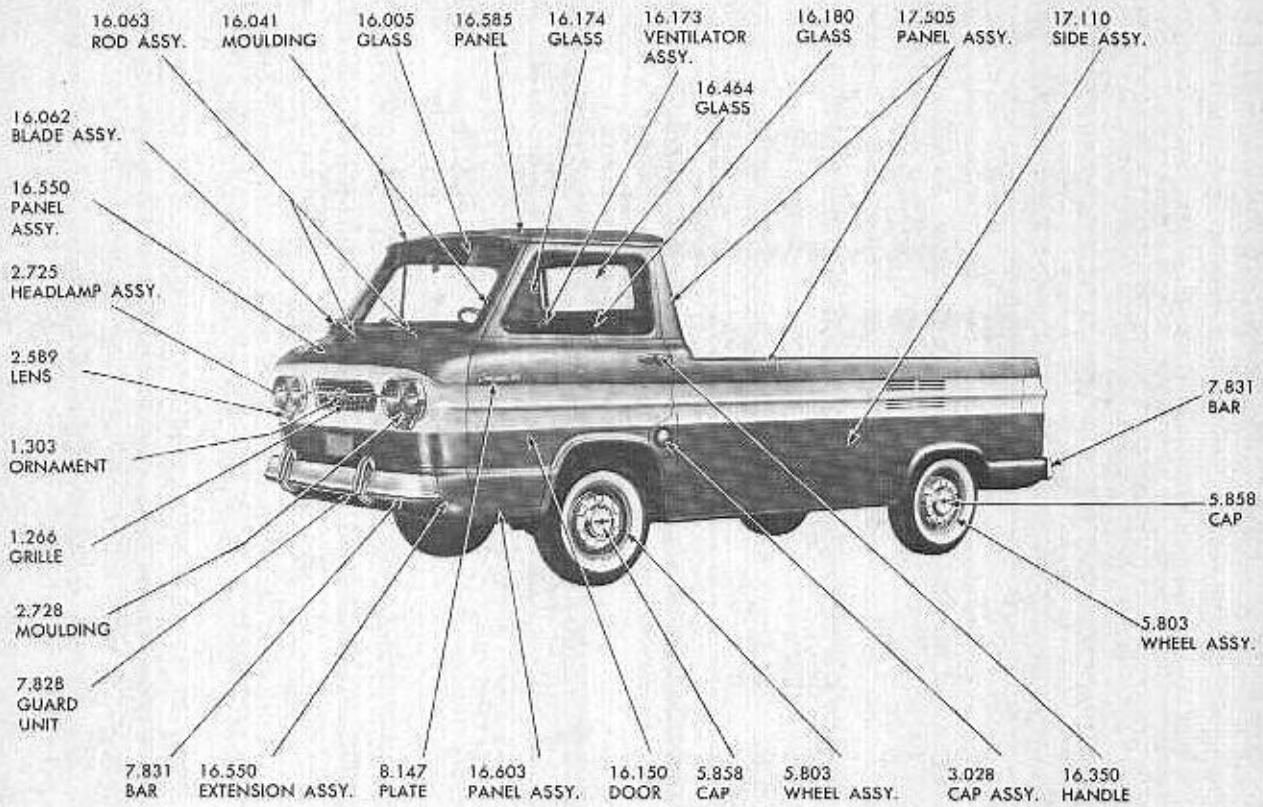

1961-64 CORVAIR PICK-UP

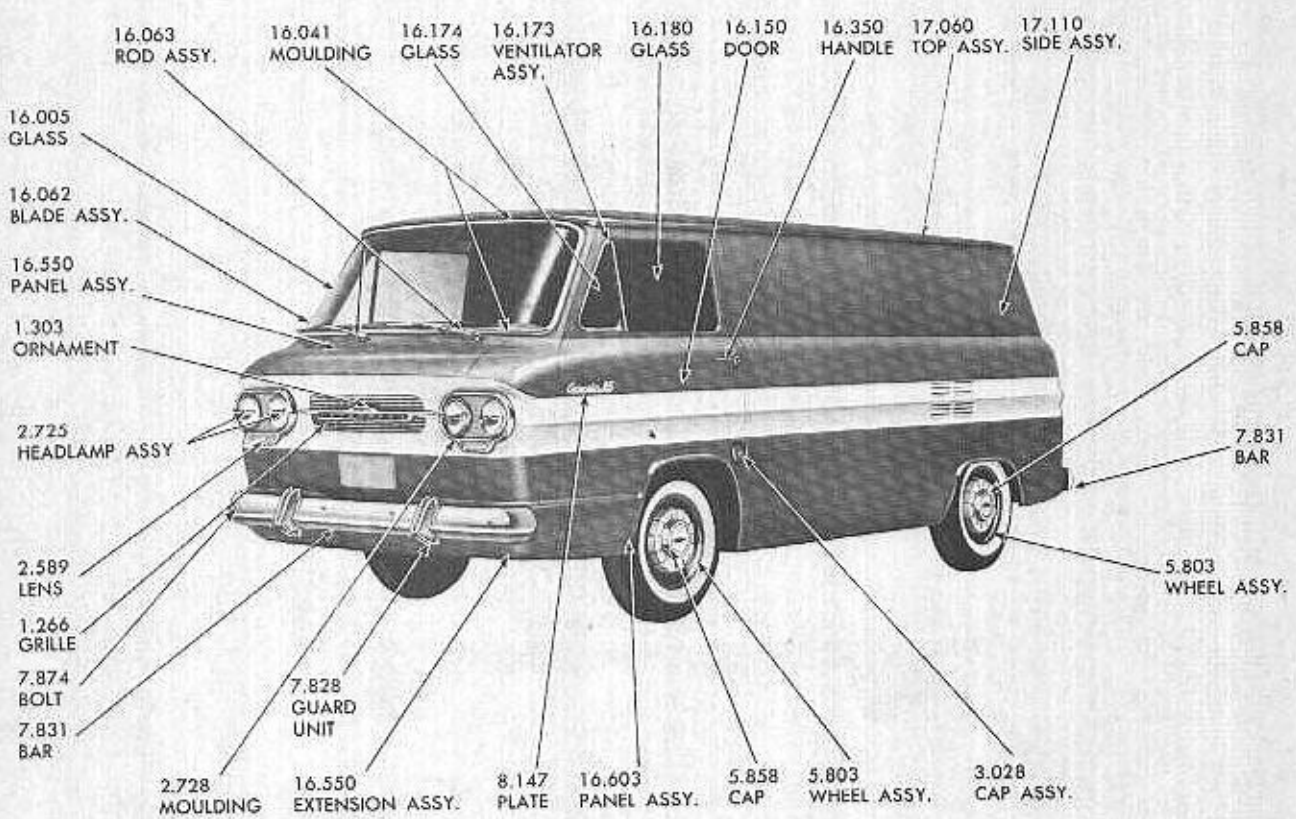

1961-64 CORVAIR PANEL

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Reproduced from Detroit Iron DETROIT PERMISSION

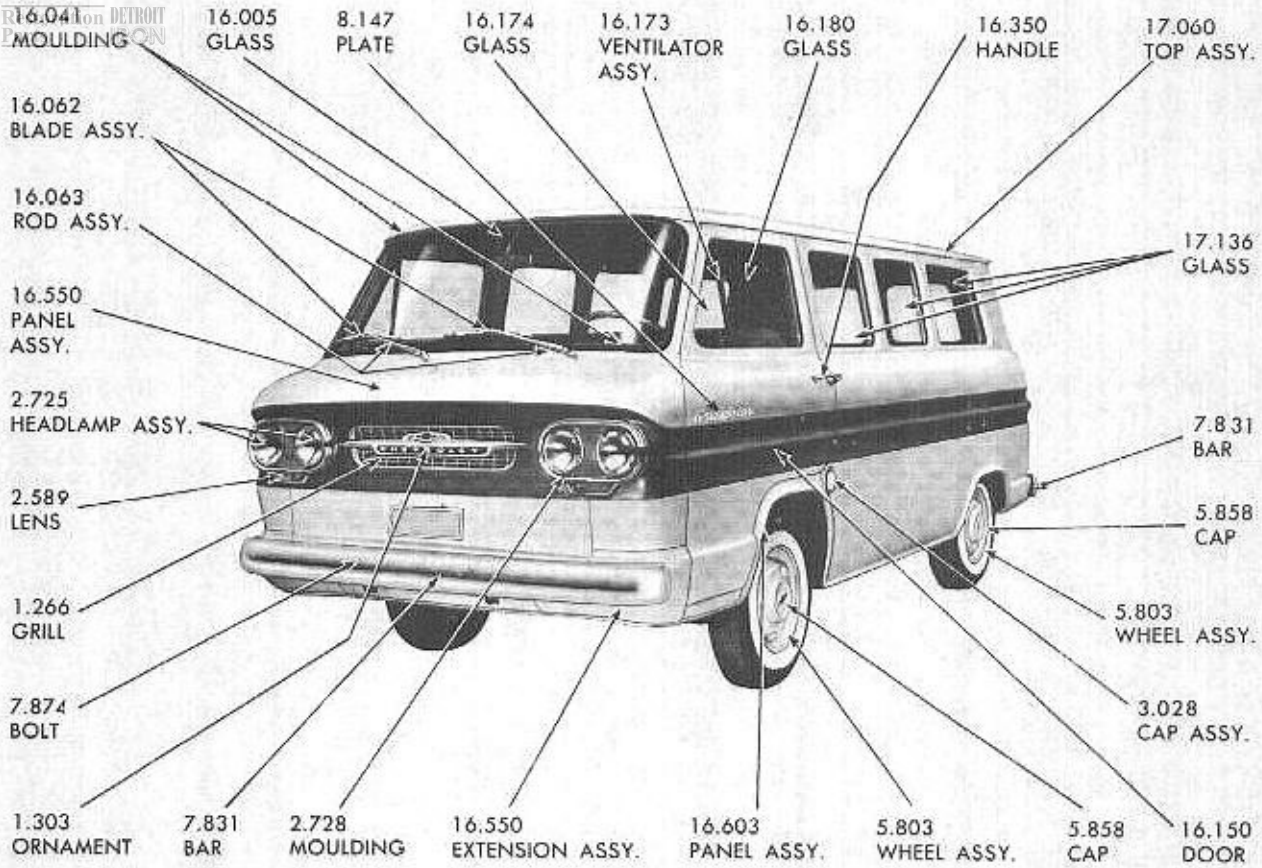

1961-65 CORVAIR GREENBRIER

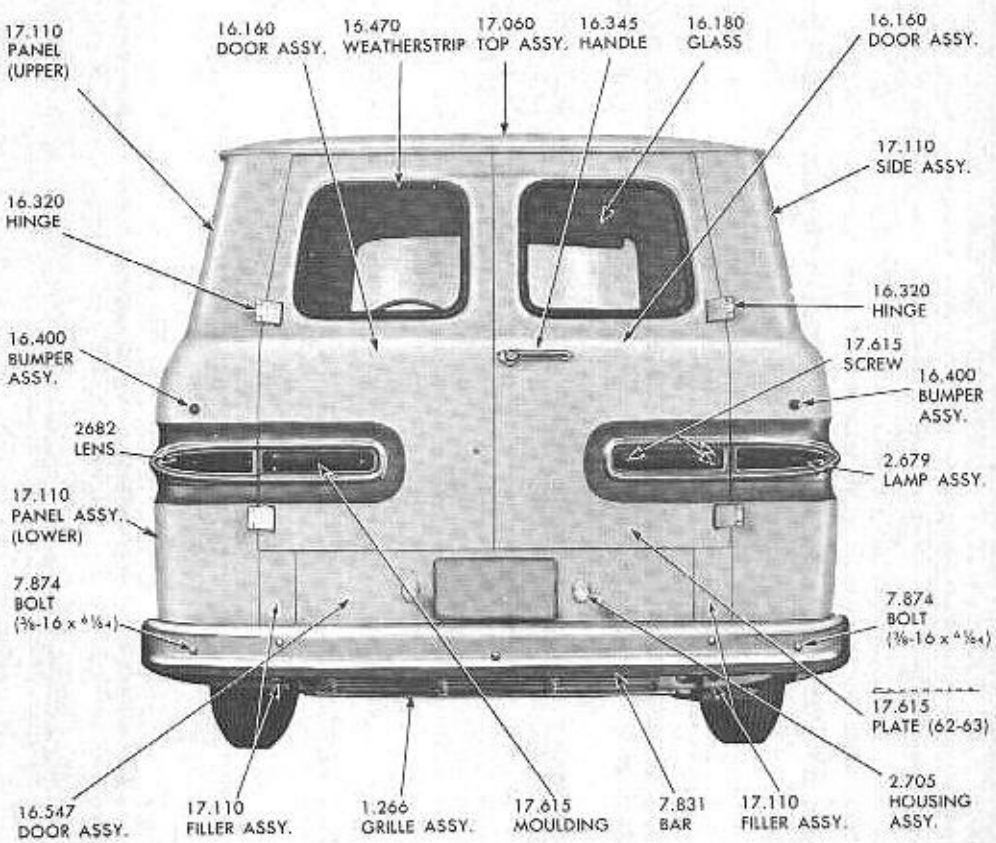

1961-65 CORVAIR GREENBRIER AND PANEL REAR END

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

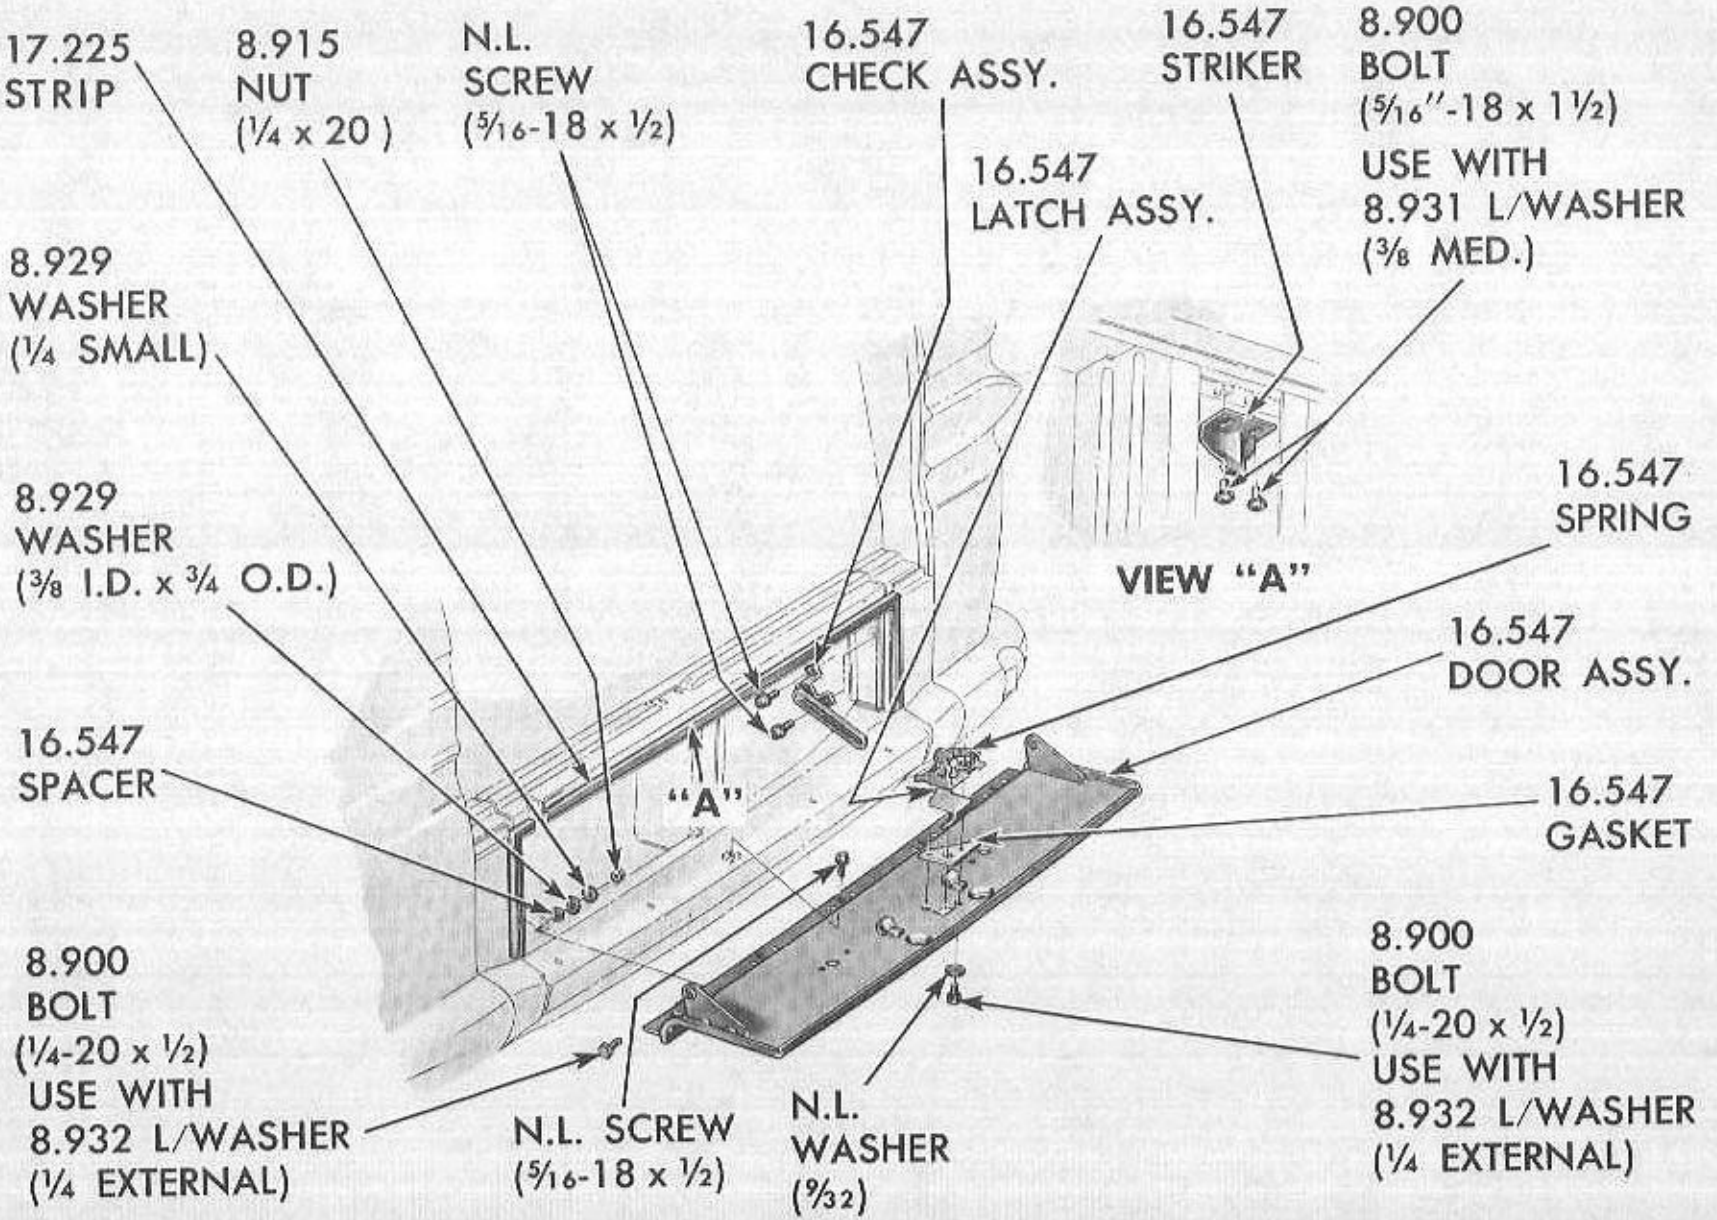

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

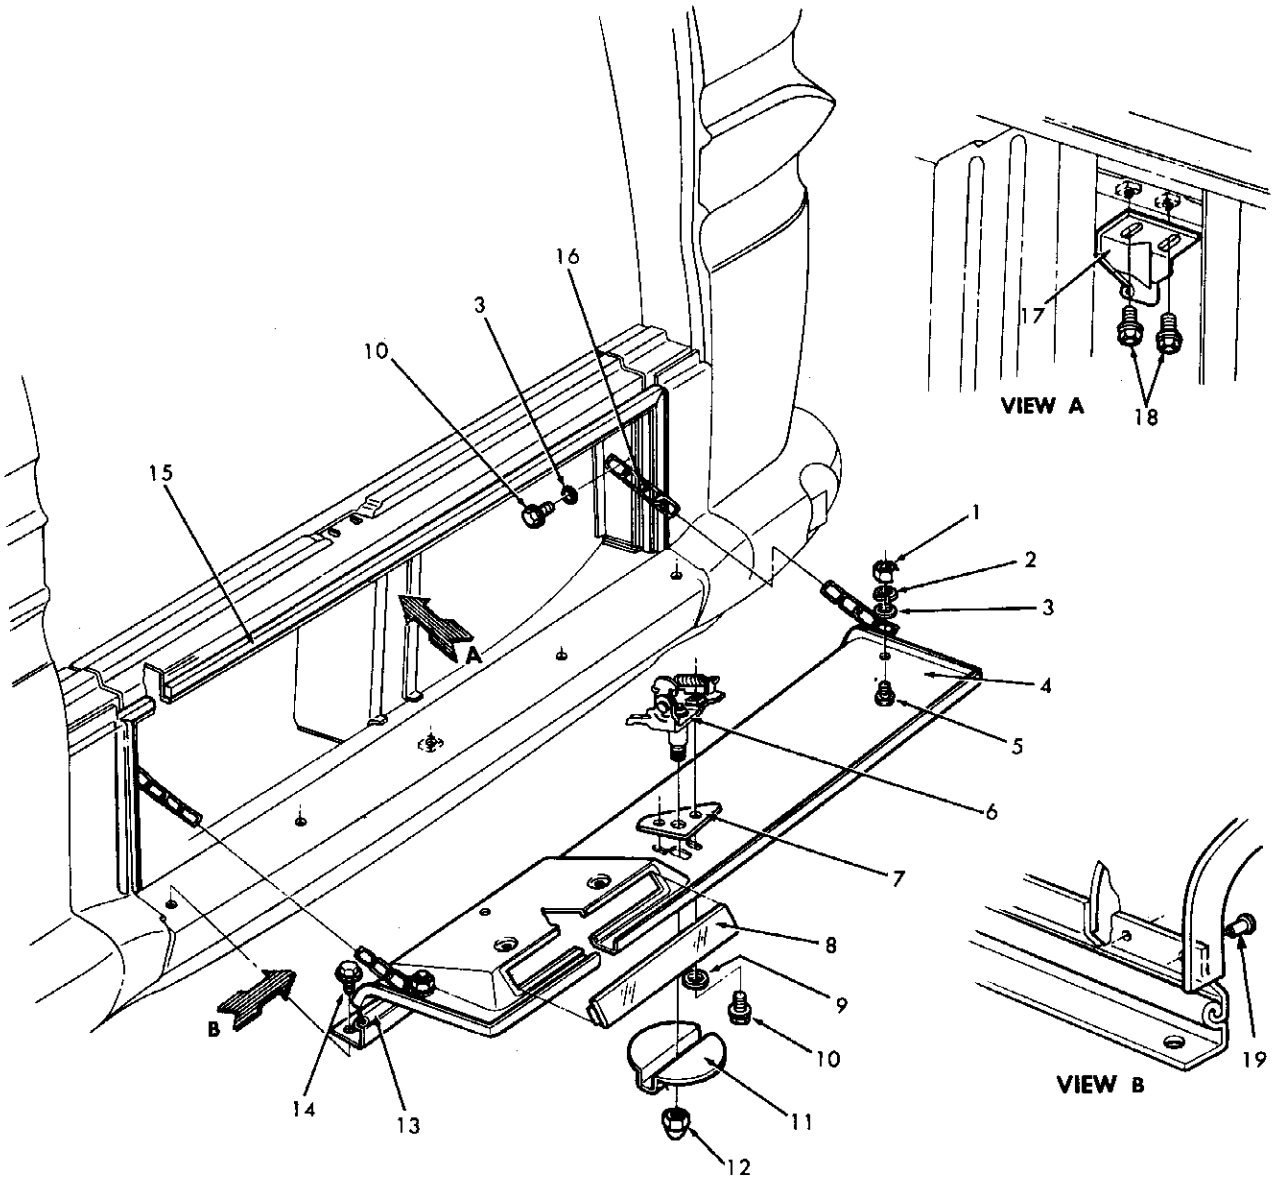

1964-65 CORVAIR F.C. ENGINE ACCESS DOOR DETAILS

1.	8.916	NUT, (1/4–20)	
2.	8.931	WASHER, (1/4 Med.)	
3.	N.L.	WASHER, (17/64 I.D. x 5/8 O.D.)	
4.	16.547	DOOR	3848746
5.	8.913	SCREW, (1/4–20 x 5/8)	
6.	16.547	LOCK ASSEMBLY	3848802
7.	16.547	GASKET	3783386
8.	2.709	LENS	3848807
9.	16.547	WASHER	3704579
10.	8.900	BOLT, (1/4–20 x 1/2)	
11.	16.547	HANDLE	3848805
12.	8.919	NUT, (3/8–16)	
13.	16.547	HINGE ASSEMBLY	3848799
14.	8.900	BOLT, (5/16–8 x 1/2)	
15.	17.225	STRIP	3781045
16.	16.547	CHECK ASSEMBLY	3838704
17.	16.547	CATCH	3848806
18.	8.900	BOLT, (1/4–20 x 7/16)	
19.	N.L.	RIVET, (3/16 x 1/4)	

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

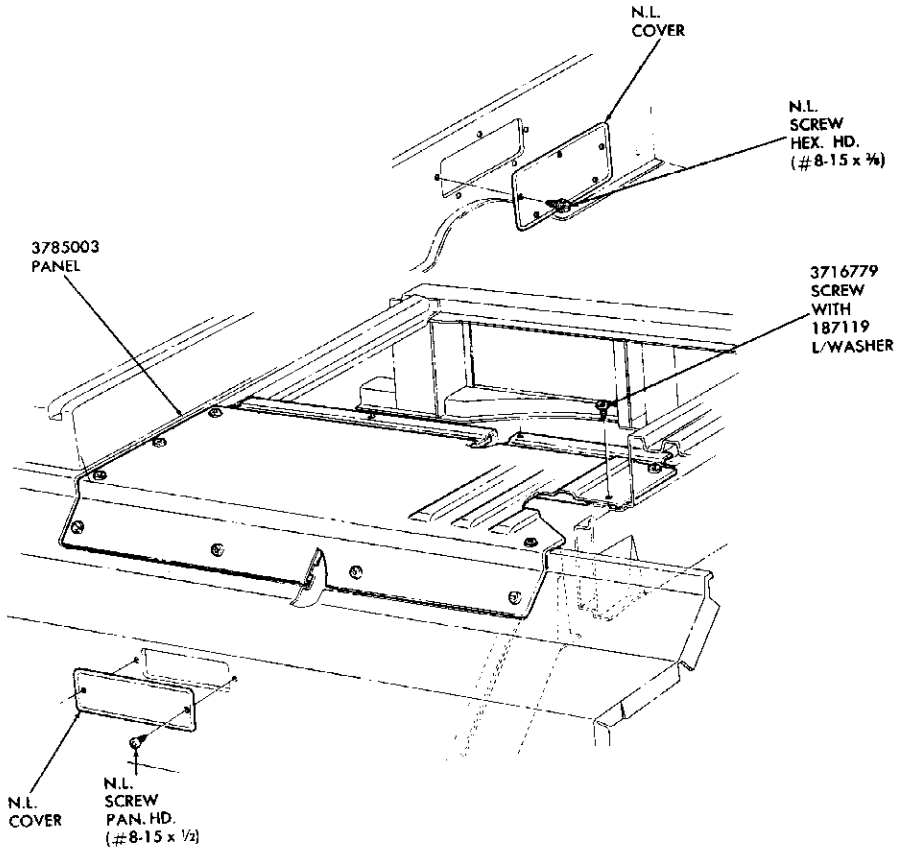

1961-65 CORVAIR F.C. REAR FLOOR TRIM PANEL

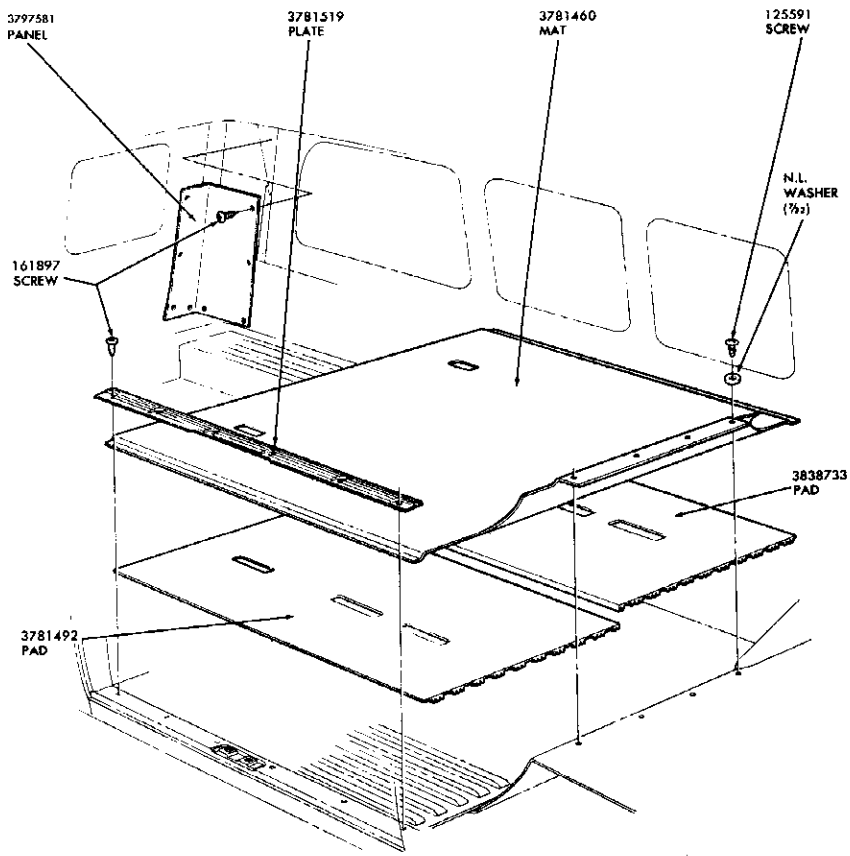

1961-65 CORVAIR F.C. FILLER PANEL DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

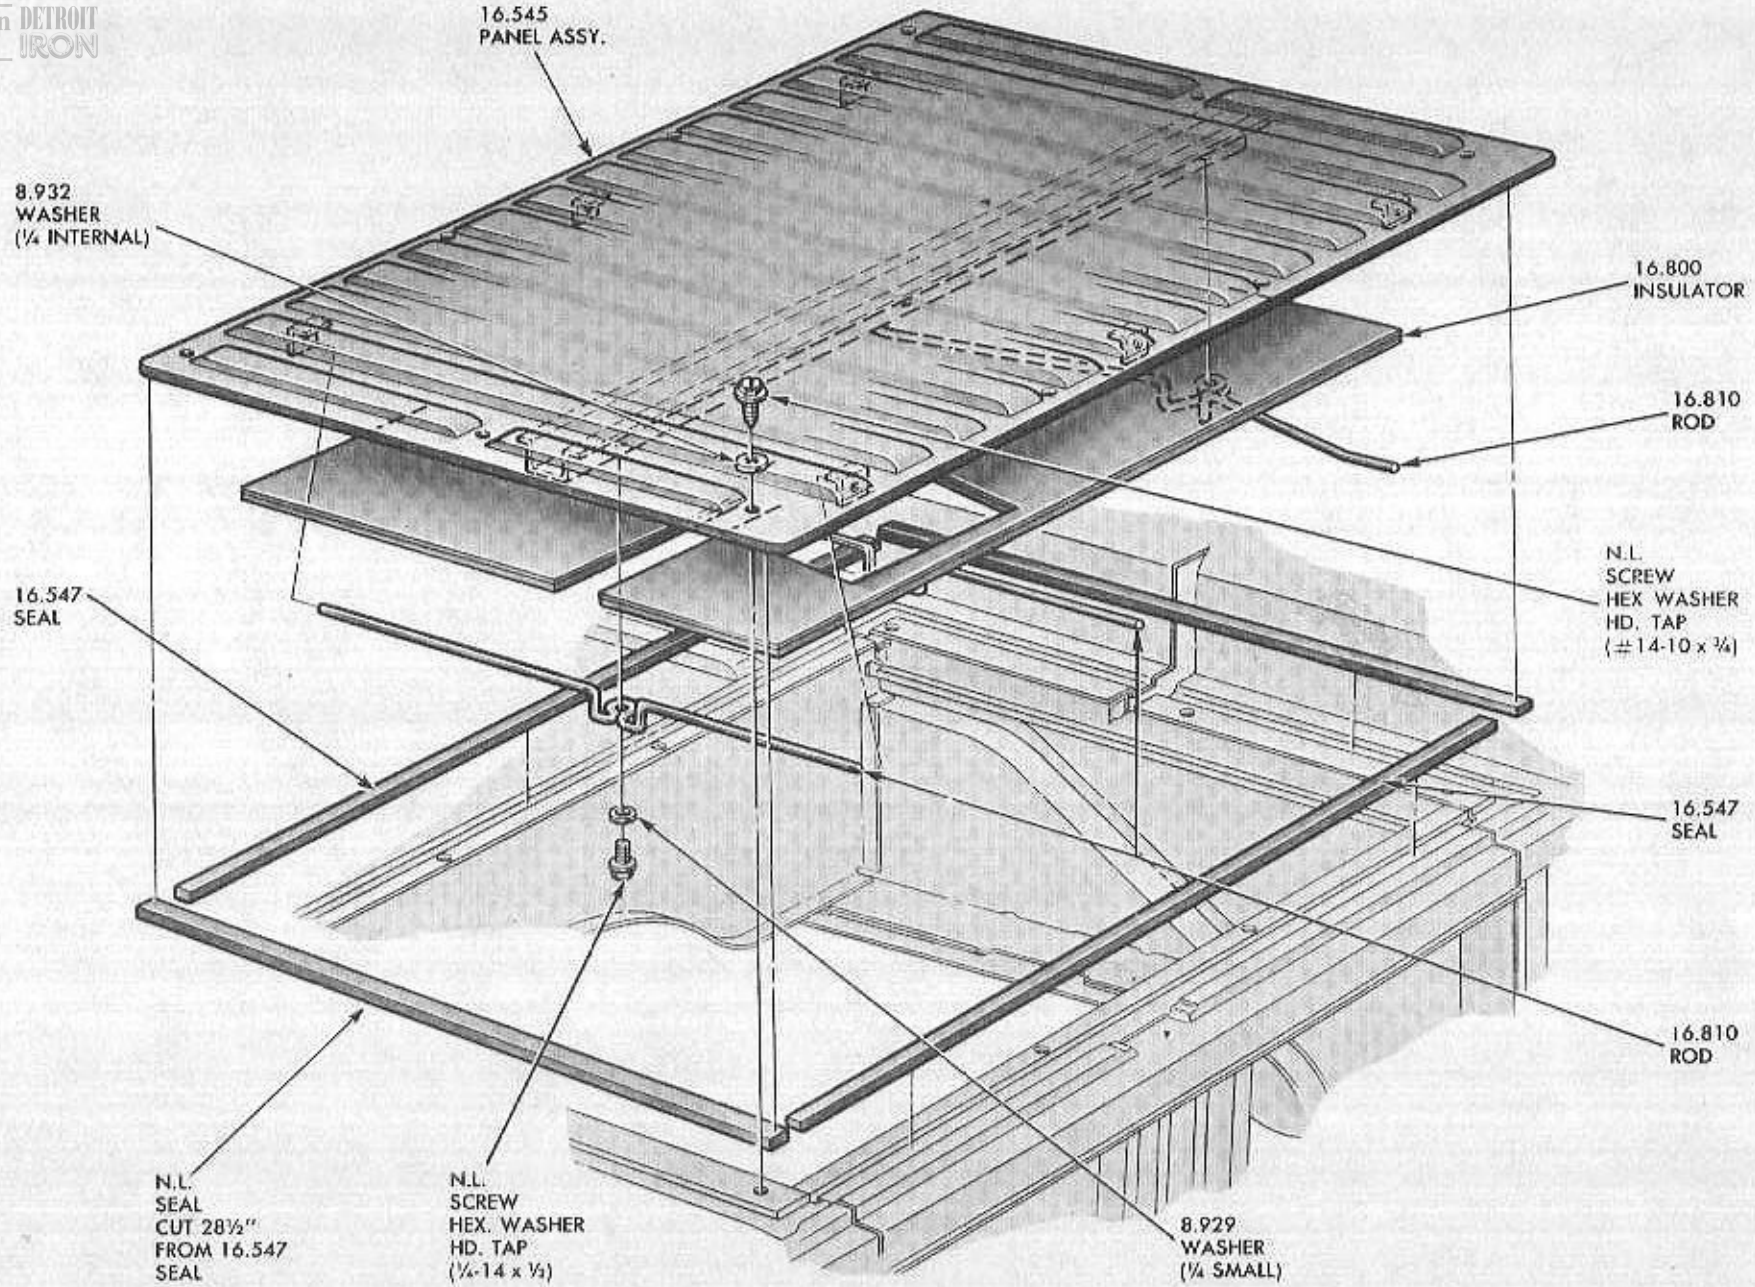

1961-65 CORVAIR F.C. ENGINE COMPARTMENT COVER

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

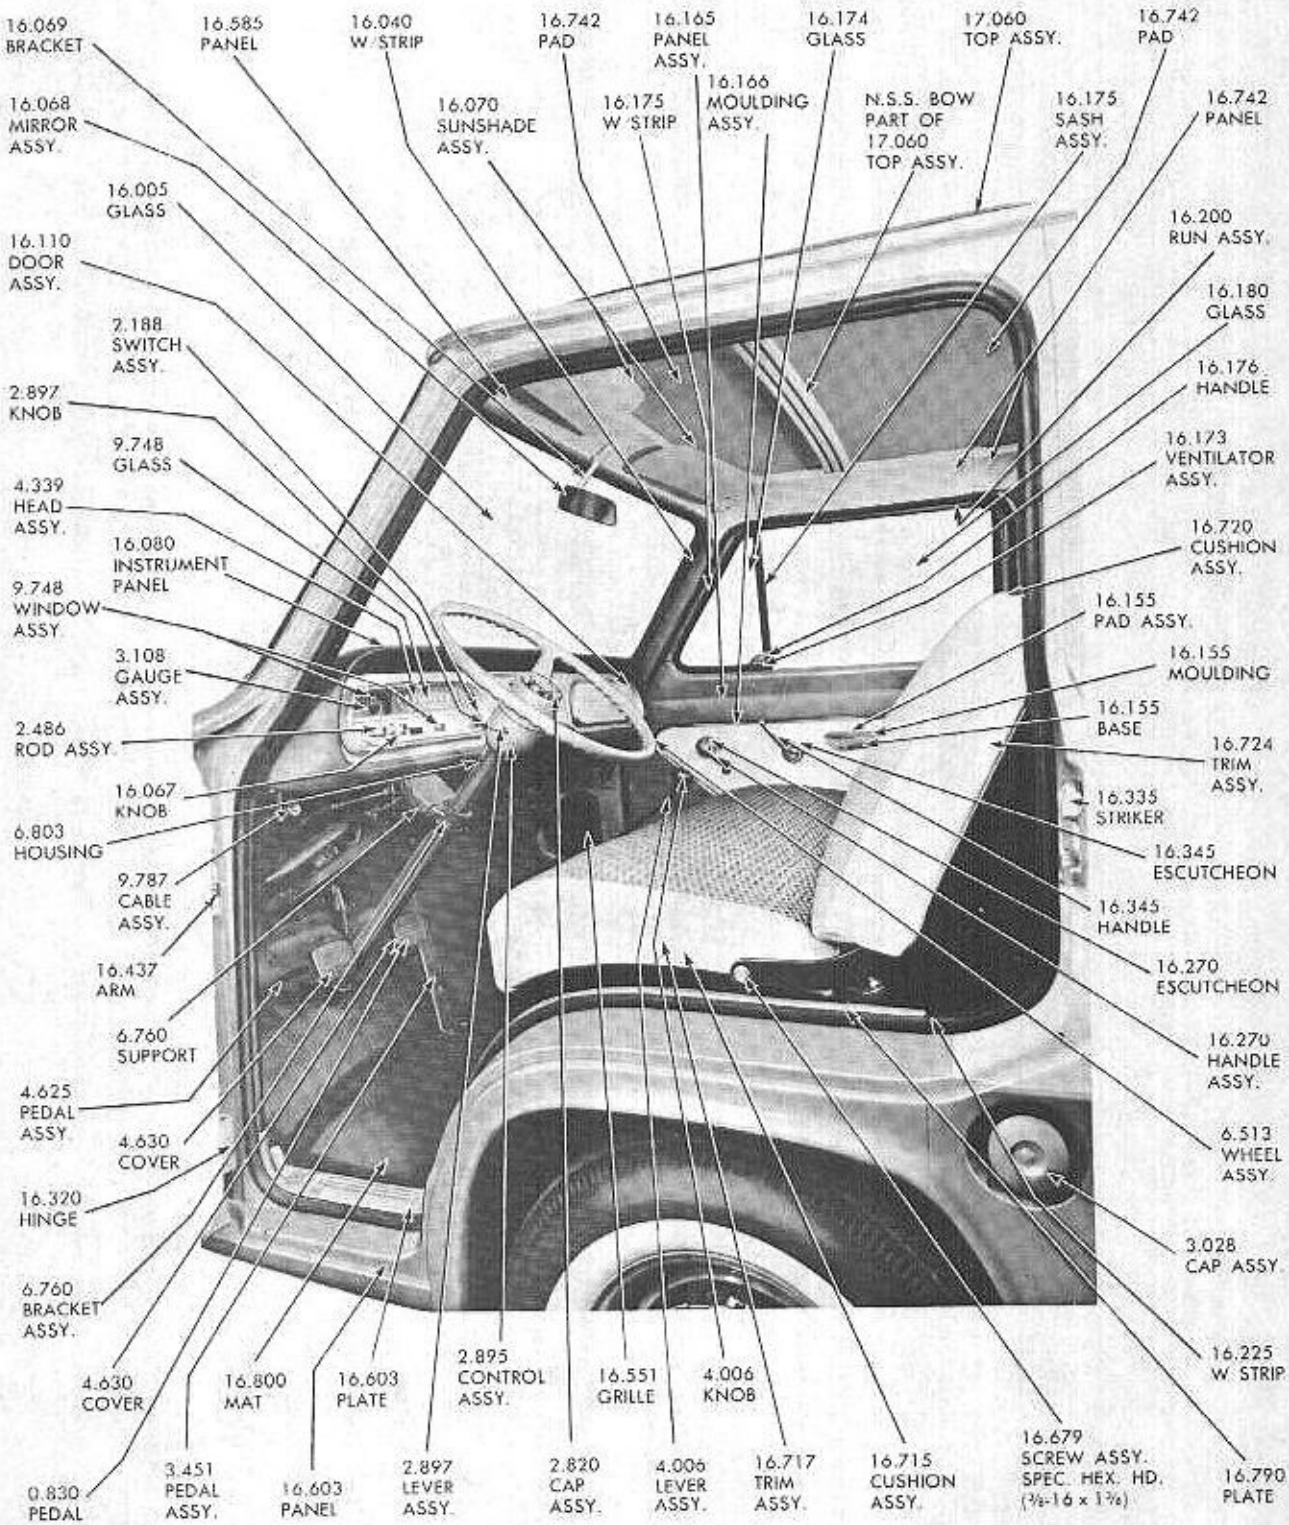

1961-65 GREENBRIER FRONT INTERIOR VIEW

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

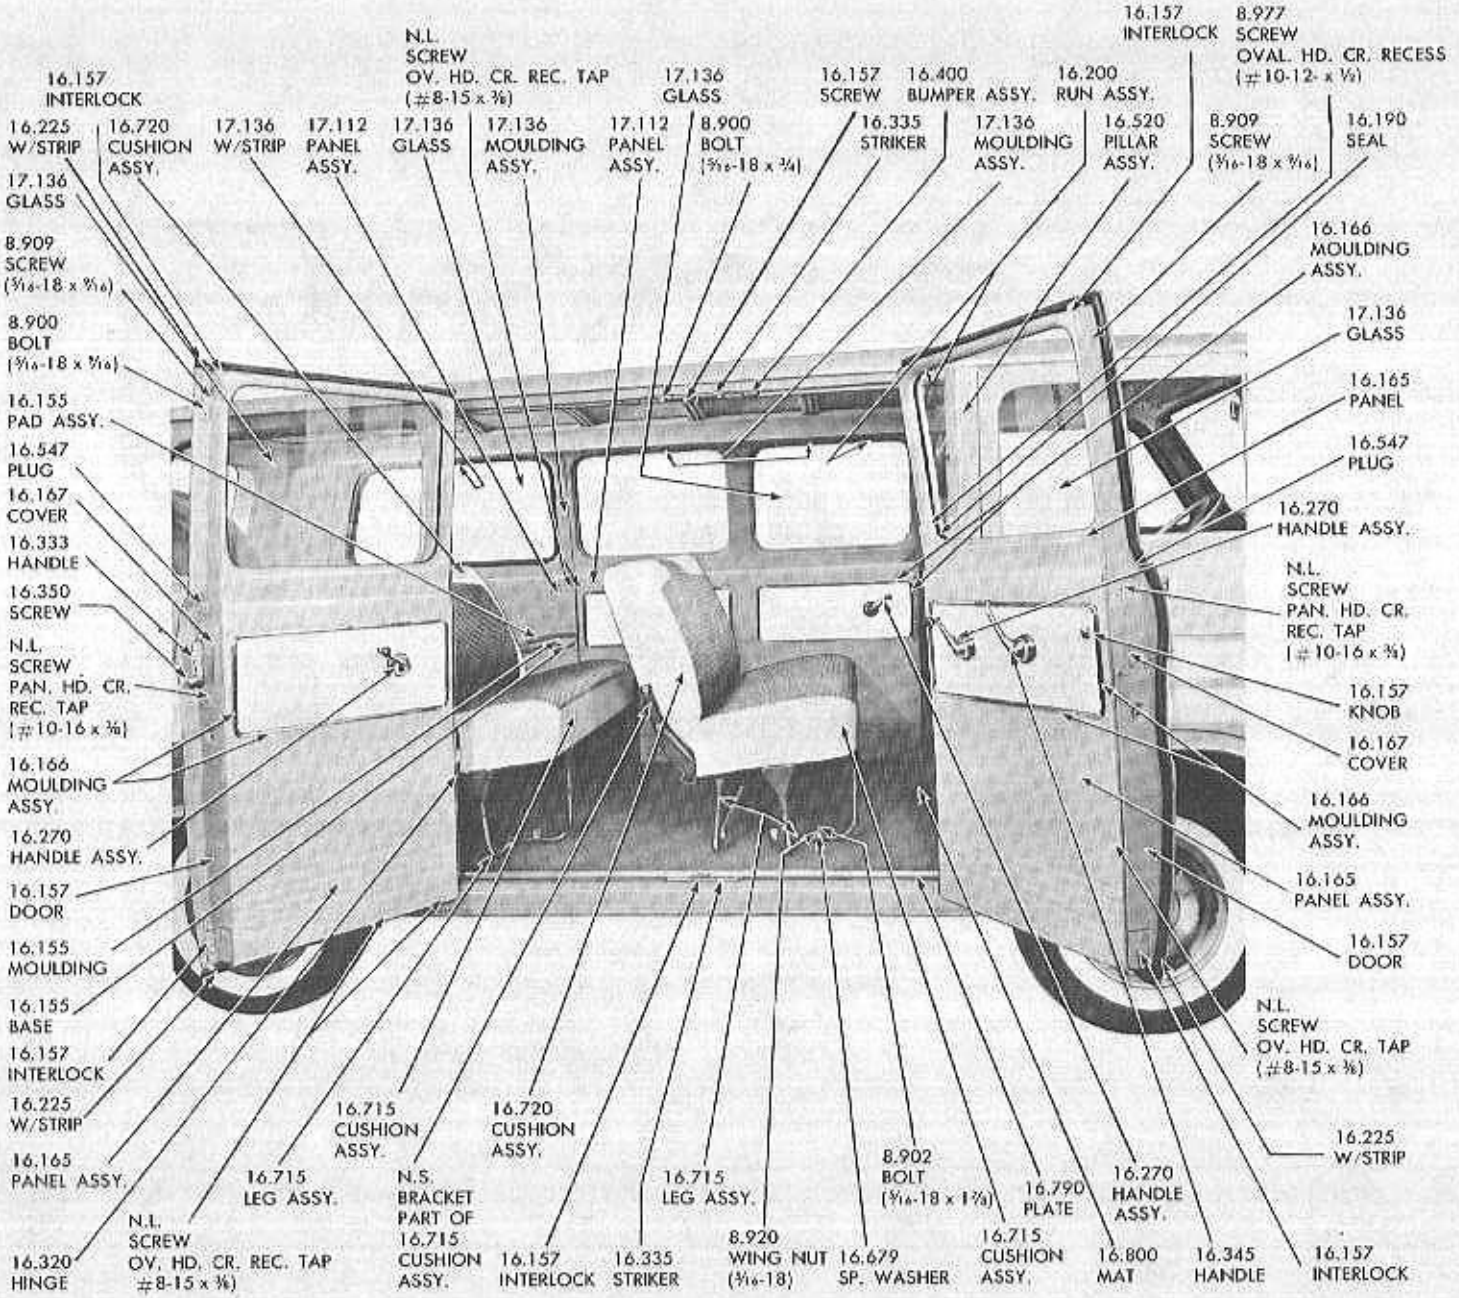

1961-65 GREENBRIER SIDE INTERIOR VIEW

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

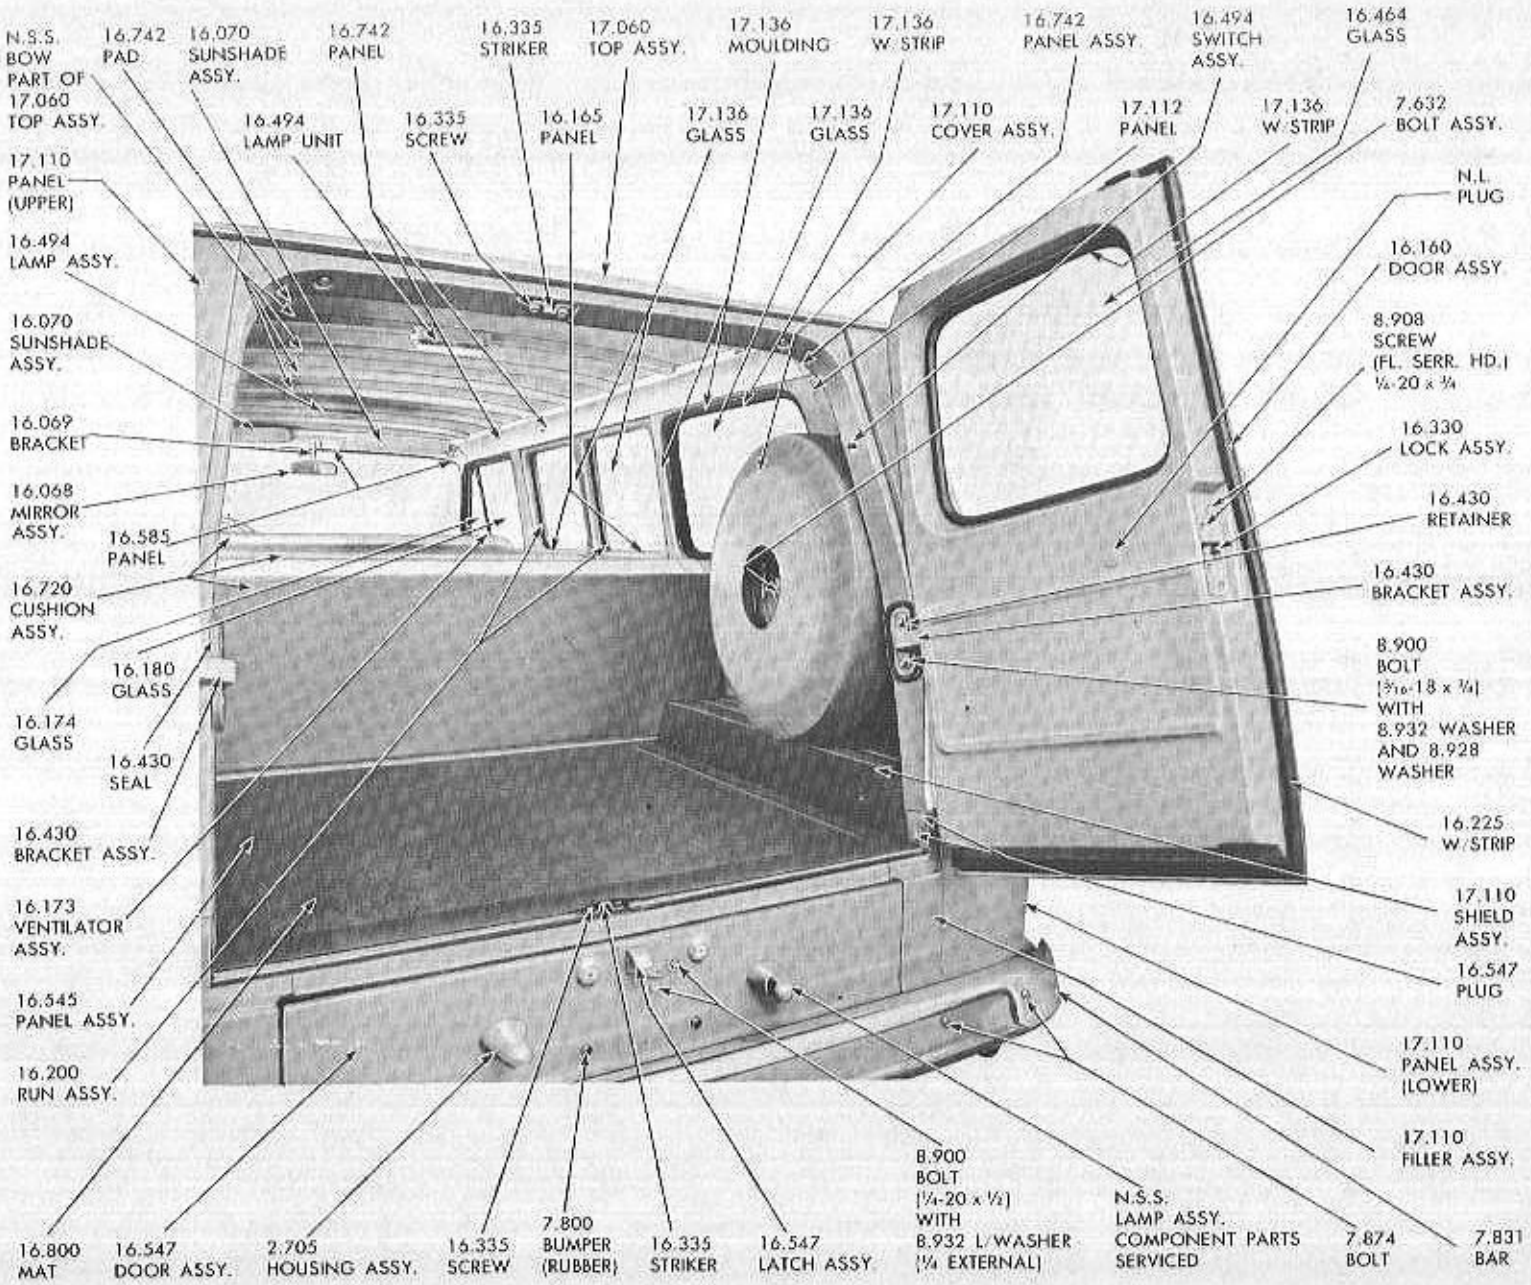

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

Restoration Parts DETROIT IRON

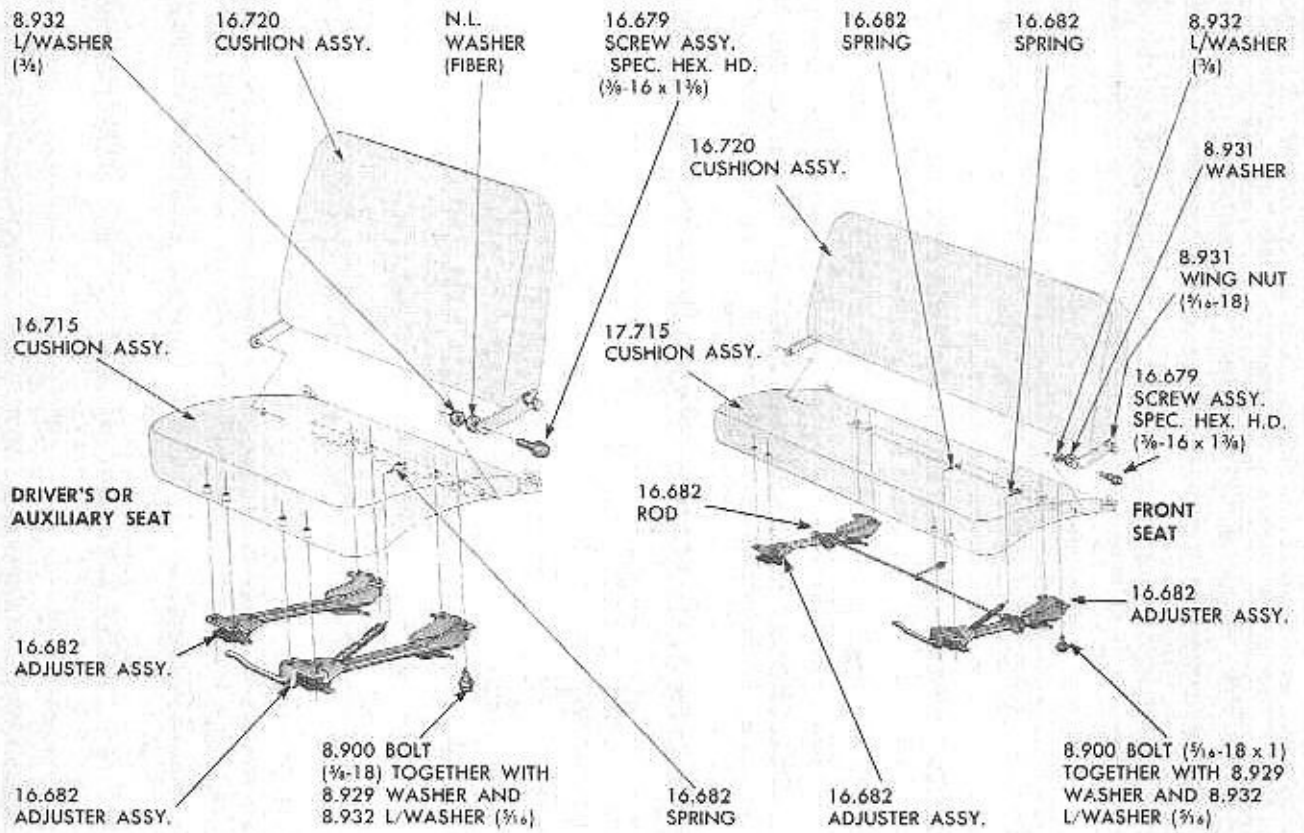

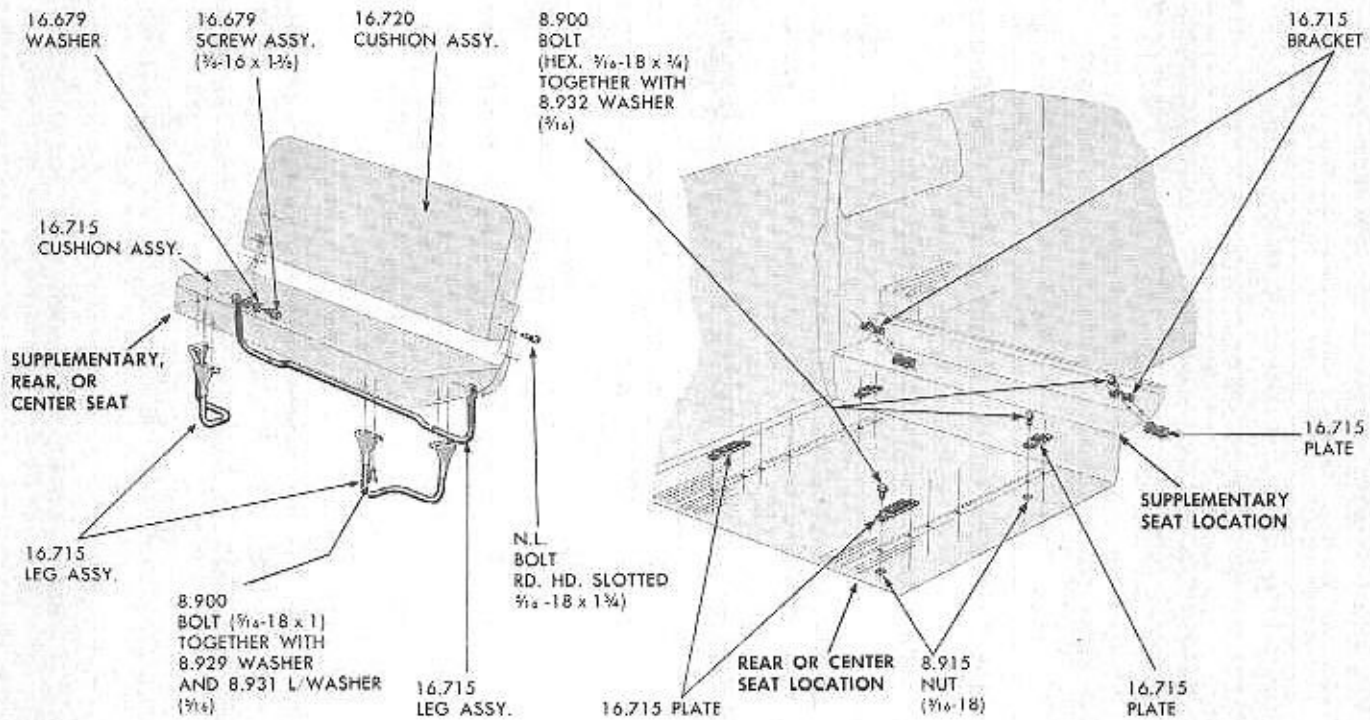

1961-65 CORVAIR F.C. FRONT AND REAR SEAT DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

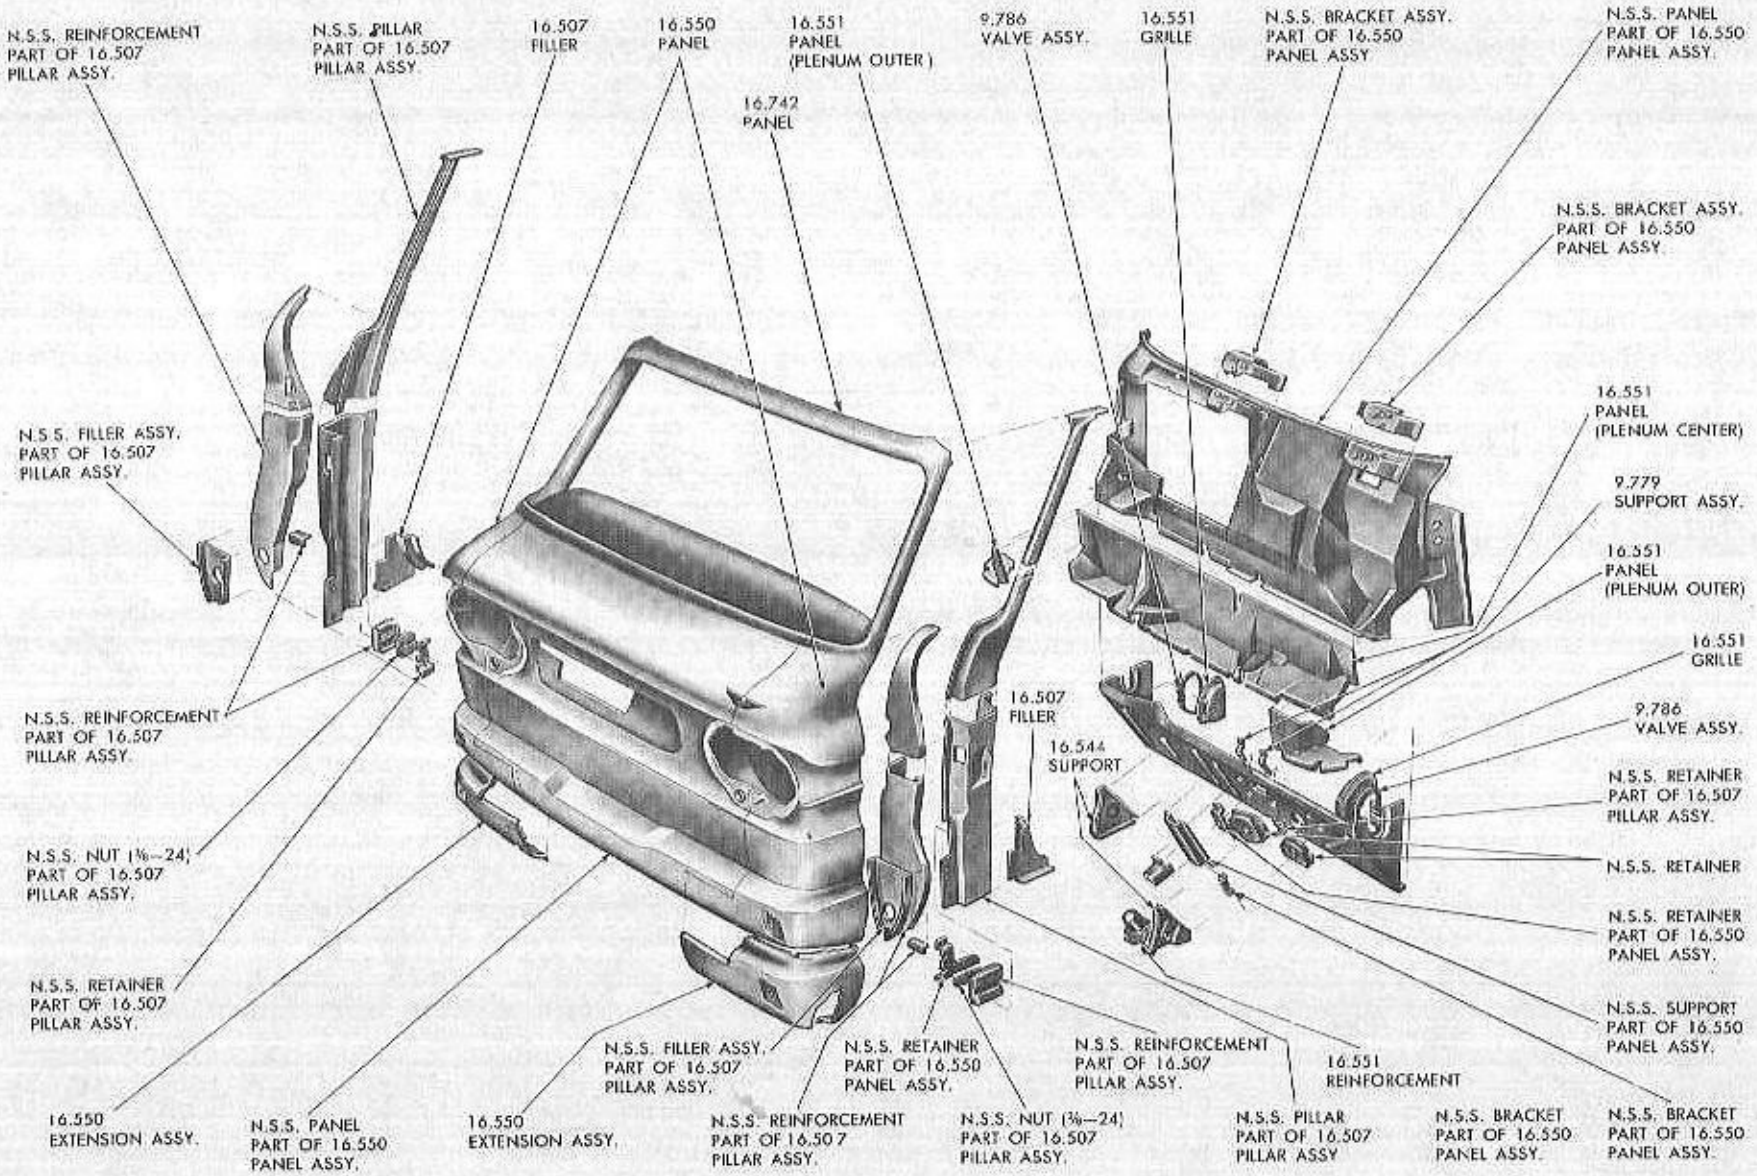

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

1961-65 CORVAIR F.C. FRONT UNDERBODY SHEET METAL—(EXPLODED)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

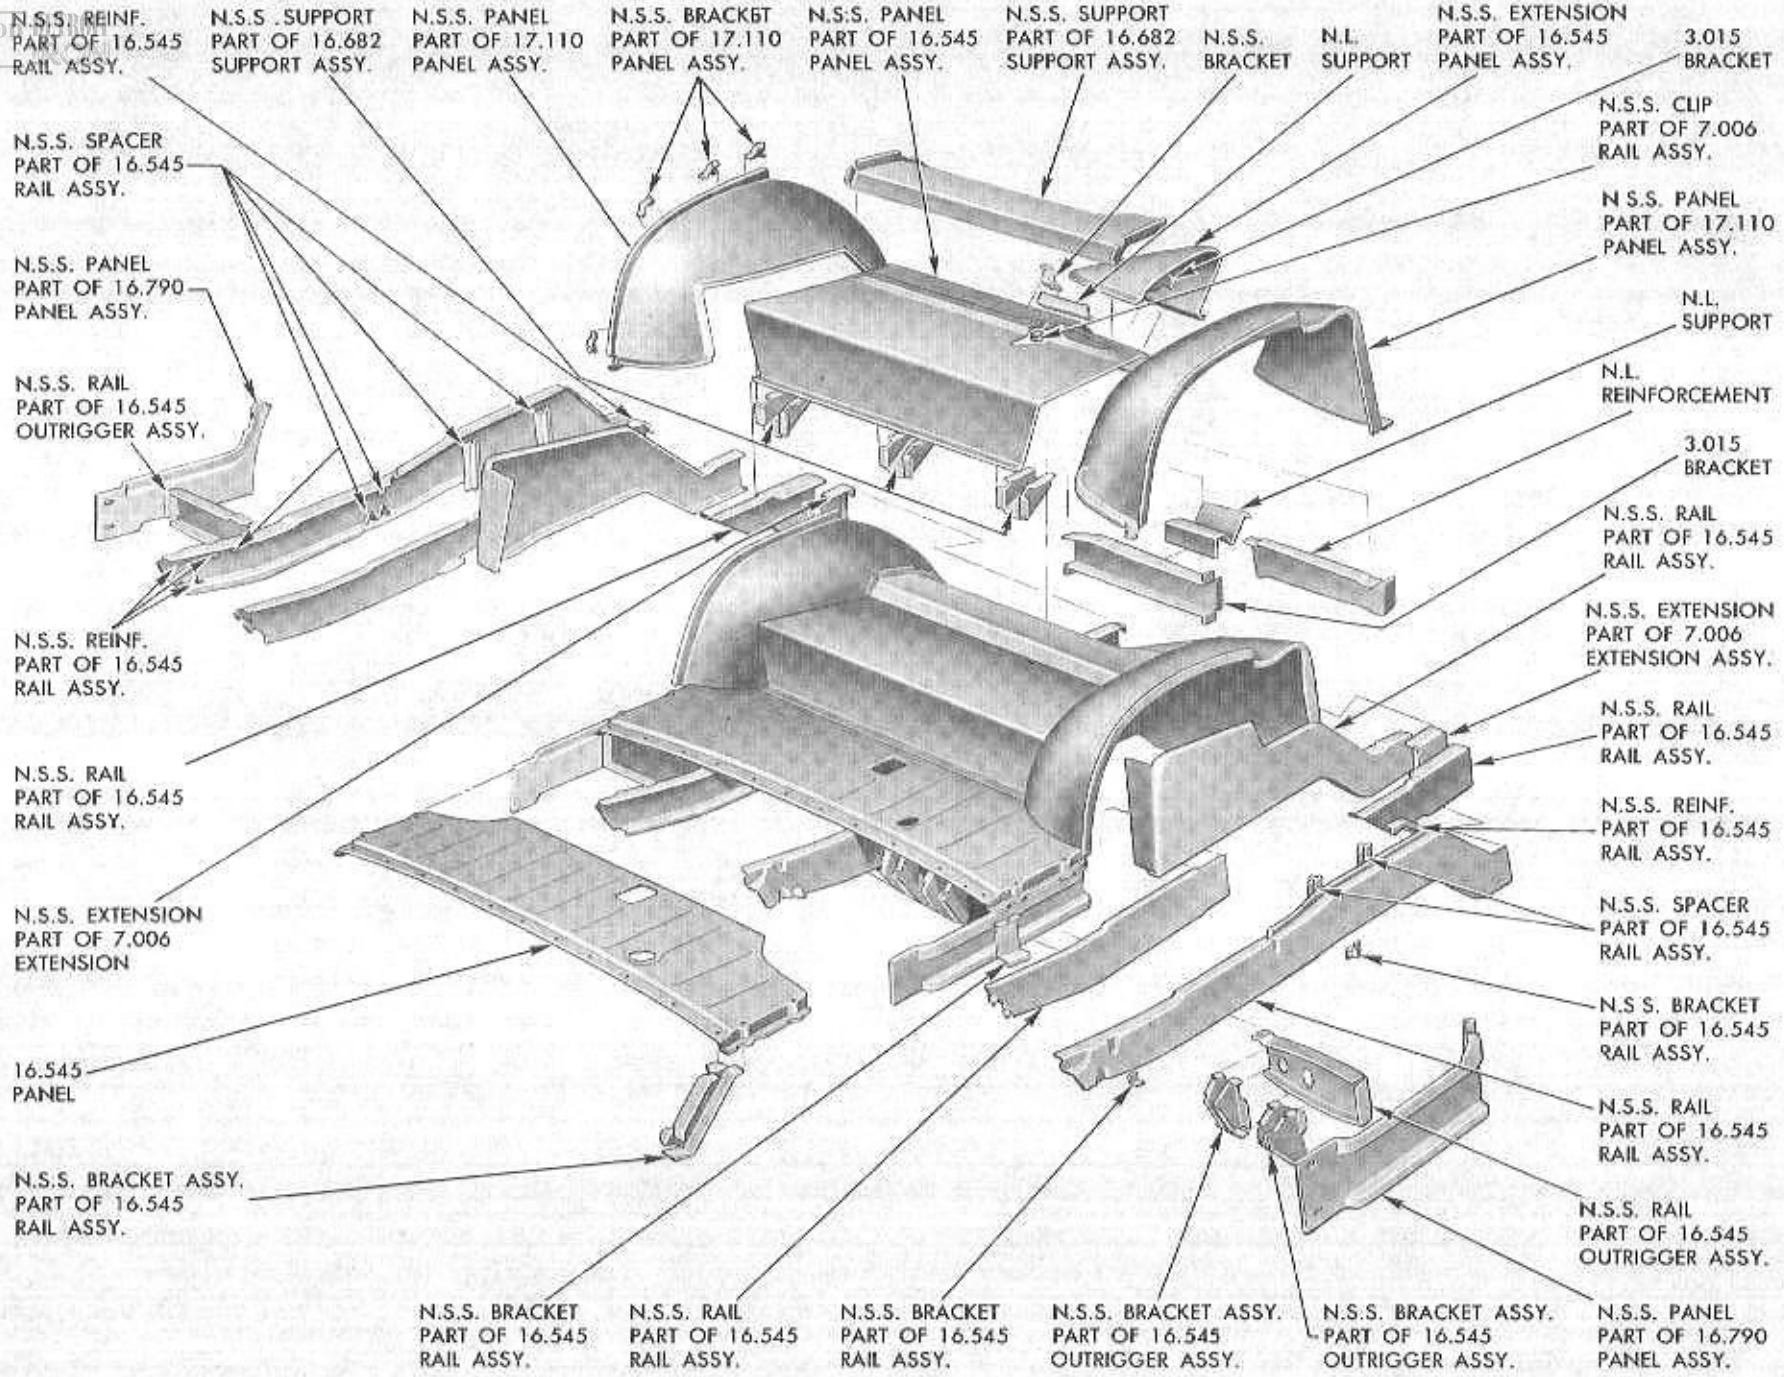

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

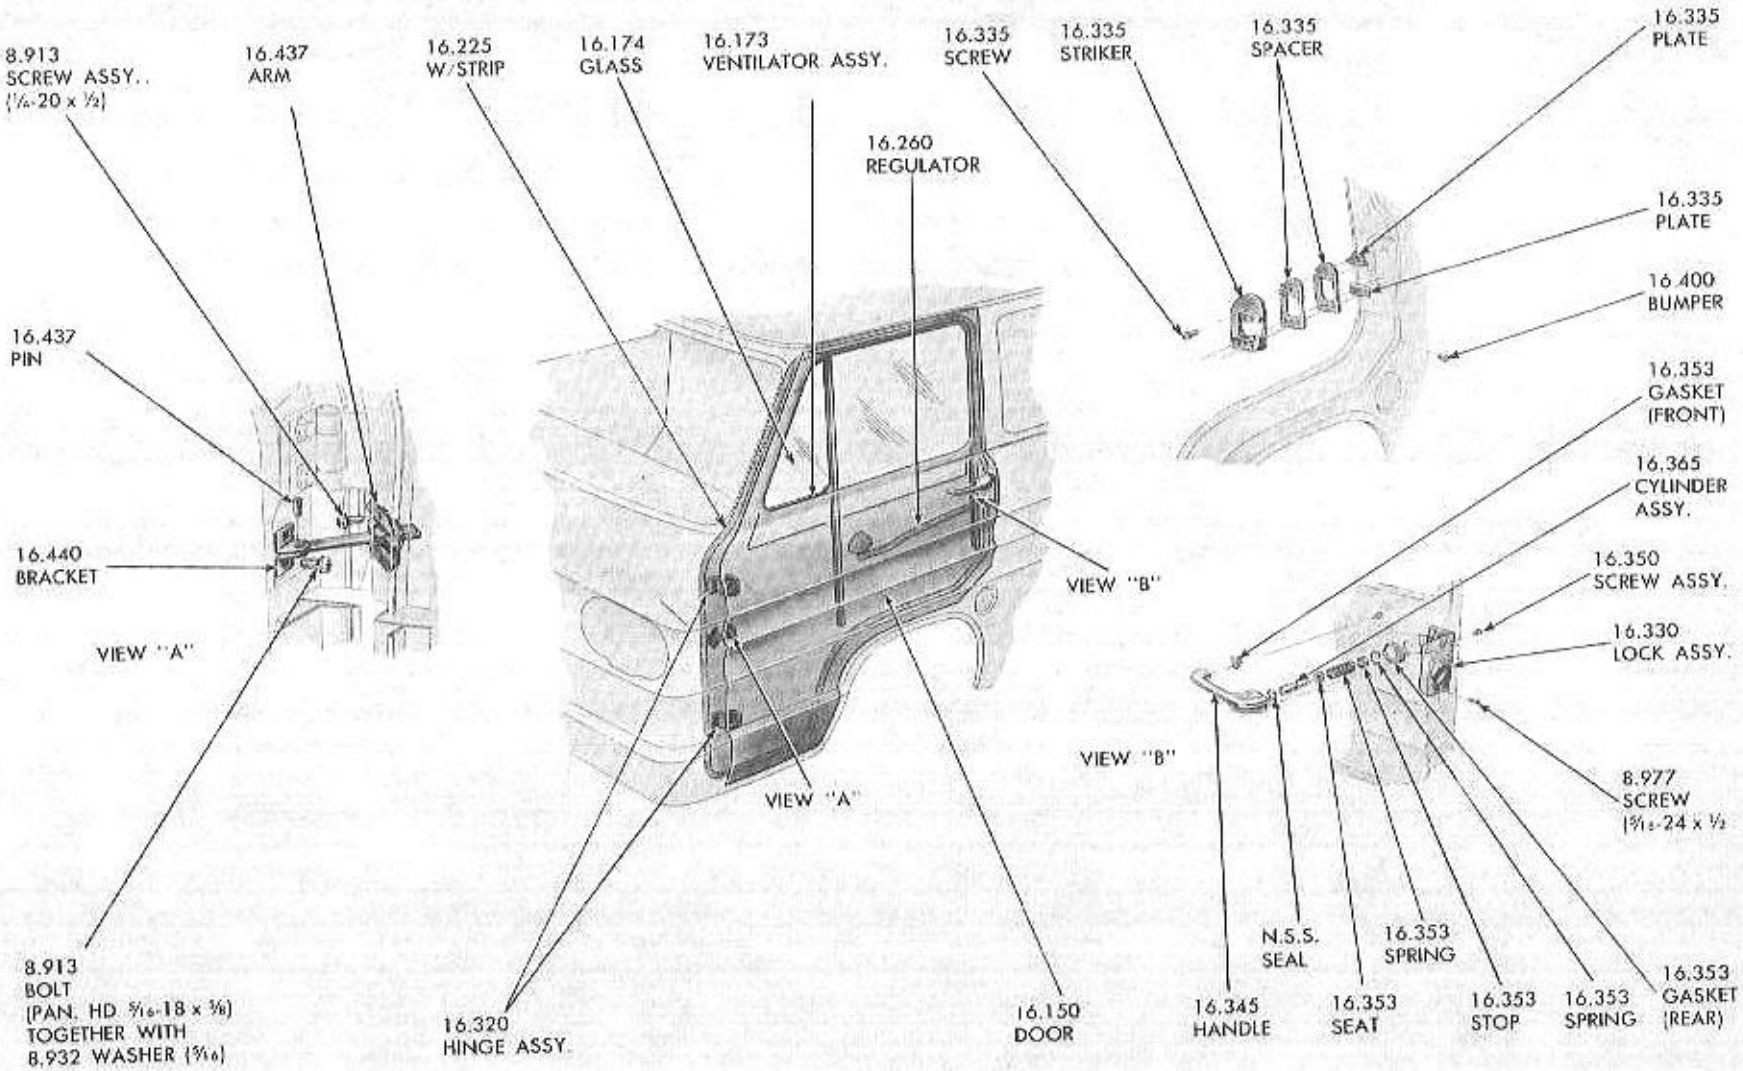

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

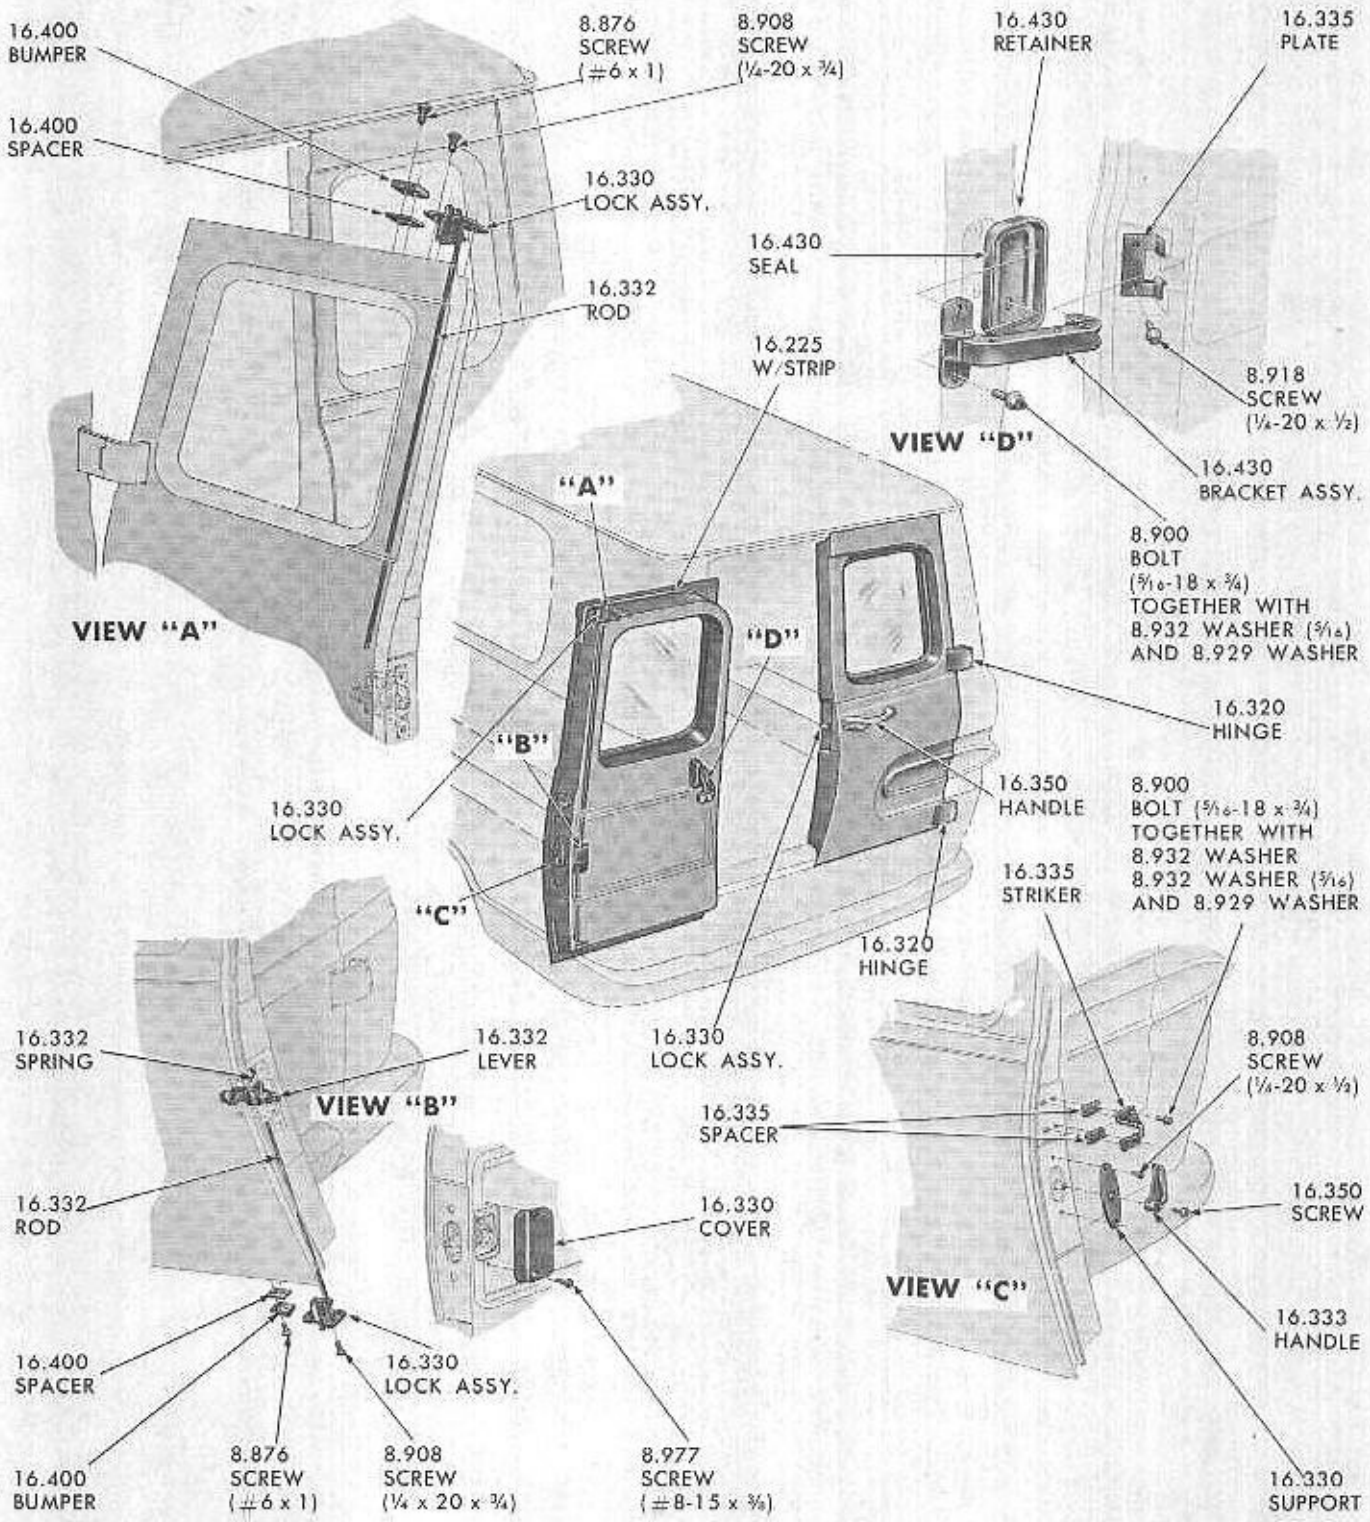

1961-65 GREENBRIER AND PANEL REAR LOADING DOOR DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

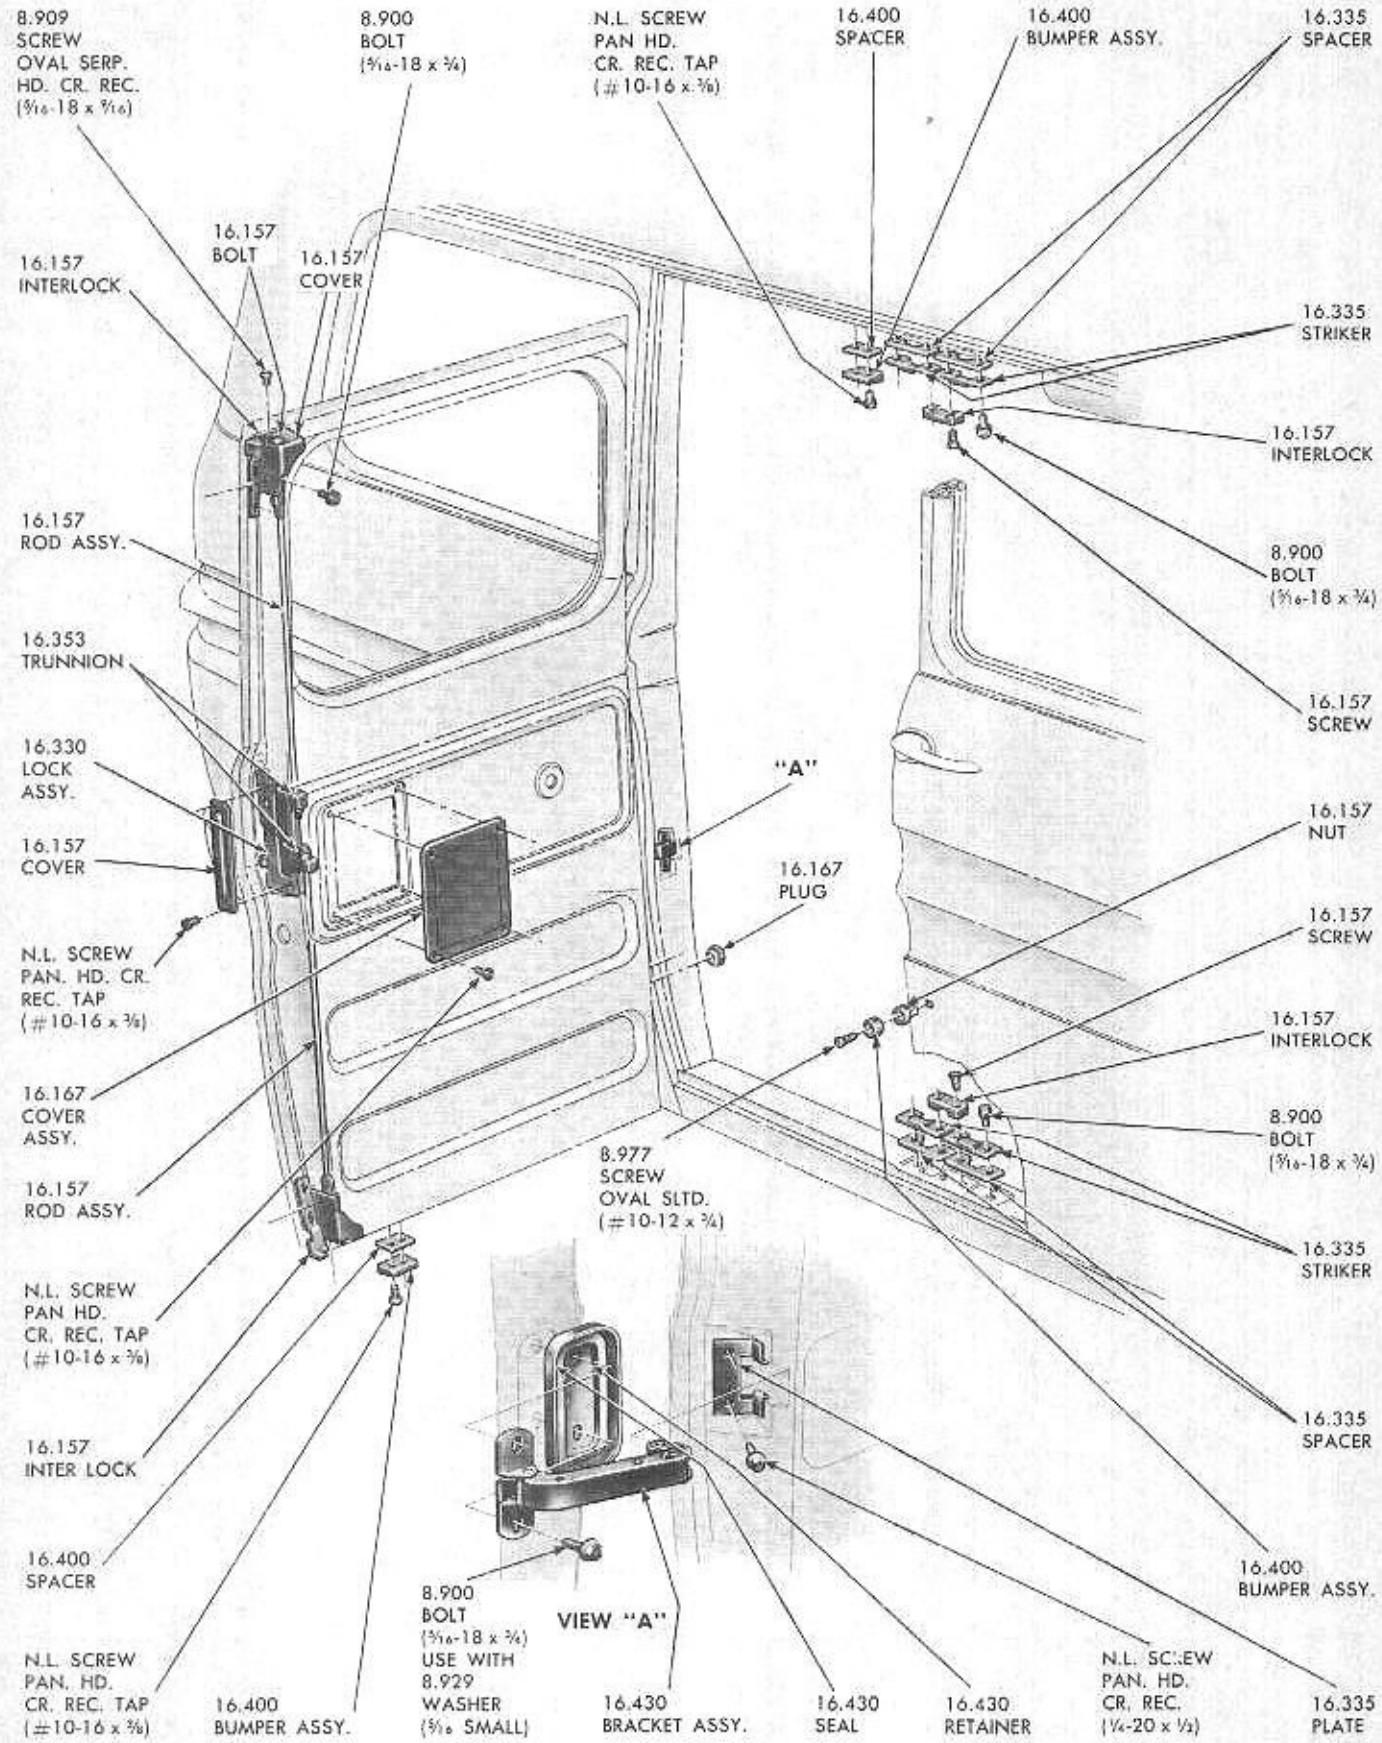

1961-65 CORVAIR F.C. SIDE CARGO DOOR LOCK AND STRIKER DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

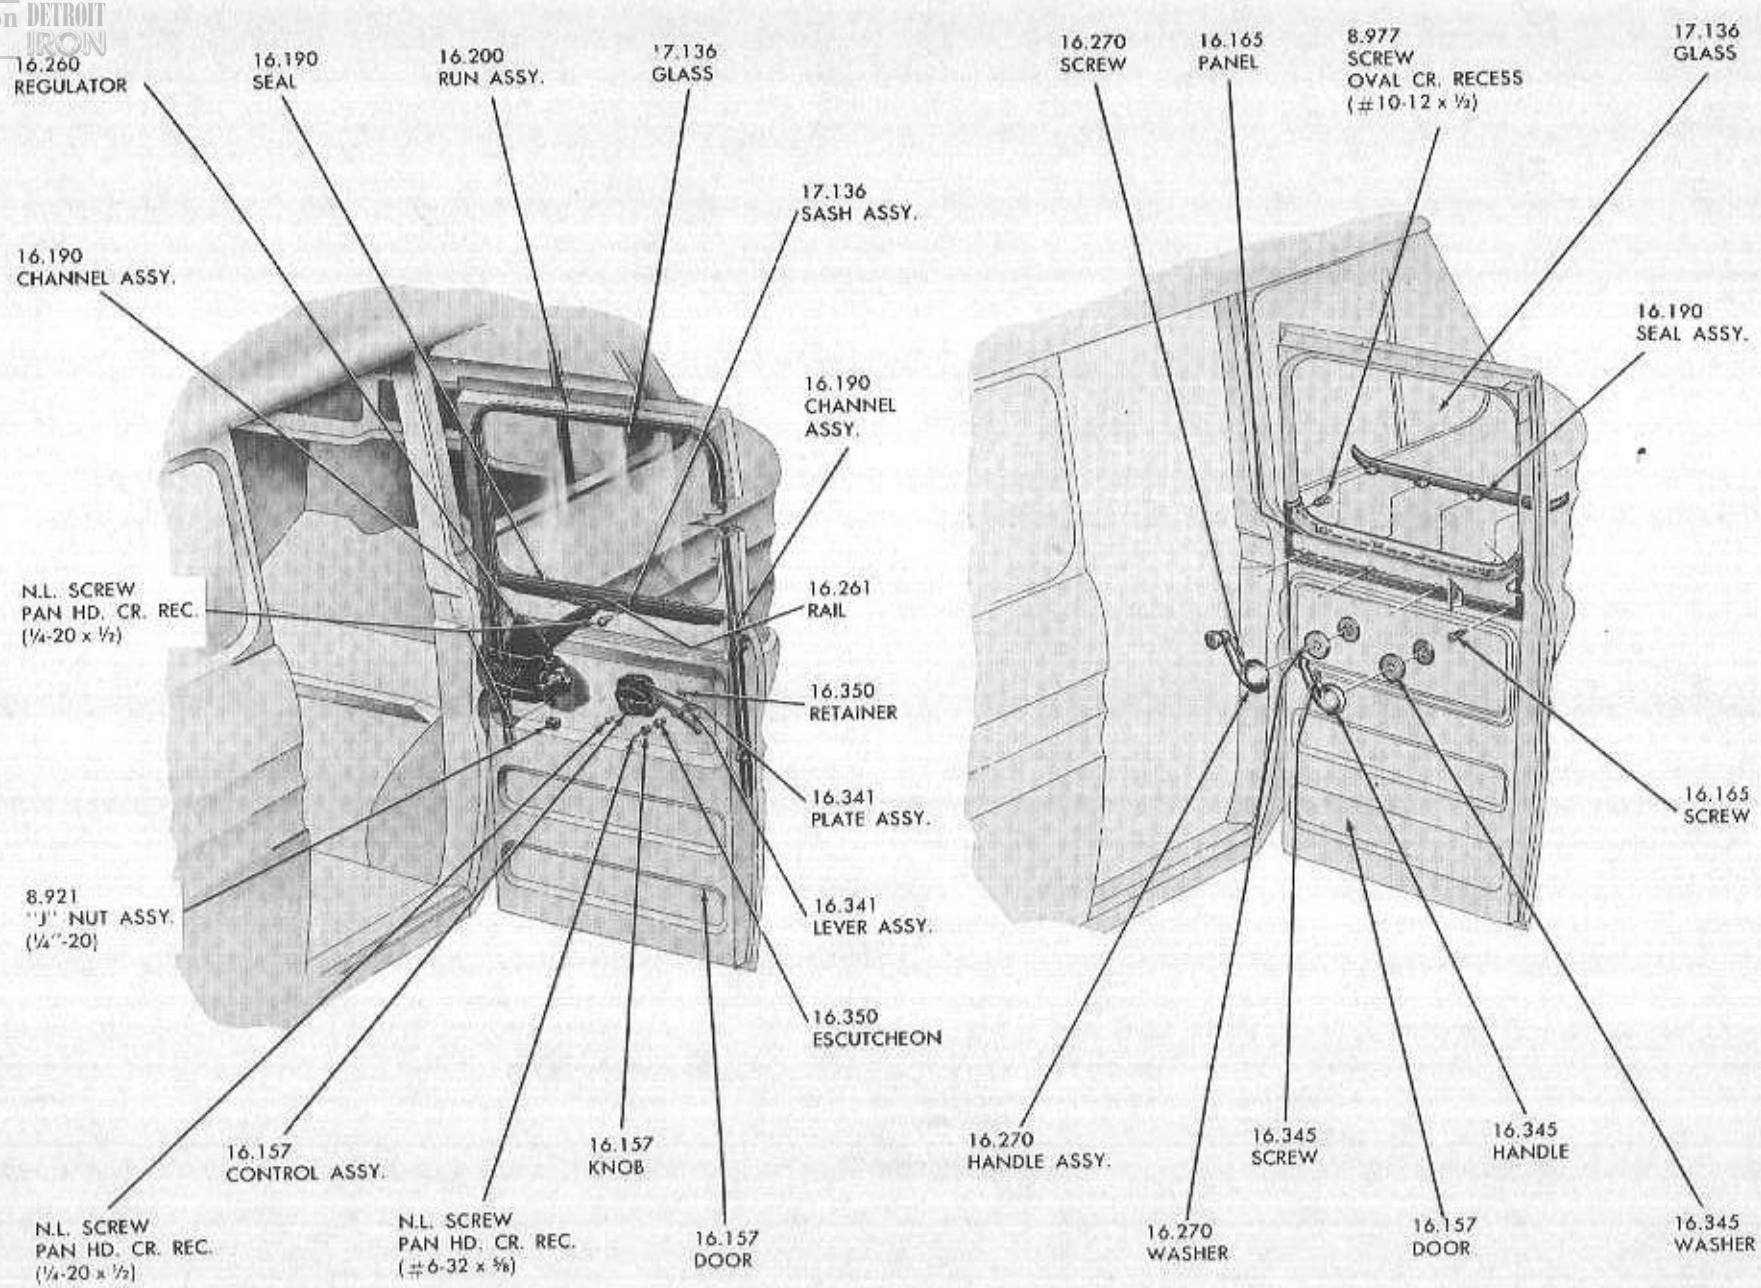

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

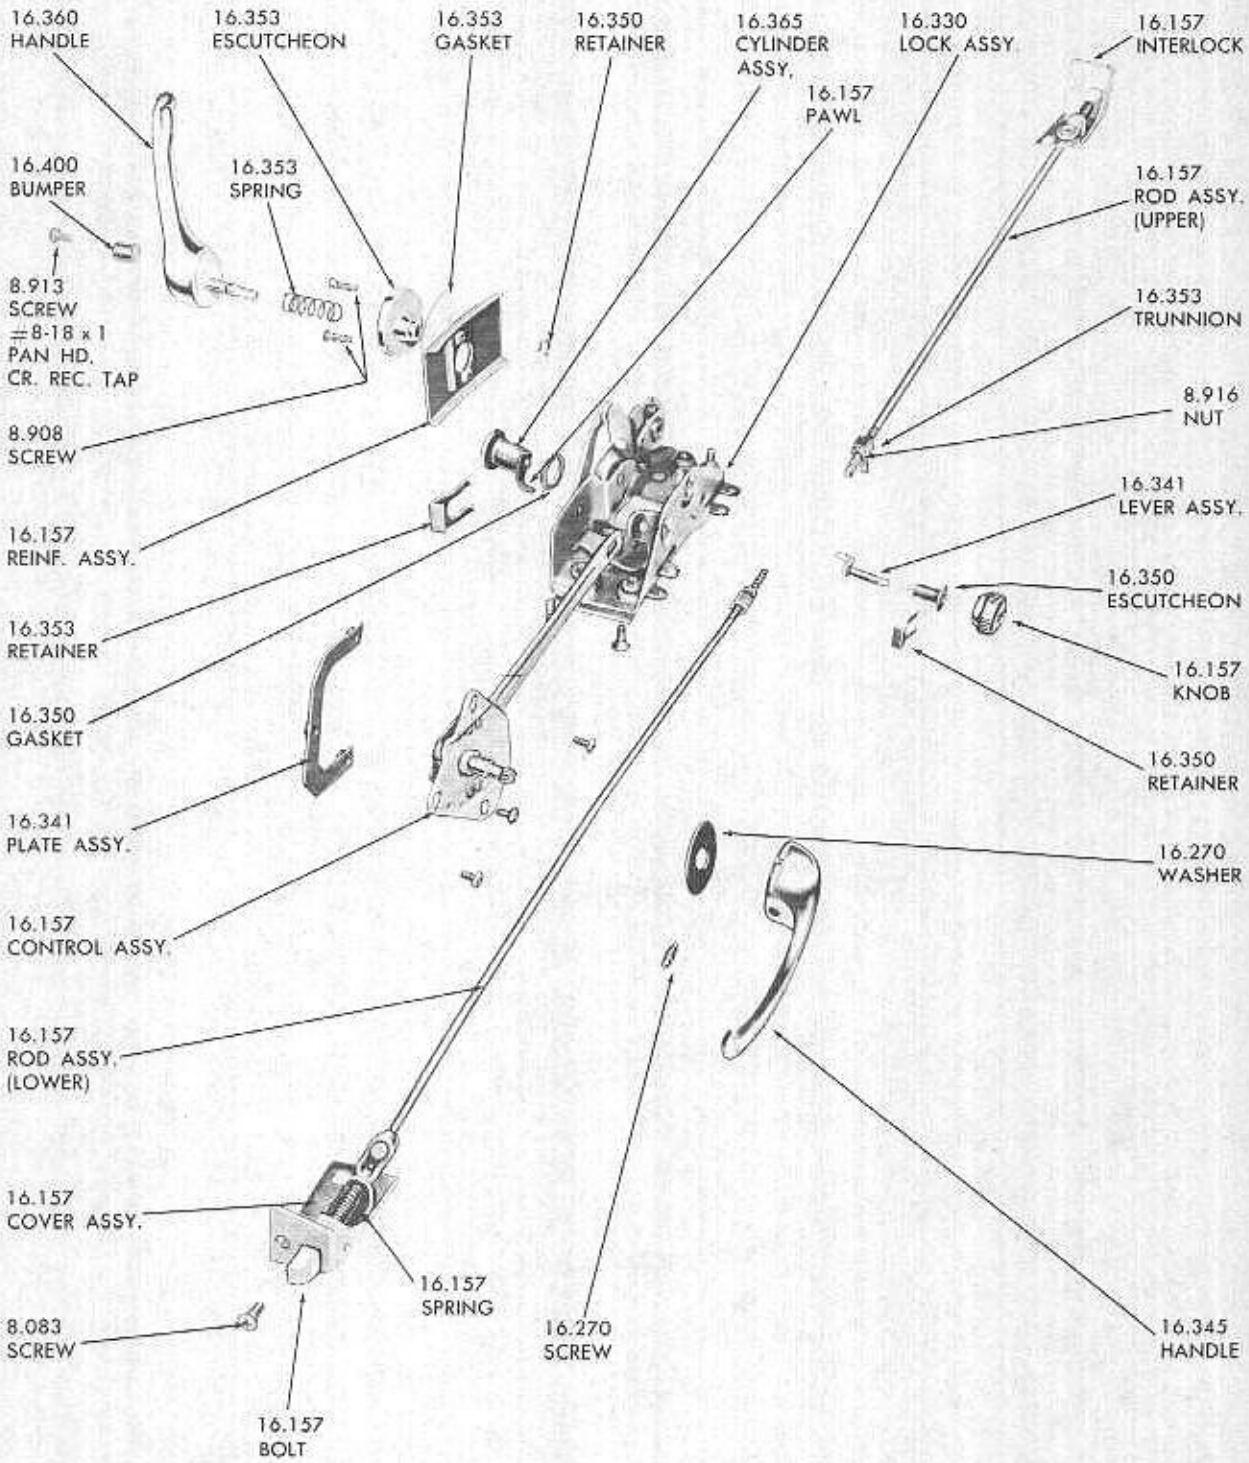

1961-65 CORVAIR F.C. SIDE CARGO DOOR LOCK—(EXPLODED)

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

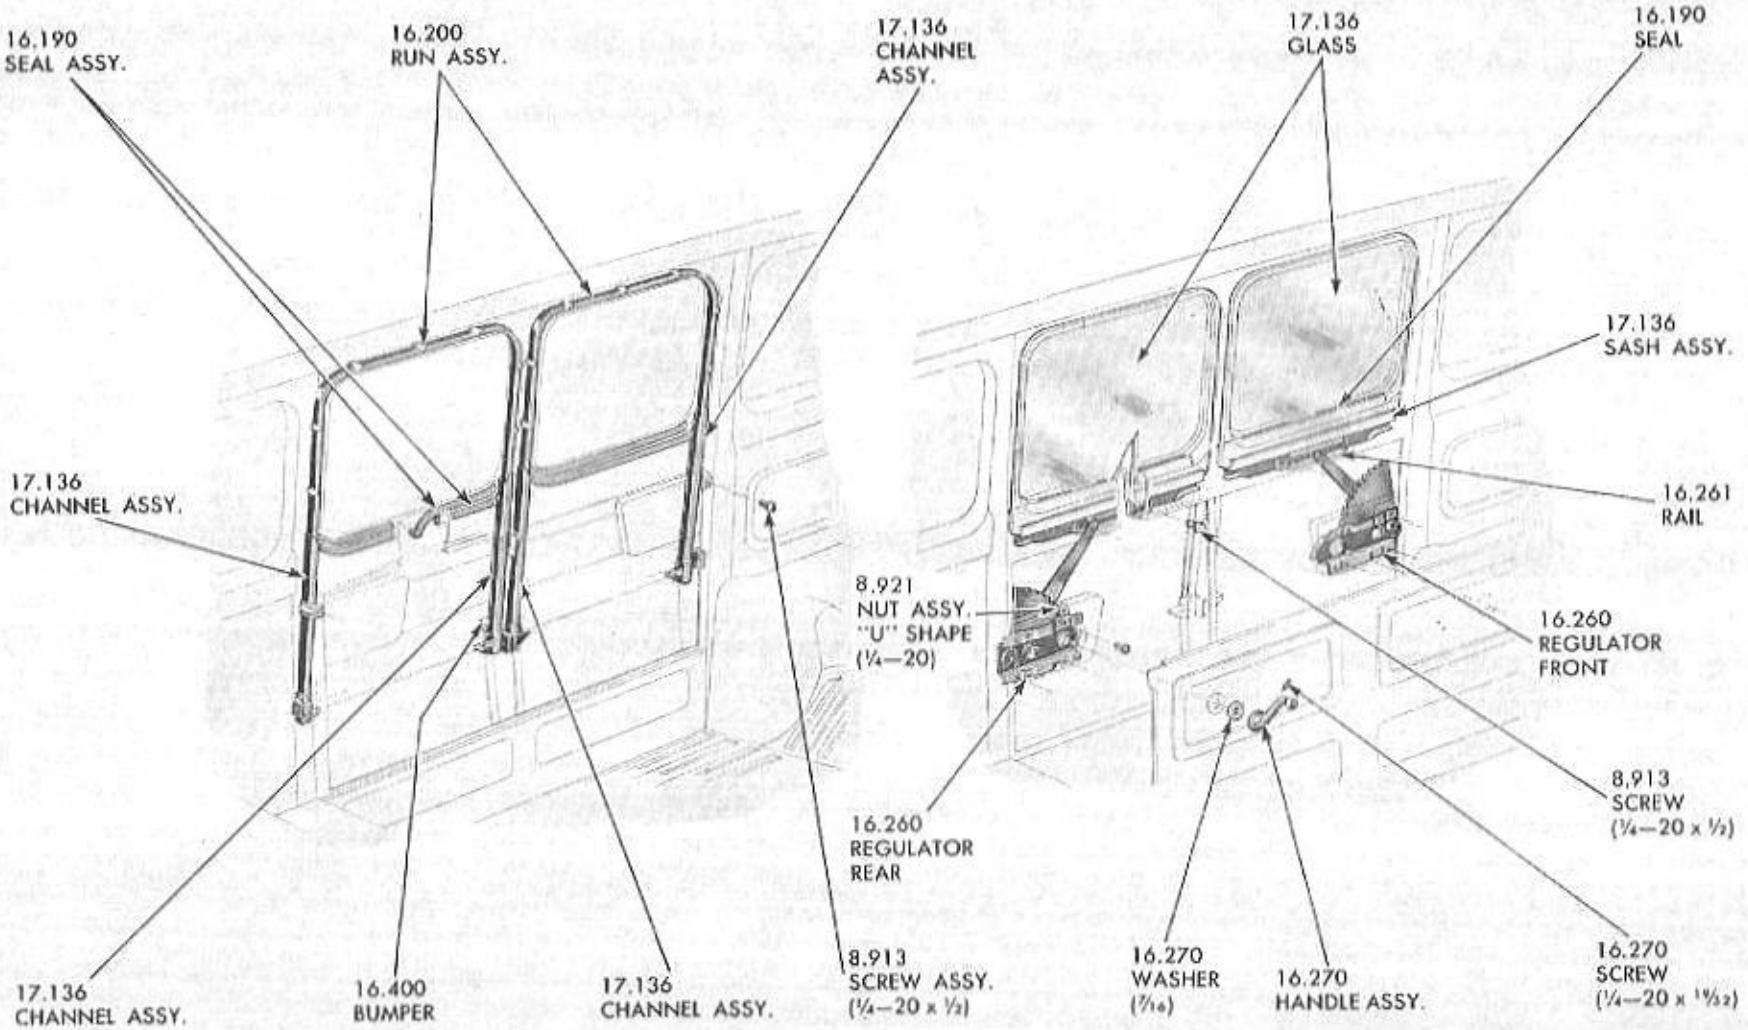

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

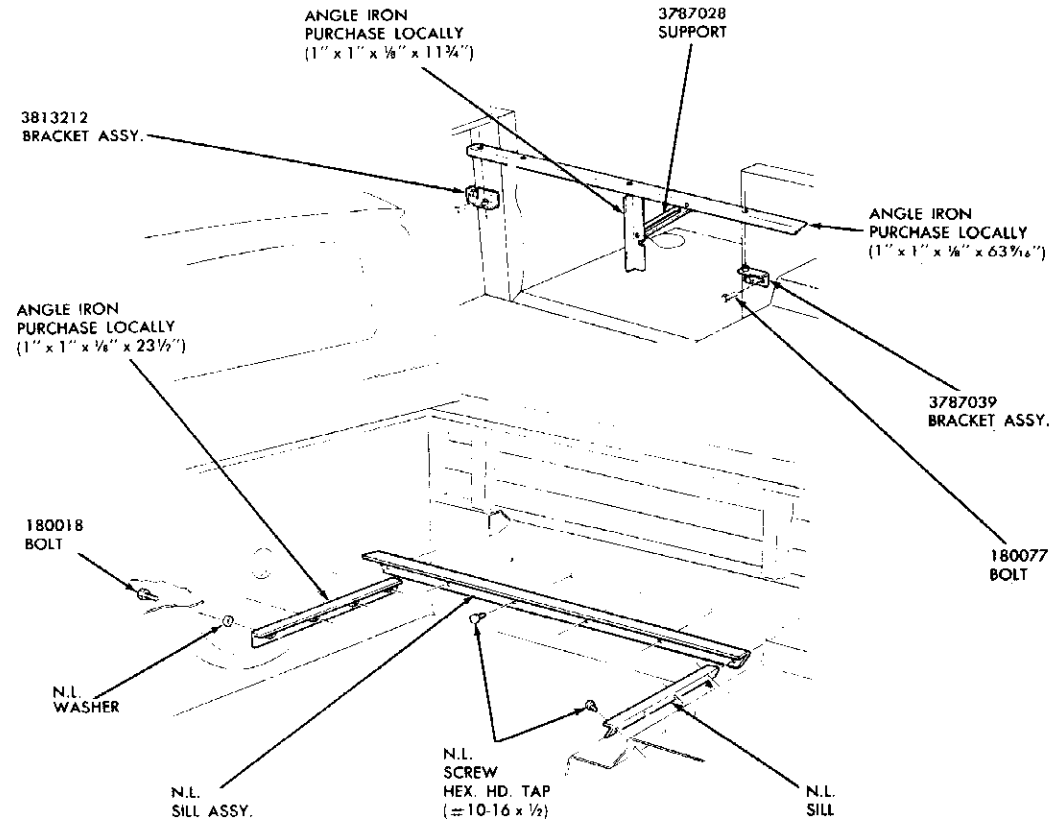

1961-64 CORVAIR F.C. PICK-UP LEVEL FLOOR SILL AND BRACKET DETAILS

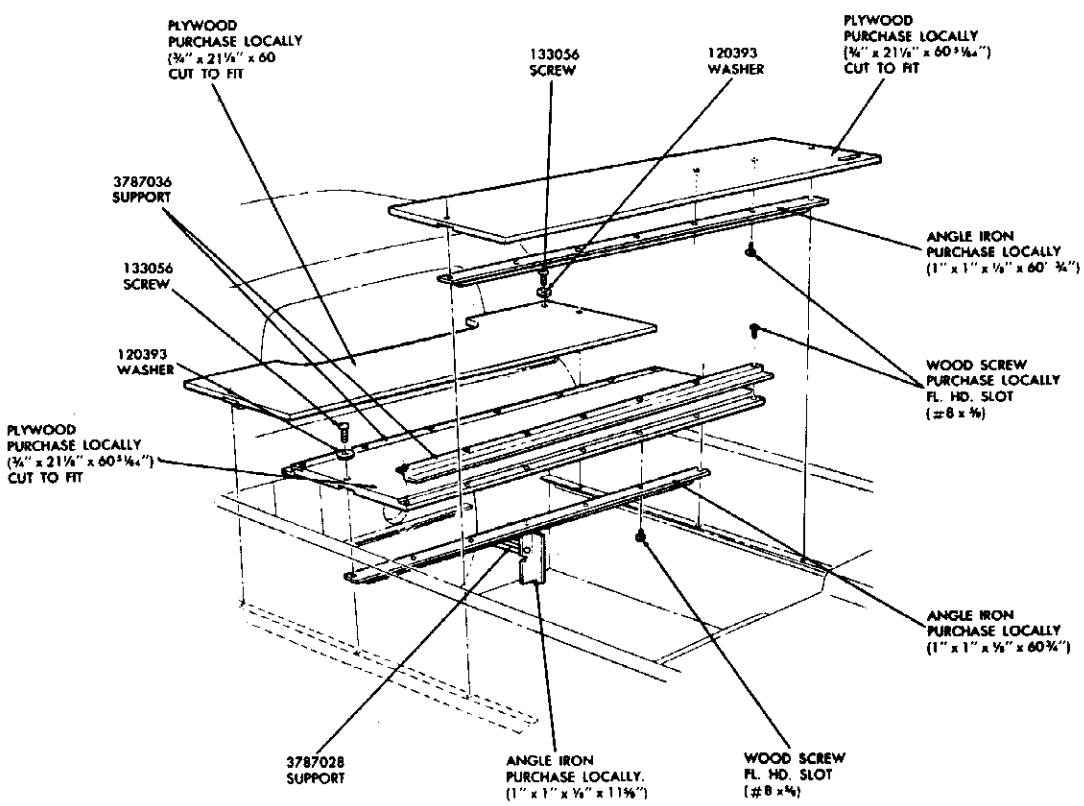

1961-64 CORVAIR F.C. PICK-UP LEVEL FLOOR PLATFORM DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

16.005 GLASS, WINDSHIELD

61-65	F.C.	3772351	safety	1

16.010 FILLER, Windshield Glass

ALL	ALL	3830213	($^3/_{64}$" thick—40 ft. roll)—(10.696)	A.R.
ALL	ALL	3830214	($^3/_{32}$" thick—60 ft. roll)—(10.696)	A.R.

16.040 WEATHERSTRIP, Windshield

61-65	F.C. (exc. deluxe equip.)	3777046	rubber (150" dev. length)	1
61-65	F.C. w/deluxe equip.	3785254	rubber (173" dev. length) (2 raised ridges on base of inner glass slot) (Note 1)	1

NOTE 1. Cut to required length.

16.041 MOULDING—CAP, Windshield Reveal

61-65	F.C. w/deluxe equip	3787669	upper	L.H.
61-65	F.C. w/deluxe equip	3787670	upper	R.H.
61-65	F.C. w/deluxe equip	3787667	lower	L.H.
61-65	F.C. w/deluxe equip	3787668	lower	R.H.
61-65	F.C. w/deluxe equip.	3818416	**CAP**, windshield reveal-(11.208)	4

16.062 BLADE ASSY.—INSERT ASSY., Windshield Wiper

61-65	F.C.	3941969	(Trico) ($14^7/_8$" long)—(10.146)	2
61-64	F.C.	3779741	(Anco) ($15^5/_{32}$" long)—(10.146)	2
65	F.C.	3871085	(Anco) (15" long)—(10.146)	2
61-63	F.C.	3821753	**INSERT ASSY.** (Anco) ($15^5/_{32}$" long)—(10.146)	2
62-65	F.C.	3819074	**INSERT ASSY.** (Trico) ($14^4/_4$" long)—(10.146)	2
	Not required in this group. See group 10.146	3819073	**INSERT ASSY.**	
	Not required in this group. See group 10.146	3859463	**INSERT ASSY.**	

16.063 LINK ASSY.—ROD ASSY.—SPACER, Windshield Wiper

61-65	F.C.	4907566		L.H.
61-65	F.C.	4907565		R.H.
61-65	F.C.	3775139	**ROD ASSY.** ($13^1/_{64}$ long)	1
61-65	F.C.	3764098	**SPACER**, link assy. ($^1/_8$ dia. x $^{11}/_{64}$ thick)	1

16.064 MOTOR UNIT, Windshield Wiper

61	F.C. w/2-spd.	4909108	(10.150)	1
61	F.C. w/sgl. spd.	4907734	(10.150)	1
62	F.C. w/2-spd.	4910144	**MOTOR ASSY.**, complete—(10.150)	1
62	F.C. w/sgl. spd.	4910214	**MOTOR ASSY.**, complete—(10.150—	1
63-65	F.C. w/2-spd.	4911476	**MOTOR ASSY.**, complete—(10.150)	1
63-65	F.C. w/sgl. spd.	4911945	**MOTOR ASSY.**, complete—(10.150)	1

16.065 WINDSHIELD WIPER MOTOR PARTS

62	F.C.,			
63-65	F.C. w/sgl. spd.	4910243	**ARM ASSY.**, w/pin	1
63-65	F.C. w/2-SPD.	4910968	**ARM ASSY.**, w/pin	1
61	F.C. w/sgl. spd.	4908915	**ARMATURE ASSY.**—(10.150)	1
62-65	F.C. w/sgl. spd.	4909915	**ARMATURE ASSY.**—(10.150)	1
62-65	F.C. (2-spd. w/washer)	4910164	**ARMATURE ASSY.**—(10.150)	1
61	F.C. w/sgl. spd.,			
62-65	F.C. w/2-spd.	4907157	**BOLT** (No. 10—32 thds.—$4^3/_4$" O.L.)—(10.150)	2
62-65	F.C. w/sgl. spd.	4903428	**BOLT**, through (No. 10—32, $^{11}/_{64}$" x $3^7/_8$")—(10.150)	2
61-64	F.C. (sgl. spd. w/washer),			
65	F.C.	4904212	**BRACKET**, motor brush holder mounting—(10.783)	A.R.
61	F.C. w/sgl. spd.	4905189	**BRUSH ASSY.**—(10.150)	2
62-65	F.C.	4910516	**BRUSH KIT**, replacement—(10.150)	1
61	F.C. w/sgl. spd.	4905259	**CAP**, drive shaft sealing—(10.157)	1
62-65	F.C. w/sgl. spd.	4909948	**CAP**, drive shaft protector—(10.157)	1
62-65	F.C.	4910424	**CAP ASSY.**—(10.150)	1
61	F.C. w/2-spd.	4909112	**CASE ASSY.**, w/brush—(10.150)	1
61	F.C. w/2-spd.	4908447	**COIL ASSY.**, field—(10.150)	1
62-65	F.C. (2-spd. w/washer)	4910291	**COIL ASSY.**, field—(10.150)	1
62-65	F.C. w/sgl. spd.	4910299	**COIL ASSY.**, field—(10.150)	1
63-65	F.C. w/2-spd.	4912095	**COVER**, gear train w/plate—(10.157)	1
63-65	F.C. w/sgl. spd.	4912096	**COVER**, gear train, w/plate—(10.157)	1
61-62	F.C.	542675	**GASKET** ($2^5/_{32}$" dia. x $^3/_8$" thk.)—(10.152)	1
62-65	F.C.	3792579	**GASKET**—(10.152)	1
62-65	F.C. w/sgl. spd.	4910140	**GEAR**, intermediate w/pinion—(10.157)	1
62-65	F.C. (2-spd. w/washer)	4909941	**GEAR**, intermediate w/plate—(10.157)	1
61-65	F.C.	3707952	**GROMMET**, spray connector tee to spray nozzle ($^9/_{32}$")—(2.251)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61	F.C. w/2-spd.	**4904756**	**GROMMET,** motor housing wire—(10.152)	1
62-65	F.C.	**4910180**	**GROMMET,** mounting—(10.152)	3
62-65	F.C.	**4909925**	**HOLDER ASSY.,** brush—(10.150)	1
61	F.C. w/sgl. spd.	**4907735**	**KIT,** brush holder and circuit breaker—(10.150)	1
61	F.C. w/sgl. spd.	**9413553**	**NUT,** arm and pin retaining (1 1/4"—28)—(8.917)	1
62-65	F.C.	**4909914**	**PLUG,** armature shaft thrust—(10.150)	1
61-65	F.C.	**531848**	**RETAINER,** link assy. to motor assy.—(10.160)	1
64-65	F.C.	**4912427**	**RETAINER,** slip, drive link to motor (used w/3/8" dia. stud)—(10.160)	1
61	F.C. w/2-spd.	**4904998**	**RING,** driveshaft retaining—(10.157)	1
62-65	F.C.	**4910142**	**RING,** driveshaft retaining—(10.157)	1
61	F.C. w/sgl. spd	**4906744**	**SCREW,** armature end plate adj. (1 1/4"-28 x 7/8")—(10.150)	1
62-65	F.C. w/sgl. spd	**4910139**	**SHAFT,** drive, w/gear—(10.157)	1
61	F.C. w/2-spd.	**4908424**	**SHAFT ASSY.,** drive, w/gear—(10.157)	1
61	F.C. w/sgl. spd.	**4906716**	**SHAFT ASSY.,** drive, w/gear—(10.157)	1
62-65	F.C. (2-spd. w/washer)	**4909942**	**SHAFT ASSY.,** drive, w/gear—(10.157)	1
61-65	F.C.	**4908709**	**SPRING,** brush (3/16" dia. w/9 right hand turns close wound)—(10.150)	1
64	F.C.	**4911656**	**SPRING,** pump extension—(10.153)	1
61	F.C.	**4905194**	**WASHER,** drive shaft and gear assy. spacer—(10.150)	1
61	F.C.	**138479**	**WASHER,** motor assy. (No. 10)—(8.932)	4

PARTS, Windshield Washer

61-65	F.C.	**4914074**	**BELLOWS,** pump valve—(10.153)	1
62-64	F.C. w/2-spd.	**4910775**	**BOARD ASSY.,** pump terminal—(10.153)	1
61-62	F.C.	**4905345**	**BUMPER,** actuating arm—(10.153)	1
61-62	F.C.	**4906931**	**CAM,** pump (4 lobe)—(10.153)	1
62	F.C. w/2-spd.	**4910117**	**CAM,** pump (3 lobe)—(10.153)	1
63-65	F.C.	**4918233**	**CAM,** pump (4 lobe)—(10.153)	1
61-62	F.C.	**4904474**	**CLIP,** pump relay terminal board—(10.153)	1
62-65	F.C. w/2-spd.	**4916802**	**COIL ASSY.,** pump terminal—(10.153)	1
62-65	F.C. w/2-spd.	**4910431**	**COVER,** pump—(10.153)	1
60-65	F.C.	**3760369**	**FILLER,** washer jar hose water—(10.154)	1
61-62	F.C.	**4908747**	**GASKET,** pump cover—(10.157)	1
62-63	F.C. w/sgl. spd.	**4910888**	**GEAR,** pump—(10.153)	1
62-64	F.C. w/2-spd.	**4910110**	**HOUSING,** pump bellows—(10.153)	1
61-65	F.C.	**3776836**	**NOZZLE ASSY.,** washer spray	1
62-65	F.C. w/2-spd.	**4910123**	**PAWL,** pump ratchet—(10.153)	1
61-62	F.C.	**4914935**	**PAWL UNIT,** pump ratchet—(10.153)	1
62	F.C.	**4911521**	**PUMP ASSY.**—(10.153)	1
63-65	F.C.	**4912365**	**PUMP PACKAGE**—(10.153)	1
61	F.C.	**4909111**	**PUMP UNIT** (Note 1)—(10.153)	1
	NOTE 1 Consists of pump assy., cover, gasket, screws and nuts.			
61-62	F.C. w/sgl. spd.	**4906055**	**RELAY ASSY.,** pump (w/terminal board) (straight)—(10.153)	1
61	F.C. w/2-spd.	**4909133**	**RELAY ASSY.,** pump (w/terminal board) (angled)—(10.153)	1
61-65	F.C.	**3776830**	**RESERVOIR ASSY.,** washer	1
61-62	F.C.	**9416094**	**RING,** pump pawl retaining—(8.934)	1
61-62	F.C.	**4908486**	**RING,** pump retaining—(10.153)	1
61-62	F.C.	**4905737**	**SPRING,** pump ratchet lock—(10.153)	1
62-65	F.C. w/2-spd.	**4910108**	**SPRING,** pump cam follower (31/32" dia.)—(10.153)	1
62-65	F.C. w/2-spd.	**4910124**	**SPRING,** pump ratchet pawl—(10.153)	1
62-65	F.C. w/2-spd.	**4913551**	**SPRING,** pump dog—(10.153)	1
61-63	F.C.	**3760758**	**TEE,** washer spray connector—(10.155)	1
61-65	F.C.	**4914356**	**VALVE ASSY.,** pump—(10.153)	1
	Not required in thie group. See group 4.008	**2390395**	**WASHER**	A.R.

16.066 HOSE, Windshield Washer

ALL	ALL	**3830665**	R.H. and L.H. pump to nozzle (5/32" I.D.)—(8.962)	2
ALL	ALL	**3830663**	jar to pump (7/32" I.D.)—(8.962)	1

16.067 KNOB—BEZEL—BOARD ASSY.—NUT—SHIELD—SWITCH ASSY., Windshield Wiper

61-65	F.C. w/sgl. spd. (exc. washer)	**3780348**	(13/16" dia. x 1 3/32" long)—(10.164)	1
61-65	F.C. w/washer	**1990992**	control w/set screw—(10.164)	1
63-65	F.C.	**6256713**	**BEZEL,** wiper switch—(2.487)	1
61	F.C. w/2-spd.	**4908473**	**BOARD ASSY.,** motor terminal—(10.163)	1
61	F.C. w/sgl. spd.	**4906709**	**BOARD ASSY.,** motor terminal—(10.163)	1
62-64	F.C. w/2-spd.	**4910515**	**BOARD ASSY.,** motor terminal—(10.163)	1
62-65	F.C. w/sgl. spd.	**4910350**	**BOARD ASSY.,** motor terminal—(10.163)	1
65	F.C.	**3820531**	**NUT,** control switch—(10.163)	1
61	F.C. w/2-spd.	**1993527**	**SWITCH ASSY.**—(10.163)	1
61-65	F.C. w/sgl. spd.	**1993441**	**SWITCH ASSY.**—(10.163)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts

61-65	F.C. (sgl. spd. w/washer)	1993541	**SWITCH ASSY.**—(10.163)	1
63-65	F.C. (2-spd. w/washer)	1993584	**SWITCH ASSY.**—(10.163)	1

16.068 MIRROR ASSY.—BUSHING, Rear View

61-62	F.C.,			
63-65	GREENBRIER, SIDE RAMP	3633013	inside (painted head)—(10.185)	1
64-65	F.C.	3838535	outside, non-glare	1
63-65	GREENBRIER, side ramp	565801	**BUSHING,** rear view mirror stud (Note 1)—(10.185)	1

NOTE 1 Used with 899769 mirror assy.

16.069 ARM—BRACKET—BOLT—NUT—PAD—REINFORCEMENT ASSY.—SCREW—SUPPORT, Rear View Mirror

62-64	F.C.	3818424	(w/985771 mirror) (unpainted)	1
61-62	F.C.,			
63-65	F.C. (exc. PANEL)	3940865	**BRACKET,** inside	1
61-65	F.C.	3795374	**BRACKET,** outside rear view mirror (three ^{11} dia. hole)	R.H.
62-65	F.C.	3799983	**BRACKET,** mirror to arm, (w/985771 mirror)	A.R.
62-65	F.C.	3818436	**BRACKET,** arm to body, small, (stamped No. 1) (w/985771 mirror) (unpainted)	1
62-65	F.C.	3818438	**BRACKET,** arm to body, large, (stamped No. 2) (w/985771 mirror) (unpainted)	1
61-64	F.C.	3769162	**BOLT,** special tee ($^{1}/_{4}$28 x $^{1}/_{2}$)	A.R.
61-62	F.C.	3730635	**NUT,** support arm (w/988355 mirror) ($^{7}/_{8}$—23)	1
61-65	F.C.	3816679	**PAD** (w/short mirror) (triangle shape— three $^{25}/_{64}$ holes)	A.R.
61-65	F.C.	3795375	**REINFORCEMENT ASSY.,** outside rear view mirror ($3^{1}/_{8}$" x 5 w/three $^{5}/_{16}$"—18 nut)	L.H.
61-65	F.C.	3795376	**REINFORCEMENT ASSY.,** outside rear view mirror ($3^{1}/_{8}$" x 5 w/three $^{5}/_{16}$"—18 nut)	R.H.
61-62	F.C.,			
63-65	F.C. (exc. PANEL)	565842	**SCREW,** rr. view mirror assy. (ov. hd. cr. rec. 10—32 x $^{9}/_{16}$")—(10.186)	1
63-64	F.C.	3903176	**SCREW,** outside mirror to base MTG. BRKT.	1
62-65	F.C.	3818439	**SUPPORT** (w/985771 mirror) (unpainted)	2

16.070 SUNSHADE ASSY.

62-63	F.C.	3814290	w/supprot (fawn)	1
64-65	F.C.	3838971	w/support (fawn)	L.H.
64-65	GREENBRIER w/deluxe equip.	3838973	(cameo white)	L.H.
64-65	GREENBRIER w/deluxe equip.	3838974	(cameo white)	R.H.
64-65	F.C.	3838972	w/support (fawn)	R.H.

16.080 INSTRUMENT PANEL (in prime)

61-65	F.C.	3799883		1

16.081 PLATE—COVER, Instrument Cluster

61-64	F.C. (exc. P.G.)	3840659	trim—(10.252)	1
61-64	F.C. w/P.G.	3840660	trim—(10.252)	1
63	F.C. (exc. P.G.)	3824296	trim—(10.252)	1
65	F.C. (exc. P.C.)	3860730	cluster trim	1
61-65	F.C. (exc. P.G.)	3780325	**COVER,** transmission control lever instrument panel hole ($1^{41}/_{64}$ x $1^{1}/_{16}$)	1
61-65	F.C. w/P.G.	3780326	**COVER,** transmission control lever instrument panel hole ($1^{41}/_{64}$ x $1^{7}/_{64}$ w/2—$^{1}/_{64}$ dia. holes)	1

16.100 BOX—SWITCH ASSY., Instrument Panel Compt. and Courtesy

61-65	F.C.	3782178		1
61-65	F.C.	3859328	**SWITCH ASSY.,** panel compt.—(10.275)	1

16.110 DOOR ASSY.—BUMPER—CASE—CYLINDER—GROMMET—KEY—LOCK ASSY.—RETAINER—STRIKER, Instrument Panel Compartment

61-62	F.C. (exc. deluxe equip.),			
63-65	GREENBRIER (exc. deluxe equip.)	3782093		1
63	F.C. w/deluxe equip.	3826788		1
64-65	F.C.	3844607		1
61-65	F.C.	3765243	**BUMPER,** door (rubber $^{11}/_{32}$" dia. x $1^{4}/_{64}$")—(10.263)	2
61-65	F.C.	1380873	**CASE,** w/lock bolt less cylinder retainer and keys—(10.266)	1
61-65	F.C.	4566764	**CYLINDER,** door lock—(10.266)	1
61-65	F.C.	6280978	**GROMMET,** door ($^{1}/_{4}$" I.D. x $^{1}/_{2}$" O.D.)—(10.262)	1
61-63	F.C.	3694624	**KEY,** blank (octagon head)—(2.187)	A.R.
61-64	F.C.	3732065	**LOCK ASSY.,** w/lock bolt, $1^{5}/_{16}$" ret. ($^{7}/_{8}$" face dia. x $1^{9}/_{16}$" long—chrome)—(10.266)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-65	F.C.	4131049	**RETAINER,** lock cylinder case, latch retainer (1" long w/two $^{5}/_{32}$" dia. holes)—(10.267)	1
61-65	F.C.	3781854	**STRIKER,** door lock ($1^{3}/_{4}$" x $^{33}/_{64}$"—w/2 holes)—(10.268)	1

16.115 HINGE, Instrument Panel

61-65	F.C.	3772376	compartment door (13" long w/slotted holes)	1

16.120 TRAY ASSY.—KNOB—PLATE—RETAINER ASSY.—SPRING, Ash Receiver (less handle)

61-65	F.C.	3765252	less knob	1
62-65	GREENBRIER w/deluxe equip.	3814974	w/retainer	1
61-65	F.C.	3796126	**KNOB,** face plate	1
61-65	F.C.	3765256	**PLATE,** tray face	1
61-65	F.C.	3762449	**RETAINER ASSY.**	1
62-65	F.C.	3765474	**SPRING**	1

16.125 RETAINER ASSY., Grille

61-65	F.C.	3775016	ornament, inner	1
61-65	F.C.	3775017	ornament, outer	1

16.150 DOOR—PANEL, Side Front (in prime)

61-63	F.C.	3826612	less trim and hardware	R.H.
61-64	F.C.	3865455	front	L.H.
64	F.C.	3865456	front	R.H.
65	F.C.	3858231	front	L.H.
65	F.C.	3858232	front	R.H.
61-65	F.C.	3865457	**PANEL,** front door outer	L.H.
61-65	F.C.	3865458	**PANEL,** front door outer	R.H.

16.155 REST ASSY.—BASE—MOULDING—NUT—PAD ASSY.—SCREW, Door Arm

65	F.C.	3860762	front and rear door arm rest (red)	2
65	F.C. w/deluxe equip.	3882632	front and rear door arm rest (lt. green)	2
65	F.C. w/deluxe equip.	3860764	front and rear door arm rest (turquoise)	2
61-62	F.C. (exc. GREENBRIER)	3778798	**BASE,** rest	1
61-64	F.C. w/deluxe equip.	3786650	**BASE,** side front door and rear arm rest (white)	A.R.
61-64	F.C. w/deluxe equip.	3716956	**MOULDING,** rest	A.R.
61-62	F.C.	4780691	**NUT,** side door rest assy. (clinch) ($^{1}/_{4}$—20 for $^{1}/_{2}$" opening)	2
61	F.C. (exc. GREENBRIER w/deluxe equip.)	3783499	**PAD ASSY.,** left or right (silver)	A.R.
62-63	F.C. (exc. deluxe equip.),			
62-63	GREENBRIER w/deluxe equip.	3813128	**PAD ASSY.,** side front door and rear arm rest (med. fawn)	A.R.
62-63	GREENBRIER w/deluxe equip.	3814012	**PAD ASSY.,** rest (green)	A.R.
62-63	GREENBRIER w/deluxe equip.,			
63	F.C. w/deluxe equip.	3816953	**PAD ASSY.,** rest (red)	A.R.
64	F.C. w/deluxe equip.	3845893	**PAD ASSY.,** rest (red)	2
64	F.C. w/deluxe equip.	3845894	**PAD ASSY.,** rest (fawn)	2
65	GREENBRIER w/deluxe equip.	9422487	**SCREW,** rear arm rest ($^{1}/_{4}$"—14 x $1^{1}/_{4}$")—(8.977)	4

16.157 DOOR—PANEL and PARTS, Body Side

61-64	SIDE RAMP	3773526	ramp	R.H.
61-64	PANEL	3813447	side of vehicle, intermediate	L.H.
61-64	PANEL	3813448	side of vehicle, intermediate	R.H.
63-64	PANEL	3813341	side of vehicle, rear	L.H.
63-64	PANEL	3813342	side of vehicle, rear	R.H.
61-65	GREENBRIER	3813345	side of vehicle, rear	L.H.
61-65	GREENBRIER	3813346	side of vehicle, rear	R.H.
61-65	GREENBRIER	3813441	side of vehicle, intermediate (front)	L.H.
61-65	GREENBRIER	3813442	side of vehicle, intermediate (front)	R.H.
61-65	PANEL	3858288	**PANEL,** side of vehicle, intermediate	R.H.
61-65	PANEL	3858289	**PANEL,** side of vehicle, rr. door outer	L.H.
61-65	PANEL	3858290	**PANEL,** side of vehicle, rr. door outer	R.H.
61-65	GREENBRIER	3858284	**PANEL,** side of vehicle, intermediate door outer	L.H.
61-65	GREENBRIER	3771827	**PANEL,** side of vehicle, rear	L.H.
61-65	GREENBRIER	3771828	**PANEL,** side of vehicle, rear	R.H.
61-64	SIDE RAMP	3773528	**PANEL,** ramp door outer	1
61-65	GREENBRIER	3858283	**PANEL,** side of vehicle intermediate door outer	L.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT Parts

61-65	F.C. (exc. PICK-UP)	3798700	**BOLT,** side and intermediate doors lock rod, upper and lower	A.R.
61-65	GREENBRIER w/deluxe equip.	3787627	**CONTROL ASSY.,** side front door lock remote	L.H.
61-65	GREENBRIER w/deluxe equip.	3787628	**CONTROL ASSY.,** side front door lock remote	R.H.
61-65	GREENBRIER w/deluxe equip.	3817813	**CONTROL ASSY.,** side intermediate door lock	L.H.
61-65	GREENBRIER w/deluxe equip.	3817814	**CONTROL ASSY.,** side intermediate door lock	R.H.
61-65	F.C. (exc. PICK-UP)	3776508	**COVER,** intermediate and side rear door lock (Note 1)	A.R.
	NOTE 1 It may be necessary to relocate the two attaching holes when installing on left side.			
61-65	F.C. (exc. PICK-UP)	3798702	**COVER ASSY.,** side intermediate and rear	R.H.
61-65	F.C. (exc. PICK-UP)	3798701	**COVER ASSY.,** side intermediate and rear	L.H.
64-65	GREENBRIER w/deluxe equip.	3844821	**EXTENSION,** side rear	L.H.
64-65	GREENBRIER w/deluxe equip.	3844822	**EXTENSION,** side rear	R.H.
61-65	F.C. (exc. PICK-UP)	3868334	**GROMMET,** side rear and intermediate door, hinge strap panel	8
61-64	SIDE RAMP	3776706	**HINGE ASSY.,** ramp door	1
61-65	F.C. (exc. PICK-UP)	3778928	**INTERLOCK,** side rear (body half)	2
61-65	F.C. (exc. PICK-UP)	3778931	**INTERLOCK,** side rear (door half)	L.H.
61-65	F.C. (exc. PICK-UP)	3778932	**INTERLOCK,** side rear (door half)	R.H.
62-64	F.C. (exc. PICK-UP),			
65	F.C.	7591126	**KNOB,** inside locking rod—(10.559)	1
61	F.C. (exc. PICK-UP)	3813272	**KNOB ASSY.,** side intermediate door lock	1
61-64	SIDE RAMP	3778575	**LEVER,** ramp door safety catch release	1
61-63	F.C. (exc. PICK-UP)	3783004	**NUT,** side rear and intermediate door outer bumper assy. (No. 10 spring type)—(7.800)	A.R.
61	F.C. (exc. PICK-UP)	3854326	**PAWL,** side intermediate door lock cylinder	L.H.
61-63	F.C. (exc. PICK-UP)	456540	**PIN,** side and inter. door lock rod cover bolt (slotted $^{3}/_{16}$" x $^{5}/_{8}$")—(8.939)	A.R.
61-65	F.C. (exc. PICK-UP)	3776321	**REINFORCEMENT ASSY.,** side intermediate door outside handle	1
62-65	F.C. (exc. PICK-UP)	3813475	**ROD,** side intermediate door lock lower	1
62-65	F.C. (exc. PICK-UP)	3813476	**ROD,** side intermediate door lock upper	1
61-65	F.C. (exc. PICK-UP)	3819105	**ROD ASSY.,** left side intermediate and rear, lower	A.R.
61-65	F.C. (exc. PICK-UP)	3819106	**ROD ASSY.,** right side intermediate and rear, lower	A.R.
61-63	F.C. (exc. PICK-UP)	9416990	**SCREW,** side rear door interlock ($^{5}/_{16}$"—18 x $1^{1}/_{8}$")—(8.908)	A.R.
61-63	F.C. (exc. PICK-UP)	3785540	**SCREW,** side rear and inter. lock rod cover, upper and lower ($^{7}/_{16}$"—18 x $^{9}/_{16}$")—(16.332)	2
61-65	F.C. (exc. PICK-UP)	3775359	**SPACER,** side rear door hinge pillar	1
61-64	SIDE RAMP	3778431	**SPACER,** ramp door lock striker	A.R.
61-65	F.C. (exc. PICK-UP)	3776481	**SPRING,** side and intermediate doors lock rod, upper and lower	A.R.
61-64	SIDE RAMP	3796624	**STRIKER,** ramp door safety	1

16.160 DOOR ASSY.—NUT—SCREW, Rear

63-64	F.C. (exc. PICK-UP)	3794627	rear (used w/o glass)	L.H.
63-64	F.C. (exc. PICK-UP)	3794628	rear (used w/o glass)	R.H.
61-65	F.C. (exc. PICK-UP)	3773421	rear (used w/glass)	L.H.
61-65	F.C. (exc. PICK-UP)	3773422	rear (used w/glass)	R.H.
61-63	F.C. (exc. PICK-UP)	3783004	**NUT,** rear door outer bumper assy. (No. 10 nylon)—(7.800)	2
61-63	F.C. (exc. PICK-UP)	3716779	**SCREW,** rear door outer bumper ($^{5}/_{16}$"—18 x $1^{1}/_{16}$")—(8.024)	2

16.165 PANEL—EYELET—RETAINER—SCREW—SEAL, Door Inside Trim

61-65	F.C.	3786569	side front	L.H.
61-65	F.C.	3786570	side front	R.H.
61-65	GREENBRIER	3813453	left, side rear and intermediate	A.R.
61-65	GREENBRIER	3813454	right, side rear and intermediate	A.R.
62-63	GREENBRIER w/deluxe equip.	3814384	**PANEL ASSY.,** side front door lower trim (red)	R.H.
62-63	GREENBRIER w/deluxe equip.	3798071	**PANEL ASSY.,** side front door lower trim (turquoise)	L.H.
64-65	GREENBRIER w/deluxe equip.	3844657	**PANEL ASSY.,** side front door lower trim (turquoise)	L.H.
64-65	GREENBRIER w/deluxe equip.	3844658	**PANEL ASSY.,** side front door lower trim (turquoise)	R.H.
64-65	GREENBRIER w/deluxe equip.	3844762	**PANEL ASSY.,** side intermediate door lower trim (med. fawn)	R.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

64-65	GREENBRIER w/deluxe equip.	3844764	**PANEL ASSY.,** side intermediate door lower trim (red)	R.H.
64-65	GREENBRIER w/deluxe equip.	3844765	**PANEL ASSY.,** side intermediate door lower trim (turquoise)	L.H.
64-65	GREENBRIER w/deluxe equip.	3844767	**PANEL ASSY.,** side intermediate door lower trim (light green)	L.H.
64-65	GREENBRIER w/deluxe equip.	3844772	**PANEL ASSY.,** side rear door lower trim (med. fawn)	R.H.
64-65	GREENBRIER w/deluxe equip.	3844774	**PANEL ASSY.,** side rear door lower trim (red)	R.H.
64-65	GREENBRIER w/deluxe equip.	3844778	**PANEL ASSY.,** side rear door lower trim (light green)	R.H.
61-65	GREENBRIER w/deluxe equip.	3787311	**EYELET,** side door and side trim panel	A.R.
61	GREENBRIER w/deluxe equip.	4592059	**EYELET,** body side rr. trim panel—(14.685)	28
61-65	GREENBRIER w/deluxe equip.	3788817	**RETAINER,** side front, intermediate and side rear door and body side trim panel	A.R.
61-65	F.C.	3786100	**SCREW** (cr. rec. 10—24 x $^{5}/_{8}$")	A.R.
61-65	F.C.	3773402	**SEAL,** side front ($^{5}/_{32}$" x $^{3}/_{8}$" O.D. x 99" long) (neoprene closed cell tubing)—(16.547)	2
63-65	GREENBRIER		**SEAL,** side intermediate and side rear door trim.	
63-65	F.C.	3796626	front door inner trim panel	A.R.

16.166 MOULDING ASSY., Door Trim Panel

64-65	GREENBRIER w/deluxe equip.	3844659	side front door lower trim panel	2
64-65	GREENBRIER w/deluxe equip.	3844758	side intermediate door lower trim panel	2

16.167 COVER—PLUG, Door

61-64	PANEL	3784810	side rear and intermediate door lock access hole	A.R.
ALL	ALL	4410574	**PLUG,** hinge access hole—(12.981)	A.R.

16.173 VENTILATOR ASSY., Front Door

61-65	F.C.	3797907	side	L.H.
61-65	F.C.	3797908	side	R.H.

16.174 GLASS, Front Door Ventilator

61-65	F.C.	3795429	safety	2

16.175 RIVET—SASH ASSY.—WEATHERSTRIP, Front Door

64-65	F.C.	9704875	vent. front upper support ($^{1}/_{8}$")—(10.669)	2
61-65	F.C. (exc. deluxe equip.)	3779491	**SASH ASSY.,** left, front dr. vent glass	1
61-65	F.C. (exc. deluxe equip.)	3779492	**SASH ASSY.,** right, front dr. vent glass	1
61-65	F.C.	3775861	**WEATHERSTRIP,** left, front dr. vent glass front	1

16.176 PLATE—HANDLE—PIN—SPRING—STOP—WASHER, Front Door Ventilator

61-65	F.C.	3775860	side locking handle	2
61-65	F.C.	3757725	**HANDLE,** left, side door ventilator locking	1
61-65	F.C.	3757726	**HANDLE,** right, side door ventilator locking	1
61-65	F.C.	3697476	**PIN,** side locking handle retainer	2
61-65	F.C.	3716643	**SPRING,** side ventilator pivot	2
61-65	F.C.	3762400	**STOP,** side door ventilator pivot	2
61-65	F.C.	4162192	**WASHER,** side front door ventilator lower support friction($^{11}/_{16}$" O.D. x $^{31}/_{32}$" I.D.)—(10.660)	4
61-65	F.C.	3696038	**WASHER,** side front door ventilator locking handle ($^{5}/_{8}$ O.D. x $^{29}/_{64}$ I.D.)	2
61-65	F.C.	4162193	**WASHER,** front door ventilator pivot spring seat ($^{11}/_{16}$" O.D. w/slotted $^{21}/_{32}$" dia. hole)—(10.660)	2

16.180 GLASS, Door Window

61-65	F.C.	3789883	side front door (safety)	2
61-65	F.C. (exc. PICK-UP)	3773812	rear door window (safety)	2

16.190 CHANNEL ASSY. and PARTS, Door Glass Sash

61-65	GREENBRIER	3822847	right side intermediate and rr. dr. rr. guide, left side intermediate and rr. dr. frt. guide	1
61-65	GREENBRIER	3822848	left side intermediate and rr. dr. rr. guide, right side intermediate and rr. dr. frt. guide	1
61-65	F.C.	3822851	frt. door rear guide	2
61-63	F.C.	3762180	**BUMPER,** side front door window glass stop—(8.024)	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

ALL	ALL	3830213	**FILLER** ($^{3}/_{64}$" thick—40 ft. roll)—(10.696)	A.R.
ALL	ALL	3830214	**FILLER** ($^{1}/_{2}$" thick—60 ft. roll)—(10.696)	A.R.
61-65	F.C.	3773963	**SASH ASSY.**, side door frong glass lower	L.H.
61-64	F.C. w/laminated glass	3778913	**SEAL**, side front door glass lower, w/$^{15}/_{64}$—$^{17}/_{64}$ thickness glass ($22^{41}/_{64}$ dev. length)	2
61-65	F.C. (exc. laminated glass)	3771998	**SEAL**, side front door glass lower, w/$^{13}/_{64}$"-$^{15}/_{64}$"-thickness glass, side intermediate and side rr. dr. window glass lower, body side front panel	A.R.
61-65	F.C.	3773961	**SEAL ASSY.**, left, side front door window	2
61-65	F.C.	3773962	**SEAL ASSY.**, right, side front door window	2
61-65	GREENBRIER	3776319	**SEAL ASSY.**, side intermediate and side rr. dr. glass, side frt. panel frt. and rr. window glass	A.R.

16.200 RUN ASSY., Door Glass

61-65	F.C.	3817655	front door rear, center and rear side windows (Note 1)	A.R.
61-65	F.C.	3797911	front door front	2

NOTE 1. It may be necessary to cut to required length using the old part as a template.

16.225 WEATHERSTRIP, Door Opening

61-65	F.C. (exc. PICK-UP)	3778077	rear door	L.H.
61-65	F.C. (exc. PICK-UP)	3778078	rear door	R.H.
61-65	F.C. (exc. PICK-UP)	3778375	side intermediate door	1
61-65	F.C. (exc. PICK-UP)	3778376	side rear door	1
61-65	F.C.	3767156	side door inner (cemented to door opening)	2
61-65	F.C.	3769319	side door outer (cemented to door)	2

16.260 REGULATOR—PIN—ROLLER—SPRING, Door Window

61-65	F.C. (exc. deluxe equip.)	3772781	side front door window	L.H.
61-65	F.C. (exc. deluxe equip.)	3772782	side front door window	R.H.
61-65	GREENBRIER w/deluxe equip.	3787581	side front door window	L.H.
61-65	GREENBRIER w/deluxe equip.	3787582	side front door window	R.H.
61-65	GREENBRIER (exc. deluxe equip.)	3822853	left, side front panel front window and right, side rear and intermediate door window	A.R.
61-65	GREENBRIER (exc. deluxe equip.)	3822854	right, side front panel front window and left, side rear and intermediate door window	A.R.
61-65	GREENBRIER w/deluxe equip.	3827244	side front panel front window, side intermediate and right side rr. door window	A.R.
61-65	GREENBRIER w/deluxe equip.	3827245	side front panel rear window, side intermediate and left side rr. door window	A.R.
65	F.C.	4158246	**PIN**, regulator roller—(12.195)	A.R.
65	F.C.	4158245	**ROLLER**(12.195)	A.R.
65	F.C.	4233229	**SPRING**, counter balance—(10.783)	2

16.261 RAIL, Window Regulator Guide

61-65	F.C., front door lower, GREENBRIER	3771999	body side front panel front and rear, side intermediate and side rear door	A.R.

16.270 HANDLE ASSY.—ESCUTCHEON—SCREW—WASHER, Door Window

61-62	F.C.,			
65	F.C.		side front door window regulator,	
61-65	GREENBRIER (exc. body side door)		side front panel front and rear window regulator,	
61-65	GREENBRIER w/body side door	3702164	side rear and intermediate door window regulator	A.R.
61-65	GREENBRIER w/deluxe equip.	3787315	**ESCUTCHEON**, left or right, side front door, side intermediate door and side rear door window regulator	A.R.
61-65	GREENBRIER w/deluxe equip. (exc. body side door)	3787520	**ESCUTCHEON**, left, side front panel window regulator	2
ALL	F.C.	3718951	**SCREW**, window regulator (all locations) (self locking set $^{1}/_{4}$—20 x $^{19}/_{32}$)	A.R.
61-63	F.C.	3817009	**WASHER**, window regulator (all locations) ($^{7}/_{16}$)	A.R.

16.320 HINGE, Door

61-65	F.C.	3813657	side front door upper (Note 1)	A.R.
61-65	F.C.	3813653	side front door lower (Note 1)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-65	F.C. (exc. PICK-UP)	3773722	left and right, side rear door upper, side intermediate door upper (body half)	A.R.
61-65	F.C. (exc. PICK-UP)	3773716	left and right, side rear door upper, side intermediate door upper (door half)	A.R.
61-65	F.C. (exc. PICK-UP)	3773724	left and right, side rear door upper, side intermediate door lower (door half)	A.R.
61-65	F.C. (exc. PICK-UP)	3773726	left and right, side rear door lower, side intermediate door lower (body half)	A.R.
61-65	F.C. (exc. PICK-UP)	3842361	left, rear door	2
61-65	F.C. (exc. PICK-UP)	3842362	right, rear door	2

NOTE 1. When using on the right side remove pin 3718497 and re-install from opposite end, so the position of the head is on top.

16.323 PIN—BUSHING, Door Hinge

61-65	F.C. (exc. PICK-UP)	3773706	side rear and side intermediate door hinge	A.R.
61-65	F.C. (exc. PICK-UP)	3776633	rear door hinge	4
61-65	F.C.	3718497	side front door upper and lower hinge	A.R.
61-65	F.C. (exc. PICK-UP)	3773704	**BUSHING,** side rear door, intermediate door and rear door hinge	A.R.
61-65	F.C.	3828536	**BUSHING,** side front door upper and lower hinge—(10.464)	A.R.

16.325 GROMMET—BOLT, Door Hinge

61-65	F.C. (exc. PICK-UP)	3779099	rear door hinge	8
61-62	F.C. (exc. PICK-UP)	3762563	**BOLT,** rear door hinge (hex. hd. $^{3}/_{8}$—24 x $1^{1}/_{4}$)	A.R.

16.328 TUMBLER UNIT and PARTS, Door Safety Lock

61-65	F.C.	601256	(copper)—(10.553)	A.R.
61-65	F.C.	601258	(black)—(10.553)	A.R.
61-65	F.C.	601259	(yellow)—(10.553)	A.R.
61-65	F.C.	601257	(nickel)—(10.553)	A.R.
61	F.C. (exc. PICK-UP)	7015601	**HOUSING,** side intermediate door cylinder—(10.552)	A.R.
61-65	F.C.	3694624	**KEY,** blank (octagon head)—(2.187)	A.R.
61-65	F.C.	601261	**RETAINER UNIT** (12 retainers)—(10.553)	A.R.
61-65	F.C.	601260	**SPRING UNIT** (144 springs)—(10.553)	A.R.

16.330 LOCK ASSY.—BUSHING—SPACER—SPRING—SUPPORT ASSY., Door

61-65	F.C.	3776607	side front door	L.H.
61-65	F.C.	3776608	side front door	R.H.
61	F.C.	3799143	side intermediate door	L.H.
61	F.C.	3799144	side intermediate door	R.H.
61-62	F.C. (exc. PICK-UP)	3776342	side rear door	R.H.
61-65	F.C. (exc. PICK-UP)	3762280	rear door	L.H.
61-65	F.C. (exc. PICK-UP)	3778391	rear door	R.H.
62-65	F.C. (exc. deluxe equip., PICK-UP)	3813349	side rear door	L.H.
62-65	F.C. (exc. deluxe equip., PICK-UP)	3813350	side rear door	R.H.
62-65	GREENBRIER w/deluxe equip.	3813361	side rear door	L.H.
62-65	GREENBRIER w/deluxe equip.	3813362	side rear door	R.H.
62-65	F.C.	3813459	side intermediate door	L.H.
62-65	F.C.	3813460	side intermediate door	R.H.
61-65	F.C.	3796339	**BUSHING,** side intermediate door lock outside release upper lever	1
61-65	F.C. (exc. PICK-UP)	3773802	**SPACER,** rear door lock upper and lower striker	A.R.
62-65	F.C.	4158734	**SPRING,** right or left, side intermediate door lock lever—(10.474)	A.R.
61-65	F.C. (exc. PICK-UP)	3712131	**SUPPORT ASSY.,** rear door lock outer	1

16.332 ROD—LEVER—SCREW—SPRING, Rear Door Lock

61-65	F.C. (exc. PICK-UP)	3773798	upper ($26^{13}/_{64}$ long)	1
61-65	F.C. (exc. PICK-UP)	3773799	lower (10" long)	1
61-65	F.C. (exc. PICK-UP)	3762860	**LEVER,** w/shaft, left door	1
61-65	F.C. (exc. PICK-UP)	3785540	**SCREW,** side rear and intermediate door lock assy. ($^{5}/_{16}$—18 x $^{9}/_{16}$)	A.R.
62-65	F.C. (exc. PICK-UP)	3813334	**SCREW,** side rear door lock assy. ($^{5}/_{16}$—18 x $^{1}/_{2}$)	A.R.
61-65	F.C. (exc. PICK-UP)	3807241	**SPRING,** left door ($^{13}/_{16}$ I.D.)	1

16.333 HANDLE, Door and Side Ramp Lock

61-65	F.C. (exc. PICK-UP)	3807362	left and right, side rear door inside lock, left, rear door lock	A.R.
61-64	SIDE RAMP	3795795	**HANDLE ASSY.,** side ramp door lock	L.H.
61-64	SIDE RAMP	3795796	**HANDLE ASSY.,** side ramp door lock	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts Detroit IRON

16.335 STRIKER—CATCH ASSY.—PLATE—SCREW—SPACER, Door Lock

61-65	F.C. (exc. PICK-UP)	3773800	rear door lock upper and lower	2
61-62	PICK-UP		end gate lock,	
61-64	SIDE RAMP	3776370	ramp door lock	2
61-65	F.C. (PICK-UP)	3778599	left rear door, center	1
61-65	F.C.	4664964	side front door lock—(10.569)	L.H.
61-65	F.C.	4664963	side front door lock—(10.569)	R.H.
61-65	F.C. (exc. PICK-UP)	3848735	side rear and intermediate door lock	2
61-64	SIDE RAMP	3789984	**CATCH ASSY.**, ramp door safety	1
61-65	F.C. (exc. PICK-UP)	3776639	**PLATE**, side rear, intermediate and rear door check arm striker	A.R.
61-65	F.C.	4649281	**PLATE**, door lock striker adjusting upper—(10.571)	A.R.
61-65	F.C.	4649282	**PLATE**, door lock striker adjusting lower—(10.571)	2
61-63	F.C.	4676731	**SCREW**, door lock striker—(10.570)	A.R.
61-65	F.C.	4651466	**SPACER**, left, side door lock striker ($^{1}/_{8}$" thick)—(10.571)	A.R.
61-65	F.C.	4651465	**SPACER**, right, side door lock striker ($^{1}/_{8}$" thick)—(10.571)	A.R.
61-65	F.C.	4670836	**SPACER**, left, side door lock striker ($^{1}/_{16}$" thick)—(10.571)	A.R.
61-65	F.C.	4670835	**SPACER**, right, side door lock striker ($^{1}/_{16}$" thick)—(10.571)	A.R.
61-65	F.C. (exc. PICK-UP)	3778601	**SPACER**, left, rear door lock striker—(12.237)	A.R.
61-65	F.C. (exc. PICK-UP)	3798368	**SPACER**, side rear and intermediate door lock striker	A.R.

16.341 CONTROL—LEVER ASSY.—PLATE ASSY., Door Lock

61-65	F.C. (exc. custom equip.)	3773861	side front door lock remote	L.H.
61-65	F.C. (exc. custom equip.)	3773862	side front door lock remote	R.H.
61-65	F.C. (exc. PICK-UP)	3817811	side intermediate door lock remote	L.H.
61-65	F.C. (exc. PICK-UP)	3817812	side intermediate door lock remote	R.H.
61	F.C. (exc. PICK-UP)	3781920	**LEVER ASSY.**, side intermediate door lock	A.R.
62-65	F.C. (exc. PICK-UP)	3813469	**LEVER ASSY.**, side intermediate door lock remote	L.H.
62-65	F.C. (exc. PICK-UP)	3813470	**LEVER ASSY.**, side intermediate door lock remote	R.H.
61-65	F.C.	3778317	**PLATE ASSY.**, side front and side intermediate lock remote control mtg.	A.R.

16.345 HANDLE—ESCUTCHEON—SCREW—WASHER, Door

61-65	F.C.	3848873	side front, rear and intermediate door lock remote control	A.R.
61-65	GREENBRIER w/deluxe equip.	3787316	**ESCUTCHEON**, left or right, side front door and side intermediate door lock remote control	A.R.
ALL	F.C.	3718951	**SCREW**, side front and intermediate door lock remote control handle (sl. hd. $^{1}/_{4}$"—20 x $^{19}/_{32}$")—(16.270)	A.R.
61-63	F.C.	3817009	**WASHER**, side front and intermediate door lock remote control handle ($^{15}/_{2}$" I.D. x $1\,^{7}/_{8}$" O.D.)—(16.270)	A.R.

16.350 HANDLE—ESCUTCHEON—GASKET—RETAINER—SCREW, Door Lock Outside

61-65	F.C.	3773917	side front door outside	L.H.
61-65	F.C.		right, side front door outside,	
61-65	F.C. (exc. PICK-UP)	3773918	right, rear door outside	A.R.
61-64	F.C. (exc. PICK-UP)	3776251	**ESCUTCHEON**, side intermediate door lock locking lever	2
61	F.C. (exc. PICK-UP)	4587931	**GASKET**, side intermediate door lock cylinder—(12.249)	A.R.
61	F.C. (exc. PICK-UP)	3776252	**RETAINER**, side intermediate door lock locking lever escutcheon	2
61-65	F.C. (exc. PICK-UP)	4168122	**RETAINER**, side intermed. door outside handle—(10.513)	A.R.
61-65	F.C.	4577250	**SCREW**, side front door outside handle rear door outside handle ($^{1}/_{4}$"—20 x $^{5}/_{8}$")—(12.242)	A.R.
61-65	F.C. (exc. PICK-UP)	3842459	**SCREW**, side rear door and rear door lock safety ($^{1}/_{4}$"—28 x $^{17}/_{32}$")—(10.540)	A.R.

16.353 PARTS, Door Outside Handle

61-65	F.C. (exc. PICK-UP)	3778035	**ESCUTCHEON**, side intermediate rear door outside handle	L.H.
61-65	F.C. (exc. PICK-UP)	3778036	**ESCUTCHEON**, side intermediate door outside handle	R.H.
61-65	F.C.	3784051	**GASKET**, left side front	A.R.
61-65	F.C.	3773916	**GASKET**, side front door handle rear, rear door outside handle	A.R.
63-65	F.C.,			
61-64	F.C. (exc. PICK-UP)	3784052	**GASKET**, right side front, rear door outside handle front	A.R.
61-65	F.C. (exc. PICK-UP)	3778032	**GASKET**, left or right, side intermed. door outside handle	A.R.
61	F.C. (exc. PICK-UP)	4755272	**RETAINER**, side intermediate door lock cylinder gasket—(10.551)	A.R.
61-65	F.C.,			

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61	F.C. (exc. PICK-UP)	7015683	**RETAINER,** side front door lock stop ring, side intermediate door lock cylinder pawl—(10.551)	A.R.
61-65	F.C. (exc. PICK-UP)	4168353	**RETAINER,** rear door lock stop ring—(10.529)	A.R.
61-65	F.C.	4168356	**RING,** side front and rr. door lock outside handle pushbutton seal	A.R.
61-65	F.C.	3698886	**SEAT,** side door and rear door outside handle pushbutton spring ($1\frac{1}{2}$ I.D. x 1 O.D.)	A.R.
61-65	F.C. (exc. PICK-UP)	3778037	**SPRING,** left or right, side intermediate door outside handle seat	A.R.
61-65	F.C.	3698885	**SPRING,** side door and rear door outside handle pushbutton	A.R.
61	F.C. (exc. PICK-UP)	3788823	**SPRING,** side intermed. door lock handle return	2
62-65	F.C.	3813466	**SPRING,** side intermediate door lock outside handle return	2
61-65	F.C.	3698887	**STOP,** side door and rear door lock outside handle pushbutton	A.R.
61-65	F.C. (exc. PICK-UP)	3776243	**TRUNNION,** side intermediate and rear door lock rod	A.R.

16.360 HANDLE, Door Outside

61-65	F.C. (exc. PICK-UP)	3796368	side intermediate door	R.H.
61-65	F.C. (exc. PICK-UP)	3796367	side intermediate door	L.H.

16.365 CYLINDER ASSY.—CYLINDER UNIT, Door Outside

61-65	F.C.	3783484	side front and rear door outside handle (Note 1)	A.R.

NOTE 1. Cut 1" from end of shaft on all doors.

61	F.C. (exc. PICK-UP)	3888860	**CYLINDER UNIT,** side intermediate door lock—(10.550)	A.R.

16.370 SLEEVE—CAP, Door Outside Handle Lock Cylinder

61-65	F.C.	7016370	right, front and rear	A.R.
65	F.C.	7016374	left, front, side and rear door	A.R.
61-65	F.C.	7016371	**CAP,** front side, rear door—(10.552)	A.R.

16.400 BUMPER—SPACER, Door

61-65	F.C. (exc. PICK-UP)	3796366	side intermediate door outer door handle ($^{13}/_{16}$ O.D. x $^{15}/_{16}$ long)	A.R.
61-65	F.C.	3900684	side door rear upper ($^{33}/_{64}$ I.D. x $^{3}/_{4}$ O.D.)	2
61-63	F.C.	4565415	side door rear lor—(10.587)	2
61-65	GREENBRIER	3711168	body side front and rear window glass, body side rear and intermediate door window glass stop ($^{9}/_{16}$ dia. x $1\frac{1}{2}$ long)	A.R.
61-64	F.C. (exc. PICK-UP) (2nd design)	3812749	rear door outer	2
61-65	F.C. (exc. PICK-UP) (1st design)	3785718	**BUMPER ASSY.,** side rear, side intermediate and rear door outer ($^{17}/_{16}$ I.D. x 1 O.D.)	A.R.
61-65	F.C. (exc. PICK-UP)	3776353	**BUMPER ASSY.,** side rear, side intermediate and rear door ($1\frac{3}{8}$ x $1\frac{5}{8}$ w/2 holes)	A.R.
61-65	F.C. (exc. PICK-UP)	3778721	**SPACER,** side rear, intermediate and rear door bumper (1 x $^{5}/_{8}$" w/two $^{19}/_{64}$" dia. holes) (Note 1)	A.R.

NOTE 1. Attaching holes are $^{19}/_{64}$" dia. spaced $^{3}/_{4}$" in. center to center.

16.430 BRACKET ASSY.—RETAINER—SEAL, Door

61-62 63-65	F.C. (exc. PICK-UP), GREENBRIER, PANEL	3785743	w/arm rear door check	2
61-62 63-65	F.C. (exc. PICK-UP), GREENBRIER, PANEL	3785740	side rear and intermediate door check arm, side intermediate and side rear door check, left or right	A.R.
61-62 63-65	F.C. (exc. PICK-UP), GREENBRIER	3776641	**RETAINER,** side rear and intermediate door check arm seal	A.R.
61-62 63-65	F.C. (exc. PICK-UP), GREENBRIER	3776640	**SEAL,** side rear and intermediate check arm	A.R.

16.437 ARM—PIN, Door Check

61-65	F.C.	3813660	side front door check, w/guide	2
61-65	F.C.	3850740	**PIN,** side front door arm ($^{3}/_{8}$ dia. x $^{9}/_{16}$ long)	2

16.440 BRACKET, Door Check

61-65	F.C.	3773478	side front door arm to hinge pillar ($1\frac{1}{4}$ x $1\frac{47}{64}$)	2

16.464 GLASS, Back Window

61-65	PICK-UP	3879068	solid safety	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT

16.469 WEATHERSTRIP—RETAINER, Rear Corner Window

Not required in this group.

	See group 16.470	3847414	(rubber-50 ft. role)	
61-65	F.C.	3847415	**RETAINER** (rubber-50 ft. roll)—(16.471)	A.R.

16.470 WEATHERSTRIP, Back Window Glass

61-64	PICK-UP	3847414	(rubber—50 ft. roll)—(16.469)	A.R.
61-65	F.C. (exc. PICK-UP)	3778347	rear door window—(17.190)	2

16.471 RETAINER, Back Window Glass Weatherstrip

61-65	F.C.	3847415	(rubber—50 ft. roll)	A.R.

16.494 LAMP ASSY.—SWITCH ASSY., Dome and Courtesy

61-65	F.C.	2986057	dome (w/cable assy.)	1
61-65	GREENBRIER	4826444	**SWITCH ASSY.**, door jamb—(11.950)	A.R.
63	F.C.	4891633	**SWITCH ASSY.**, door jamb (use w/985574)—(11.950)	1

16.495 LENS—CLIP, Dome Lamp

61-65	F.C.	2973210	(plastic—$6^{3}/_{16}$ O.L.)	1
61-65	F.C.	2973324	**CLIP**, wire and bulb	A.R.

16.507 PANEL—FILLER—PILLAR ASSY., Door Hinge

61-65	F.C.	3777693	front door pillar trim	L.H.
61-65	F.C.	3777694	front door pillar trim	R.H.
61-65	F.C.	3774755	**FILLER**, front door pillar to outer rocker panel	L.H.
61-65	F.C.	3774756	**FILLER**, front door pillar to outer rocker panel	R.H.
61-65	F.C.	3775001	**PILLAR ASSY.**, front door (Note 1)	L.H.
61-65	F.C.	3775002	**PILLAR ASSY.**, front door (Note 1)	R.H.

NOTE 1 When using 3775001-2 PILLAR ASSY. on early 1961 models remove drip mouldings.

16.520 PANEL—PILLAR ASSY.—REINFORCEMENT, Door Body Lock

61-65	F.C. (exc. PICK-UP)	3772089	front door lock pillar outer	L.H.
61-65	F.C. w/body side door	3784967	**PILLAR ASSY.**, body side front door lock	L.H.
61-65	F.C. (exc. PICK-UP)	3784968	**PILLAR ASSY.**, body side front door lock	R.H.
61-64	SIDE RAMP	3778252	**PILLAR ASSY.**, side ramp door lock rear	R.H.
61-64	SIDE RAMP	3778430	**PILLAR ASSY.**, body side ramp door lock front	L.H.
61-65	F.C. (exc. PICK-UP)	3779237	**REINFORCEMENT ASSY.**, body side front door lock pillar lower	L.H.

16.544 SUPPORT, Toe Panel

61-65	F.C.	3789792		L.H.

16.545 PANEL—PANEL ASSY. and PARTS, Floor Board

61-65	F.C.	3838729	loading	1
61-65	F.C.	3781989	**PANEL ASSY.**, rear seat riser floor	1
61-65	F.C.	3774557	**PANEL ASSY.**, body rear	1
61-65	F.C.	3786498	**PANEL ASSY.**, engine compartment floor	1
61-65	F.C.	3844955	**PANEL ASSY.**, front seat riser (Note 1)	1

NOTE 1. When using on some models it will be necessary to provide hole for transmission linkage.

61-65	F.C.	3844968	**PANEL ASSY.**, front floor (Note 2)	1

NOTE 2 Models prior to 1964 require use of one brake main cylinder access hole cover 3844970.

61-63	F.C.	3776813	**BRACKET**, engine rear mounting crossmember—(7.011)	1
64-65	F.C.	3848811	**BRACE ASSY.**, engine rear mounting crossmember—(7.011) (Note 3)	1
61-65	F.C.	3856870	**MEMBER ASSY.**, engine upper and lower, cross w/door sill—(7.011)	1
61-65	F.C.	3783226	**OUTRIGGER**, side rail No. 3	R.H.
61-65	F.C. (exc. P.G.)	3820704	**PLATE**, front underbody to rear underbody	2
61-65	F.C.	3848410	**RAIL ASSY.**, side front	R.H.
61-64	SIDE RAMP	3778815	**RETAINER ASSY.**, underbody nut front	1
61-64	SIDE RAMP	3778819	**RETAINER ASSY.**, underbody nut intermediate	1
61-65	F.C.	3848809	**SILL ASSY.**, rear door	1
61-65	F.C.	3858293	**STRAINER**, rear door sill front	2
61-65	F.C.	3782298	**STRIP ASSY.**, rear suspension cross member support	2

NOTE 3. When using this assy. on Greenbrier and Panel models plug the 2 hinge slots in the rear face of rear door sill.

16.546 SUPPORT ASSY., Engine Compartment

61-65	F.C.	3774604	floor panel	R.H.

16.547 COVER and PARTS, Inspection

61-62	F.C. (1st design)	592865	brake main cylinder access hole—(12.980)	11
64-65	F.C.	3844970	brake main cylinder access hole	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62-64	F.C. (2nd design)	3817968	brake main cylinder access hole	1
61-63	F.C. w/air	3786099	**COVER ASSY.**, heater hole—(8.845)	1
61-65	F.C.	3848806	**CATCH**, engine access door lock striker	1
61-65	F.C.	3783222	**CATCH ASSY.**, battery access door	1
61-65	F.C.	3838704	**CHECK ASSY.**, engine access door	2
64-65	F.C.	3848746	**DOOR**, engine access	1
61-63	F.C.	3819229	**DOOR ASSY.**, engine access (Note 1)	1

NOTE 1. When using in place of 3812713, check assy. 3838704 must also be used.

61-65	F.C.	3783386	**GASKET**, engine access door lock	1
64-65	F.C.	3848805	**HANDLE**, engine access door—(8.080)	1
64-65	F.C.	3848799	**HINGE ASSY.**, engine access door	1
61-63	F.C.	3783385	**LATCH ASSY.**, w/handle, engine access door—(8.080)	1
64-65	F.C.	3848802	**LOCK ASSY.**, engine access door—(8.080)	1
ALL	ALL	4410574	**PLUG**, hinge access hole—(12.981)	A.R.
61-65	F.C.	3774797	**SEAL**, engine compartment floor panel and filler, frt. side and rear (41 1/2" long—rubber) (Note 2)	A.R.
61-65	F.C.	3773402	**SEAL**, body side rr. inner frt. upper panel (5/16 I.D. x 3/8 O.D. x 99 long) (neoprene closed cell tubing)	A.R.
61-62	F.C.	4308736	**SPRING**, motor compartment door latch bolt—(8.080)	1
61-62	F.C.	4308737	**SPRING**, motor compartment door handle lever—(8.080)	1

NOTE 2. Cut to required length.

16.548 HINGE and PARTS, Battery Access Door

61-65	F.C.	3781090	(11 3/4" long)	1
61-65	F.C.	3781082	**HANDLE**, lock (11 1/64 dev. length)	1
61-65	F.C.	3781084	**RETAINER ASSY.**, lock (2 7/32 w/two 19/64 dia. holes)	1
61-65	F.C.	3781092	**SEAL**, door to panel (38 5/8 long)	1
61-65	F.C.	3781089	**SPRING**, lock (7/16 dia. x 1 21/32 long)	1
61-65	F.C.	3781087	**STRIKER**, lock (1 7/16 x 1/2)	1

16.550 PANEL—EXTENSION ASSEMBLY—REINFORCEMENT—SHIELD, Dash and Toe

61-65	F.C.	3769921	body front outer	L.H.
61-65	F.C.	3769922	body front outer	R.H.
61-65	F.C.	3844816	**PANEL ASSY.**, toe (Note 1)	1
61-65	F.C.	3844798	**PANEL ASSY.**, body front center	1
61-65	F.C.	3844797	**PANEL ASSY.**, body front (complete) (Note 1 & 2)	1
61-65	F.C.	3844996	**PANEL ASSY.**, dash	1
61-65	F.C.	3774886	**EXTENSION ASSY.**, body front outer panel	R.H.
61-65	F.C.	3844801	**EXTENSION ASSY.**, body front outer panel	L.H.
61-65	F.C.	3789793	**REINFORCEMENT**, toe panel	1
64-65	F.C.	3860759	**SHIELD**, front end splash	1

NOTE 1. Models prior to 1964 require rework of the accelerator control.
NOTE 2 1961 models require use of 1964 w/w motor or reworking of the 1961 motor.
If 1964 motor is used the two lead wires must be interchanged at the harness assy. connector.

16.551 PANEL—GRILLE—OUTLET ASSEMBLY—REINFORCEMENT—SPACER, Cowl Side

61-65	F.C.	3776807	plenum outer	L.H.
61-65	F.C.	3776808	plenum outer	R.H.
61-65	F.C.	3844830	plenum center	1
61-65	F.C.	3774867	**GRILLE**, ventilator outlet	L.H.
61-65	F.C.	3774868	**GRILLE**, ventilator outlet	R.H.
61-65	F.C.	3774864	**OUTLET ASSEMBLY**, panel air	2
61-65	F.C.	3789794	**REINFORCEMENT**, toe panel support	1
61-64	F.C.	3789795	**SPACER** (1/2"dia. hole—1/8" thick)—(6.509) (Note 1)	1

NOTE 1 Use w/3789794 reinforcement added to bolt hole area of L.H. toe panel support.

16.553 MOULDING, Front Door

62-65	F.C.	3813681	hinge pillar drip	2

16.585 PANEL—FILLER—RAIL ASSY., Roof

61-64	PICK-UP	3770279	top	1
61-65	F.C.	3775608	front trim	1
61-65	GREENBRIER w/deluxe equip.	3788983	**FILLER**, bow (5/8 dial x 49 long x 1/16 thick)	12
61-64 65	PICK-UP, F.C.	3775487	**RAIL ASSY.**, front	1

16.603 PANEL—PLATE—SILL ASSEMBLY, Front Intermediate

61-65	F.C.	3769946	front outer front rocker	R.H.
61-65	F.C.	3777857	**PANEL ASSY.**, front outer rocker	L.H.
61-65	F.C.	3777858	**PANEL ASSY.**, front outer rocker	R.H.
61-65	F.C.	3775782	**PLATE**, front door opening front scuff	R.H.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT PARTS DIVISION

61-65	F.C.	3796424	**SILL ASSY.**, rear underbody intermediate cross	1

16.670 SEAT UNIT, Auxiliary

64	PANEL w/deluxe equip.	3847849	complete (beige and red)	1
64	PANEL w/deluxe equip.	3847850	complete (beige and med. fawn)	1
64	PANEL (exc. deluxe equip.)	3847851	complete (fawn and lt. fawn)	1

SEAT UNIT, Front

64	GREENBRIER	3847844	complete (lt. and med. fawn)	1

16.674 ATTACHING PARTS, Auxiliary Seat

62-64	PANEL	3816417	**BRACKET**, hinge lower	2
62-64	PANEL	3816418	**BRACKET**, hinge upper	2
62-64	PANEL	3816419	**SUPPORT**, rear	1

16.679 FRAME ASSY.—BOLT—NUT—SCREW ASSY., Seat

61-65	F.C.	3775195	front seat bottom, full width w/spring	1
61-63	F.C. (exc. PANEL)	3775196	front seat back cushion, full width w/spring	1
64-65	F.C.	3844896	front seat back cushion, full width w/spring	1
61-63	PANEL		**BOLT**, driver and auz. seat back adjusting,	
61-65	F.C.	3778535	front seat back adjusting ($^5/_{16}$—18 x $^7/_8$)	A.R.
62-63	PANEL w/full width seat	3789438	**NUT**, aux. seat lower brkt. to floor panel ($^5/_{16}$"—18) (2 holed tapping plate)—(7.238)	1
61-65	F.C.	3778537	**SCREW ASSY.**, seat back and rear leg ($^3/_8$—16 x $^3/_8$)	A.R.

16.682 ADJUSTER ASSY. and PARTS, Seat

61-65	F.C.	3776729		L.H.
61-65	F.C. w/full width seat	3776730		R.H.
61-64	PANEL (exc. full width seat)	3776768		R.H.
62-65	F.C.	3788988	**BOLT**, driver and front seat back bumper	2
61-65	F.C.	3719849	**SPRING**, adjuster return ($11^{51}/_{64}$ free length)	1
61-65	F.C. (exc. PANEL),			
61-64	PANEL w/full width seat	3776743	**SPRING**, adjuster locking rod ($7^3/_4$ free length)	1
61-65	F.C.	3775020	**SUPPORT ASSY.**, front seat track rear	1
61-65	F.C.	3777707	**SUPPORT ASSY.**, front seat track front	A.R.
61-65	F.C.	3787962	**RETAINER**, seat adjustment front support	2
61-64	PANEL		**RETAINER**, driver and aux. seat back cushion spring and frame assy. adj.,	
61-65	F.C. (exc. PANEL)	3788990	front seat back cushion spring and frame assy.	A.R.
64-65	F.C. w/full width seat	3776742	**ROD**, locking ($37^{19}/_{64}$" long)	1

16.714 BELT ASSY—BOLT—HOOK—NUT—PLATE ASSY.—RETRACTOR UNIT—SEALER—WASHER, Seat

NOTE Components of Seat Belt Assemblies are not available separately. To comply with specified safety standards, it is not recommended that integral retractors, buckles and inserts which are sewn into the belt be removed and replaced. Both right and left hand seat belt sections should be replaced as a unit. Many designs of metal inserts and buckles may look alike, may "false-latch" one into the other (without the specified st. may "false-latch" one into the other (without the specified strain), but are not interchangeable.

64	F.C.	3957807	driver and pass. (black)—(14.875)	A.R.
64	F.C.	3957843	driver and pass. (fawn)—(14.875)	A.R.
64-65	F.C.	3957864	front third seat rear, supplementary (black)	1
64-65	F.C.	3957862	front—(14.875)	2
	Not required in this group. See group 14.875	3957866		
	Not required in this group. See group 14.875	3957869		
	Not required in this group. See group 14.875	3957885		
62-63	GREENBRIER	3814733	**BOLT** ($^7/_{16}$"—20 x $^{27}/_{32}$")—(14.875)	2
64-65	F.C.	3828745	**BOLT** ($^7/_{16}$"—20 x $1^3/_8$")—(14.875)	A.R.
64-65	F.C.	3841314	**BOLT** ($^7/_{16}$"—20 x $^1/_4$")—(14.875)	A.R.
64-65	F.C.	3870527	**BOLT ASSY.**, front st. belt assy. ($^7/_{16}$ x $^{21}/_{32}$)	4
61	F.C.	4840719	**HOOK** (chrome) seat and coat—(15.388)	2
60-66	CORVAIR	3866766	**NUT**, floor panel bolt—(0.626)	A.R.
62-65	GREENBRIER	4496146	**PLATE ASSY.**, front wheelhouse seat belt anchor—(14.875)	2
64-65	F.C.	986068	**RETRACTOR UNIT**, seat belt—(14.875)	1
64-65	ALL	3841316	**SEALER**—(14.875)	A.R.

16.715 CUSHION ASSY.—BRACKET—LEG ASSY.—PLATE—REINFORCEMENT, Seat Bottom

62	GREENBRIER w/deluxe equip.	3815636	front (turquoise)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

62	GREENBRIER w/deluxe equip.	3815718	center or supplementary (fawn and med. fawn)	1
63	PANEL (exc. deluxe equip.)	3831501	auxiliary (lt. and med. fawn)	1
63	GREENBRIER (exc. deluxe equip.)	3831537	front (lt. and med. fawn)	1
63	GREENBRIER (exc. deluxe equip.)	3831570	center or supplementary (lt. and med. fawn)	1
63	PANEL w/deluxe equip.	3831579	auxiliary (beige and med. fawn)	1
64	PANEL w/deluxe equip. (exc. full width seat)	3846919	driver (beige and med. fawn)	1
64	PANEL, SIDE RAMP w/full width seat (exc. deluxe equip.)	3846921	front (lt. and med. fawn)	1
64	GREENBRIER (exc. deluxe equip.)	3846922	front (lt. and med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3846925	front (turquoise)	1
64-65	GREENBRIER w/deluxe equip.	3846926	front (lt. green)	1
64-65	GREENBRIER w/deluxe equip.	3846927	front (med. fawn)	1
64	GREENBRIER (exc. deluxe equip.)	3846929	rear and supplementary (lt. and med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3846930	rear and supplementary (red)	1
64-65	GREENBRIER w/deluxe equip.	3846931	rear and supplementary (turquoise)	1
64-65	GREENBRIER w/deluxe equip.	3846932	rear and supplementary (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3846933	rear and supplementary (lt. green)	1
64	PANEL (exc. deluxe equip.)	3847750	auxiliary (lt. and med. fawn)	1
64	PANEL w/deluxe equip.	3847752	auxiliary (beige and med. fawn)	1
64	PANEL w/deluxe equip.	3847753	auxiliary (beige and red)	1
65	F.C.	3867774	rear and supplementary (lt. and med. fawn)	1
61-65	GREENBRIER (2nd design)	3814168	**BRACKET,** supplementary seat mounting ($3^{5}/_{16}$ wide w/four $^{23}/_{64}$ dia. holes)	2
61-65	GREENBRIER	3778523	**LEG ASSY.,** rear center seat	1
61-65	GREENBRIER	3778515	**LEG ASSY.,** left, supplementary seat and center seat front	A.R.
61-65	GREENBRIER	3778516	**LEG ASSY.,** right, supplementary seat and center seat front	A.R.
61-65	GREENBRIER	3814170	**PLATE,** rear seat leg anchor ($1^{3}/_{64}$ x $8^{1}/_{64}$ w/two $^{23}/_{64}$ dia. holes and two slotted holes)	4
61-65	GREENBRIER	3814169	**PLATE,** supplementary seat leg anchor ($1^{3}/_{64}$ x $4^{7}/_{8}$ w/two $^{23}/_{64}$ dia. holes)	2
61-65	F.C.	3787963	**REINFORCEMENT,** front wheelhouse to front seat riser front	L.H.
61-65	F.C.	3787964	**REINFORCEMENT,** front wheelhouse to front seat riser front	R.H.

16.716 BUMPER—CLIP—NUT—RING, Seat

61	F.C.	3792828	driver and front seat back cushion ($^{7}/_{8}$" dia. x $^{7}/_{16}$" thick)—(8.024)	A.R.
61-65	F.C.	3722217	**CLIP,** cushion retainer	A.R.
61-63	GREENBRIER	142745	**NUT,** rear seat hold down bolt ($^{5}/_{16}$"—18) (wing type)—(8.920)	A.R.
ALL	ALL	4556605	**RING,** hog	A.R.

16.717 TRIM ASSY., Seat Cushion

61	GREENBRIER w/deluxe equip.	3786812	front (green and silver)	1
61	GREENBRIER (exc. deluxe equip., TAXI)	3784533	supplementary or center (dark gray)	1
63	PANEL (exc. deluxe equip.)	3794602	auxiliary (lt. and med. fawn)	1
64	GREENBRIER (exc. deluxe equip.)	3833882	front (lt. and med. fawn)	1
64	PANEL (exc. deluxe equip.)	3833890	driver (lt. and med. fawn)	1
64	PANEL w/full width seat, (exc. deluxe equip.), SIDE RAMP (exc. deluxe equip.)	3833894	front (lt. and med. fawn)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Detroit Parts USA

64	PANEL w/deluxe equip., full width seat,			
64	SIDE RAMP w/deluxe equip.	3842125	front (beige and med. fawn)	1
64	PANEL w/deluxe equip., full width seat,			
64	SIDE RAMP w/deluxe equip.	3842131	front (beige and red)	1
64-65	GREENBRIER w/deluxe equip.	3842137	front (turquoise)	1
64-65	GREENBRIER w/deluxe equip.	3842143	front (lt. green)	1
64-65	GREENBRIER w/deluxe equip.	3842233	rear and supplementary (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3842251	rear and supplementary (lt. green)	1
64-65	GREENBRIER w/deluxe equip.	3844525	front (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3844531	front (red)	1
65	F.C. (exc. deluxe equip.)	3865412	front (lt. and med. fawn)	1
65	F.C.	3865414	rear and supplementary (lt. and med. fawn)	1

16.720 CUSHION ASSY., Seat Back

61	GREENBRIER w/deluxe equip.	3788241	front (blue and silver)	1
62	GREENBRIER (exc. deluxe equip.)	3815690	center or supplementary (med. fawn and multi-colored)	1
62	GREENBRIER w/deluxe equip.	3815715	center or supplementary (turquoise and green)	1
63	GREENBRIER	3831538	front (lt. and med. fawn) (vinyl)	1
63	GREENBRIER (exc. deluxe equip.)	3831571	center or supplementary (lt. and med. fawn)	1
63	PANEL w/deluxe equip.	3831580	driver or auxiliary (beige and med. fawn)	1
63	GREENBRIER w/deluxe equip.	3831828	center or supplementary (beige and med. fawn)	1
64	PANEL (exc. deluxe equip.	3847726	driver or auxiliary (lt. and med. fawn)	1
64	PANEL w/deluxe equip. (exc. full width seat)	3847727	driver or auxiliary (beige and med. fawn)	1
64	PANEL w/deluxe equip. (exc. full width seat)	3847728	driver or auxiliary (beige and red)	1
64	GREENBRIER	3847729	front (lt. and med. fawn)	1
64	SIDE RAMP,			
64	PANEL w/full width seat (exc. deluxe equip.)	3847730	front (lt. and med. fawn)	1
64	F.C. w/deluxe equip., full width seat	3847731	front (beige and med. fawn)	1
64	F.C. w/deluxe equip., full width seat	3847732	front (beige and red)	1
64-65	GREENBRIER w/deluxe equip.	3847734	front (turquoise)	1
64-65	GREENBRIER w/deluxe equip.	3847735	front (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3847738	rear or supplementary (red)	1
64-65	GREENBRIER w/deluxe equip.	3847740	rear or supplementary (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3847741	rear or supplementary (lt. green)	1
65	F.C.	3867771	rear and supplementary (lt. and med. fawn)	1
65	F.C. (exc. deluxe equip.)	3867772	front (lt. and med. fawn)	1

16.724 TRIM ASSY., Seat Back

61	F.C. w/full width seat (exc. deluxe equip.)	3784516	front	1
62	GREENBRIER w/deluxe equip.	3797648	center or supplementary (turquoise and green)	1
63	GREENBRIER (exc. deluxe equip.)	3824958	rear or supplementary (lt. and med. fawn)	1
63	PANEL w/deluxe equip. (exc. full width seat)	3825555	driver or auxiliary (beige and med. fawn)	1
63	PANEL w/deluxe equip. (exc. full width seat)	3825566	driver or auxiliary (beige and red)	1
63	GREENBRIER w/deluxe equip.	3825598	front (turquoise)	1
63	GREENBRIER w/deluxe equip.	3825609	front (turquoise and green)	1
63	GREENBRIER w/deluxe equip.	3825622	center or supplementary (beige and fawn)	1

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

63	GREENBRIER w/deluxe equip.	3825647	center or supplementary (turquoise and green)	1
64	GREENBRIER	3833884	front (lt. and med. fawn)	1
64	SIDE RAMP w/deluxe equip.,			
64	PANEL w/deluxe equip., full width seat	3852750	front (beige and red)	1
64-65	GREENBRIER w/deluxe equip.	3842169	front (turquoise)	1
64	PANEL w/deluxe equip. (exc. full width seat)	3852752	driver or auxiliary (beige and med. fawn)	2
64-65	GREENBRIER w/deluxe equip.	3842259	rear or supplementary (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3842269	rear or supplementary (red)	1
64-65	GREENBRIER w/deluxe equip.	3844505	front (med. fawn)	1
64-65	GREENBRIER w/deluxe equip.	3844515	front (red)	1
65	F.C. (exc. deluxe equip.)	3865413	front (lt. and med. fawn)	1
65	F.C.	3865415	rear and supplementary (lt. and med. fawn)	1

16.742 PAD—PANEL—REINFORCEMENT, Top Lining

61-66	F.C.	3885867	front trim (vinyl coated, jute felt web grain) ($30^{3}/_{64}$ x 49) (Note 1 & 2)	A.R.

NOTE 1 Used on models w/o front roof bow.
NOTE 2 Cut as required.

61-65	F.C. (exc. PICK-UP)	3818138	front, intermediate and rear (vinyl coated, jute felt—web grain) (Note 3)	A.R.

NOTE 3 Cut to required shape. Used on models w/front roof bow.

61-65	F.C. (exc. PICK-UP)	3776827	**PANEL,** roof side rear trim	1
61-65	F.C.	3775580	**PANEL,** windshield header inner	1
61-65	F.C.	3772797	**PANEL,** windshield header outer	1
61-65	F.C. (exc. PICK-UP)	3786849	**PANEL,** roof side front trim	L.H.
61-65	F.C. (exc. PICK-UP)	3786850	**PANEL,** roof side front trim	R.H.
61-65	F.C. (exc. PICK-UP)	3775511	**PANEL,** roof side rear corner trim	L.H.
61-65	F.C. (exc. PICK-UP)	3775512	**PANEL,** roof side rear corner trim	R.H.
61-65	F.C. (exc. PICK-UP)	3776825	**PANEL ASSY.,** roof side rear trim	L.H.
61-65	F.C. (exc. PICK-UP)	3776826	**PANEL ASSY.,** roof side rear trim	R.H.

16.760 FELT, Cushion and Back

62-63	F.C.	3829935	insulator (35" x 100 yds. long)—(15.492) (Note 1)	A.R.

NOTE 1 This part number consists of 1 yd. of felt, to be furnished in a 100 yd. roll.

16.790 EXTENSION—PANEL—PLATE—SEAL, Body Side

61-65	F.C.	3779961	front outer rear rocker panel reinforcement	L.H.
61-65	F.C.	3779962	front outer rear rocker panel reinforcement	R.H.
61-64	SIDE RAMP	3778816	underbody closing panel front	R.H.
61-63	SIDE RAMP	3785444	**PANEL,** underbody closing	R.H.
61-63	F.C. w/left body side door,			
64-65	F.C. (exc. SIDE RAMP)	3844981	**PANEL ASSY.,** body side rocker	L.H.
61-65	F.C. (exc. PICK-UP, left body side door)	3774957	**PANEL ASSY.,** body side inner rocker	L.H.
61-65	F.C.	3776802	**PANEL ASSY.,** front inner front rocker	R.H.
61-64	SIDE RAMP	3784932	**PANEL ASSY.,** rocker	R.H.
61-65	F.C.	3844809	**PANEL ASSY.,** front inner front rocker	L.H.
61-65	F.C. (exc. PICK-UP)	3844982	**PANEL ASSY.,** body side rocker	R.H.
61-65	F.C.	3775783	**PLATE,** front door opening rear scuff	L.H.
61-65	F.C.	3775784	**PLATE,** front door opening rear scuff	R.H.
61-65	GREENBRIER	3781519	**PLATE,** side intermediate door scuff	1
61-65	GREENBRIER	3773402	**SEAL,** body side rear inner trim front upper panel ($^{5}/_{32}$" I.D. x $^{3}/_{8}$" O.D. x 99 long) (neoprene closed cell tubing)—(16.547)	A.R.
63-65	GREENBRIER		**SEAL,** side intermediate and side rear door trim,	
64-65	F.C.	3796626	front door inner trim panel	A.R.

16.800 MAT—INSULATOR—PAD, Floor and Toe

61-63	F.C. (exc. deluxe equip. heater)	3833992	panel (black)	1
61-65	GREENBRIER (exc. TAXI, deluxe equip.)	3781460	rear floor (black)	1
65	F.C. (exc. deluxe equip.)	3844885	panel (black)	1
64-65	GREENBRIER w/deluxe equip.	3844903	panel (dark fawn)	1
61-62	F.C. (exc. PICK-UP)	3774882	**INSULATOR,** engine compt. floor panel rear—(16.810)	1
61-65	GREENBRIER	3838733	**PAD,** rear floor mat	L.H.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts

61-65	GREENBRIER	3781492	**PAD,** rear floor mat	R.H.
61-64	SIDE RAMP	3776592	**PAD,** ramp door scuff ($3^{11}/_{16}$ x $49^{25}/_{64}$)	1

16.804 MAT, Body Side

61-65	GREENBRIER w/deluxe equip.	3789585	front whlhse. panel (green)	L.H.
62-65	GREENBRIER w/deluxe equip.	3814157	front whlse. (dark fawn)	L.H.

16.810 INSULATOR—ROD, Floor

61-65	F.C. (exc. PICK-UP)	3774882	engine compartment panel (Note 1)	A.R.
	NOTE 1. Cut to required size.			
61-65	F.C. (exc. PICK-UP)	3774881	**ROD,** engine compt. floor panel insulator retaining ($28^{1}/_{8}$ dev. length)	A.R.

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GROUP 17.000

SINGLE AND DOUBLE UNIT BODY PARTS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

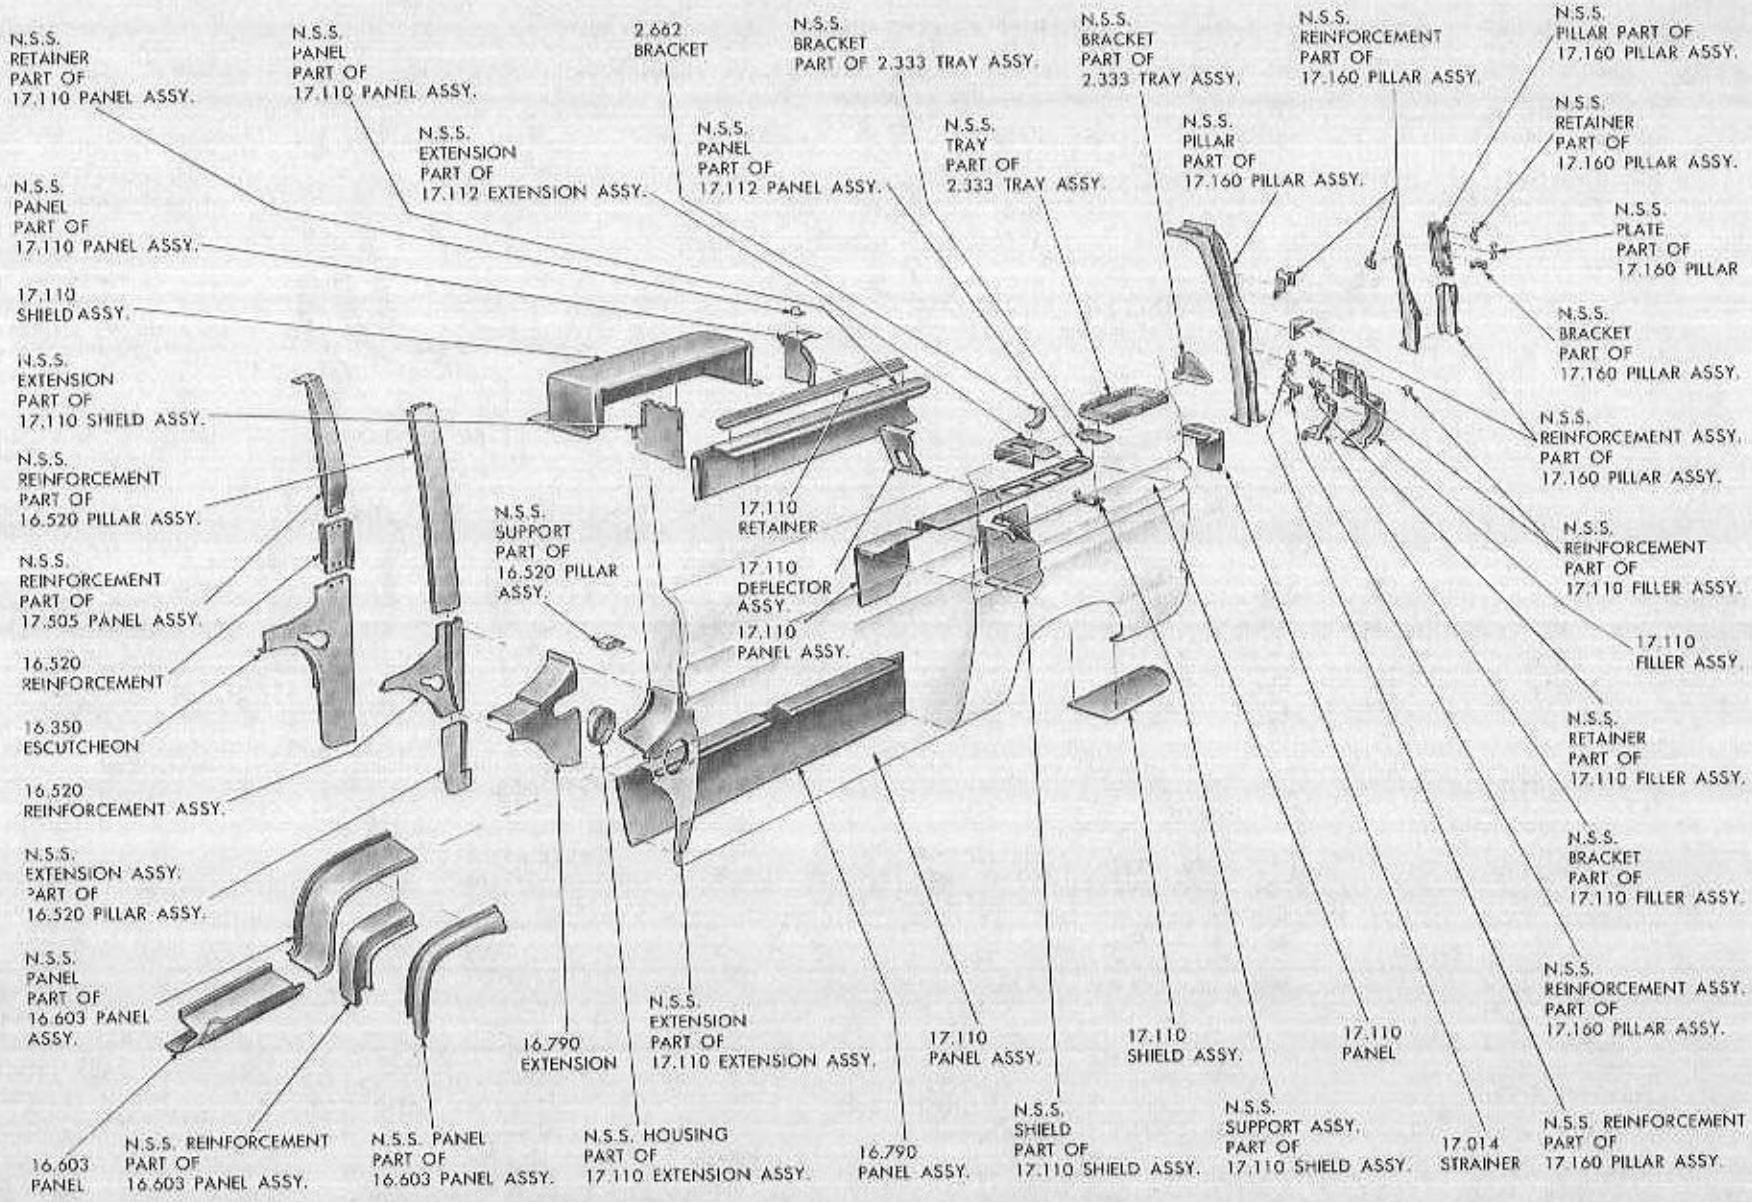

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

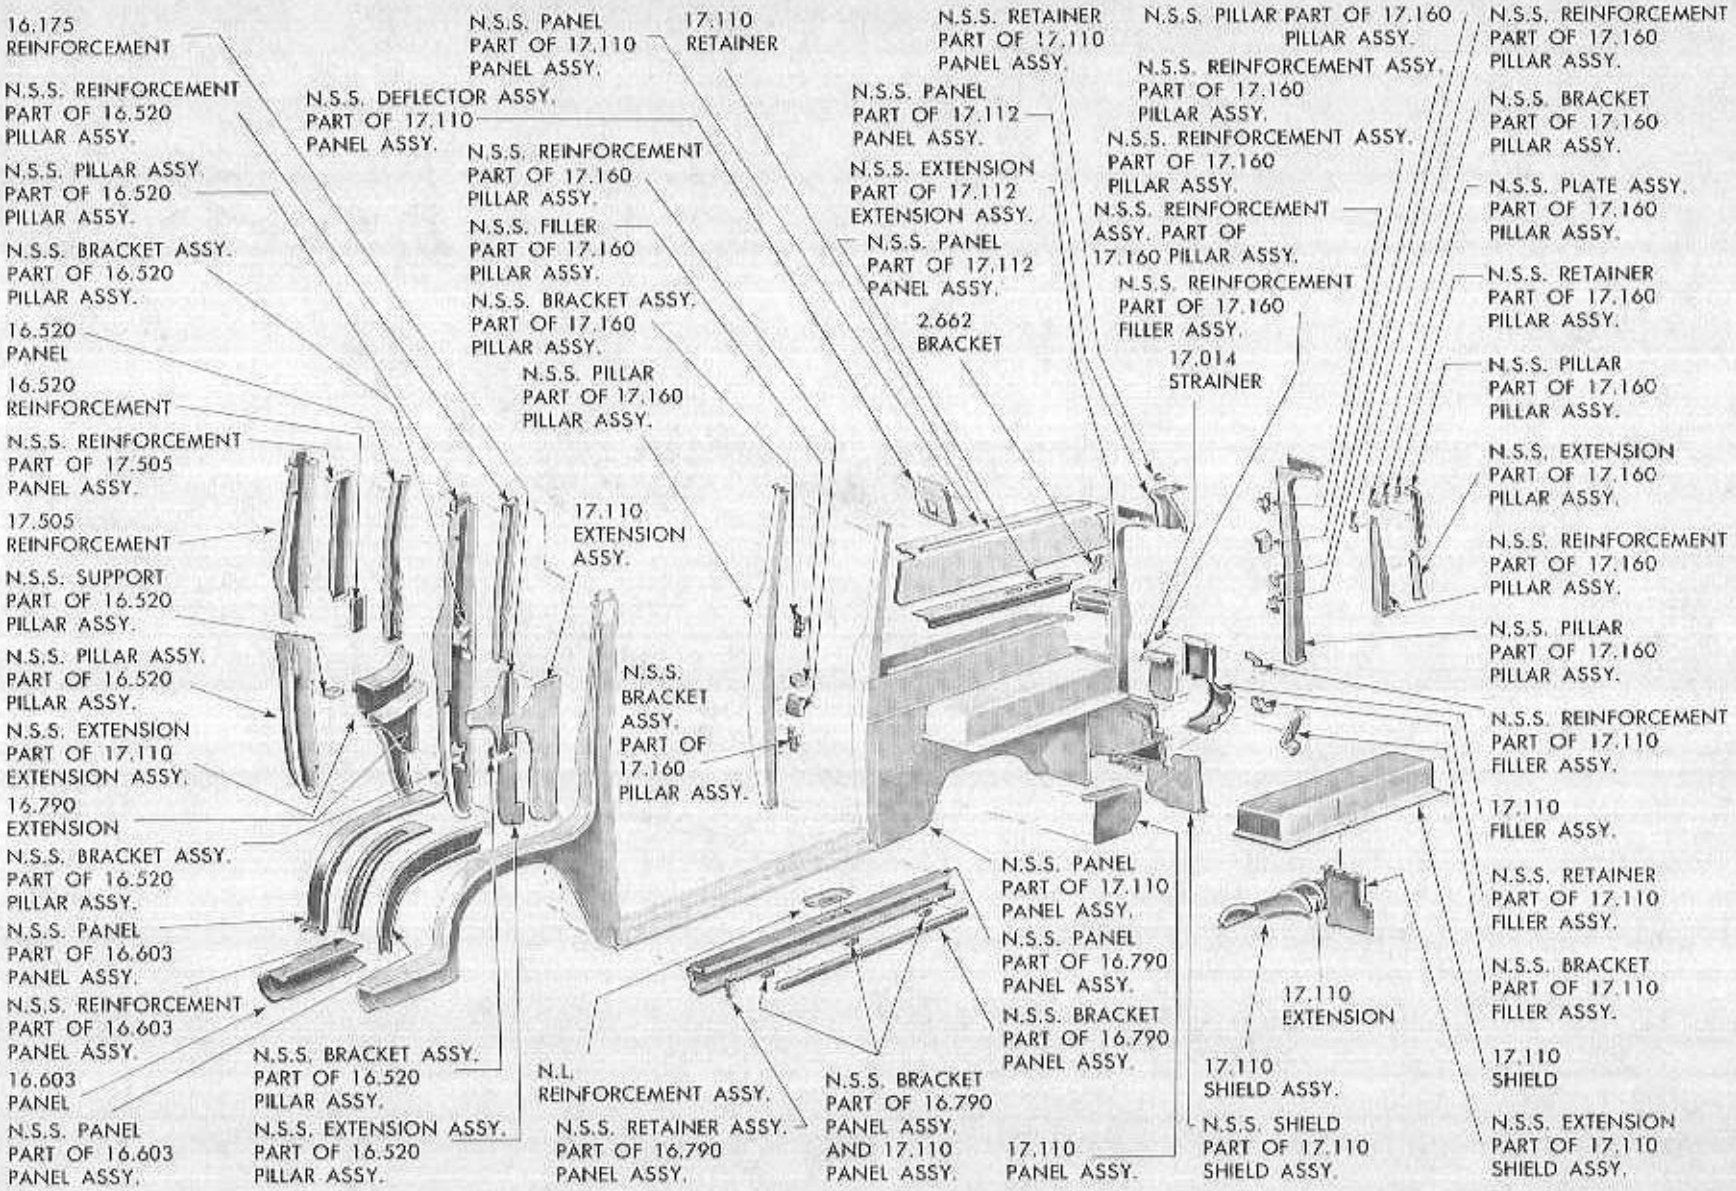

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

1961-65 CORVAIR F.C. REAR UNDERBODY ASSEMBLY—(EXPLODED)

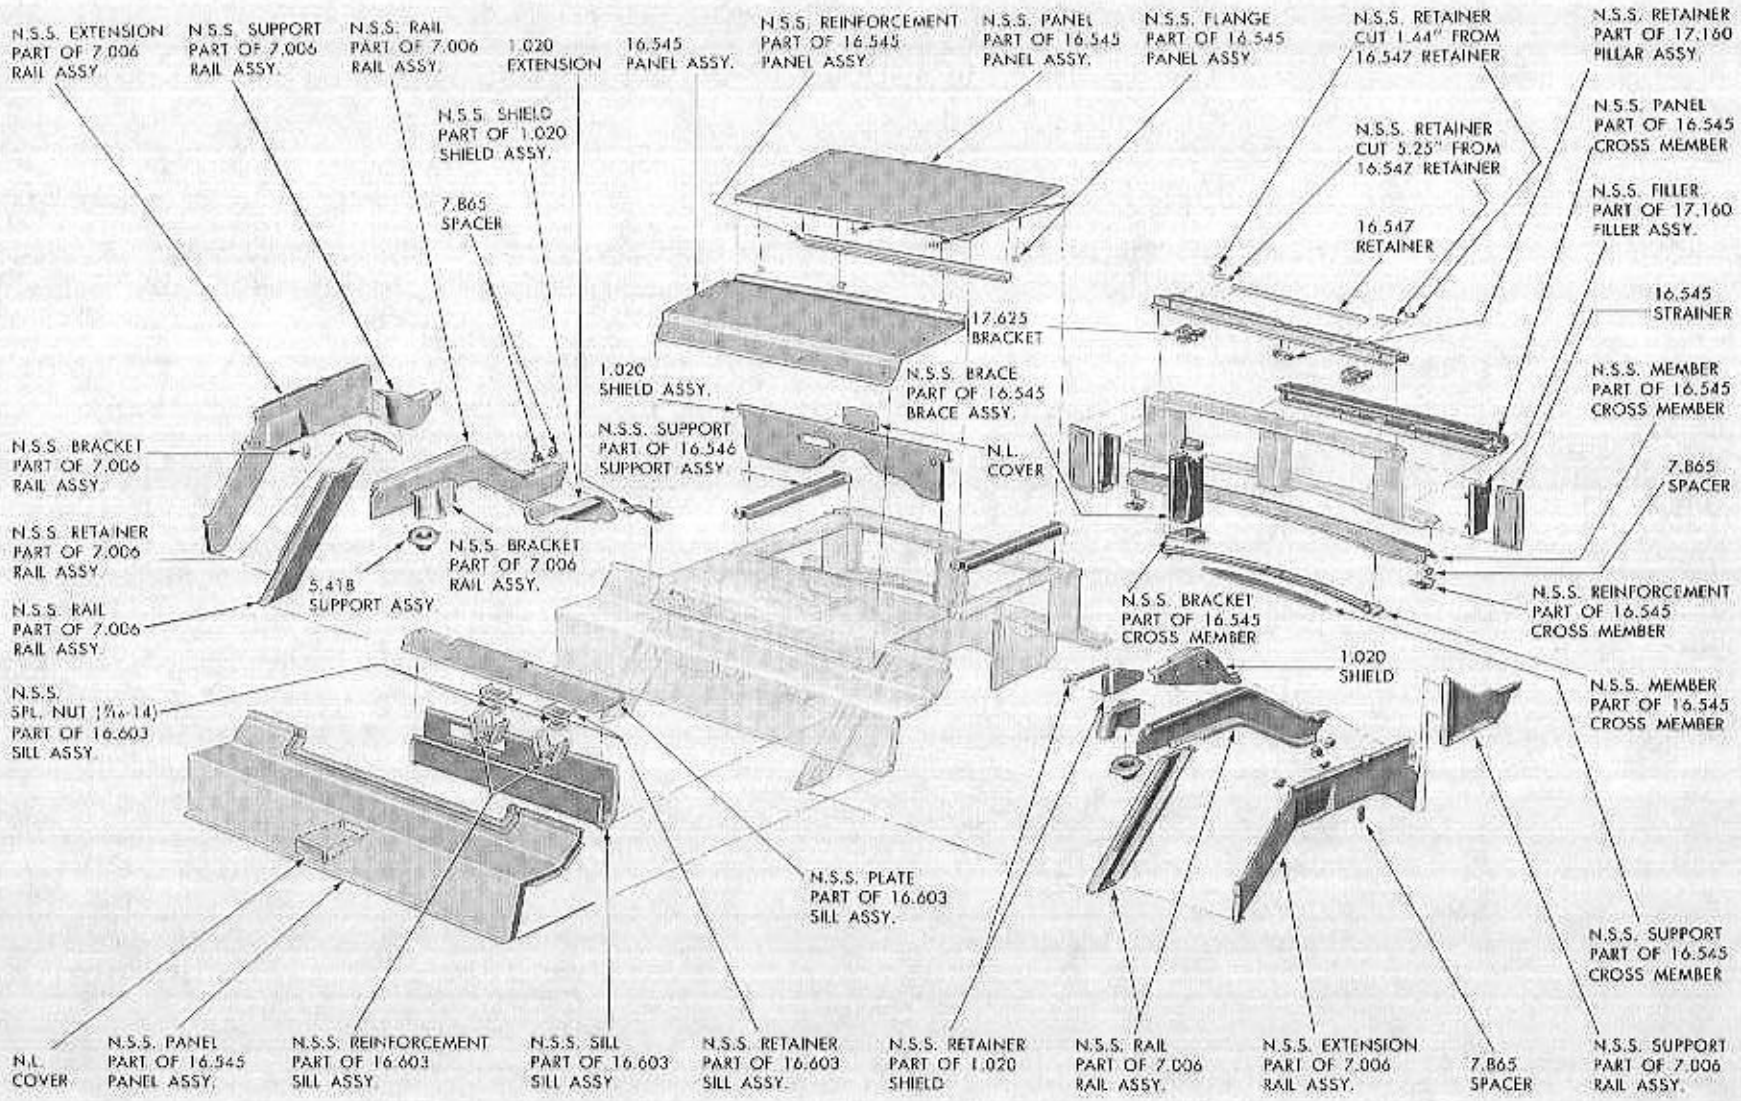

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

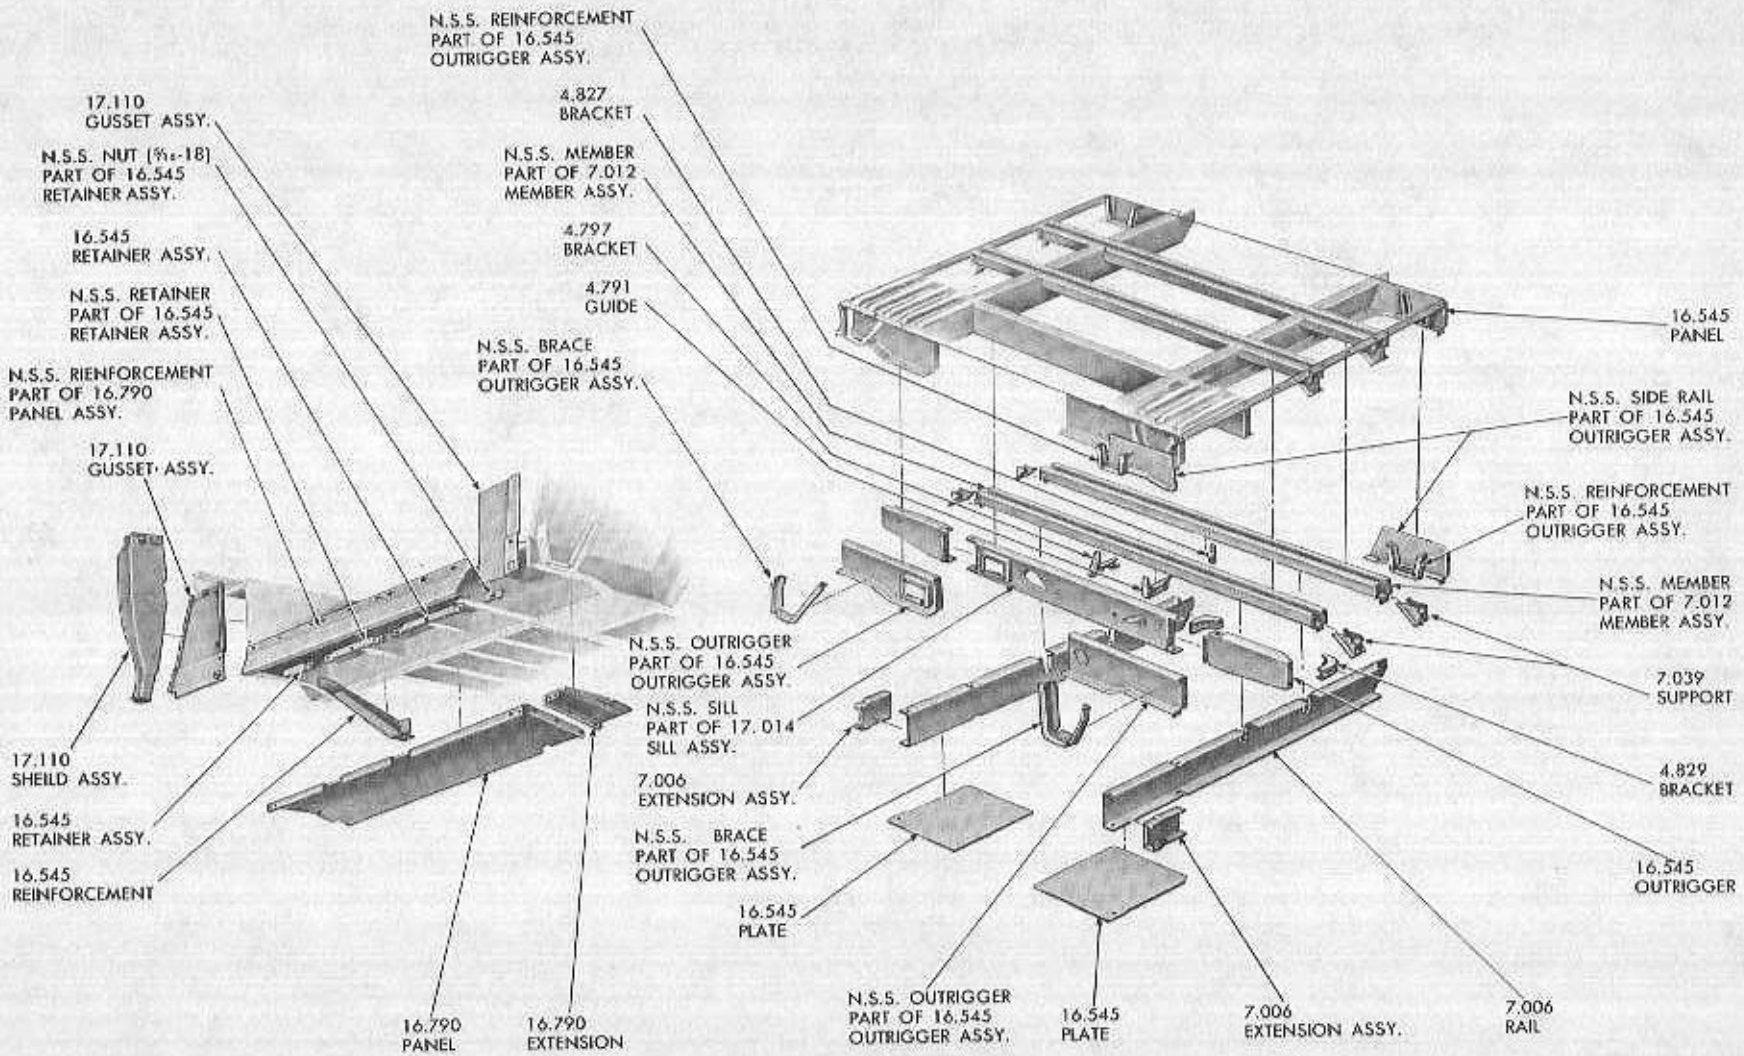

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration Parts DETROIT IRON

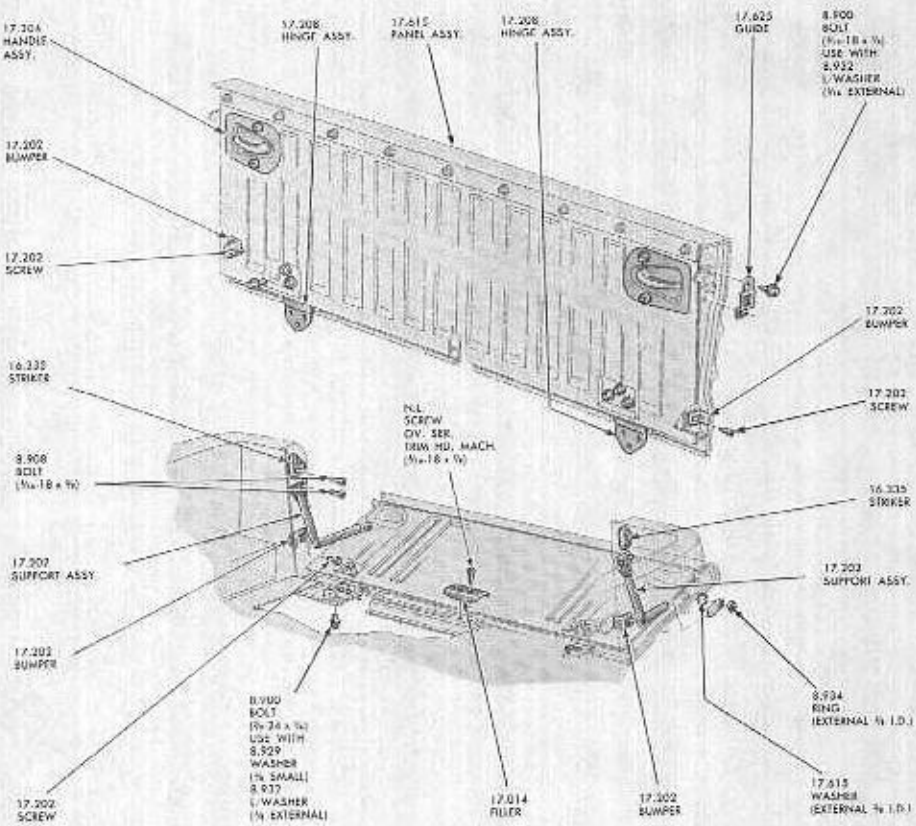

1961-64 CORVAIR PICK-UP END GATE DETAILS

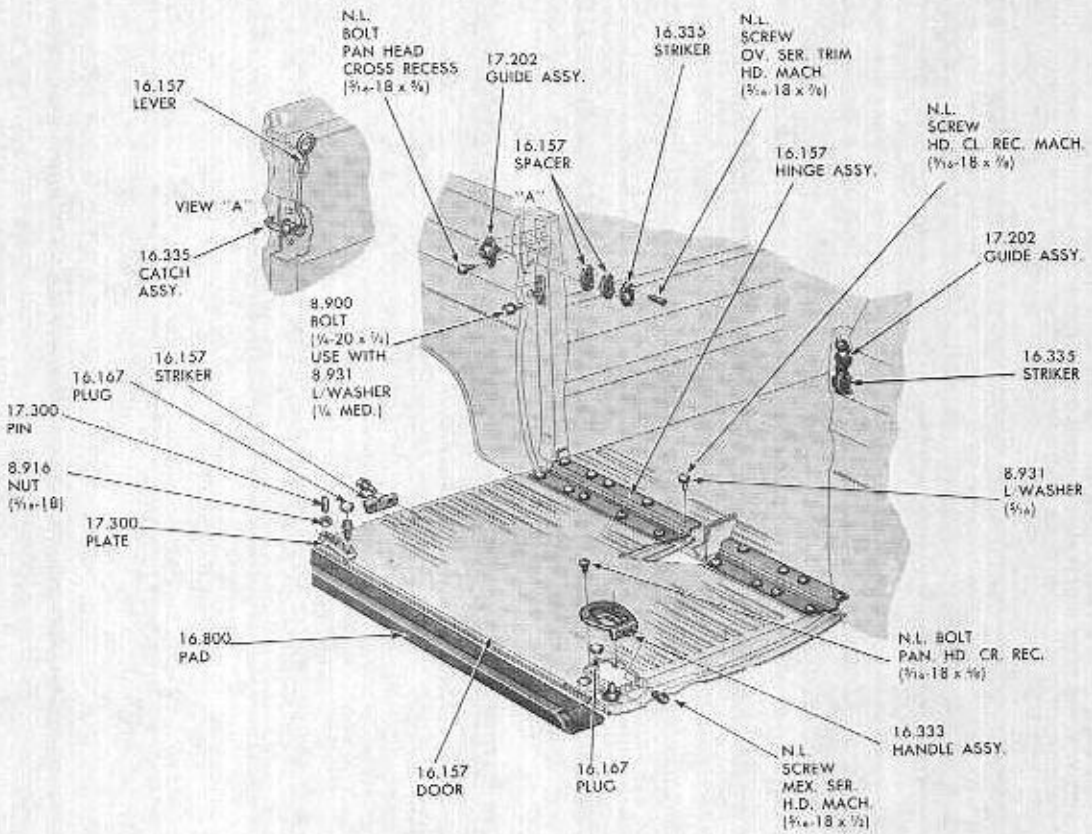

1961-64 CORVAIR SIDE RAMP DETAILS

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

17.014 STRAINER, Cross

61-65	F.C.	3777209	rear door sill rear	L.H.
61-65	F.C.	3777210	rear door sill rear	R.H.

17.060 TOP ASSY., Roof

61-65	F.C. (exc. PICK-UP)	3795020	(prime coated)	1

17.070 INSULATOR—NUT ASSY.—SCREW—SUPPORT, Luggage

ALL	ALL	3788017	roof cross strap center—(12.815) (Note 1)	A.R.

NOTE 1 Cut as required.

61-65	F.C. (exc. PICK-UP)	528846	**NUT ASSY.**, luggage carrier to roof top (^{1}S"—20)—(12.815) (Note 2)	A.R.

NOTE 2 Use with unit 988398.

ALL	ALL	3892100	**SCREW**, luggage carrier rack strap to support assy. (special trim head cross recess machine) (No. 8—32 x $1\frac{1}{8}$")—(12.815)	6
61-65	F.C.	3784108	**SUPPORT**, right—(12.815)	3

17.110 SIDE ASSY. and PARTS, Body

61-64	SIDE RAMP	3820485		L.H.
61-64	SIDE RAMP	3820484		R.H.
61-64	PANEL w/left body side door	3816145		L.H.
61-65	PANEL	3848374		R.H.
62-65	GREENBRIER	3848376		R.H.
61-64	PANEL (exc. body side door)	3848379		L.H.
61-65	GREENBRIER (exc. left body side door)	3848377		L.H.

BODY SIDE PARTS

61-64	GREENBRIER (exc. left body side door)	3779198	**BRACKET ASSY.**, front window regulator mounting plate	1
61-65	GREENBRIER w/deluxe equip.	3844806	**COVER ASSY.**, spare tire (charcoal)	1
61-65	F.C.	3781612	**EXTENSION ASSY.**, front outer panel (Note1)	R.H.
61-65	F.C.	3780911	**EXTENSION ASSY.**, front outer panel	L.H.
61-65	F.C.	3775558	**EXTENSION ASSY.**, rear splash shield	R.H.
61-63	PICK-UP	3776521	**EXTENSION ASSY.**, lower inner panel	L.H.
61-63	PICK-UP	3776522	**EXTENSION ASSY.**, lower inner panel	R.H.
61-65	F.C.	3775738	**FILLER ASSY.**, rear lower panel	R.H.
61-64	PICK-UP	3778561	**PANEL**, upper inner	L.H.
61-64	PICK-UP	3778562	**PANEL**, upper inner	R.H.
61-64	PANEL	3858277	**PANEL**, rear upper (Note 2)	L.H.

NOTE 2. PANEL may have round or square hole for rear door outer bumper. If necessary, enlarge square hole to $^{23}/_{64}$" dia. and use 1-3812749 bumper, 2-3716779 screws and 2-124829 nuts.

61-65	PANEL	3858276	**PANEL**, rear upper	R.H.
61-65	GREENBRIER	3858279	**PANEL**, rear upper	L.H.
61-65	GREENBRIER	3858274	**PANEL**, rear upper	R.H.
61-64	SIDE RAMP	3778438	**PANEL**, front inner	1
61-64	SIDE RAMP	3858268	**PANEL**, front outer	R.H.
61-65	GREENBRIER	3774789	**PANEL**, front inner trim	L.H.
61-65	F.C.	3778503	**PANEL ASSY.**, side rear lower (Note 1)	L.H.
61-65	F.C.	3778504	**PANEL ASSY.**, side rear lower (Note 1)	R.H.
61-65	F.C.	3781191	**PANEL ASSY.**, front wheelhouse	L.H.
61-65	F.C.	3781192	**PANEL ASSY.**, front wheelhouse	R.H.
61-65	F.C. (exc. PICK-UP)	3783683	**PANEL ASSY.**, rear inner front upper (Note 3)	L.H.
61-65	F.C. (exc. PICK-UP)	3849458	**PANEL ASSY.**, rear inner front upper (Note 3 & 4)	R.H.

NOTE 3. PANEL ASSY. may require bumper reinforcement. Drill holes or plug holes as required.
NOTE 4. It may be necessary to add rubber seal.

61-65	GREENBRIER	3776864	**PANEL ASSY.**, rear quarter window inner	R.H.
61-65	GREENBRIER (exc. left body side door)	3770121	**PANEL ASSY.**, front outer	L.H.
61-64	PANEL (exc. left body side door)	3770117	**PANEL ASSY.**, front outer	L.H.
61-64	PICK-UP	3785269	**PANEL ASSY.**, lower inner	L.H.
61-64	PICK-UP	3776525	**PANEL ASSY.**, front lower outer	L.H.
61-64	PICK-UP	3776037	**PANEL ASSY.**, upper outer corner	L.H.
61-64	PICK-UP	3776038	**PANEL ASSY.**, upper outer corner	R.H.
61-64	PICK-UP	3778563	**PANEL ASSY.**, upper inner corner	L.H.
61-64	PICK-UP	3778564	**PANEL ASSY.**, upper inner corner	R.H.
61-65	F.C.	3858276	**PANEL ASSY.**, rear, upper right (primed) (Note 5)	1

NOTE 5. Add $^{23}/_{64}$" dia. hole for rr. door rubber bumper on 1961-62 and early 1963 models.

61-65	GREENBRIER (exc. left body side door)	3775152	**PLATE**, front panel front window regulator mounting (10 O.L.)	1

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT

61-65	GREENBRIER (exc. left body side door)	3775153	**PLATE,** front panel rear window regulator mounting (10 O.L.)	1
61-64	F.C. (exc. GREENBRIER)	3780536	**PLUG,** inner rocker panel and access holes ($3^{1}/_{64}$ x $^{1}/_{4}$ thick) (silver)	A.R.
61-64	PANEL (exc. left body side door)	3783168	**REINFORCEMENT ASSY.,** outer panel	L.H.
61-64	PANEL	3784905	**REINFORCEMENT ASSY.,** rear outer panel front	L.H.
61-64	PANEL	3784906	**REINFORCEMENT ASSY.,** rear outer panel front	R.H.
61-65	GREENBRIER	3780722	**RETAINER,** rear quarter window inner panel	R.H.
61-65	GREENBRIER w/deluxe equip. (exc. body side door)	3788817	**RETAINER,** body side front trim panel (1 x $1^{13}/_{16}$" w/two $^{11}/_{64}$" dia. holes)—(16.165)	1
61	F.C. (exc. PICK-UP)		**SEAL,** body side rr. inner front and rr. upper panel and inner rocker panel.	
61	PICK-UP		body side splash shield and rr. stake pocket air deflector.	
61	F.C.		body side center splash shield,	
61	SIDE RAMP	3827365	center stake rear filler ($^{9}/_{16}$" edge grip—$^{3}/_{4}$")—(8.154)	A.R.
61-65	F.C.	3775408	**SHIELD,** body side front splash	1
61-65	F.C.	3783691	**SHIELD ASSY.,** side center splash	L.H.
61-64	SIDE RAMP	3778426	**SHIELD ASSY.,** splash	R.H.
61-65	F.C.	3775401	**SHIELD ASSY.,** rear splash	L.H.
61-65	F.C.	3775402	**SHIELD ASSY.,** rear splash	R.H.
61-65	F.C. (exc. PICK-UP, left body side door)	3774938	**STRAINER ASSY.,** front panel	1

NOTE 1. May be necessary to cut slots for door hinges. Use old part as a guide.

17.112 PANEL—EYELET—EXTENSION ASSY.—SCREW, Body Side Trim

64-65	GREENBRIER	3844551	body side rear inner trim (Note 1)	L.H.
64-65	GREENBRIER	3844552	body side rear inner trim (Note 1)	R.H.

NOTE 1 Paint as required.

61-65	F.C. (exc. PICK-UP)	3783795	**PANEL ASSY.,** body side rear inner rear	L.H.
61-65	F.C. (exc. PICK-UP)	3783796	**PANEL ASSY.,** body side rear inner rear	R.H.
62-63	GREENBRIER w/deluxe equip. (exc. left body side door)	3814461	**PANEL ASSY.,** body side front trim (fawn)	L.H.
62-63	GREENBRIER w/deluxe equip.	3798080	**PANEL ASSY.,** body side rear trim (turquoise)	R.H.
64-65	GREENBRIER w/deluxe equip.	3844685	**PANEL ASSY.,** body side rr. trim (fawn)	L.H.
64-65	GREENBRIER w/deluxe equip.	3844686	**PANEL ASSY.,** body side rr. trim (fawn)	R.H.
64-65	GREENBRIER w/deluxe equip.	3844691	**PANEL ASSY.,** body side rr. trim (lt. green)	L.H.
64-65	GREENBRIER w/deluxe equip.	3844692	**PANEL ASSY.,** body side rr. trim (lt. green)	R.H.
64-65	GREENBRIER w/deluxe equip. (exc. left side door)	3844751	**PANEL ASSY.,** body side frt. trim (red)	L.H.
64-65	GREENBRIER w/deluxe equip. (exc. left side door)	3844753	**PANEL ASSY.,** body side frt. trim (turquoise)	L.H.
64-65	GREENBRIER w/deluxe equip. (exc. left side door)	3844757	**PANEL ASSY.,** body side frt. trim (lt. green)	L.H.
61-65	GREENBRIER w/deluxe equip.	3787311	**EYELET,** side door and side trim panel—(16.165)	A.R.
61-65	F.C. (exc. PICK-UP)	3783797	**EXTENSION ASSY.,** body side rear inner rear panel	L.H.
62-65	F.C. (exc. PICK-UP)	3783798	**EXTENSION ASSY.,** body side rear inner rear panel	R.H.
61-65	GREENBRIER w/deluxe equip.	4667286	**SCREW,** w/washer, side rear trim panel assy., left and right oval hd. cr. rec. 8-18—6 x $^{5}/_{8}$ (chrome)	A.R.

17.136 GLASS and PARTS, Window

61-65	GREENBRIER	3772352	rear quarter	2
61-65	GREENBRIER	3772380	body side frt. panel frt. and rr. window, side intermediate door and side rr. door window	A.R.
61-65	GREENBRIER (exc. left body side door)	3824837	**CHANNEL ASSY.,** body side front window glass run front	1
61-65	GREENBRIER (exc. left body side door)	3824840	**CHANNEL ASSY.,** body side front window glass run rear	1
61-65	GREENBRIER (exc. left body side door)	3824841	**CHANNEL ASSY.,** body side rear window glass run front	1
61-65	GREENBRIER (exc. left body side door)	3824842	**CHANNEL ASSY.,** body side rear window glass run rear	1
61-65	GREENBRIER	3776856	**RETAINER,** rear quarter window glass	8

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

61-65	GREENBRIER	3771995	**SASH ASSY.**, body side front panel frt. and rr. window lwr. side intermediate door and rr. dr. window lower	A.R.
61-65	GREENBRIER	3777045	**WEATHERSTRIP**, rear quarter window	2
61-64	F.C. (exc. PICK-UP)	3778347	**WEATHERSTRIP**, rear window glass—(17.190)	2

MOULDING—MOULDING ASSY., Window Garnish

61-65	GREENBRIER	3776857	rear quarter window garnish	2
61-65	GREENBRIER (exc. left body side door)	3775557	**MOULDING ASSY.**, body side front panel front and rear window garnish	A.R.

17.160 PILLAR ASSY.—FILLER ASSY., Door and End Gate Hinge

61-65	F.C. (exc. PICK-UP)	3796853	body rear door hinge	L.H.
61-65	F.C. (exc. PICK-UP)	3796854	body rear door hinge	R.H.
61-65	F.C. (exc. PICK-UP)	3775166	body side rear door hinge	R.H.
61-64	PCIK-UP	3820487	end gate	L.H.
61-64	PICK-UP	3820488	end gate	R.H.
61-65	F.C.	3819225	**FILLER ASSY.**, rear door sill strainer	L.H.
61-65	F.C.	3819226	**FILLER ASSY.**, rear door sill strainer	R.H.

17.190 WEATHERSTRIP, End Gate

Not required in this group.
See group 16.470 3778347

17.202 SUPPORT ASSY.—BUMPER—GUIDE ASSY., Side Ramp and End Gate

61-64	PICK-UP	3838944	end gate	1
61-66	PICK-UP	4826780	**BUMPER**, end gate—(12.212)	A.R.
61-64	SIDE RAMP	3776593	**GUIDE ASSY.**, ramp door	2

17.204 HANDLE ASSY., End Gate Lock

61-64	PICK-UP	3787755	end gate w/lock	L.H.
61-64	PICK-UP	3787756	end gate w/lock	R.H.

17.208 PARTS, End Gate Hinge

61-64	PICK-UP	3828536	**BUSHING** ($^{11}/_{32}$" I.D. x $^{11}/_{32}$" x $^{15}/_{32}$" long)—(10.464)	4
61-64	PICK-UP	3718497	**PIN** ($^{11}/_{32}$" dia. x $3\,^{3}/_{16}$" long)—(16.323)	2
ALL	ALL	274676	**RING**, retaining outer limk pin ($^{5}/_{16}$" I.D.)—(8.934)	A.R.

17.225 SEAL, Engine Access Door

61-65	F.C.	3850793	upper	1
61-65	F.C.	3850794	lower	1

17.300 PIN—PLATE, Ramp Door Guide

61-64	SIDE RAMP	3776764		2
61-64	SIDE RAMP	3776765	**PLATE**, pin mounting	2

17.405 SUPPORT, Platform

61-64	PICK-UP w/level floor	3787036	floor loading center platform	2

17.447 BUSHING, Platform

61-64	PICK-UP	3787029	($^{3}/_{16}$) leg.	1

17.505 PANEL ASSY.—BRACKET—PILLAR ASSY., Body

61-64	PICK-UP	3776021	side upper outer	L.H.
61-64	SIDE RAMP	3778250	side rear upper outer	R.H.
61-64	PICK-UP	3778559	**BRACKET**, body side upper inner panel mounting rear	2
61-64	PICK-UP	3784005	**PILLAR ASSY.**, lock upper	L.H.
61-64	PICK-UP	3784006	**PILLAR ASSY.**, lock upper	R.H.

17.507 CLIP, Body Side Outer Panel

61-65	F.C.		to attach body side door name plate,	
61 64	PICK UP	3770339	to attach end gate name plate—(8.147)	A.R.

17.615 PANEL—MOULDING—PLATE—SCREW—WASHER, End Gate and Rear Door

61-64	PICK-UP	3770268	end gate outer	1
61-64	PICK—UP	3838980	**PANEL ASSY.**, end gate	1
61-65	F.C. w/deluxe equip.	3782008	**MOULDING**, end gate and rear door trim (plastic w/red reflectorized painted center) ($11\,^{39}/_{64}$ x $2\,^{27}/_{64}$)	2
61-64	PICK-UP		**PLATE**, end gate,	
62-65	F.C. (exc. PICK-UP)	3776088	right, rear door, name	1
61-65	F.C. w/deluxe equip.	161867	**SCREW**, end gate and rear door reflector (cr. rec. tapping 8—15 x $^{1}/_{2}$")—(8.977)	6
61-64	PICK-UP	4239333	**WASHER**, support to end gate panel	2

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."

GM Restoration DETROIT

61-65	F.C. w/deluxe equip.	3789600	**WASHER**, end gate panel and rr. door reflector	6

17.625 BRACKET, End Gate and Side Ramp

61-64	PICK-UP	3778495	left or right, end gate hinge mounting (Note 1)	1

NOTE 1. May be necessary to rework.

©1969 CHEVROLET MOTOR DIVISION, GENERAL MOTORS CORPORATION—P&A 30C

"Reproduced by Detroit Iron IS with permission of General Motors LLC under License."